

ST-JX311/JX411

SERVICE MANUAL

*US Model
Canadian Model
E Model
Australian Model*



Photo: ST-JX411

ST-JX311: This set is the tuner section in SEN-311.

SPECIFICATIONS

FM tuner section

Tuning range	87.5 – 108 MHz
Antenna terminals	75 ohms unbalanced 300 ohms balanced
Intermediate frequency	10.7 MHz
Sensitivity (at 50 dB quieting)	22.1 dBf, 7 μ V (mono), 42.1 dBf, 70 μ V (stereo)
Usable sensitivity	19.5 dBf, 5 μ V (IHF)
Signal-to-noise ratio (at 75 kHz deviation)	80 dB (mono), 75 dB (stereo)
Harmonic distortion	0.3% (mono), 0.5% (stereo) at 1 kHz
Separation	40 dB at 1 kHz
Frequency response	30 Hz – 15 kHz ± 0.5 dB
Selectivity	55 dB at 400 kHz
AM suppression ratio	54 dB
Image response ratio	50 dB
IF response ratio	90 dB
Spurious response ratio	70 dB
Automatic tuning threshold	17.8 μ V (30 dBf)
Output	775 mV, 4.7 kohms (at 75 kHz deviation)

AM tuner section

Tuning range	US, Canadian model: 530 – 1,710 kHz (10 kHz) 531 – 1,710 kHz (9 kHz)
Antenna	E, Australian model: 531 – 1,602 kHz AM loop antenna, External antenna terminal
Intermediate frequency	450 kHz
Usable sensitivity	AM loop antenna: 500 μ V/m (999 kHz or 1,000 kHz)
Signal-to-noise ratio	54 dB

General

Power requirements	US, Canadian model: 120 V AC, 60 Hz E, Australian model: 240 V AC, 50 Hz
Power consumption	8W (ST-JX411)
AC outlet (U.S.A. model only)	
Dimensions	1 unswitched, 120W/1 A max. Approx. 430 x 80 x 295 mm (w/h/d) (17 x 3 1/4 x 11 5/8 inches)
Weight	ST-JX311: Approx. 2.1 kg (4 lb 11 oz) ST-JX411: Approx. 2.6 kg (5 lb 12 oz)
Accessories supplied	
ST-JX311:	Flat cord with 11-5-pin connectors (1), connected to TC-W311. Flat cord with 9-9-pin connectors (1) Remote commander RM-S102 (1) Sony batteries SUM 3 (NS) (2)
ST-JX411:	Remote control cord (1) Audio connecting cord (1) AM loop antenna (1) FM loop antenna (1)

Design and specifications subject to change without notice.

FM STEREO/FM-AM TUNER
SONY®

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

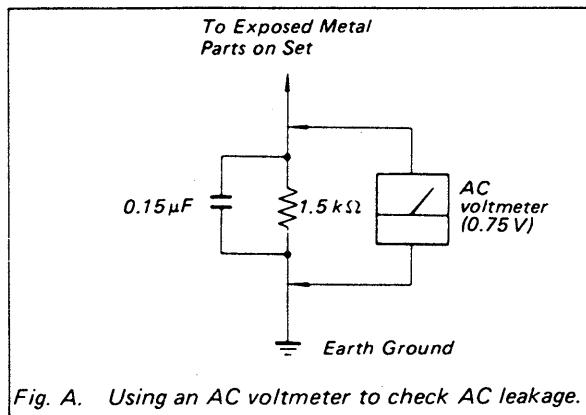


Fig. A. Using an AC voltmeter to check AC leakage.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK OR DOTTED LINE WITH MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

Section	Title	Page
Specifications	1
Safety Check-out	2
SECTION 1. GENERAL		
1-1. Location of Controls	3
1-2. Connections	4
SECTION 2. ELECTRICAL ADJUSTMENTS		6
SECTION 3. DIAGRAMS		
3-1. Printed Wiring Boards	7
3-2. Schematic Diagram (Tuner Section)	11
3-3. Semiconductor Lead Layouts	13
3-4. Waveforms	13
3-5. Schematic Diagram (Control and Power Section)	14
SECTION 4. EXPLODED VIEW		17
SECTION 5. ELECTRICAL PARTS LIST		19

To change the AM tuning interval

The AM tuning interval is preset at the factory to 10 kHz to match the frequency allocation system of your country. To change the interval to 9 kHz, proceed as follows.

- 1 Depress the POWER switch to turn on the unit.
- 2 Set the BAND FM/AM selector to AM.
- 3 Press the POWER switch to turn off the unit.
- 4 Hold the TUNING knob in the "+" position, and depress the POWER switch to turn on the unit. To reset the interval to 10 kHz, follow the same procedure.

Note

When the interval is changed, all preset stations which you have memorized using the numeric buttons will be erased from the memory. After changing the interval, be sure to preset the stations again.


ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1 GENERAL

This section is extracted from
instruction manual.

1-1. LOCATION OF CONTROLS



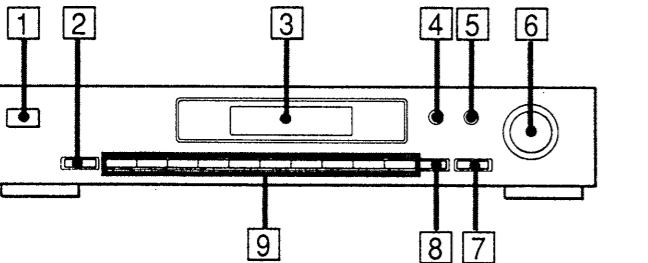


- 1 POWER switch (ST-JX411 only)
- 2 SHIFT button
- 3 Display window
- 4 MEMORY SCAN button
- 5 AUTO TUNING button
- 6 TUNING control
- 7 BAND FM/AM selector
- 8 MEMORY button
- 9 Numeric buttons

1-2. CONNECTION

- Connect the AC power cord last. Make sure power is off.
- Cord plugs and jacks are color coded. Red plugs and jacks are for right channel (R) and white ones for the left channel (L).
- The cable connectors should be fully inserted into the jacks. A loose connection may cause hum and noise.
- Keep speaker cords, connecting cords and power cords away from the AM loop antenna and the tuner's antenna lead-in to avoid possible noise pickup.

CAUTION
Do not put anything like another unit to obstruct the ventilation holes on the top of the amplifier.
The level surface installation is required for essential air ventilation to prevent internal heat built up in the amplifier.

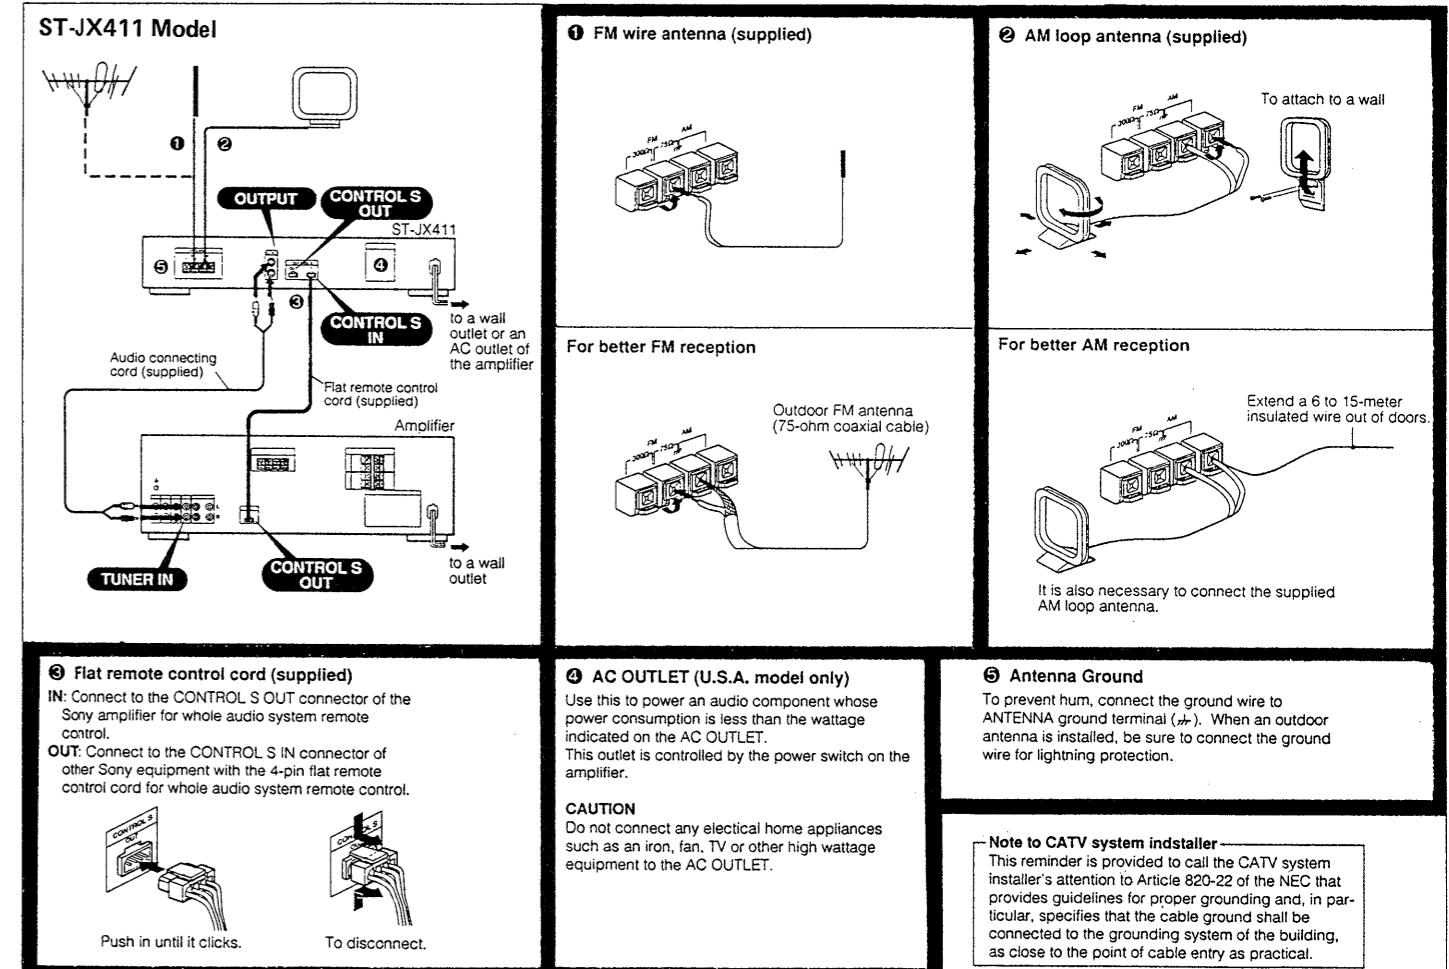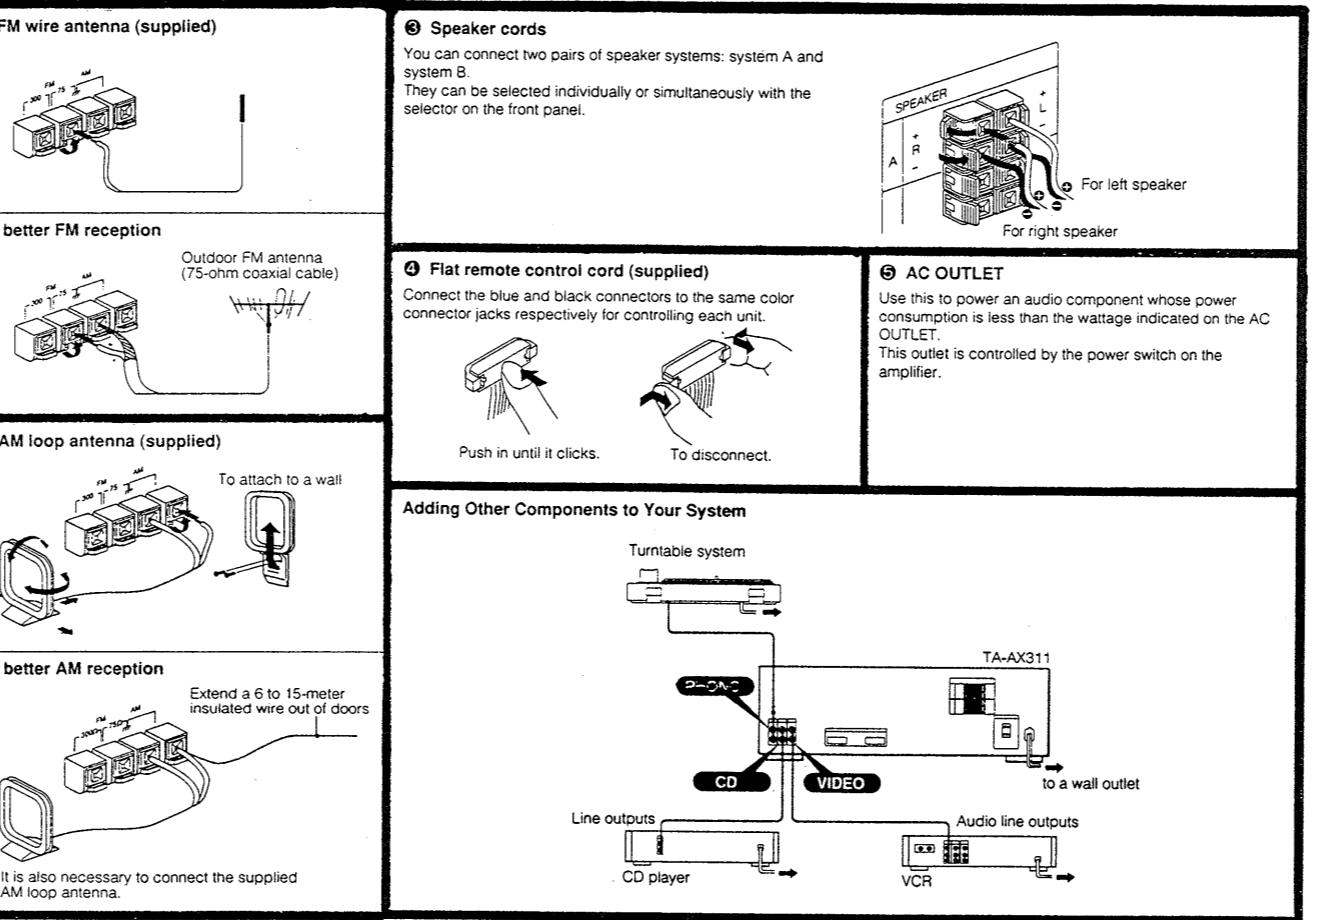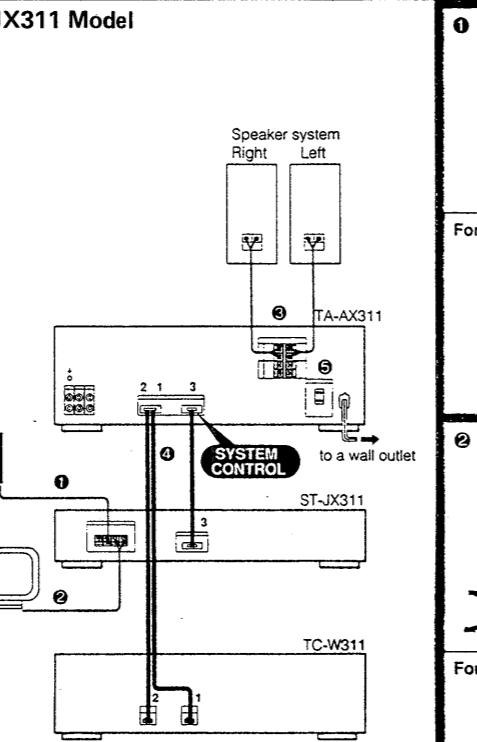

SECTION 2


ELECTRICAL ADJUSTMENTS

FM SECTION

• FM Discriminator Alignment (NULL check)

Setting :

FM RF stereo signal generator

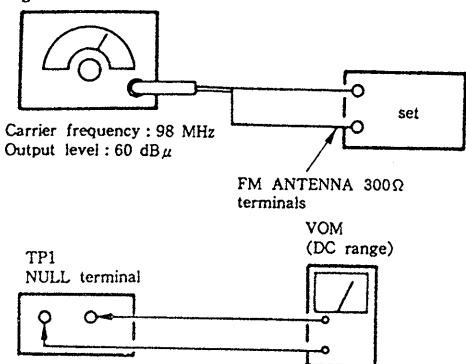

Procedure :


1. Tune the set to 98 MHz.
2. Adjust T21 for 0 V reading on the VOM.

Note : FM TUNING LEVEL adjustment should be made after FM discriminator alignment.

• FM TUNING LEVEL Adjustment

Setting :

FM RF stereo signal generator

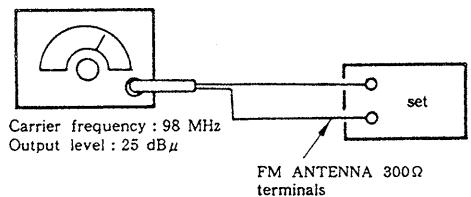

Procedure :


1. Tune the set to 98 MHz.
2. Adjust RV24 so that the TUNED LED goes on.

AM SECTION

• AM Tuned Indication Lighting Level Adjustment

Setting :

AM RF signal generator

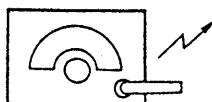

Put the lead-wire antenna close to the set.

30% amplitude modulation by 400 Hz signal
Output level : 94 dB μ


Procedure :

1. Tune the set to 1,050 kHz (US, CANADIAN), 999 kHz (E, AUS).
2. Adjust RV22 so that the TUNED LED goes on.

• FM Stereo Separation Adjustment

Setting :

FM RF stereo signal generator

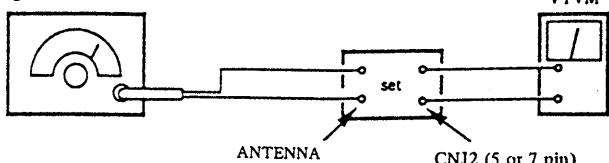

Carrier frequency : 98 MHz
Output level : 60 dB μ

Procedure :

Tune the set to 98 MHz,


FM stereo signal generator output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	(A)
R-CH	L-CH	Adjust RV21 for minimum reading.
R-CH	R-CH	(C)
L-CH	R-CH	Adjust RV21 for minimum reading.

L-CH Stereo separation : (A) - (B)

R-CH Stereo separation : (C) - (D)

The separations of both channels should be equal.

-TUNER BOARD- (Component side)

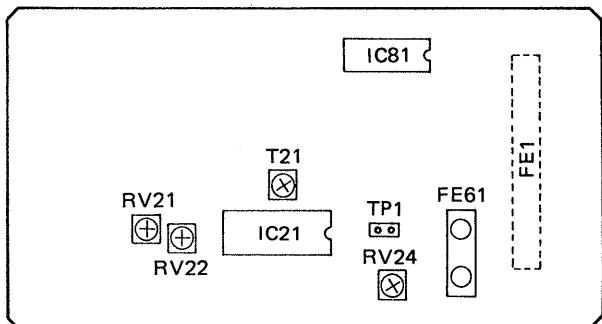

SECTION 3 DIAGRAMS


3-1. PRINTED WIRING BOARDS

Note:

- : parts extracted from the component side.
- : indicates side identified with part number.
- : Pattern on the side which is seen.


[Note on Inserting the Cord to the Connector on Tuner Board]

- Insert the cord to the connector fitting Pin ① of the cord in accordance with the white mark on the board at the connector as shown in the figure.

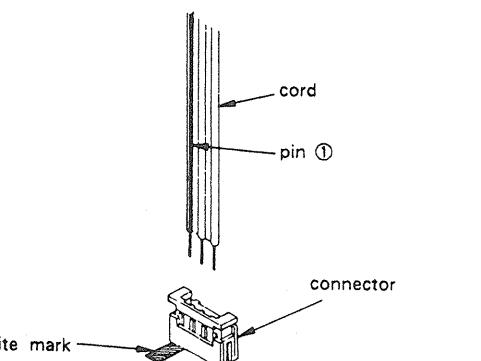


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D21	H-5	D714	C-3
D22	H-6	D715	C-5
D23	H-6	D716	C-5
D24	H-6	D717	B-4
D501	G-17	D718	B-4
D502	G-17		
D503	G-16	IC21	J-5
D504	H-16	IC81	H-4
D505	I-17	IC501	F-18
D506	H-17	IC701	B-8
D507	F-16		
D601	I-9	Q1	I-3
D602	I-12	Q21	H-7
D603	I-10	Q22	H-7
D701	B-12	Q26	I-6
D702	B-10	Q27	I-7
D703	C-13	Q28	H-6
D707	C-6	Q81	H-4
D708	C-5	Q82	I-4
D709	C-5	Q83	H-5
D710	C-3	Q84	H-3
D711	C-3	Q601	I-10
D712	C-3	Q602	I-10
D713	B-3		


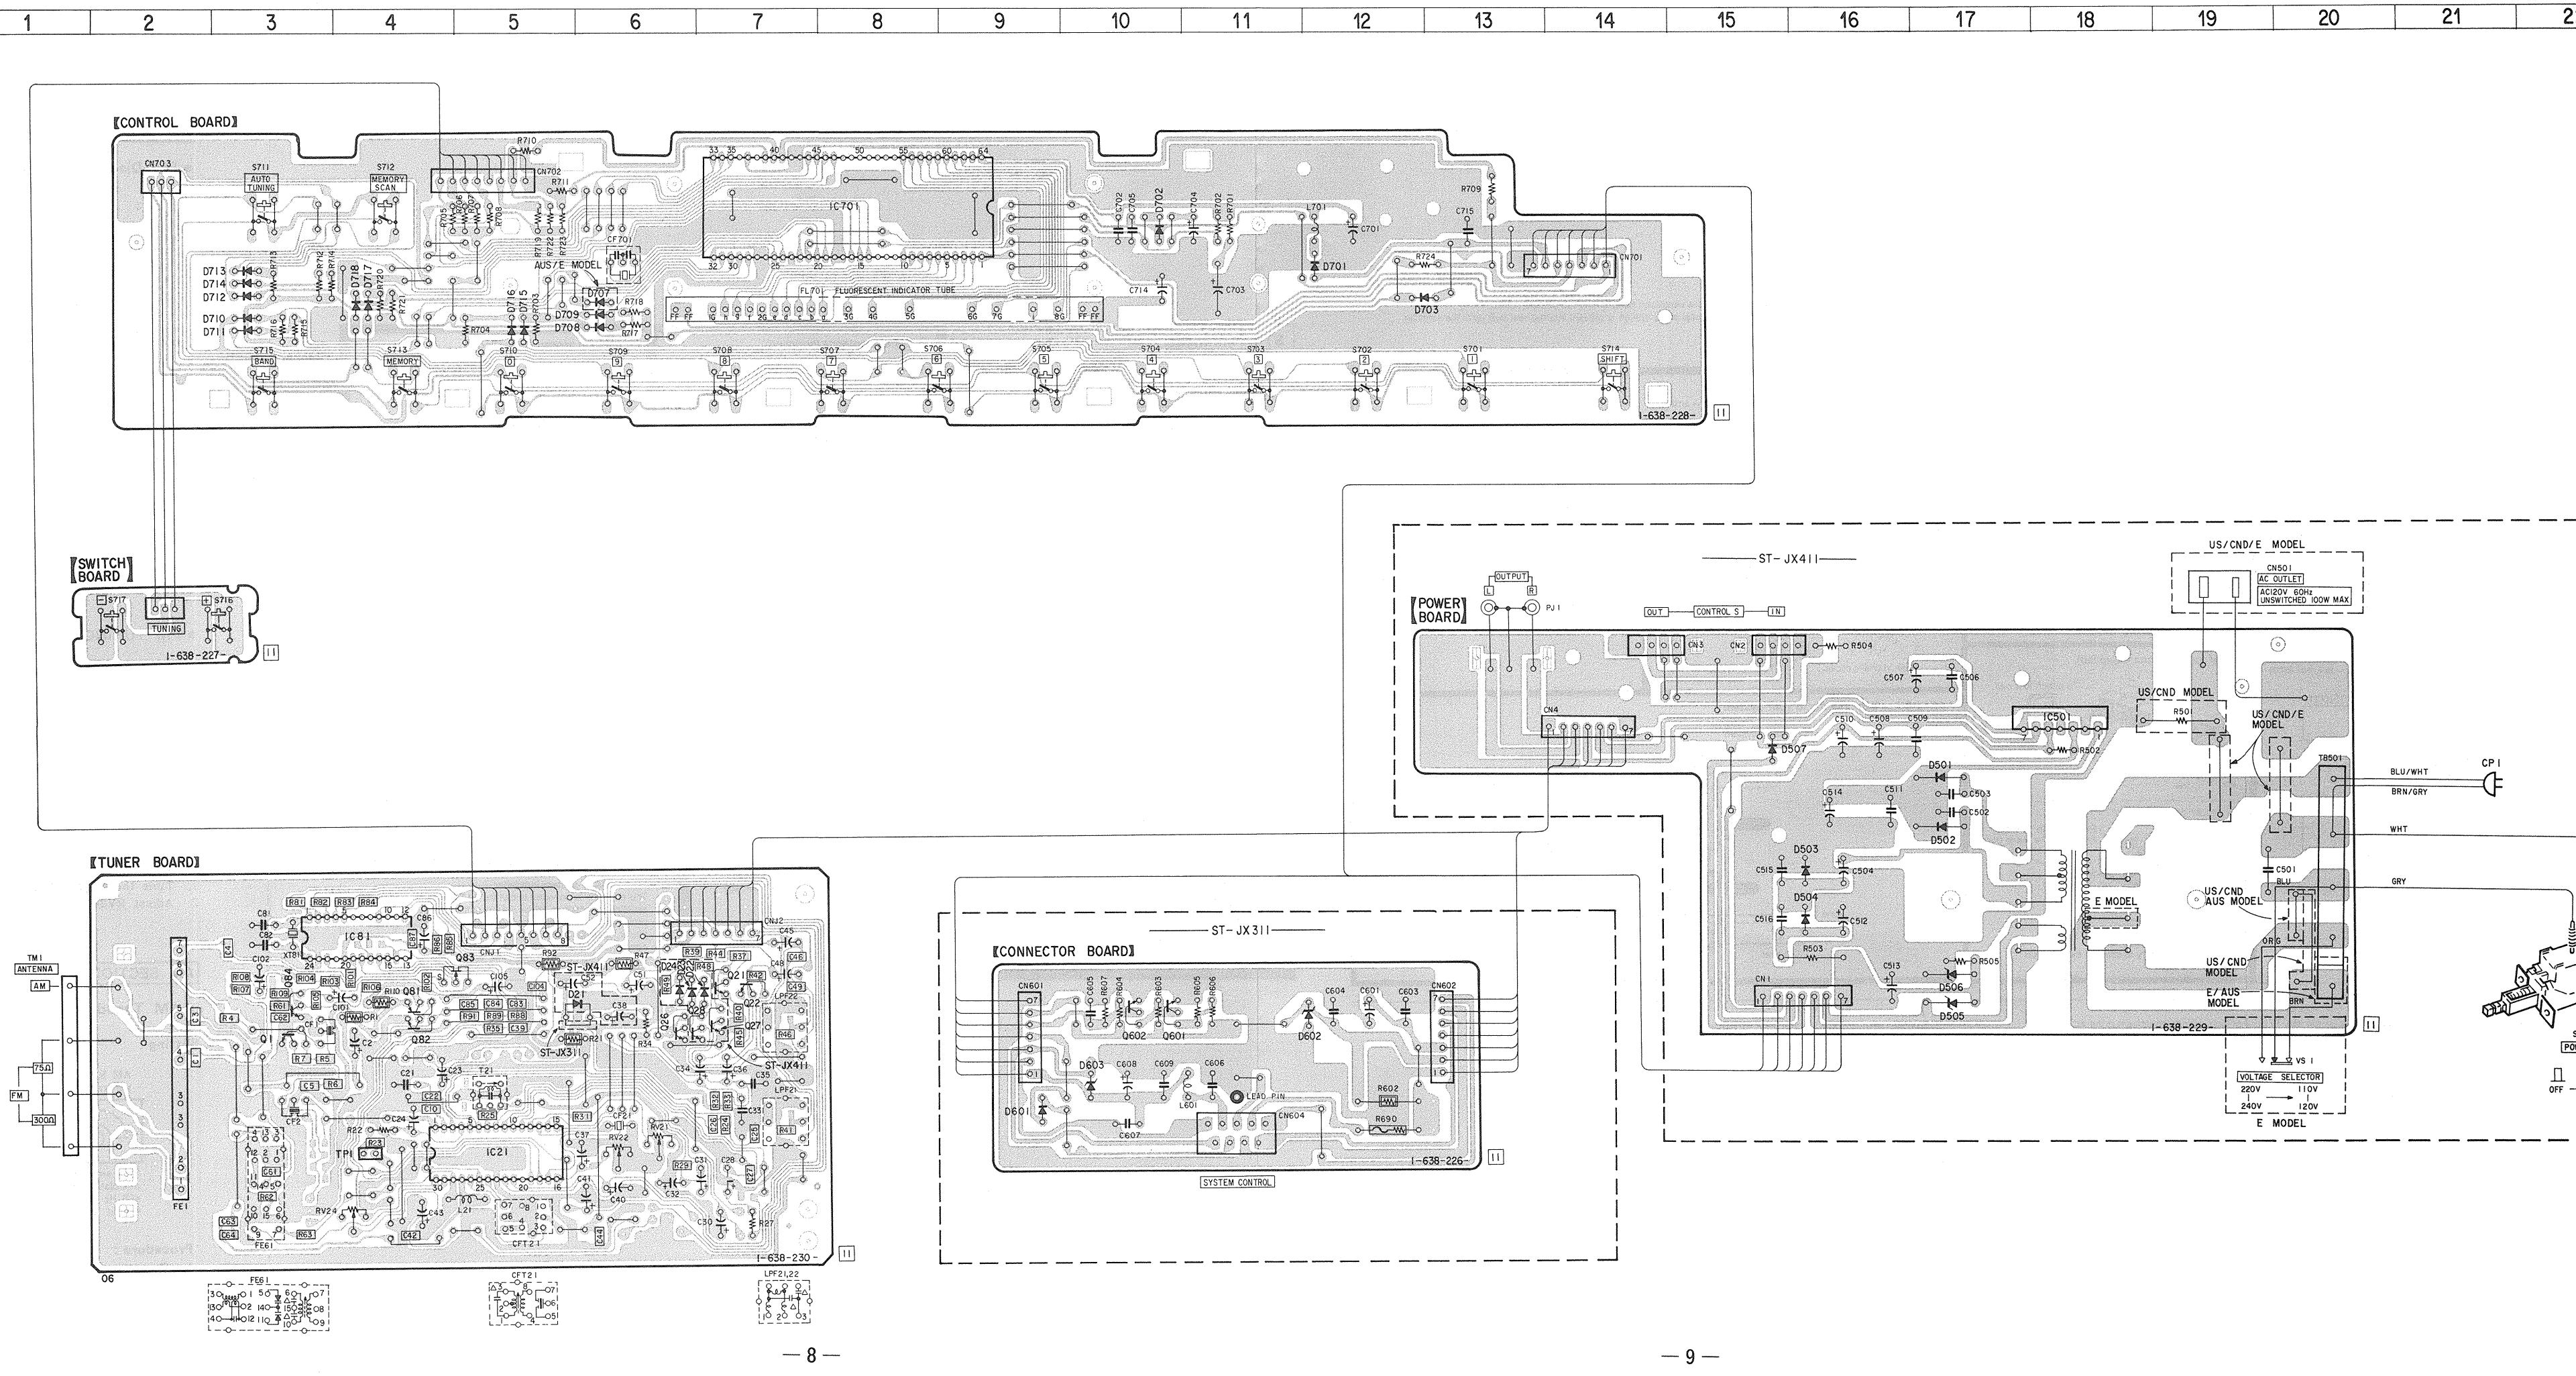


1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15


3-2. SCHEMATIC DIAGRAM – Tuner Section –

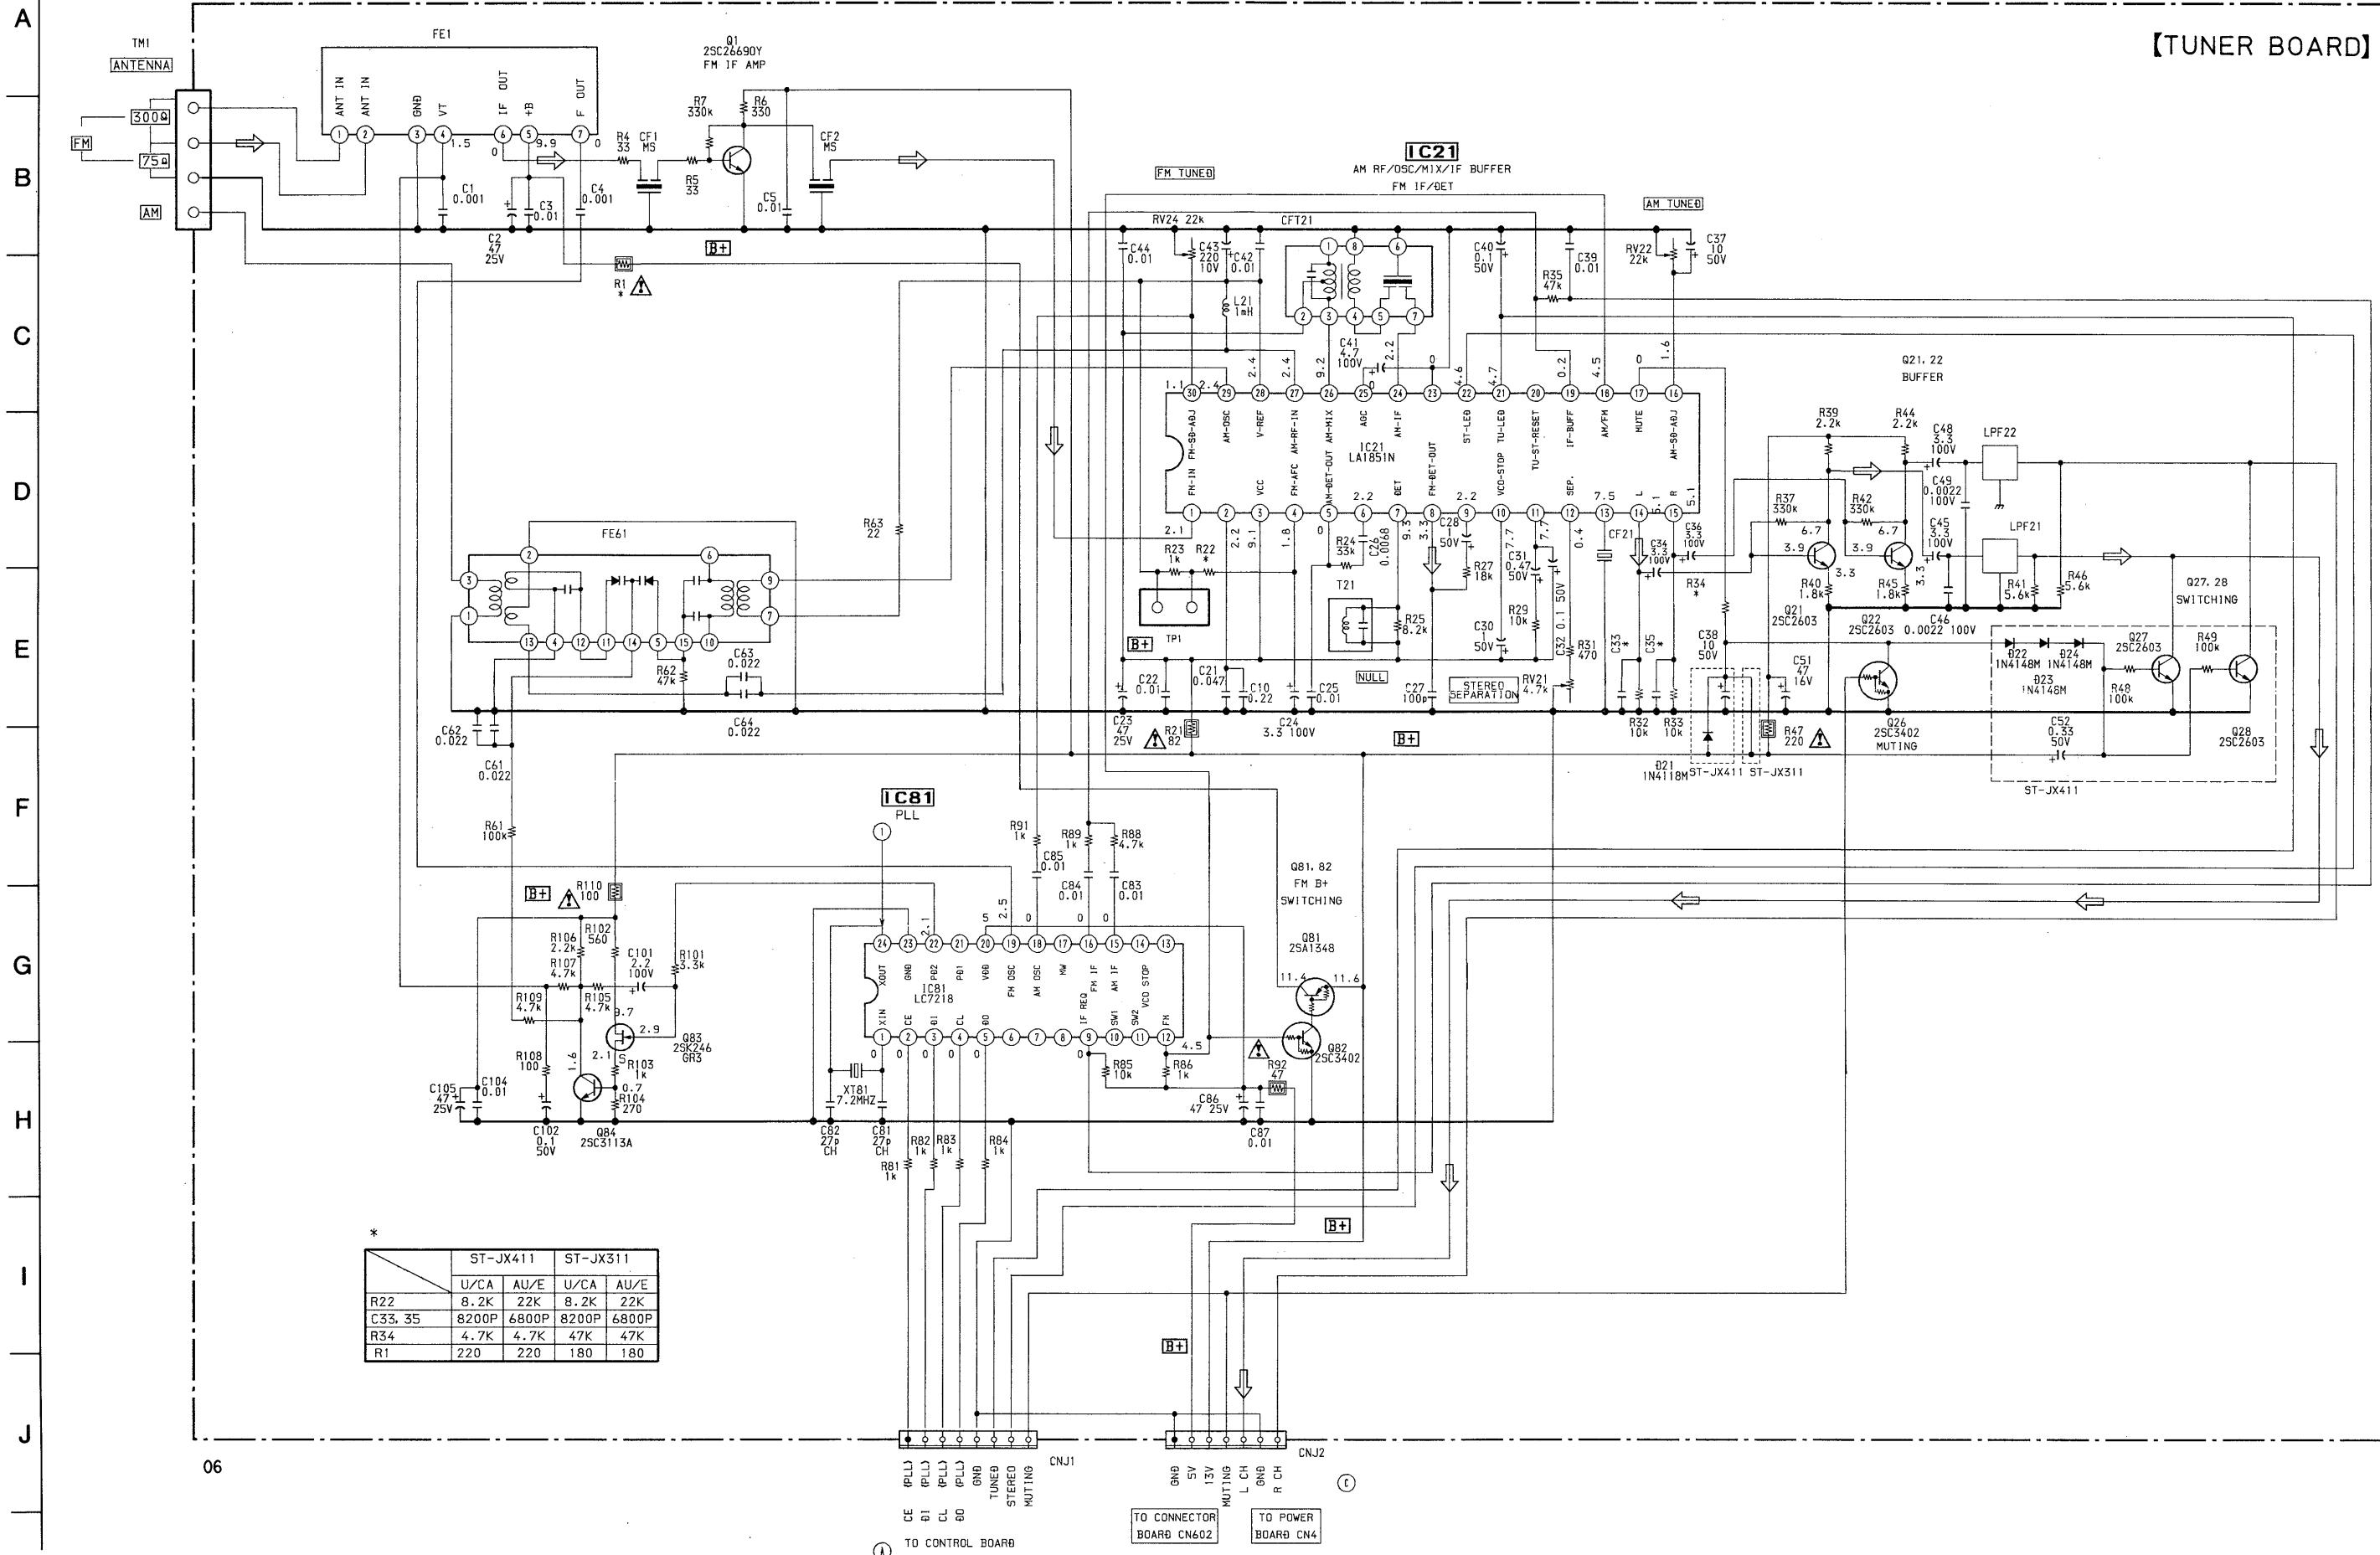


3-3. SEMICONDUCTOR LEAD LAYOUTS

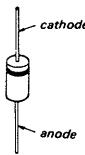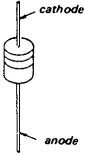EQA02-06C
1N4148M
10E2NHZA6A3L
RD30ESB3


LA5667

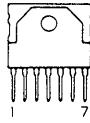DTC114ES
2SC2603-EF
2SC3113-AB
2SC2669-OY

2SK246GR3

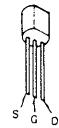

2SC2785-HFE

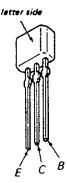**Note:**

- All capacitors are in μF unless otherwise noted. pF: $\mu\mu\text{F}$
50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- \triangle : internal component.
- : nonflammable resistor.
- : fusible resistor.

Note:

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

Note:


Les composants identifiés par une marque \triangle sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
- Voltages are taken with a VOM. (Input impedance $10\text{M}\Omega$)
Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 \Rightarrow : FM


- : B+ line.
- : B- line.
- : adjustment for repair.

3-4. WAVEFORMS


(1)

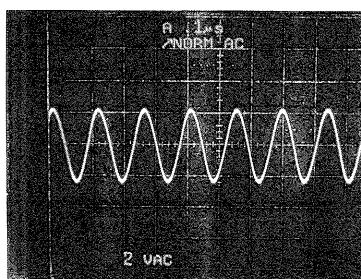




(2)

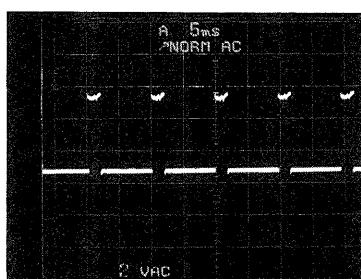


(3)

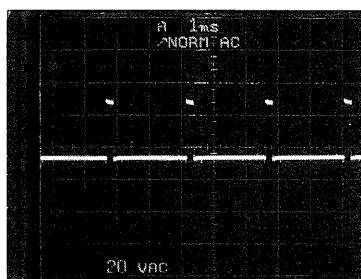

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23

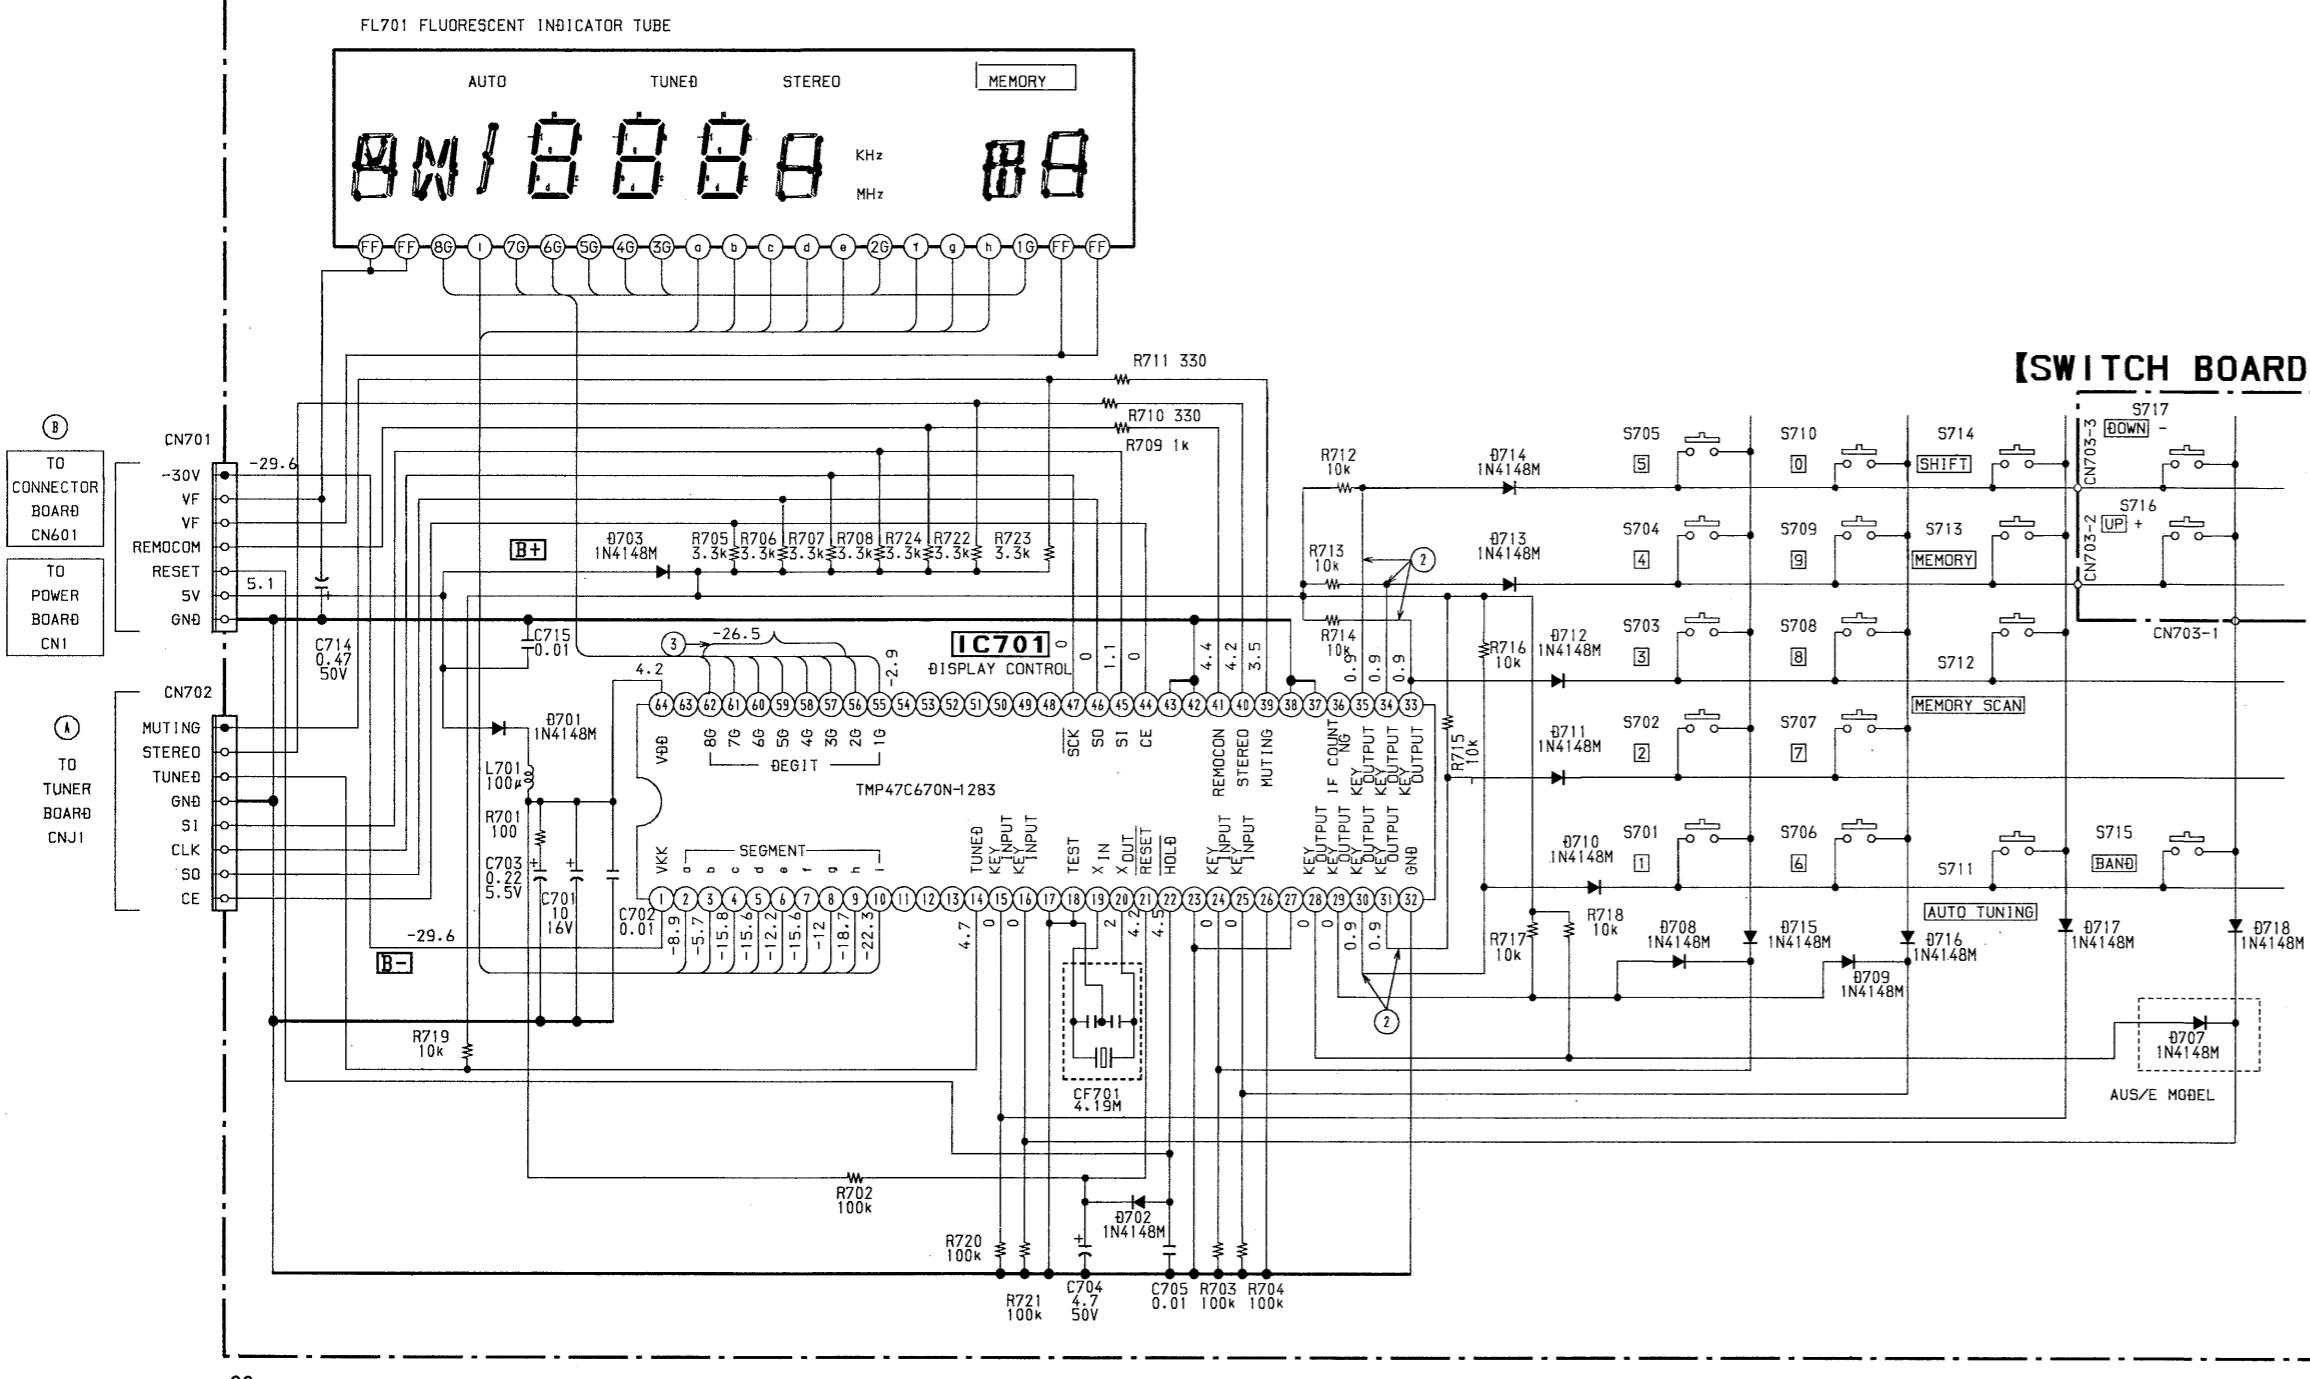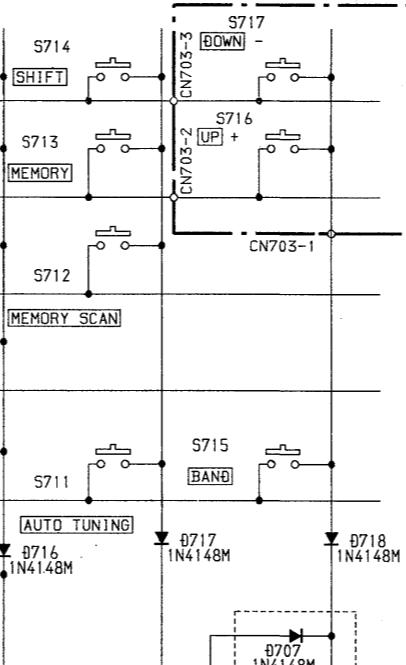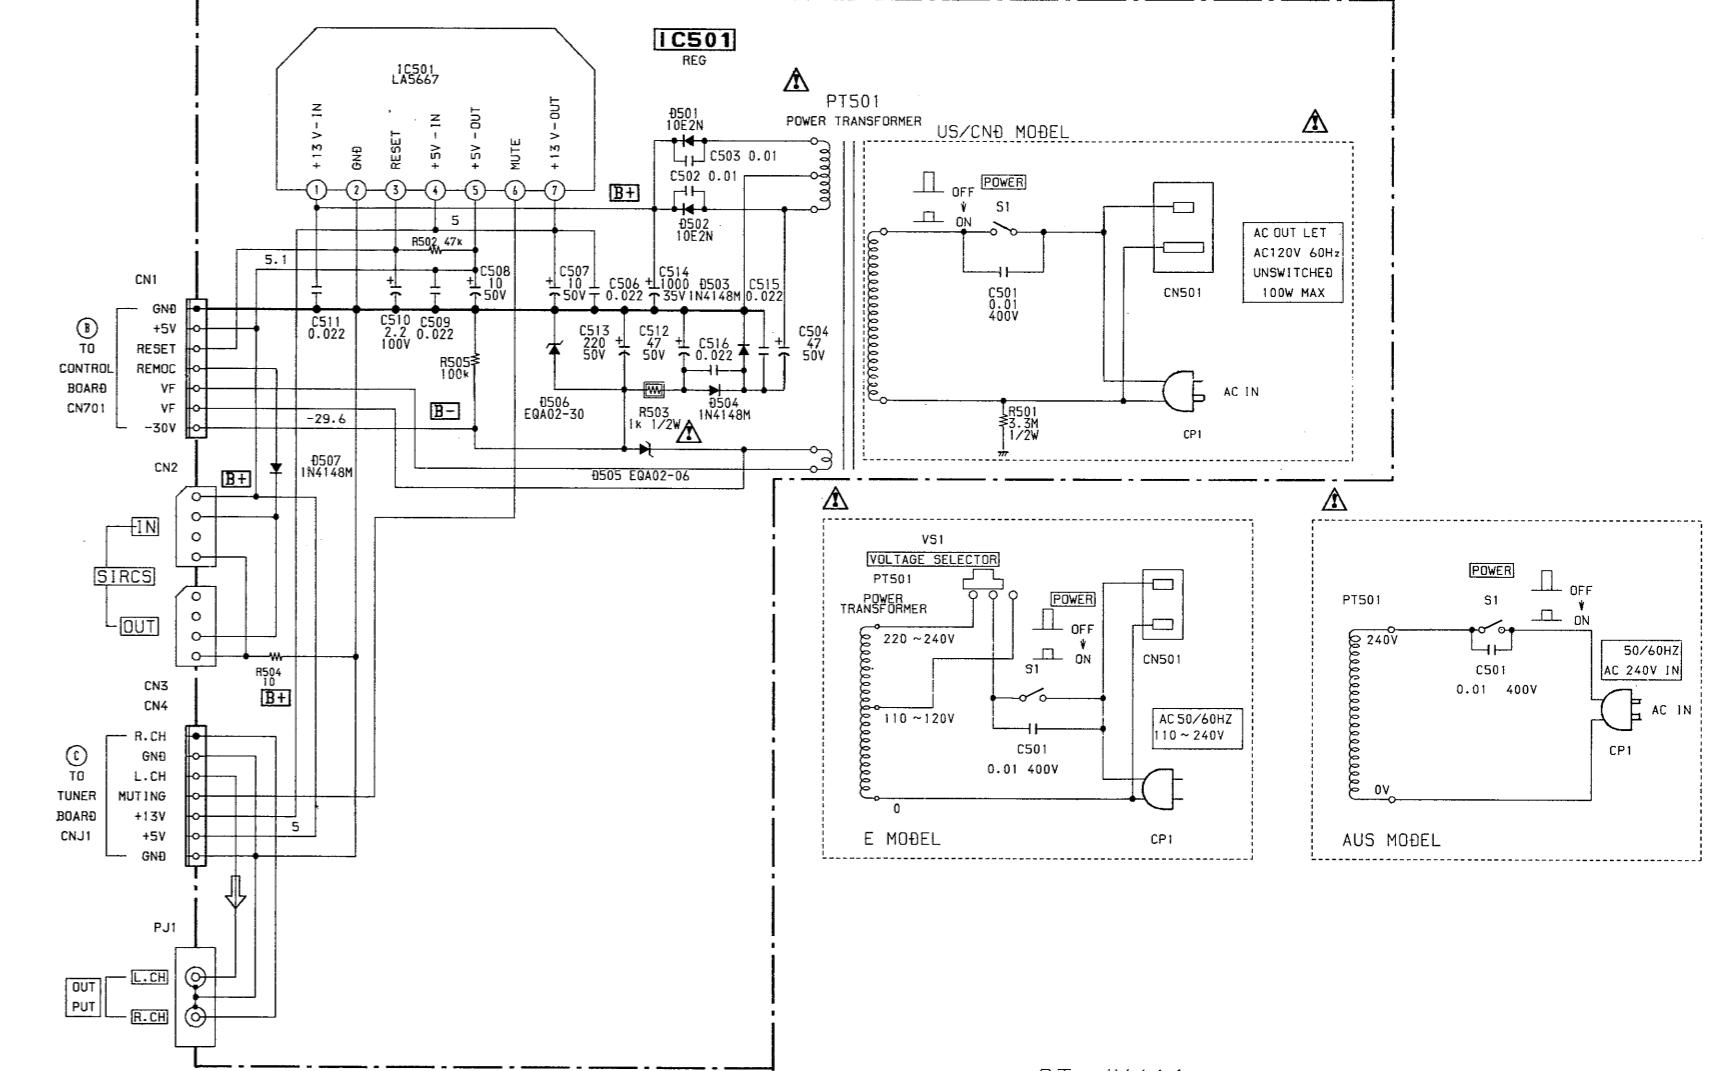[CONTROL BOARD]

[SWITCH BOARD]

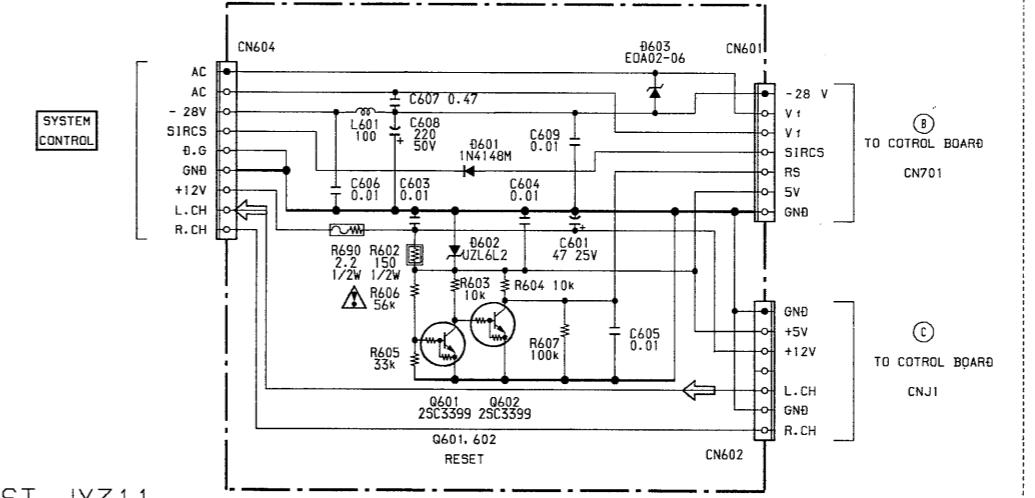[POWER BOARD]


ST-JX411

[CONNECTOR BOARD]


ST-JX311

SECTION 4 EXPLODED VIEW

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts Example:

KNOB, BALANCE (WHITE) ... (RED)


↑ ↑
Parts color Cabinet's color

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- Abbreviation
AUS: Australian

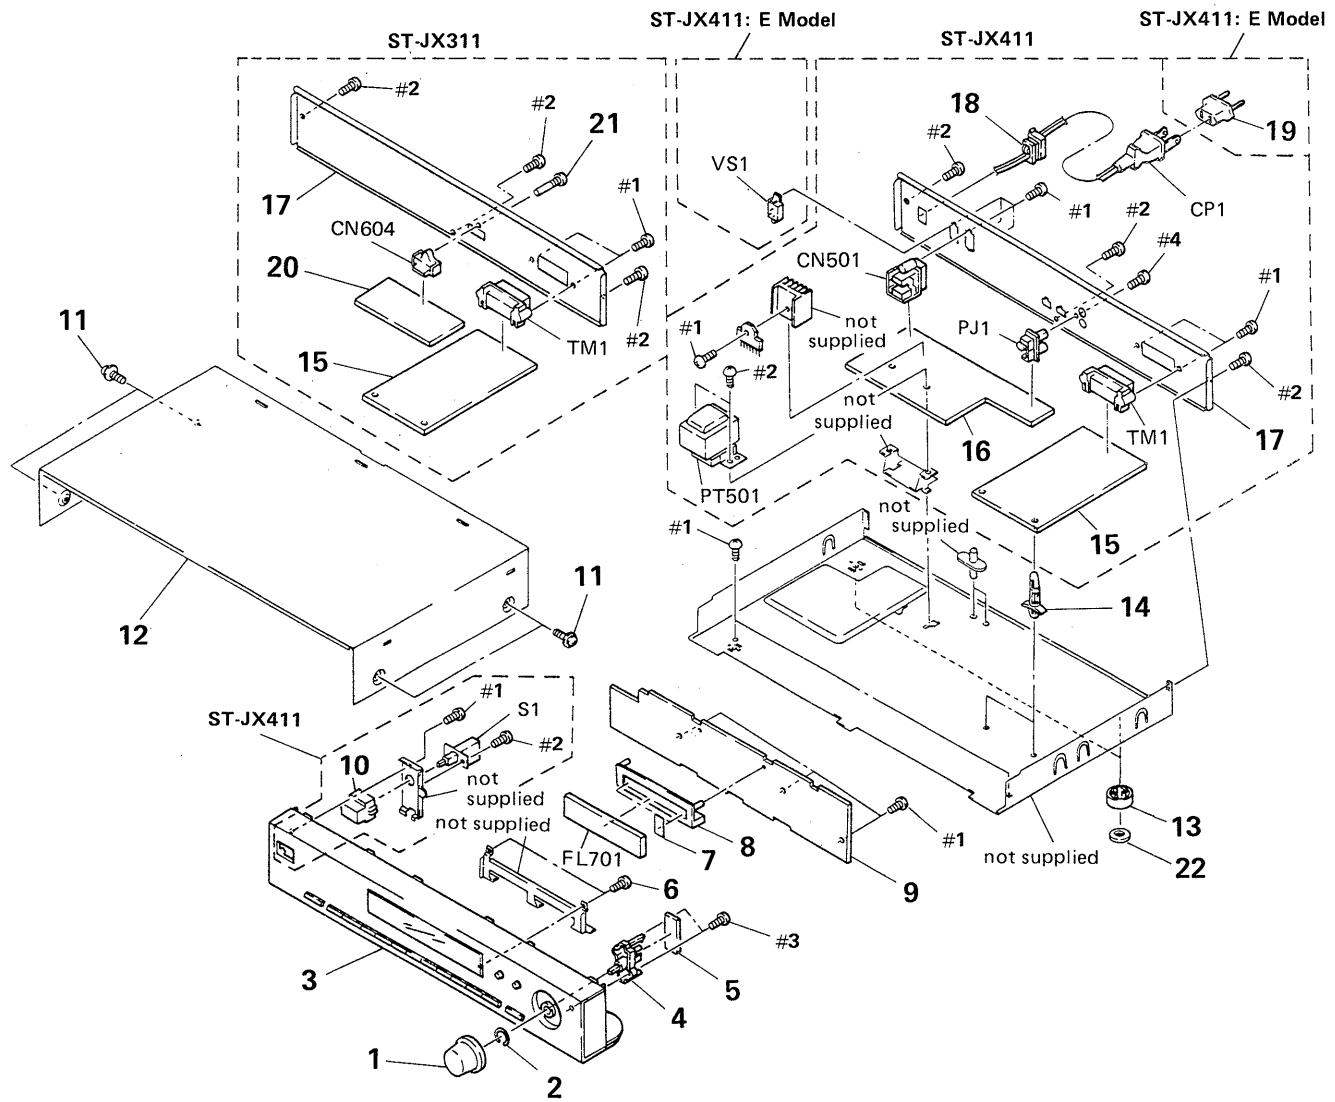

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	4-943-466-01	KNOB (TUNING)		18	* 3-703-244-00	BUSHING (2104), CORD (JX411:AUS)	
2	4-946-017-01	SPRING, RING		18	* 3-703-571-11	BUSHING (S) (4516), CORD (JX411:US, Canadian, E)	
3	A-4323-885-A	PANEL ASSY, FRONT (JX311:US, Canadian)		19	1-569-007-11	ADAPTER, CONVERSION 2P (JX411:E)	
3	A-4323-886-A	PANEL ASSY, FRONT (JX311:E, AUS)		20	*1-638-226-11	CONNECTOR BOARD (JX311)	
3	A-4323-888-A	PANEL ASSY, FRONT (JX411:US)		21	3-704-242-01	SCREW, TERMINAL, + BVTP CLAW (JX311)	
3	A-4323-889-A	PANEL ASSY, FRONT (JX411:E, AUS)		22	4-923-836-21	CUSHION (JX411: Canadian)	
3	A-4325-040-A	PANEL ASSY, FRONT (JX411:Canadian)		CN501	△ 1-540-057-11	OUTLET, AC (POLAR) (AC OUTLET) (JX411:US, Canadian)	
4	X-4905-269-1	SHAFT ASSY, TUNING		CN501	△ 1-540-038-11	OUTLET, AC (NONPOLAR) (1P) (JX411:E)	
6	4-928-635-01	SCREW, +BV (2.6X8) TAPPING		CN604	1-565-949-11	SOCKET, CONNECTOR 9P (JX311:US, Canadian, E, AUS)	
9	A-4341-787-A	CONTROL BOARD, COMPLETE (JX411:US)		CP1	△ 1-551-188-XX	CORD, POWER (JX411:E)	
9	A-4341-788-A	CONTROL BOARD, COMPLETE (JX411:Canadian)		CP1	△ 1-558-945-11	CORD, POWER (JX411:US, Canadian)	
9	A-4341-789-A	CONTROL BOARD, COMPLETE (JX411:E)		CP1	△ 1-559-912-11	CORD, POWER (JX411:AUS)	
9	* A-4341-790-A	CONTROL BOARD, COMPLETE (JX411:AUS)		FL701	1-519-512-11	INDICATOR TUBE, FLUORESCENT	
10	4-917-460-41	KNOB, POWER (JX411)		PJ1	* 1-580-691-11	JACK, PIN 2P (JX411)	
11	3-704-366-01	SCREW (CASE) (M3X8)		PT501	△ 1-450-386-11	TRANSFORMER, POWER (JX411:AUS, E)	
12	4-923-457-01	CASE		PT501	△ 1-450-387-11	TRANSFORMER, POWER (JX411:US, Canadian)	
13	3-318-688-51	FOOT (F58175S) (JX411:Canadian)		S1	△ 1-572-267-21	SWITCH, PUSH (AC POWER) (1 KEY) (JX411)	
13	X-4941-228-1	FOOT ASSY (JX411:US, E, AUS)		TM1	* 1-537-264-11	TERMINAL BOARD	
14	* 3-346-265-11	HOLDER, PC BOARD		VS1	△ 1-570-046-21	SWITCH, VOLTAGE CHANGE (JX411:E)	
15	* A-4341-783-A	TUNER BOARD, COMPLETE (JX311:US, Canadian)					
15	* A-4341-793-A	TUNER BOARD, COMPLETE (JX311:E, AUS)					
15	* A-4341-794-A	TUNER BOARD, COMPLETE (JX411:US, Canadian)					
15	* A-4341-795-A	TUNER BOARD, COMPLETE (JX411:E, AUS)					
16	* 1-638-229-11	POWER BOARD (JX411)					
17	* 4-943-471-01	PANEL, BACK (JX411:US, Canadian)					
17	* 4-943-471-11	PANEL, BACK (JX411:E)					
17	* 4-943-471-21	PANEL, BACK (JX411:AUS)					
17	* 4-943-472-01	PANEL, BACK (JX311:US, Canadian, AUS)					
17	* 4-943-472-11	PANEL, BACK (JX311:E)					

Note:
The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

CONTROL**SWITCH****CONNECTOR**

SECTION 5 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- **RESISTORS**
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- **SEMICONDUCTORS**
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA...,
uPB...: μ PB..., uPC...: μ PC...,
uPD...: μ PD...
- **CAPACITORS**
uF: μ F
- **COILS**
uH: μ H

The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- Abbreviation
AUS: Australian

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark				
< CONNECTOR >											
	A-4341-787-A	CONTROL BOARD, COMPLETE (JX311:US, Canadian/JX411:US)		CN601	1-580-956-11	SOCKET, CONNECTOR 7P (JX311)					
	A-4341-788-A	CONTROL BOARD, COMPLETE (JX411:Canadian)		CN602	1-580-956-11	SOCKET, CONNECTOR 7P (JX311)					
	A-4341-789-A	CONTROL BOARD, COMPLETE (JX311:E, AUS/JX411:E)		CN604	1-565-949-11	SOCKET, CONNECTOR 9P (SYSTEM CONTROL) (JX311)					
*	A-4341-790-A	CONTROL BOARD, COMPLETE (JX411:AUS) *****		CN701	1-580-956-11	SOCKET, CONNECTOR 7P					
	1-638-227-11	SWITCH BOARD		CN702	1-580-957-11	SOCKET, CONNECTOR 8P					
*	1-638-226-11	CONNECTOR BOARD (JX311)		CN703	* 1-568-952-11	PIN, CONNECTOR 3P					
*	4-921-941-01	CUSHION (FL)		< DIODE >							
*	4-942-301-01	HOLDER, FL TUBE		D601	8-719-987-63	DIODE 1N4148M (JX311)					
< CAPACITOR >				D602	8-719-933-35	DIODE HZS6A3L (JX311)					
C601	1-124-477-11	ELECT	47uF 20% 25V (JX311)	D603	8-719-912-81	DIODE EQA02-06C					
C603	1-101-004-00	CERAMIC	0.01uF 50V (JX311)	D701	8-719-987-63	DIODE 1N4148M					
C604	1-101-004-00	CERAMIC	0.01uF 50V (JX311)	D702	8-719-987-63	DIODE 1N4148M					
C605	1-101-004-00	CERAMIC	0.01uF 50V (JX311)	D703	8-719-987-63	DIODE 1N4148M					
C606	1-101-004-00	CERAMIC	0.01uF 50V (JX311)	D707	8-719-987-63	DIODE 1N4148M (JX311:E, AUS/JX411:E, AUS)					
C607	1-136-173-00	FILM	0.47uF 5% 50V (JX311)	D708	8-719-987-63	DIODE 1N4148M					
C608	1-124-911-11	ELECT	220uF 20% 50V (JX311)	D709	8-719-987-63	DIODE 1N4148M					
C609	1-101-004-00	CERAMIC	0.01uF 50V (JX311)	D710	8-719-987-63	DIODE 1N4148M					
C701	1-126-157-11	ELECT	10uF 20% 16V	D711	8-719-987-63	DIODE 1N4148M					
C702	1-161-379-00	CERAMIC	0.01uF 20% 25V	D712	8-719-987-63	DIODE 1N4148M					
C703	1-125-486-11	DUBLE LAYERS	0.22F 5.5V	D713	8-719-987-63	DIODE 1N4148M					
C704	1-126-163-11	ELECT	4.7uF 20% 50V	D714	8-719-987-63	DIODE 1N4148M					
C705	1-161-379-00	CERAMIC	0.01uF 20% 25V	D715	8-719-987-63	DIODE 1N4148M					
C714	1-124-465-00	ELECT	0.47uF 20% 50V	D716	8-719-987-63	DIODE 1N4148M					
C715	1-161-379-00	CERAMIC	0.01uF 20% 25V	D717	8-719-987-63	DIODE 1N4148M					
< VIBRATOR >											
CF701	1-577-101-11	VIBRATOR, CERAMIC		FL701	1-519-512-11	INDICATOR TUBE, FLUORESCENT					
< FLUORESCENT INDICATOR >											

CONTROL**SWITCH****CONNECTOR****POWER**

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		< IC >		S704	1-554-303-21	SWITCH, TACTILE (4)	
IC701	8-759-234-35	IC TMP47C670N-1283		S705	1-554-303-21	SWITCH, TACTILE (5)	
		< COIL >		S706	1-554-303-21	SWITCH, TACTILE (6)	
L601	1-410-521-11	INDUCTOR	100uH (JX311)	S707	1-554-303-21	SWITCH, TACTILE (7)	
L701	1-410-521-11	INDUCTOR	100uH	S708	1-554-303-21	SWITCH, TACTILE (8)	
		< TRANSISTOR >		S709	1-554-303-21	SWITCH, TACTILE (9)	
Q601	8-729-900-89	TRANSISTOR DTC144ES	(JX311)	S710	1-554-303-21	SWITCH, TACTILE (0)	
Q602	⚠ 8-729-900-89	TRANSISTOR DTC144ES	(JX311)	S711	1-554-303-21	SWITCH, TACTILE (AUTO TUNING)	
		< RESISTOR >		S712	1-554-303-21	SWITCH, TACTILE (MEMORY SCAN)	
R602	1-247-741-11	CARBON	150 5% 1/2W F (JX311)	S713	1-554-303-21	SWITCH, TACTILE (MEMORY)	
R603	1-249-429-11	CARBON	10K 5% 1/4W (JX311)	S714	1-554-303-21	SWITCH, TACTILE (SHIFT)	
R604	1-249-429-11	CARBON	10K 5% 1/4W (JX311)	S715	1-554-303-21	SWITCH, TACTILE (BAND)	
R605	1-249-435-11	CARBON	33K 5% 1/4W (JX311)	S716	1-554-303-21	SWITCH, TACTILE (TUNING +)	
R606	1-249-438-11	CARBON	56K 5% 1/4W (JX311)	S717	1-554-303-21	SWITCH, TACTILE (TUNING -)	
R607	1-249-441-11	CARBON	100K 5% 1/4W (JX311)	*****	*****	*****	*****
R690	1-212-942-00	FUSIBLE	2.2 5% 1/2W F (JX311)	* 1-638-229-11	POWER BOARD (JX411)		
R701	1-249-405-11	CARBON	100 5% 1/4W	*****	*****	*****	*****
R702	1-249-441-11	CARBON	100K 5% 1/4W				
R703	1-249-441-11	CARBON	100K 5% 1/4W	C501	1-161-744-00	CERAMIC	0.01uF 400V
R704	1-249-441-11	CARBON	100K 5% 1/4W	C502	1-101-004-00	CERAMIC	0.01uF 50V
R705	1-249-423-11	CARBON	3.3K 5% 1/4W	C503	1-101-004-00	CERAMIC	0.01uF 50V
R706	1-249-423-11	CARBON	3.3K 5% 1/4W	C504	1-124-910-11	ELECT	47uF 20% 50V
R707	1-249-423-11	CARBON	3.3K 5% 1/4W	C506	1-101-005-00	CERAMIC	22000PF 50V
R708	1-249-423-11	CARBON	3.3K 5% 1/4W	C507	1-124-907-11	ELECT	10uF 20% 50V
R709	1-249-417-11	CARBON	1K 5% 1/4W	C508	1-124-907-11	ELECT	10uF 20% 50V
R710	1-249-411-11	CARBON	330 5% 1/4W	C509	1-101-005-00	CERAMIC	22000PF 50V
R711	1-249-411-11	CARBON	330 5% 1/4W	C510	1-124-925-11	ELECT	2.2uF 20% 100V
R712	1-249-429-11	CARBON	10K 5% 1/4W	C511	1-101-005-00	CERAMIC	22000PF 50V
R713	1-249-429-11	CARBON	10K 5% 1/4W	C512	1-124-910-11	ELECT	47uF 20% 50V
R714	1-249-429-11	CARBON	10K 5% 1/4W	C513	1-124-911-11	ELECT	220uF 20% 50V
R715	1-249-429-11	CARBON	10K 5% 1/4W	C514	1-126-105-11	ELECT	1000uF 20% 35V
R716	1-249-429-11	CARBON	10K 5% 1/4W	C515	1-101-005-00	CERAMIC	22000PF 50V
R717	1-249-429-11	CARBON	10K 5% 1/4W	C516	1-101-005-00	CERAMIC	22000PF 50V
R718	1-249-429-11	CARBON	10K 5% 1/4W				
		< CONNECTOR >					
R719	1-249-429-11	CARBON	10K 5% 1/4W	CN1	1-580-956-11	SOCKET, CONNECTOR 7P (JX411)	
R720	1-249-441-11	CARBON	100K 5% 1/4W	CN2	1-564-980-11	PIN, CONNECTOR 4P (CONTROL S IN)	
R721	1-249-441-11	CARBON	100K 5% 1/4W	CN3	1-564-980-11	PIN, CONNECTOR 4P (CONTROL S OUT)	
R722	1-249-423-11	CARBON	3.3K 5% 1/4W	CN4	1-580-956-11	SOCKET, CONNECTOR 7P	
R723	1-249-423-11	CARBON	3.3K 5% 1/4W	CN501	⚠ 1-540-057-11	OUTLET, AC (POLAR) (AC OUTLET)	(JX411:US, Canadian)
R724	1-249-423-11	CARBON	3.3K 5% 1/4W	CN501	⚠ 1-540-038-11	OUTLET, AC (NONPOLAR) (1P) (JX411:E)	
		< SWITCH >					
S701	1-554-303-21	SWITCH, TACTILE (1)					
S702	1-554-303-21	SWITCH, TACTILE (2)					
S703	1-554-303-21	SWITCH, TACTILE (3)					

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

POWER	TUNER
--------------	--------------

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< DIODE >							
D501	8-719-200-77	DIODE 10E2N		C26	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V
D502	8-719-200-77	DIODE 10E2N		C27	1-163-117-00	CERAMIC CHIP	100PF 5% 50V
D503	8-719-987-63	DIODE 1N4148M		C28	1-124-903-11	ELECT	1uF 20% 50V
D504	8-719-987-63	DIODE 1N4148M		C30	1-124-903-11	ELECT	1uF 20% 50V
D505	8-719-912-81	DIODE EQA02-06C		C31	1-124-902-00	ELECT	0.47uF 20% 50V
D506	8-719-110-73	DIODE RD300ESB3		C32	1-124-463-00	ELECT	0.1uF 20% 50V
D507	8-719-987-63	DIODE 1N4148M		C33	1-130-482-00	MYLAR	0.0082uF 5% 50V (JX311:US, Canadian/JX411:US, Canadian)
< IC >							
IC501	8-759-820-09	IC LA5667		C33	1-130-481-00	MYLAR	0.0068uF 5% 50V (JX311:E, AUS/JX411:E, AUS)
< JACK PIN >							
PJ1	* 1-580-691-11	JACK, PIN 2P		C34	1-123-382-00	ELECT	3.3uF 20% 100V
< TRANSFORMER >							
PT501	△ 1-450-386-11	TRANSFORMER, POWER (JX411:E, AUS)		C35	1-130-482-00	MYLAR	0.0082uF 5% 50V (JX311:US, Canadian/JX411:US, Canadian)
PT501	△ 1-450-387-11	TRANSFORMER, POWER (JX411:US, Canadian)		C35	1-130-481-00	MYLAR	0.0068uF 5% 50V (JX311:E, AUS/JX411:E, AUS)
< RESISTOR >							
R501	1-202-725-00	SOLID	3.3M 10% 1/2W (JX411:US, Canadian)	C36	1-123-382-00	ELECT	3.3uF 20% 100V
R502	1-249-437-11	CARBON	47K 5% 1/4W	C37	1-124-907-11	ELECT	10uF 20% 50V
R503	△ 1-247-752-11	CARBON	1K 5% 1/2W F	C38	1-124-907-11	ELECT	10uF 20% 50V (JX411)
R504	1-249-393-11	CARBON	10 5% 1/4W	C39	1-164-232-11	CERAMIC CHIP	0.01uF 50V
R505	1-249-441-11	CARBON	100K 5% 1/4W	C40	1-124-463-00	ELECT	0.1uF 20% 50V
< BASE POST >							
TB501	* 1-535-141-00	BASE POST 22MM (10MM PITCH) 4P (JX411:US, Canadian)		C41	1-124-927-11	ELECT	4.7uF 20% 100V

* A-4341-783-A TUNER BOARD, COMPLETE (JX311:US, Canadian)							
* A-4341-793-A TUNER BOARD, COMPLETE (JX311:E, AUS)							
* A-4341-794-A TUNER BOARD, COMPLETE (JX411:US, Canadian)							
* A-4341-795-A TUNER BOARD, COMPLETE (JX411:E, AUS)							

< CAPACITOR >							
C1	1-163-141-00	CERAMIC CHIP	0.001uF 5% 50V	C87	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C2	1-124-477-11	ELECT	47uF 20% 25V	C101	1-124-925-11	ELECT	2.2uF 20% 100V
C3	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C102	1-124-463-00	ELECT	0.1uF 20% 50V
C4	1-163-141-00	CERAMIC CHIP	0.001uF 5% 50V	C103	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C5	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C104	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C10	1-163-037-11	CERAMIC CHIP	0.022uF 10% 25V	C105	1-124-477-11	ELECT	47uF 20% 25V
C21	1-161-021-11	CERAMIC	0.047uF 10% 25V				
C22	1-164-232-11	CERAMIC CHIP	0.01uF 50V				
C23	1-124-477-11	ELECT	47uF 20% 25V				
C24	1-123-382-00	ELECT	3.3uF 20% 100V				
C25	1-164-232-11	CERAMIC CHIP	0.01uF 50V				

Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

TUNER

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< FILTER >							
CF1	1-567-389-11	FILTER, CERAMIC		R6	1-216-037-00	METAL CHIP	330 5% 1/10W
CF2	1-567-389-11	FILTER, CERAMIC		R7	1-216-109-00	METAL CHIP	330K 5% 1/10W
CF21	1-577-075-11	OSCILLATOR, CERAMIC		R21	△ 1-249-404-00	CARBON	82 5% 1/4W
CFT21	1-404-853-11	TRANSFORMER, IF (CERAMIC FILTER)		R22	1-247-535-11	CARBON	8.2K 5% 1/4W (JX311:US, Canadian/JX411:US, Canadian)
< CONNECTOR >							
CNJ1	1-580-957-11	SOCKET, CONNECTOR 8P		R22	1-249-462-11	CARBON	22K 5% 1/4W (JX311:E, AUS/JX411:E, AUS)
CNJ2	1-580-956-11	SOCKET, CONNECTOR 7P		R23	1-216-049-00	METAL CHIP	1K 5% 1/10W
< DIODE >							
D21	8-719-987-63	DIODE 1N4148M (JX411)		R24	1-216-085-00	METAL CHIP	33K 5% 1/10W
D22	8-719-987-63	DIODE 1N4148M (JX411)		R25	1-216-071-00	METAL CHIP	8.2K 5% 1/10W
D23	8-719-987-63	DIODE 1N4148M (JX411)		R27	1-247-543-11	CARBON	18K 5% 1/4W
D24	8-719-987-63	DIODE 1N4148M (JX411)		R29	1-216-073-00	METAL CHIP	10K 5% 1/10W
< FRONT END >							
FE1	1-465-006-11	FRONT END (FM) (2 GANG)		R31	1-216-041-00	METAL CHIP	470 5% 1/10W
FE61	1-236-461-11	ENCAPSULATED COMPONENT		R32	1-216-073-00	METAL CHIP	10K 5% 1/10W
< IC >							
IC21	8-759-821-45	IC LA1851N		R33	1-216-073-00	METAL CHIP	10K 5% 1/10W
IC81	8-759-820-91	IC LC7218		R34	1-247-553-11	CARBON	47K 5% 1/4W (JX311)
< COIL >							
L21	1-410-494-11	INDUCTOR 1MMH		R34	1-247-721-11	CARBON	4.7K 5% 1/4W (JX411)
< FILTER >							
LPF21	1-235-164-00	FILTER, LOW PASS		R35	1-216-089-00	METAL CHIP	47K 5% 1/10W
LPF22	1-235-164-00	FILTER, LOW PASS		R37	1-216-109-00	METAL CHIP	330K 5% 1/10W
< TRANSISTOR >							
Q1	8-729-230-XX	TRANSISTOR 2SC2669-0Y		R39	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
Q21	8-729-119-78	TRANSISTOR 2SC2785-HFE		R40	1-216-055-00	METAL CHIP	1.8K 5% 1/10W
Q22	8-729-119-78	TRANSISTOR 2SC2785-HFE		R41	1-216-067-00	METAL CHIP	5.6K 5% 1/10W
Q26	8-729-900-80	TRANSISTOR DTC114ES		R42	1-216-109-00	METAL CHIP	330K 5% 1/10W
Q27	8-729-620-05	TRANSISTOR 2SC2603-EF (JX411)		R44	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
Q28	8-729-620-05	TRANSISTOR 2SC2603-EF (JX411)		R45	1-216-055-00	METAL CHIP	1.8K 5% 1/10W
Q81	8-729-900-61	TRANSISTOR DTA114ES		R46	1-216-067-00	METAL CHIP	5.6K 5% 1/10W
Q82	8-729-900-80	TRANSISTOR DTC114ES		R47	△ 1-249-409-11	CARBON	220 5% 1/4W
Q83	8-729-202-67	TRANSISTOR 2SK246-GR3		R48	1-216-097-00	METAL CHIP	100K 5% 1/10W (JX411)
Q84	8-729-230-93	TRANSISTOR 2SC3113-AB		R49	1-216-097-00	METAL CHIP	100K 5% 1/10W (JX411)
< RESISTOR >							
R1	△ 1-249-409-11	CARBON	220 5% 1/4W	R61	1-216-097-00	METAL CHIP	100K 5% 1/10W
R4	1-216-013-00	METAL CHIP	33 5% 1/10W	R62	1-216-089-00	METAL CHIP	47K 5% 1/10W
R5	1-216-013-00	METAL CHIP	33 5% 1/10W	R63	1-216-009-00	METAL CHIP	22 5% 1/10W

Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

TUNER

Ref. No.	Part No.	Description		Remark
R101	1-216-061-00	METAL CHIP	3.3K	5% 1/10W
R102	1-216-043-00	METAL CHIP	560	5% 1/10W
R103	1-216-049-00	METAL CHIP	1K	5% 1/10W
R104	1-216-035-00	METAL CHIP	270	5% 1/10W
R105	1-216-065-00	METAL CHIP	4.7K	5% 1/10W
R106	1-216-057-00	METAL CHIP	2.2K	5% 1/10W
R107	1-216-065-00	METAL CHIP	4.7K	5% 1/10W
R108	1-216-025-00	METAL CHIP	100	5% 1/10W
R109	1-216-065-00	METAL CHIP	4.7K	5% 1/10W
R110	△ 1-249-405-11	CARBON	100	5% 1/4W

< VARIABLE RESISTOR >

RV21	1-238-015-11	RES. ADJ. CARBON 4.7K
RV22	1-238-017-11	RES. ADJ. CARBON 22K
RV24	1-238-017-11	RES. ADJ. CARBON 22K

< TRANSFORMER >

T21	1-404-807-11	TRANSFORMER, DISCRIMINATOR
-----	--------------	----------------------------

< TERMINAL >

TM1	* 1-537-264-11	TERMINAL BOARD (SPEAKER)
-----	----------------	--------------------------

< TEST PIN >

TP1	* 1-560-060-00	PIN, CONNECTOR 2P
-----	----------------	-------------------

< VIBRATOR >

XT81	1-577-126-11	VIBRATOR, CRYSTAL
------	--------------	-------------------

MISCELLANEOUS

19	1-569-007-11	ADAPTER, CONVERSION 2P (JX411:E)
CN604	1-565-949-11	SOCKET, CONNECTOR 9P (JX311:US, Canadian, E, AUS)
CP1	△ 1-551-188-XX	CORD, POWER (JX411:E)
CP1	△ 1-558-945-11	CORD, POWER (JX411:US, Canadian)
CP1	△ 1-559-912-11	CORD, POWER (JX411:AUS)
S1	△ 1-572-267-21	SWITCH, PUSH (AC POWER) (1 KEY) (JX411)
VS1	△ 1-570-046-21	SWITCH, VOLTAGE CHANGE (JX411:E)

Ref. No.	Part No.	Description	Remark
		ACCESSORY & PACKING MATERIAL	

	1-501-374-11	ANTENNA, LOOP (JX411:US, E, AUS)	
	1-558-232-11	CORD (WITH CONNECTOR) (SIRCS) 4P (JX411:US, E, AUS)	
	1-559-533-11	CORD, CONNECTION (JX411:US, E, AUS)	
	3-753-100-11	MANUAL, INSTRUCTION (JX411:E)	
	3-753-100-21	MANUAL, INSTRUCTION (JX411:US, AUS)	
	* 4-941-692-01	CUSHION (JX311:US, E, AUS/JX411)	
	* 4-943-621-01	INDIVIDUAL CARTON (JX411:US, AUS)	
	* 4-943-621-11	INDIVIDUAL CARTON (JX411:E)	

HARDWARE LIST

# 1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S
# 2	7-682-548-09	SCREW +BVTT 3X8 (S)
# 3	7-685-534-19	SCREW +BTP 2.6X8 TYPE2 N-S
# 4	7-621-849-00	SCREW, TAPPING (JX411)

Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

