

# STR-333L

*AEP Model  
UK Model  
SCN Model*



## FM-AM PROGRAM RECEIVER

### SPECIFICATIONS

#### GENERAL


<b>Power Requirements:</b>	240V ac (or 220V ac adjustable by authorized Sony personnel), 50 Hz (UK model) 220V ac (or 240V ac adjustable by authorized Sony personnel), 50 Hz (AEP, SCN model)
<b>Power Consumption:</b>	240W (UK model) 180W (AEP, SCN model)
<b>AC Outlets:</b>	Two unswitched, total 200W (not provided for a SCN model)
<b>Dimensions:</b>	Approx. 430 (w) x 135 (h) x 295 (d) mm 17 (w) x 5 1/4 (h) x 11 1/2 (d) inches including projecting parts and controls
<b>Weight:</b>	Approx. 6.9 kg, 15 lb 4 oz (net) Approx. 8.0 kg, 17 lb 11 oz (in shipping carton)

#### FM SECTION

<b>Frequency Range:</b>	87.5–108 MHz
<b>Antenna Terminals:</b>	300Ω balanced 75Ω unbalanced
<b>Intermediate Frequency:</b>	10.7 MHz
<b>Sensitivity at 50 dB Quieting:</b>	3.5μV, 16.1 dBf (MONO) 45μV, 38.3 dBf (STEREO)
<b>Sensitivity at 46 dB Quieting:</b>	4.0μV (MONO) 50μV (STEREO) (at 40 kHz deviation)
<b>Usable Sensitivity:</b>	IHF 1.9μV, 10.8 dBf 1.6μV (S/N = 26 dB, 40 kHz deviation)
<b>S/N Ratio:</b>	75 dB (MONO) 70 dB (STEREO)

<b>Harmonic Distortion:</b>	At 1 kHz 0.15% (MONO) 0.3% (STEREO)
<b>IM Distortion:</b>	0.15% (MONO) 0.3% (STEREO)
<b>Separation:</b>	45 dB at 1 kHz
<b>Frequency Response:</b>	40 Hz–12.5 kHz $+0.5$ dB (DIN) 30 Hz–15 kHz $+0.5$ dB (IHF)
<b>Selectivity at 300 kHz:</b>	55 dB (at 40 kHz deviation, S/N = 26 dB)
<b>Capture Ratio:</b>	1.0 dB
<b>AM Suppression Ratio:</b>	54 dB
<b>Image Response Ratio:</b>	45 dB
<b>Spurious Response Ratio:</b>	75 dB
<b>Muting Threshold:</b>	Approx. 5μV — Continued on page 2 —

#### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

# SONY®

## SERVICE MANUAL



# SW/MW/LW SECTION

	SW	MW	LW
Frequency Range	5.8 MHz—15.8 MHz	522 kHz—1,602 kHz	150 kHz—350 kHz
Antenna	External antenna terminal	Built-in ferrite-rod antenna, External antenna terminal	
Intermediate Frequency	450 kHz		
Usable Sensitivity	30 $\mu$ V, external antenna (10 MHz)	250 $\mu$ V/m, built-in antenna (1,000 kHz) 100 $\mu$ V, external antenna (1,000 kHz)	500 $\mu$ V/m, built-in antenna (230 kHz) 100 $\mu$ V, external antenna (230 kHz)
S/N Ratio	52 dB (5 mV)	52 dB (50 mV/m)	52 dB (50 mV/m)
Harmonic Distortion	0.3% (5 mV, 400 Hz)	0.3% (50 mV/m, 400 Hz)	0.3% (50 mV/m, 400 Hz)
Selectivity	50 dB (9 kHz)	50 dB (9 kHz)	50 dB (9 kHz)

## AUDIO AMPLIFIER SECTION

### Continuous RMS

#### Power Output:

Less than 0.1% THD, both channels driven simultaneously  
 At 20 Hz—20 kHz  
 25 + 25W (8  $\Omega$ )  
 25 + 25W (4  $\Omega$ )  
 At 1 kHz  
 28 + 28W (8  $\Omega$ )  
 28 + 28W (4  $\Omega$ )  
 According to DIN 45500  
 25 + 25W (8  $\Omega$ )  
 25 + 25W (4  $\Omega$ )

**Dynamic Power Output:** 90W (8  $\Omega$ )  
 (IHF constant power supply method)  
 90W (4  $\Omega$ )

**Power Bandwidth:** 10 Hz—40 kHz, IHF

**Damping Factor:** 20 at 1 kHz, 8  $\Omega$

**Harmonic Distortion:** Less than 0.1% at rated output  
 Less than 0.1% at 1W output

**Intermodulation Distortion:** Less than 0.1% at rated output  
 (60 Hz : 7 kHz = 4:1)  
 Less than 0.1% at 1W output

**Residual Noise:** Less than 0.08  $\mu$ W at 8  $\Omega$

### Inputs:

	Sensitivity	Impedance	S/N	Weighting network
PHONO	2.5 mV (–50 dB)	50 k $\Omega$	70 dB	A
TAPE	150 mV (–14.5 dB)	100 k $\Omega$	90 dB	A

Measured with rated output power into 8  $\Omega$  loads (both channels driven simultaneously) at 1 kHz.

### Outputs: (with rated input)

REC OUT	Voltage 150 mV	Impedance 10 k $\Omega$
HEADPHONES	Accepts all low or high impedance headphones.	
SPEAKER	4–16 $\Omega$ speakers are suitable.	


**Frequency Response:** PHONO  
 RIAA equalization curve  $\pm$  1 dB  
 TAPE  
 10 Hz—50 kHz  $+1_{-3}$  dB

**Tone Controls:** BASS  $\pm$  8 dB at 100 Hz  
 TREBLE  $\pm$  8 dB at 10 kHz

**Loudness Control:** +6 dB at 100 Hz  
 (Att. 30 dB) +3 dB at 10 kHz


## MODEL IDENTIFICATION

– Specification Label or AC Outlet –

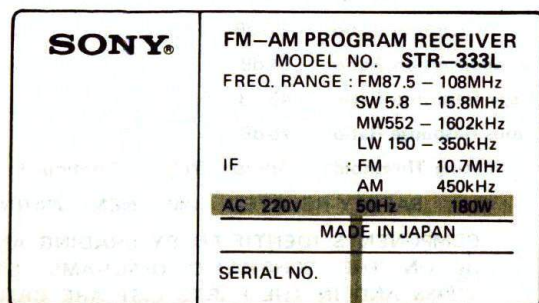

UK model: AC 240 V ~ 50 Hz 240W  
 AEP, SCN model: AC 220 V ~ 50 Hz 180W

– rear panel –

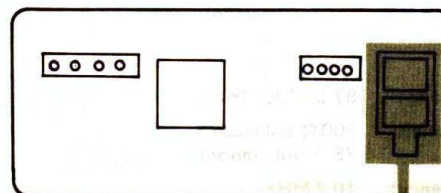


AEP model: two AC outlet  
 SCN model: not provide



# SECTION 1 OUTLINE

## 1-1. BLOCK DIAGRAM

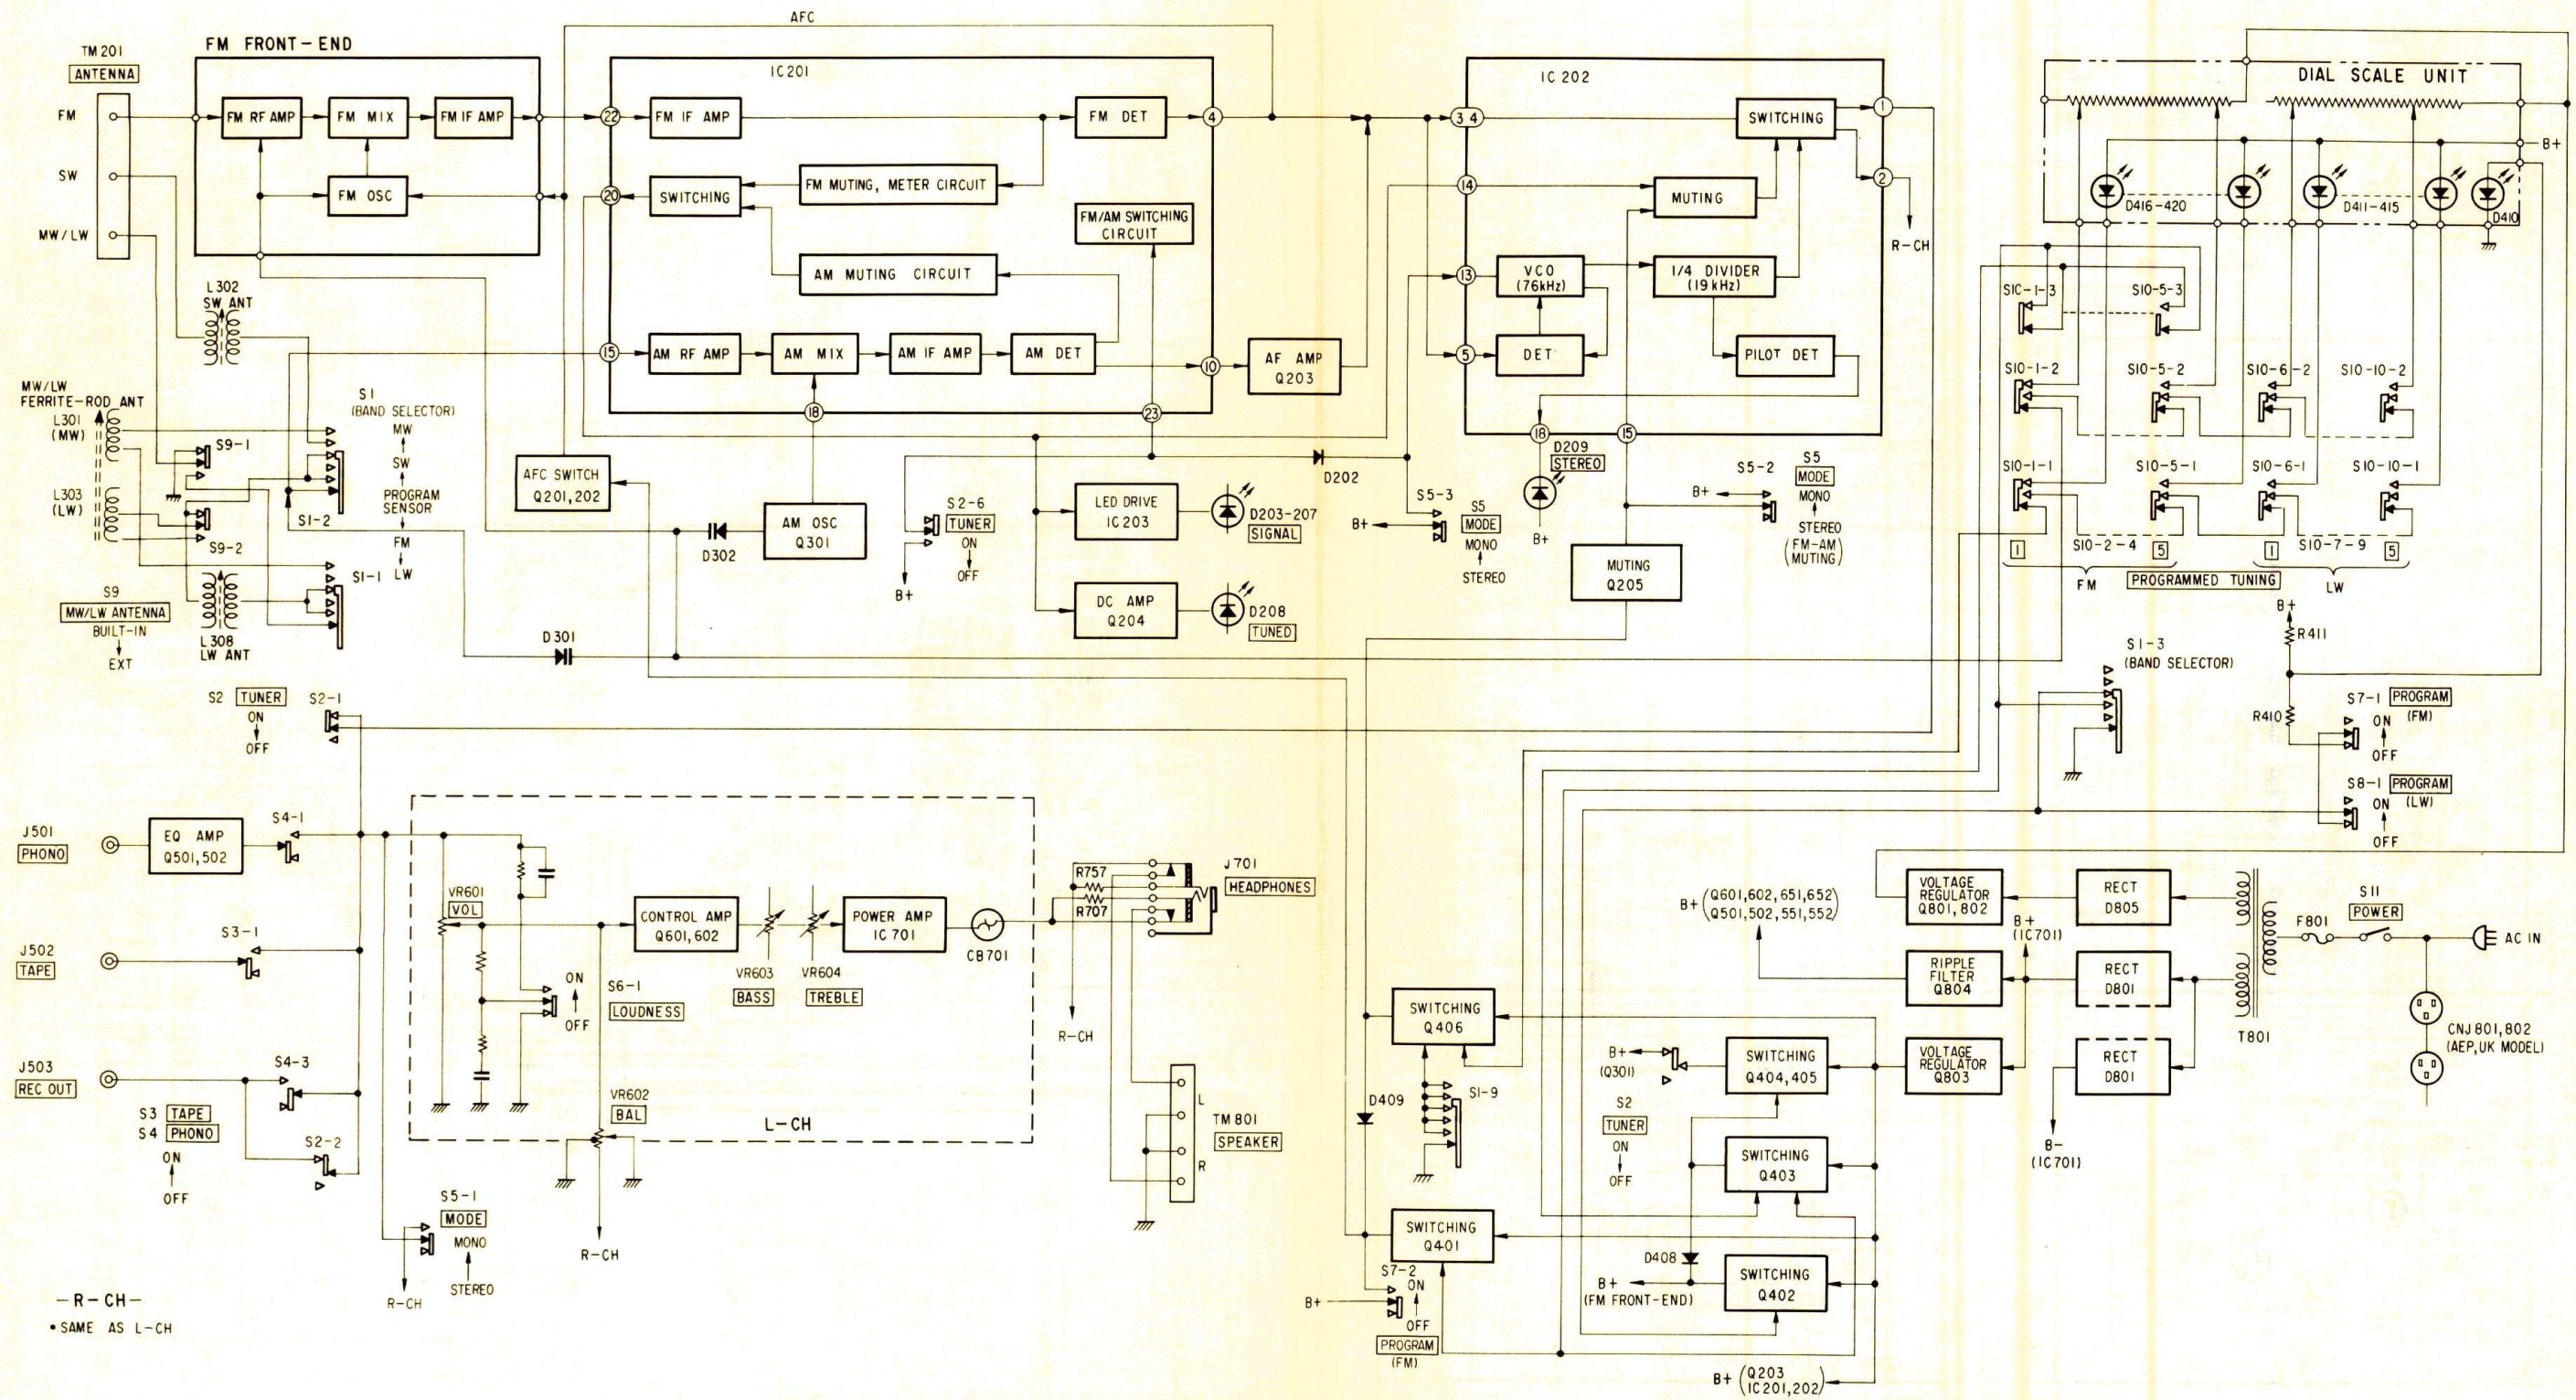








1. In SW, MW or LW reception, the CX168 (IC201) is switched to AM mode.
2. In SW, MW or LW reception, B+ voltage is applied to Q301.
3. Band Selector (S1): FM position  
This line is grounded. Therefore, Q401, Q201 and Q202 turns on and AFC circuit does not operate.
4. Band Selector: FM position  
This line is grounded and Q403 turns on.
5. Band Selector: PROGRAM SENSOR or FM position  
In FM reception, Q405 turns off thereby turning Q403 on and Q404 turning off.  
Band Selector: SW, MW or LW position  
Q404 and Q405 turns on.
6. Band Selector: PROGRAM SENSOR position  
This line is grounded and Q402 turns on. Therefore, B+ voltage is applied to the FM front-end circuit even in LW reception, and the selection of LW or FM mode is done by applying B+ voltage to terminal ②3 of IC201.
7. Band Selector: PROGRAM SENSOR position  
This line is grounded. Therefore, the dial pointer is not brighter than manual tuning. But when the PROGRAM switch (S7, S8) is depressed, the current flowing through D410 increases and the dial pointer brightens.
8. Band Selector: PROGRAM SENSOR position  
When one of the PROGRAMMED TUNING button (S10) is depressed, this line is grounded and Q403 turns on.
9. Band Selector: PROGRAM SENSOR position  
This line is grounded. Therefore, when one of the PROGRAMMED TUNING button (S10) is depressed, the station marker (D411 to D420) will light up.
10. When the FM PROGRAM switch (S7) switches ON, B+ voltage is applied to this line, Q201 and Q202 turn on, and AFC circuit is released by Q201 and Q202.
11. Band Selector: PROGRAM SENSOR position  
This line is grounded via D405 and S1-3, but the voltage is applied to the base of Q406 by R409, and Q406 turns off.  
But, when switching S10 over, a voltage is momentarily not applied and Q406 turns on.
12. When the FUNCTION switch (S1) is changed, Q406 turns on momentarily by S1-9. Then AFC circuit is released and the signal is muted within IC202.
13. When the FUNCTION switch (S1) or PROGRAMMED TUNING switch (S10) is changed, the voltage is applied to this line. Therefore, AFC circuit is released.
14. When the FUNCTION switch (S1) or PROGRAMMED TUNING switch (S10) is changed, Q406 and Q205 turns on, therefore, the signal is muted within IC202.
15. When the MODE switch (S5) is changed to MONO, the voltage is applied to terminal ①5 of IC202 and the signal is muted within IC202.
16. In SW, MW or LW reception, the voltage is applied to terminal ①3 of IC202 and the VCO operation stops.
17. When the MODE switch (S5) is changed to MONO, the voltage is applied to terminal ①5 of IC202 and the VCO operation stops.



## SECTION 2 DISASSEMBLY


**Note:** Follow the disassembly procedure in the numerical order given.

### TOP COVER REMOVAL

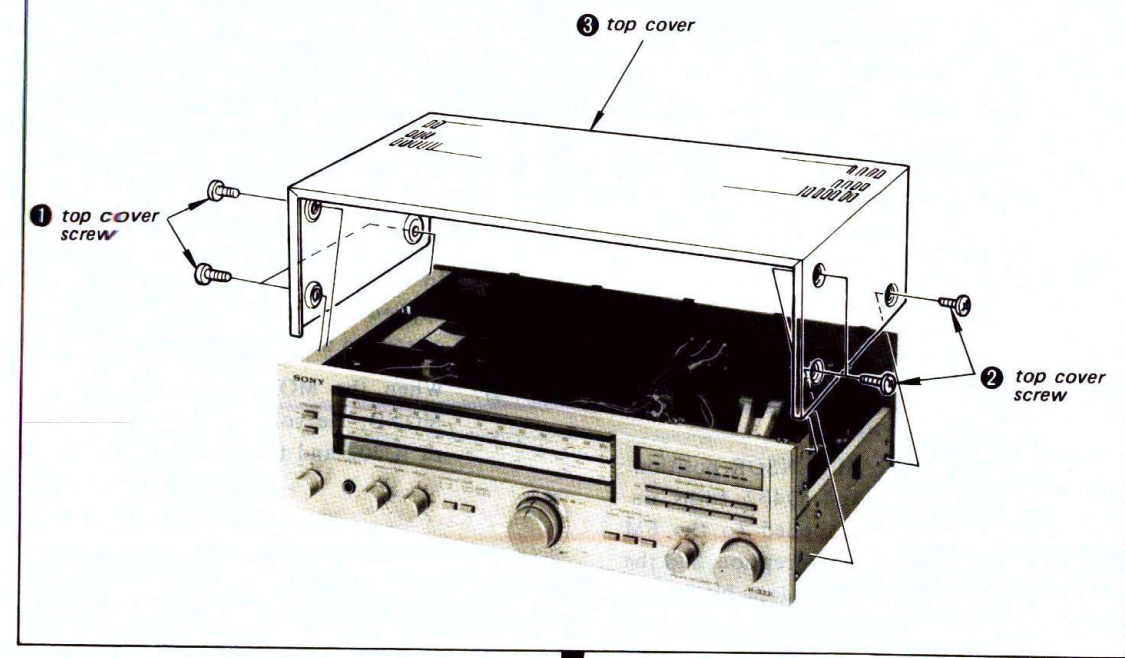


**DIAL CORD STRINGING**  
See page 15.


### BOTTOM PLATE REMOVAL

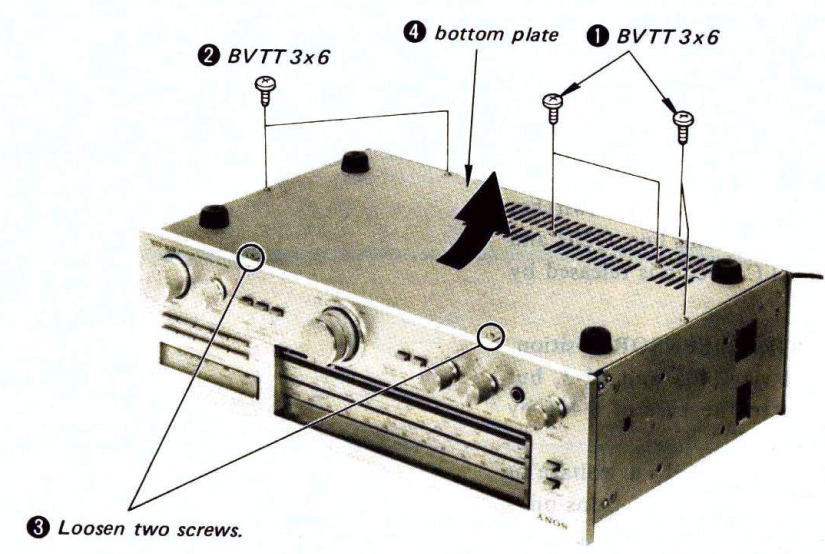

### FRONT PANEL REMOVAL

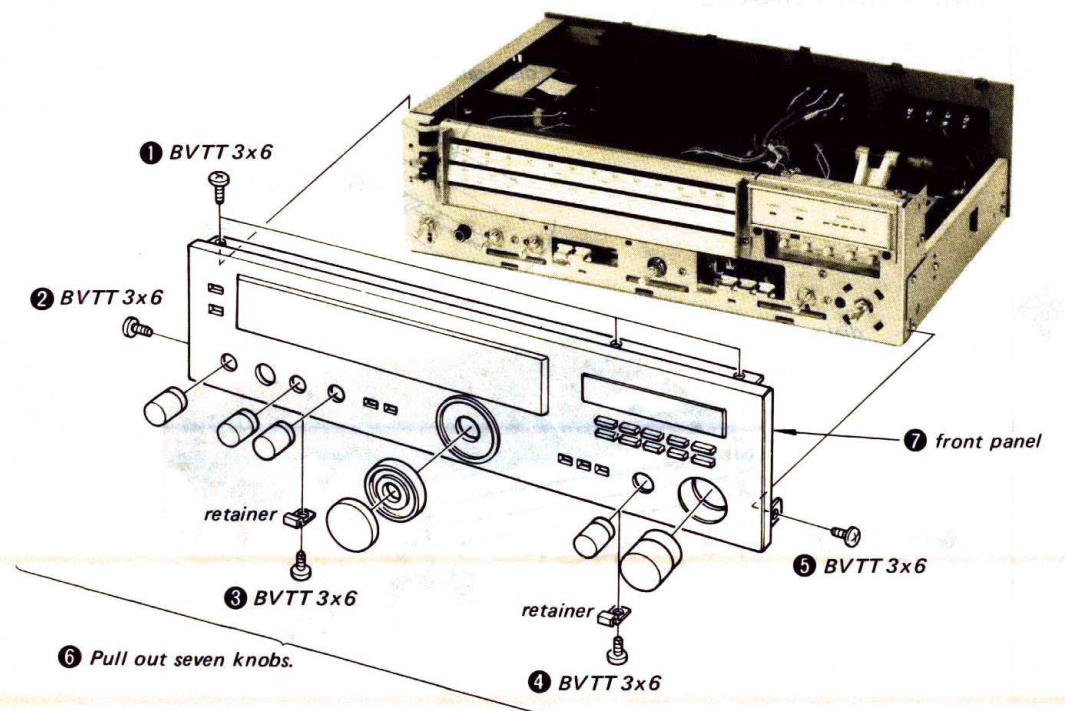


### REAR PANEL REMOVAL

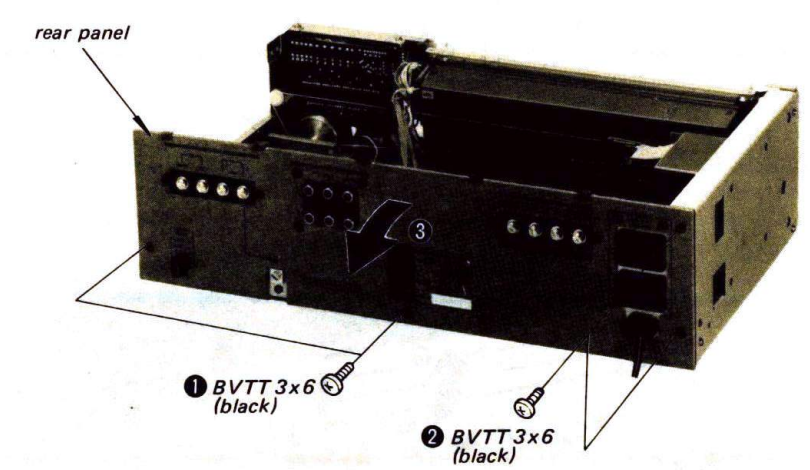




## DIAL SCALE REMOVAL

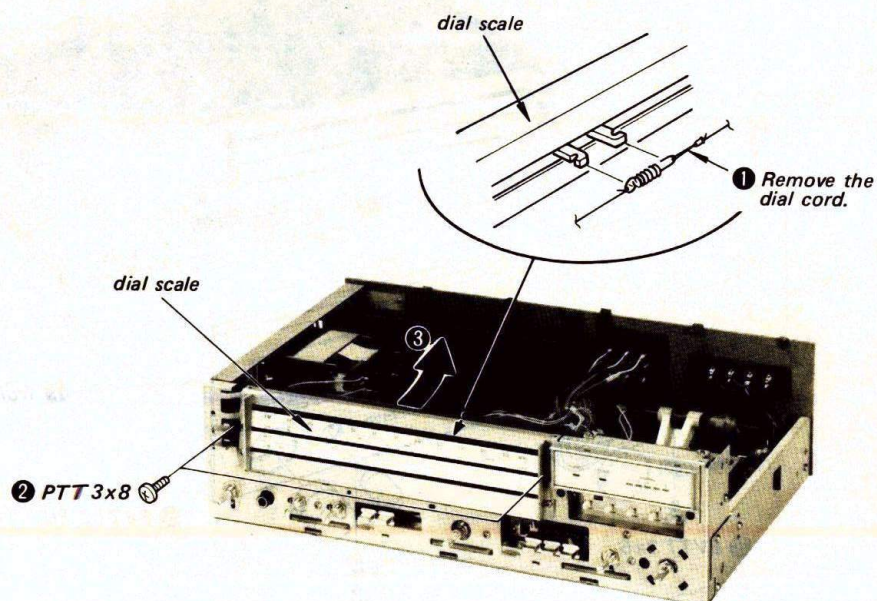


## SUB-PANEL REMOVAL

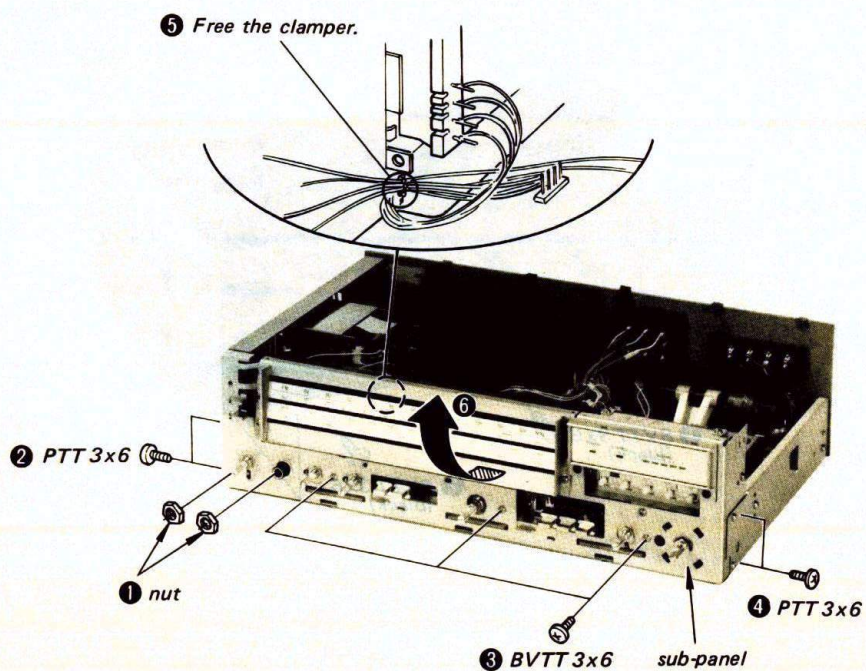




## SET SWITCH CIRCUIT BOARD REMOVAL

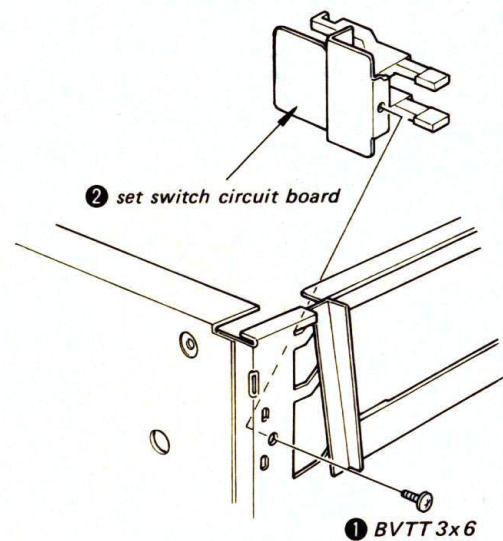



## TUNING SWITCH CIRCUIT BOARD REMOVAL

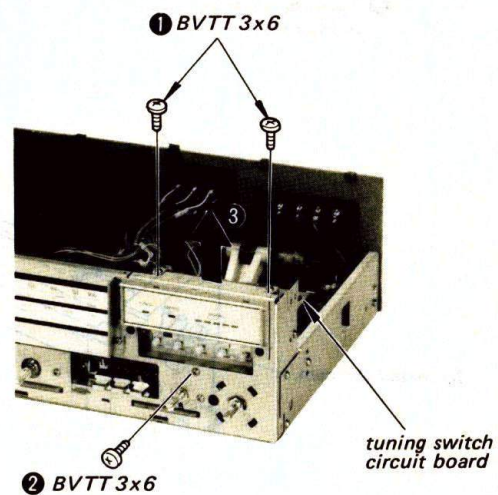


## DIAL SCALE UNIT

This unit is tuned by moving the sliders of the dial scale unit along the carbon-coated lines of the resistor plates. The sliders should be moved very precisely. So, carefully perform the disassembly and the installation of the dial scale unit as follows. Only the marker and the pointer table are replaceable.

Take care not to damage the sliders shown below.


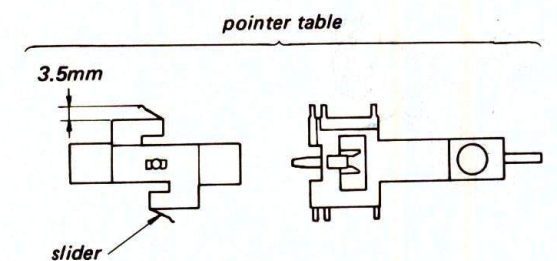
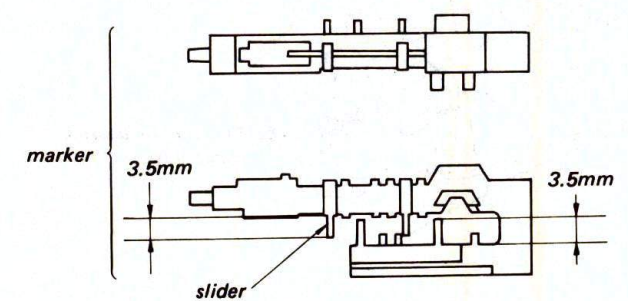


## TUNER CIRCUIT BOARD REMOVAL

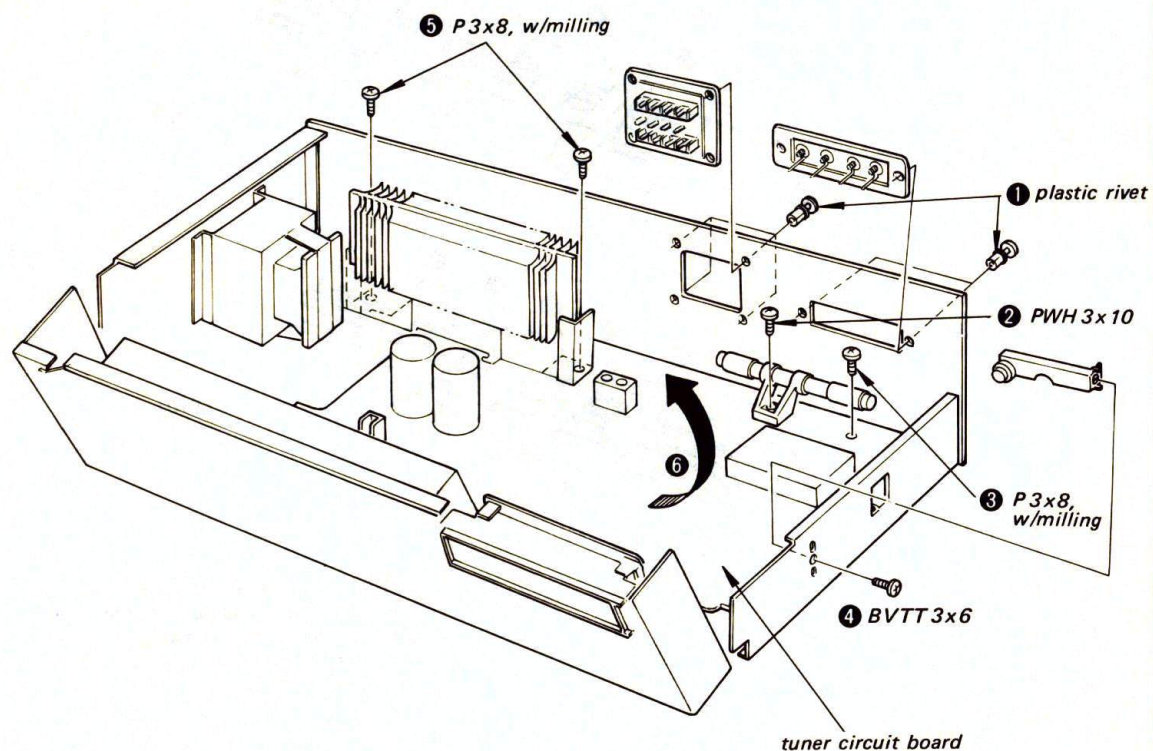





# • Dial Scale Unit Disassembly

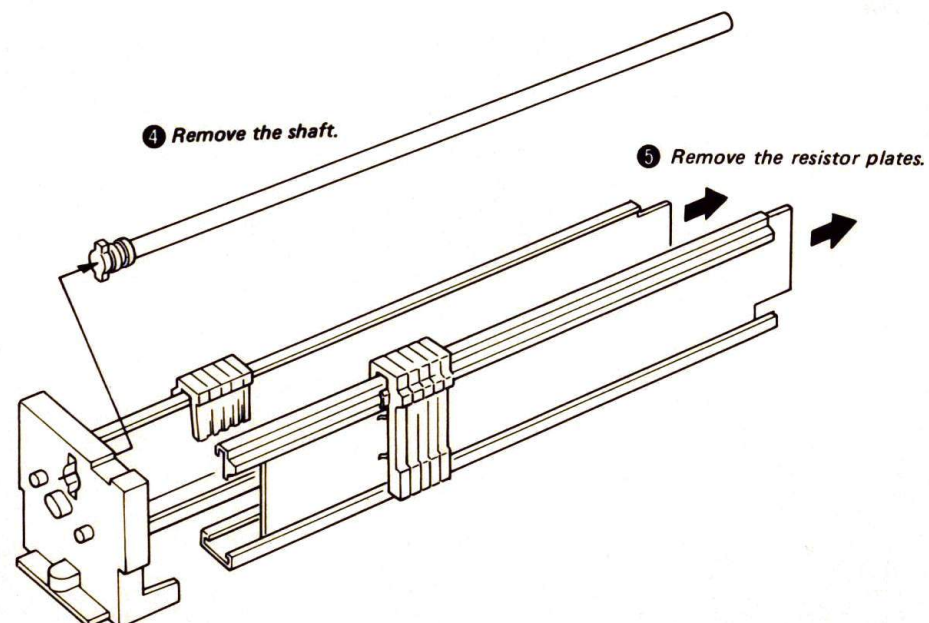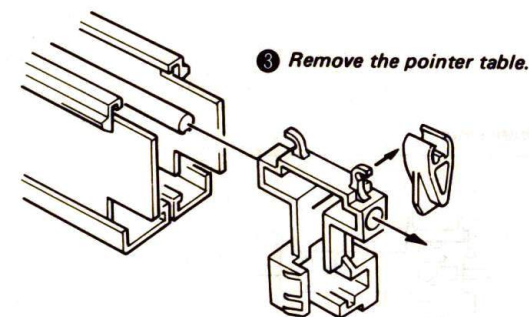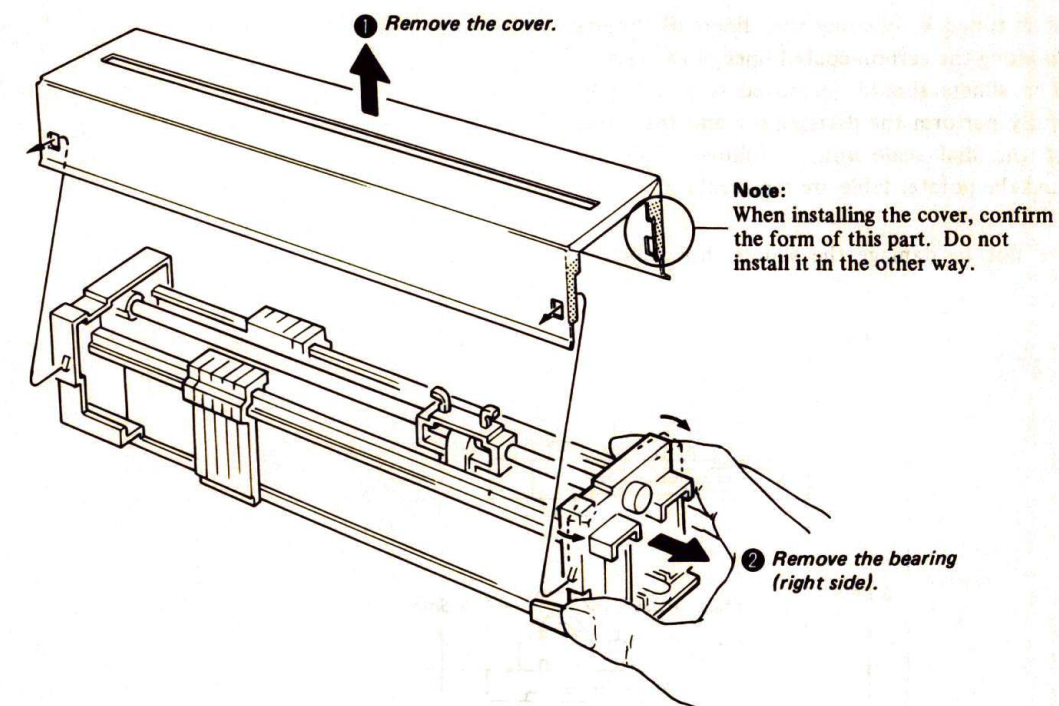

# • Dial Scale Unit Installation

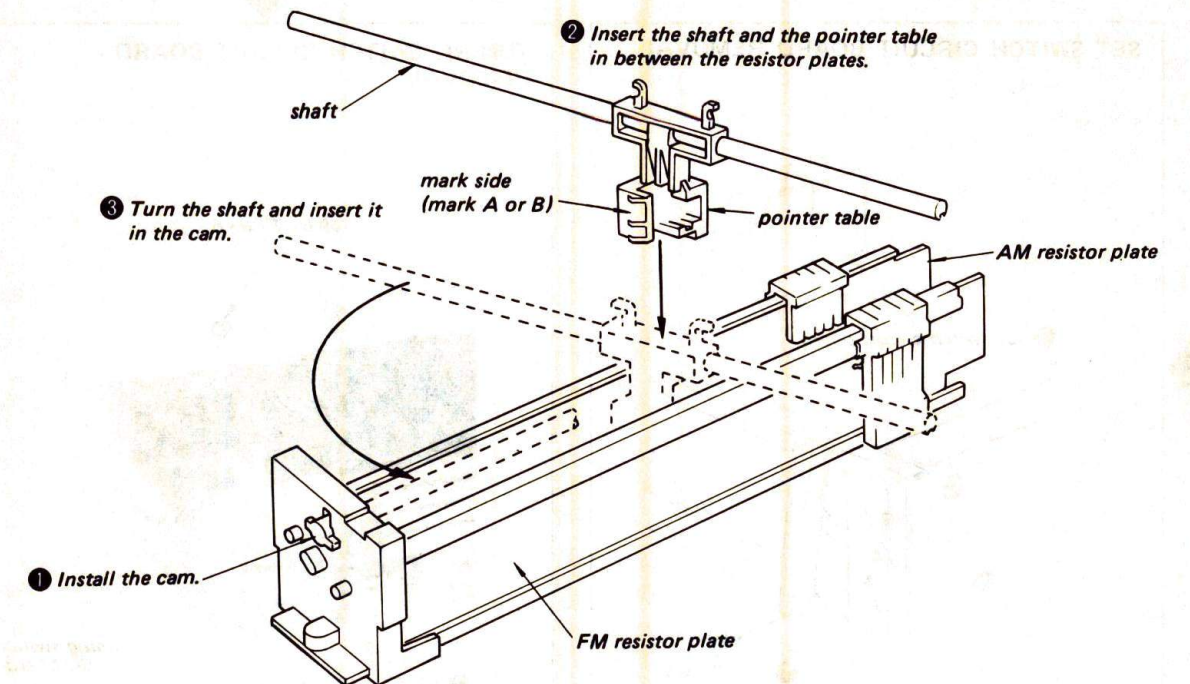


Note:  
The installation is performed in this way not to damage the sliders of the pointer table.

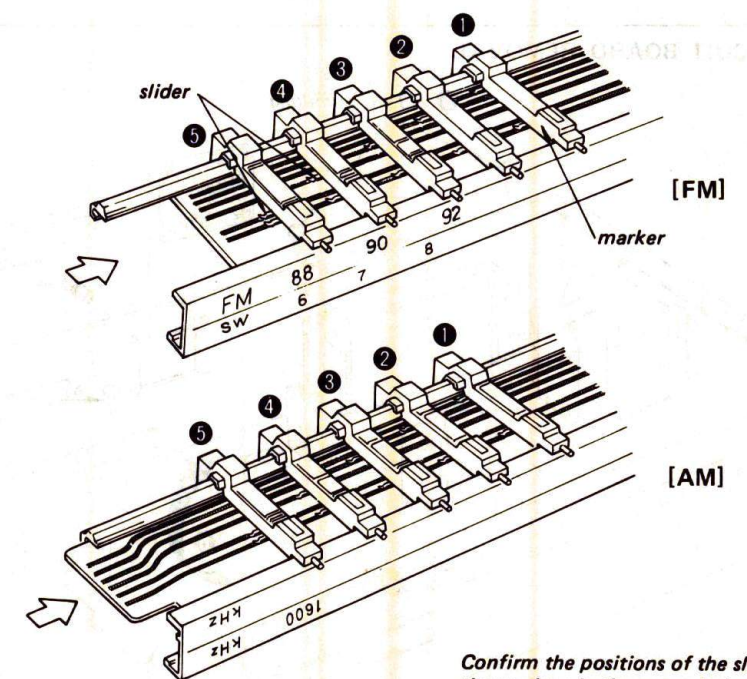



# DIAL CORD STRINGING

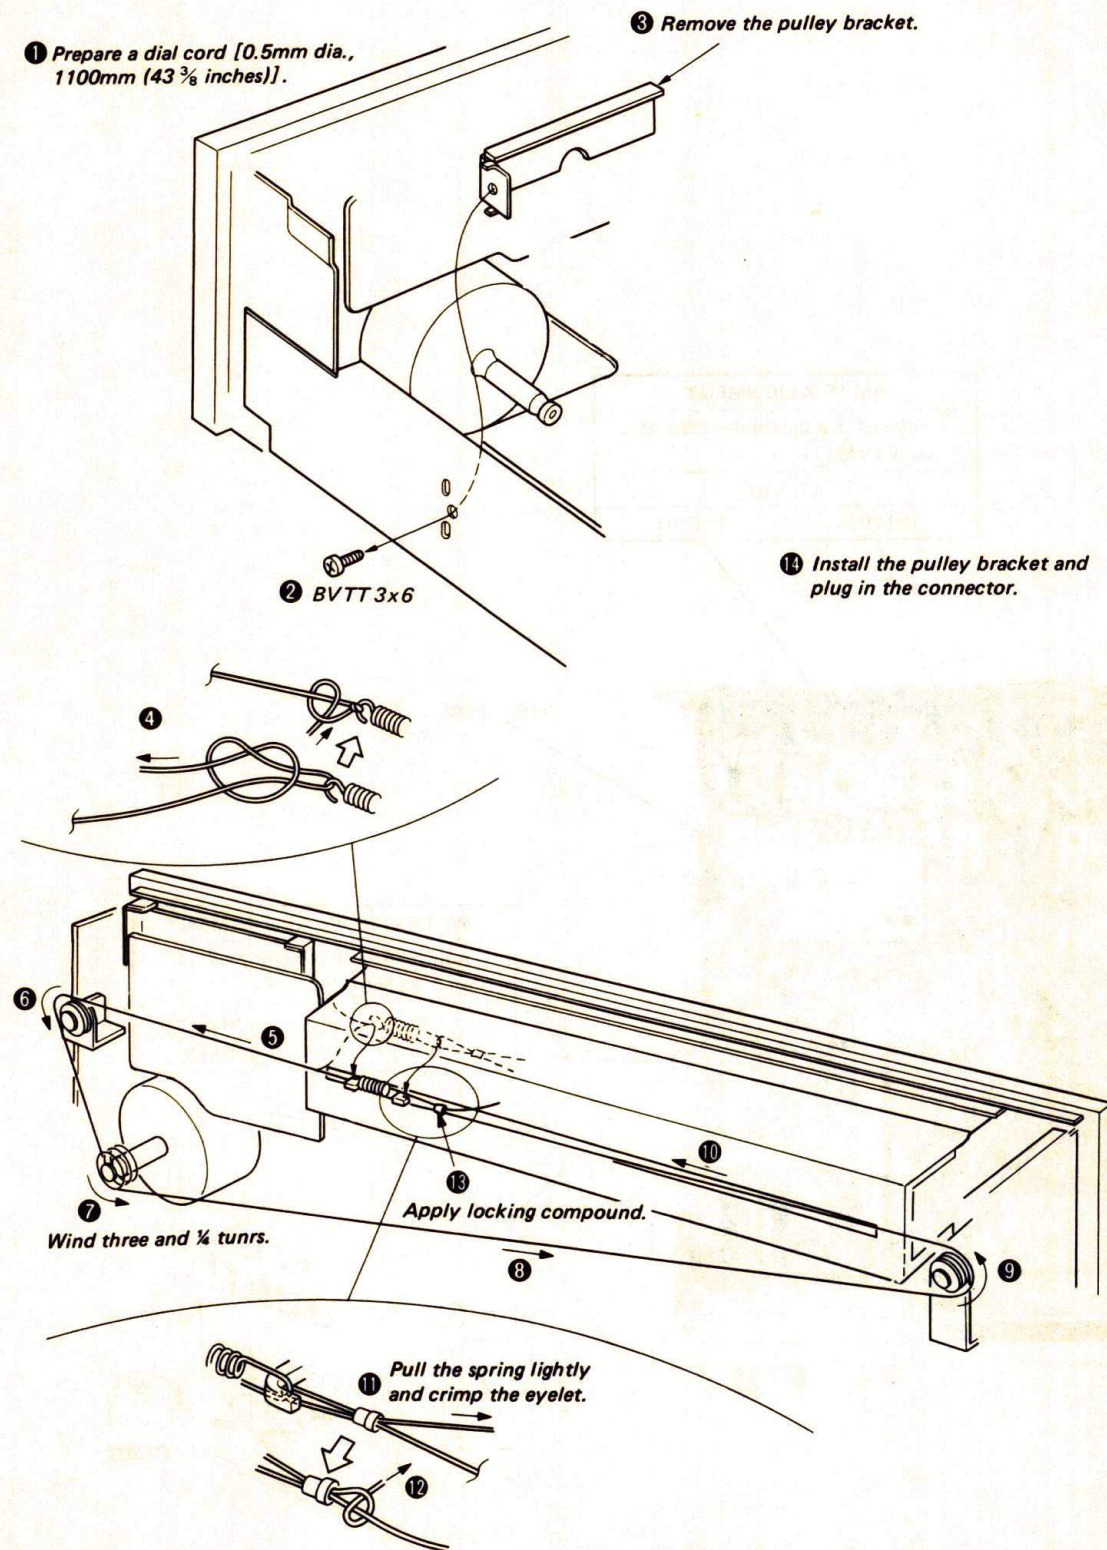




## SECTION 3 ADJUSTMENTS

### MW SECTION

Setting:


FUNCTION Switch: TUNER  
Band Selector: MW

AM rf signal  
generator



Put the lead-wire  
antenna close to  
the set.

Modulation: 400 Hz, 30%

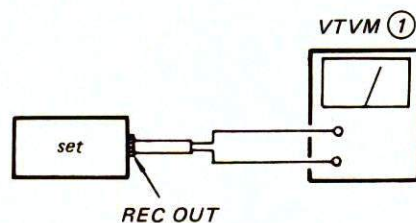

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

#### MW FREQUENCY COVERAGE ADJUSTMENT

Tuning Control Voltage Adjustment	Dial Indication	VTVM ① Reading	Adjustment Part
	maximum frequency	25 V	RT806
	minimum frequency	2 V	RT802
	Adjust for a specified reading on VTVM ②.		

Local Oscillator Frequency Adjustment	Dial Indication	AM Rf Signal Generator Frequency	Adjustment Part
	minimum frequency	515 kHz	L304
	maximum frequency	1,660 kHz	CT304
	Adjust for a maximum reading on VTVM ①.		

Dial Pointer Setting	Dial Indication	AM Rf Signal Generator Frequency	Adjustment Part
	600 kHz	600 kHz	RT806
	1,000 kHz	1,000 kHz	RT803
	1,400 kHz	1,400 kHz	RT802
	Adjust for a maximum reading on VTVM ①.		

**Note:** Be sure to perform the LW and the SW frequency coverage adjustments after the tuning control voltage adjustment.

#### AM IF ALIGNMENT

Adjust for a maximum reading on VTVM ①.

450 kHz

IFT202

IFT201

#### MW TRACKING ADJUSTMENT


Adjust for a maximum reading on VTVM ①.

L301

600 kHz


CT301

1,400 kHz

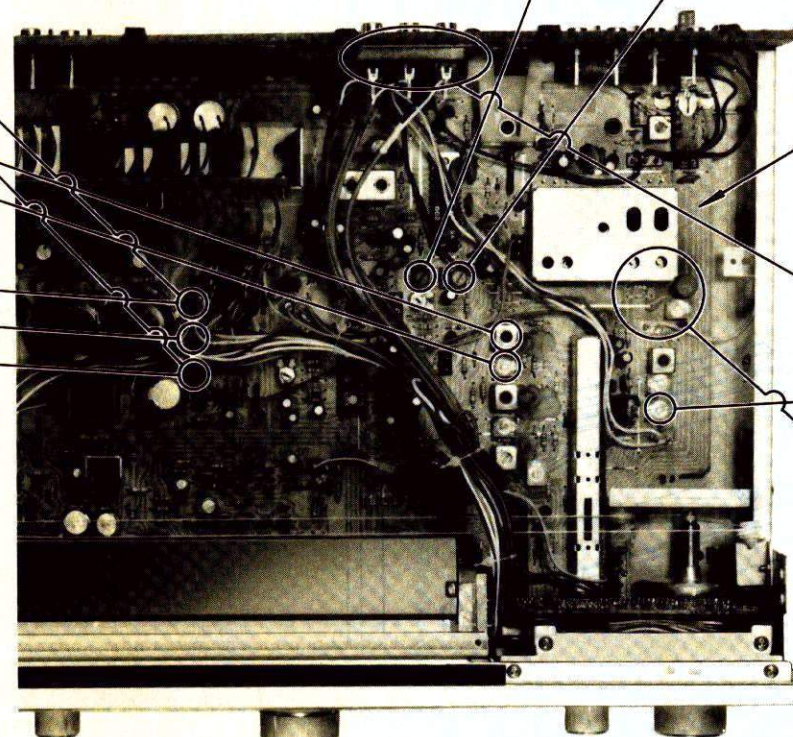

tuner board

VTVM ②

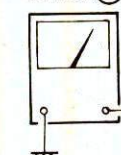



R254

CT303




LW SECTION

Setting: FUNCTION Switch: TUNER  
Band Selector: LW  
MW/LW ANTENNA Selector: BUILT-IN

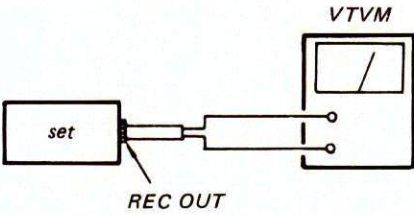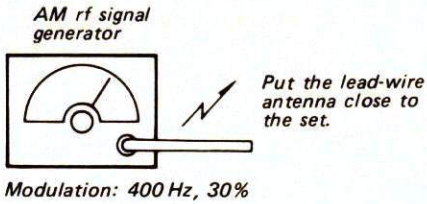

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

LW EXT ANTENNA COIL ADJUSTMENT

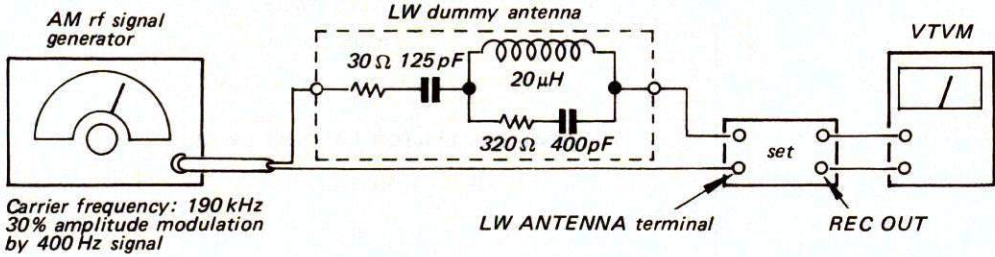


1. Set the MW/LW ANTENNA switch to EXT position.
2. Tune the set to 230 kHz and adjust L308 for a maximum reading on VTVM.

LW TRACKING ADJUSTMENT	
Adjust for a maximum reading on VTVM.	
190 kHz	L303
310 kHz	CT303



AM IF ALIGNMENT	
Adjust for a maximum reading on VTVM.	
450 kHz	IFT202
	IFT201

LW FREQUENCY COVERAGE ADJUSTMENT	
Adjust for a maximum reading on VTVM.	
145 kHz	L306
365 kHz	CT306

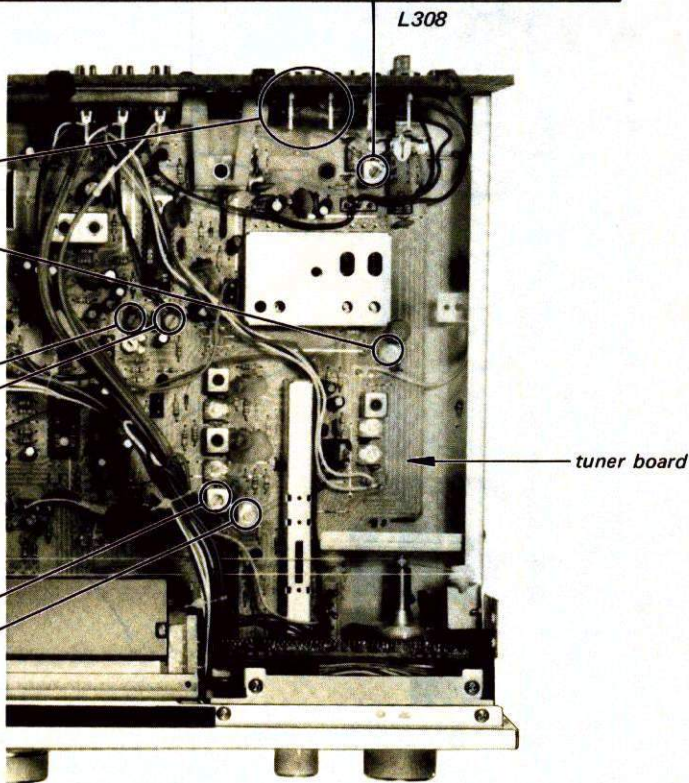

SW SECTION

Setting: FUNCTION Switch: TUNER  
Band Selector: SW

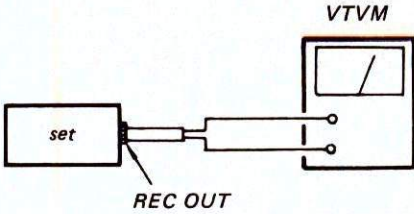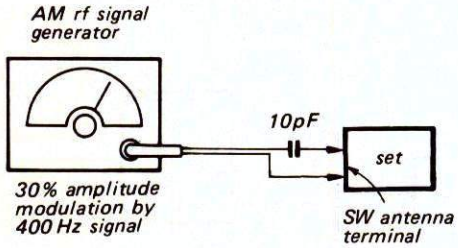


- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

AM IF ALIGNMENT	
Adjust for a maximum reading on VTVM.	
450 kHz	
IFT202	IFT201

SW FREQUENCY COVERAGE ADJUSTMENT	
Adjust for a maximum reading on VTVM.	
5.5 MHz	L305
16.1 MHz	CT305

SW TRACKING ADJUSTMENT	
Adjust for a maximum reading on VTVM.	
L302	6 MHz
CT302	15 MHz


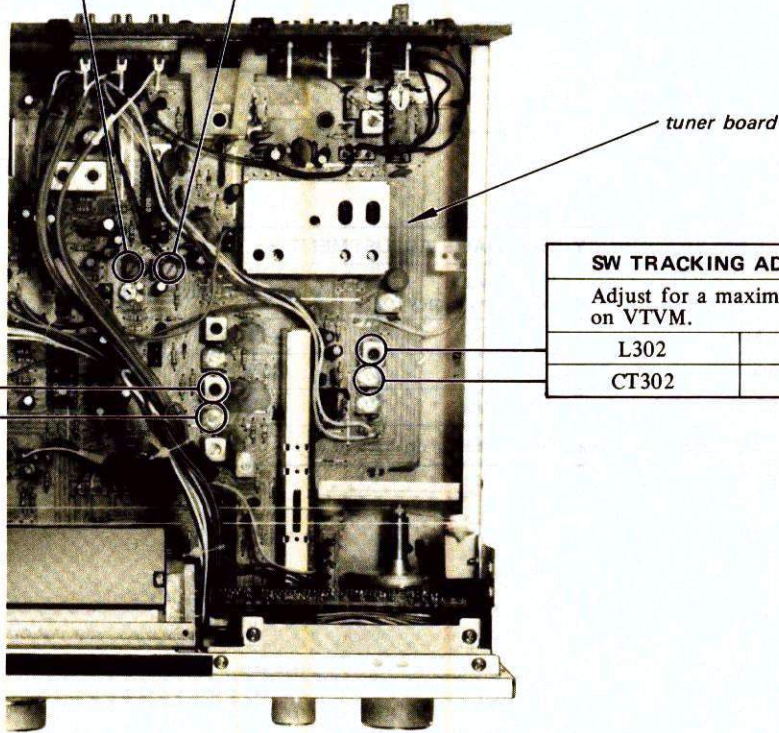




FM SECTION


Setting:

FUNCTION Switch: TUNER  
Band Selector: FM  
MODE Switch: MONO

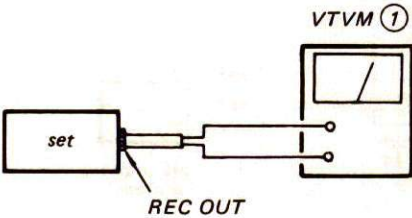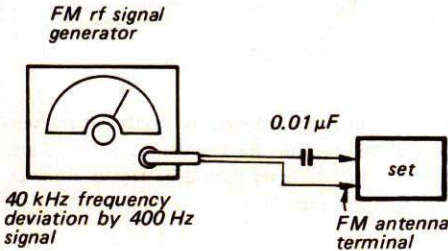

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

FM FREQUENCY COVERAGE ADJUSTMENT 2		
Dial Indication	FM Rf Signal Generator Frequency	Adjustment Part
88 MHz	88 MHz	RT805
98 MHz	98 MHz	RT804
108 MHz	108 MHz	RT801
Adjust for a maximum reading on VTVM (1).		

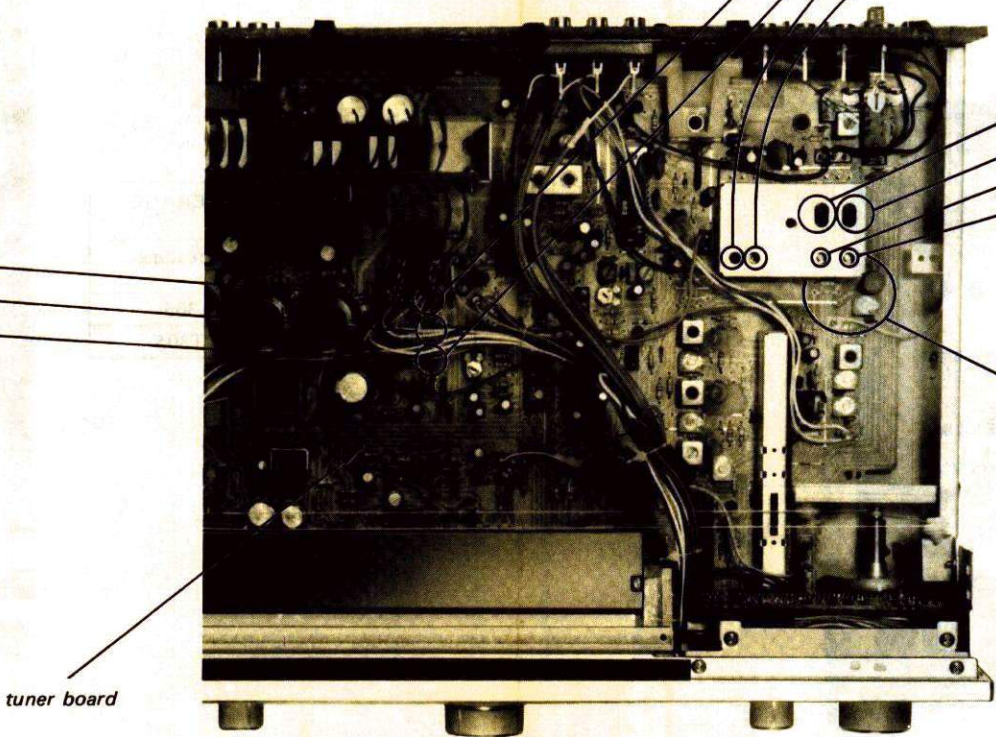

tuner board

FM FRONT-END BLOCK

Adjustment is not necessary. But if it has been meddled with in some way, and if the adjustment is necessary by all means, adjust the FM front-end block as follows.

FM FREQUENCY COVERAGE ADJUSTMENT 1


- 1) Be sure to perform this adjustment before the FM frequency coverage adjustment 2.

TUNING CONTROL VOLTAGE ADJUSTMENT		
Adjustment Part	Dial Indication	VTVM (2) Reading
RT805	minimum frequency	2.73 V
RT801	maximum frequency	22.08 V
Adjust for a specified reading on VTVM (2).		

LOCAL OSCILLATOR FREQUENCY ADJUSTMENT		
Adjustment Part	Dial Indication	FM Rf Signal Generator Frequency
T2	minimum frequency	88 MHz
CT3	maximum frequency	108 MHz
Adjust for a maximum reading on VTVM (1).		

- 2) Be sure to perform this adjustment after the FM frequency coverage adjustment 2.

FM TRACKING ADJUSTMENT	
Adjust for a maximum reading on VTVM (2).	
L4	88 MHz
L2	
CT2	108 MHz
CT1	

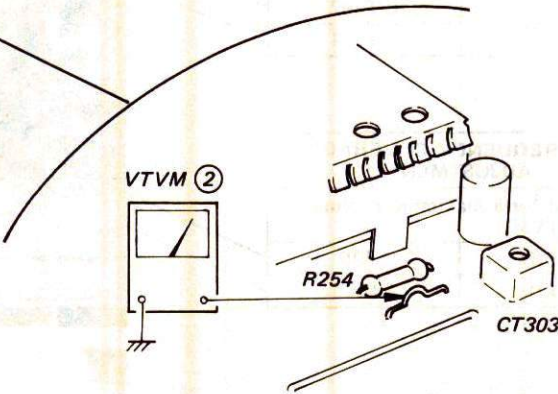




FM DISCRIMINATOR ALIGNMENT 1

Setting:  
FUNCTION Switch: TUNER  
Band Selector: FM  
MODE Switch: MONO  
TUNING: Detuned position

Procedure:  
Adjust the orange core (primary-side) of IFT203 for 0V reading on VOM.


Note: When replacing the ceramic filter (CF201), perform this alignment.

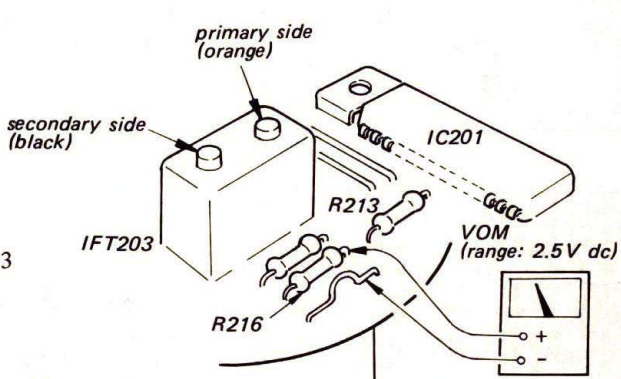


FM DISCRIMINATOR ALIGNMENT 2

Setting:  
FUNCTION Switch: TUNER  
Band Selector: FM  
MODE Switch: MONO

Procedure:  
Adjust the black core (secondary side) of IFT203 for minimum distortion.

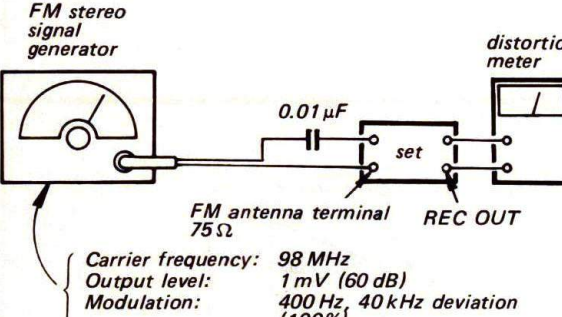


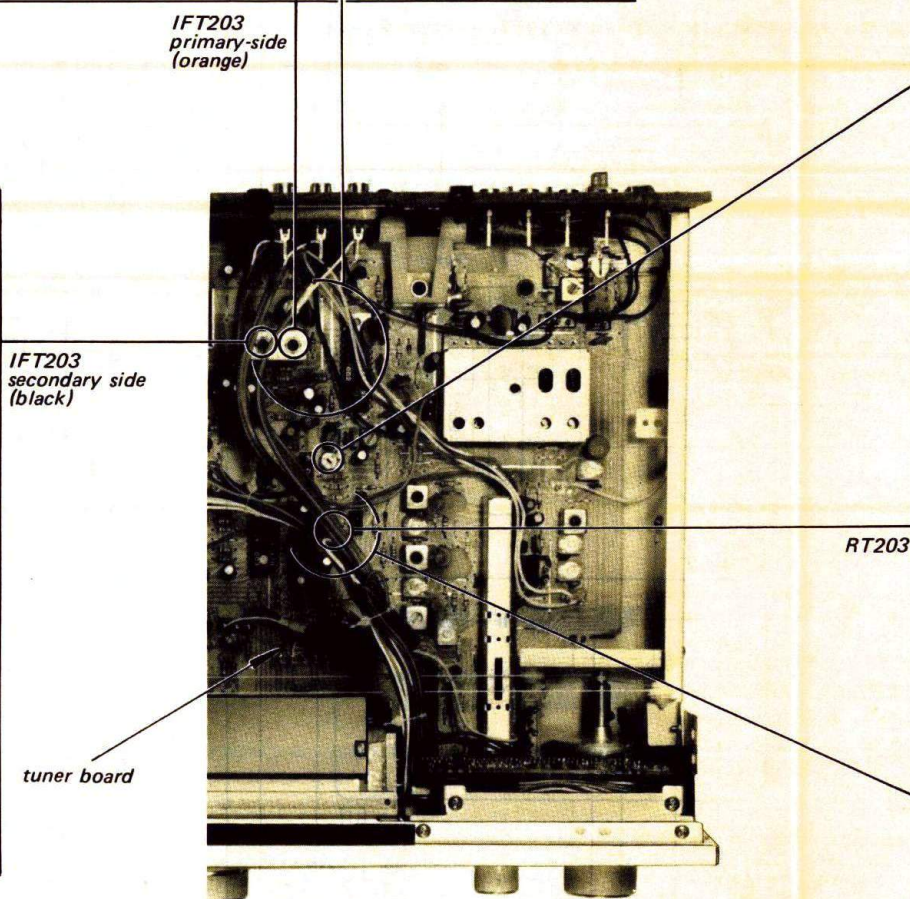

MUTING LEVEL ADJUSTMENT

Setting:  
FUNCTION Switch: TUNER  
MODE Switch: STEREO/FM-AM MUTE

Procedure:  
Turn RT201 and stop it just when the VTVM indication suddenly decreases.

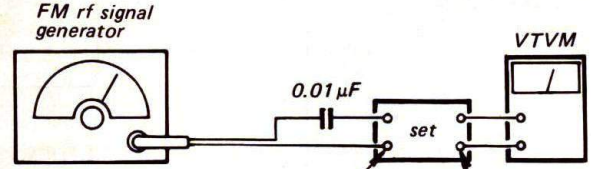


Carrier frequency: 98 MHz  
Modulation: 400 Hz, 40 kHz deviation (100%)  
Output level: 16 μV (24 dB)

VCO ADJUSTMENT

Setting:  
FUNCTION Switch: TUNER  
Band Selector: FM  
MODE Switch: STEREO/FM-AM MUTE

Procedure:  
Adjust RT203 for 76 kHz ±100 Hz on the frequency counter.

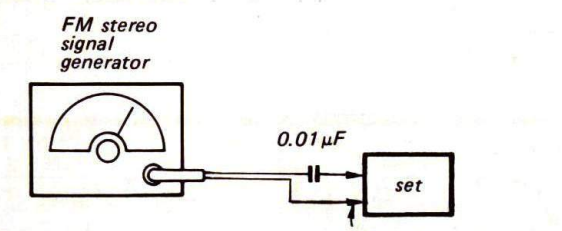

Carrier frequency: 98 MHz  
Output level: 1 mV (60 dB)  
Modulation: no modulation


A) Regular Method

B) Simple Method

1. Tune the set to the FM stereo broadcasting signal.

2. Turn RT203 clockwise or counterclockwise and memorize the lighting-up range of STEREO lamp.


3. Secure RT203 at the center in lighting-up range of both turns as shown below.

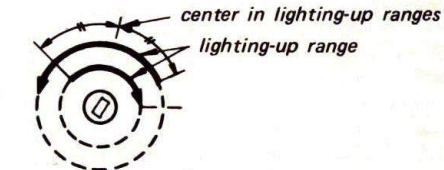

FM STEREO SEPARATION ADJUSTMENT

Setting:  
FUNCTION Switch: TUNER  
Band Selector: FM  
MODE Switch: STEREO/FM-AM MUTE

Procedure:  
Adjust RT202 resistor for minimum reading.

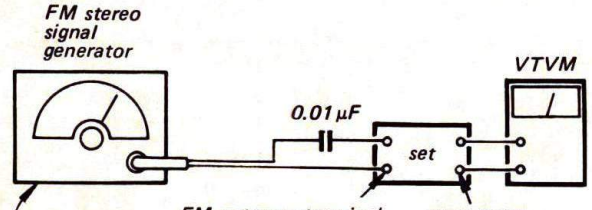

Carrier frequency: 98 MHz  
Output level: 1 mV (60 dB)  
Modulation: Audio (400 Hz): 20 kHz deviation (50%)  
Pilot (19 kHz): 6.3 kHz deviation (16%)  
Sub channel (38 kHz): 20 kHz deviation (50%)


FM stereo signal generator output channel	VTVM connection	VTVM reading
L-CH	L-CH	(A)
R-CH	L-CH	Adjust RT202 resistor for minimum reading.
R-CH	R-CH	(C)
L-CH	R-CH	Adjust RT202 resistor for minimum reading.

L-CH Stereo separation: (A) - (B)  
R-CH Stereo separation: (C) - (D)  
The difference between separations (A) → (B) and (C) → (D) are to be equal.


FM IF ALIGNMENT

Setting:  
FUNCTION Switch: TUNER  
Band Selector: FM  
MODE Switch: MONO














Procedure:  
Adjust T1 for maximum reading on the VTVM.

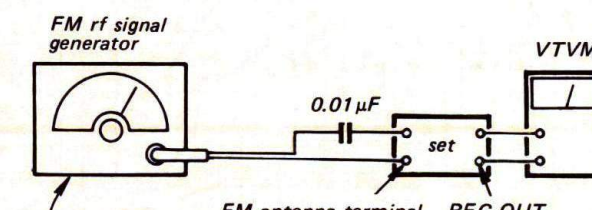

Carrier frequency: 98 MHz  
Output level: 12.5 μV (22 dB)  
Modulation: 400 Hz, 40 kHz deviation (100%)

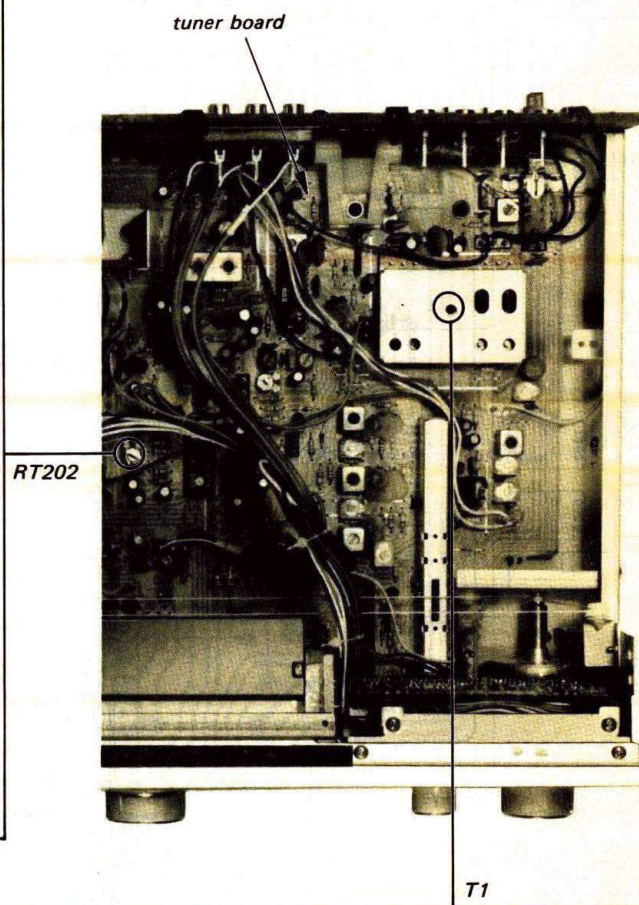

Replacement Semiconductors  
For replacement, use semiconductors except in ( ).
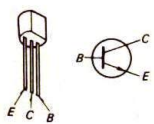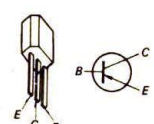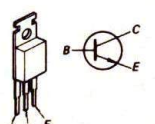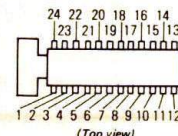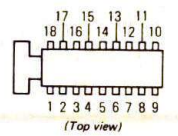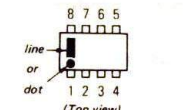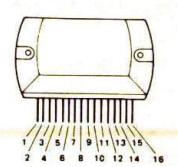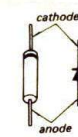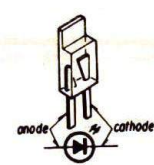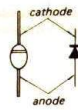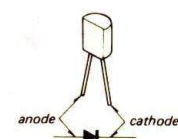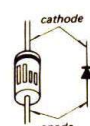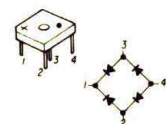
<p>Q201-205 Q501, 502 Q551, 552 Q602, 652 Q802, 804 Q301: 2SC1345</p> <p>2SC1364 (2SC1815)</p> 	<p>Q401-406 Q601, 651 Q801</p> <p>2SA1015</p> 	<p>Q803: 2SC1173</p> 	
<p>IC201: CX168</p> 	<p>IC202: CX178</p> 	<p>IC203: TL489CP</p> 	<p>IC701: SI1125HD</p> 
<p>D201, 202 D401-409 : 1S1555 (1T40) D809, 810</p> 	<p>D203-207: GL9NG31 D208: GL9NG21 D209: GL9PR21</p> 	<p>D805: V09C (V06C)</p> 	
<p>D301, 302: ISV118</p> 	<p>D701: EQB01-07 (EQA01-07R) D806: EQB01-05 (EQA01-05R) D807: EQB01-15 (EQA01-15R)</p> 	<p>D801: S2VB20</p> 	





SECTION 4  
DIAGRAMS

## 4-1. MOUNTING DIAGRAM

- Conductor Side -


## Note:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : indicates side identified with part number.
- : B+ pattern
- : B- pattern
- : signal path
- : L-CH signal path
- : R-CH signal path
- : Voltages are dc with respect to ground unless otherwise noted.
- : Readings are taken under no-signal (detuned) conditions with a VOM (20kΩ/V).
- : no mark and ( ) : FM, ( ) : AM
- : Voltage variations may be noted due to normal production tolerances.
- : Color code of sleeving over the end of the jacket.

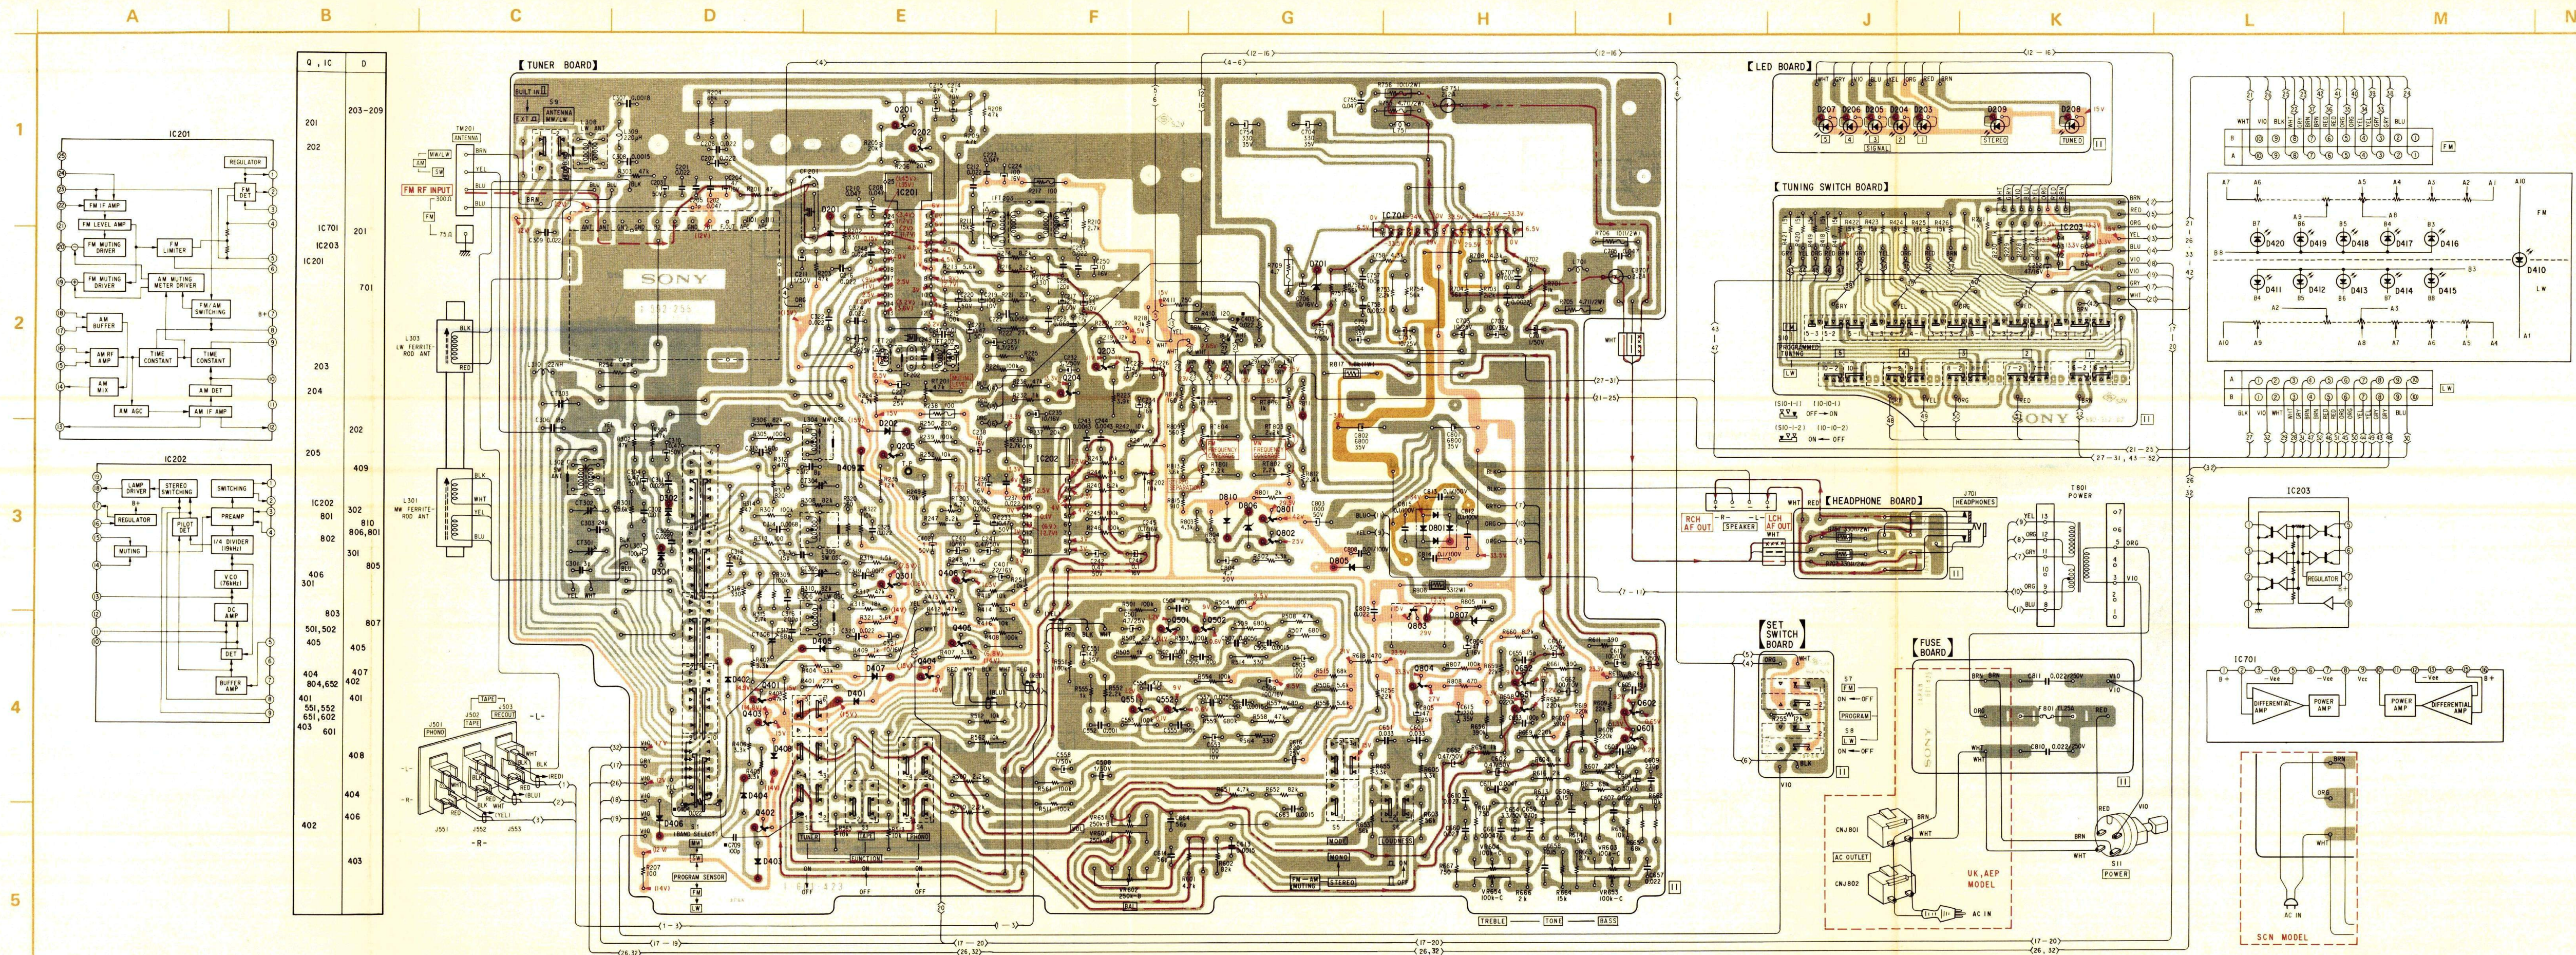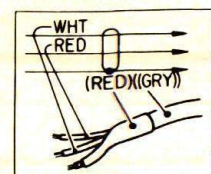



4-2. SCHEMATIC DIAGRAM

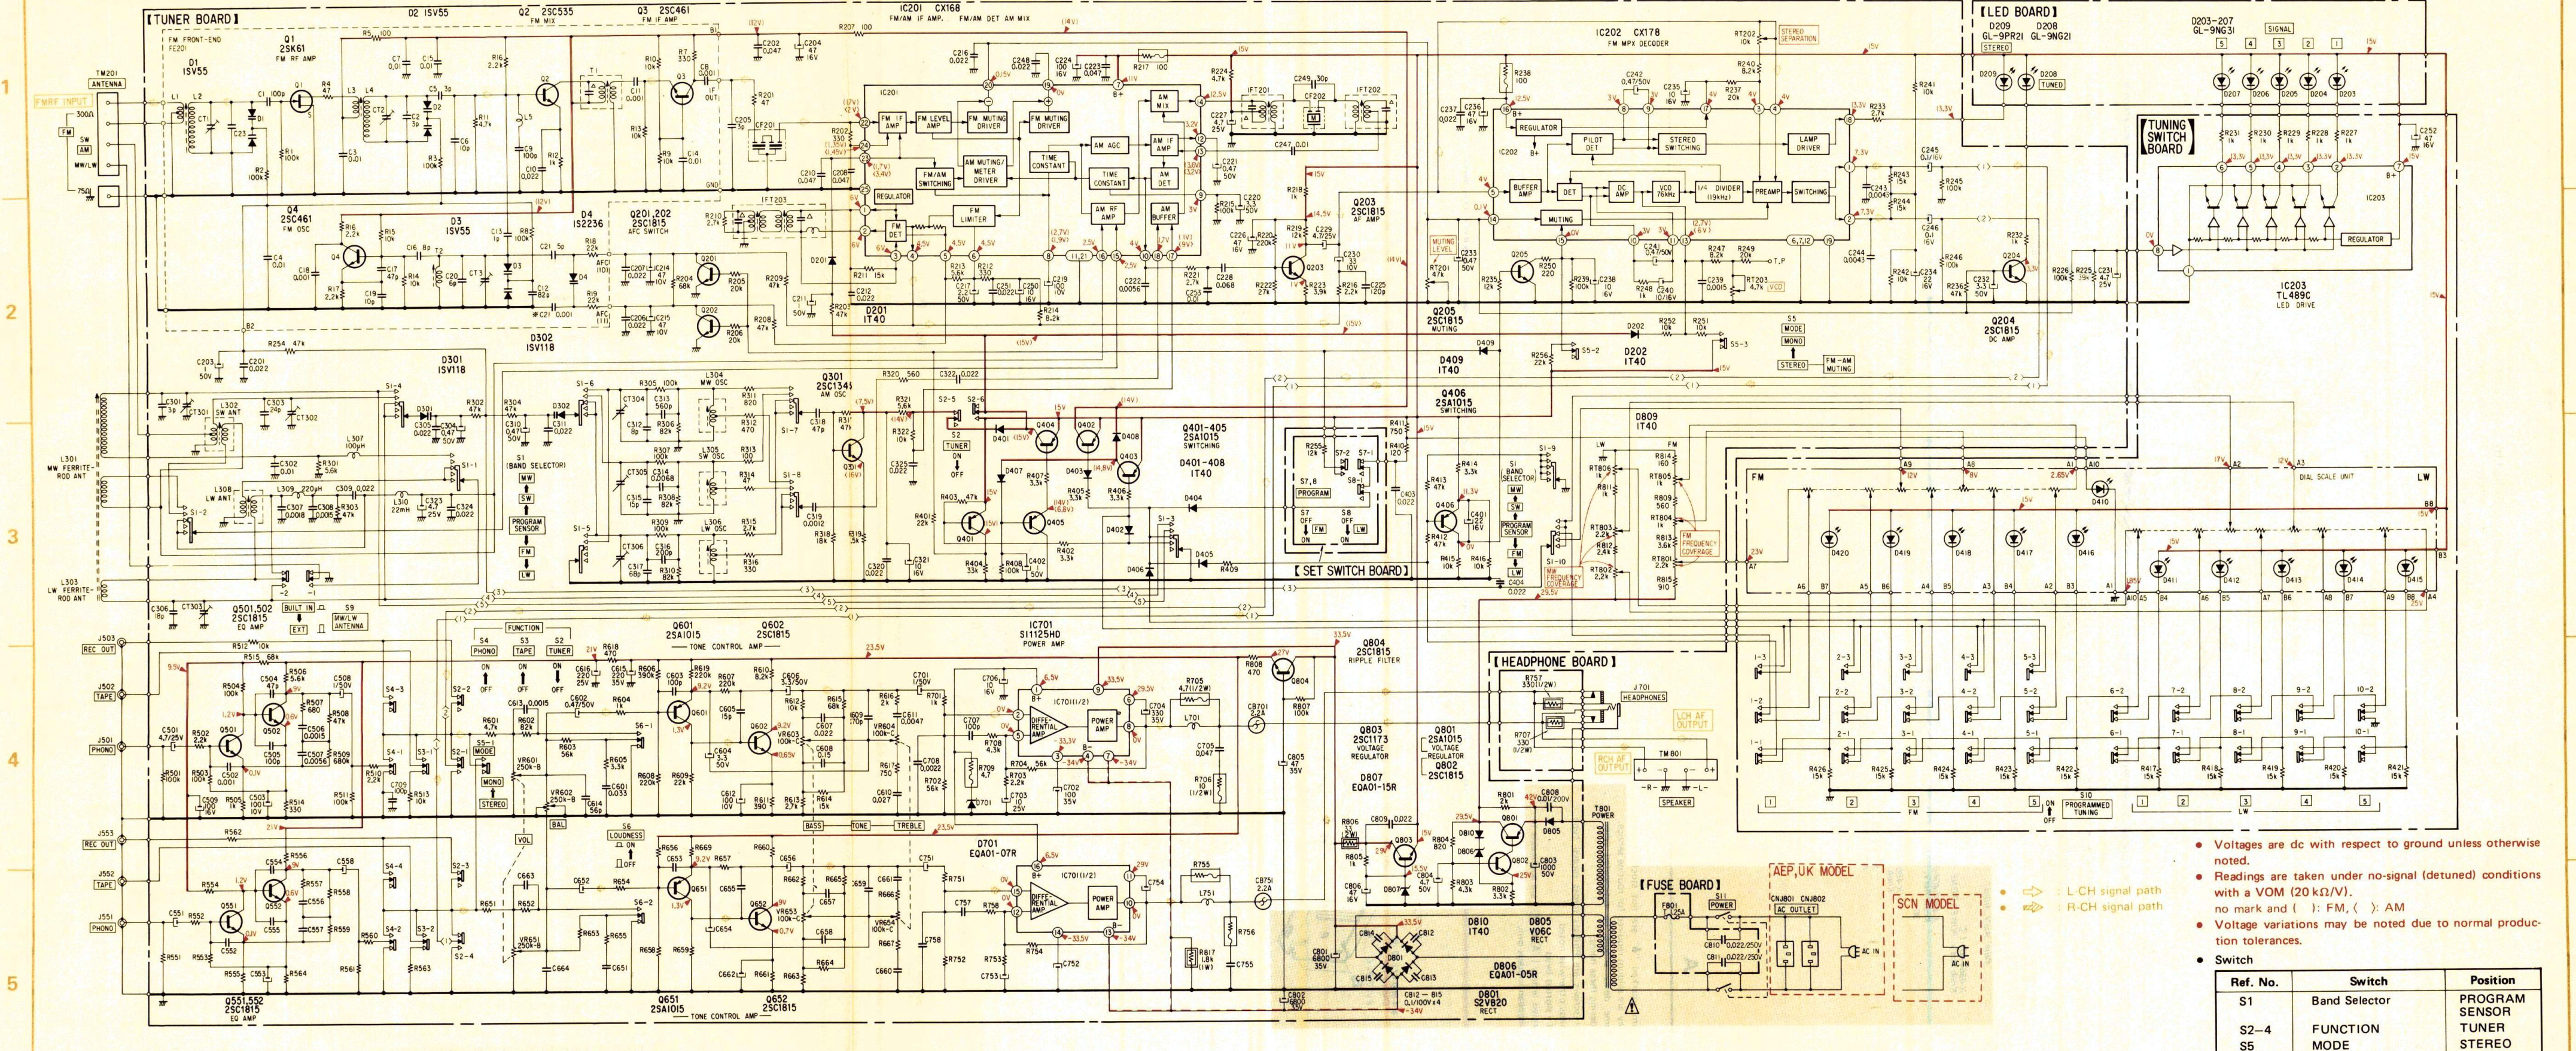

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

Note:  
• All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{pF}$   
50WV or less are not indicated except for electrolytics and tantalum.  
• All resistors are in ohms,  $\frac{1}{4}\text{W}$  unless otherwise noted.  
 $\text{k}\Omega$ : 1000 $\Omega$ ;  $\text{M}\Omega$ : 1000  $\text{k}\Omega$

• : fusible resistor.  
• : internal component.  
• : panel designation.  
• : adjustment for repair.  
• : B+ bus.  
• : B- bus.


- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken under no-signal (detuned) conditions with a VOM (20  $\text{k}\Omega/\text{V}$ ).
- Voltage variations may be noted due to normal production tolerances.
- Switch

Ref. No.	Switch	Position
S1	Band Selector	PROGRAM SENSOR
S2-4	FUNCTION	TUNER
S5	MODE	STEREO
S6	LOUDNESS	OFF
S7	PROGRAM FM	OFF
S8	PROGRAM LW	OFF
S9	MW/LW ANTENNA	BUILT-IN
S10	PROGRAMMED TUNING	OFF
S11	POWER	OFF




## SECTION 5 EXPLODED VIEWS

5-1.


Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.


- Note:
- Items marked "A" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
  - All screws are Phillips (cross recess) type unless otherwise noted.
  - (-) = slotted head
  - Circled letters (A) to (Z) are applicable to European models only.

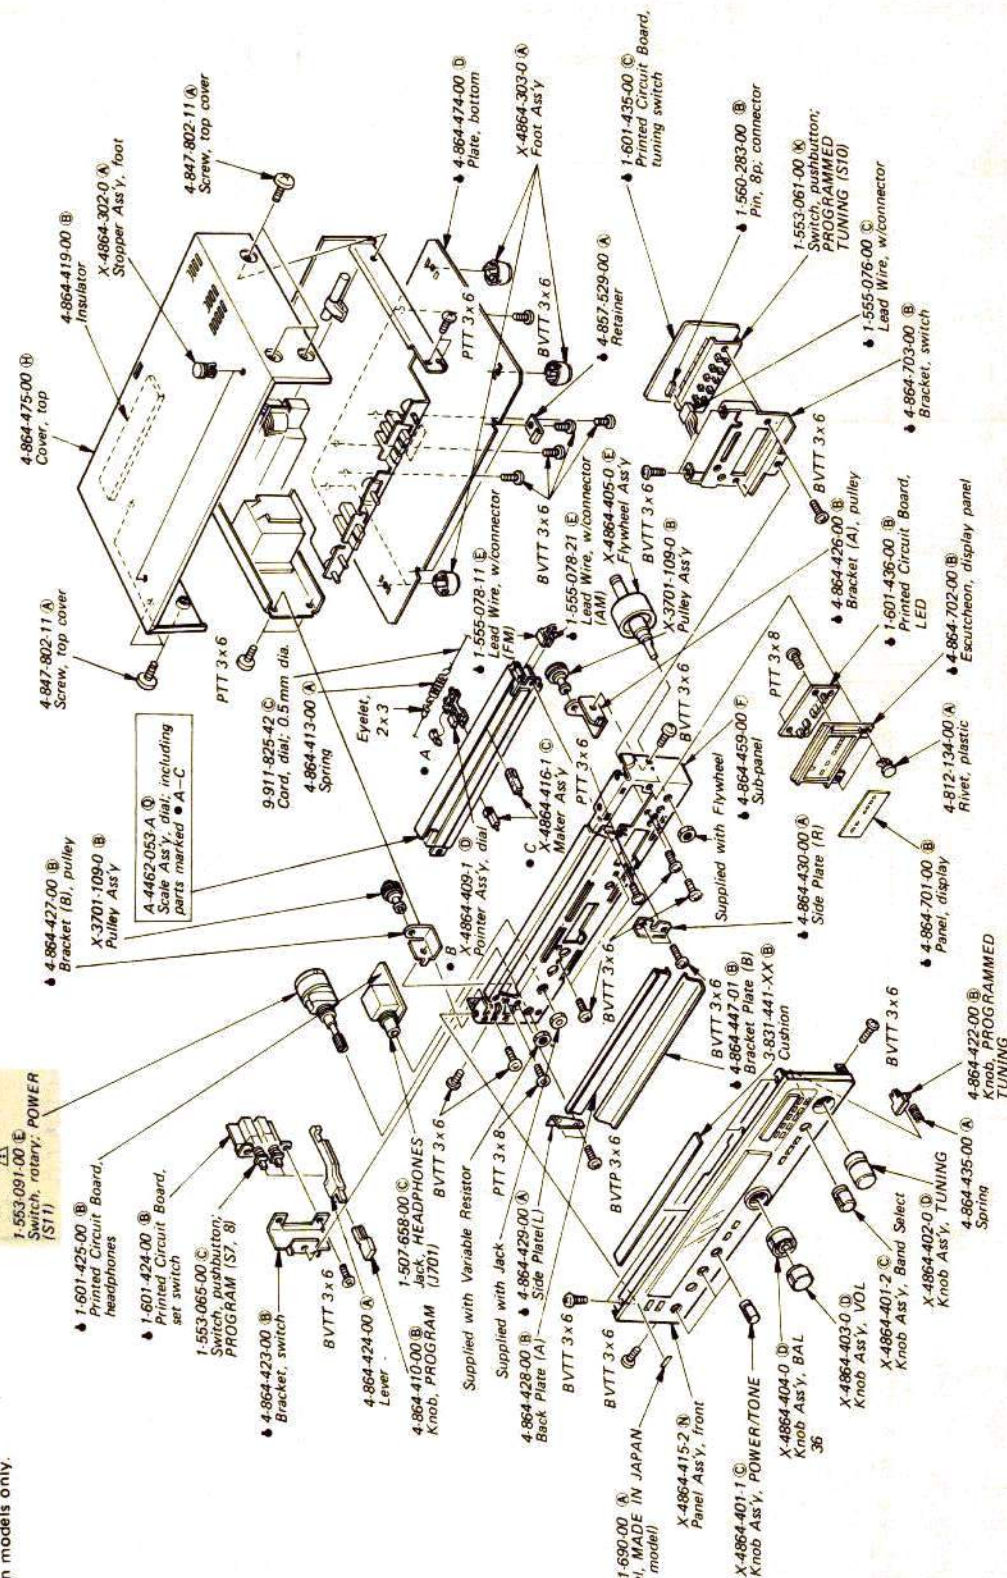


5-2.

- Note:
- Items marked "A" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
  - All screws are Phillips (cross recess) type unless otherwise noted.
  - (-) = slotted head
  - Circled letters (A) to (Z) are applicable to European models only.

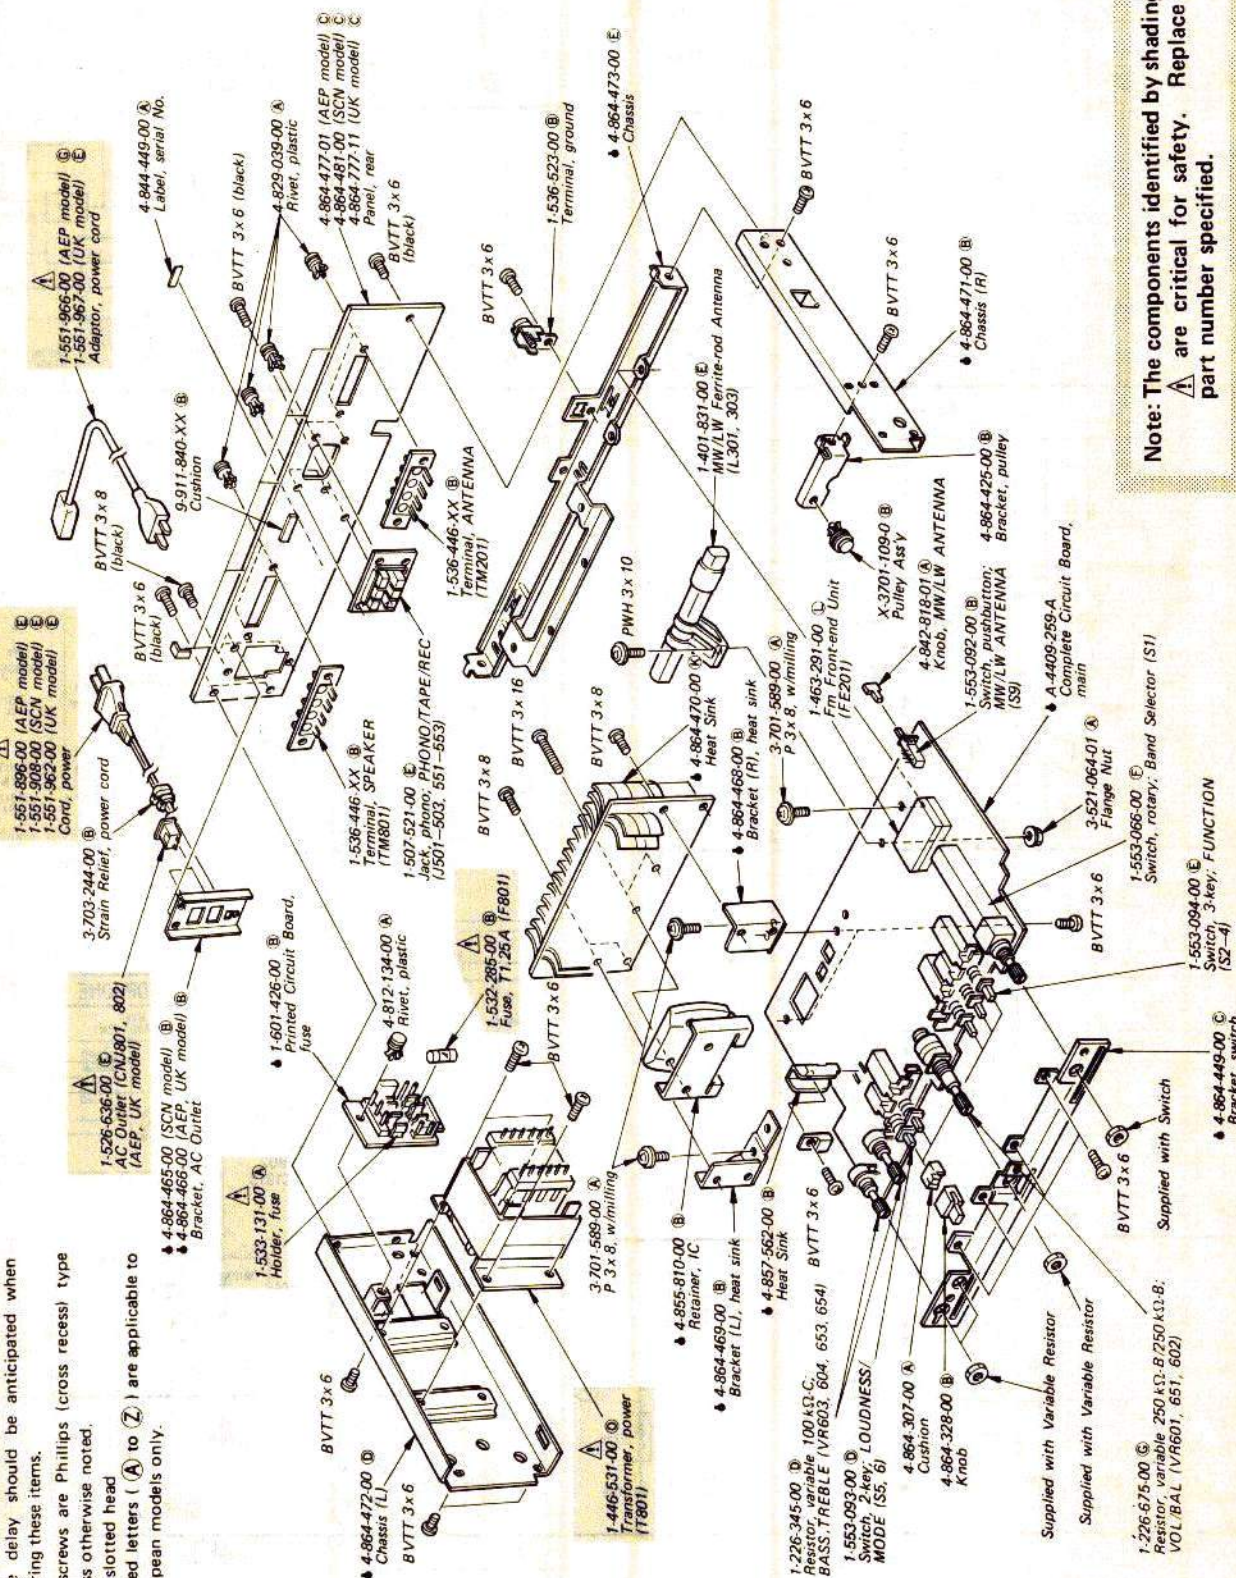

Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.

Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.

## SECTION 6 ELECTRICAL PARTS LIST

Note: Circled letters (A) to (Z) are applicable to European models only.

Ref. No. Part No. Description

### PRINTED CIRCUIT BOARDS

- 1-601-424-00 (B) Set Switch
- 1-601-425-00 (B) Headphone
- 1-601-426-00 (B) Fuse
- 1-601-435-00 (C) Tuning Switch
- 1-601-436-00 (B) LED

### SEMICONDUCTORS

#### Transistors

- Q201-205 8-729-663-47 (C) 2SC1364
- Q301 8-729-334-58 (B) 2SC1345
- Q401-406 8-729-201-52 (B) 2SA1015
- Q501,551 8-729-663-47 (C) 2SC1364
- Q502,552
- Q601,651 8-729-201-52 (B) 2SA1015
- Q602,652 8-729-663-47 (C) 2SC1364
- Q801 8-729-201-52 (B) 2SA1015
- Q802 8-729-663-47 (C) 2SC1364
- Q803 8-729-217-33 (C) 2SC1173
- Q804 8-729-663-47 (C) 2SC1364

#### ICs

- IC201 8-751-680-01 (I) CX168
- IC202 8-751-780-00 (G) CX178
- IC203 8-759-904-89 (D) TL489CP
- IC701 8-759-301-25 (L) SI1125HD

#### Diodes

- D201,202 8-719-815-55 (B) 1S1555
- D203-207 8-719-909-31 (B) GL9NG31
- D208 8-719-909-22 (B) GL9NG21
- D209 8-719-909-21 (B) GL9PR21
- D301,302 8-719-100-81 (D) ISV118

⇒: Due to standardization, interchangeable replacements may be substituted for parts specified in the diagrams.

Ref. No. Part No. Description

- D401-409 8-719-815-55 (B) 1S1555
- D701 8-719-931-07 (B) EQB01-07
- D801 8-179-502-20 (C) S2VB20
- D805 8-719-900-93 (B) V09C
- D806 8-719-931-05 (B) EQB01-05
- D807 8-719-931-15 (B) EQB01-15
- D809,810 8-719-815-55 (B) 1S1555

#### COILS

- L301, 303 1-401-831-00 (E) MW/LW Ferrite-rod Ant
- L302 1-401-822-00 (B) SW Ant
- L304 1-405-881-00 (B) MW Osc
- L305 1-405-885-00 (B) SW Osc
- L306 1-405-882-00 (B) LW Osc
- L307 1-407-169-XX (A) 100μH, microinductor
- L308 1-401-819-00 (B) LW Ant
- L309 1-407-709-00 (A) 220μH, microinductor
- L310 1-407-210-XX (A) 22 mH, microinductor

#### TRANSFORMERS

- IFT201 1-409-323-00 (B) AM IFT
- IFT202 1-409-324-00 (B) AM IFT
- IFT203 1-404-167-00 (D) FM Discriminator

- T801 1-446-531-00 (C) Power

#### CAPACITORS

All capacitors are in μF. Common capacitors are omitted. Refer to the list on page 39 and 40 for their part numbers. p: μμF, elect: electrolytic

- C245,246 1-131-451-00 (B) 0.1 16V tantalum
- C252 1-123-319-00 (B) 47 16V elect

Items marked "A" are not stocked because they are seldom required for routine service. Some delay should be anticipated when ordering these items.



Note: Circled letters (A to Z) are applicable to European models only.

Ref. No.	Part No.	Description
C304,310	1-121-911-00	(B) 0.47 50 V elect
C312	1-102-288-00	(B) 12p
C315	1-102-300-00	(B) 18p
C317	1-102-622-00	(A) 75p

C801,802	(A) 1-125-155-00	(E) 6800 35 V elect
C803	(A) 1-123-061-00	(C) 1000 50 V elect
C808	(A) 1-108-421-00	(B) 0.01 200V mylar
C810,811	(A) 1-130-456-00	(C) 0.022 250 V film
C812-815	(A) 1-108-389-00	(B) 0.1 100V mylar


CT301-305	1-141-171-XX	(B) Trimmer
CT306	1-141-181-11	(B) Trimmer

### RESISTORS

All resistors are in ohms. Common 1/4W carbon resistors are omitted.  
Refer to the list on page 38 for their part numbers.

R217,238	1-217-399-00	(B) 100 1/4W fusible
R705,755	1-212-950-00	(B) 4.7 1/4W fusible
R706,756	1-212-958-00	(B) 10 1/2W fusible
R707,757	1-247-228-00	(A) 330 1/2W carbon (nonflammable)
R709	1-212-849-00	(B) 4.7 1/4W fusible
R806	1-206-475-00	(A) 33 2W metal oxide (nonflammable)
R817	1-213-146-00	(A) 1.8 k 1W metal oxide (nonflammable)
⇒ RT201	1-226-238-00	(A) 50 k-B, adjustable; muting level
RT202	1-226-236-00	(A) 10 k-B, adjustable; FM stereo separation
⇒ RT203	1-226-235-00	(A) 5 k-B, adjustable; VCO
RT801-803	1-226-664-00	(B) 2.2 k-B, adjustable; FM frequency coverage, MW frequency coverage
RT804-806	1-226-663-00	(B) 1 k-B, adjustable; FM frequency coverage, MW frequency coverage
VR601,651	1-226-675-00	(G) 250 k-B/250 k-B, variable; VOL, BAL
VR602		
VR603,653	1-226-345-00	(D) 100 k-C, variable; BASS, TREBLE
VR604,654		

⇒ Due to standardization, interchangeable replacements may be substituted for parts specified in the diagrams.

Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description
----------	----------	-------------

### SWITCHES

S1	1-553-066-00	(F) Rotary, Band Selector
S2-4	1-553-094-00	(E) 3-key, FUNCTION
S5,6	1-553-093-00	(D) 2-key, LOUDNESS, MODE
S7,8	1-553-065-00	(C) Pushbutton, PROGRAM
S9	1-553-092-00	(B) Pushbutton, MW/LW ANTENNA
S10	1-553-061-00	(K) Pushbutton, PROGRAMMED TUNING
S11	(A) 1-553-091-00	(E) Rotary, POWER

### MISCELLANEOUS

CB701,751	1-532-564-00	(C) Circuit Breaker
CF201	1-527-534-00	(D) Filter, solid state
CF202	1-527-403-00	(C) Filter, mechanical
CNJ801	(A) 1-526-636-00	(E) AC Outlet (AEP, UK model)
CNJ802		
F801	(A) 1-532-285-00	(B) Fuse, T1.25 A
FE201	1-463-291-00	(L) FM Front-end Unit
J501-503	1-507-521-00	(E) Jack, phono; 6-p, PHONO, TAPE, REC OUT
J551-553		
J701	1-507-658-00	(C) Jack, HEADPHONES
TM201,801	1-536-446-XX	(B) Terminal, 4-p; ANTENNA, SPEAKER
	(A) 1-533-131-00	(A) Holder, fuse
	1-536-523-00	(B) Terminal, ground
	(A) 1-551-896-00	(E) Cord, power (AEP model)
	(A) 1-551-908-00	(E) Cord, power (SCN model)
	(A) 1-551-962-00	(E) Cord, power (UK model)
	(A) 1-551-966-00	(G) Adaptor, power cord (AEP model)
	(A) 1-551-967-00	(E) Adaptor, power cord (UK model)
	♣ A-4409-259-A	Complete Circuit Board, tuner
	♣ 1-420-872-00	(B) Coil
	♣ 1-535-115-00	(A) Terminal, 2p
	♣ 1-535-116-00	(A) Terminal, 3p
	♣ 1-535-118-00	(A) Terminal, 5p
	♣ 1-535-119-00	(A) Terminal, 6p
	♣ 1-535-139-00	(A) Base
	♣ 1-535-140-00	(A) Base

Items marked "♣" are not stocked because they are seldom required for routine service. Some delay should be anticipated when ordering these items.



Note: Circled letters (A) to (Z) are applicable to European models only.

Ref. No. Part No. Description

- 1-555-076-00 (C) Lead Wire, w/connector  
1-555-078-11 (E) Lead Wire, w/connector (FM)  
1-555-078-21 (E) Lead Wire, w/connector (AM)  
1-560-233-00 (B) Pin 8-p, connector

Items marked "A" are not stocked because they are seldom required for routine service. Some delay should be anticipated when ordering these items.

#### ACCESSORIES AND PACKING MATERIALS

Part No.	Description
1-501-184-00	(C) Antenna, ribbon
1-501-193-00	(B) Antenna
3-701-630-00	(A) Bag, plastic
3-770-983-11	(C) Manual, instruction
3-794-576-11	(B) Card, manual
4-864-402-00	(B) Cushion, bottom
4-864-403-00	(B) Cushion (L), upper
4-864-404-00	(B) Cushion (R), upper
4-864-484-00	(E) Carton
4-891-037-00	(B) Bag, plastic

#### 1/4 WATT CARBON RESISTORS (A) Note: Circled letter (A) is applicable to European models only.

Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.
1.0	1-246-401-00	10	1-246-425-00	100	1-246-449-00	1.0k	1-246-473-00	10k	1-246-497-00	100k	1-246-521-00	1.0M	1-246-545-00
1.1	1-246-402-00	11	1-246-426-00	110	1-246-450-00	1.1k	1-246-474-00	11k	1-246-498-00	110k	1-246-522-00	1.1M	1-210-814-00
1.2	1-246-403-00	12	1-246-427-00	120	1-246-451-00	1.2k	1-246-475-00	12k	1-246-499-00	120k	1-246-523-00	1.2M	1-210-815-00
1.3	1-246-404-00	13	1-246-428-00	130	1-246-452-00	1.3k	1-246-476-00	13k	1-246-500-00	130k	1-246-524-00	1.3M	1-210-816-00
1.5	1-246-405-00	15	1-246-429-00	150	1-246-453-00	1.5k	1-246-477-00	15k	1-246-501-00	150k	1-246-525-00	1.5M	1-210-817-00
1.6	1-246-406-00	16	1-246-430-00	160	1-246-454-00	1.6k	1-246-478-00	16k	1-246-502-00	160k	1-246-526-00	1.6M	1-210-818-00
1.8	1-246-407-00	18	1-246-431-00	180	1-246-455-00	1.8k	1-246-479-00	18k	1-246-503-00	180k	1-246-527-00	1.8M	1-210-819-00
2.0	1-246-408-00	20	1-246-432-00	200	1-246-456-00	2.0k	1-246-480-00	20k	1-246-504-00	200k	1-246-528-00	2.0M	1-210-820-00
2.2	1-246-409-00	22	1-246-433-00	220	1-246-457-00	2.2k	1-246-481-00	22k	1-246-505-00	220k	1-246-529-00	2.2M	1-210-821-00
2.4	1-246-410-00	24	1-246-434-00	240	1-246-458-00	2.4k	1-246-482-00	24k	1-246-506-00	240k	1-246-530-00	2.4M	1-244-754-00
2.7	1-246-411-00	27	1-246-435-00	270	1-246-459-00	2.7k	1-246-483-00	27k	1-246-507-00	270k	1-246-531-00	2.7M	1-244-755-00
3.0	1-246-412-00	30	1-246-436-00	300	1-246-460-00	3.0k	1-246-484-00	30k	1-246-508-00	300k	1-246-532-00	3.0M	1-244-756-00
3.3	1-246-413-00	33	1-246-437-00	330	1-246-461-00	3.3k	1-246-485-00	33k	1-246-509-00	330k	1-246-533-00	3.3M	1-244-757-00
3.6	1-246-414-00	36	1-246-438-00	360	1-246-462-00	3.6k	1-246-486-00	36k	1-246-510-00	360k	1-246-534-00	3.6M	1-244-758-00
3.9	1-246-415-00	39	1-246-439-00	390	1-246-463-00	3.9k	1-246-487-00	39k	1-246-511-00	390k	1-246-535-00	3.9M	1-244-759-00
4.3	1-246-416-00	43	1-246-440-00	430	1-246-464-00	4.3k	1-246-488-00	43k	1-246-512-00	430k	1-246-536-00	4.3M	1-244-760-00
4.7	1-246-417-00	47	1-246-441-00	470	1-246-465-00	4.7k	1-246-489-00	47k	1-246-513-00	470k	1-246-537-00	4.7M	1-244-761-00
5.1	1-246-418-00	51	1-246-442-00	510	1-246-466-00	5.1k	1-246-490-00	51k	1-246-514-00	510k	1-246-538-00	5.1M	1-244-762-00
5.6	1-246-419-00	56	1-246-443-00	560	1-246-467-00	5.6k	1-246-491-00	56k	1-246-515-00	560k	1-246-539-00		
6.2	1-246-420-00	62	1-246-444-00	620	1-246-468-00	6.2k	1-246-492-00	62k	1-246-516-00	620k	1-246-540-00		
6.8	1-246-421-00	68	1-246-445-00	680	1-246-469-00	6.8k	1-246-493-00	68k	1-246-517-00	680k	1-246-541-00		
7.5	1-246-422-00	75	1-246-446-00	750	1-246-470-00	7.5k	1-246-494-00	75k	1-246-518-00	750k	1-246-542-00		
8.2	1-246-423-00	82	1-246-447-00	820	1-246-471-00	8.2k	1-246-495-00	82k	1-246-519-00	820k	1-246-543-00		
9.1	1-246-424-00	91	1-246-448-00	910	1-246-472-00	9.1k	1-246-496-00	91k	1-246-520-00	910k	1-246-544-00		

#### ELECTROLYTIC CAPACITORS

Note: Circled letter (A) to (Z) are applicable to European models only.

CAP. (μF)	RATING					
	6.3 VOLT.	10 VOLT.	16 VOLT.	25 VOLT.	35 VOLT.	50 VOLT.
PART No.	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.
0.47	→	→	→	→	→	1-121-726-00 (A)
1.0	→	→	→	→	→	1-121-391-00 (A)
2.2	→	→	→	→	→	1-121-450-00 (A)
3.3	→	→	→	→	→	1-121-393-00 (A)
4.7	→	→	→	→	→	1-121-396-00 (A)
10	→	→	1-121-651-00 (A)	1-121-398-00 (A)	→	1-121-738-00 (A)
22	→	→	1-121-479-00 (A)	1-121-480-00 (A)	1-121-662-00 (A)	1-121-152-00 (A)
33	→	→	1-121-403-00 (A)	1-121-404-00 (A)	1-121-652-00 (B)	1-121-405-00 (A)
47	→	1-121-352-00 (A)	1-121-409-00 (A)	1-121-410-00 (A)	1-121-653-00 (B)	1-121-411-00 (A)
100	→	1-121-414-00 (A)	1-121-415-00 (A)	1-121-416-00 (A)	1-121-357-00 (B)	1-121-417-00 (B)
220	1-121-419-00 (B)	1-121-420-00 (B)	1-121-421-00 (A)	1-121-422-00 (B)	1-121-261-00 (C)	1-121-423-00 (B)
330	1-121-751-00 (B)	1-121-805-00 (B)	1-121-521-00 (C)	1-121-654-00 (B)	1-121-655-00 (D)	1-121-656-00 (C)
470	1-121-424-00 (B)	1-121-425-00 (C)	1-121-426-00 (C)	1-121-733-00 (B)	1-121-361-00 (E)	1-121-810-00 (D)
1000	→	1-121-736-00 (C)	1-121-245-00 (D)	1-121-657-00 (D)	1-121-388-00 (E)	1-123-061-00 (F)
2200	1-121-658-00 (B)	1-121-659-00 (C)	1-121-660-00 (D)	1-123-067-00 (F)	→	→
3300	1-121-661-00 (D)	1-123-075-00 (E)	1-123-071-00 (F)	→	→	→

CAP. (μF)	100 VOLT.	160 VOLT.	250 VOLT.	350 VOLT.
	PART No.	PART No.	PART No.	PART No.
0.47	→	→	→	→
1.0	1-123-249-00 (A)	1-123-252-00 (A)	1-123-003-00 (B)	1-121-168-00 (B)
2.2	1-123-250-00 (A)	1-123-026-00 (B)	→	1-123-028-00 (B)
3.3	1-121-995-00 (A)	→	1-123-004-00 (B)	1-123-006-00 (C)
4.7	1-123-255-00 (A)	1-121-246-00 (B)	1-121-759-00 (B)	1-123-007-00 (D)
10	1-121-126-00 (B)	1-121-999-00 (B)	1-123-254-00 (C)	1-123-008-00 (D)
22	1-121-996-00 (C)	1-123-253-00 (C)	1-123-005-00 (D)	1-123-022-00 (D)
33	1-121-997-00 (C)	1-121-757-00 (C)	→	→
47	1-123-251-00 (C)	1-121-919-00 (C)	→	→
100	1-123-084-00 (E)	→	→	→

#### CERAMIC CAPACITORS (A)

RATING							
CAP. (pF)	50 VOLT.	CAP. (pF)	50 VOLT.	CAP. (pF)	50 VOLT.	CAP. (μF)	50 VOLT.
	PART No.		PART No.		PART No.		PART No.
0.5	1-101-837-00	22	1-102-959-00	150	1-101-361-00	0.001	1-102-074-00
0.75	1-101-586-00	24	1-102-960-00	160	1-101-367-00	0.0012	1-102-118-00
1.0	1-102-934-00	27	1-102-961-00	180	1-102-976-00	0.0015	1-102-119-00
1.5	1-101-576-00	30	1-102-962-00	200	1-102-977-00	0.0018	1-102-120-00
2.0	1-102-935-00	33	1-102-963-00	220	1-102-978-00	0.0022	1-102-121-00
3	1-102-936-00	36	1-102-964-00	240	1-102-979-00	0.0027	1-102-122-00
4	1-102-937-00	39	1-102-965-00	270	1-102-980-00	0.0033	1-102-123-00
5	1-102-942-00	43	1-102-966-00	300	1-102-981-00	0.0039	1-102-124-00
6	1-102-943-00	47	1-101-880-00	330	1-102-820-00	0.0047	1-102-125-00
7	1-102-944-00	51	1-101-882-00	360	1-102-821-00	0.0056	1-102-126-00
8	1-102-945-00	56	1-101-884-00	390	1-102-822-00	0.0068	1-102-127-00
9	1-102-946-00	62	1-101-886-00	430	1-102-823-00	0.0082	1-102-128-00
10	1-102-947-00	68	1-101-888-00	470	1-102-824-00	0.01	1-102-129-00
11	1-102-948-00	75	1-101-890-00	510	1-101-059-00	0.022	1-101-005-00
12	1-102-949-00	82	1-102-971-00	560	1-102-115-00	0.047	1-101-006-00
13	1-102-950-00	91	1-102-972-00	680	1-102-116-00		
15	1-102-951-00	100	1-102-973-00	820	1-102-117-00		
16	1-102-952-00	110	1-102-815-00				
18	1-102-953-00	120	1-102-816-00				
20	1-102-958-00	130	1-101-081-00				

0.001μF = 1,000pF

#### CERAMIC (SEMICONDUCTOR) CAPACITORS (A)


CAP. (μF)	RATING			
	25 VOLT.	50 VOLT.	25 VOLT.	50 VOLT.
PART No.	PART No.	PART No.	PART No.	PART No.
0.001	→	1-161-039-00	0.018	1-161-016-00
0.0012	→	1-161-040-00	0.022	1-161-017-00
0.0015	→	1-161-041-00	0.027	1-161-018-00
0.0018	→	1-161-042-00	0.033	1-161-019-00
0.0022	→	1-161-043-00	0.039	1-161-010-00
0.0027	→	1-161-044-00	0.047	1-161-021-00
0.0033	→	1-161-045-00	0.056	→
0.0039	→	1-161-046-00	0.068	→
0.0047	→	1-161-047-00	0.082	1-161-024-00
0.0056	→	1-161-048-00	0.1	1-161-025-00
0.0068	→	1-161-049-00		
0.0082	1-161-012-00	1-161-050-00		
0.01	1-161-013-00	1-161-051-00		
0.012	→	1-161-052-00		
0.015	1-161-015-00	1-161-053-00		



## MYLAR CAPACITORS (A)


Note: Circled letters (A to Z) are applicable to European models only.

RATING											
CAP. (μF)	50 VOLT.	100 VOLT.	200 VOLT.	CAP. (μF)	50 VOLT.	100 VOLT.	200 VOLT.	CAP. (μF)	50 VOLT.	100 VOLT.	200 VOLT.
	PART No.	PART No.	PART No.		PART No.	PART No.	PART No.		PART No.	PART No.	PART No.
0.001	1-108-227-00	1-108-365-00	1-108-409-00	0.01	1-108-239-00	1-108-377-00	1-108-421-00	0.1	1-108-251-00	1-108-389-00	1-108-433-00
0.0012	1-108-351-00	1-108-366-00	1-108-410-00	0.012	1-108-357-00	1-108-378-00	1-108-422-00	0.12	1-108-363-00	1-108-390-00	1-108-434-00
0.0015	1-108-228-00	1-108-367-00	1-108-411-00	0.015	1-108-240-00	1-108-379-00	1-108-423-00	0.15	1-108-252-00	1-108-391-00	1-108-435-00
0.0018	1-108-352-00	1-108-368-00	1-108-412-00	0.018	1-108-358-00	1-108-380-00	1-108-424-00	0.18	1-108-364-00	1-108-392-00	1-108-436-00
0.0022	1-108-230-00	1-108-369-00	1-108-413-00	0.022	1-108-242-00	1-108-381-00	1-108-425-00	0.22	1-108-254-00	1-108-393-00	1-108-437-00
0.0027	1-108-353-00	1-108-370-00	1-108-414-00	0.027	1-108-359-00	1-108-382-00	1-108-426-00	0.27	1-108-854-00	—	—
0.0033	1-108-232-00	1-108-371-00	1-108-415-00	0.033	1-108-244-00	1-108-383-00	1-108-427-00	0.33	1-108-855-00	—	—
0.0039	1-108-354-00	1-108-372-00	1-108-416-00	0.039	1-108-360-00	1-108-384-00	1-108-428-00	0.39	1-108-856-00	—	—
0.0047	1-108-234-00	1-108-373-00	1-108-417-00	0.047	1-108-246-00	1-108-385-00	1-108-429-00	0.47	1-108-857-00	—	—
0.0056	1-108-355-00	1-108-374-00	1-108-418-00	0.056	1-108-361-00	1-108-386-00	1-108-430-00				
0.0068	1-108-237-00	1-108-375-00	1-108-419-00	0.068	1-108-249-00	1-108-387-00	1-108-431-00				
0.0082	1-108-356-00	1-108-376-00	1-108-420-00	0.082	1-108-362-00	1-108-388-00	1-108-432-00				



## TANTALUM CAPACITORS

RATING → Use the high voltage rated one.							
CAP. (μF)	3.15 VOLT.	6.3 VOLT.	10 VOLT.	16 VOLT.	20 VOLT.	25 VOLT.	35 VOLT.
	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.
0.01					→	→	1-131-396-00 (B)
0.015						→	1-131-397-00 (B)
0.022						→	1-131-398-00 (B)
0.033						→	1-131-399-00 (B)
0.047						→	1-131-400-00 (B)
0.068					→	→	1-131-401-00 (B)
0.1					→	→	1-131-402-00 (B)
0.15					→	→	1-131-403-00 (B)
0.22					→	→	1-131-404-00 (B)
0.33					→	1-131-409-00 (B)	1-131-405-00 (B)
0.47	—	—	—	—	1-131-412-00 (B)	→	1-131-406-00 (B)
0.68	—	—	—	1-131-415-00 (B)	→	1-131-410-00 (B)	1-131-407-00 (B)
1.0	—	—	1-131-418-00 (B)	—	1-131-413-00 (B)	→	1-131-408-00 (B)
1.5	—	1-131-421-00 (B)	—	1-131-416-00 (B)	→	1-131-411-00 (B)	1-131-348-00 (B)
2.2	1-131-424-00 (B)	—	1-131-419-00 (B)	—	1-131-414-00 (B)	1-131-355-00 (B)	1-131-349-00 (B)
3.3	—	1-131-422-00 (B)	—	1-131-417-00 (B)	1-131-362-00 (B)	1-131-356-00 (B)	1-131-350-00 (B)
4.7	1-131-425-00 (B)	—	1-131-420-00 (B)	1-131-369-00 (B)	1-131-363-00 (B)	1-131-357-00 (B)	1-131-351-00 (C)
6.8	—	1-131-423-00 (B)	1-131-376-00 (B)	1-131-370-00 (B)	1-131-364-00 (B)	1-131-358-00 (C)	1-131-352-00 (C)
10	1-131-426-00 (B)	1-131-383-00 (B)	1-131-377-00 (B)	1-131-371-00 (B)	1-131-365-00 (C)	1-131-359-00 (C)	1-131-353-00 (D)
15	1-131-390-00 (D)	1-131-384-00 (B)	1-131-378-00 (B)	1-131-372-00 (B)	1-131-366-00 (C)	1-131-360-00 (D)	—
22	1-131-391-00 (B)	1-131-385-00 (B)	1-131-379-00 (C)	1-131-373-00 (C)	1-131-367-00 (D)		
33	1-131-392-00 (B)	1-131-386-00 (C)	1-131-380-00 (C)	1-131-374-00 (D)			
47	1-131-393-00 (C)	1-131-387-00 (C)	1-131-381-00 (D)	—			
68	1-131-394-00 (B)	1-131-388-00 (C)	—	—			
100	1-131-395-00 (D)	—	—	—			



## TANTALUM CAPACITORS

RATING						
CAP. (μF)	3 VOLT.	6.3 VOLT.	10 VOLT.	16 VOLT.	20 VOLT.	35 VOLT.
	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.
0.033						1-131-273-00 (E)
0.047						1-131-274-00 (E)
0.068						1-131-275-00 (E)
0.1						1-131-276-00 (D)
0.15						1-131-277-00 (D)
0.22			—	—	1-131-262-00 (D)	1-131-278-00 (D)
0.33			—	—	1-131-263-00 (D)	1-131-279-00 (D)
0.47			1-131-169-00 (D)	—	1-131-264-00 (D)	1-131-280-00 (D)
0.68			—	1-131-258-00 (D)	1-131-265-00 (D)	1-131-281-00 (D)
1.0			1-131-254-00 (D)	—	1-131-266-00 (D)	1-131-282-00 (D)
1.5		1-131-250-00 (D)	—	—	1-131-267-00 (D)	1-131-283-00 (E)
2.2		—	—	1-131-259-00 (D)	1-131-268-00 (D)	1-131-284-00 (E)
3.3		—	1-131-255-00 (D)	—	1-131-269-00 (D)	—
4.7		1-131-251-00 (E)	1-131-171-00 (D)	—	1-131-270-00 (D)	—
6.8		—	—	1-131-260-00 (D)	1-131-271-00 (E)	—
10	—	—	1-131-256-00 (D)	—	1-131-272-00 (E)	—
15	—	1-131-252-00 (D)	—	1-131-261-00 (E)		
22	—	—	1-131-257-00 (E)	—		
33	1-131-176-00 (D)	1-131-253-00 (E)	1-131-173-00 (C)	—		
47	1-131-288-00 (F)	1-131-174-00 (D)	—	—		
100	1-131-177-00 (D)	—	—	—		

Sony Corporation

© 1979

— 40 —

Global electronic heritage manuals