

TAD-M30

SERVICE MANUAL

*E Model
Chinese Model*



Manufactured under license from Dolby Laboratories Licensing Corporation.

DOLBY, the double-D symbol , AC-3, the Dolby Digital and "PRO LOGIC" are trademarks of Dolby Laboratories Licensing Corporation.

SPECIFICATIONS

Digital inputs	Optical: 1 Coaxial: 1
Digital outputs	Optical: 1
Audio outputs	Front (L/R) Woofer
Continuous RMS power output	Front/rear (switchable): 50W+50W Center: 50W
Peak music power output	1,000W (6 Ω at 1kHz, 10% THD)
Speaker impedance	6 to 16 Ω
Tone control	BASS: ± 10 dB (center frequency 99 to 992Hz) TREBLE: ± 10 dB (center frequency 1.0 to 8.6kHz)
Power requirements	110 – 120V/220 – 240V (adjustable with the voltage selector)
Power consumption	120W
Dimensions (w/h/d)	280 $\times$ 91 $\times$ 350mm
Mass (Approx.)	4.5kg
Supplied accessories	• Remote commander (remote) (1) • Size AA (R6) batteries (2) • Optical cable (1) • Audio cord (1) • Audio bus cord (1) • Instruction manual (1)

Design and specifications are subject to change without notice.

DIGITAL PROCESSING AMPLIFIER



SONY®

TABLE OF CONTENTS

1. GENERAL	3
2. TEST MODE	5
3. DIAGRAMS	
3-1. Circuit Boards Location	6
3-2. Block Diagram — Digital Section —	7
3-3. Block Diagram — Main Section —	9
3-4. Printed Wiring Board — Main Section (Side A) —	11
3-5. Printed Wiring Board — Main Section (Side B) —	13
3-6. Schematic Diagram — Digital Section —	15
3-7. Schematic Diagram — D/A Section —	17
3-8. Schematic Diagram — Power Section —	19
3-9. Printed Wiring Board — Power Section —	21
3-10. Printed Wiring Board — Panel Section —	23
3-11. Schematic Diagram — Panel Section —	25
3-12. IC Block Diagrams	27
3-13. IC Pin Function Description	29
4. EXPLODED VIEWS	
4-1. Front Panel Section	37
4-2. Rear Panel Section	38
5. ELECTRICAL PARTS LIST	39

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.


与安全有关的零部件须知

在原理图上用阴影及 $\triangle$ 标记来识别的零部件在安全操作上是具有关键性的。这些零部件要用本手册中所示的部件号对应的索尼零部件进行更换。

在安全操作上具有关键性的电路调整与索尼公司出版的维修手册完全一致。在更换关键零部件时或怀疑动作失常时，请进行这些调整操作。

Name and Function of Each Part

Front panel

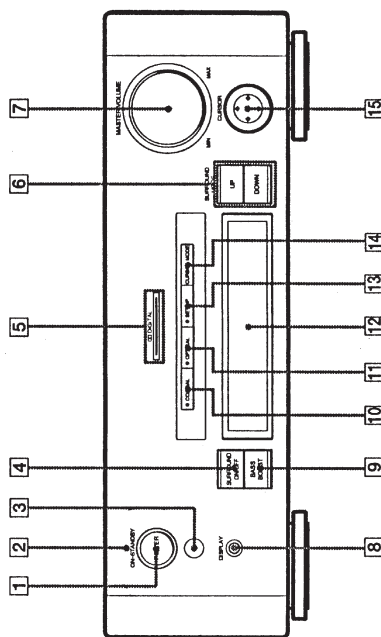


- 1 POWER**
Turns on the power.
- 2 ON-STANDBY indicator**
Lights red when the processing amplifier is in standby (power-on standby) mode. Goes off when the power is turned on.
- 3 Remote sensor**
- 4 SURROUND ON/OFF**
Applies the surround effects.
- 5 DIGITAL input indicator**
Lights when the input audio signal is processed for Dolby Digital while Surround is ON. Does not light even for Dolby Digital DVD software when the input audio signal is processed for Dolby Pro Logic.
- 6 SURROUND MODE (UP/DOWN)**
Selects the surround mode.
- 7 MASTER VOLUME**
Adjusts the volume.
- 8 DISPLAY**
Switches the display between the currently selected surround mode and the input signal (OPTICAL or COAXIAL) each time it is pressed.
- 9 BASS BOOST**
Reinforces the bass sound.
- 10 COAXIAL**
Press to listen to the audio from the component connected to the DIGITAL COAXIAL IN jack.
- 11 OPTICAL**
Press to listen to the audio from the component connected to the DIGITAL OPTICAL IN jack.
- 12 Display**
- 13 SET UP**
Sets the speaker connection status, position and distance.
- 14 CURSOR MODE**
Selects the "LEVEL ADJUST", "EQUALIZER" or "SURROUND" menu.
- 15 CURSOR (←/→/↑/↓)**
Selects the setting contents after selecting the item to be set with SET UP or CURSOR MODE.

SECTION 1 GENERAL

This section is extracted from instruction manual.

Name and Function of Each Part

Reading the display

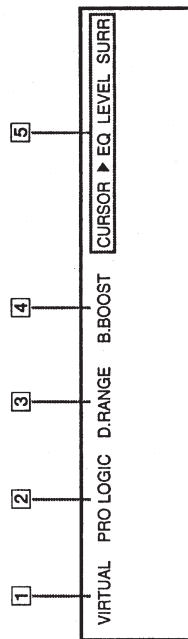


- 1 VIRTUAL**
Lights when the "VIRTUAL ENHANCED", VIR, REAR SHIFT" or "VIR. MULTI REAR" surround mode (see page 26) is selected while Surround is ON.
- 2 PRO LOGIC**
Lights when an input 2ch (front L/R) audio signal is processed by Pro Logic and output as surround sound while Surround is ON.
- 3 D.RANGE**
Lights when "D.RANGE COMP" in the "LEVEL ADJUST" menu selected by CURSOR MODE is set to other than "OFF" (set to compress the dynamic range, see page 30) in order to reduce the volume difference between the high and low volumes, and an audio signal encoded by the Dolby Digital (AC-3) method is input to the processing amplifier.
- 4 B.BOOST**
Lights when BASS BOOST on the front panel of the processing amplifier is pressed to reinforce the bass sound (see page 27).
- 5 Cursor modes**
These light to indicate the CURSOR MODE status. They go off when performing SET UP operations (i.e., setting the speaker connection status).
EQ : Appears when adjusting the EQUALIZER (speaker treble and bass frequencies) settings (see page 31).
LEVEL : Appears when adjusting the LEVEL ADJUST (speaker and sub woofer volume balance, LFE MIX, D.RANGE COMP) settings (see pages 27 to 30).
SURR : Appears when adjusting the SURROUND (surround effects) settings (see page 32).

Additional Information

Additional Information


Rear panel

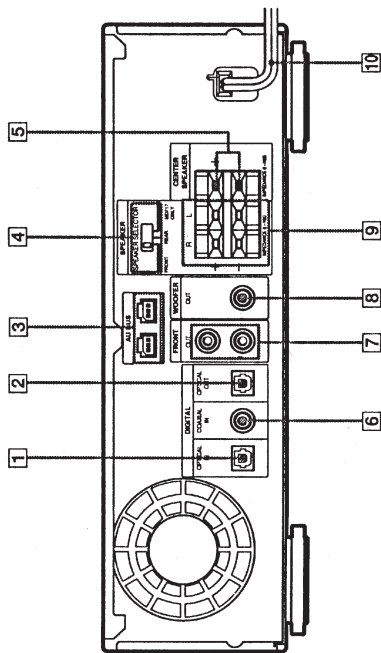

- 1 DIGITAL OPTICAL IN**
Connects a DVD player to the processing amplifier using an optical cable.
- 2 DIGITAL OPTICAL OUT**
Connects an MD deck or other digital component when digitally recording the audio from a DVD player. Use an optical cable.
- Notes**
 - If you do not connect the DVD player to the DIGITAL OPTICAL IN jack, sound is not output from the DIGITAL OPTICAL OUT jack.
 - Many types of DVD software cannot be digitally recorded. In these cases, an analog recording is made even if the DVD player is connected using an optical cable.
 - You cannot digitally record 5.1ch DVD software.
- 3 AU BUS**
Connects the DHC-MD717 stereo system to the processing amplifier.
- 4 SPEAKER SELECTOR (FRONT, REAR, MD717 ONLY)**
Set to "REAR" (or "MD717 ONLY" when using the DHC-MD717) during 5.1ch surround or to "FRONT" during 3.1cn surround.
- 5 CENTER SPEAKER**
Connects the center speaker.
- 6 DIGITAL COAXIAL IN**
Connects a DVD player to the processing amplifier using a coaxial digital connecting cable.
- 7 FRONT OUT**
Connects to the audio input jacks for external components of a stereo system or stereo amplifier during 5.1ch surround.
- 8 WOOFER OUT**
Connects the sub woofer.
- 9 SPEAKER**
Connects the speakers (front or rear).
- 10 AC power cord**

39^{EN}

Remote commander

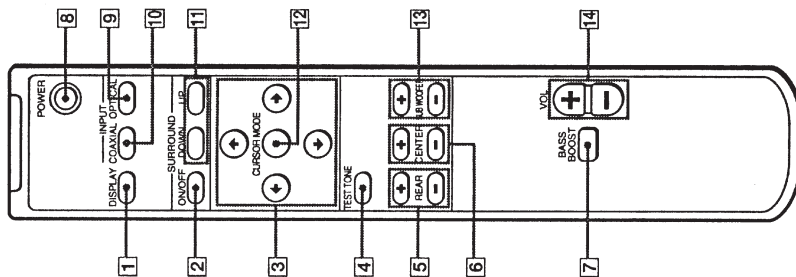

- 3 CURSOR (←/→/↑/↓)**
Selects the setting contents after selecting the item to be set with CURSOR MODE.
- 4 TEST TONE**
Outputs the test tone used to adjust the speaker volumes.
- 5 REAR +/-**
Adjusts the rear speaker volume.
- 6 CENTER +/-**
Adjusts the center speaker volume.
- 7 BASS BOOST**
Reinforces the bass sound.
- 8 POWER**
Turns on the power.
- 9 OPTICAL**
Press to listen to the audio from the component connected to the DIGITAL OPTICAL IN jack.
- 10 COAXIAL**
Press to listen to the audio from the component connected to the DIGITAL COAXIAL IN jack.
- 11 SURROUND UP/DOWN**
Selects the surround mode.
- 12 CURSOR MODE**
Selects the "LEVEL ADJUST", "EQUALIZER" or "SURROUND" menu.
- 13 SUB WOOFER +/-**
Adjusts the sub woofer volume.
- 14 VOL +/-**
Adjusts the processing amplifier volume. Changes the overall volume (volume of all the speakers connected to the processing amplifier).
- 1 DISPLAY**
Switches the display between the currently selected surround mode and the input signal (OPTICAL or COAXIAL) each time it is pressed.
- 2 SURROUND ON/OFF**
Applies the surround effects.

40^{EN}

SECTION 2
TEST MODE


[SELF-DIAGNOSIS AND TEST MODE]

The TAD-M30 has self-diagnosis mode and test mode. The TAD-M30 has three test modes: Factory shipment mode, Channel check mode and FL display tube check mode. The self-diagnosis detects DSP errors and returns them automatically, and is performed as a part of the channel check mode. To exit the test mode, press the POWER button again.

1. Factory Shipment Mode
- When the factory shipment mode is set, the machine settings return to the factory settings. Set this mode before returning the repaired machine to the customer. To set this mode, first remove the AC power cord. Then, while pressing the **CURSOR** button and the left CURSOR button  at the same time, connect the AC power cord to the power outlet and press the **POWER** button. The message “3ch SELF AMP” appears, the machine is set to the factory shipment mode and the factory settings are restored.
2. Channel Check Mode
- When the factory shipment mode is set, the machine settings return to the factory settings. The DSP self-diagnosis is performed as a part of this mode. To perform this self-diagnosis, first remove the AC power cord. Then, while pressing the **CURSOR** button and the right CURSOR button  at the same time, connect the AC power cord to the power outlet and press the **POWER** button. The message “3ch SELF AMP” appears then the self-diagnosis is performed. If the DSPs are normal, the message “DSP NO ERROR” appears.
3. FL Display Tube Check Mode
- In this mode, the FL display tubes are checked. To enter this mode, first remove the AC power cord. Then, while pressing the **DISPLAY** button and **BASS BOOST** at the same time, connect the AC power cord and press the **POWER** button. All the lamps and FL display tubes are turned on and the FL display tube check is performed. When any CURSOR button is pressed, the FL display tubes are turned on one after another, then all FL display tubes are turned on again.

SECTION 3
DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION

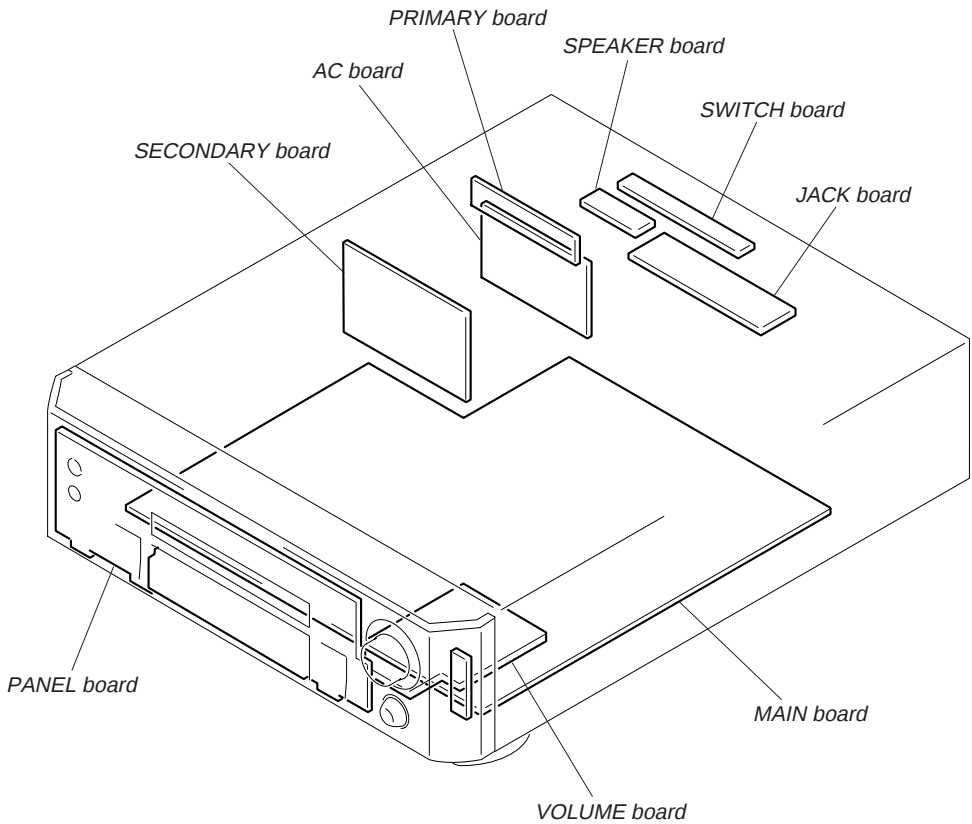

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{ W}$ or less unless otherwise specified.
- % : indicates tolerance.
-  : nonflammable resistor.
-  : fusible resistor.
-  : panel designation.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

以阴影和 Δ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

-  : B+ Line.
-  : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 -  : DIGITAL
 -  : ANALOG


Note on Printed Wiring Boards:

-  : parts extracted from the component side.
-  : Through hole.
-  : Pattern from the side which enables seeing. (The other layers' patterns are not indicated.)


Caution:
Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: Parts on the parts face side seen from the parts face are indicated.

TAD-M30

3-2. BLOCK DIAGRAM — DIGITAL SECTION —

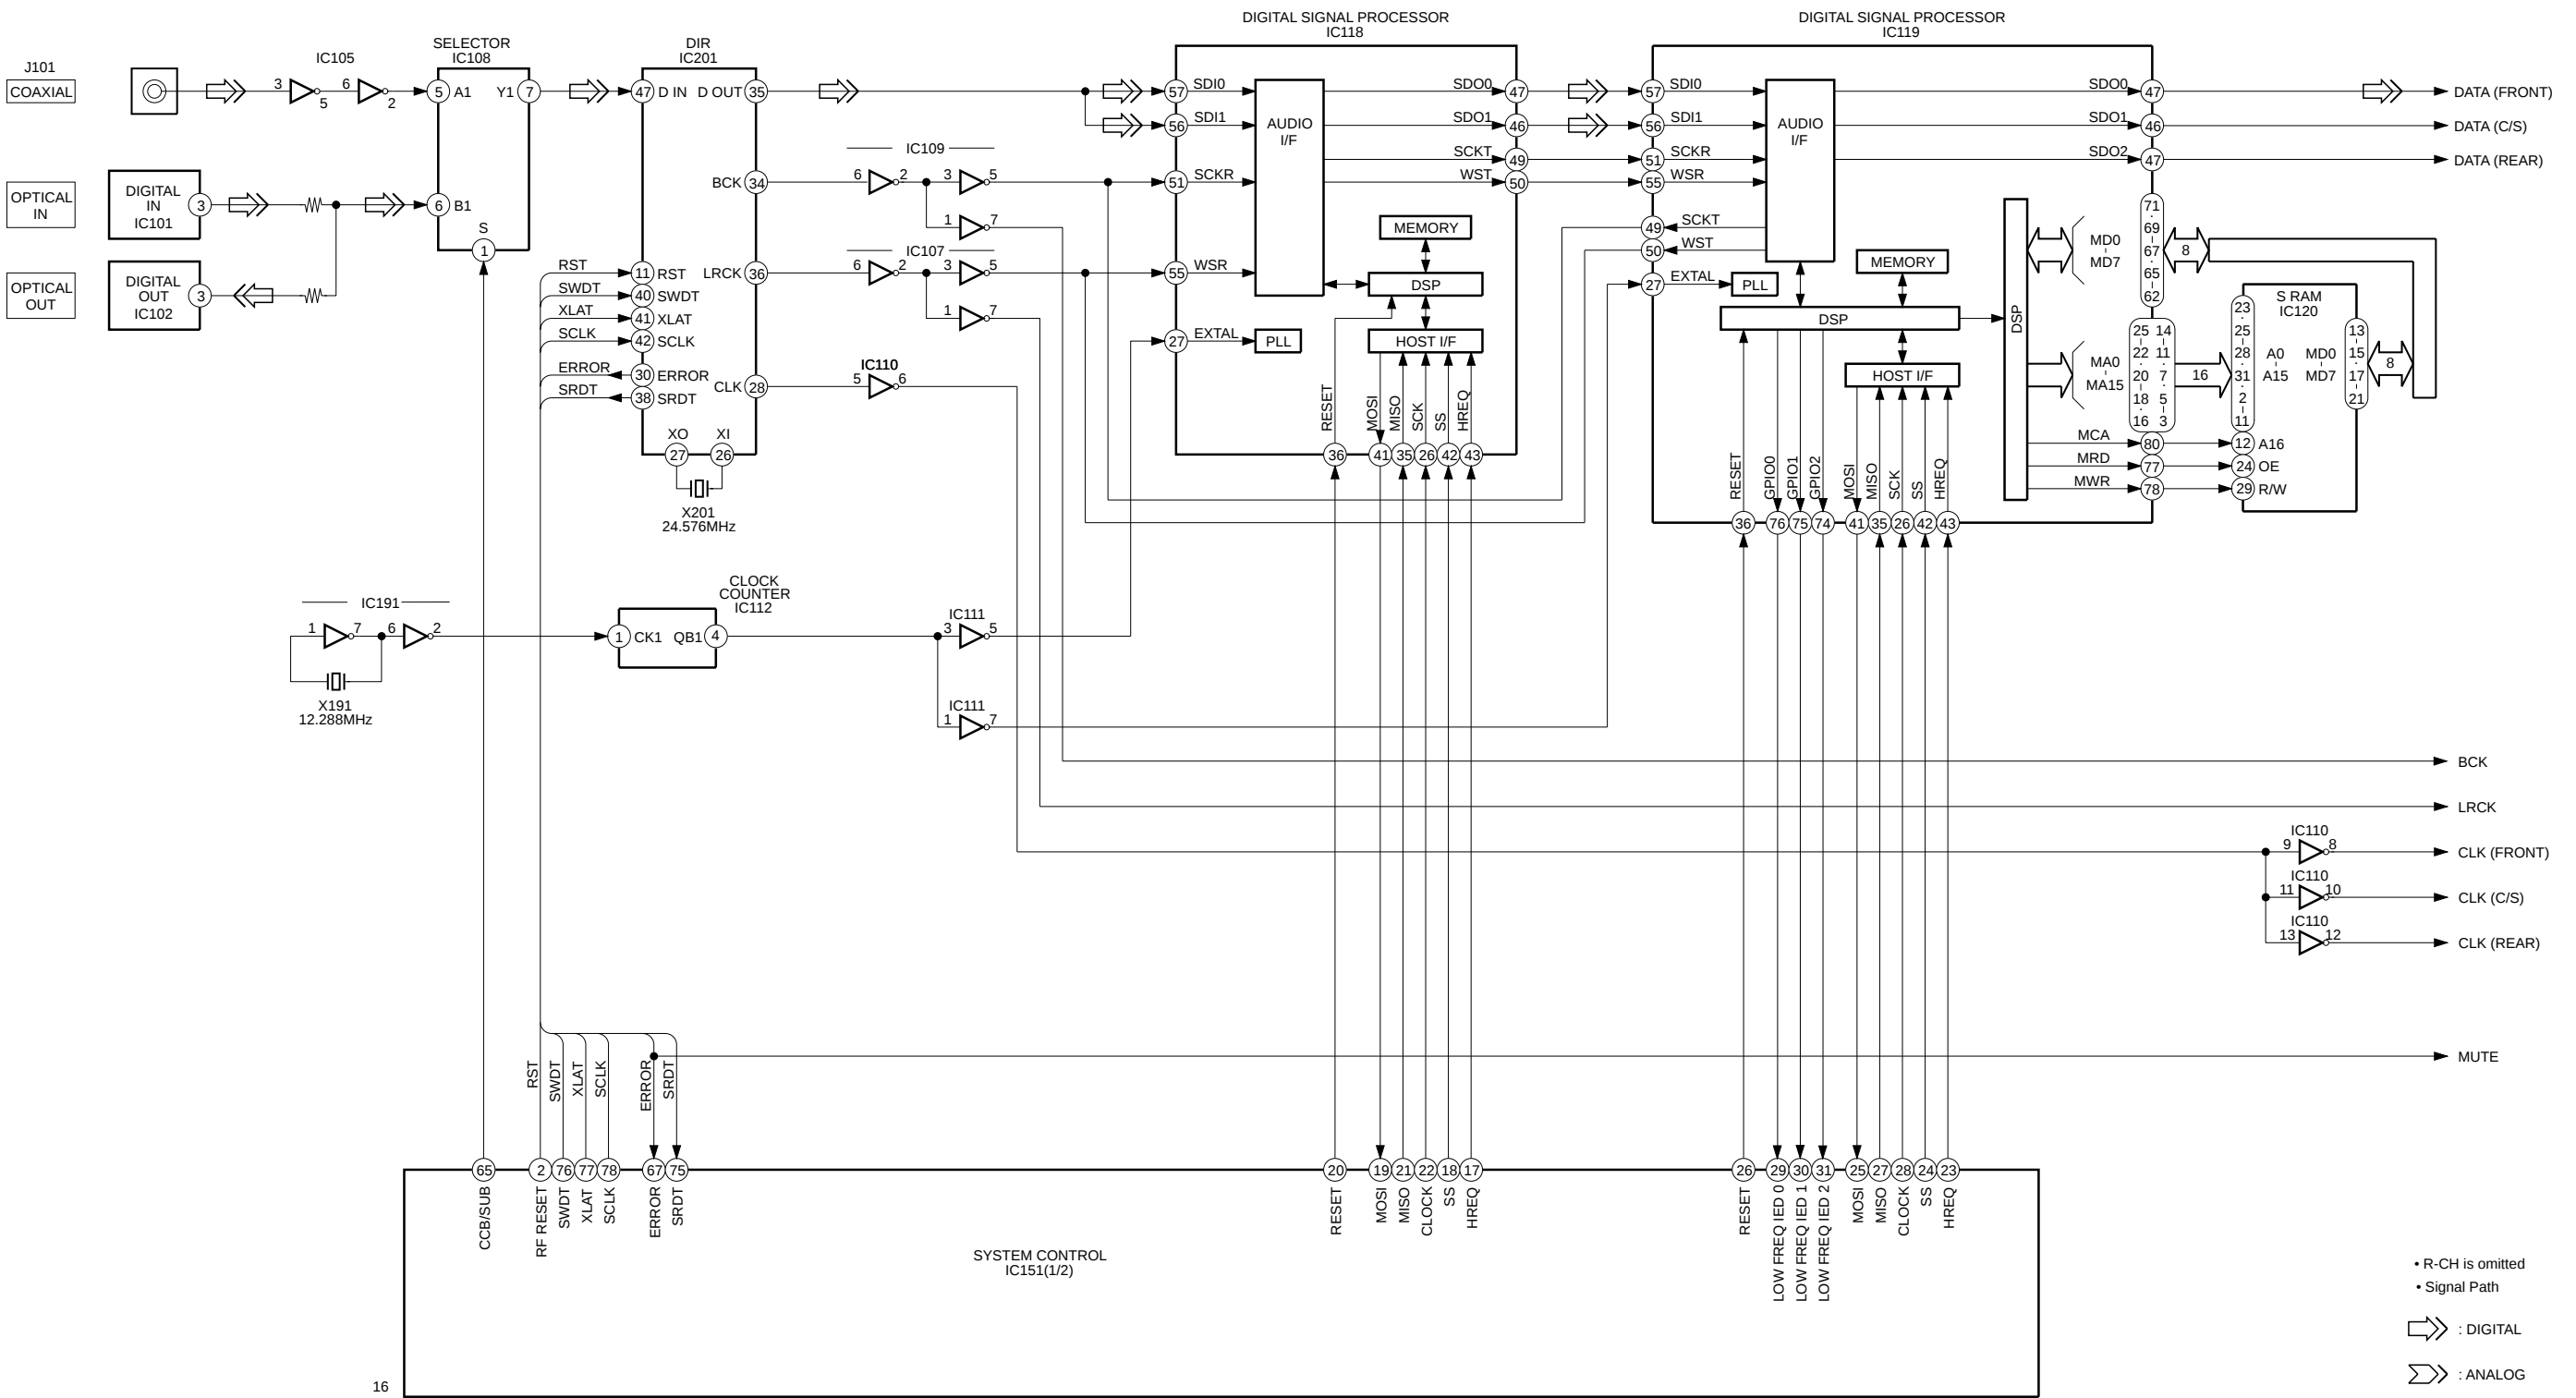


3-3. BLOCK DIAGRAM — MAIN SECTION —

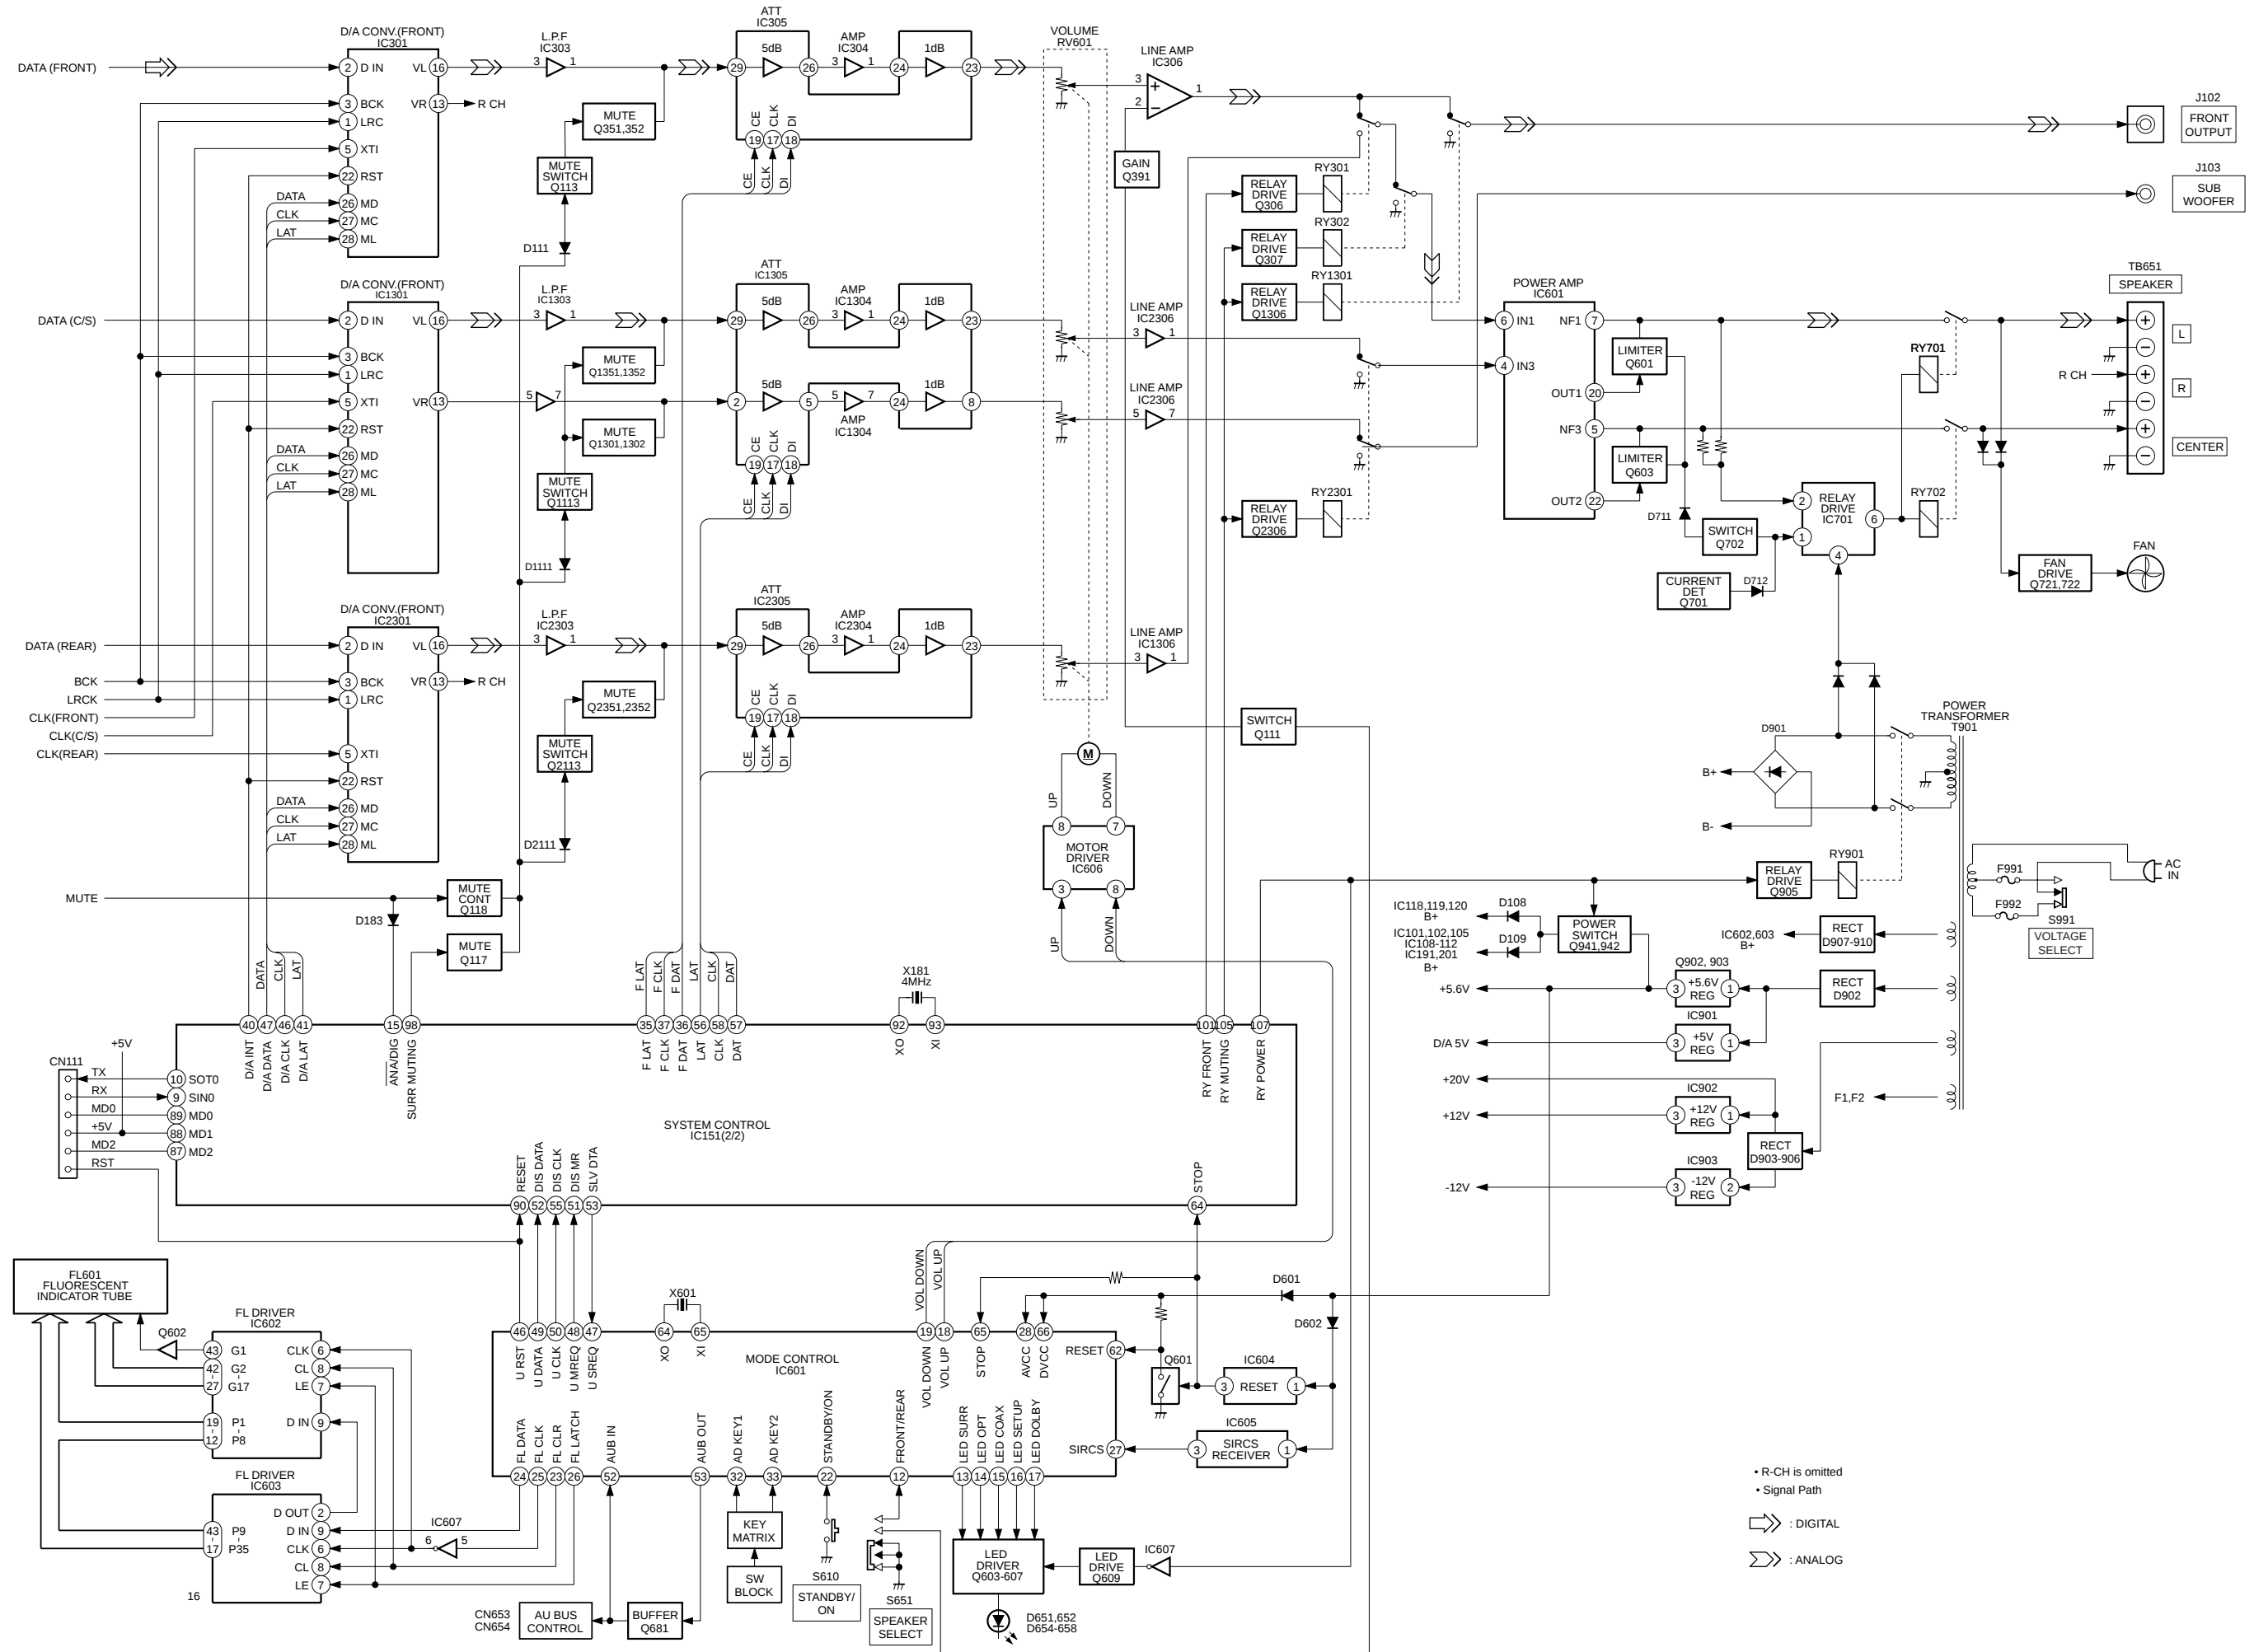


3-4. PRINTED WIRING BOARD — MAIN SECTION (SIDE A) — • Refer to page 6 for Circuit Boards Location .

• Semiconductor Location

Ref. No.	Location
D110	F-8
D182	E-5
D301	D-8
D302	D-9
D303	D-9
D1111	E-6
D1301	D-10
D2301	D-11
IC107	H-6
IC109	H-7
IC110	H-7
IC111	J-5
IC112	J-6
IC118	I-5
IC119	I-6
IC120	I-7
IC151	F-6
IC191	J-6
IC201	H-5
IC301	J-9
IC303	J-9
IC304	J-10
IC305	J-11
IC1301	G-7
IC1305	F-7
IC2301	H-8
IC2303	H-9
IC2304	H-10
IC2305	H-11
Q111	J-4
Q306	D-8
Q307	D-9
Q308	D-9
Q341	F-8
Q391	F-9
Q1113	E-6
Q1301	G-7
Q1302	F-7
Q1306	D-10
Q1351	G-7
Q1352	F-7
Q2306	E-11

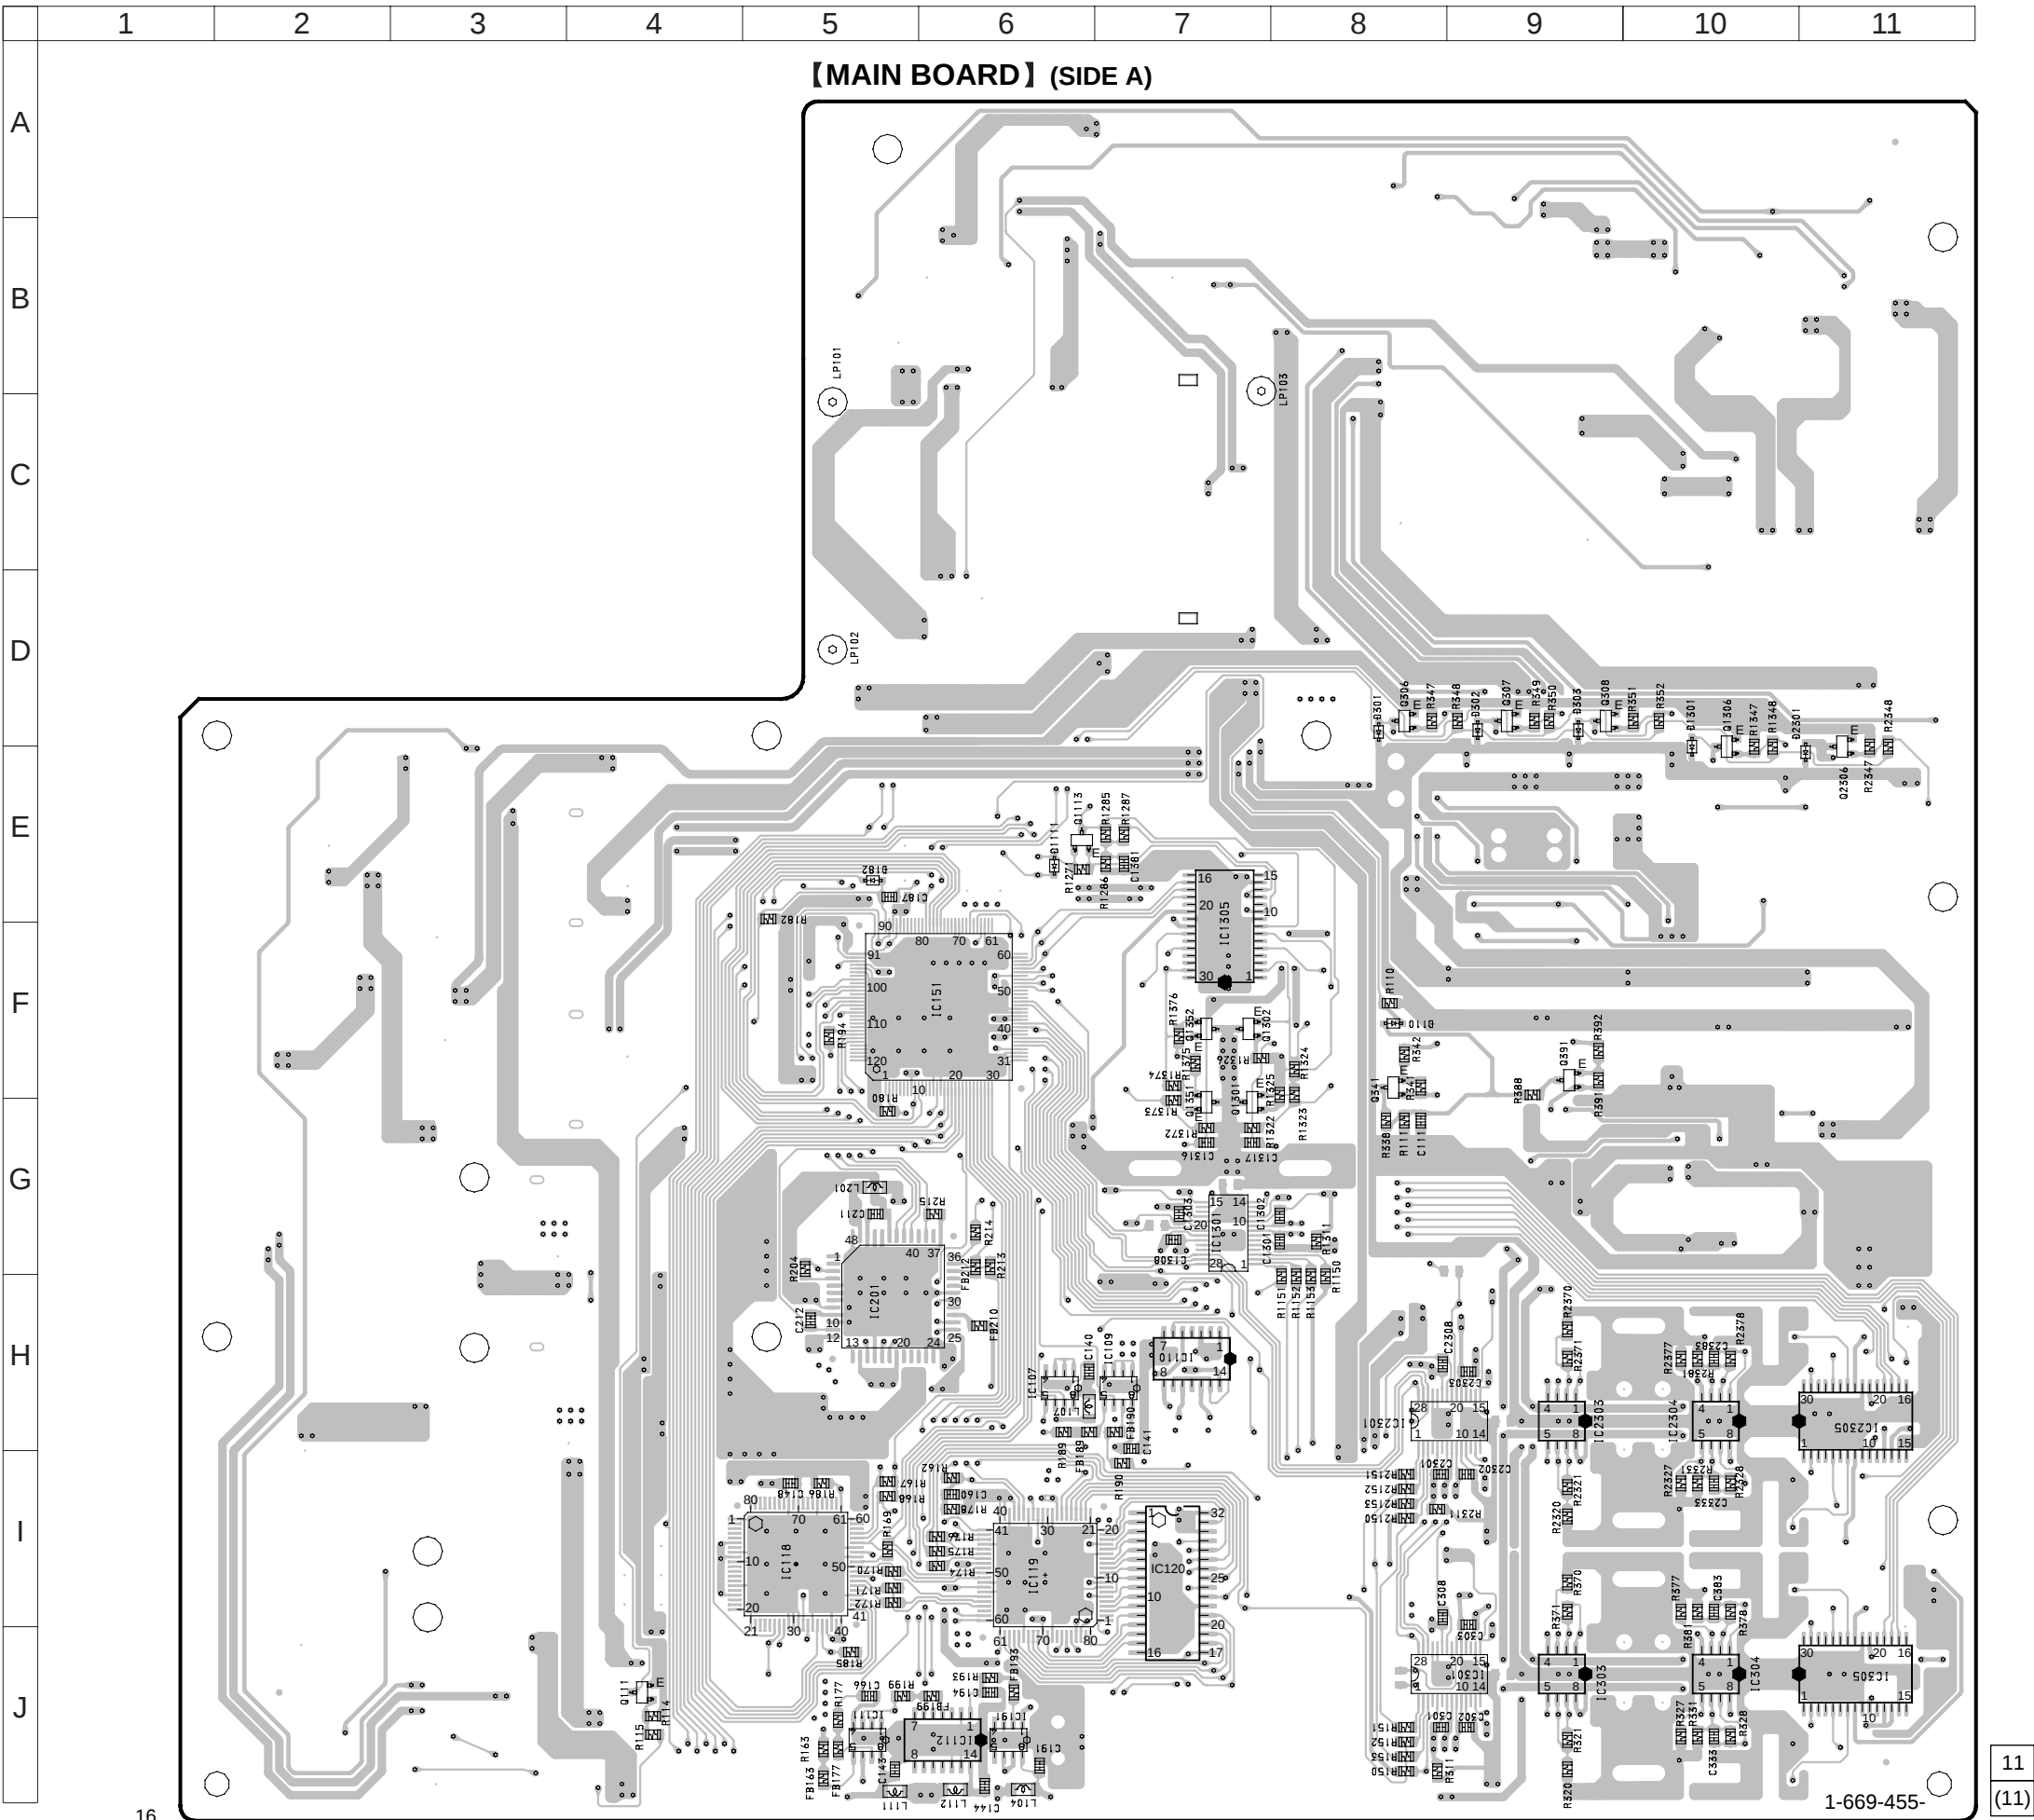

3-5. PRINTED WIRING BOARD — MAIN SECTION (SIDE B) — • Refer to page 6 for Circuit Boards Location .

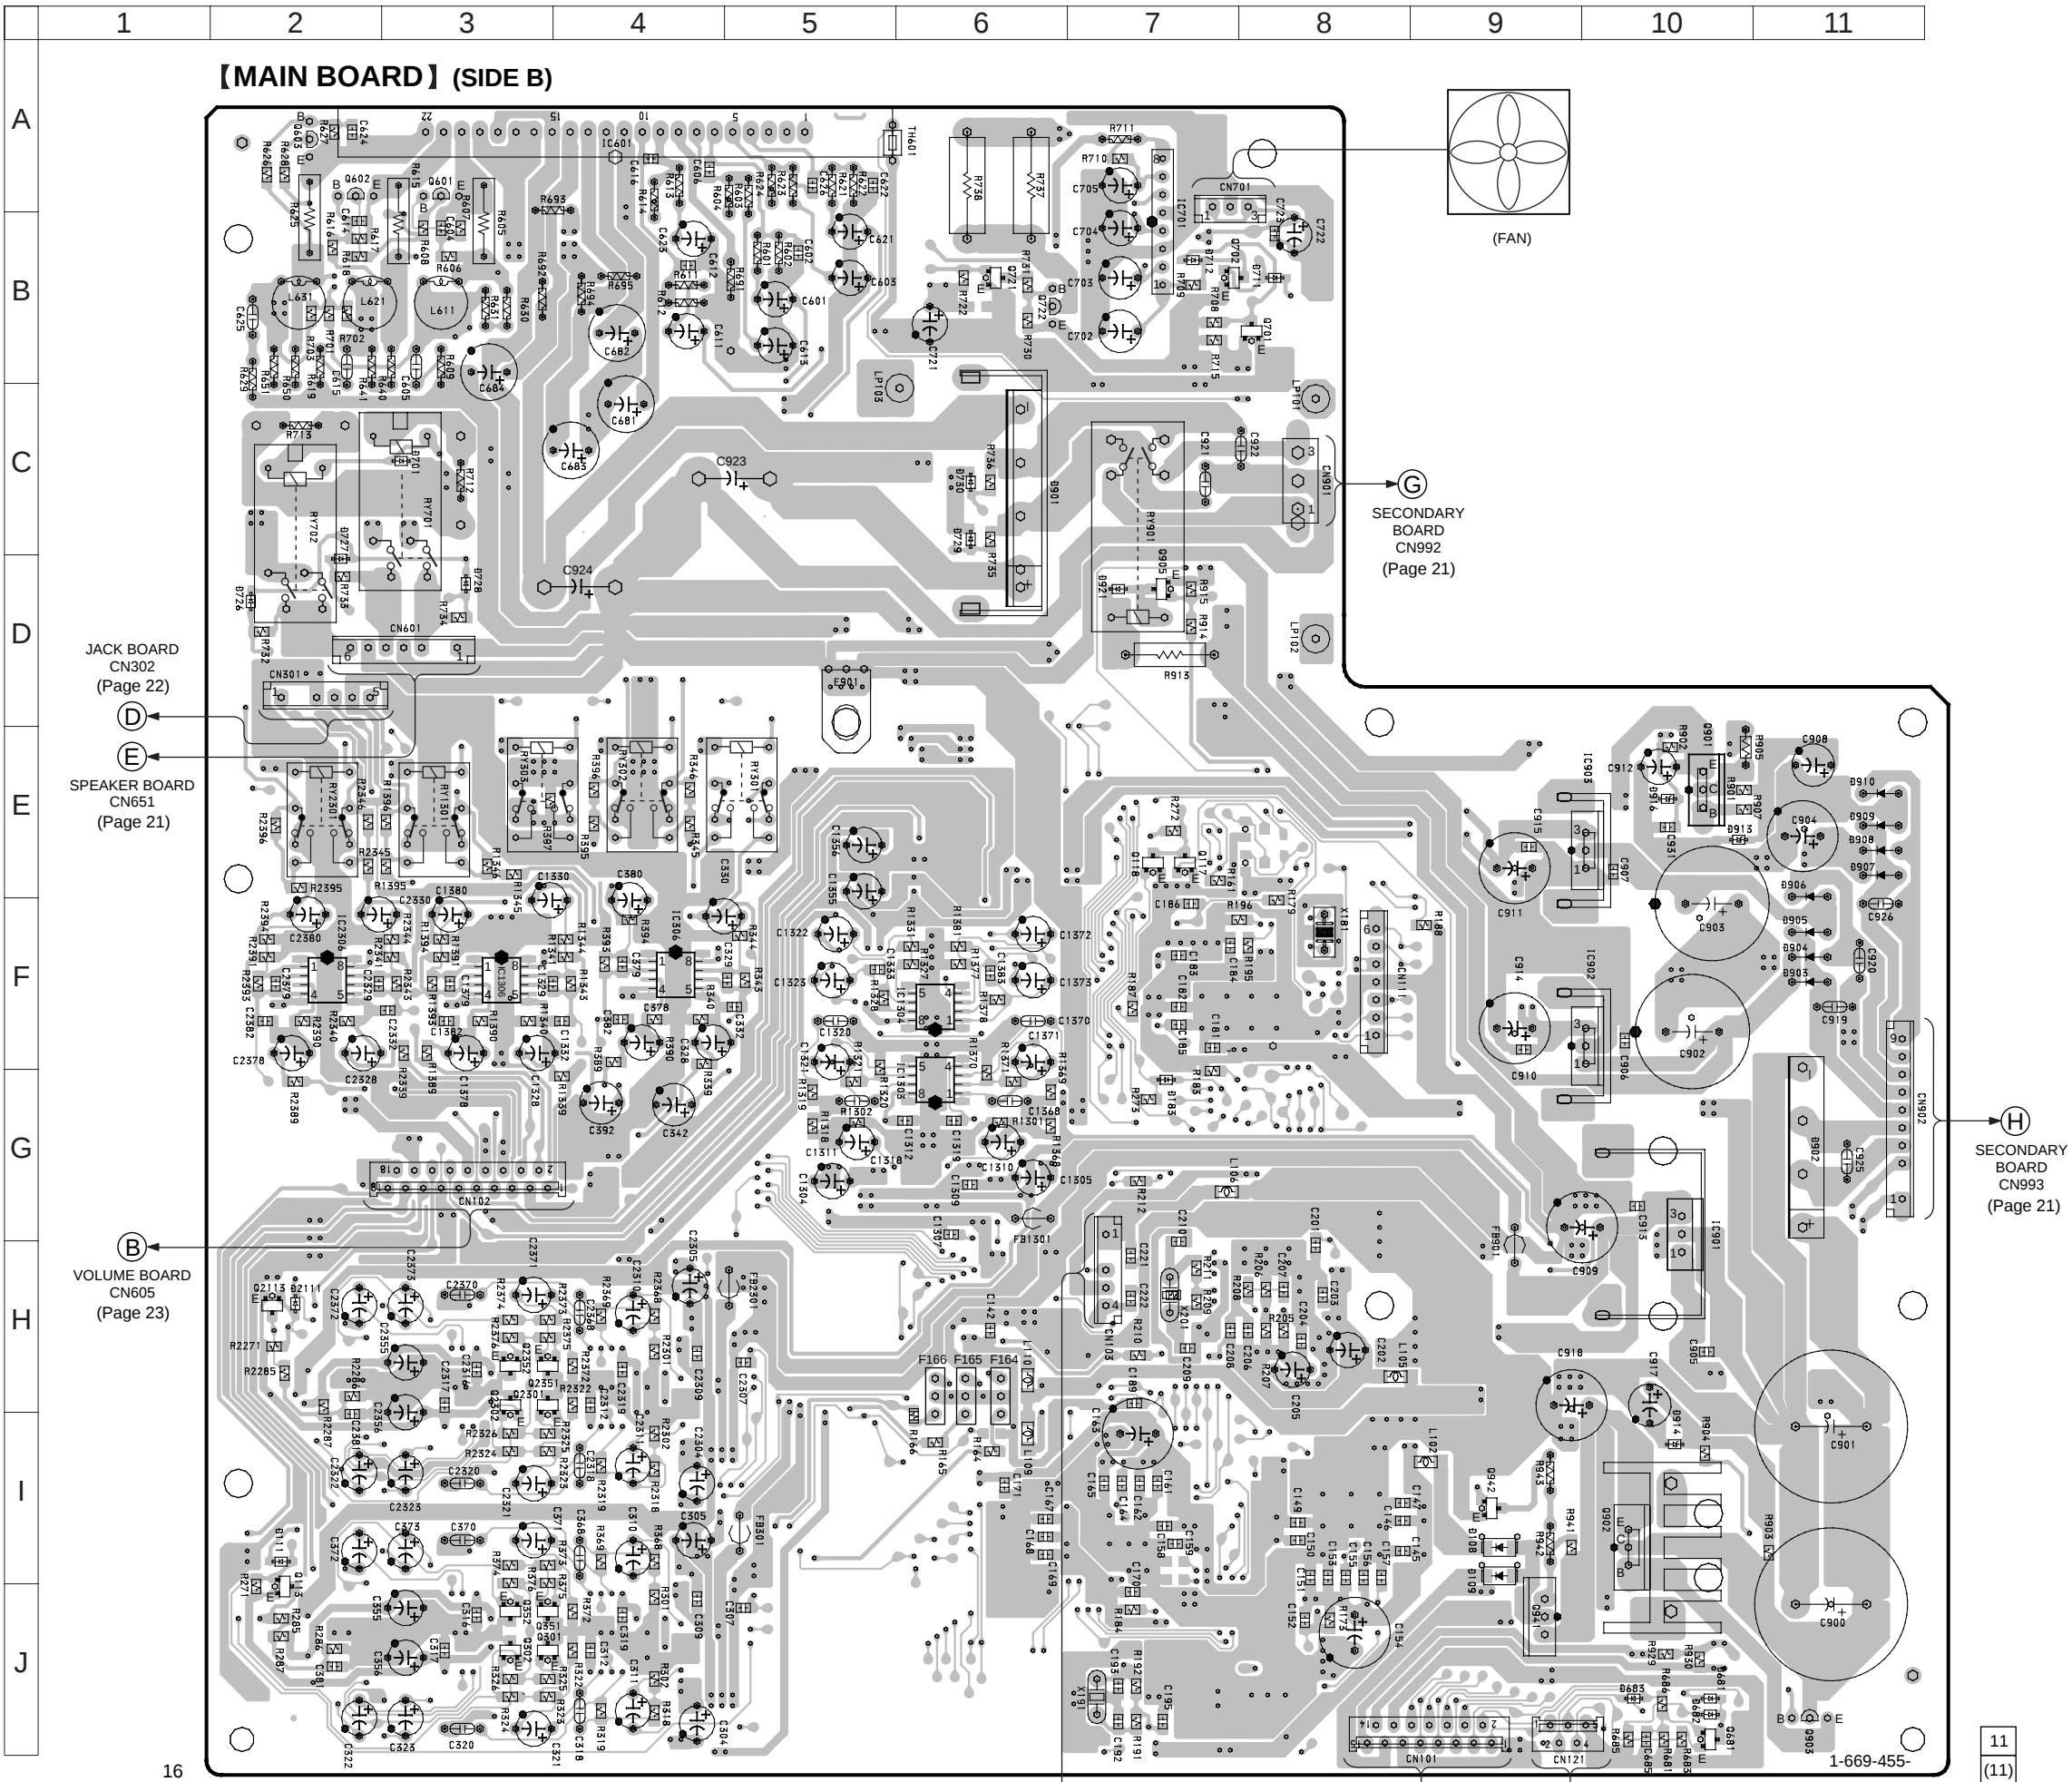



• Semiconductor Location


Ref. No.	Location
D108	I-9
D109	I-9
D111	I-2
D183	G-7
D681	J-10
D682	J-10
D683	J-10
D701	C-3
D711	B-8
D712	B-7
D726	D-2
D727	C-2
D728	D-3
D729	C-6
D730	C-6
D901	C-6
D902	G-11
D903	F-11
D904	F-11
D905	F-11
D906	E-11
D907	E-11
D908	E-11
D909	E-11
D910	E-11
D913	E-10
D914	I-10
D916	E-10
D921	D-7
D2111	H-2
IC306	F-4
IC601	A-4
IC701	B-7
IC901	G-10
IC902	F-9
IC903	E-9
IC1303	G-6
IC1304	F-6
IC1306	F-3
IC2306	F-2
Q113	J-2
Q117	E-7
Q118	E-7
Q301	J-3
Q302	J-3
Q351	J-3
Q352	J-3
Q601	A-3
Q602	A-2
Q603	A-2
Q681	J-10
Q701	B-8
Q702	B-7
Q721	B-6
Q722	B-6
Q901	E-10
Q902	I-10
Q903	J-11
Q905	D-7
Q941	J-9
Q942	I-9
Q2113	H-2
Q2301	H-3
Q2302	H-3
Q2351	H-3
Q2352	H-3

3-6. SCHEMATIC DIAGRAM — DIGITAL SECTION —

- Refer to page 11 for MAIN board Printed Wiring Board .
- Refer to pages 21 and 22 for SWITCH, JACK board Printed Wiring Board .
- Refer to page 27 for IC Block Diagrams .
- Refer to page 29 for IC Pin Function Description .


• Waveform

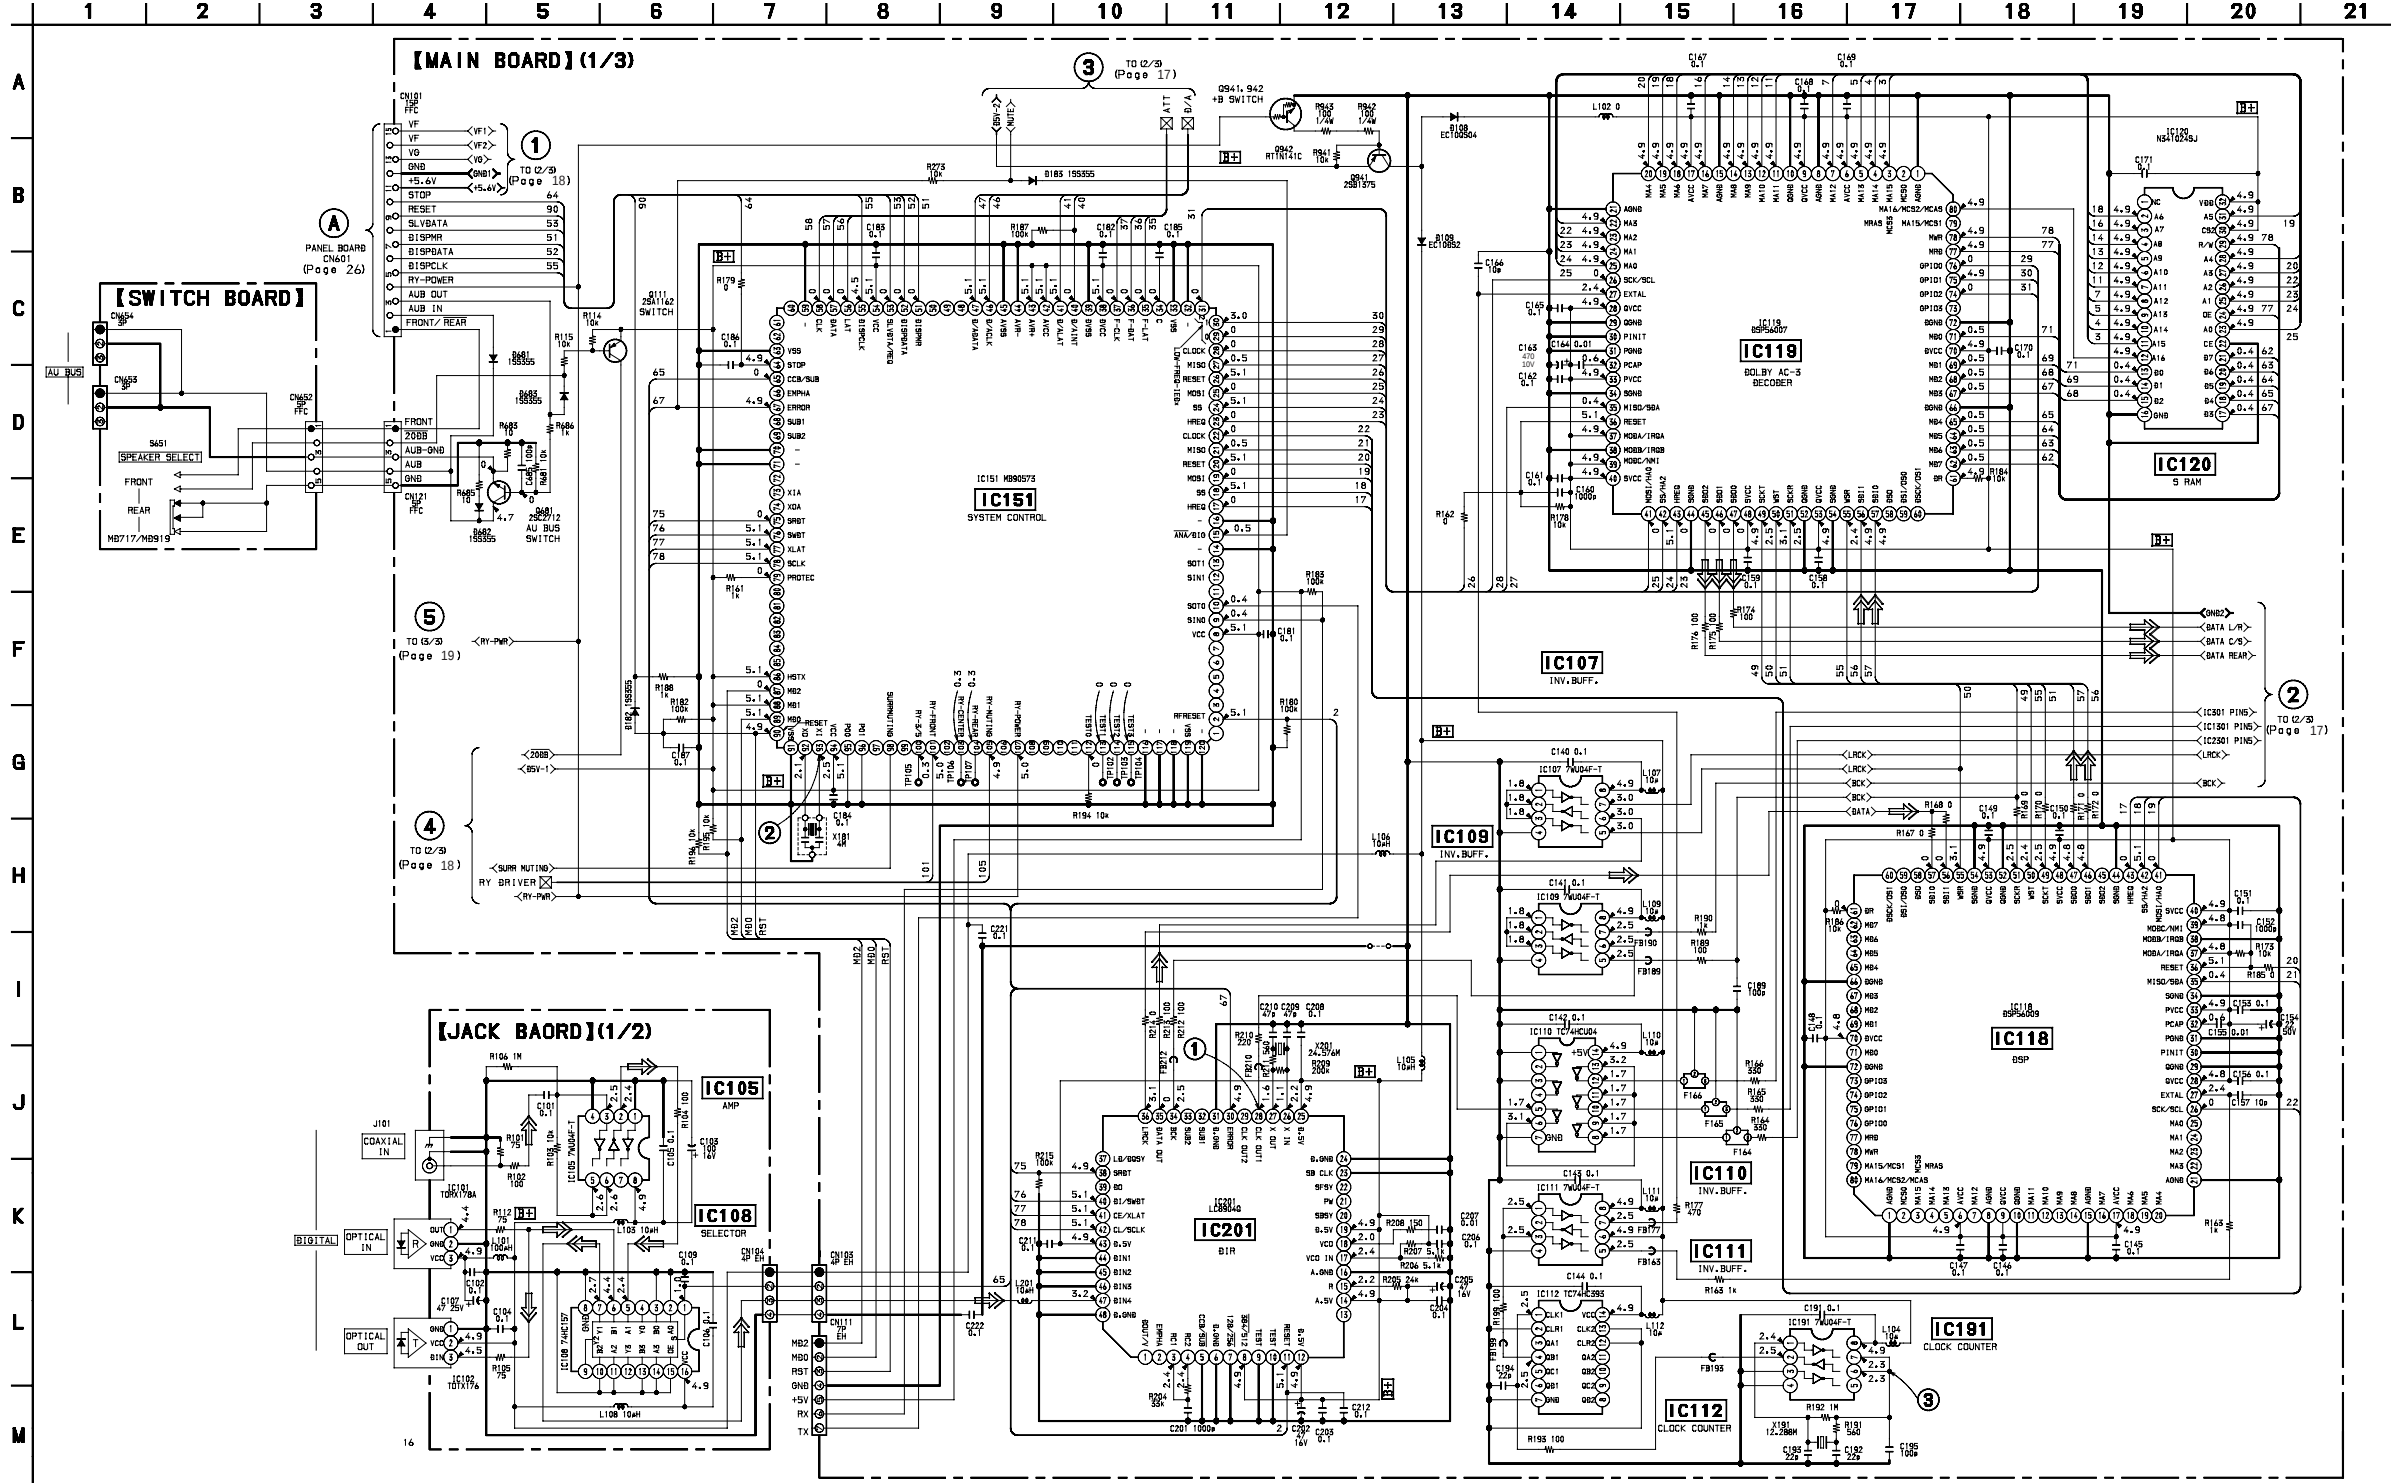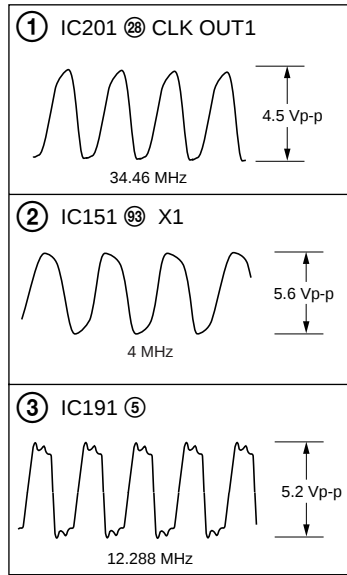

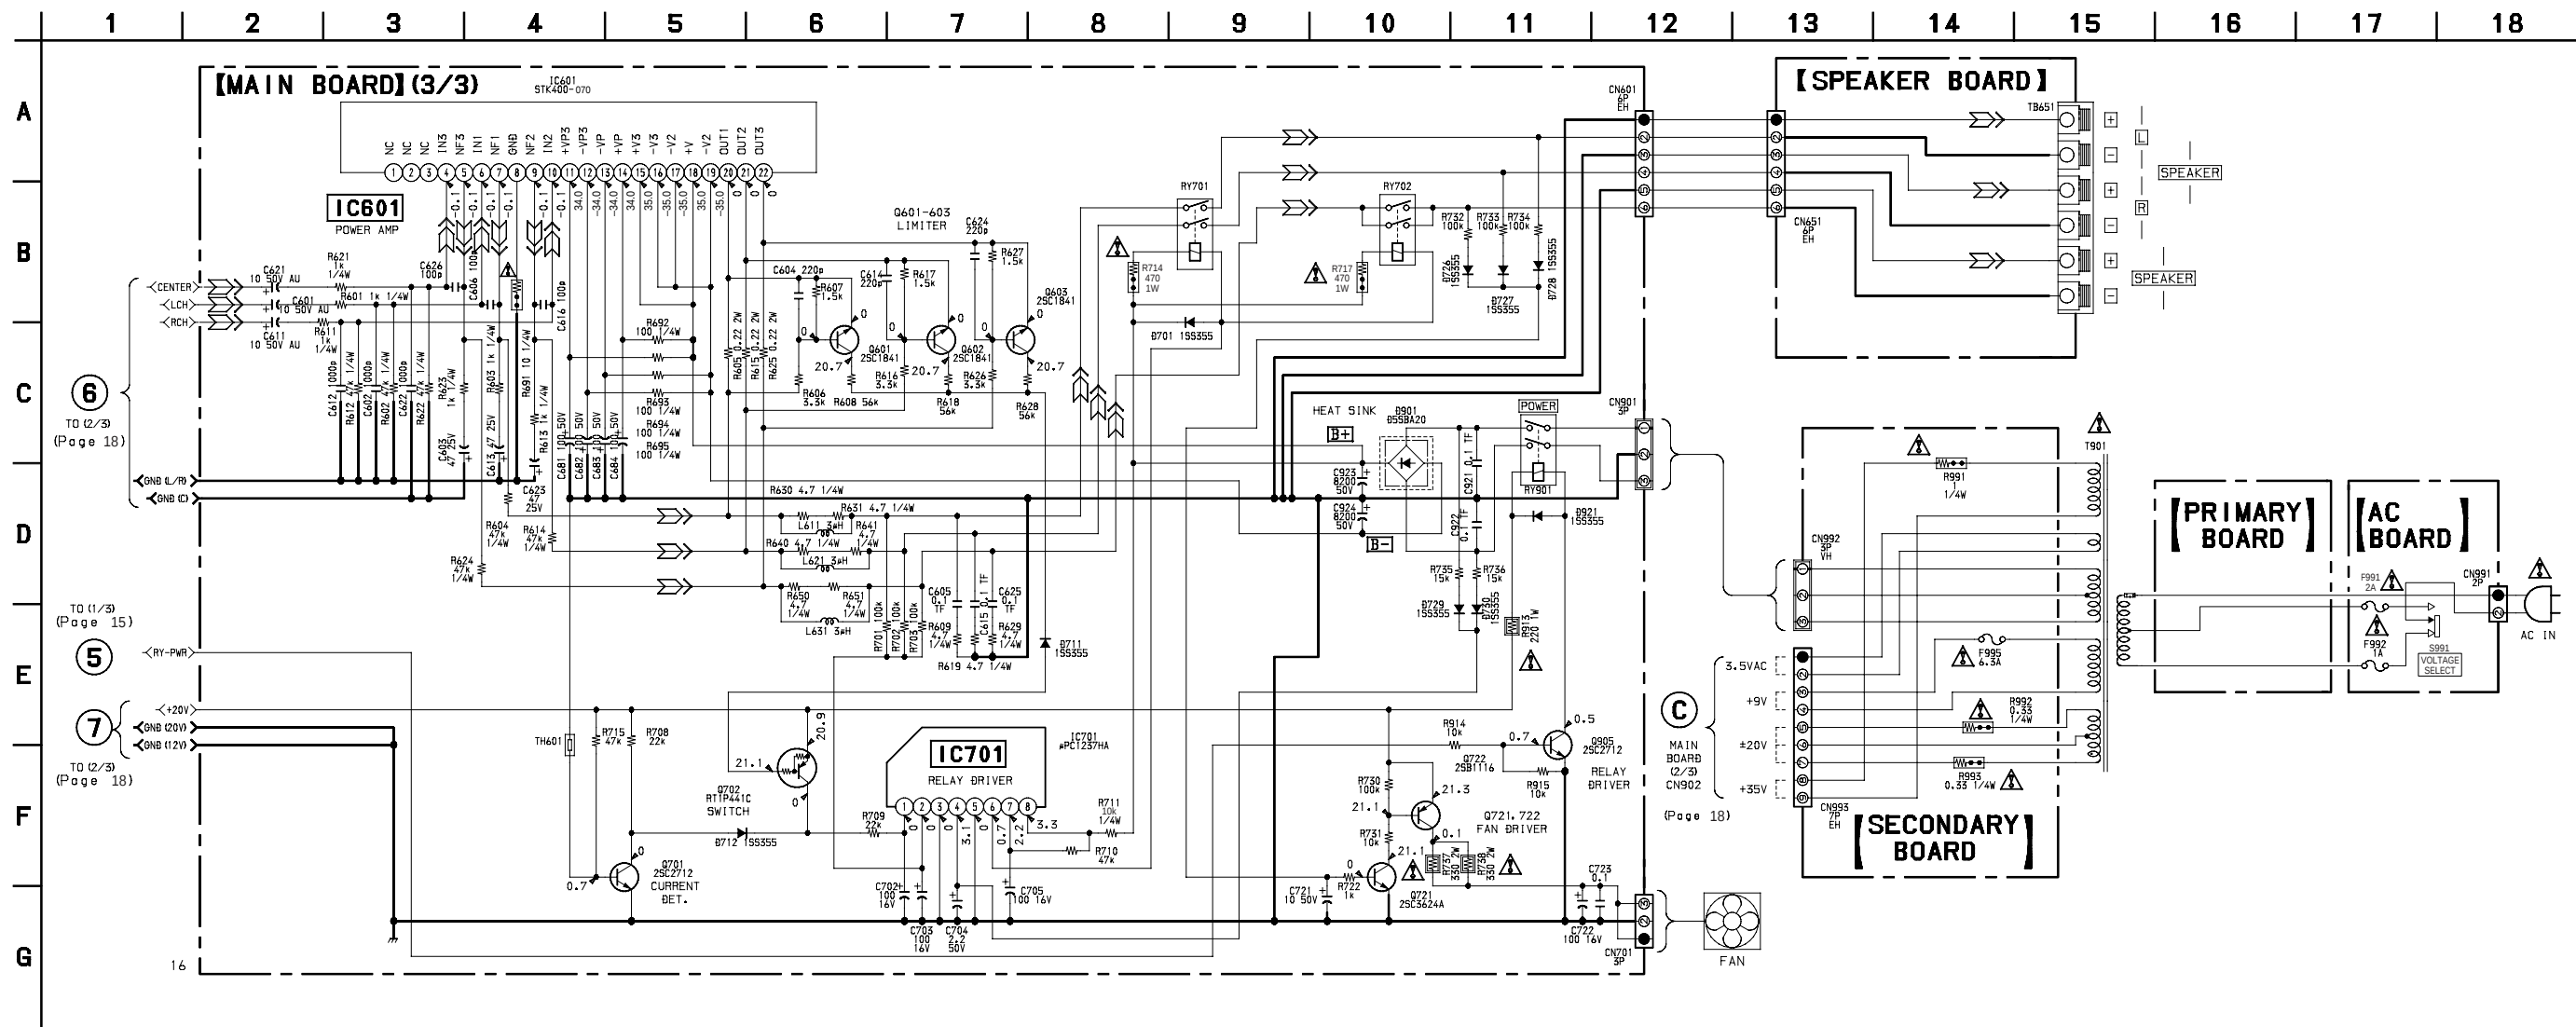



3-9. PRINTED WIRING BOARD — POWER SECTION —

• Refer to page 6 for Circuit Boards Location .

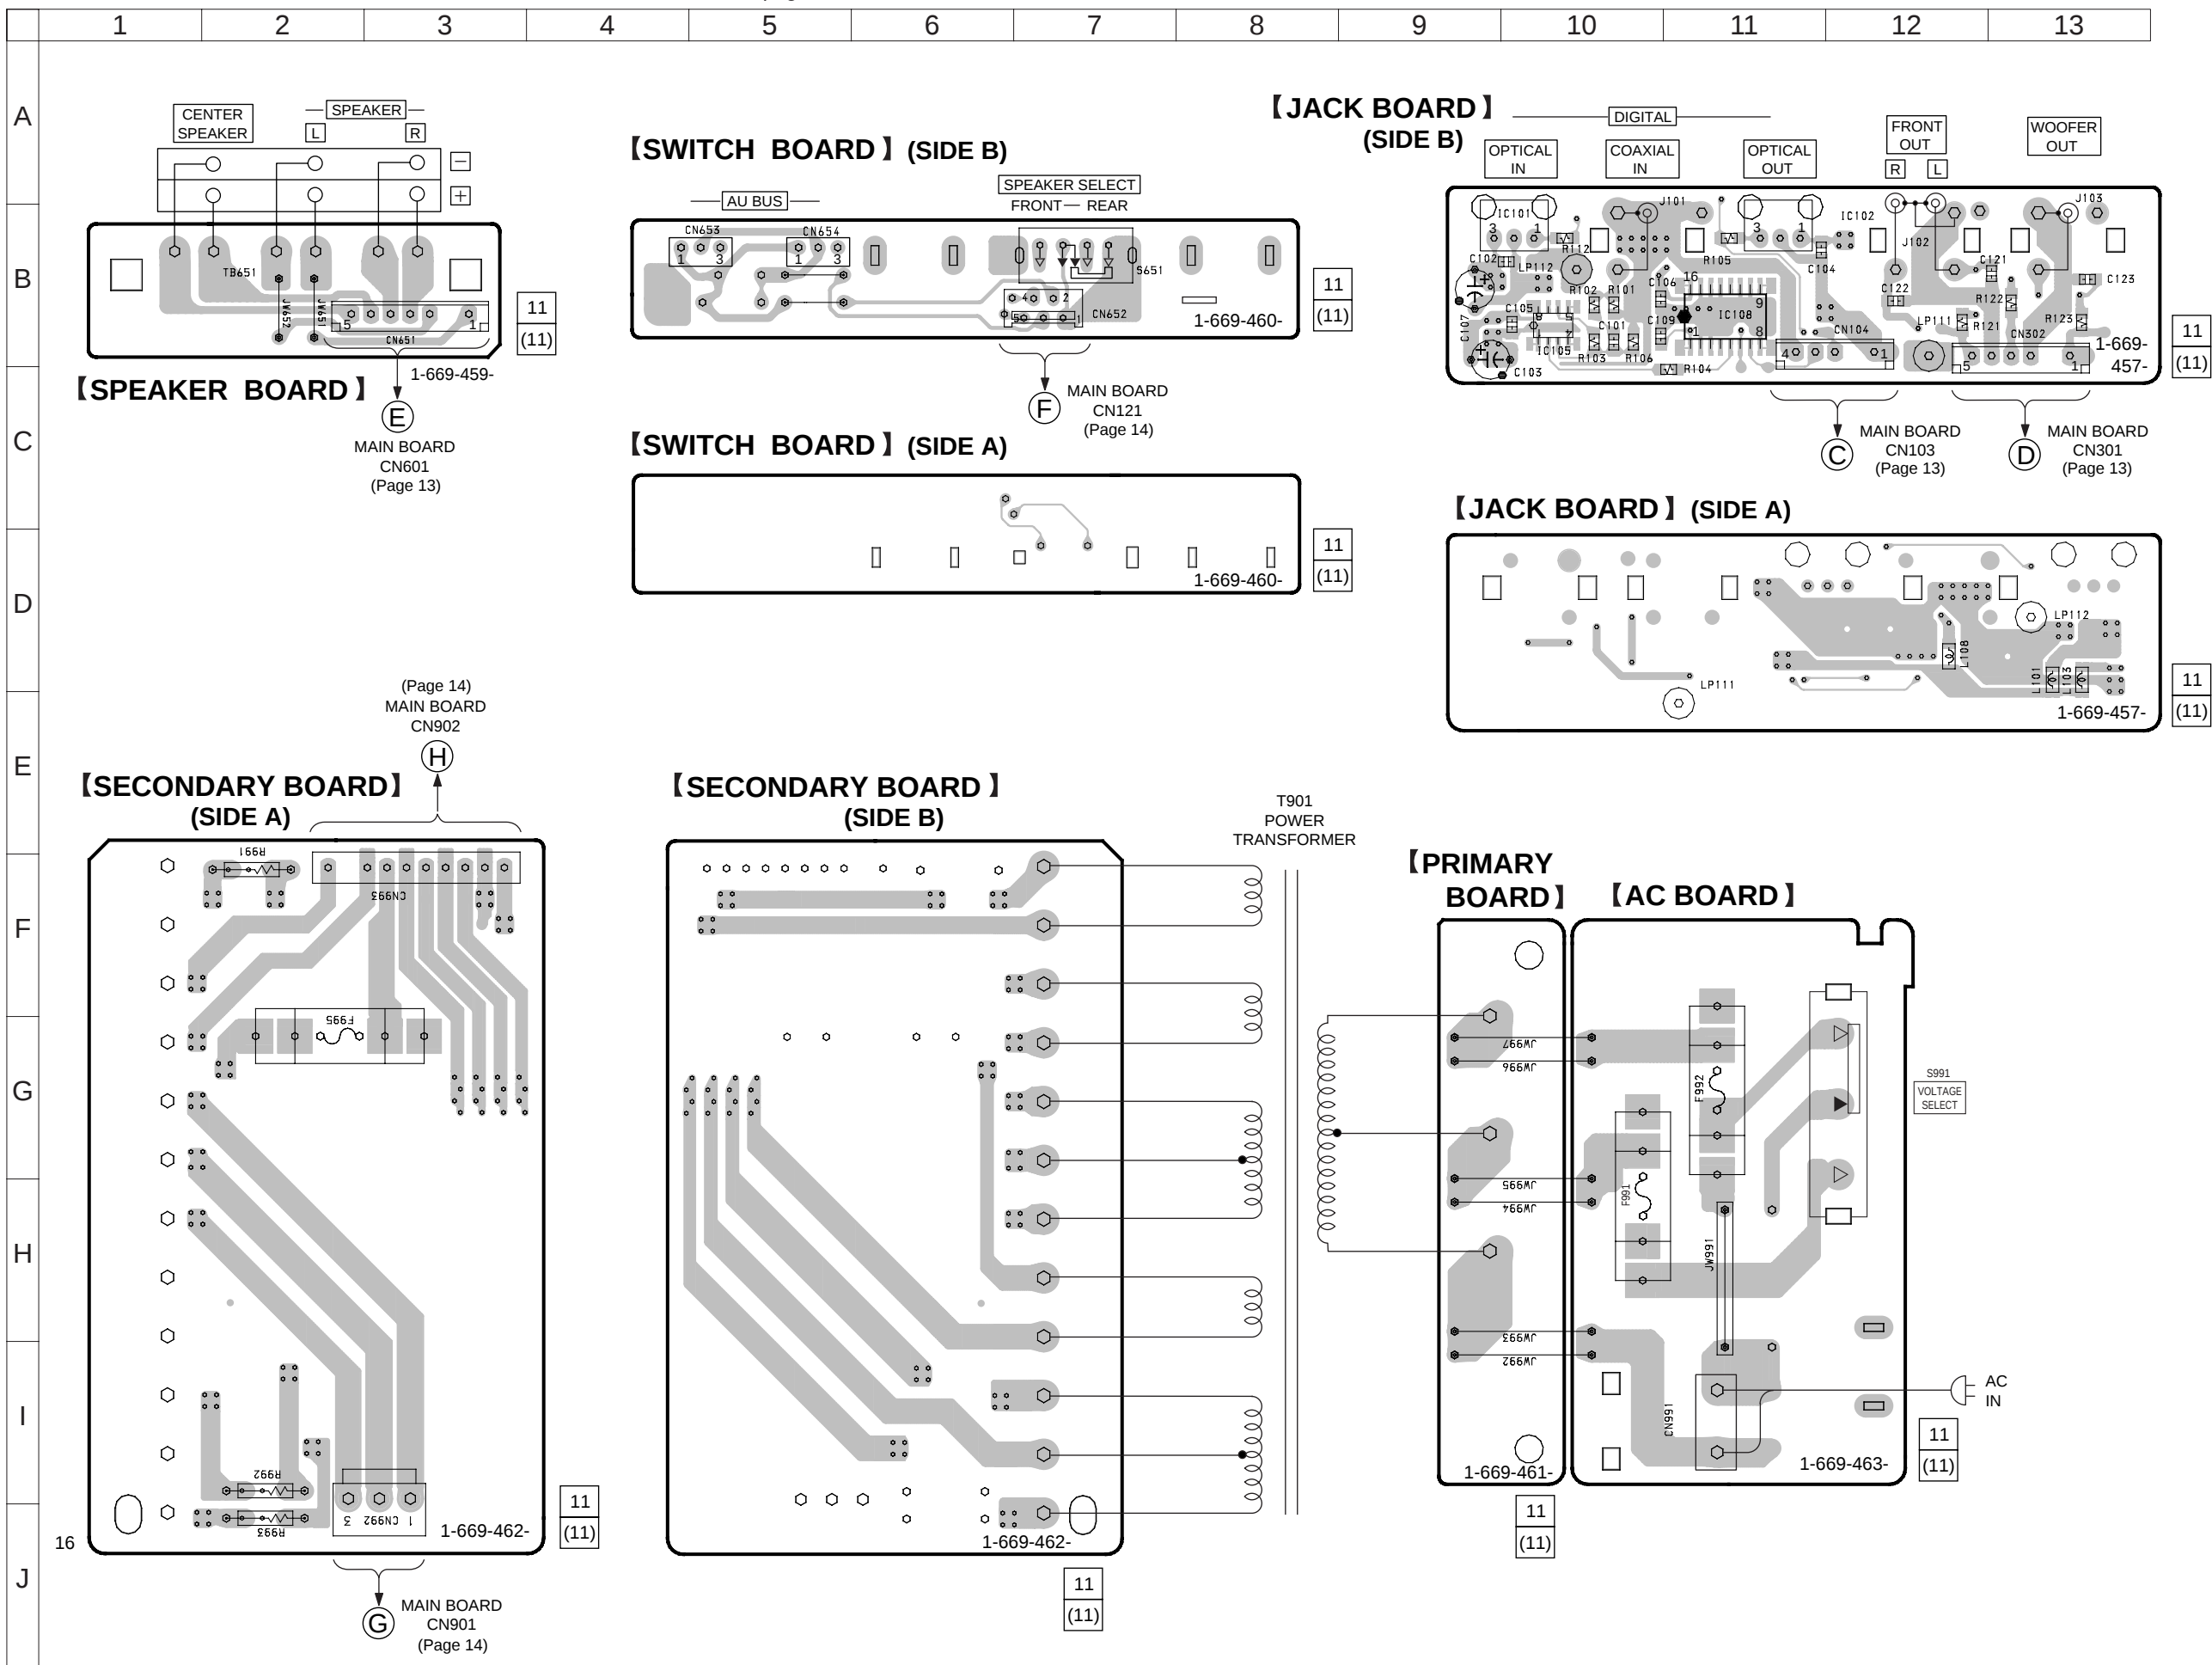


3-10. PRINTED WIRING BOARD — PANEL SECTION — • Refer to page 6 for Circuit Boards Location .

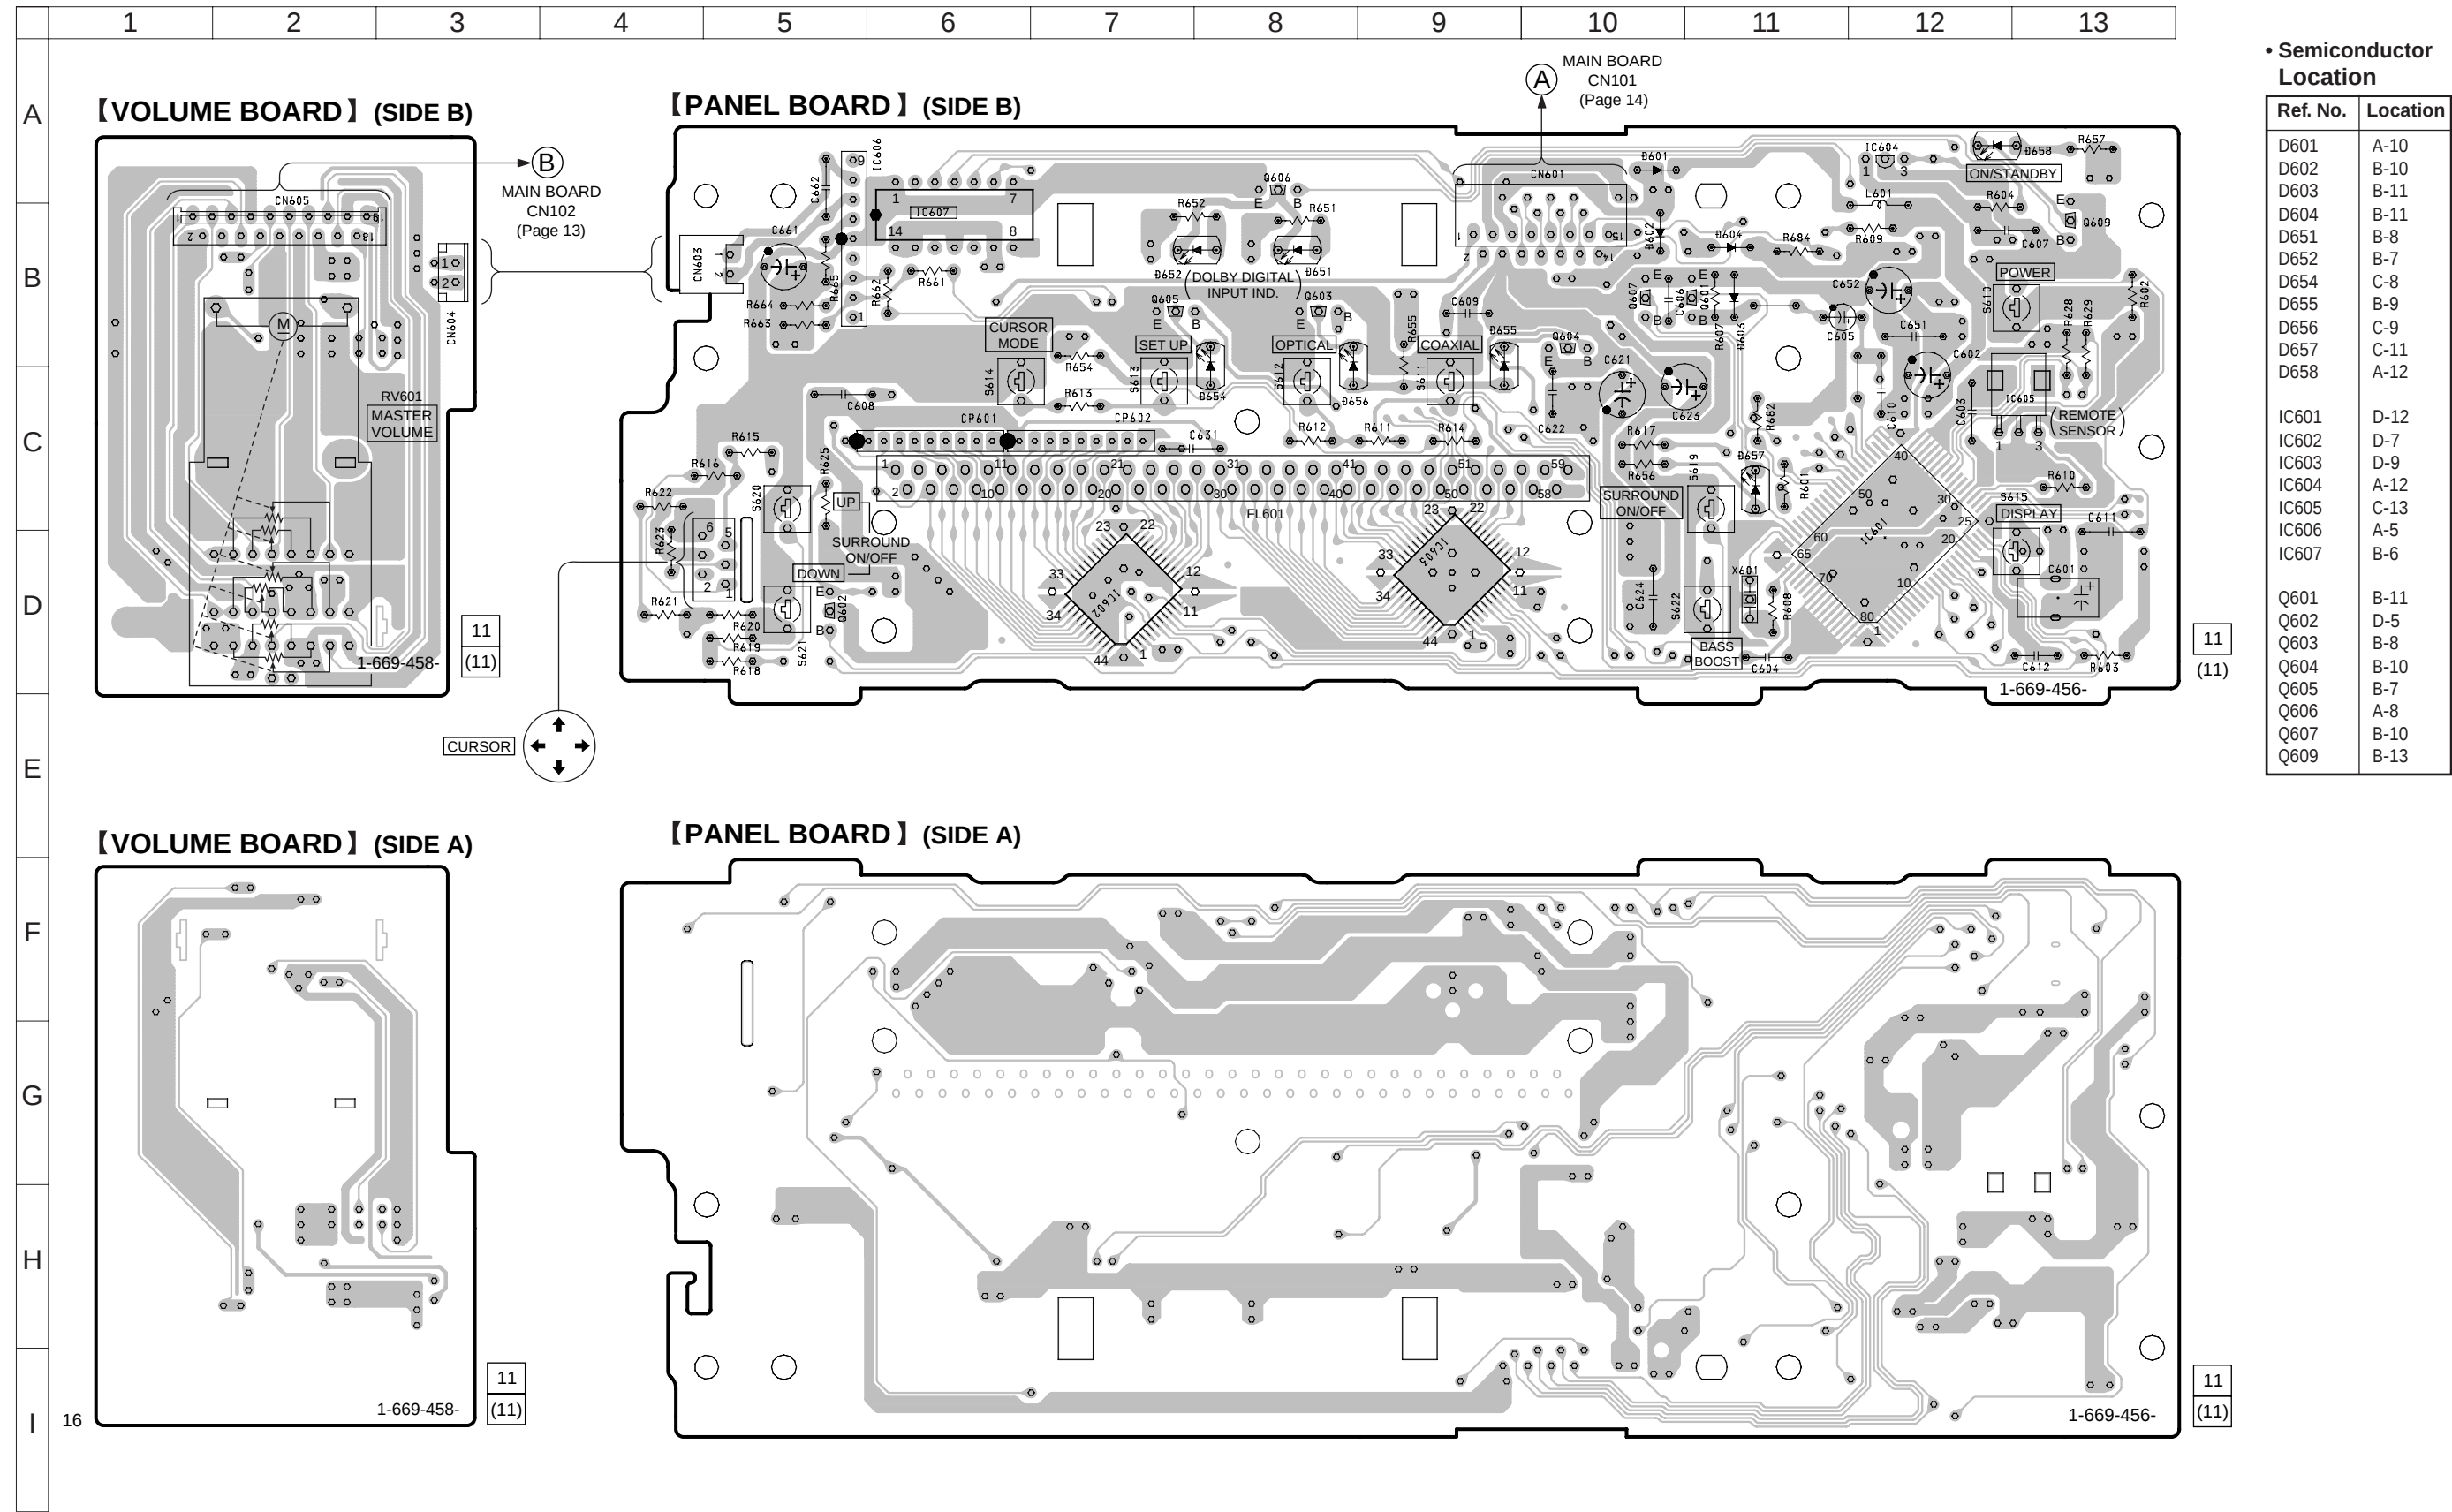




3-12. IC BLOCK DIAGRAMS


IC112 (MAIN BOARD) MC74HC74AF

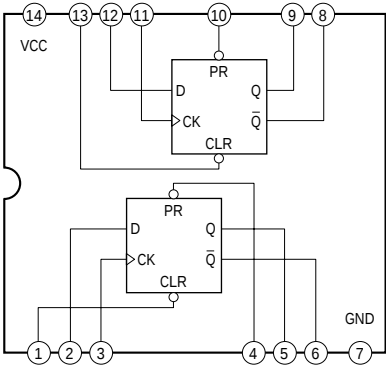


IC201 (MAIN BOARD) CXD8495AQ

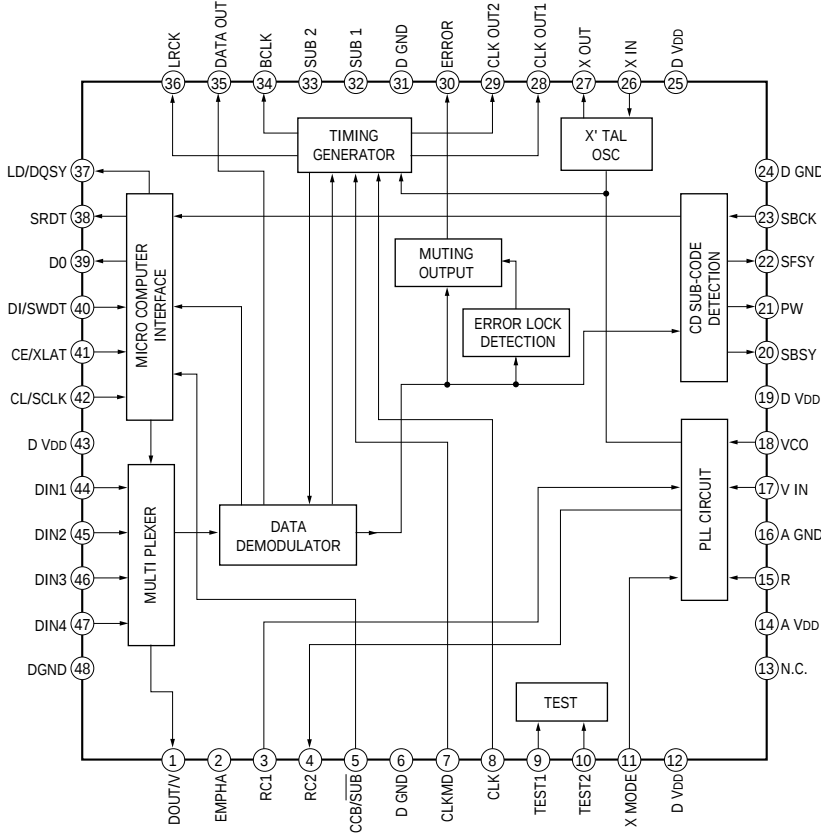


IC606 (PANEL BOARD) BA6208

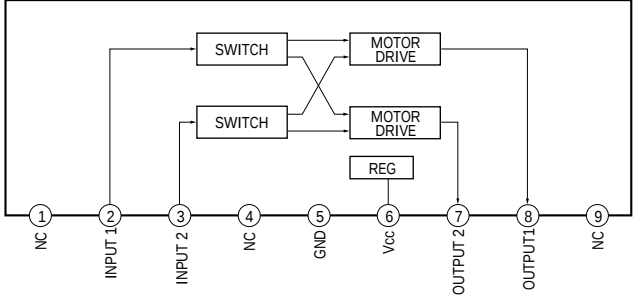


IC305, 1305, 2305 (MAIN BOARD) LC7535M

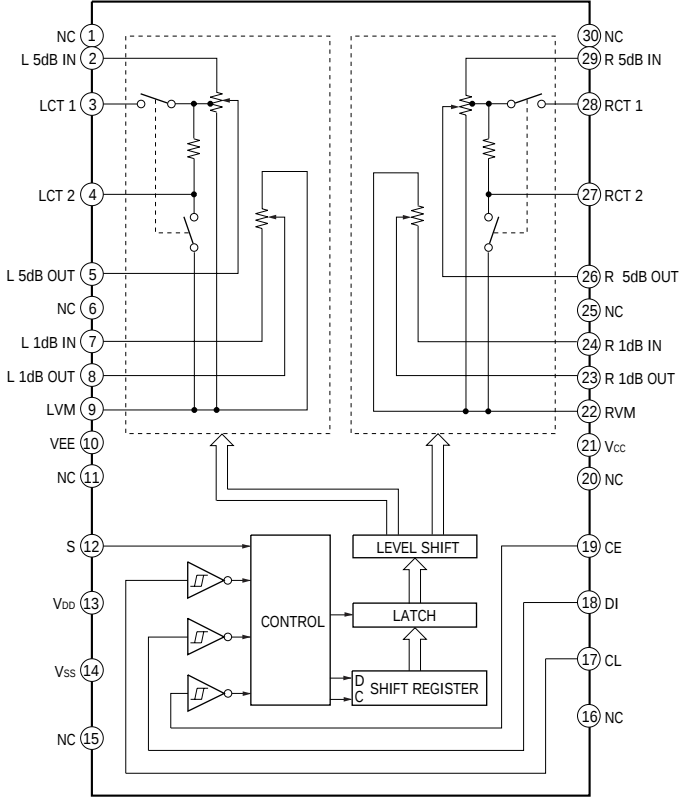


IC301, 1301, 2301 (MAIN BOARD) PCM1716E

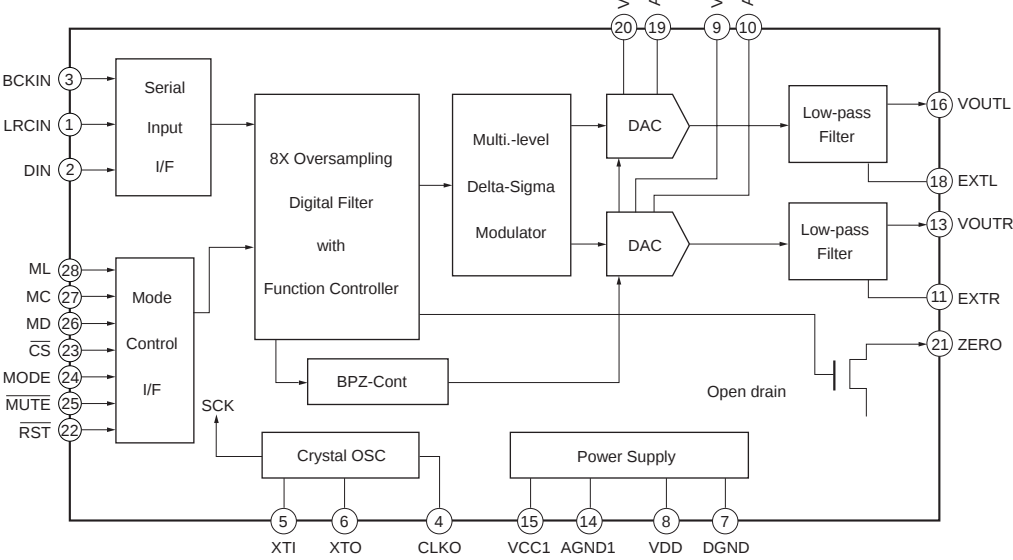

IC701 (MAIN BOARD) UPC1237HA

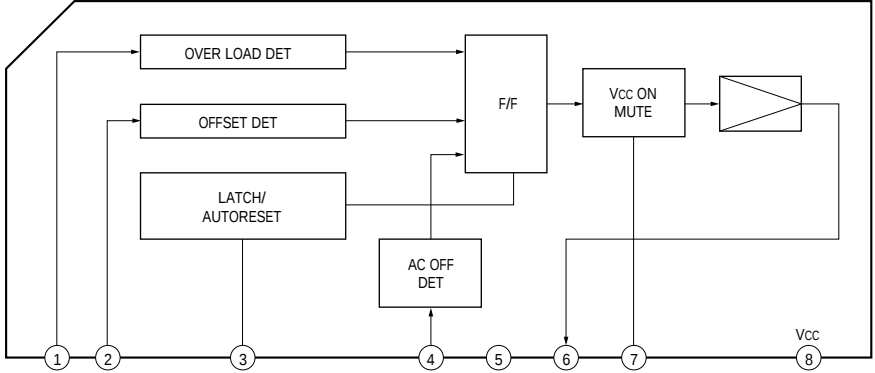

IC601 (MAIN BOARD) STK400-070

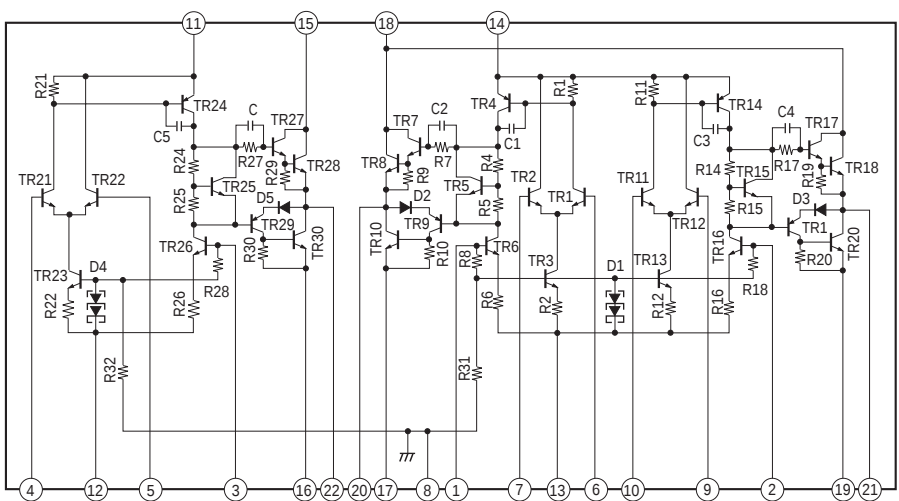

3-13. IC PIN FUNCTION DESCRIPTION

IC601 MB90673PF-G-264-BND (MODE CONTROL)/PANEL BOARD

Pin No.	Pin Name	I/O	Description
1 to 10	—	—	Not used (Connected to Ground)
11	VSS	—	Ground
12	FRONT/REAR	I	Front/rear speaker select switch input (Front at H, Rear at L)
13	LED SURR	O	SURROUND ON/OFF display LED drive output
14	SED OPT	O	OPTICAL display LED drive output
15	LED COAX	O	COAXIAL display LED drive output
16	LED SETUP	O	SET UP display LED drive output
17	LED DOLBY	O	Dolby display LED drive output
18	VOL UP	O	VOLUME UP data output
19	VOL DOWN	O	VOLUME DOWN data output
20, 21	—	—	Not used (Connected to Ground)
22	STANDBY/ON	I	STANDBY ON/OFF switch input
23	FLCLR	O	FL display clear output
24	FLDATA	O	FL display data output
25	FLCLK	O	FL display clock output
26	FLLATCH	O	FL display latch output
27	SIRCS	I	Remote commander SIRCS signal input
28	AVCC	—	Backup power supply +5 V
29	+AVREF	—	Non-backup power supply +5 V
30	–AVREF	—	Ground
31	D GND	—	Digital Ground
32	AD KEY1	I	Key input, to A/D converter
33	AD KEY2	I	Key input, to A/D converter
34	DVSS	—	Digital Ground
35 to 40	—	—	Not used (Connected to Ground)
41	MODE0	—	Not used (Connected to non-backup power supply +5 V)
42	MODE1	—	Not used (Connected to non-backup power supply +5 V)
43	MODE2	—	Not used (Connected to Ground)
44	STANDBY	—	Not used (Connected to non-backup power supply +5 V)
45	STOP	O	STOP signal output (to control microprocessor)
46	U-RST	O	Reset signal output (to control microprocessor)
47	U-SREQ	O	Slave request signal/data output (to control microprocessor)
48	U-MREQ	O	Master request signal output (to control microprocessor)
49	U-DATA	O	Master data output (to control microprocessor)
50	U-CLK	O	Master clock output (to control microprocessor)
51	GND	—	Ground
52	AUB IN	I	AUB power supply input
53	AUB OUT	O	AUB power supply output
54	GND	—	Ground
55 to 60	—	—	Not used (Connected to Ground)
61	GND	—	Ground
62	RESET	I	Reset signal input
63	DVSS	—	Digital Ground
64	XO	—	External 4 MHz crystal oscillator for system clock is connected to this terminal
65	XI	—	External 4 MHz crystal oscillator for system clock is connected to this terminal
66	DVCC	—	Backup power supply +5 V
67 to 80	—	—	Not used (Connected to Ground)

IC118 DSP56009FJ88F (DIGITAL SIGNAL PROCESSOR)/MAIN BOARD

Pin No.	Pin Name	I/O	Description
1	AGND	—	Address buffer Ground
2	MSC0	O	Chip select 0 output to SRAM (Not used)
3	MSC3	O	Chip select 3 output to SRAM (Not used)
4	MA14	O	Address data output to SRAM (Not used)
5	MA13	O	Address data output to SRAM (Not used)
6	AVCC	—	Address bus buffer power supply (+5 V)
7	MA12	O	Address data output to SRAM (Not used)
8	AGND	—	Address bus buffer Ground
9	QVCC	—	Power supply for internal logic (5 V)
10	QGND	—	Ground for internal logic
11	MA11	O	Address data output to SRAM (Not used)
12	MA10	O	Address data output to SRAM (Not used)
13	MA9	O	Address data output to SRAM (Not used)
14	MA8	O	Address data output to SRAM (Not used)
15	AGND	—	Address bus buffer Ground
16	MA7	O	Address data output to SRAM (Not used)
17	AVCC	—	Address bus buffer power supply (+5 V)
18	MA6	O	Address data output to SRAM (Not used)
19	MA5	O	Address data output to SRAM (Not used)
20	MA4	O	Address data output to SRAM (Not used)
21	AGND	—	Address bus buffer Ground
22	MA3	O	Address data output to SRAM (Not used)
23	MA2	O	Address data output to SRAM (Not used)
24	MA1	O	Address data output to SRAM (Not used)
25	MA0	O	Address data output to SRAM (Not used)
26	SCK	I	SPI serial clock signal input from system controller
27	EXTAL	I	External frequency input (3 MHz)
28	QVCC	—	Power supply for internal logic (5 V)
29	QGND	—	Ground for internal logic
30	PINIT	I	PLL initialize input (Fixed to “L”)
31	PGND	—	Ground for PLL
32	PCAP	I	PLL filter input (Connected to 0.01 uF capacitor)
33	PVCC	—	Power supply for PLL (+5 V)
34	SGND	—	Ground for serial port
35	MISO	I	Master data input from system controller
36	RESET	I	Reset signal input from system controller
37	MODA	I	Mode select A (Fixed to “H”)
38	MODB	I	Mode select B (Fixed to “L”)
39	MODC	I	Mode select C (Fixed to “H”)
40	SVCC	—	Power supply for serial port (+5 V)

Pin No.	Pin Name	I/O	Description
41	MOSI	O	Master data signal output to system controller
42	SS	I	SPI slave select signal input from system controller
43	HREQ	I	Host request signal input from system controller
44	SGND	—	Ground for serial port
45	SDO2	O	Audio serial data 2 signal output (Not used)
46	SDO1	O	Audio serial data 1 signal output
47	SDO0	O	Audio serial data 0 signal output
48	SVCC	—	Power supply for serial port (+5 V)
49	SCKT	O	Serial clock transfer output
50	WST	O	Word select transfer output
51	SCKR	I	Serial clock reception input
52	QGND	—	Ground for internal logic
53	QVCC	—	Power supply for internal logic (+5 V)
54	SGND	—	Ground for serial port
55	WSR	I	Word select reception
56	SDI1	I	Audio serial data 1 signal input
57	SDI0	I	Audio serial data 0 signal input
58	DSO	O	Debug serial signal output (Not used)
59	DSI	I	Debug serial signal input (Not used)
60	DSCK	I	Debug serial clock signal input (Not used)
61	DR	I	Debug request input (Fixed to “H”)
62	MD7	I/O	Data input/output with SRAM (Not used)
63	MD6	I/O	Data input/output with SRAM (Not used)
64	MD5	I/O	Data input/output with SRAM (Not used)
65	MD4	I/O	Data input/output with SRAM (Not used)
66	DGND	—	Ground for data bus buffer (+5 V)
67	MD3	I/O	Data input/output with SRAM (Not used)
68	MD2	I/O	Data input/output with SRAM (Not used)
69	MD1	I/O	Data input/output with SRAM (Not used)
70	DVCC	—	Power supply for data bus buffer (+5 V)
71	MD0	I/O	Data input/output with SRAM (Not used)
72	DGND	—	Ground for data bus buffer
73	GPIO3	I/O	Input/output with general DIGITAL SIGNAL PROCESSOR (Not used)
74	GPIO2	I/O	Input/output with general DIGITAL SIGNAL PROCESSOR (Not used)
75	GPIO1	I/O	Input/output with general DIGITAL SIGNAL PROCESSOR (Not used)
76	GPIO0	I/O	Input/output with general DIGITAL SIGNAL PROCESSOR (Not used)
77	MRD	O	Write strobe signal output to SRAM (Not used)
78	MWR	O	Read strobe signal output to SRAM (Not used)
79	MRAS	O	Low address strobe signal output to SRAM (Not used)
80	MCAS	O	Column address strobe signal output to SRAM (Not used)

IC119 SSP424023FJ88 (DIGITAL SIGNAL PROCESSOR)/MAIN BOARD

Pin No.	Pin Name	I/O	Description
1	AGND	—	Address buffer Ground
2	MSC0	O	Chip select 0 output to SRAM (Not used)
3	MSC3	O	Chip select 3 output to SRAM
4	MA14	O	Address data output to SRAM
5	MA13	O	Address data output to SRAM
6	AVCC	—	Address bus buffer power supply (+5 V)
7	MA12	O	Address data output to SRAM
8	AGND	—	Address bus buffer Ground
9	QVCC	—	Power supply for internal logic (5 V)
10	QGND	—	Ground for internal logic
11	MA11	O	Address data output to SRAM
12	MA10	O	Address data output to SRAM
13	MA9	O	Address data output to SRAM
14	MA8	O	Address data output to SRAM
15	AGND	—	Address bus buffer Ground
16	MA7	O	Address data output to SRAM
17	AVCC	—	Address bus buffer power supply (+5 V)
18	MA6	O	Address data output to SRAM
19	MA5	O	Address data output to SRAM
20	MA4	O	Address data output to SRAM
21	AGND	—	Address bus buffer Ground
22	MA3	O	Address data output to SRAM
23	MA2	O	Address data output to SRAM
24	MA1	O	Address data output to SRAM
25	MA0	O	Address data output to SRAM
26	SCK	I	SPI serial clock signal input from system controller
27	EXTAL	I	External frequency input (3 MHz)
28	QVCC	—	Power supply for internal logic (5 V)
29	QGND	—	Ground for internal logic
30	PINIT	I	PLL initialize input (Fixed to “L”)
31	PGND	—	Ground for PLL
32	PCAP	I	PLL filter input (Connected to 0.01 uF capacitor)
33	PVCC	—	Power supply for PLL (+5 V)
34	SGND	—	Ground for serial port
35	MISO	I	Master data input from system controller
36	RESET	I	Reset signal input from system controller
37	MODA	I	Mode select A (Fixed to “H”)
38	MODB	I	Mode select B (Fixed to “L”)
39	MODC	I	Mode select C (Fixed to “H”)
40	SVCC	—	Power supply for serial port (+5 V)

Pin No.	Pin Name	I/O	Description
41	MOSI	O	Master data signal output to system controller
42	SS	I	SPI slave select signal input from system controller
43	HREQ	I	Host request signal input from system controller
44	SGND	—	Ground for serial port
45	SDO2	O	Audio serial data 2 signal output
46	SDO1	O	Audio serial data 1 signal output
47	SDO0	O	Audio serial data 0 signal output
48	SVCC	—	Power supply for serial port (+5 V)
49	SCKT	O	Serial clock transfer output
50	WST	O	Word select transfer output
51	SCKR	I	Serial clock reception input
52	QGND	—	Ground for internal logic
53	QVCC	—	Power supply for internal logic (+5 V)
54	SGND	—	Ground for serial port
55	WSR	I	Word select reception
56	SDI1	I	Audio serial data 1 signal input
57	SDI0	I	Audio serial data 0 signal input
58	DSO	O	Debug serial signal output (Not used)
59	DSI	I	Debug serial signal input (Not used)
60	DSCK	I	Debug serial clock signal input (Not used)
61	DR	I	Debug request input (Fixed to “H”)
62	MD7	I/O	Data input/output with SRAM
63	MD6	I/O	Data input/output with SRAM
64	MD5	I/O	Data input/output with SRAM
65	MD4	I/O	Data input/output with SRAM
66	DGND	—	Ground for data bus buffer (+5 V)
67	MD3	I/O	Data input/output with SRAM
68	MD2	I/O	Data input/output with SRAM
69	MD1	I/O	Data input/output with SRAM
70	DVCC	—	Power supply for data bus buffer (+5 V)
71	MD0	I/O	Data input/output with SRAM
72	DGND	—	Ground for data bus buffer
73	GPIO3	I/O	Input/output with general DIGITAL SIGNAL PROCESSOR (Not used)
74	GPIO2	I/O	Input/output with general DIGITAL SIGNAL PROCESSOR (Not used)
75	GPIO1	I/O	Input/output with general DIGITAL SIGNAL PROCESSOR (Not used)
76	GPIO0	I/O	Input/output with general DIGITAL SIGNAL PROCESSOR
77	MRD	O	Write strobe signal output to SRAM
78	MWR	O	Read strobe signal output to SRAM
79	MRAS	O	Low address strobe signal output to SRAM (Not used)
80	MCAS	O	Column address strobe signal output to SRAM

IC151 MB90573PF-G-104-BND (DIGITAL SIGNAL PROCESSOR)/MAIN BOARD

Pin No.	Pin Name	I/O	Description
1	—	—	Not used (Connected to Ground)
2	RF RESET	O	RF demodulator/DIR reset output
3 to 7	—	—	Not used (Connected to Ground)
8	VCC	—	Power supply +5 V
9	SIN0	—	Not used (Open)
10	SOT0	—	Not used (Open)
11	—	—	Not used (Open)
12	SIN1	—	Not used (Open)
13	SOT1	—	Not used (Open)
14	—	—	Not used (Connected to Ground)
15	ANA/DIG	O	Analog/digital select output
16	—	—	Not used (Connected to Ground)
17	HREQ	I	DSP56009 Host request input
18	SS	O	DSP56009 Slave select output
19	MOSI	O	DSP56009 MOSI output
20	RESET	O	DSP56009 MOSI reset output
21	MISO	I	DSP56009 MISO input
22	CLOCK	O	DSP56009 Clock output
23	HREQ	I	DSP56007 Host request input
24	SS	O	DSP56007 Slave select output
25	MOSI	O	DSP56007 MOSI output
26	RESET	O	DSP56007 reset output
27	MISO	I	DSP56007 MISO input
28	CLOCK	O	DSP56007 Clock output
29	LOW-FREQ-IED 0	I	DSP56007 GP100 input
30	LOW-FREQ-IED 1	I	DSP56007 GP101 input
31	LOW-FREQ-IED 2	I	DSP56007 GP102 input
32	—	—	Not used (Connected to Ground)
33	VSS	—	Ground
34	C	—	External capacitance 0.1 μ F for power regulation is connected to this terminal
35	F-LAT	O	Front volume, data latch
36	F-DAT	O	Front volume, data
37	F-CLK	O	Front volume, clock
38	DVCC	—	Digital power supply +5 V
39	DVSS	—	Digital Ground
40	D/A INT	O	D/A PCM1716E initialization output
41	D/A LAT	O	D/A PCM1716E latch output
42	AVCC	—	Analog power supply +5 V
43	AVR+	—	Power supply for A/D converter +5 V
44	AVR-	—	Ground for A/D converter
45	AVSS	—	Ground
46	D/A CLK	O	D/A PCM1716E clock output
47	D/A DATA	O	D/A PCM1716E data output

Pin No.	Pin Name	I/O	Description
48 to 50	—	—	Not used (Connected to Ground)
51	DISP MR	I	Panel display MB90673PF macro request input
52	DISP DATA	I	Panel display MB90673PF data input
53	SLVDTA/REQ	O	Panel display MB90673PF slave data request output
54	VCC	—	Power supply +5 V
55	DISP CLK	I	Panel display MB90673PF clock input
56	LAT	O	LC7573 latch output
57	DATA	O	LC7573 data output
58	CLK	O	LC7573 clock output
59 to 62	—	—	Not used (Connected to Ground)
63	VSS	—	Ground
64	STOP	I	AC power supply check. STOP input
65	CCB/SUB	O	LC8904Q I/F select
66	EMPHA	—	Not used (Open)
67	ERROR	I	LC8904Q error input
68	SUB1	—	Not used (Open)
69	SUB2	—	Not used (Open)
70 to 72	—	—	Not used (Connected to Ground)
73	XIA	—	Not used (Open)
74	XOA	—	Not used (Open)
75	SRDT	I	LC8904Q C-bit input
76	SWDT	O	LC8904Q data output
77	XLAT	O	LC8904Q latch output
78	SCLK	O	LC8904Q clock output
79	PROTEC	I	Protector input
80 to 85	—	—	Not used (Connected to Ground)
86	HSTX	—	Hardware standby Connected to power supply
87	MD2	—	Flash memory rewrite L/H selection
88	MD1	—	Flash memory rewrite L/H selection
89	MD0	—	Flash memory rewrite L/H selection
90	RESET	I	Panel display MB90673PF reset
91	VSS	—	Ground
92	XO	—	External 4 MHz ceramic oscillator is connected to this terminal
93	XI	—	External 4 MHz ceramic oscillator is connected to this terminal
94	VCC	—	Power supply +5 V
95	PO0	I	Flash memory rewrite L/H select
96	PO1	I	Flash memory rewrite L/H select
97	—	—	Not used (Connected to Ground)
98	SURR MUTING	O	Surround muting
99	—	—	Not used (Connected to Ground)
100	RY-3/5	O	5 CH: L, 3 CH: H
101	RY-FRONT	O	Front speaker relay
102	—	—	Not used (Connected to Ground)
103	RY-CENTER	O	Center speaker relay
104	RY-REAR	O	Rear speaker relay
105	RY-MUTING	O	Sub woofer relay
106	—	—	Not used (Connected to Ground)

Pin No.	Pin Name	I/O	Description
107	RY-POWER	O	Power supply relay
108 to 111	—	—	Not used (Connected to Ground)
112	TEST0	O	Test port 0
113	TEST1	O	Test port 1
114	TEST2	O	Test port 2
115	TEST3	O	Test port 3
116 to 118	—	—	Not used (Connected to Ground)
119	VSS	—	Ground
120	—	—	Not used (Connected to Ground)

SECTION 4 EXPLODED VIEWS

NOTE:


- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

When indicating parts by reference number, please include the board name.

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.


以阴影和 $\triangle$ 标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

4-1. FRONT PANEL SECTION

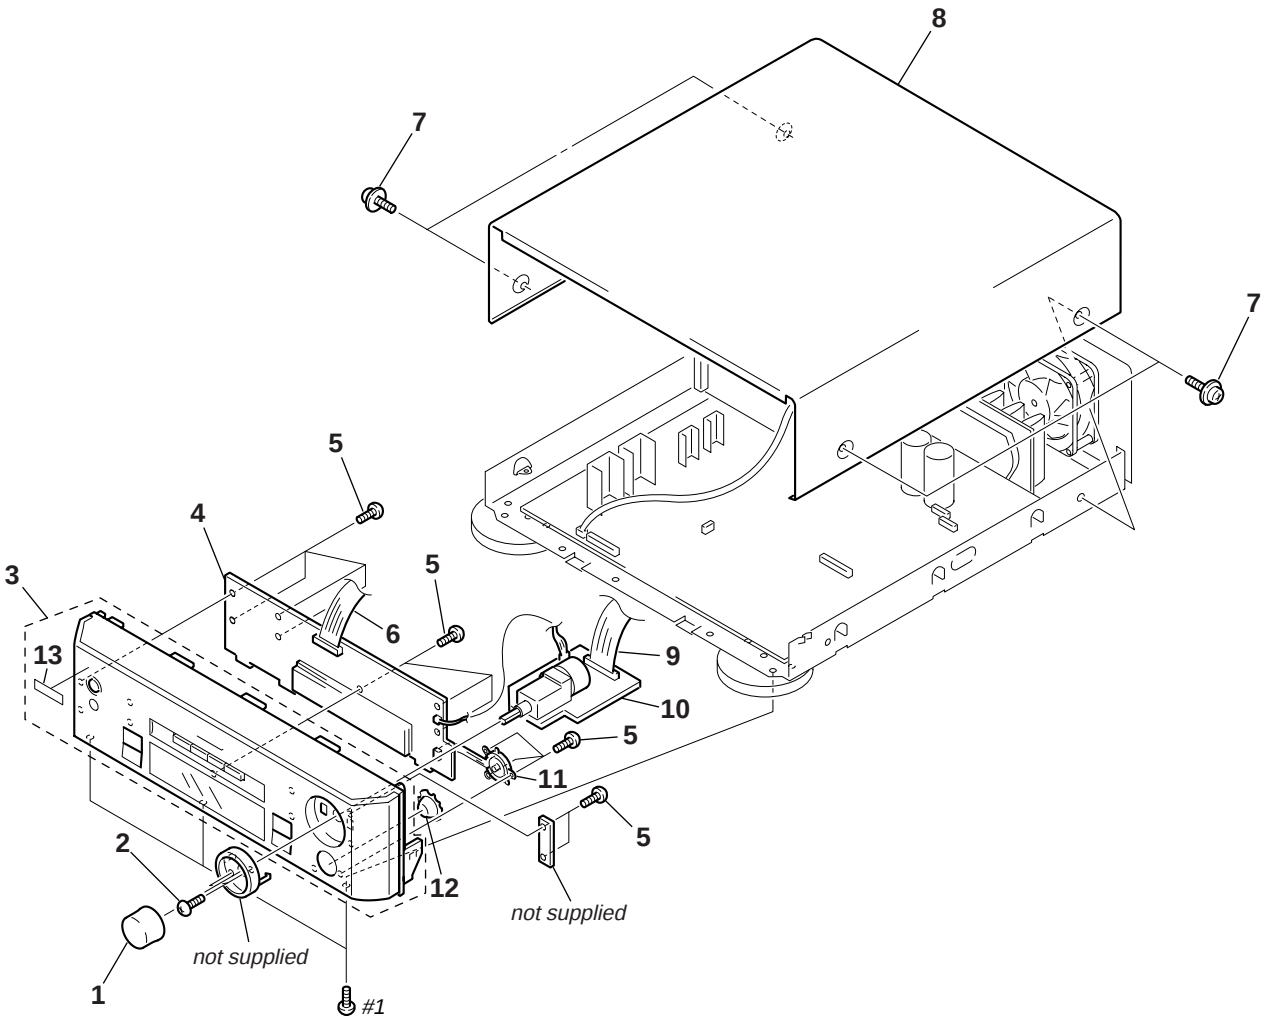

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	4-997-946-01	KNOB (VOL)		* 8	3-939-652-31	CASE	
2	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING		9	1-773-108-11	WIRE (FLAT TYPE) (19 CORE)	
3	X-4950-206-2	PANEL ASSY, FRONT		* 10	1-669-458-11	VOLUME BOARD	
* 4	A-4407-554-A	PANEL BOARD, COMPLETE		11	1-771-358-11	SWITCH, TACTILE (WITH LEAD)	
5	4-951-620-01	SCREW (2.6 × 8), +BVP		12	4-997-947-01	KNOB (CURSOR)	
6	1-777-353-11	WIRE (FLAT TYPE) (15 CORE)					
7	3-363-099-01	SCREW (CASE 3 TP2)		13	4-969-961-01	EMBLEM (NO.4), SONY	

4-2. REAR PANEL SECTION

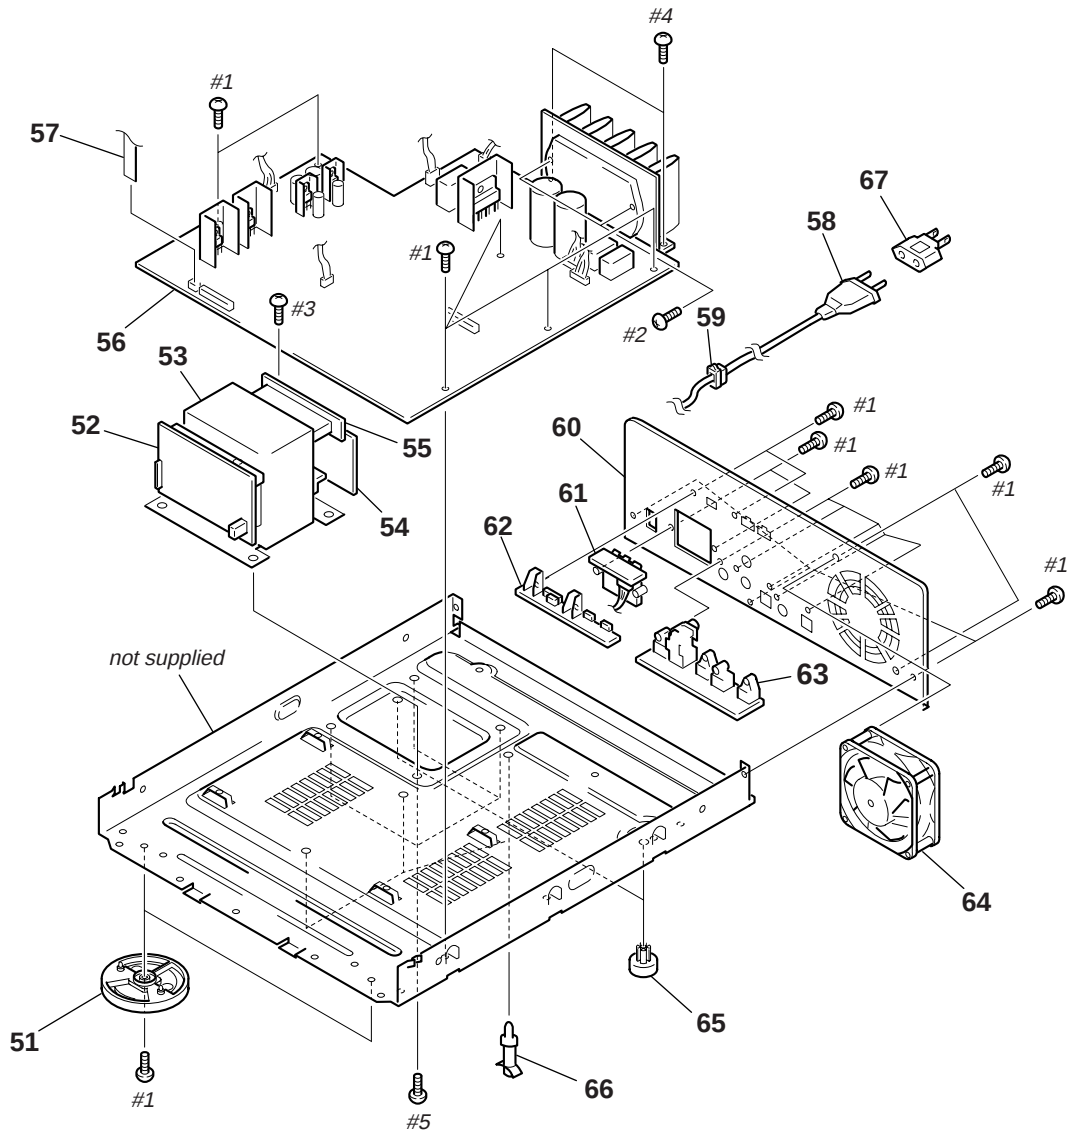

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	4-977-699-11	LEG (F)		59	3-703-244-00	BUSHING (2104), CORD	
* 52	1-669-462-11	SECONDARY BOARD		* 60	4-997-950-11	PANEL, BACK	
△ 53	1-431-855-11	TRANSFORMER, POWER		* 61	1-669-459-11	SPEAKER BOARD	
* 54	1-669-463-11	AC BOARD		* 62	1-669-460-11	SWITCH BOARD	
* 55	1-669-461-11	PRIMARY BOARD		* 63	1-669-457-11	JACK BOARD	
* 56	A-4414-484-A	MAIN BOARD, COMPLETE		64	1-698-792-11	FAN, DC	
57	1-769-868-11	WIRE (FLAT TYPE) (5 CORE)		65	3-964-353-01	FOOT	
△ 58	1-575-651-21	CORD, POWER		* 66	4-924-098-11	HOLDER, PC BOARD	
				△ 67	1-569-008-21	ADAPTOR, CONVERSION 2P	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

SECTION 5 ELECTRICAL PARTS LIST

AC

JACK

MAIN

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- CAPACITORS:
uF: μ F
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: μ H

- SEMICONDUCTORS
In each case, u: μ , for example:
uA..., μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

以阴影和 Δ 标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

When indicating parts by reference number, please include the board name.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
*	1-669-463-11	AC BOARD *****				< COIL >	
	1-533-293-11	FUSE HOLDER		L101	1-410-393-11	INDUCTOR CHIP 100uH	
		< CONNECTOR >		L103	1-410-381-11	INDUCTOR CHIP 10uH	
				L108	1-410-381-11	INDUCTOR CHIP 10uH	
						< RESISTOR >	
* CN991	1-580-230-31	PIN, CONNECTOR (PC BOARD) 2P		R101	1-216-022-00	METAL CHIP 75 5% 1/10W	
		< FUSE >		R102	1-216-025-91	RES, CHIP 100 5% 1/10W	
Δ F991	1-532-388-51	FUSE TIME LAG 2A 250V		R103	1-216-073-00	METAL CHIP 10K 5% 1/10W	
Δ F992	1-532-463-51	FUSE TIME LAG 1A 250V		R104	1-216-025-91	RES, CHIP 100 5% 1/10W	
		< SWITCH >		R105	1-216-022-00	METAL CHIP 75 5% 1/10W	
Δ S991	1-572-675-11	SWITCH, POWER(VOLTAGE SELECT)		R106	1-216-121-91	RES, CHIP 1M 5% 1/10W	
*****				R112	1-216-022-00	METAL CHIP 75 5% 1/10W	
				R121	1-216-049-91	RES, CHIP 1K 5% 1/10W	
				R122	1-216-049-91	RES, CHIP 1K 5% 1/10W	
				R123	1-216-049-91	RES, CHIP 1K 5% 1/10W	
*	1-669-457-11	JACK BOARD *****		*****			
		< CAPACITOR >		* A-4414-484-A	MAIN BOARD, COMPLETE	*****	
C101	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V		* 3-309-144-21	HEAT SINK		
C102	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V		* 4-880-403-11	HEAT SINK		
C103	1-126-933-11	ELECT 100uF 20% 16V		7-685-871-01	SCREW +BVTT 3 $\times$ 6 (S)		
C104	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V			< CAPACITOR >		
C105	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V		C111	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C106	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V		C140	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C107	1-104-664-11	ELECT 47uF 20% 25V		C141	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C109	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V		C142	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C121	1-163-251-11	CERAMIC CHIP 100PF 5% 50V		C143	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C122	1-163-251-11	CERAMIC CHIP 100PF 5% 50V		C144	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C123	1-163-251-11	CERAMIC CHIP 100PF 5% 50V		C145	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
		< CONNECTOR >		C146	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
CN104	1-691-766-11	PLUG (MICRO CONNECTOR) 4P		C147	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
CN302	1-691-767-11	PLUG (MICRO CONNECTOR) 5P		C148	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
		< IC >		C149	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
IC101	8-749-923-05	IC TORX178 (OPTICAL IN)		C150	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
IC102	8-749-923-04	IC TOTX178 (OPTICAL OUT)		C151	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
IC105	8-759-242-70	IC TC7WU04F		C152	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
IC108	8-759-232-65	IC TC74HC157AF		C153	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
		< JACK >		C154	1-126-925-11	ELECT 470uF 20% 10V	
J101	1-770-905-11	JACK, PIN 1P (COAXIAL IN)		C155	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
J102	1-770-272-11	JACK, PIN 2P (FRONT OUT)		C156	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
J103	1-774-785-11	JACK, PIN 1P (WOOFER OUT)		C157	1-163-227-11	CERAMIC CHIP 10PF 0.5PF 50V	
				C158	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	

MAIN

Ref. No.	Part No.	Description	Remarks			
C159	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C160	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	
C161	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C162	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C163	1-126-925-11	ELECT	470uF	20%	10V	
C164	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C165	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C166	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V	
C167	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C168	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C169	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C170	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C171	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C181	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C182	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C183	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C184	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C185	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C186	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C187	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C189	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C191	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C192	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	
C193	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	
C194	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	
C201	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	
C202	1-104-664-11	ELECT	47uF	20%	16V	
C203	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C204	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C205	1-104-664-11	ELECT	47uF	20%	16V	
C206	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C207	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C208	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C209	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	
C210	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	
C211	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C212	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C221	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C222	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C301	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C302	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C303	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C304	1-126-964-11	ELECT	10uF	20%	50V	
C305	1-126-964-11	ELECT	10uF	20%	50V	
C307	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C308	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C309	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	
C310	1-124-721-11	ELECT	10uF	20%	50V	
C311	1-124-721-11	ELECT	10uF	20%	50V	
C312	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C316	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C317	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C318	1-130-475-00	MYLAR	0.0022uF	5%	50V	
C319	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C320	1-130-475-00	MYLAR	0.0022uF	5%	50V	
C321	1-126-049-11	ELECT	22uF	20%	50V	
C322	1-124-721-11	ELECT	10uF	20%	50V	
C323	1-124-721-11	ELECT	10uF	20%	50V	
C328	1-124-721-11	ELECT	10uF	20%	50V	
C329	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	

Ref. No.	Part No.	Description	Remarks			
C330	1-124-721-11	ELECT	10uF	20%	50V	
C332	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C333	1-163-121-00	CERAMIC CHIP	150PF	5%	50V	
C342	1-104-664-11	ELECT	47uF	20%	25V	
C355	1-126-964-11	ELECT	10uF	20%	50V	
C356	1-126-964-11	ELECT	10uF	20%	50V	
C368	1-130-475-00	MYLAR	0.0022uF	5%	50V	
C370	1-130-475-00	MYLAR	0.0022uF	5%	50V	
C371	1-126-049-11	ELECT	22uF	20%	50V	
C372	1-124-721-11	ELECT	10uF	20%	50V	
C373	1-124-721-11	ELECT	10uF	20%	50V	
C378	1-124-721-11	ELECT	10uF	20%	50V	
C379	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	
C380	1-124-721-11	ELECT	10uF	20%	50V	
C381	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C382	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C383	1-163-121-00	CERAMIC CHIP	150PF	5%	50V	
C392	1-104-664-11	ELECT	47uF	20%	25V	
C601	1-124-721-11	ELECT	10uF	20%	50V	
C602	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	
C603	1-104-664-11	ELECT	47uF	20%	25V	
C604	1-163-259-91	CERAMIC CHIP	220PF	5%	50V	
C605	1-136-165-00	FILM	0.1uF	5%	50V	
C606	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C611	1-124-721-11	ELECT	10uF	20%	50V	
C612	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	
C613	1-104-664-11	ELECT	47uF	20%	25V	
C614	1-163-259-91	CERAMIC CHIP	220PF	5%	50V	
C615	1-136-165-00	FILM	0.1uF	5%	50V	
C616	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C621	1-124-721-11	ELECT	10uF	20%	50V	
C622	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	
C623	1-104-664-11	ELECT	47uF	20%	25V	
C624	1-163-259-91	CERAMIC CHIP	220PF	5%	50V	
C625	1-136-165-00	FILM	0.1uF	5%	50V	
C626	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C681	1-126-968-11	ELECT	100uF	20%	50V	
C682	1-126-968-11	ELECT	100uF	20%	50V	
C683	1-126-968-11	ELECT	100uF	20%	50V	
C684	1-126-968-11	ELECT	100uF	20%	50V	
C685	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C702	1-126-933-11	ELECT	100uF	20%	16V	
C703	1-126-933-11	ELECT	100uF	20%	16V	
C704	1-126-961-11	ELECT	2.2uF	20%	50V	
C705	1-126-933-11	ELECT	100uF	20%	16V	
C721	1-126-964-11	ELECT	10uF	20%	50V	
C722	1-126-933-11	ELECT	100uF	20%	16V	
C723	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C900	1-115-364-11	ELECT	22000uF	20%	16V	
C901	1-115-364-11	ELECT	22000uF	20%	16V	
C902	1-126-105-11	ELECT	1000uF	20%	35V	
C903	1-126-105-11	ELECT	1000uF	20%	35V	
C904	1-126-968-11	ELECT	100uF	20%	50V	
C905	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C906	1-165-319-11	CERAMIC CHIP	0.1uF		50V	
C907	1-165-319-11	CERAMIC CHIP	0.1uF		50V	
C908	1-126-967-11	ELECT	47uF	20%	50V	
C909	1-126-925-11	ELECT	470uF	20%	10V	
C910	1-126-103-11	ELECT	470uF	20%	16V	
C911	1-126-103-11	ELECT	470uF	20%	16V	

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
C912	1-126-964-11	ELECT	10uF	20%	50V	C2311	1-124-721-11	ELECT	10uF	20%	50V
C913	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C2312	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C914	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C2316	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C915	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C2317	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C917	1-126-967-11	ELECT	47uF	20%	50V	C2318	1-130-475-00	MYLAR	0.0022uF	5%	50V
C918	1-126-927-11	ELECT	2200uF	20%	10V	C2319	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C919	1-136-165-00	FILM	0.1uF	5%	50V	C2320	1-130-475-00	MYLAR	0.0022uF	5%	50V
C920	1-136-165-00	FILM	0.1uF	5%	50V	C2321	1-126-049-11	ELECT	22uF	20%	50V
C921	1-136-165-00	FILM	0.1uF	5%	50V	C2322	1-124-721-11	ELECT	10uF	20%	50V
C922	1-136-165-00	FILM	0.1uF	5%	50V	C2323	1-124-721-11	ELECT	10uF	20%	50V
C923	1-117-691-11	ELECT (BLOCK)	8200uF	20%	50V	C2328	1-124-721-11	ELECT	10uF	20%	50V
C924	1-117-691-11	ELECT (BLOCK)	8200uF	20%	50V	C2329	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C926	1-136-165-00	FILM	0.1uF	5%	50V	C2330	1-124-721-11	ELECT	10uF	20%	50V
C931	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C2332	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C1301	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C2333	1-163-245-11	CERAMIC CHIP	56PF	5%	50V
C1302	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C2355	1-126-964-11	ELECT	10uF	20%	50V
C1303	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C2356	1-126-964-11	ELECT	10uF	20%	50V
C1304	1-126-964-11	ELECT	10uF	20%	50V	C2368	1-130-475-00	MYLAR	0.0022uF	5%	50V
C1305	1-126-964-11	ELECT	10uF	20%	50V	C2370	1-130-475-00	MYLAR	0.0022uF	5%	50V
C1307	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C2371	1-126-049-11	ELECT	22uF	20%	50V
C1308	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C2372	1-124-721-11	ELECT	10uF	20%	50V
C1309	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C2373	1-124-721-11	ELECT	10uF	20%	50V
C1310	1-124-721-11	ELECT	10uF	20%	50V	C2378	1-124-721-11	ELECT	10uF	20%	50V
C1311	1-124-721-11	ELECT	10uF	20%	50V	C2379	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C1312	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C2380	1-124-721-11	ELECT	10uF	20%	50V
C1316	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C2381	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C1317	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C2382	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C1318	1-130-475-00	MYLAR	0.0022uF	5%	50V	C2383	1-163-245-11	CERAMIC CHIP	56PF	5%	50V
C1319	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	< CONNECTOR >					
C1320	1-130-475-00	MYLAR	0.0022uF	5%	50V	CN101	1-568-834-11	SOCKET, CONNECTOR 15P			
C1321	1-126-049-11	ELECT	22uF	20%	50V	CN102	1-568-802-11	SOCKET, CONNECTOR 19P			
C1322	1-124-721-11	ELECT	10uF	20%	50V	CN103	1-691-766-11	PLUG (MICRO CONNECTOR) 4P			
C1323	1-124-721-11	ELECT	10uF	20%	50V	CN111	1-564-510-11	PLUG, CONNECTOR 7P			
C1328	1-124-721-11	ELECT	10uF	20%	50V	* CN121	1-568-824-11	SOCKET, CONNECTOR 5P			
C1329	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	CN301	1-691-767-11	PLUG (MICRO CONNECTOR) 5P			
C1330	1-124-721-11	ELECT	10uF	20%	50V	CN601	1-691-768-11	PLUG (MICRO CONNECTOR) 6P			
C1332	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	CN701	1-564-506-11	PLUG, CONNECTOR 3P			
C1333	1-163-245-11	CERAMIC CHIP	56PF	5%	50V	CN902	1-691-771-11	PLUG (MICRO CONNECTOR) 9P			
C1355	1-126-964-11	ELECT	10uF	20%	50V	< DIODE >					
C1356	1-126-964-11	ELECT	10uF	20%	50V	D108	8-719-210-39	DIODE EC10QS-04			
C1368	1-130-475-00	MYLAR	0.0022uF	5%	50V	D109	8-719-210-33	DIODE EC10DS2			
C1370	1-130-475-00	MYLAR	0.0022uF	5%	50V	D110	8-719-988-62	DIODE 1SS355			
C1371	1-126-049-11	ELECT	22uF	20%	50V	D111	8-719-988-62	DIODE 1SS355			
C1372	1-124-721-11	ELECT	10uF	20%	50V	D182	8-719-988-62	DIODE 1SS355			
C1373	1-124-721-11	ELECT	10uF	20%	50V	D183	8-719-988-62	DIODE 1SS355			
C1378	1-124-721-11	ELECT	10uF	20%	50V	D301	8-719-988-62	DIODE 1SS355			
C1379	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	D302	8-719-988-62	DIODE 1SS355			
C1380	1-124-721-11	ELECT	10uF	20%	50V	D303	8-719-988-62	DIODE 1SS355			
C1381	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	D681	8-719-988-62	DIODE 1SS355			
C1382	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	D682	8-719-988-62	DIODE 1SS355			
C1383	1-163-245-11	CERAMIC CHIP	56PF	5%	50V	D683	8-719-988-62	DIODE 1SS355			
C2301	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	D701	8-719-988-62	DIODE 1SS355			
C2302	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	D711	8-719-988-62	DIODE 1SS355			
C2303	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	D712	8-719-988-62	DIODE 1SS355			
C2304	1-126-964-11	ELECT	10uF	20%	50V	D726	8-719-988-62	DIODE 1SS355			
C2305	1-126-964-11	ELECT	10uF	20%	50V	D727	8-719-988-62	DIODE 1SS355			
C2307	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	D728	8-719-988-62	DIODE 1SS355			
C2308	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	D729	8-719-988-62	DIODE 1SS355			
C2309	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	D730	8-719-988-62	DIODE 1SS355			
C2310	1-124-721-11	ELECT	10uF	20%	50V						

MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
D901	8-719-510-68	DIODE D5SBA20F01		IC903	8-759-245-86	IC TA7912S	
D902	8-719-028-23	DIODE D3SBA20-4101		IC1301	8-759-531-50	IC PCM1716E-BT2	
D903	8-719-200-02	DIODE 10E2		IC1303	8-759-636-55	IC M5218AFP	
D904	8-719-200-02	DIODE 10E2		IC1304	8-759-636-55	IC M5218AFP	
D905	8-719-200-02	DIODE 10E2		IC1305	8-759-463-71	IC LC7535M-TLM	
D906	8-719-200-02	DIODE 10E2		IC1306	8-759-636-55	IC M5218AFP	
D907	8-719-200-02	DIODE 10E2		IC2301	8-759-531-50	IC PCM1716E-BT2	
D908	8-719-200-02	DIODE 10E2		IC2303	8-759-636-55	IC M5218AFP	
D909	8-719-200-02	DIODE 10E2		IC2304	8-759-636-55	IC M5218AFP	
D910	8-719-200-02	DIODE 10E2		IC2305	8-759-463-71	IC LC7535M-TLM	
D913	8-719-978-98	DIODE DTZ-TT11-33C		IC2306	8-759-636-55	IC M5218AFP	
D914	8-719-977-13	DIODE DTZ6.8C				< COIL >	
D916	8-719-976-99	DIODE DTZ5.1B		L102	1-216-296-91	SHORT 0	
D921	8-719-988-62	DIODE 1SS355		L104	1-410-381-11	INDUCTOR CHIP 10uH	
D1111	8-719-988-62	DIODE 1SS355		L105	1-410-381-11	INDUCTOR CHIP 10uH	
D1301	8-719-988-62	DIODE 1SS355		L106	1-410-381-11	INDUCTOR CHIP 10uH	
D1302	8-719-988-62	DIODE 1SS355		L107	1-410-381-11	INDUCTOR CHIP 10uH	
D2111	8-719-988-62	DIODE 1SS355					
		< GROUND >		L109	1-410-381-11	INDUCTOR CHIP 10uH	
E901	1-537-770-21	TERMINAL BOARD, GROUND		L110	1-410-381-11	INDUCTOR CHIP 10uH	
		< FERRITE BEAD >		L111	1-410-381-11	INDUCTOR CHIP 10uH	
F164	1-424-544-11	FERRITE 0UH		L112	1-410-381-11	INDUCTOR CHIP 10uH	
F165	1-424-544-11	FERRITE 0UH		L201	1-410-381-11	INDUCTOR CHIP 10uH	
F166	1-424-544-11	FERRITE 0UH					
FB163	1-500-445-21	FERRITE		L611	1-420-872-00	COIL, AIR-CORE	
FB177	1-500-445-21	FERRITE		L621	1-420-872-00	COIL, AIR-CORE	
				L631	1-420-872-00	COIL, AIR-CORE	
FB189	1-500-445-21	FERRITE				< TRANSISTOR >	
FB190	1-500-445-21	FERRITE		Q111	8-729-216-22	TRANSISTOR 2SA1162-G	
FB193	1-500-445-21	FERRITE		Q113	8-729-216-22	TRANSISTOR 2SA1162-G	
FB199	1-500-445-21	FERRITE		Q117	8-729-027-43	TRANSISTOR DTC114EKA-T146	
FB210	1-500-445-21	FERRITE		Q118	8-729-027-43	TRANSISTOR DTC114EKA-T146	
				Q301	8-729-107-46	TRANSISTOR 2SC3624A-L15	
FB212	1-500-445-21	FERRITE					
FB301	1-410-397-21	FERRITE BEAD INDUCTOR		Q302	8-729-107-46	TRANSISTOR 2SC3624A-L15	
FB901	1-410-397-21	FERRITE BEAD INDUCTOR		Q306	8-729-230-49	TRANSISTOR 2SC2712-YG	
FB1301	1-410-397-21	FERRITE BEAD INDUCTOR		Q307	8-729-230-49	TRANSISTOR 2SC2712-YG	
FB2301	1-410-397-21	FERRITE BEAD INDUCTOR		Q308	8-729-230-49	TRANSISTOR 2SC2712-YG	
				Q341	8-729-232-69	TRANSISTOR 2SK208GR3	
		< IC >					
IC107	8-759-242-70	IC TC7WU04F		Q351	8-729-107-46	TRANSISTOR 2SC3624A-L15	
IC109	8-759-242-70	IC TC7WU04F		Q352	8-729-107-46	TRANSISTOR 2SC3624A-L15	
IC110	8-759-233-64	IC TC74HCU04AF		Q391	8-729-232-69	TRANSISTOR 2SK208GR3	
IC111	8-759-242-70	IC TC7WU04F		Q601	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA	
IC112	8-759-237-43	IC TC74HC393AF(EL)		Q602	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA	
IC118	8-759-446-37	IC DSP56009FJ88F					
IC119	8-759-446-40	IC SSP424023FJ88		Q603	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA	
IC120	8-759-443-50	IC N341024SJ-20-TEL		Q681	8-729-230-49	TRANSISTOR 2SC2712-YG	
IC151	8-759-530-66	IC MB90573PF-G-104-BND		Q701	8-729-230-49	TRANSISTOR 2SC2712-YG	
IC191	8-759-242-70	IC TC7WU04F		Q702	8-729-027-38	TRANSISTOR DTA144EKA-T146	
				Q721	8-729-107-46	TRANSISTOR 2SC3624A-L15	
IC201	8-759-294-79	IC CXD8495AQ					
IC301	8-759-531-50	IC PCM1716E-BT2		Q722	8-729-118-00	TRANSISTOR 2SB1116-L	
IC303	8-759-636-55	IC M5218AFP		Q901	8-729-209-15	TRANSISTOR 2SD2012	
IC304	8-759-636-55	IC M5218AFP		Q902	8-729-209-15	TRANSISTOR 2SD2012	
IC305	8-759-463-71	IC LC7535M-TLM		Q903	8-729-111-29	TRANSISTOR 2SD1616A-K	
				Q905	8-729-230-49	TRANSISTOR 2SC2712-YG	
IC306	8-759-636-55	IC M5218AFP					
IC601	8-749-013-59	IC STK400-070		Q942	8-729-027-43	TRANSISTOR DTC114EKA-T146	
IC701	8-759-111-68	IC UPC1237HA		Q1113	8-729-216-22	TRANSISTOR 2SA1162-G	
IC901	8-759-231-53	IC TA7805S		Q1301	8-729-107-46	TRANSISTOR 2SC3624A-L15	
IC902	8-759-231-58	IC TA7812S		Q1302	8-729-107-46	TRANSISTOR 2SC3624A-L15	
				Q1306	8-729-230-49	TRANSISTOR 2SC2712-YG	

Ref. No.	Part No.	Description	Remarks				Ref. No.	Part No.	Description	Remarks			
Q1351	8-729-107-46	TRANSISTOR	2SC3624A-L15				R210	1-216-033-00	METAL CHIP	220	5%	1/10W	
Q1352	8-729-107-46	TRANSISTOR	2SC3624A-L15				R211	1-216-043-91	RES, CHIP	560	5%	1/10W	
Q2113	8-729-216-22	TRANSISTOR	2SA1162-G				R212	1-216-025-91	RES, CHIP	100	5%	1/10W	
Q2301	8-729-107-46	TRANSISTOR	2SC3624A-L15				R213	1-216-025-91	RES, CHIP	100	5%	1/10W	
Q2302	8-729-107-46	TRANSISTOR	2SC3624A-L15				R214	1-216-295-91	SHORT	0			
Q2306	8-729-230-49	TRANSISTOR	2SC2712-YG				R215	1-216-097-91	RES,CHIP	100K	5%	1/10W	
Q2351	8-729-107-46	TRANSISTOR	2SC3624A-L15				R271	1-216-073-00	METAL CHIP	10K	5%	1/10W	
Q2352	8-729-107-46	TRANSISTOR	2SC3624A-L15				R272	1-216-073-00	METAL CHIP	10K	5%	1/10W	
< RESISTOR >							R273	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R110	1-216-097-91	RES,CHIP	100K	5%	1/10W		R285	1-216-121-91	RES, CHIP	1M	5%	1/10W	
R111	1-216-121-91	RES,CHIP	1M	5%	1/10W		R286	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R114	1-216-073-00	METAL CHIP	10K	5%	1/10W		R287	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R115	1-216-073-00	METAL CHIP	10K	5%	1/10W		R301	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R150	1-216-025-91	RES,CHIP	100	5%	1/10W		R302	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R151	1-216-295-91	SHORT	0				R311	1-216-295-91	SHORT	0			
R152	1-216-295-91	SHORT	0				R318	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R153	1-216-025-91	RES,CHIP	100	5%	1/10W		R319	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R161	1-216-049-91	RES,CHIP	1K	5%	1/10W		R320	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R162	1-216-295-91	SHORT	0				R321	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	
R163	1-216-049-91	RES,CHIP	1K	5%	1/10W		R322	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R164	1-216-037-00	METAL CHIP	330	5%	1/10W		R323	1-216-041-00	METAL CHIP	470	5%	1/10W	
R165	1-216-037-00	METAL CHIP	330	5%	1/10W		R324	1-216-041-00	METAL CHIP	470	5%	1/10W	
R166	1-216-037-00	METAL CHIP	330	5%	1/10W		R325	1-216-065-91	RES, CHIP	4.7K	5%	1/10W	
R167	1-216-295-91	SHORT	0				R326	1-216-065-91	RES, CHIP	4.7K	5%	1/10W	
R168	1-216-295-91	SHORT	0				R327	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R169	1-216-295-91	SHORT	0				R328	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R170	1-216-295-91	SHORT	0				R331	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R171	1-216-295-91	SHORT	0				R338	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R172	1-216-295-91	SHORT	0				R339	1-216-049-91	RES, CHIP	1K	5%	1/10W	
R173	1-216-073-00	METAL CHIP	10K	5%	1/10W		R340	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R174	1-216-025-91	RES,CHIP	100	5%	1/10W		R341	1-216-121-91	RES, CHIP	1M	5%	1/10W	
R175	1-216-025-91	RES,CHIP	100	5%	1/10W		R342	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R176	1-216-025-91	RES,CHIP	100	5%	1/10W		R343	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R177	1-216-041-00	METAL CHIP	470	5%	1/10W		R344	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R178	1-216-073-00	METAL CHIP	10K	5%	1/10W		R345	1-216-025-91	RES, CHIP	100	5%	1/10W	
R179	1-216-295-91	SHORT	0				R346	1-216-065-91	RES, CHIP	4.7K	5%	1/10W	
R180	1-216-097-91	RES,CHIP	100K	5%	1/10W		R347	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R182	1-216-097-91	RES,CHIP	100K	5%	1/10W		R348	1-216-065-91	RES, CHIP	4.7K	5%	1/10W	
R183	1-216-097-91	RES,CHIP	100K	5%	1/10W		R349	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R184	1-216-073-00	METAL CHIP	10K	5%	1/10W		R350	1-216-065-91	RES, CHIP	4.7K	5%	1/10W	
R185	1-216-295-91	SHORT	0				R351	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R186	1-216-073-00	METAL CHIP	10K	5%	1/10W		R352	1-216-065-91	RES, CHIP	4.7K	5%	1/10W	
R187	1-216-097-91	RES,CHIP	100K	5%	1/10W		R368	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R188	1-216-049-91	RES,CHIP	1K	5%	1/10W		R369	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R189	1-216-025-91	RES,CHIP	100	5%	1/10W		R370	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R190	1-216-049-91	RES,CHIP	1K	5%	1/10W		R371	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	
R191	1-216-043-91	RES,CHIP	560	5%	1/10W		R372	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R192	1-216-121-91	RES,CHIP	1M	5%	1/10W		R373	1-216-041-00	METAL CHIP	470	5%	1/10W	
R193	1-216-025-91	RES,CHIP	100	5%	1/10W		R374	1-216-041-00	METAL CHIP	470	5%	1/10W	
R194	1-216-073-00	METAL CHIP	10K	5%	1/10W		R375	1-216-065-91	RES, CHIP	4.7K	5%	1/10W	
R195	1-216-073-00	METAL CHIP	10K	5%	1/10W		R376	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R196	1-216-073-00	METAL CHIP	10K	5%	1/10W		R377	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R199	1-216-025-91	RES,CHIP	100	5%	1/10W		R378	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R204	1-216-085-00	METAL CHIP	33K	5%	1/10W		R381	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R205	1-216-082-00	RES,CHIP	24K	5%	1/10W		R388	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R206	1-216-066-00	METAL CHIP	5.1K	5%	1/10W		R389	1-216-049-91	RES, CHIP	1K	5%	1/10W	
R207	1-216-066-00	METAL CHIP	5.1K	5%	1/10W		R390	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R208	1-216-029-00	METAL CHIP	150	5%	1/10W		R391	1-216-121-91	RES, CHIP	1M	5%	1/10W	
R209	1-216-104-00	METAL CHIP	200K	5%	1/10W		R392	1-216-073-00	METAL CHIP	10K	5%	1/10W	
							R393	1-216-097-91	RES, CHIP	100K	5%	1/10W	

MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R394	1-216-097-91	RES, CHIP	100K 5% 1/10W	R733	1-216-097-91	RES, CHIP	100K 5% 1/10W
R395	1-216-025-91	RES, CHIP	100 5% 1/10W	R734	1-216-097-91	RES, CHIP	100K 5% 1/10W
R396	1-216-065-91	RES, CHIP	4.7K 5% 1/10W	R735	1-216-077-00	METAL CHIP	15K 5% 1/10W
R397	1-216-025-91	RES, CHIP	100 5% 1/10W	R736	1-216-077-00	METAL CHIP	15K 5% 1/10W
R601	1-249-417-11	CARBON	1K 5% 1/4W F	△ R737	1-215-889-00	METAL OXIDE	330 5% 2W F
R602	1-249-437-11	CARBON	47K 5% 1/4W	△ R738	1-215-889-00	METAL OXIDE	330 5% 2W F
R603	1-249-417-11	CARBON	1K 5% 1/4W F	R901	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R604	1-249-437-11	CARBON	47K 5% 1/4W	R902	1-216-073-00	METAL CHIP	10K 5% 1/10W
R605	1-217-151-00	METAL	0.22 10% 2W	R903	1-216-041-00	METAL CHIP	470 5% 1/10W
R606	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R904	1-216-001-00	METAL CHIP	10 5% 1/10W
R607	1-216-053-00	METAL CHIP	1.5K 5% 1/10W	R905	1-249-381-11	CARBON	1 5% 1/4W F
R608	1-216-091-00	METAL CHIP	56K 5% 1/10W	R907	1-216-049-91	RES, CHIP	1K 5% 1/10W
R609	1-249-389-11	CARBON	4.7 5% 1/4W F	△ R913	1-215-865-11	METAL OXIDE	220 5% 1W F
R611	1-249-417-11	CARBON	1K 5% 1/4W F	R914	1-216-073-00	METAL CHIP	10K 5% 1/4W F
R612	1-249-437-11	CARBON	47K 5% 1/4W	R915	1-216-073-00	METAL CHIP	10K 5% 1/10W
R613	1-249-417-11	CARBON	1K 5% 1/4W F	R929	1-216-041-00	METAL CHIP	470 5% 1/10W
R614	1-249-437-11	CARBON	47K 5% 1/4W	R930	1-216-041-00	METAL CHIP	470 5% 1/10W
R615	1-217-151-00	METAL	0.22 10% 2W	R941	1-216-073-00	METAL CHIP	10K 5% 1/10W
R616	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R942	1-249-405-11	CARBON	100 5% 1/4W F
R617	1-216-053-00	METAL CHIP	1.5K 5% 1/10W	R943	1-249-405-11	CARBON	100 5% 1/4W F
R618	1-216-091-00	METAL CHIP	56K 5% 1/10W	R1150	1-216-025-91	RES,CHIP	100 5% 1/10W
R619	1-249-389-11	CARBON	4.7 5% 1/4W F	R1151	1-216-295-91	SHORT	0
R621	1-249-417-11	CARBON	1K 5% 1/4W F	R1152	1-216-295-91	SHORT	0
R622	1-249-437-11	CARBON	47K 5% 1/4W	R1153	1-216-025-91	RES, CHIP	100 5% 1/10W
R623	1-249-417-11	CARBON	1K 5% 1/4W F	R1271	1-216-073-00	METAL CHIP	10K 5% 1/10W
R624	1-249-437-11	CARBON	47K 5% 1/4W	R1285	1-216-121-91	RES, CHIP	1M 5% 1/10W
R625	1-217-151-00	METAL	0.22 10% 2W	R1286	1-216-081-00	METAL CHIP	22K 5% 1/10W
R626	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R1287	1-216-081-00	METAL CHIP	22K 5% 1/10W
R627	1-216-053-00	METAL CHIP	1.5K 5% 1/10W	R1301	1-216-097-91	RES, CHIP	100K 5% 1/10W
R628	1-216-091-00	METAL CHIP	56K 5% 1/10W	R1302	1-216-097-91	RES, CHIP	100K 5% 1/10W
R629	1-249-389-11	CARBON	4.7 5% 1/4W F	R1311	1-216-295-91	SHORT	0
R630	1-249-389-11	CARBON	4.7 5% 1/4W F	R1318	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R631	1-249-389-11	CARBON	4.7 5% 1/4W F	R1319	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R640	1-249-389-11	CARBON	4.7 5% 1/4W F	R1320	1-216-073-00	METAL CHIP	10K 5% 1/10W
R641	1-249-389-11	CARBON	4.7 5% 1/4W F	R1321	1-216-071-00	METAL CHIP	8.2K 5% 1/10W
R650	1-249-389-11	CARBON	4.7 5% 1/4W F	R1322	1-216-097-91	RES, CHIP	100K 5% 1/10W
R651	1-249-389-11	CARBON	4.7 5% 1/4W F	R1323	1-216-041-00	METAL CHIP	470 5% 1/10W
R681	1-216-073-00	METAL CHIP	10K 5% 1/10W	R1324	1-216-041-00	METAL CHIP	470 5% 1/10W
R683	1-216-001-00	METAL CHIP	10 5% 1/10W	R1325	1-216-065-91	RES, CHIP	4.7K 5% 1/10W
R685	1-216-001-00	METAL CHIP	10 5% 1/10W	R1326	1-216-065-91	RES, CHIP	4.7K 5% 1/10W
R686	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1327	1-216-097-91	RES, CHIP	100K 5% 1/10W
R691	1-211-775-11	FUSIBLE	10 5% 1/4W F	R1328	1-216-093-00	METAL CHIP	68K 5% 1/10W
R692	1-249-405-11	CARBON	100 5% 1/4W F	R1331	1-216-073-00	METAL CHIP	10K 5% 1/10W
R693	1-249-405-11	CARBON	100 5% 1/4W F	R1339	1-216-049-91	RES, CHIP	1K 5% 1/10W
R694	1-249-405-11	CARBON	100 5% 1/4W F	R1340	1-216-097-91	RES, CHIP	100K 5% 1/10W
R695	1-249-405-11	CARBON	100 5% 1/4W F	R1341	1-216-073-00	METAL CHIP	10K 5% 1/10W
R701	1-216-097-91	RES, CHIP	100K 5% 1/10W	R1343	1-216-073-00	METAL CHIP	10K 5% 1/10W
R702	1-216-097-91	RES, CHIP	100K 5% 1/10W	R1344	1-216-097-91	RES, CHIP	100K 5% 1/10W
R703	1-216-097-91	RES, CHIP	100K 5% 1/10W	R1345	1-216-025-91	RES, CHIP	100 5% 1/10W
R708	1-216-081-00	METAL CHIP	22K 5% 1/10W	R1346	1-216-065-91	RES, CHIP	4.7K 5% 1/10W
R709	1-216-081-00	METAL CHIP	22K 5% 1/10W	R1347	1-216-073-00	METAL CHIP	10K 5% 1/10W
R710	1-216-089-91	RES, CHIP	47K 5% 1/10W	R1348	1-216-065-91	RES, CHIP	4.7K 5% 1/10W
R711	1-249-429-11	CARBON	10K 5% 1/4W	R1368	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
△ R714	1-215-867-00	METAL OXIDE	470 5% 1W F	R1369	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R715	1-216-089-91	RES, CHIP	47K 5% 1/10W	R1370	1-216-073-00	METAL CHIP	10K 5% 1/10W
△ R717	1-215-867-00	METAL OXIDE	470 5% 1W F				
R722	1-216-049-91	RES, CHIP	1K 5% 1/10W				
R730	1-216-097-91	RES, CHIP	100K 5% 1/10W				
R731	1-216-073-00	METAL CHIP	10K 5% 1/10W				
R732	1-216-097-91	RES, CHIP	100K 5% 1/10W				

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
R1371	1-216-071-00	METAL CHIP	8.2K	5%	1/10W		R2389	1-216-049-91	RES, CHIP	1K	5%	1/10W	
R1372	1-216-097-91	RES, CHIP	100K	5%	1/10W		R2390	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R1373	1-216-041-00	METAL CHIP	470	5%	1/10W		R2391	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R1374	1-216-041-00	METAL CHIP	470	5%	1/10W		R2393	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R1375	1-216-065-91	RES, CHIP	4.7K	5%	1/10W		R2394	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R1376	1-216-065-91	RES, CHIP	4.7K	5%	1/10W		R2395	1-216-025-91	RES, CHIP	100	5%	1/10W	
R1377	1-216-097-91	RES, CHIP	100K	5%	1/10W		R2396	1-216-065-91	RES, CHIP	4.7K	5%	1/10W	
R1378	1-216-093-00	METAL CHIP	68K	5%	1/10W								
R1381	1-216-073-00	METAL CHIP	10K	5%	1/10W				< RELAY >				
R1389	1-216-049-91	RES, CHIP	1K	5%	1/10W								
R1390	1-216-097-91	RES, CHIP	100K	5%	1/10W		RY301	1-515-614-11	RELAY				
R1391	1-216-073-00	METAL CHIP	10K	5%	1/10W		RY302	1-515-614-11	RELAY				
R1393	1-216-073-00	METAL CHIP	10K	5%	1/10W		RY303	1-515-614-11	RELAY				
R1394	1-216-097-91	RES, CHIP	100K	5%	1/10W		RY701	1-755-142-11	RELAY				
R1395	1-216-025-91	RES, CHIP	100	5%	1/10W		RY702	1-755-142-11	RELAY				
R1396	1-216-065-91	RES, CHIP	4.7K	5%	1/10W		RY901	1-515-840-11	RELAY				
R2150	1-216-025-91	RES, CHIP	100	5%	1/10W		RY1301	1-515-614-11	RELAY				
R2151	1-216-295-91	SHORT	0				RY2301	1-515-614-11	RELAY				
R2152	1-216-295-91	SHORT	0										
R2153	1-216-025-91	RES, CHIP	100	5%	1/10W				< THERMISTOR >				
R2271	1-216-073-00	METAL CHIP	10K	5%	1/10W		TH601	1-807-796-11	THERMISTOR				
R2285	1-216-121-91	RES, CHIP	1M	5%	1/10W								
R2286	1-216-081-00	METAL CHIP	22K	5%	1/10W				< VIBRATOR >				
R2287	1-216-081-00	METAL CHIP	22K	5%	1/10W								
R2301	1-216-097-91	RES, CHIP	100K	5%	1/10W		X181	1-577-082-11	VIBRATOR, CERAMIC 4MHz				
							X191	1-767-576-11	VIBRATOR, CRYSTAL 12.288MHz				
							X201	1-567-970-11	VIBRATOR, CRYSTAL 24.576MHz				
R2302	1-216-097-91	RES, CHIP	100K	5%	1/10W								
R2311	1-216-295-91	SHORT	0				*****						
R2318	1-216-057-00	METAL CHIP	2.2K	5%	1/10W		*	A-4407-554-A	PANEL BOARD, COMPLETE				
R2319	1-216-057-00	METAL CHIP	2.2K	5%	1/10W								
R2320	1-216-073-00	METAL CHIP	10K	5%	1/10W								
R2321	1-216-071-00	METAL CHIP	8.2K	5%	1/10W		*	4-921-941-01	CUSHION (FL)				
R2322	1-216-097-91	RES, CHIP	100K	5%	1/10W		*	4-999-352-01	HOLDER (FL)				
R2323	1-216-041-00	METAL CHIP	470	5%	1/10W								
R2324	1-216-041-00	METAL CHIP	470	5%	1/10W				< CAPACITOR >				
R2325	1-216-065-91	RES, CHIP	4.7K	5%	1/10W								
R2326	1-216-065-91	RES, CHIP	4.7K	5%	1/10W		C601	1-125-623-11	DOUBLE LAYER	0.22F	0	5.5V	
R2327	1-216-097-91	RES, CHIP	100K	5%	1/10W		C602	1-126-382-11	ELECT	100uF	20%	10V	
R2328	1-216-093-00	METAL CHIP	68K	5%	1/10W		C603	1-164-159-11	CERAMIC	0.1uF		50V	
R2331	1-216-073-00	METAL CHIP	10K	5%	1/10W		C604	1-164-159-11	CERAMIC	0.1uF		50V	
R2339	1-216-049-91	RES, CHIP	1K	5%	1/10W		C605	1-124-465-00	ELECT	0.47uF	20%	50V	
R2340	1-216-097-91	RES, CHIP	100K	5%	1/10W		C606	1-164-159-11	CERAMIC	0.1uF		50V	
R2341	1-216-073-00	METAL CHIP	10K	5%	1/10W		C607	1-164-159-11	CERAMIC	0.1uF		50V	
R2343	1-216-073-00	METAL CHIP	10K	5%	1/10W		C608	1-164-159-11	CERAMIC	0.1uF		50V	
R2344	1-216-097-91	RES, CHIP	100K	5%	1/10W		C609	1-164-159-11	CERAMIC	0.1uF		50V	
R2345	1-216-025-91	RES, CHIP	100	5%	1/10W		C610	1-162-306-11	CERAMIC	0.01uF	20%	16V	
R2346	1-216-065-91	RES, CHIP	4.7K	5%	1/10W		C611	1-162-306-11	CERAMIC	0.01uF	20%	16V	
R2347	1-216-073-00	METAL CHIP	10K	5%	1/10W		C612	1-162-306-11	CERAMIC	0.01uF	20%	16V	
R2348	1-216-065-91	RES, CHIP	4.7K	5%	1/10W		C621	1-124-261-00	ELECT	10uF	20%	50V	
R2368	1-216-057-00	METAL CHIP	2.2K	5%	1/10W		C622	1-164-159-11	CERAMIC	0.1uF		50V	
R2369	1-216-057-00	METAL CHIP	2.2K	5%	1/10W		C623	1-126-382-11	ELECT	100uF	20%	10V	
R2370	1-216-073-00	METAL CHIP	10K	5%	1/10W		C624	1-164-159-11	CERAMIC	0.1uF		50V	
R2371	1-216-071-00	METAL CHIP	8.2K	5%	1/10W		C631	1-162-290-31	CERAMIC	470PF	10%	50V	
R2372	1-216-097-91	RES, CHIP	100K	5%	1/10W		C651	1-162-306-11	CERAMIC	0.01uF	20%	16V	
R2373	1-216-041-00	METAL CHIP	470	5%	1/10W		C652	1-126-382-11	ELECT	100uF	20%	10V	
R2374	1-216-041-00	METAL CHIP	470	5%	1/10W		C661	1-126-382-11	ELECT	100uF	20%	10V	
R2375	1-216-065-91	RES, CHIP	4.7K	5%	1/10W								
R2376	1-216-065-91	RES, CHIP	4.7K	5%	1/10W				< CONNECTOR >				
R2377	1-216-097-91	RES, CHIP	100K	5%	1/10W								
R2378	1-216-093-00	METAL CHIP	68K	5%	1/10W		* CN601	1-568-858-11	SOCKET, CONNECTOR 15P				
R2381	1-216-073-00	METAL CHIP	10K	5%	1/10W		CN602	1-774-282-11	SOCKET, CONNECTOR 6P				
							CN603	1-564-505-11	PLUG, CONNECTOR 2P				

PANEL	PRIMARY	SECONDARY
-------	---------	-----------

Ref. No.	Part No.	Description	Remarks
< DIODE >			
D601	8-719-200-02	DIODE 10E2	
D602	8-719-200-02	DIODE 10E2	
D603	8-719-911-19	DIODE 1SS119	
D604	8-719-200-02	DIODE 10E2	
D651	8-719-069-45	DIODE SELU5E23C-TP15 (DOLBY DIGITAL)	
D652	8-719-069-45	DIODE SELU5E23C-TP15 (DOLBY DIGITAL)	
D654	8-719-058-03	DIODE SEL5423E-TP15 (SET UP)	
D655	8-719-058-03	DIODE SEL5423E-TP15 (COAXIAL)	
D656	8-719-058-03	DIODE SEL5423E-TP15 (OPTICAL)	
D657	8-719-058-03	DIODE SEL5423E-TP15 (SURROUND ON/OFF)	
D658	8-719-058-04	DIODE SEL5223S-TP15 (ON/STANDBY)	
< FILTER >			
FL601	1-517-771-11	INDICATOR TUBE, FLUORESCENT	
< IC >			
IC601	8-759-535-51	IC MB90673PF-G-264-BND	
IC602	8-759-512-47	IC SN755721	
IC603	8-759-512-47	IC SN755721	
IC604	8-759-165-80	IC PST600C-T	
IC605	8-759-459-83	IC NJL55H400A	
IC606	8-759-962-08	IC BA6208	
IC607	8-759-454-04	IC MC74HCU04AN	
< COIL >			
L601	1-410-509-11	INDUCTOR 10uH	
< TRANSISTOR >			
Q601	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q602	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q603	8-729-900-80	TRANSISTOR DTC114ES	
Q604	8-729-900-80	TRANSISTOR DTC114ES	
Q605	8-729-900-80	TRANSISTOR DTC114ES	
Q606	8-729-900-80	TRANSISTOR DTC114ES	
Q607	8-729-900-80	TRANSISTOR DTC114ES	
Q609	8-729-900-80	TRANSISTOR DTC114ES	
< RESISTOR >			
R601	1-247-807-31	CARBON 100 5%	1/4W
R602	1-249-435-11	CARBON 33K 5%	1/4W
R603	1-249-441-11	CARBON 100K 5%	1/4W
R604	1-249-429-11	CARBON 10K 5%	1/4W
R607	1-249-433-11	CARBON 22K 5%	1/4W
R608	1-249-419-11	CARBON 1.5K 5%	1/4W F
R609	1-249-433-11	CARBON 22K 5%	1/4W
R610	1-247-807-31	CARBON 100 5%	1/4W
R611	1-249-411-11	CARBON 330 5%	1/4W
R612	1-249-413-11	CARBON 470 5%	1/4W F
R613	1-249-415-11	CARBON 680 5%	1/4W F
R614	1-249-417-11	CARBON 1K 5%	1/4W F
R615	1-249-419-11	CARBON 1.5K 5%	1/4W F
R616	1-249-421-11	CARBON 2.2K 5%	1/4W F
R617	1-249-429-11	CARBON 10K 5%	1/4W
R618	1-249-411-11	CARBON 330 5%	1/4W
R619	1-249-413-11	CARBON 470 5%	1/4W F
R620	1-249-415-11	CARBON 680 5%	1/4W F
R621	1-249-417-11	CARBON 1K 5%	1/4W F
R622	1-249-419-11	CARBON 1.5K 5%	1/4W F

Ref. No.	Part No.	Description	Remarks
R623	1-249-421-11	CARBON 2.2K 5%	1/4W F
R625	1-249-441-11	CARBON 100K 5%	1/4W
R628	1-249-425-11	CARBON 4.7K 5%	1/4W F
R629	1-249-425-11	CARBON 4.7K 5%	1/4W F
R651	1-247-807-31	CARBON 100 5%	1/4W
R652	1-247-807-31	CARBON 100 5%	1/4W
R654	1-247-807-31	CARBON 100 5%	1/4W
R655	1-247-807-31	CARBON 100 5%	1/4W
R656	1-247-807-31	CARBON 100 5%	1/4W
R657	1-247-807-31	CARBON 100 5%	1/4W
R663	1-249-425-11	CARBON 4.7K 5%	1/4W F
R664	1-249-425-11	CARBON 4.7K 5%	1/4W F
R665	1-249-385-11	CARBON 2.2 5%	1/6W F
R682	1-249-425-11	CARBON 4.7K 5%	1/4W F
R684	1-249-429-11	CARBON 10K 5%	1/4W
< SWITCH >			
S610	1-572-184-11	SWITCH, KEYBOARD (POWER)	
S611	1-572-184-11	SWITCH, KEYBOARD (COAXIAL)	
S612	1-572-184-11	SWITCH, KEYBOARD (OPTICAL)	
S613	1-572-184-11	SWITCH, KEYBOARD (SET UP)	
S614	1-572-184-11	SWITCH, KEYBOARD (CURSOR MODE)	
S615	1-572-184-11	SWITCH, KEYBOARD (DISPLAY)	
S619	1-572-184-11	SWITCH, KEYBOARD (SURROUND ON/OFF)	
S620	1-572-184-11	SWITCH, KEYBOARD (UP)	
S621	1-572-184-11	SWITCH, KEYBOARD (DOWN)	
S622	1-572-184-11	SWITCH, KEYBOARD (BASS BOOST)	
< VIBRATOR >			
X601	1-577-082-11	VIBRATOR, CERAMIC 4MHz	

*	1-669-461-11	PRIMARY BOARD	

*	1-669-462-11	SECONDARY BOARD	

	1-533-293-11	FUSE HOLDER	
< CAPACITOR >			
C925	1-136-165-00	FILM 0.1uF 5%	50V
< CONNECTOR >			
* CN992	1-564-104-00	PIN, CONNECTOR (B3P-VH) 3P	
< FUSE >			
△ F995	1-532-505-51	FUSE TIME LAG 5A 250V	
< RESISTOR >			
△ R991	1-217-637-00	FUSIBLE 1 5%	1/4W F
△ R992	1-219-122-91	FUSIBLE 0.33 5%	1/4W F
△ R993	1-219-122-91	FUSIBLE 0.33 5%	1/4W F

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。
--	---

Ref. No.	Part No.	Description	Remarks
*	1-669-459-11	SPEAKER BOARD	

		< CONNECTOR >	
CN651	1-691-768-11	PLUG (MICRO CONNECTOR) 6P	
		< TERMINAL >	
TB651	1-537-510-21	TERMINAL BOARD	
		(SPEAKER/CENTER SPEAKER)	

*	1-669-460-11	SWITCH BOARD	

		< CONNECTOR >	
* CN652	1-568-824-11	SOCKET, CONNECTOR 5P	
* CN653	1-565-561-11	PIN, CONNECTOR 3P (AU BUS)	
* CN654	1-565-561-11	PIN, CONNECTOR 3P (AU BUS)	
		< SWITCH >	
S651	1-692-686-11	SWITCH, SLIDE (SPEAKER SELECT)	

*	1-669-458-11	VOLUME BOARD	

		< CONNECTOR >	
CN604	1-564-505-11	PLUG, CONNECTOR 2P	
CN605	1-568-802-11	SOCKET, CONNECTOR 19P	
		< VARIABLE RESISTOR >	
RV601	1-225-446-11	RES, VAR, CARBON 100K × 6	
		(MASTER VOLUME)	

Ref. No.	Part No.	Description	Remarks
		MISCELLANEOUS	

6	1-777-353-11	WIRE (FLAT TYPE) (15 CORE)	
9	1-773-108-11	WIRE (FLAT TYPE) (19 CORE)	
11	1-771-358-11	SWITCH, TACTILE (WITH LEAD)	
△53	1-431-855-11	TRANSFORMER, POWER	
57	1-769-868-11	WIRE (FLAT TYPE) (5 CORE)	
△58	1-575-651-21	CORD, POWER	
64	1-698-792-11	FAN, DC	
△67	1-569-008-21	ADAPTOR, CONVERSION 2P	

		ACCESSORIES & PACKING MATERIALS	

	1-475-788-21	COMMANDER, STANDARD (RM-MS30E)	
	1-558-271-11	CORD, CONNECTION	
	1-574-264-11	CORD, OPTICAL PLUG	
	1-574-314-11	CORD (WITH CONNECTOR)	
	3-862-889-11	MANUAL, INSTRUCTION (ENGLISH, CHINESE)	
	3-862-889-21	MANUAL, INSTRUCTION (FRENCH, SPANISH)	
	4-981-643-21	COVER, BATTERY (FOR RM-MS30E)	

		HARDWARE LIST	

#1	7-685-647-79	SCREW +BVTP 3 × 10 TYPE2 N-S	
#2	7-685-650-79	SCREW +BVTP 3 × 16 TYPE2 IT-3	
#3	7-685-871-01	SCREW +BVTT 3 × 6 (S)	
#4	7-685-872-09	SCREW +BVTT 3 × 8 (S)	
#5	7-685-881-09	SCREW +BVTT 4 × 8 (S)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

以阴影和 △标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

