


SERVICE MANUAL

E Model

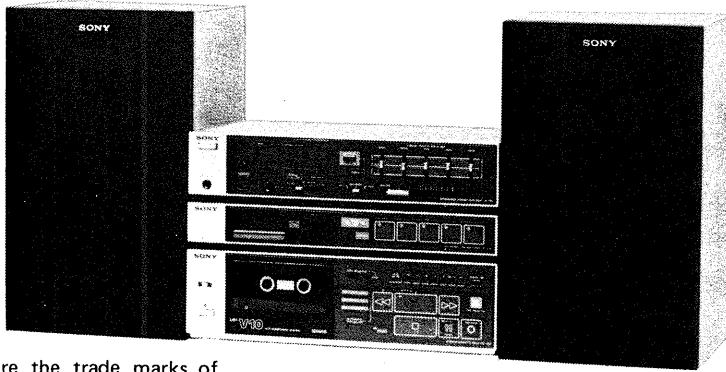

'Dolby' and the double-D symbol are the trade marks of Dolby Laboratories Licensing Corporation. Noise reduction system manufactured under license from Dolby Laboratories Licensing Corporation.

TABLE OF CONTENTS

<u>LBT-V10</u>	<u>Page</u>	<u>TA-V10</u>	<u>Page</u>
SPECIFICATIONS	3	SECTION 1 DISASSEMBLY	TA-2
FEATURES	4	SECTION 2 DIAGRAMS	TA-4
CONNECTIONS	5	2-1. BLOCK DIAGRAM	TA-4
FUNCTION OF CONTROLS	6	Semiconductor Lead Layouts	TA-7
CONNECTIONS BETWEEN EACH SET	8	2-2. MOUNTING DIAGRAM	TA-7
OPERATION OF THE TUNER	9	2-3. SCHEMATIC DIAGRAM	TA-11
TAPE PLAYBACK	10	SECTION 3 EXPLODED VIEWS & PARTS LIST	TA-15
TAPE RECORDING	10		
USING THE GRAPHIC EQUALIZER CONTROLS	11	<u>ST-V10S</u>	<u>Page</u>
MICROPHONE MIXING	12	SERVICING NOTE	ST-2
USING THE TIMER	12	SECTION 1 OUTLINE	ST-3
SYNCHRONIZED PLAY	13	1-1. BLOCK DIAGRAM	ST-3
PARTS LIST	14	SECTION 2 DISASSEMBLY	ST-4
		SECTION 3 ADJUSTMENTS	ST-5
		FM SECTION	ST-5
		MW/SW SECTION	ST-7
		Semiconductor Lead Layouts	ST-9
		SECTION 4 DIAGRAMS	ST-10
		4-1. MOUNTING DIAGRAM	ST-10
		4-2. SCHEMATIC DIAGRAM	ST-13
		SECTION 5 EXPLODED VIEW AND PARTS LIST	ST-16

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

— Continued on page 2 —

STEREO COMPONENT SYSTEM
SONY®

<u>TC-V10</u>	<u>Page</u>
SECTION 1 OUTLINE	TC-2
1-1. SERVICING NOTE	TC-2
1-2. BLOCK DIAGRAM	TC-3
SECTION 2 DISASSEMBLY	TC-5
SECTION 3 ADJUSTMENTS	TC-9
3-1. Mechanical Adjustments	TC-9
3-2. Electrical Adjustments	TC-11
SECTION 4 DIAGRAMS	TC-16
Semiconductor Lead Layouts	TC-16
4-1. MOUNTING DIAGRAM	TC-16
4-2. SCHEMATIC DIAGRAM	TC-19
SECTION 5 EXPLODED VIEWS & PARTS LIST	TC-23

<u>SS-V10</u>	<u>Page</u>
WIRING DIAGRAM	SS-1
SCHEMATIC DIAGRAM	SS-1
EXPLODED VIEW AND PARTS LIST	SS-2

SUPPLEMENT-1

SPECIFICATIONS

ST-V10S

System	FM stereo, FM/AM superheterodyne tuner Quartz-locked digital synthesizer system
FM tuner section	
Tuning range	87.5—108 MHz
Antenna terminals	75 ohms unbalanced 300 ohms balanced
Intermediate frequency	10.7 MHz

ST-V10S (at 75 kHz deviation)	
Sensitivity	at 50 dB quieting 16.1 dBf, 3.5 μ V (mono) 38.3 dBf, 45 μ V (stereo)
Usable sensitivity	10.3 dBf, 1.8 μ V (IHF)
Signal-to-noise ratio	80 dB (mono) 75 dB (stereo)
Harmonic distortion at 1 kHz	0.2% (mono) 0.5% (stereo)
Separation at 1 kHz	40 dB
Frequency response	30 Hz — 15 kHz ± 0.5 dB -2.0 dB
Selectivity	at 400 kHz 65 dB
Image response ratio	50 dB
IF response ratio	90 dB

SW/MW tuner section

		SW 1	SW 2	MW
Tuning range		3.2 — 7.3 MHz	9.5 — 21.75 MHz	531 — 1,602 kHz (at 9 kHz step) 530 — 1,610 kHz (at 10 kHz step)
Antenna	Layout-free AM antenna, External antenna terminal			
Intermediate frequency	450 kHz			
Usable sensitivity	Layout-free AM antenna	300 μ V/m (5 MHz)	350 μ V/m (15 MHz)	300 μ V/m (999 or 1,000 kHz)
	external antenna	20 μ V (5 MHz)	30 μ V (15 MHz)	30 μ V (999 OR 1,000 kHz)
Signal-to-noise ratio	54 dB (5 mV)		54 dB (50 mV/m)	
Harmonic distortion	0.3% (5 mV, 400 Hz)		0.3% (50 mV/m, 400 Hz)	
Selectivity	35 dB (10 kHz)		35 dB (9 kHz) 38 dB (10 kHz)	

General

Dimensions Approx. 355 × 55 × 260 mm (w/h/d)
(14 × 2 $\frac{1}{4}$ × 10 $\frac{1}{4}$ inches)
incl. projecting parts and controls
Weight Approx. 1.8 kg (4 lb.) net

TC-V10

Recording system	4-track 2-channel stereo
Frequency response	DOLBY NR OFF (DIN) With TYPE IV cassette (Sony METALLIC cassette) 30 — 16,000 Hz (± 3 dB)
	With TYPE II cassette (Sony UCX cassette) 30 — 15,000 Hz (± 3 dB)
	With TYPE I cassette (Sony BHF cassette) 30 — 14,000 Hz (± 3 dB)
Wow and flutter	0.065% WRMS (NAB) ±0.2% (DIN)

General

Dimensions Approx. 355 × 105 × 245 mm (w/h/d)
(14 × 4 $\frac{1}{4}$ × 9 $\frac{3}{4}$ inches)
incl. projecting parts and controls
Weight Approx. 2.9 kg (6 lb. 7 oz) net

TA-V10

Continuous RMS power output	30 + 30 watts (6 ohms, at 1 kHz, 0.5% THD)
Peak music power output	25 + 25 watts (6 ohms, 40 Hz — 20 kHz, 0.5% THD)
Music power output	240 W (6 ohms)
	120 W (6 ohms)

Inputs

	Sensitivity	Impedance
PHONO (phono jacks)	2 mV	50 kilohms
CD/AUX (phono jacks)	150 mV	50 kilohms
MIC (phone jack)	2 mV	20 kilohms

Outputs

Headphones Accepts headphone of 8 ohms or more
Speaker Accepts speakers of 6 to 16 ohms
PHONO: RIAA curve ± 0.5 dB
CD/AUX: 15 Hz — 50 kHz ± 3 dB
MIC: 100 Hz — 10 kHz ± 6 dB

General

Dimensions Approx. 355 × 80 × 260 mm (w/h/d)
(14 × 3 $\frac{1}{4}$ × 10 $\frac{1}{4}$ inches)
incl. projecting parts and controls
Weight Approx. 4.6 kg (10 lb. 3 oz) net

SS-V10

Speaker system	2-way speaker system
Speaker units	Woofers: 16 cm (6½ in.) cone type Tweeter: 5 cm, (2 in.) cone type
Enclosure type	Bass reflex
Power handling capacity	Nominal 35 watts
Frequency range	70 Hz - 20 kHz
Sensitivity	90 dB/W/m (6 ohms)
Impedance	6 ohms

General

Dimensions	Approx. 215 × 370 × 215 mm (w/h/d) (8½ × 14½ × 8½ inches)
Weight	Approx. 3.9 kg (8 lb. 10 oz) net per unit

General

Power requirements	Operates on 120, 220 or 240 V ac adjustable, 50/60 Hz
Power consumption	100 watts
AC outlet	1 switched, 100 watts max.

FEATURES

- Flat connecting cords, supplied, which enable you to connect each component quickly and securely.
- With the POWER switch on, pressing any function key automatically changes the program in use. There is no need to turn on the power of each component or to switch the function.
- On the front panels of the components, most of the controls and switches are "touch pad" switches.
- Synchronized play of the turntable and a cassette deck is possible. (The optional PS-LX30 turntable system is required.)

Amplifier section

- This section supplies power to other sections.
- Function display shows the program in use.
- MIC input jack for microphone mixing.
- CD/AUX input jacks for connecting a CD (compact disc) player, external tuner or cassette deck and PHONO input jacks for listening to records.
- Five frequency band equalizer to compose the source sound to your liking.

Tuner section

- High sensitivity and high selectivity.
- The PLL (phase locked loop) circuit allows precise tuning of FM and MW/SW stations.
- Each station PRESET key allows you to memorize one station for each band and to select these memorized stations with the touch of a key.
- The supplied LAYOUT-FREE AM antenna provides more satisfactory AM reception.

Cassette deck section

- The cassette deck can use the metal tapes, providing wider dynamic range and extended frequency response.
- Easy recording—Merely insert a cassette and press ● key.
- Automatic Music Sensor (AMS) allows easy playback of the selection being played and easy skipping to the next selection.
- The automatic recording control system sets the recording level automatically.
- The record muting function allows you to eliminate material you do not want to record, such as commercials, and to make a blank space between selections.
- The Dolby NR (Noise Reduction) system reduces tape hiss and assures high quality recording and playback.

CONNECTIONS

Turntable system is not supplied with the LBT-V10.


CONNECTION NOTES

- Turn the POWER switch off before connecting or disconnecting the connector to avoid damaging the speaker.
- Be sure to insert the female connector firmly until it clicks into the male connector. Loose connections may cause hum and noise.


To connect the cable, depress the middle of the connector.
Never press the ends.

To disconnect the cable, pull the connector out. Never pull the cable itself.

- Keep the speaker cords, connecting cord and power cord away from the LAYOUT-FREE AM antenna and the antenna lead-in of the tuner to avoid possible noise pickup.
- Be sure to connect the red plug of the connecting cord to the right (R) jack and the remaining one to the left (L). The cable connectors should be fully inserted into the jacks. A loose connection may cause hum and noise.

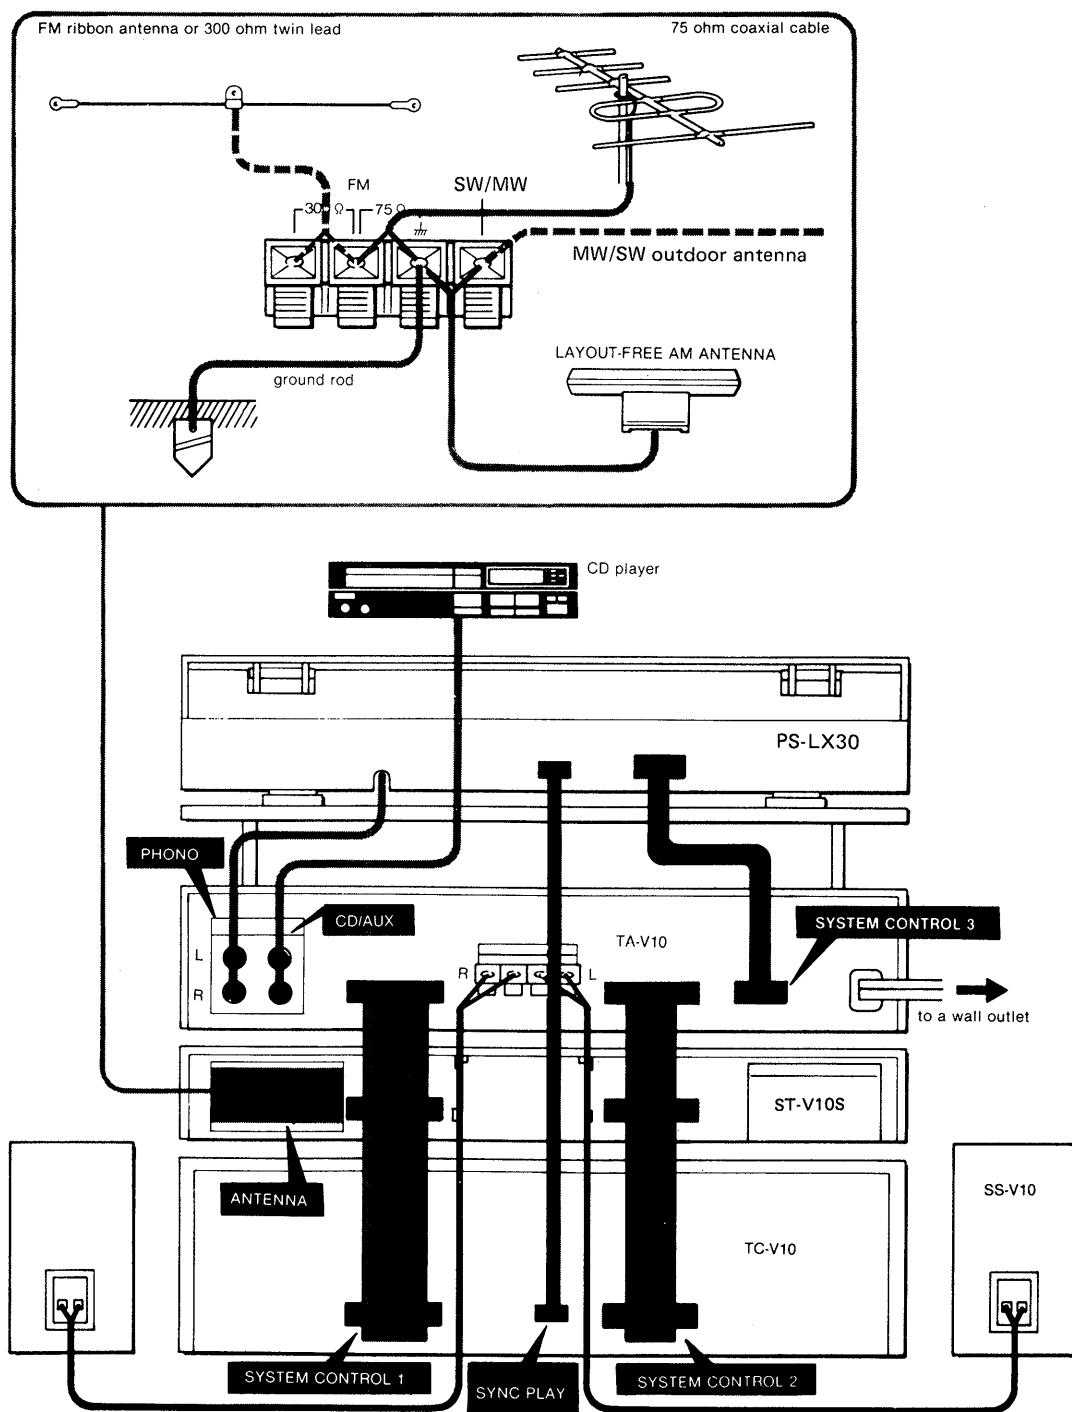

FUNCTION OF CONTROLS

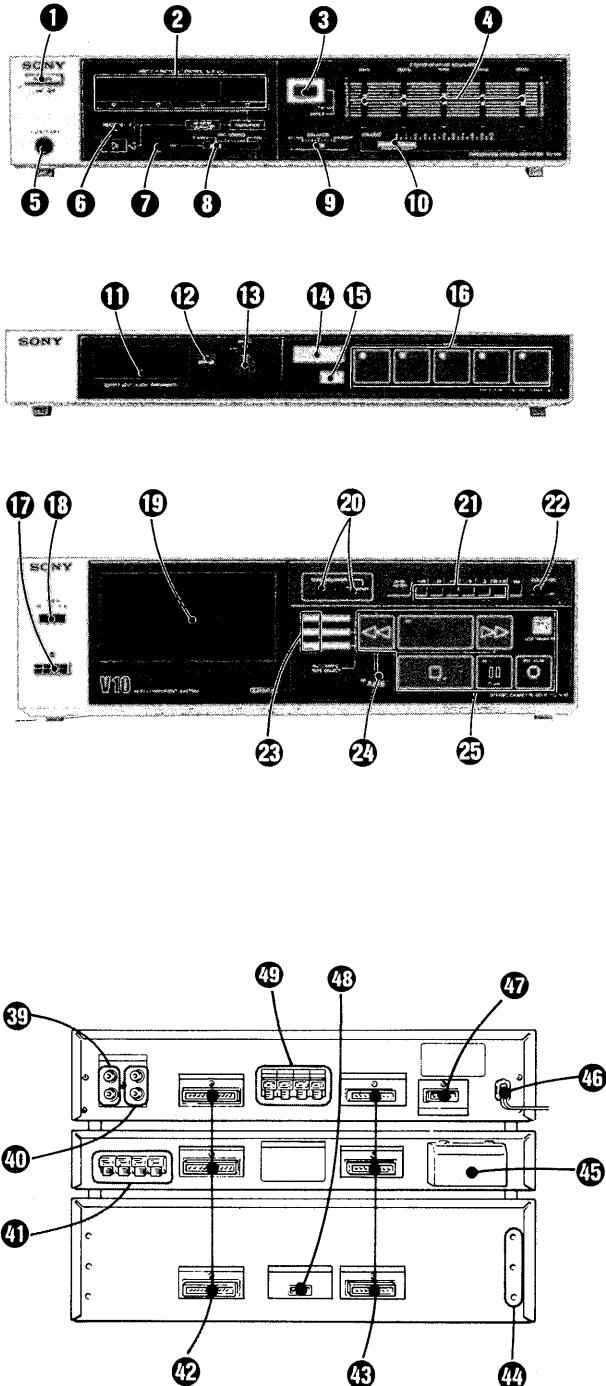

Amplifier TA-V10

① POWER switch

Press to turn on the power of the amplifier, tuner, cassette deck and turntable system (PS-LX30). To turn them off, press it again.

② Function display

The associated indicator illuminates to show the program in use when appropriate key is pressed. When the POWER switch is turned on, the TUNER indicator illuminates.

TAPE: When the ▶ key is pressed.

CD/AUX: When the CD/AUX button is pressed.

TUNER: When the BAND selector setting is changed or the TUNING or PRESET key is pressed.

PHONO: When the START/STOP key is pressed.

③ CD/AUX button

Press this button to listen to or record an auxiliary program (connected to CD/AUX inputs at the rear).

④ Graphic equalizer controls

Slide downwards or upwards to equalize the signal.

Equalization has effect on listening to and recording various program sources and on microphone mixing.

Normally set the controls at the center position.

⑤ HEADPHONES jack (stereo phone jack)

Accepts headphones with a stereo phone plug. The headphone volume can be adjusted with the VOLUME control.

⑥ RECORD indicator

During recording, this indicator lights up.

⑦ MIC (microphone) jack (phone jack)

Connect the microphone for microphone mixing.

⑧ MIC MIXING control

This is for adjusting the balance between the volume of the microphone and the program source. Slide the control towards MIC (right) for more microphone volume and less source volume. Slide the control towards SOURCE (left) for more source volume and less microphone volume.

When microphone mixing is not made, slide this control completely to SOURCE.

⑨ BALANCE control

This is for adjusting the balance of the left and right channel output level. Normally set the control to the center position.

⑩ VOLUME control

This is for adjusting the overall output level.

Tuner ST-V10S

⑪ Band/frequency-display

This identifies the received frequency. The TUNED indicator appears in the display when a signal is tuned in.

⑫ STEREO indicator

This lights when an FM stereo program of sufficient signal strength is tuned in.

⑬ BAND selector

Selects the desired band.
FM MW, SW1 or SW2

⑩ TUNING key

Press either side of the key to change the frequency.
Press the left side (-) to go to a lower frequency and the right side (+) to go to a higher. To change the frequency continuously, keep the key pressed.

⑪ MEMORY key

Press to operate memory circuit. The MEMORY indicator will appear in the band/frequency-display for a few seconds indicating that the memory circuit is standing by.

⑫ PRESET keys

To call up a memorized station, press the appropriate key. Associated key number will appear in the band/frequency-display.

Cassette deck TC-V10**⑯ ▲ (eject) button**

Press this button to open the cassette holder.

⑰ TIMER switch

You can set the unit to record or playback at a predetermined time by connecting an optional timer. Normally set it to OFF.

⑲ Cassette holder**㉑ TAPE COUNTER and RESET button**

The tape counter provides a numerical reference point while recording which can be used to index a recorded cassette. To reset to zero, press the RESET button.

㉒ LEVEL METER

This meter shows the input level during recording and recorded levels during playback for either the left or right channel, whichever is higher at that instant. The left-most LED will light when the POWER switch is turned on.

㉓ DOLBY NR switch

To record with the Dolby NR (Noise Reduction) process, depress this switch (▲ ON). To record without the Dolby NR process, press again and release this switch (▲ OFF).

When playing back, set this switch to the same position used in recording.

㉔ Tape type indicators

The type of the tape being used is automatically detected by the automatic tape selector system and the corresponding indicator lights.

㉕ AMS key and indicator

During playback, press this key and **◀◀** or **▶▶** key to locate the beginning of the selection being played or the following selections.

㉖ Function keys

- ◀◀ (rewind) key:** Press this key to rewind the tape.
- ▶▶ (playback) key:** Press this key to playback the tape.
- ▶▶ (fast-forward) key:** Press this key to advance the tape rapidly.
- (record) key:** Press this key to start recording. The RECORD indicator illuminates.
- O (record muting) key:** Press this key to eliminate unwanted material and to insert a blank space during recording.
- II (pause) key:** To stop the tape for a moment during recording or playback, press this key. To restart, press it again.
- (stop) key:** To stop the tape, press this key.

Rear panel**㉗ PHONO input jacks (phono jack)**

For connecting an optional turntable system.

㉘ CD/AUX input jacks (phono jack)

These accept the output of the CD player, TV tuner or the cassette deck only for playback.

㉙ Antenna and ground terminals**㉚ SYSTEM CONTROL 1 connectors**

These accept the supplied flat cord equipped with three 13-pin connectors.

㉛ SYSTEM CONTROL 2 connectors

These accept the supplied flat cord equipped with three 10-pin connectors (blue).

㉜ Player stand mounting holes

For mounting the optional SU-V1 player stand.

㉝ Battery compartment**Battery life**

About one year of operation can be expected when using Sony SUM-3 (NS) New Super batteries. Be sure to replace the batteries once a year to avoid damage from leaking batteries.

㉞ AC power cord**㉟ SYSTEM CONTROL 3 connectors**

These accept the supplied flat cord equipped with two 5-pin connectors.

㉟ Synchro remote control connectors

Connect the supplied remote control cord to synchronize the operation of the cassette deck with the turntable system.
(Optional PS-LX30 turntable system is required).

㉞ Speaker terminals

Connect the SS-V10.

Voltage selector

Turn the selector so that the arrow on the selector points to the appropriate voltage.


AM CH (channel) SPACE selector

Set the selector according to the MW frequency allocation system of your country to tune in MW stations correctly.

AC outlet


This outlet can supply ac power to the optional PS-LX30 turntable system or other audio components whose power consumption is less than the 100 watts. This outlet is controlled by the POWER switch.

CONNECTIONS BETWEEN EACH SET

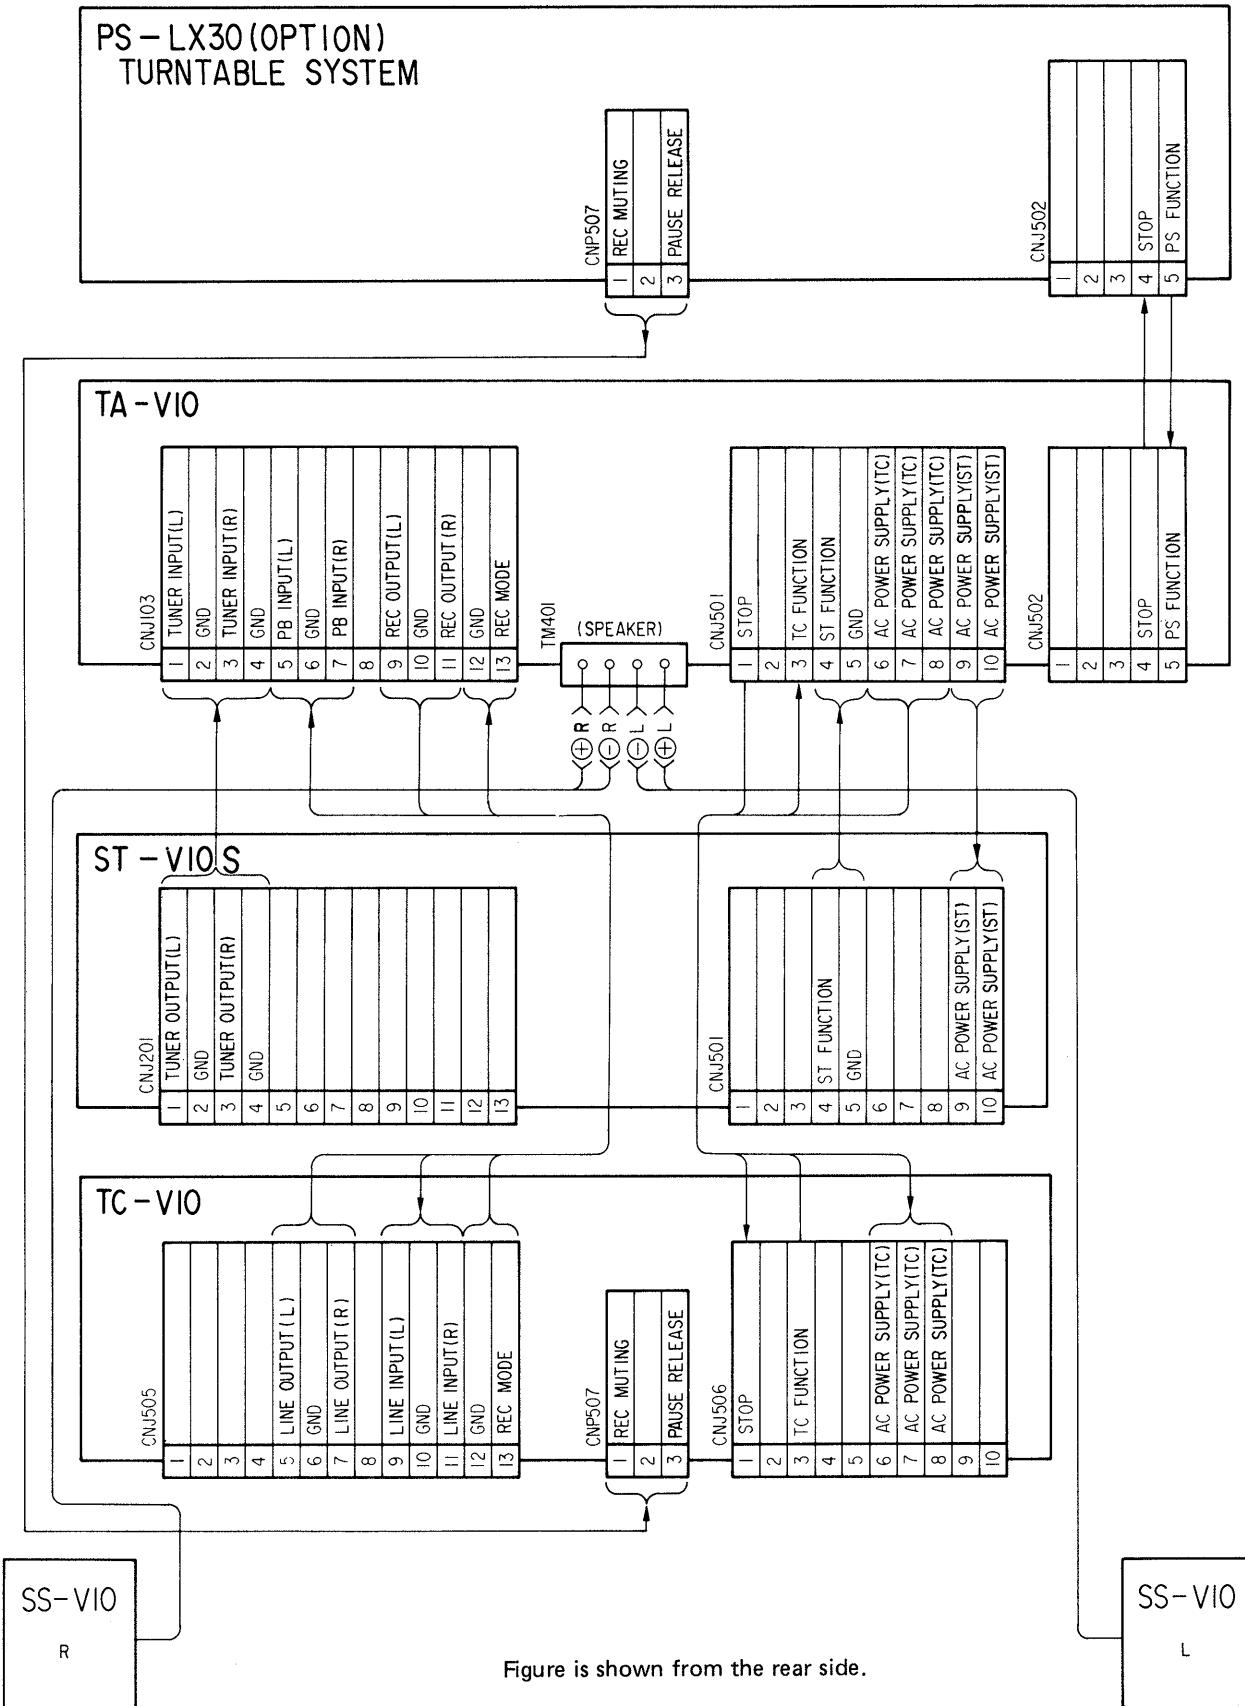

OPERATION OF THE TUNER

Follow the numbered sequence.

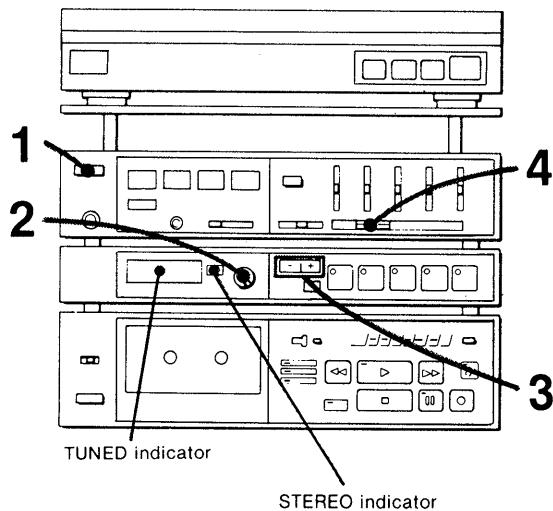

- 1 Depress the POWER switch (= ON). The TUNER indicator lights up.
- 2 Select the desired band with the BAND selector.
FM, MW, SW1, SW2
- 3 Tune in the desired station with the TUNING key, observing the STEREO indicator (in FM reception), the TUNED indicator and the band/frequency-display.
- 4 Adjust the volume with the VOLUME control.

● **STEREO indicator** illuminates when an FM stereo program of sufficient signal strength is received.

● **TUNED indicator** illuminates when a station is tuned in.

To receive the broadcasting program after you have enjoyed another program sources, change the BAND selector setting or press the TUNING or PRESET key.

Adjust the antenna as required

FM: Fully extend the supplied ribbon antenna and position it for best reception.

MW/SW: Position the supplied LAYOUT-FREE AM antenna for the best reception.

If it is difficult to hear the broadcast, connect an external antenna.

TO MEMORIZE STATION FREQUENCIES

Press the MEMORY key after you have tuned in the desired station to be memorized. While the MEMORY indicator is illuminated, press the desired PRESET key. The MEMORY indicator appears and the associated key number will appear in the band/frequency-display. The frequency is then memorized.

Repeat this procedure for each PRESET key.

For each PRESET key, you can memorize an FM, an SW1, an SW2, and MW stations in any desired sequence. A total of 20 stations can be memorized.

Arrange the order of stations for each PRESET key and note the band and the frequency of each in advance.

Notes

- The MEMORY indicator will go off automatically after a few seconds. When the indicator is out, the memory circuit does not operate to memorize the station. In this case press again the MEMORY key.
- The previous memory will be erased when a new frequency on the same band is committed to the memory of the same key. An erasure cannot be made without a new input.

TO CHECK A MEMORIZED FREQUENCY


After the memory procedure is completed, confirm the memorized frequency. Select the band and press the TUNING key and change the frequency display indication. Press the PRESET key to be checked. The frequency which had been memorized should then be indicated in the band/frequency-display.

TO RECEIVE A MEMORIZED STATION


Select the band with the BAND selector and simply press the desired PRESET key.

Supplied LAYOUT-FREE AM external ferrite-bar antenna

Compared with a conventional built-in ferrite-bar antenna which cannot be moved freely to obtain optimum reception, the LAYOUT-FREE AM antenna can be placed virtually anywhere.

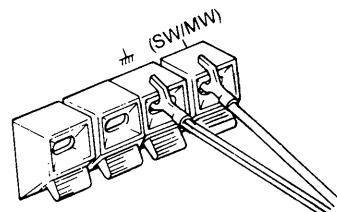

This antenna is designed to pickup signals from a particular direction. Move the LAYOUT-FREE AM antenna to find the best position for reception.

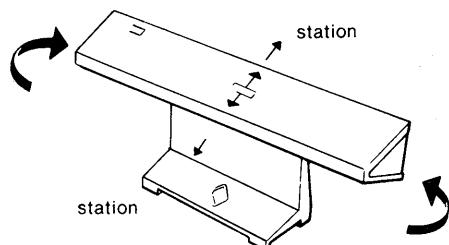

● While recording AM(MW, SW) programs, if a beating sound should be heard, move the LAYOUT-FREE AM antenna to the position where it is not heard.


● Extend the lead-in of the LAYOUT-FREE AM antenna for SW reception.

TAPE PLAYBACK

Caution

Before turning the power on, make sure that the TIMER switch is set to OFF. If the power is on when this switch is set to the REC or PLAY position, recording or playback will start automatically in a few seconds.

Follow the numbered sequence.

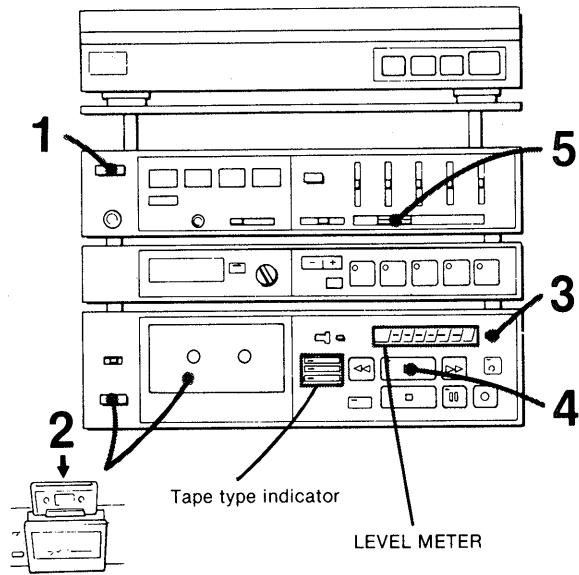

- 1 Depress the POWER switch (\square ON). The TUNER indicator lights up. The function keys do not activate until the flickering of the \blacksquare key goes off.
- 2 Press the \blacktriangle button and insert a recorded cassette with the desired side towards you and the tape surface down. The appropriate tape type indicator lights up.
- 3 Depress the DOLBY NR switch when playing back a tape which has been recorded using the Dolby NR system (\square ON).
- 4 Press the \blacktriangleright key. The TAPE indicator illuminates and play will begin.
- 5 Adjust the volume with the VOLUME control.

The LEVEL METER shows the recorded level during playback.

After the tape is completely rewound, the cassette deck shuts off automatically.

To stop the playback, press the \blacksquare key.

Notes on the blank spaces

• Since AMS works by searching out the blank spaces on a tape, it may not operate if there is noise in the space between selections, or if the space is less than 4 seconds long.

The record muting facility of this cassette deck can make a four second blank space that will assure AMS operation on any recorded tape.


• If the record music includes a long pause, or if it continues for a time at sufficiently low volume, as may happen for instance with classical music, or if any selection is less than 20 seconds long, the AMS will treat it as a blank.

TAPE RECORDING

Caution

Before turning the power on, make sure that the TIMER switch is set to OFF. If the power is on when this switch is set to the REC or PLAY position, recording or playback will start automatically in a few seconds.

Follow the numbered sequence.

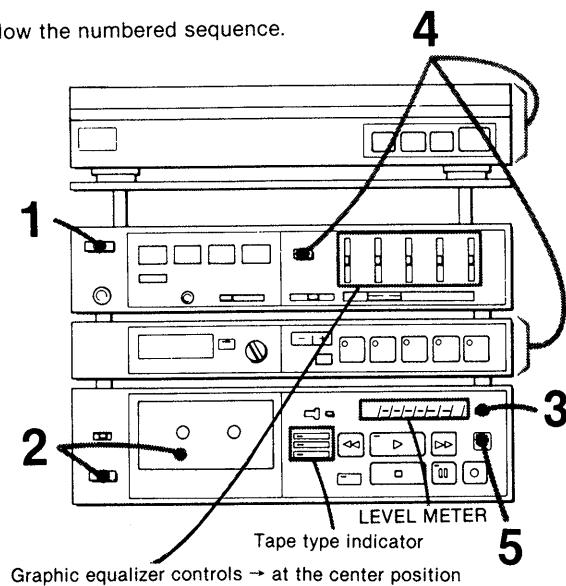

- 1 Depress the POWER switch (\square ON). The TUNER indicator lights up. The function keys do not activate until the flickering of the \blacksquare key goes off.
- 2 Press the \blacktriangle button and insert a cassette with the tape surface down. The appropriate tape indicator lights up.
- 3 Depress the DOLBY NR switch when recording using the Dolby NR system (\square ON).
- 4 Play the program source to be recorded. The appropriate function indicator lights up according to the program source in use.
To record a broadcast: Tune in the desired station.
To record from the phonograph: See "Synchronized play of the turntable and the cassette deck" on page 13.
To record the program source connected to the CD/AUX inputs: Play the program source and press the CD/AUX button.
- 5 Press the \bullet key. The RECORD indicator illuminates and recording will begin.

To adjust the tone quality, use the graphic equalizer controls (See page 11).

The LEVEL METER shows the input level during recording.

After the tape is completely rewound, the cassette deck shuts off automatically.

To stop the recording, press the \blacksquare key.

To stop the tape momentarily, press the \blacksquare key.

AUTOMATIC RECORDING CONTROL SYSTEM

No recording level adjustment is necessary with the automatic recording control system. The recording level is automatically adjusted properly.

The settings of the VOLUME and BALANCE controls have no effect on recording, so you can listen to the program at any volume you want while recording.

MORE ACCURATE RECORDING STARTS

You can use the **II** (pause) key to start recording more accurately than is possible when recording is started by pressing the **●** key. After completing step 4, press the **II** key then press the **●** key. At the moment you wish to start recording, you need only press the **II** key again.

RECORD MUTING

By pressing the **O** (record muting) key during recording, four seconds interspacing is provided automatically, eliminating unwanted program material such as broadcasting commercials. While the record muting is operating, the incoming signal is not recorded on the tape but it continues to register on the meters and feed to the monitor so that you know exactly what is going on.

- 1 Press the **O** key when the segment you do not want to record begins. The indicator of the **II** key will blink, and the tape path will pause automatically after four seconds.
- 2 When you want to resume recording, press the **II** key.

To insert a blank over four seconds long

keep the **O** key pressed for as long as you want the blank segment on the tape to be. After four seconds, the indicator of the **II** key will blink more rapidly. When you release the **O** key, the cassette deck will be in the pause mode. When you want to resume recording, press the **II** key to release the pause mode.

ERASING

When the cassette deck functions in recording mode, the erase head automatically erases any previously recorded material.

To erase without recording :

- 1 Make sure that the safety tab of the cassette is in place, or that the tab slot is covered with plastic tape. Disconnect the microphone from the MIC jack.
- 2 Insert the cassette to be erased.
- 3 Press the **►** key. The TAPE indicator illuminates.
- 4 Press the **◀◀** or **▶▶** key to rewind or to advance the tape for any desired point to be erased.
- 5 Press the **●** key. Erasing will begin.

USING THE GRAPHIC EQUALIZER CONTROLS

The level of a band will be increased by sliding a control upwards, and decreased by sliding it downwards.

To equalize the sound, first set all equalizer controls at their center position and lay the program. Slide the control of the frequency band to be equalized upwards or downwards until you perceive an improvement.

Frequency coverage of each equalizer control


- 63 Hz**: Use this control to boost or cut the bass.
- 250 Hz**: Use this control to adjust the middle frequency range.
- 1 kHz**: Use this control to provide more presence of vocals.
- 4 kHz**: Use this control to adjust the brightness of sound.
- 12 kHz**: This control effects general treble. Slide downwards to reduce high frequency noise, such as tape hiss.

Notes

- The graphic equalizer controls have effect on recording, on listening to various program sources and on microphone mixing.
- Normally, keep each control at its center position.

MICROPHONE MIXING

Follow the numbered sequence.

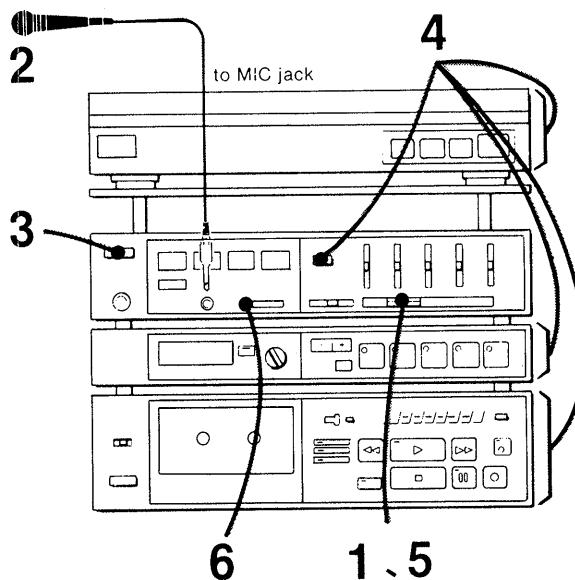

- 1 Lower the volume with the VOLUME control.
- 2 Connect the microphone to the MIC jack.
- 3 Depress the POWER switch (\square ON).
- 4 Play the sound source to be mixed with the microphone sound.
- 5 Adjust the overall sound level with the VOLUME control.
- 6 Adjust the MIC MIXING control to get the good mixing balance.

You can also add the equalization value to the mixed sound.
See "using the graphic equalizer controls" on page 11.

TIPS FOR BETTER MIXING

Howling

If the microphone is placed too near speakers, a howling effect caused by acoustic feedback may occur. When this happens, change the direction of the microphone or decrease the volume until the howling stops.

Mixing balance between the microphone and the program source.

To get a good mixing balance, adjust the MIC MIXING control. Slide the control towards MIC (right) for more microphone volume and less source volume. Slide it towards SOURCE (left) for more source volume and less microphone volume.

RECORDING THE MIXED SOUND

You can record the sound from the microphone mixed with a program source.

To record the sound mixed with a record, a compact disc or an auxiliary program source connected to the CD/AUX inputs.

Insert a cassette into the cassette deck and press the \bullet key.

To record the sound mixed with a taped program

Another cassette deck is required for playback. Connect this cassette deck to the CD/AUX inputs. Insert a cassette into the TC-V10 for recording, press the CD/AUX button and start playback of the recorded cassette. Then press the \bullet key.

To record only the sound from the microphone

Turn off the equipment connected to the CD/AUX inputs (if connected). Insert a cassette into the cassette deck and press the CD/AUX button then press the \bullet key.


Note

When you have finished mixing, be sure to disconnect the microphone from the MIC jack and to slide the MIC MIXING control completely towards SOURCE.

USING THE TIMER

By connecting an optional timer to the LBT-V10, you can record a radio program or wake up to the taped program or the radio program at any desired time.

Connection

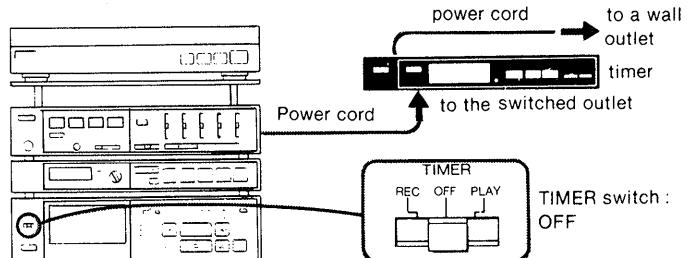

Timer activated recording

- 1 Set the timer so that power is supplied to LBT-V10.
- 2 Turn on the LBT-V10 and tune in the station which will broadcast the program you want to record.
- 3 Set the cassette deck's TIMER switch to OFF.
- 4 Insert a cassette and select the Dolby NR system. Make sure that the tab is intact or that plastic tape covers the tab slot.
- 5 Set the timer for the desired time. (At this point power to the connected equipment will be cut off.)
- 6 Set the cassette deck's TIMER switch to REC.

The cassette deck is now ready to start recording at the time set on the timer.

To wake up to a taped program

- 1 Set the cassette deck's TIMER switch to OFF.
- 2 Turn on the LBT-V10 and set the appropriate switches for playback.
- 3 Turn on the cassette deck and insert the recorded cassette.
- 4 Set the timer for the desired time. (At this point power to the connected equipment will be cut off.)
- 5 Set the cassette deck's TIMER switch to PLAY.

The cassette deck is now ready to start playback at the time set on the timer.

To wake up to a radio program

- 1 Set the cassette deck's TIMER switch to OFF.
- 2 Turn on the LBT-V10 and tune in the station.
- 3 Set the timer for the desired time. (At this point, power to the connected equipment will be cut off.)

The tuner is now ready to receive a program at the time set on the timer.

Note

The cassette deck's TIMER switch will function properly only if the cassette deck is turned on after the switch is set to REC or PLAY. Do not change the setting of the TIMER switch during the few seconds stand-by period immediately after the power is turned on. If you want to change the setting of the switch, turn the power off first.

**SYNCHRONIZED PLAY OF THE TURNTABLE AND THE
CASSETTE DECK**

The optional PS-LX30 turntable system is required.

Record recording starts only when the START/STOP or ARM LIFTER key is pressed. When the tonearm lowers onto the record, the cassette deck goes into the record mode and when the tonearm is lifted up, the deck goes into the auto record muting mode for four seconds, then into the record stand-by mode.

Before operation, check the synchro remote control cord connection.

- 1 Depress the POWER switch (\square ON).
The TUNER indicator illuminates.
- 2 Place a record on the platter.
- 3 Select the correct record size and speed with the SIZE SELECTOR and SPEED selector.
- 4 Press the II key and then \bullet key. The cassette deck is set in record stand-by mode.
- 5 **To record from the beginning of a record**, press the START/STOP key. When the tonearm lowers onto the record, the record stand-by mode is released and recording begins.
To record from a certain point on the record, move the tonearm by hand over the desired point and press the START/STOP key. When the tonearm lowers onto the record, the record stand-by mode is released and recording begins.

To lift up the tonearm to move it to a different point on the record press the ARM LIFTER key. When the tonearm is lifted up, auto-record muting activates for four seconds, and the record stand-by mode is assumed.

To stop recording during record play, press the START/STOP key. When the tonearm is lifted up, auto-record muting activates for four seconds, and the record stand-by mode is assumed.

When record play ends, the tonearm returns automatically to the arm rest and the turntable stops rotating.

Caution If the START/STOP key is pressed during recording of other program sources, the record stand-by mode, not the record recording mode is assumed.

PARTS LIST**ACCESSORY & PACKING MATERIALS**


<u>Part No.</u>	<u>Description</u>
1-402-082-11	ANTENNA, FERRITE-ROD (LW,MW,SW)
1-501-224-00	ANTENNA, FEEDER
1-556-650-00	CORD, SPEAKER CONNECTION
1-557-307-11	CORD (WITH CONNECTOR)(5P:SYSCON 3)
1-557-308-21	CORD (WITH CONNECTOR)(13P:SYSCON 1)
1-557-357-21	CORD (WITH CONNECTOR)(10P:SYSCON 2)
●;1-560-938-00	PIN CONNECTOR 5P
3-312-970-00	(TC-V10)...SHEET, PROTECTION
3-701-630-00	BAG, POLYETHYLENE
3-701-806-00	ADAPTOR, 45, (E)
3-773-788-11	MANUAL, INSTRUCTION
3-795-835-11	(ST-V10S)...INSTRUCTION
4-855-809-00	(TA-V10)...SHEET, PROTECTION
4-875-574-00	(ST-V10S)...SHEET, PROTECTION
4-885-598-01	SCREWDRIVER, ADJUSTMENT
4-903-115-01	(SS-V10)...SHEET, PROTECTION
4-903-116-01	(SS-V10)...BAG, POLYETHYLENE
4-903-509-01	INDIVIDUAL CARTON
4-903-510-01	PARTITION (A)
4-903-516-01	CUSHION (RIGHT), UPPER
4-903-517-01	CUSHION (RIGHT), LOWER
4-903-519-01	CUSHION (LEFT), LOWER
4-903-522-01	CUSHION (LEFT), UPPER
4-903-529-01	PARTITION (B)
X-3701-105-0	ROD ASSY, CLEANING, HEAD

NOTE:

- Items marked " ● " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

INTEGRATED STEREO AMPLIFIER

(TA-V10)

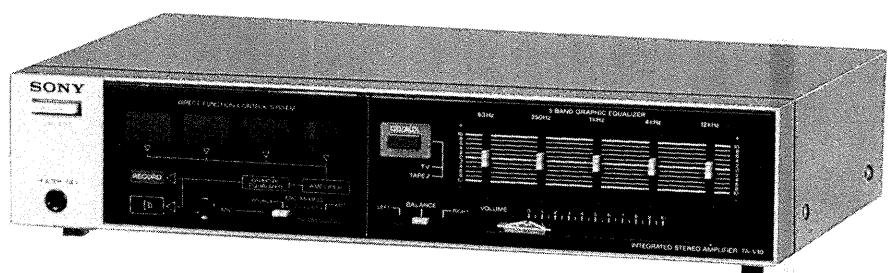

SECTION 1

DISASSEMBLY


Note: Follow the disassembly procedure in the numerical order given.

CASE REMOVAL


Remove case by taking out four screws.




MAIN BOARD REMOVAL

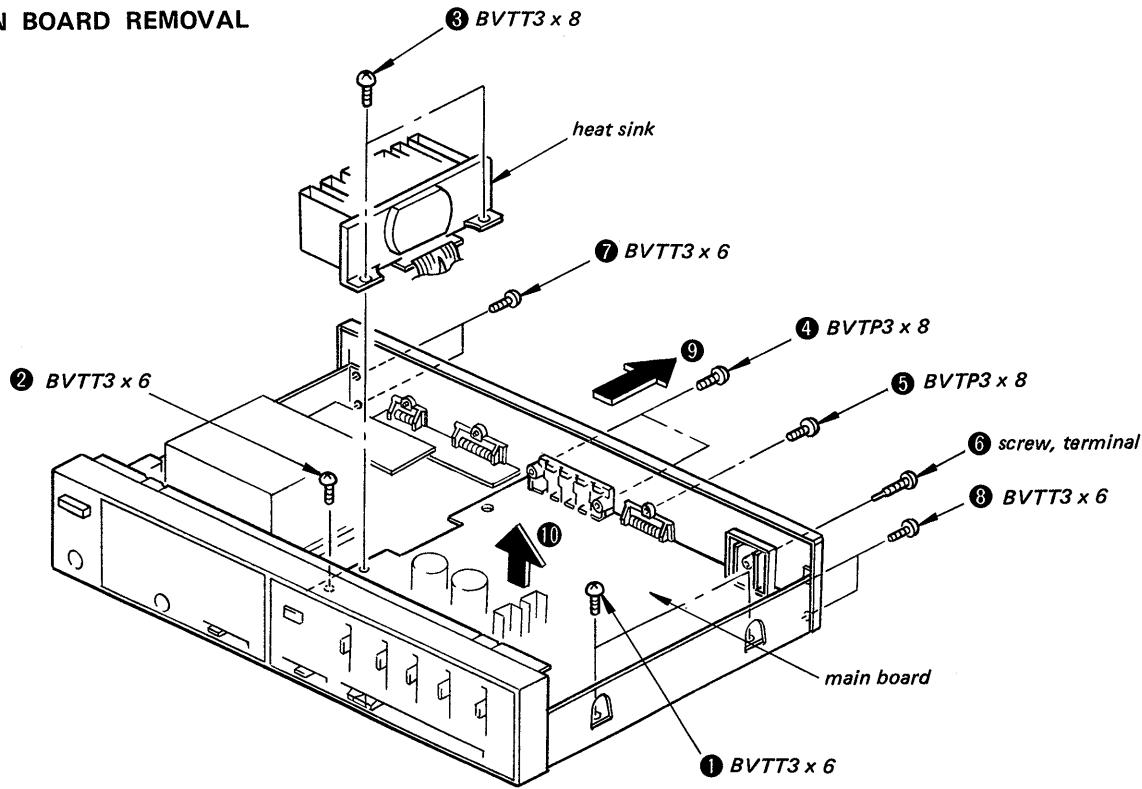

PANEL REMOVAL

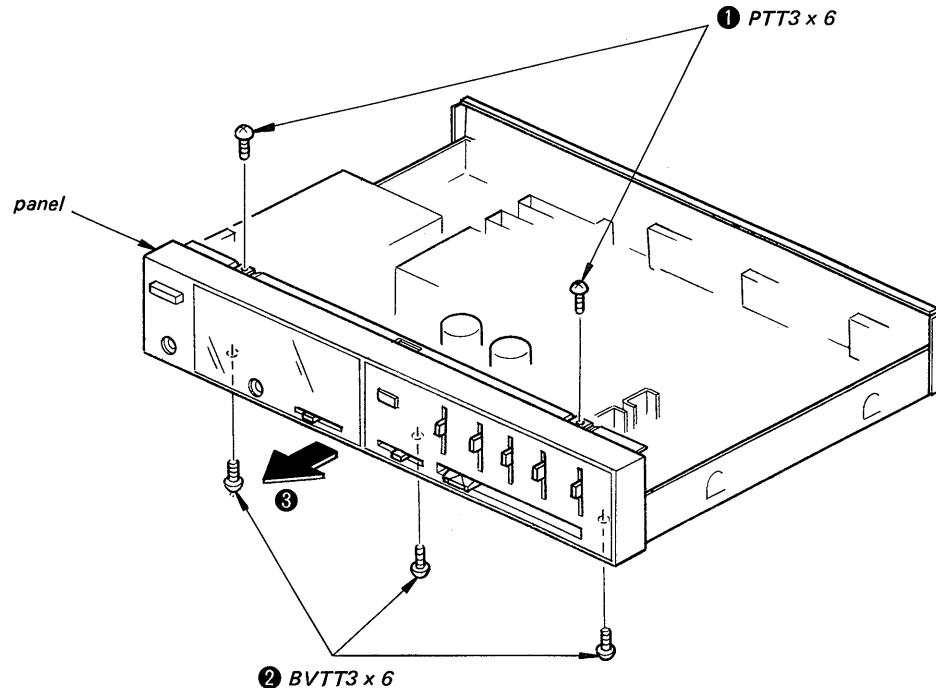


GRAPHIC EQ BOARD REMOVAL

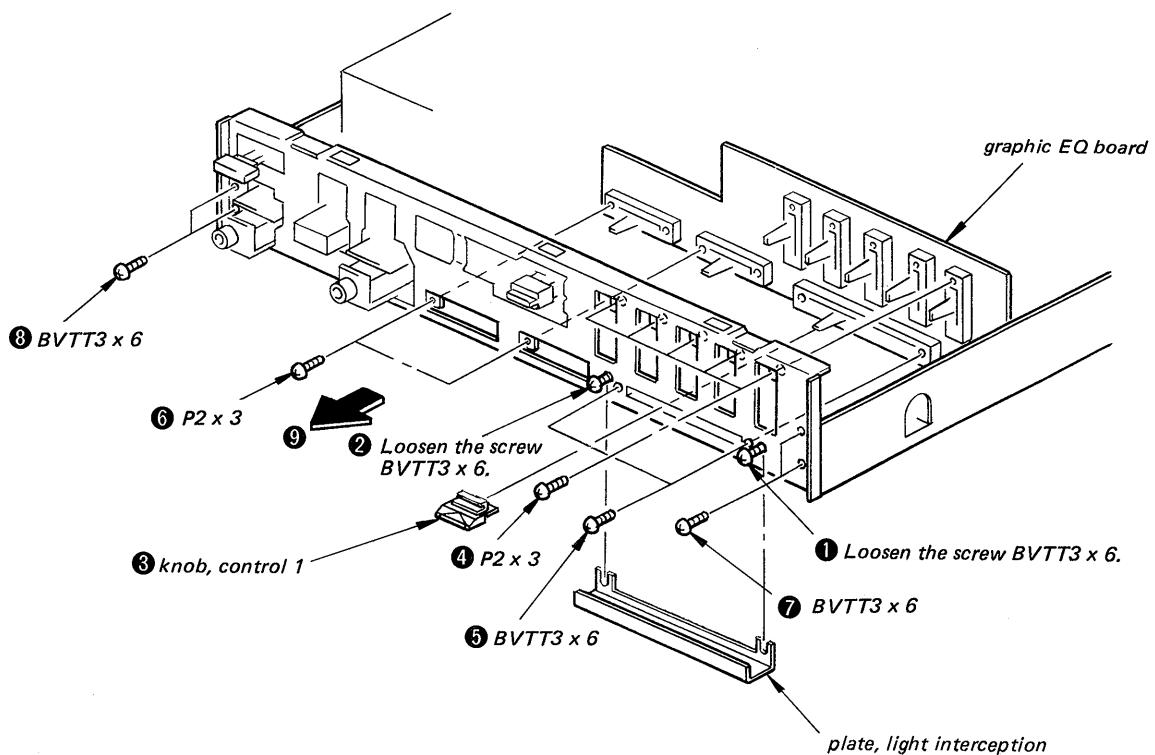


**SECTION 2
DIAGRAMS**

2-1. BLOCK DIAGRAM

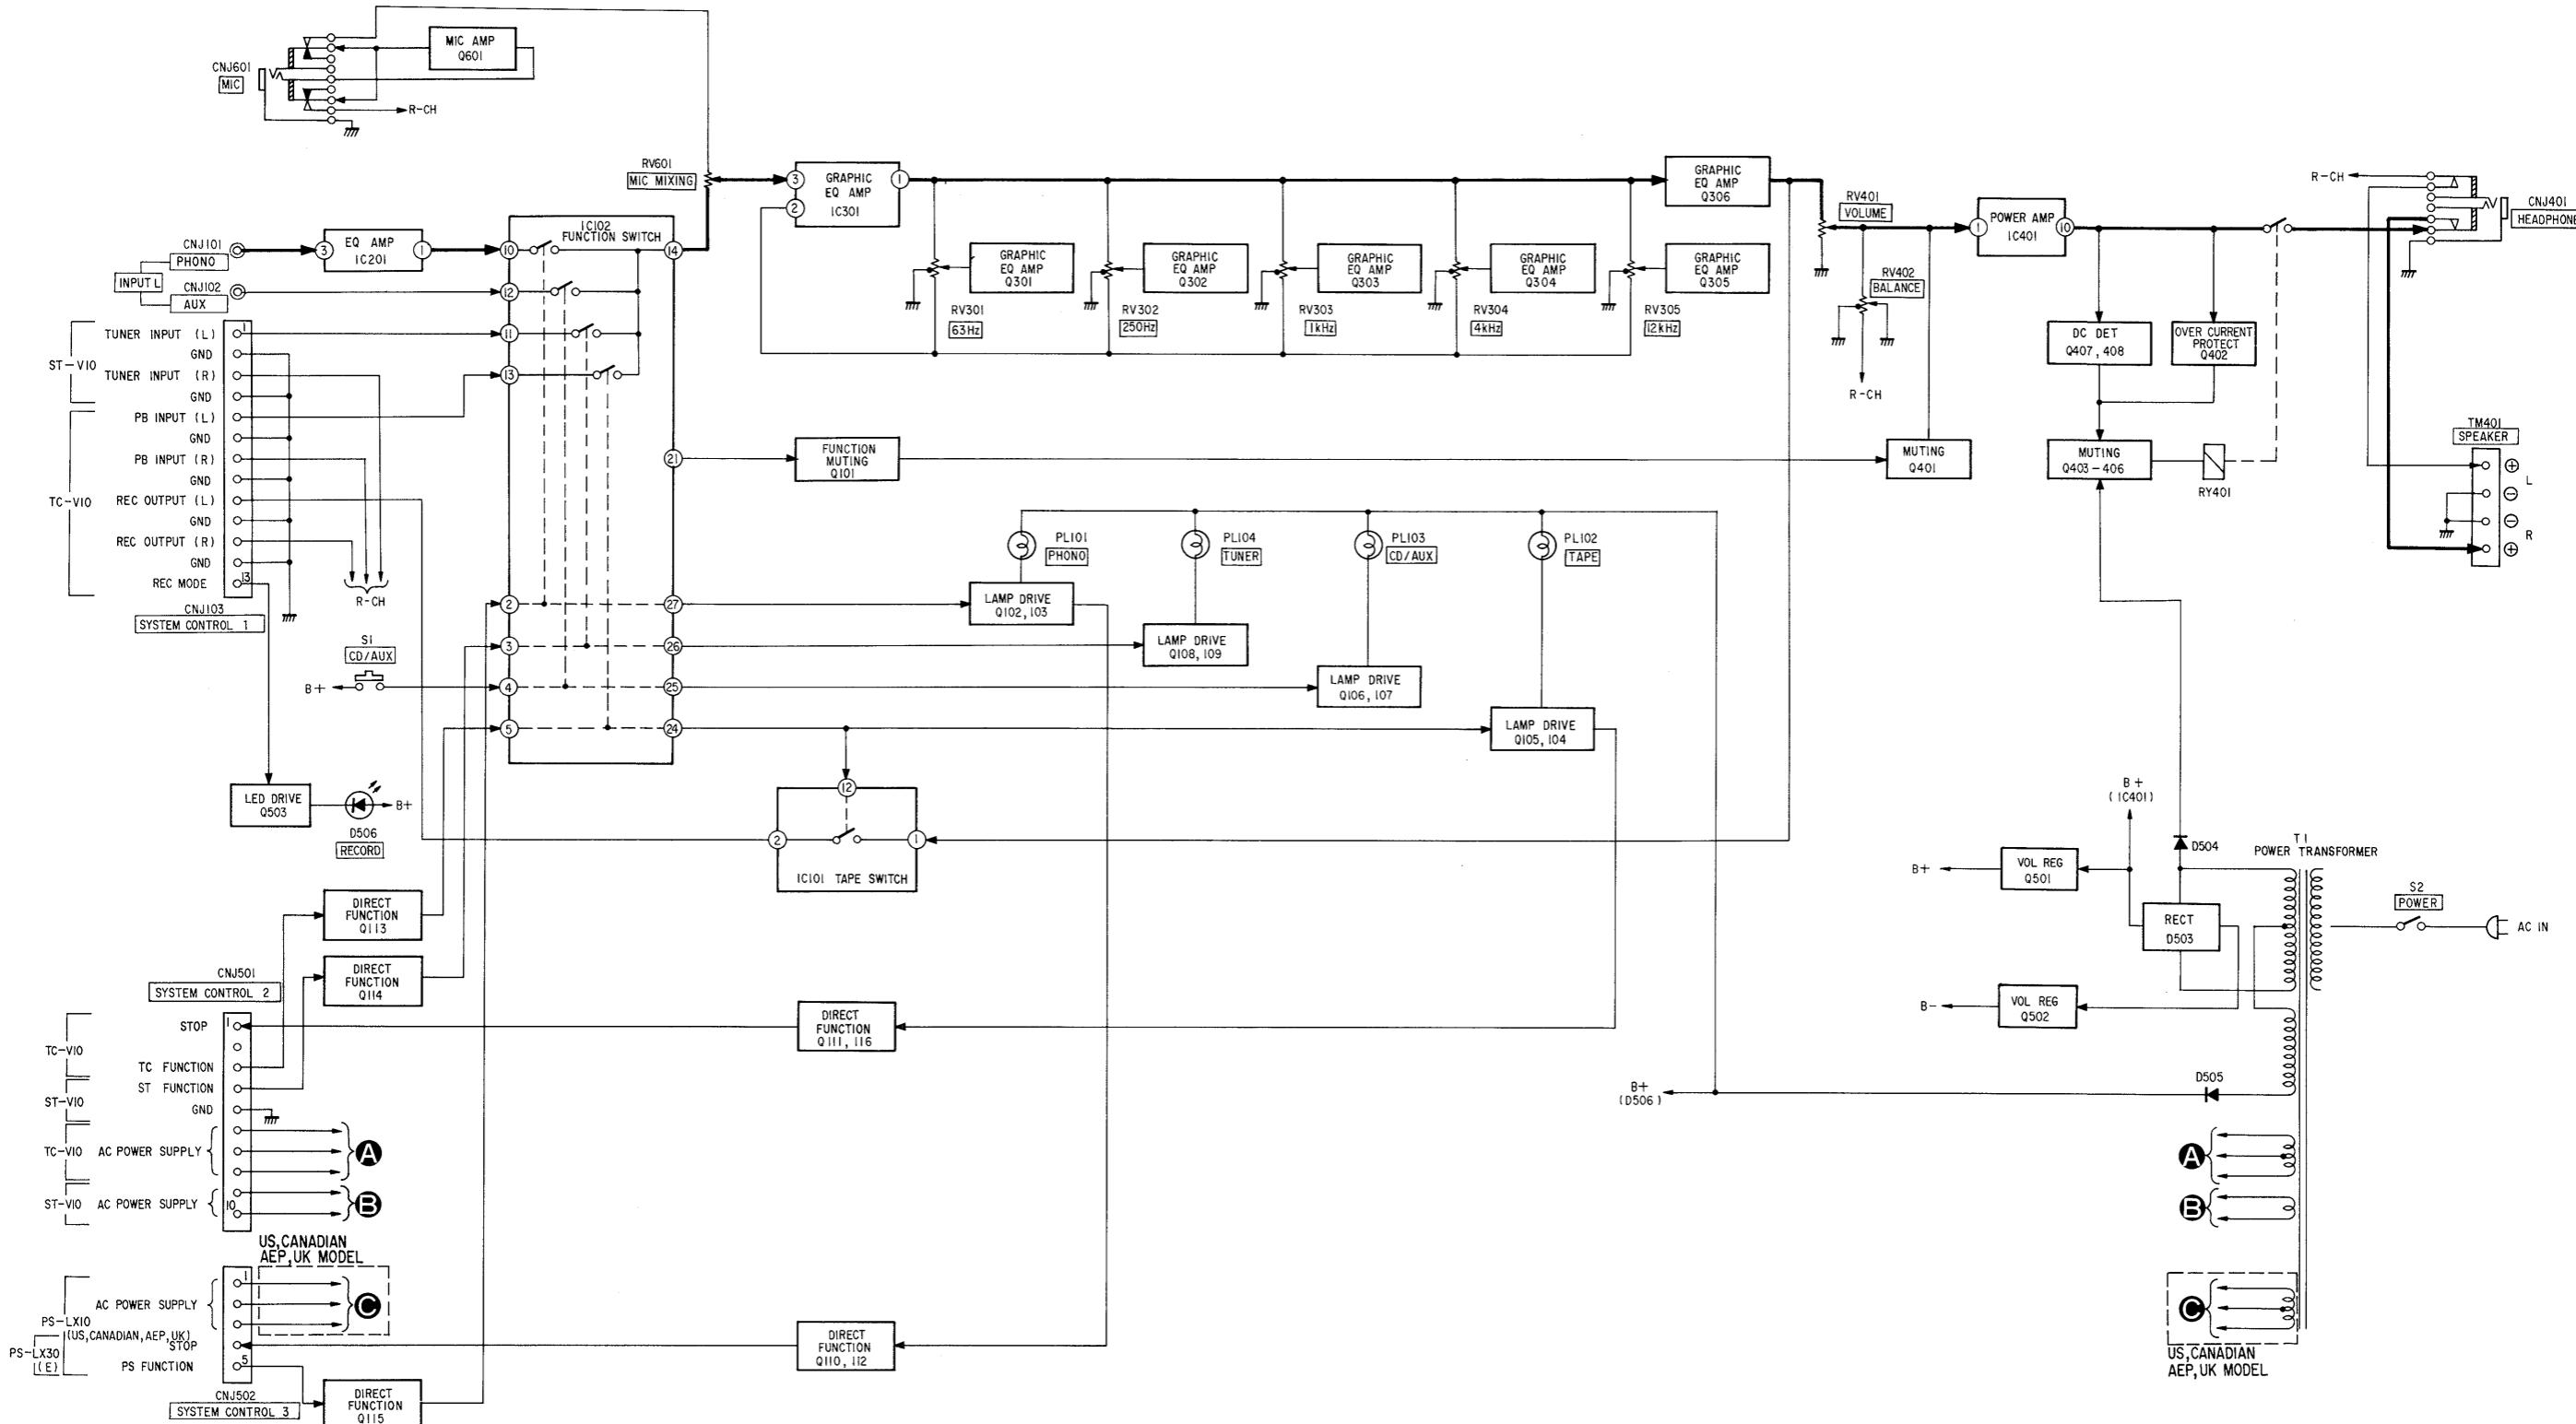


MEMO

- Semiconductor Lead Layouts
- LC4066BH
LC7815H
line or slit or dot (Top view)
- 2SD809
2S8731
letter side
- M5218P
- Slit or dot
- 2SA1175
letter side
- STK4141II
STK4151II
- RB402
mark
- 2SC2878
- 2SA1049
2SC2458
- SEL1213C
long short
anode cathode
- 1S953-7
HZ1C2L
10E-2
cathode
anode
- Note:
• Color code of sleeving over the end of the jacket.
- ○ : parts extracted from the component side.
- ○ : B+ pattern
- ○ : B- pattern
- → : signal path
- → : L-CH signal path
- → : R-CH signal path

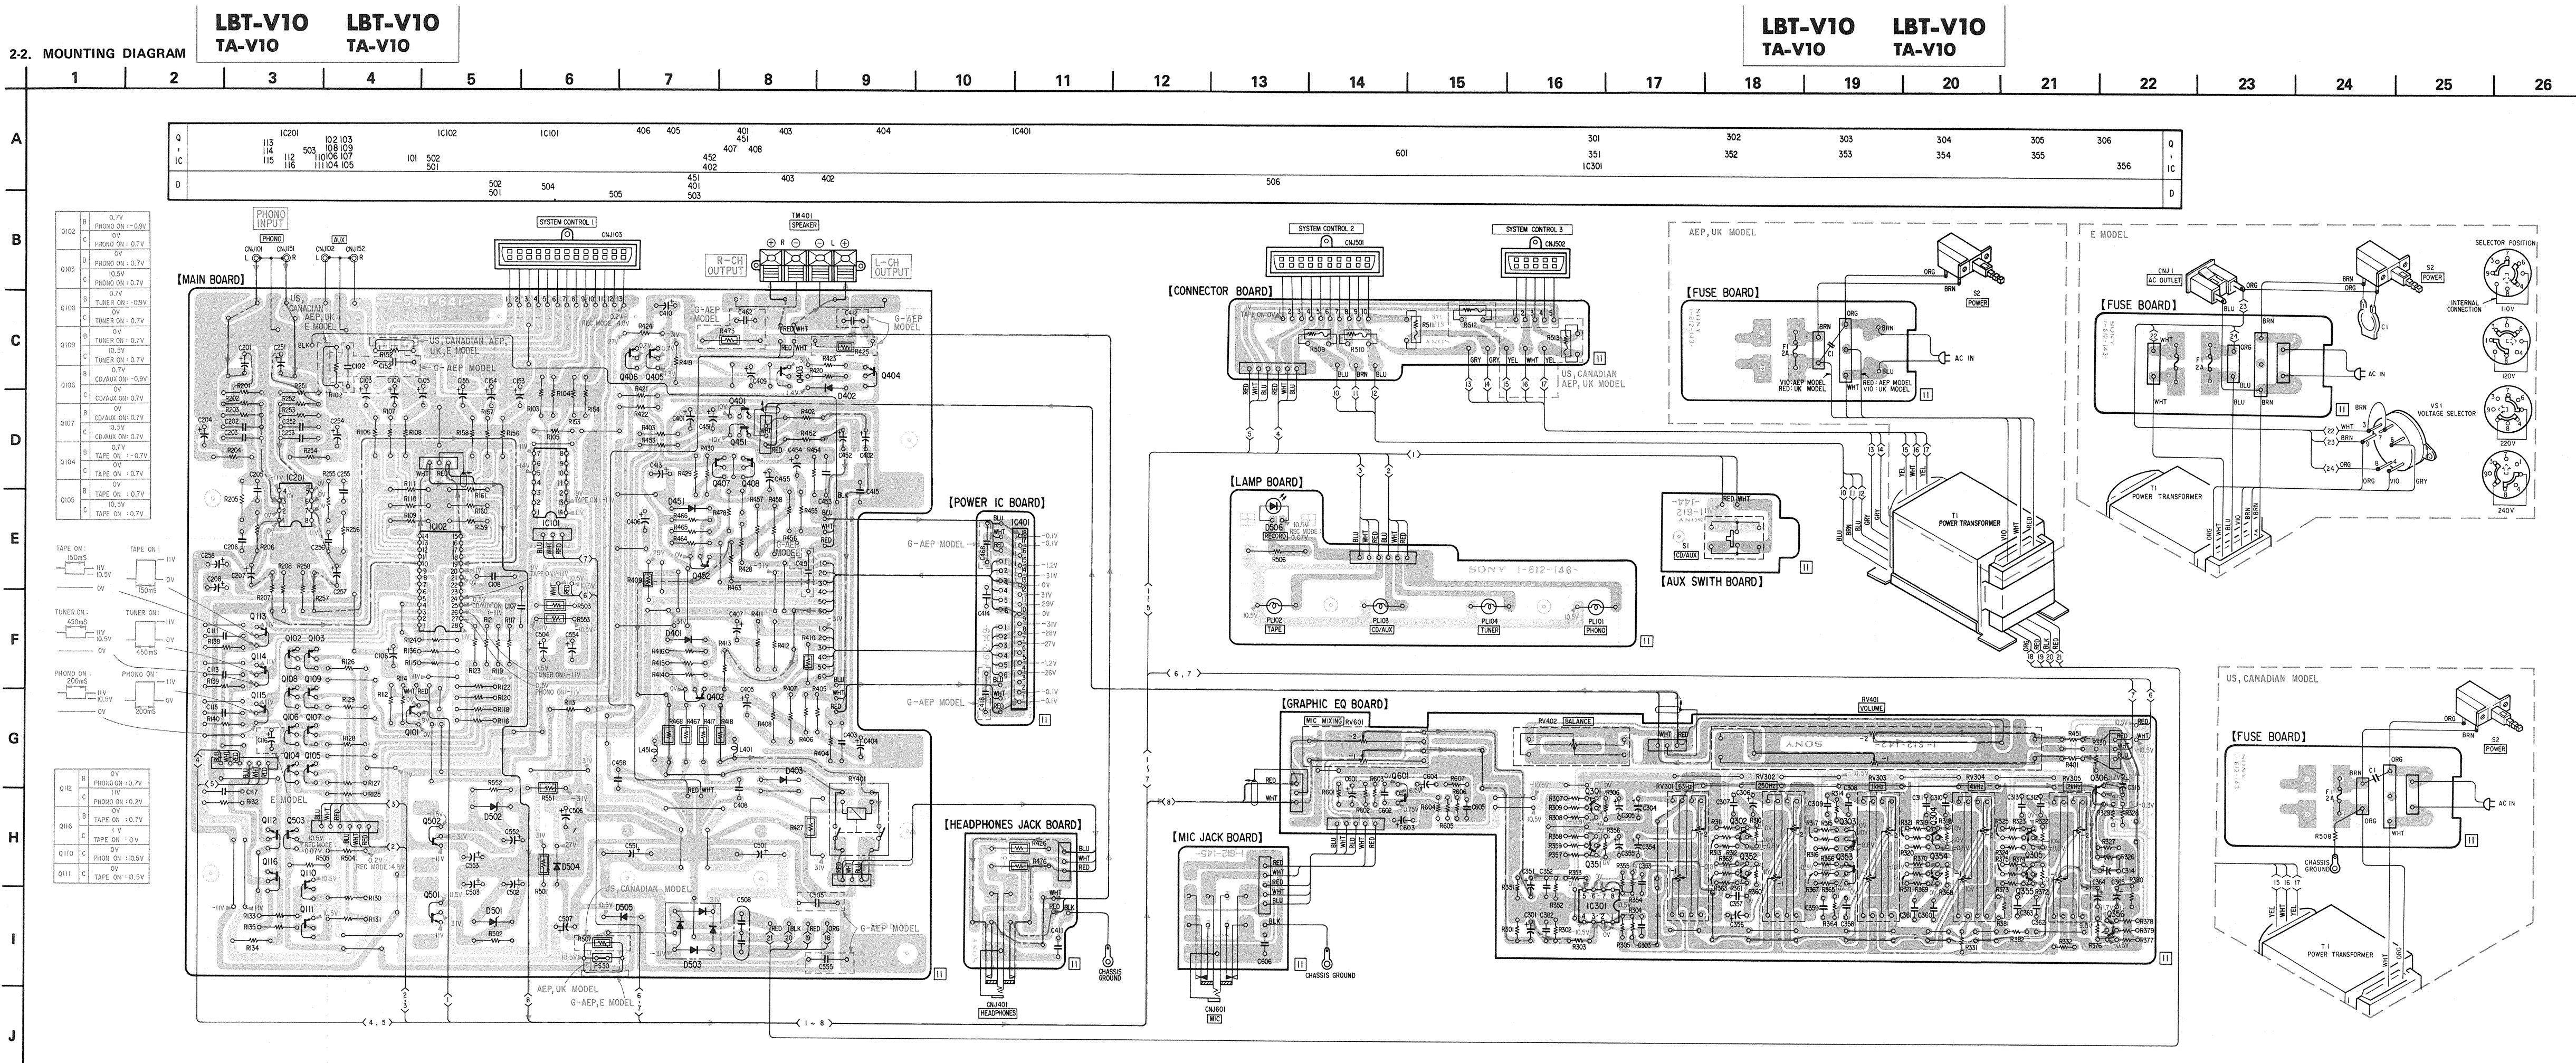

2-3. SCHEMATIC DIAGRAM

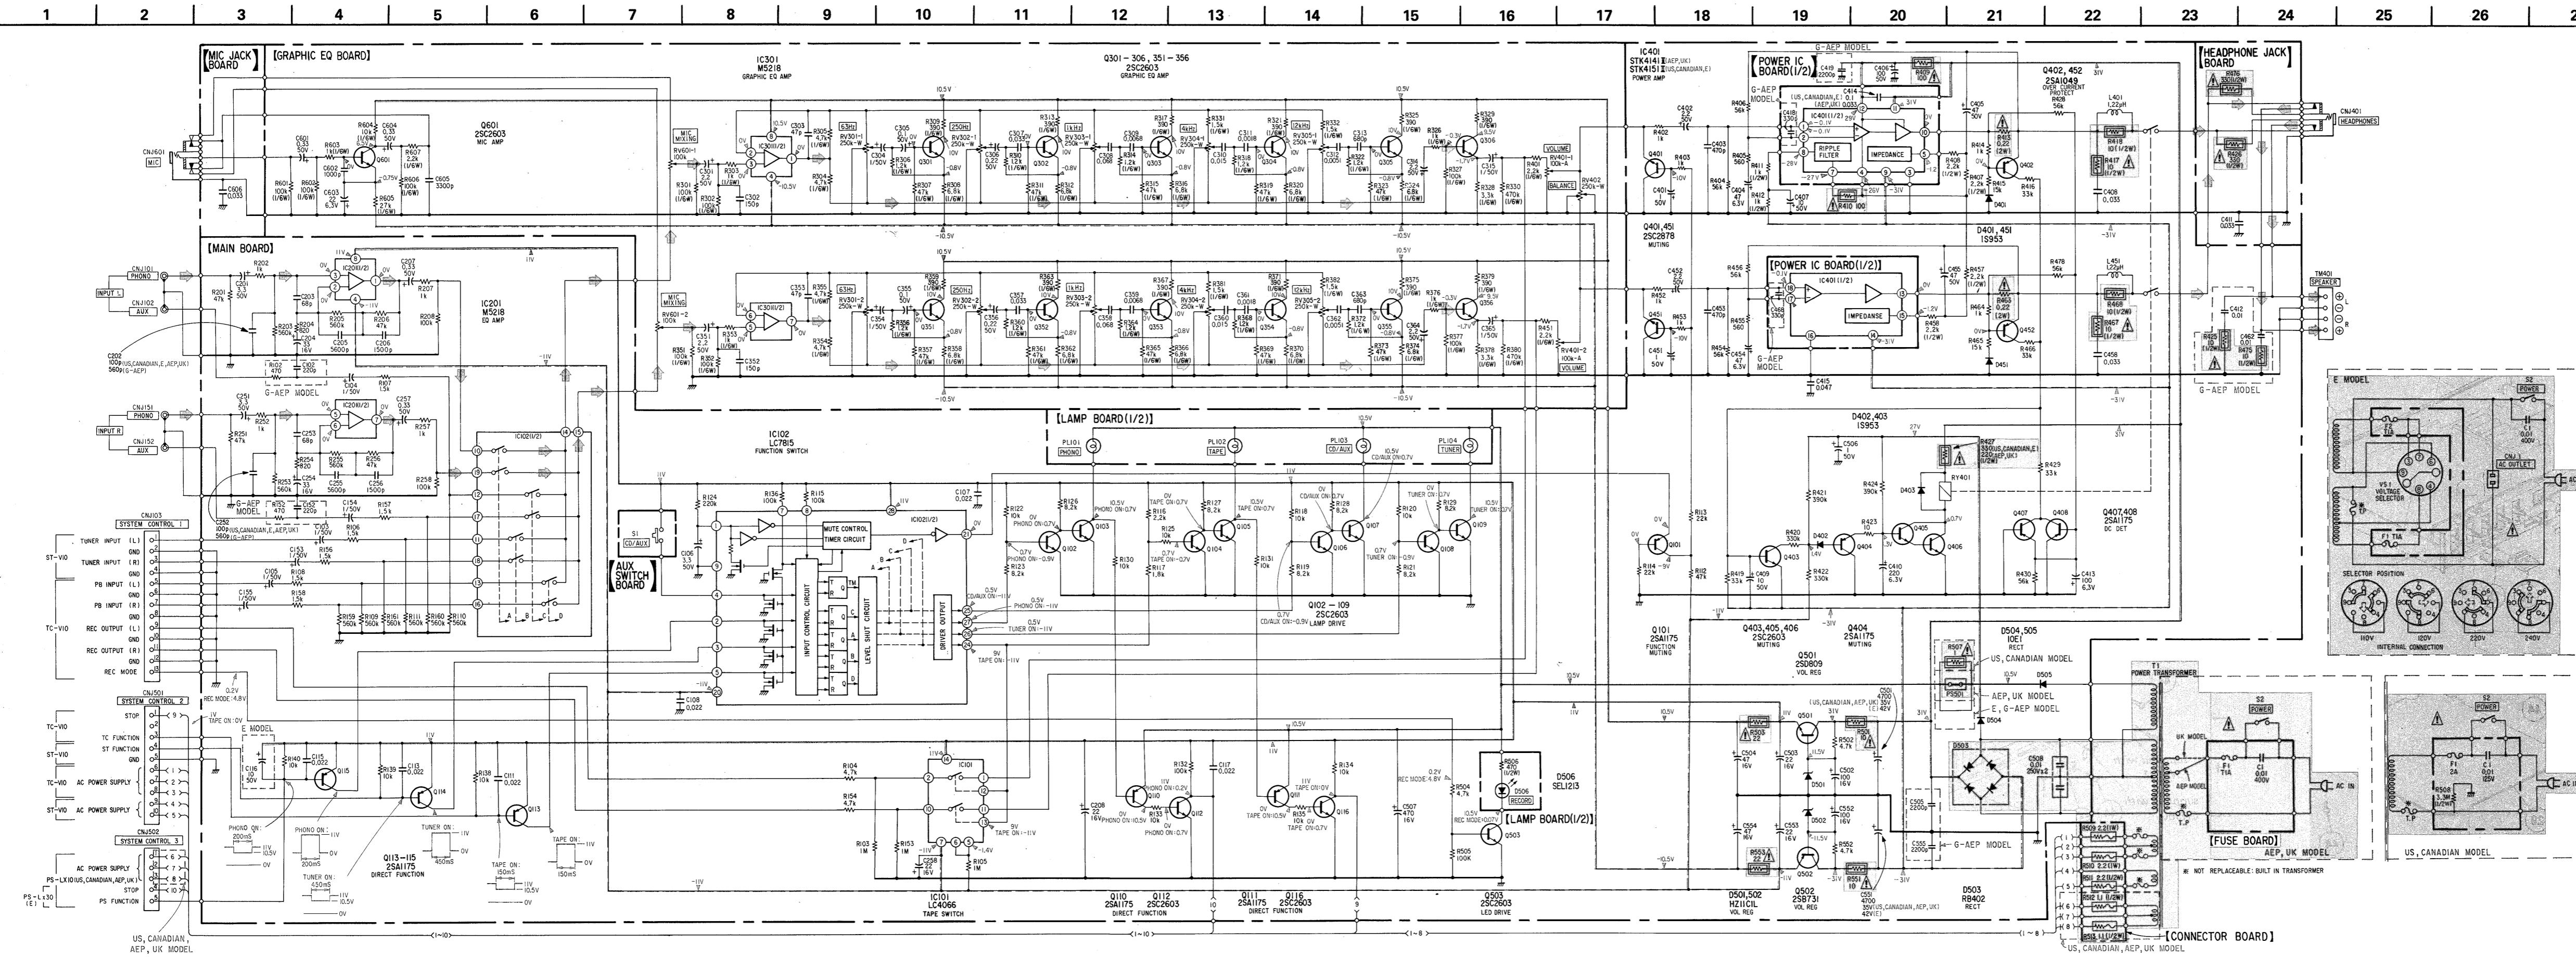

Note:

- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in ohms, $\frac{1}{4}\text{W}$ unless otherwise noted. $\text{k}\Omega$: 1000 Ω , $\text{M}\Omega$: 1000 k Ω .

- --- : nonflammable resistor.
- --- : fusible resistor.
- \square : panel designation.
- --- : B+ bus.
- --- : B- bus.


- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken under no-signal conditions with a VOM.
- Voltage variations may be noted due to normal production tolerances.

- \Rightarrow : signal path.

Note: Voltages are measured with a VOM (50k Ω /V).

Note: The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.


Note: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

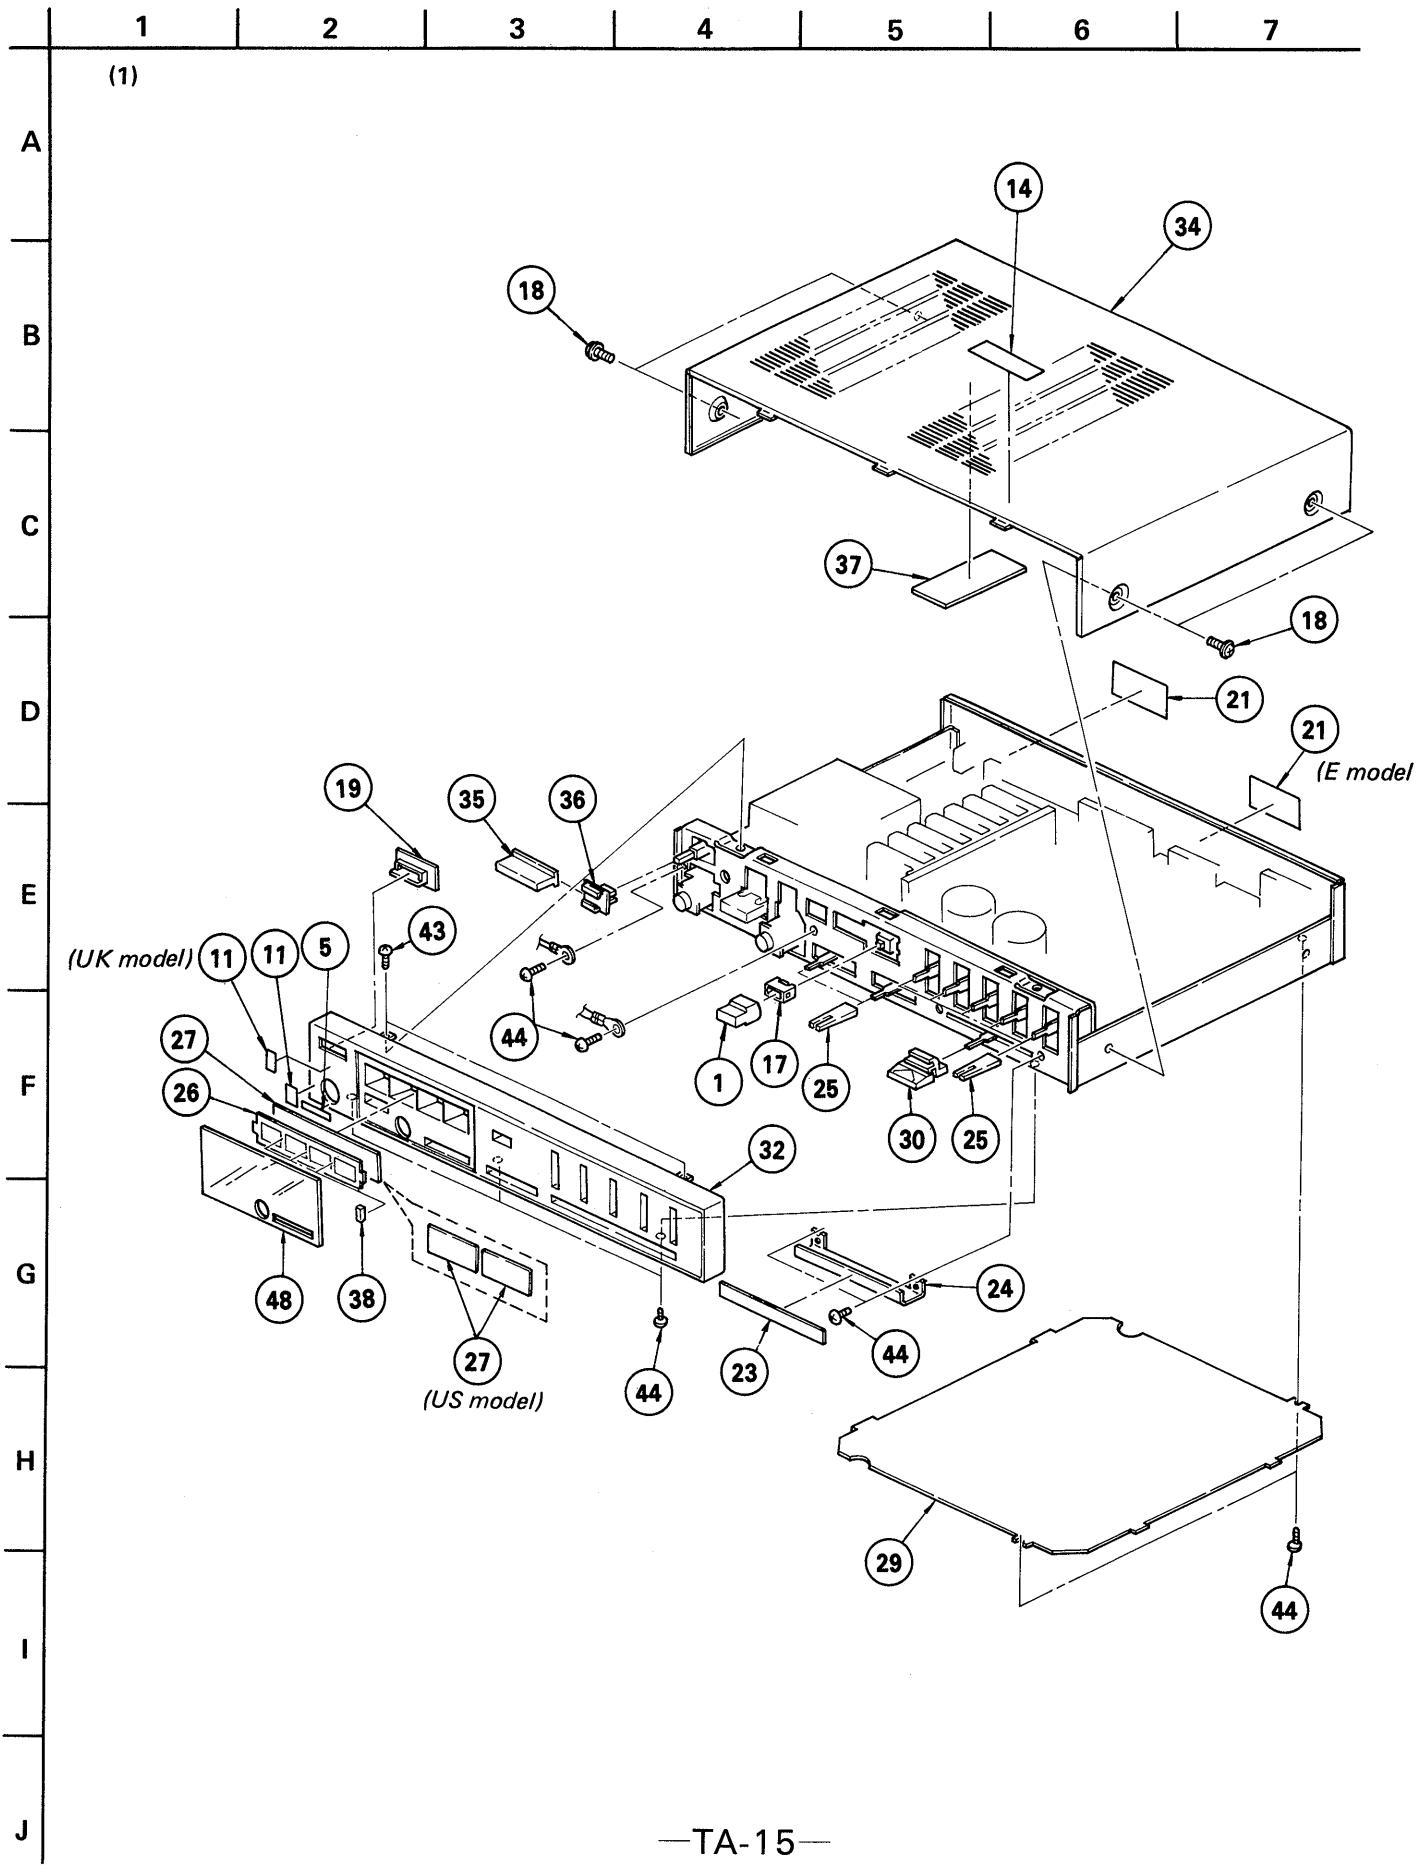SECTION 3
EXPLODED VIEWS AND PARTS LIST

1 2 3 4 5 6 7

(2)

A

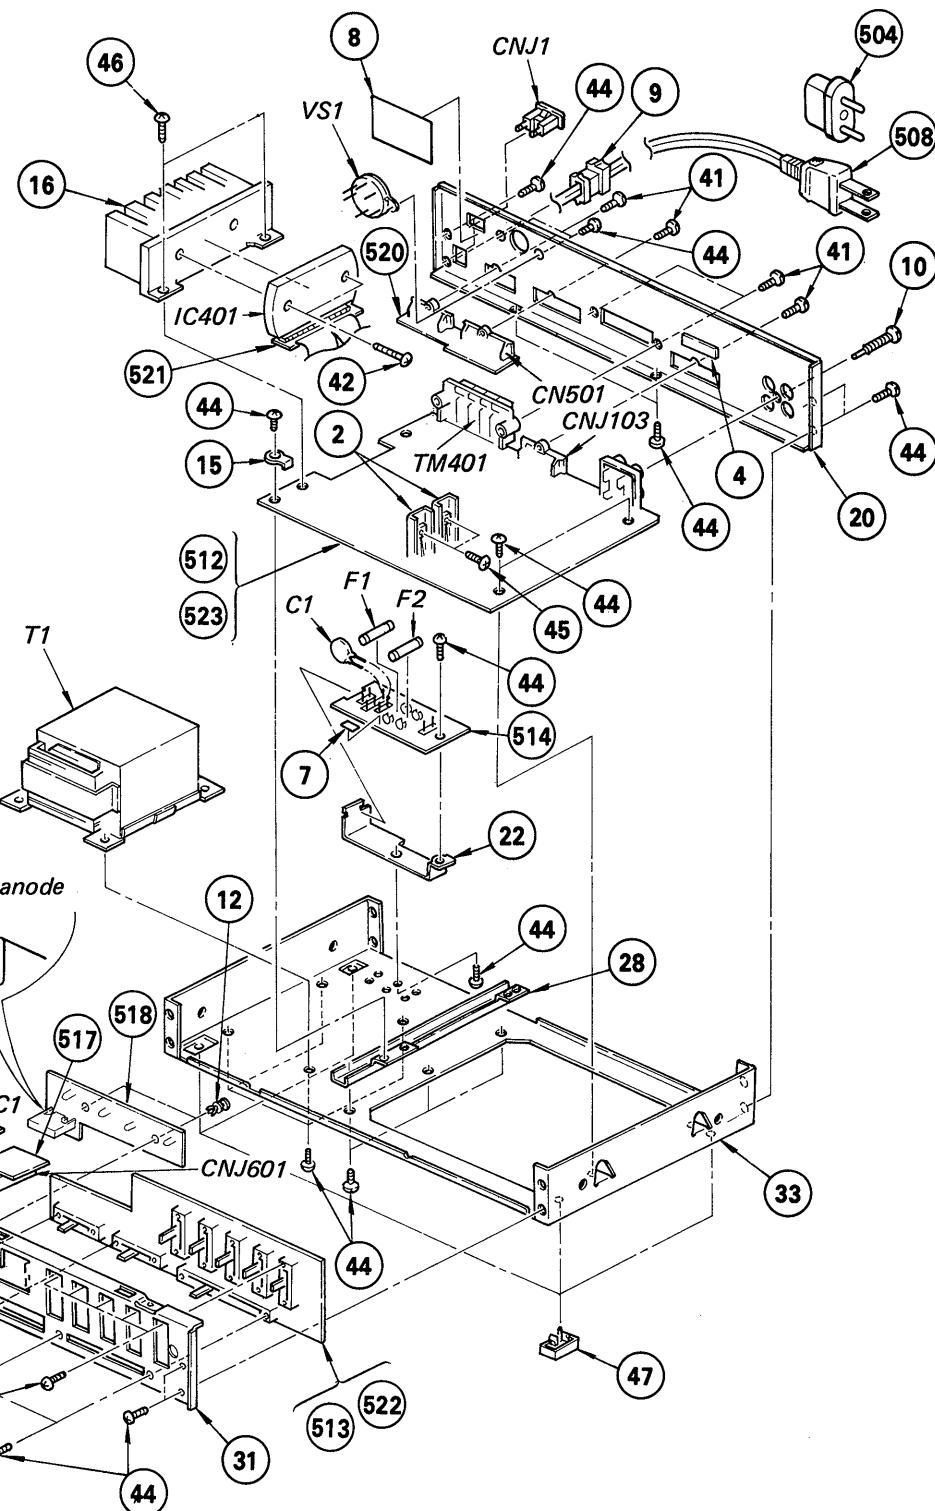

GENERAL SECTION

No.	Part No.	Description
1	2-363-012-11	(SILVER)...KNOB (6X14), CORNER (CD/AUX)
1	2-363-012-31	(BLACK)...KNOB (6X14), CORNER (CD/AUX)
2 ♦;3-312-615-31	HEAT SINK	
3	3-575-524-00	(AEP,UK)...COVER, POWER SWITCH
4	3-701-030-00	LABEL, SERIAL NUMBER
5 ♦;3-701-690-00	(UK)...LABEL (MADE IN JAPAN)	
6	
7 ♦;3-701-946-23	(US,Canadian)...LABEL, FUSE	
8	3-703-044-26	(US,Canadian)...LABEL, CAUTION
9	3-703-244-00	(Canadian,AEP,UK)...BUSHING, CORD
9	3-703-571-00	(US,E).....BUSHING (S), CORD
10	3-703-473-00	SCREW, TERMINAL
11	3-703-710-11	STICKER, SONY SYMBOL (12)
12	4-812-134-00	RIVET NYLON, 3.5
13	4-875-455-01	(E)...COVER (DIA.20), CAPACITOR
14	4-861-045-00	LABEL, CAUTION
15	4-870-539-00	PLATE, GROUND
16 ♦;4-881-415-00	(US,Canadian,E)...HEAT SINK (A)	
16 ♦;4-902-825-01	(AEP,UK).....HEAT SINK (LARGE)	
17	4-881-725-00	RING (TACT), FLEXIBLE
18	4-886-821-11	(SILVER)...SCREW, M3 CASE
18	4-886-821-01	(BLACK)...SCREW, M3 CASE
19	4-886-976-00	ESCUTCHEON, POWER KNOB
20 ♦;4-888-047-12	(US,Canadian,AEP,UK)...PLATE, JACK	
20 ♦;4-888-047-22	(E).....PLATE, JACK	
21	4-902-807-01	(US).....LABEL, MODEL NUMBER
21	4-902-808-01	(Canadian)...LABEL, MODEL NUMBER
21	4-902-809-01	(AEP).....LABEL, MODEL NUMBER
21	4-902-810-01	(UK).....LABEL, MODEL NUMBER
21	4-902-811-01	(E).....LABEL, MODEL NUMBER
21	4-903-501-01	(G-AEP).....LABEL, MODEL NUMBER
22 ♦;4-902-812-01	HOLDER, FUSE PC BOARD	
23 ♦;4-902-813-01	PLATE, BLIND, CONTROL	
24 ♦;4-902-814-01	PLATE, LIGHT INTERCEPTION	
25	4-902-815-01	(SILVER)...KNOB, (EQUALIZER, BALANCE, MIXING)
25	4-902-815-11	(BLACK)...KNOB, (EQUALIZER, BALANCE, MIXING)
26	4-902-816-01	PLATE (B), INDICATION
27	4-902-817-01	(Canadian,AEP,UK,E)...ILLUMINATOR
27	4-902-819-01	(US).....ILLUMINATOR
28 ♦;4-902-821-01	BRACKET, HEAT SINK	
29 ♦;4-902-822-01	PLATE, BOTTOM	
30	4-902-823-01	(SILVER)...KNOB, CONTROL (VOLUME)
30	4-902-823-11	(BLACK)...KNOB, CONTROL (VOLUME)
31 ♦;4-902-826-01	PANEL, SUB	

GENERAL SECTION

No.	Part No.	Description
32	4-902-827-01	(SILVER)...PANEL
32	4-902-850-11	(BLACK)...PANEL
33 ♦;4-902-828-01	CHASSIS	
34	4-902-829-01	(SILVER)...CASE
34	4-902-829-21	(BLACK)...CASE
35	4-902-830-01	(SILVER)...KNOB (POWER-S), T TYPE
35	4-902-830-14	(BLACK)...KNOB (POWER-S), T TYPE
36 ♦;4-902-831-01	JOINT (G), KNOB	
37 ♦;9-911-842-99	(AEP,UK)...SHEET, HEAT INSULATING	
38 ♦;4-902-847-01	PLATE, LIGHT INTERCEPTION	
39 ♦;4-902-848-01	HOLDER (C), LED	
40	7-621-255-15	SCREW +P 2X3
41	7-685-646-11	SCREW +BVTP 3X8 TYPE2 N-S
42	7-685-650-71	SCREW +BVTP 3X16 TYPE2 IT-3
43	7-685-751-09	SCREW +PTT 3X6 (S)
44	7-685-871-01	SCREW +BVTT 3X6 (S)
45	7-685-872-01	SCREW +BVTT 3X8 (S)
46	7-685-872-09	SCREW +BVTT 3X8 (S)
47	X-4886-405-1	(SILVER)...FOOT ASSY
47	X-4886-405-2	(BLACK)...FOOT ASSY
48	X-4902-802-1	(SILVER)...PLATE (A) ASSY, INDICATION
48	X-4902-802-3	(BLACK)...PLATE (A) ASSY, INDICATION

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked " ♦ " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers ($\Delta-\Delta\Delta-\Delta\Delta\Delta-XX$ or $\Delta-\Delta\Delta\Delta\Delta-\Delta\Delta\Delta-X$) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: $\mu\mu$ F.

RESISTORS

- All resistors are in ohms.
- F : nonflammable

COILS

- MMH : mH, UH : μ H

SEMICONDUCTORS

In each case, U : μ , for example:
UA...: μ A..., UPA...: μ PA..., UPC...: μ PC,

UPD...: μ PD...

ELECTRICAL PARTS

Ref. No.	Part No.	Description
501	▲;1-508-810-00	14MM BASE POST
502	▲;1-508-811-00	BASE POST (14MM) 4P
503	▲;1-508-812-00	BASE POST (14MM) 5P
504	▲.1-526-565-00	(E3)...AC PLUG ADAPTOR
505	1-533-131-00	HOLDER, FUSE
506	▲;1-535-139-00	BASE POST 19MM (10MM PITCH) 2P
507	▲;1-535-140-00	BASE POST 19MM (10MM PITCH) 3P
508	▲.1-534-817-XX	(AEP).....CORD, POWER, EULO PLUG
508	▲.1-551-511-00	(Canadian)...CORD, POWER
508	▲.1-551-628-00	(US).....CORD, POWER
508	▲.1-551-472-00	(E).....CORD, POWER
508	▲.1-551-884-00	(UK).....CORD, POWER
509	▲;1-562-250-00	SOCKET, CONNECTOR 5P
510	▲;1-562-251-00	SOCKET, CONNECTOR 6P
511	▲;1-562-327-00	SOCKET, CONNECTOR 3P
512	▲;1-612-141-11	PC BOARD, MAIN
513	▲;1-612-142-11	PC BOARD, G-E
514	▲;1-612-143-11	PC BOARD, FUSE
515	▲;1-535-444-00	(AEP,UK)...TERMINAL
516	▲;1-612-144-11	PC BOARD, AUX SW
517	▲;1-612-145-11	PC BOARD, MIC JACK
518	▲;1-612-146-11	PC BOARD, LAMP
519	▲;1-612-147-11	PC BOARD, HP JACK
520	▲;1-612-148-11	PC BOARD, CONNECTOR
521	▲;1-612-149-11	PC BOARD, POWER IC
522	▲;A-4375-188-A	MOUNTED PCB, G-E
523	▲;A-4388-381-A	(G-AEP).....MOUNTED PCB, MAIN
523	▲;A-4388-382-A	(E).....MOUNTED PCB, MAIN
523	▲;A-4388-379-A	(US,Canadian)...MOUNTED PCB, MAIN
523	▲;A-4388-380-A	(AEP,UK).....MOUNTED PCB, MAIN
C1	▲.1-161-744-00	(AEP,UK,E).....CERAMIC 10000PF 400V
C1	▲.1-161-749-00	(US,Canadian)...CERAMIC 10000PF 125V
C102	1-161-315-00	(G-AEP)....CERAMIC 220PF 10% 50V
C103	1-123-380-00	ELECT 1MF 20% 50V
C104	1-123-380-00	ELECT 1MF 20% 50V
C105	1-123-380-00	ELECT 1MF 20% 50V
C106	1-123-382-00	ELECT 3.3MF 20% 50V
C107	1-161-494-00	CERAMIC 0.022MF 30% 25V
C108	1-161-494-00	CERAMIC 0.022MF 30% 25V
C111	1-161-494-00	CERAMIC 0.022MF 30% 25V
C113	1-161-494-00	CERAMIC 0.022MF 30% 25V
C115	1-161-494-00	CERAMIC 0.022MF 30% 25V
C116	1-123-356-00	(E).....ELECT 10MF 20% 50V
C117	1-161-494-00	CERAMIC 0.022MF 30% 25V
C152	1-161-315-00	(G-AEP)....CERAMIC 220PF 10% 50V
C153	1-123-380-00	ELECT 1MF 20% 50V
C154	1-123-380-00	ELECT 1MF 20% 50V

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (Δ-ΔΔΔ-ΔΔ-XX or Δ-ΔΔΔΔ-ΔΔΔ-X) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

ELECTRICAL PARTS

Ref. No.	Part No.	Description
C155	1-123-380-00	ELECT 1MF 20% 50V
C201	1-123-382-00	ELECT 3.3MF 20% 50V
C202	1-161-271-00	(US,Canadian,AEP,UK,E)...CERAMIC 100PF 5% 50V
C202	1-161-320-00	(G-AEP).....CERAMIC 560PF 10% 50V
C203	1-161-269-00	CERAMIC 68PF 5% 50V
C204	1-123-318-00	ELECT 33MF 20% 16V
C205	1-108-573-00	MYLAR 0.0056MF 5% 50V
C206	1-108-559-00	MYLAR 0.0015MF 5% 50V
C207	1-123-609-00	ELECT 0.33MF 20% 50V
C208	1-123-330-00	ELECT 22MF 20% 16V
C251	1-123-382-00	ELECT 3.3MF 20% 50V
C252	1-161-271-00	(US,Canadian,AEP,UK,E)...CERAMIC 100PF 5% 50V
C252	1-161-320-00	(G-AEP).....CERAMIC 560PF 10% 50V
C253	1-161-269-00	CERAMIC 68PF 5% 50V
C254	1-123-318-00	ELECT 33MF 20% 16V
C255	1-108-573-00	MYLAR 0.0056MF 5% 50V
C256	1-108-559-00	MYLAR 0.0015MF 5% 50V
C257	1-123-609-00	ELECT 0.33MF 20% 50V
C258	1-123-330-00	ELECT 22MF 20% 16V
C301	1-123-612-00	ELECT 2.2MF 20% 50V
C302	1-101-361-00	CERAMIC 150PF 5% 50V
C303	1-101-880-00	CERAMIC 47PF 5% 50V
C304	1-123-611-00	ELECT 1MF 20% 50V
C305	1-123-607-00	ELECT 0.1MF 20% 50V
C306	1-123-608-00	ELECT 0.22MF 20% 50V
C307	1-130-626-00	FILM 0.033MF 5% 50V
C308	1-130-630-00	FILM 0.068MF 5% 50V
C309	1-108-575-00	MYLAR 0.0068MF 5% 50V
C310	1-130-622-00	FILM 0.015MF 5% 50V
C311	1-108-561-00	MYLAR 0.0018MF 5% 50V
C312	1-108-572-00	MYLAR 0.0051MF 5% 50V
C313	1-102-116-00	CERAMIC 680PF 10% 50V
C314	1-123-612-00	ELECT 2.2MF 20% 50V
C315	1-123-611-00	ELECT 1MF 20% 50V
C351	1-123-612-00	ELECT 2.2MF 20% 50V
C352	1-101-361-00	CERAMIC 150PF 5% 50V
C353	1-101-880-00	CERAMIC 47PF 5% 50V
C354	1-123-611-00	ELECT 1MF 20% 50V
C355	1-123-607-00	ELECT 0.1MF 20% 50V
C356	1-123-608-00	ELECT 0.22MF 20% 50V
C357	1-130-626-00	FILM 0.033MF 5% 50V
C358	1-130-630-00	FILM 0.068MF 5% 50V
C359	1-108-575-00	MYLAR 0.0068MF 5% 50V

CAPACITORS:

MF:μF, PF:μPF.

RESISTORS

All resistors are in ohms.
F : nonflammable

COILS

MMH : mH, UH : μH

SEMICONDUCTORS

In each case, U : μ, for example:
UA...: μA..., UPA...: μPA..., UPC...: μPC,
UPD...: μPD...

The components identified by shading and mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

ELECTRICAL PARTS

Ref. No. Part No. Description

R201 1-247-171-00 CARBON 47K 5% 1/4W
 R202 1-247-131-00 CARBON 1K 5% 1/4W
 R203 1-246-539-00 CARBON 560K 5% 1/4W

R204 1-246-471-00 CARBON 820 5% 1/4W
 R205 1-246-539-00 CARBON 560K 5% 1/4W
 R206 1-247-171-00 CARBON 47K 5% 1/4W

R207 1-247-131-00 CARBON 1K 5% 1/4W
 R208 1-247-179-00 CARBON 100K 5% 1/4W
 R251 1-247-171-00 CARBON 47K 5% 1/4W

R252 1-247-131-00 CARBON 1K 5% 1/4W
 R253 1-246-539-00 CARBON 560K 5% 1/4W
 R254 1-246-471-00 CARBON 820 5% 1/4W

R255 1-246-539-00 CARBON 560K 5% 1/4W
 R256 1-247-171-00 CARBON 47K 5% 1/4W
 R257 1-247-131-00 CARBON 1K 5% 1/4W

R258 1-247-179-00 CARBON 100K 5% 1/4W
 R301 1-247-879-00 CARBON 100K 5% 1/6W
 R302 1-247-879-00 CARBON 100K 5% 1/6W

R303 1-247-831-00 CARBON 1K 5% 1/6W
 R304 1-247-847-00 CARBON 4.7K 5% 1/6W
 R305 1-247-847-00 CARBON 4.7K 5% 1/6W

R306 1-247-833-00 CARBON 1.2K 5% 1/6W
 R307 1-247-871-00 CARBON 47K 5% 1/6W
 R308 1-247-851-00 CARBON 6.8K 5% 1/6W

R309 1-247-821-00 CARBON 390 5% 1/6W
 R310 1-247-833-00 CARBON 1.2K 5% 1/6W
 R311 1-247-871-00 CARBON 47K 5% 1/6W

R312 1-247-851-00 CARBON 6.8K 5% 1/6W
 R313 1-247-821-00 CARBON 390 5% 1/6W
 R314 1-247-833-00 CARBON 1.2K 5% 1/6W

R315 1-247-871-00 CARBON 47K 5% 1/6W
 R316 1-247-851-00 CARBON 6.8K 5% 1/6W
 R317 1-247-821-00 CARBON 390 5% 1/6W

R318 1-247-833-00 CARBON 1.2K 5% 1/6W
 R319 1-247-871-00 CARBON 47K 5% 1/6W
 R320 1-247-851-00 CARBON 6.8K 5% 1/6W

R321 1-247-821-00 CARBON 390 5% 1/6W
 R322 1-247-833-00 CARBON 1.2K 5% 1/6W
 R323 1-247-871-00 CARBON 47K 5% 1/6W

R324 1-247-851-00 CARBON 6.8K 5% 1/6W
 R325 1-247-821-00 CARBON 390 5% 1/6W
 R326 1-247-831-00 CARBON 1K 5% 1/6W

R327 1-247-879-00 CARBON 100K 5% 1/6W
 R328 1-247-843-00 CARBON 3.3K 5% 1/6W
 R329 1-247-821-00 CARBON 390 5% 1/6W

ELECTRICAL PARTS

Ref. No. Part No. Description

R330 1-247-895-00 CARBON 470K 5% 1/6W
 R331 1-247-835-00 CARBON 1.5K 5% 1/6W
 R332 1-247-835-00 CARBON 1.5K 5% 1/6W

R351 1-247-879-00 CARBON 100K 5% 1/6W
 R352 1-247-879-00 CARBON 100K 5% 1/6W
 R353 1-247-831-00 CARBON 1K 5% 1/6W

R354 1-247-847-00 CARBON 4.7K 5% 1/6W
 R355 1-247-847-00 CARBON 4.7K 5% 1/6W
 R356 1-247-833-00 CARBON 1.2K 5% 1/6W

R357 1-247-871-00 CARBON 47K 5% 1/6W
 R358 1-247-851-00 CARBON 6.8K 5% 1/6W
 R359 1-247-821-00 CARBON 390 5% 1/6W

R360 1-247-833-00 CARBON 1.2K 5% 1/6W
 R361 1-247-871-00 CARBON 47K 5% 1/6W
 R362 1-247-851-00 CARBON 6.8K 5% 1/6W

R363 1-247-821-00 CARBON 390 5% 1/6W
 R364 1-247-833-00 CARBON 1.2K 5% 1/6W
 R365 1-247-871-00 CARBON 47K 5% 1/6W

R366 1-247-851-00 CARBON 6.8K 5% 1/6W
 R367 1-247-821-00 CARBON 390 5% 1/6W
 R368 1-247-833-00 CARBON 1.2K 5% 1/6W

R369 1-247-871-00 CARBON 47K 5% 1/6W
 R370 1-247-851-00 CARBON 6.8K 5% 1/6W
 R371 1-247-821-00 CARBON 390 5% 1/6W

R372 1-247-833-00 CARBON 1.2K 5% 1/6W
 R373 1-247-871-00 CARBON 47K 5% 1/6W
 R374 1-247-851-00 CARBON 6.8K 5% 1/6W

R375 1-247-821-00 CARBON 390 5% 1/6W
 R376 1-247-831-00 CARBON 1K 5% 1/6W
 R377 1-247-879-00 CARBON 100K 5% 1/6W

R378 1-247-843-00 CARBON 3.3K 5% 1/6W
 R379 1-247-821-00 CARBON 390 5% 1/6W
 R380 1-247-895-00 CARBON 470K 5% 1/6W

R381 1-247-835-00 CARBON 1.5K 5% 1/6W
 R382 1-247-835-00 CARBON 1.5K 5% 1/6W
 R401 1-247-839-00 CARBON 2.2K 5% 1/6W

R402 1-247-131-00 CARBON 1K 5% 1/4W
 R403 1-247-131-00 CARBON 1K 5% 1/4W
 R404 1-247-173-00 CARBON 56K 5% 1/4W

R405 1-247-125-00 CARBON 560 5% 1/4W
 R406 1-247-173-00 CARBON 56K 5% 1/4W
 R407 1-244-881-00 CARBON 2.2K 5% 1/2W

R408 1-244-881-00 CARBON 2.2K 5% 1/2W
 R409 A.1-247-107-00 CARBON 100 5% 1/4W F
 R410 A.1-247-107-00 CARBON 100 5% 1/4W F

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers ($\Delta-\Delta\Delta-\Delta\Delta-XX$ or $\Delta-\Delta\Delta\Delta-\Delta\Delta-X$) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: μ μ F.

RESISTORS

- All resistors are in ohms.
- F : nonflammable

COILS

• MMH : mH, UH : μ H

SEMICONDUCTORS

In each case, U : μ , for example:UA...: μ A..., UPA...: μ PA..., UPC...: μ PC,UPD...: μ PD...

The components identified by shading and mark ▲ are critical for safety.
 Replace only with part number specified.

Les composants identifiés par une trame et une marque ▲ sont critiques pour la sécurité.
 Ne les remplacer que par une pièce portant le numéro spécifié.

ELECTRICAL PARTS

Ref. No.	Part No.	Description				
C360	1-130-622-00	FILM	0.015MF	5%	50V	
C361	1-108-561-00	MYLAR	0.0018MF	5%	50V	
C362	1-108-572-00	MYLAR	0.0051MF	5%	50V	
C363	1-102-116-00	CERAMIC	680PF	10%	50V	
C364	1-123-612-00	ELECT	2.2MF	20%	50V	
C365	1-123-611-00	ELECT	1MF	20%	50V	
C401	1-123-380-00	ELECT	1MF	20%	50V	
C402	1-123-381-00	ELECT	2.2MF	20%	50V	
C403	1-161-319-00	CERAMIC	470PF	10%	50V	
C404	1-123-294-00	ELECT	47MF	20%	6.3V	
C405	1-123-512-00	ELECT	47MF	20%	50V	
C406	1-123-513-00	ELECT	100MF	20%	50V	
C407	1-123-356-00	ELECT	10MF	20%	50V	
C408	1-108-244-00	MYLAR	0.033MF	10%	50V	
C409	1-123-356-00	ELECT	10MF	20%	50V	
C410	1-123-465-00	ELECT	220MF	20%	6.3V	
C411	1-108-244-00	MYLAR	0.033MF	10%	50V	
C412	1-108-239-00	(G-AEP)...MYLAR	0.01MF	10%	50V	
C413	1-123-307-00	ELECT	100MF	20%	6.3V	
C414	1-108-244-00	(AEP,UK).....MYLAR	0.033MF	10%	50V	
C414	1-108-251-00	(US,Canadian,E)....MYLAR	0.1MF		50V	
C415	1-108-246-00	MYLAR	0.047MF	10%	50V	
C418	1-161-317-00	(G-AEP)...CERAMIC	330PF	10%	50V	
C419	1-161-326-00	(G-AEP)...CERAMIC	0.0022MF	30%	50V	
C451	1-123-380-00	ELECT	1MF	20%	50V	
C452	1-123-381-00	ELECT	2.2MF	20%	50V	
C453	1-161-319-00	CERAMIC	470PF	10%	50V	
C454	1-123-294-00	ELECT	47MF	20%	6.3V	
C455	1-123-512-00	ELECT	47MF	20%	50V	
C458	1-108-244-00	MYLAR	0.033MF	10%	50V	
C462	1-108-239-00	(G-AEP)...MYLAR	0.01MF	10%	50V	
C468	1-161-317-00	(G-AEP)...CERAMIC	330PF	10%	50V	
C501	1-123-738-00	(US,Canadian,AEP,UK)....ELECT				
C501	1-124-362-00	(E).....ELECT	4700MF	20%	35V	
C502	1-123-333-00	ELECT	100MF	20%	16V	
C503	1-123-330-00	ELECT	22MF	20%	16V	
C504	1-123-332-00	ELECT	47MF	20%	16V	
C505	1-161-326-00	(G-AEP)...CERAMIC	0.0022MF	30%	50V	
C506	1-123-380-00	ELECT	.1MF	20%	50V	
C507	1-123-487-00	ELECT	470MF	20%	16V	
C508	A.1-102-394-00	CERAMIC	0.01+0.01MF		250V	
C551	1-123-738-00	(US,Canadian,AEP,UK)....ELECT				
C551	1-124-362-00	(E).....ELECT	4700MF	20%	35V	

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "●" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers ($\Delta-\Delta\Delta-\Delta\Delta-XX$ or $\Delta-\Delta\Delta\Delta-\Delta\Delta-X$) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: $\mu\mu$ F.

RESISTORS

All resistors are in ohms.
F : nonflammable

COILS

MMH : mH, UH : μ H

SEMICONDUCTORS

In each case, U : μ , for example:
UA... : μ A..., UPA... : μ PA..., UPC... : μ PC,
UPD... : μ PD...

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

ELECTRICAL PARTS

Ref.No.	Part No.	Description
△PS501 .1-532-675-00 (AEP,UK)...LINK, IC)		
Q101	8-729-117-54	TRANSISTOR 2SA1175
Q102	8-729-245-83	TRANSISTOR 2SC2458
Q103	8-729-245-83	TRANSISTOR 2SC2458
Q104	8-729-245-83	TRANSISTOR 2SC2458
Q105	8-729-245-83	TRANSISTOR 2SC2458
Q106	8-729-245-83	TRANSISTOR 2SC2458
Q107	8-729-245-83	TRANSISTOR 2SC2458
Q108	8-729-245-83	TRANSISTOR 2SC2458
Q109	8-729-245-83	TRANSISTOR 2SC2458
Q110	8-729-117-54	TRANSISTOR 2SA1175
Q111	8-729-117-54	TRANSISTOR 2SA1175
Q112	8-729-245-83	TRANSISTOR 2SC2458
Q113	8-729-117-54	TRANSISTOR 2SA1175
Q114	8-729-117-54	TRANSISTOR 2SA1175
Q115	8-729-117-54	TRANSISTOR 2SA1175
Q116	8-729-245-83	TRANSISTOR 2SC2458
Q301	8-729-245-83	TRANSISTOR 2SC2458
Q302	8-729-245-83	TRANSISTOR 2SC2458
Q303	8-729-245-83	TRANSISTOR 2SC2458
Q304	8-729-245-83	TRANSISTOR 2SC2458
Q305	8-729-245-83	TRANSISTOR 2SC2458
Q306	8-729-245-83	TRANSISTOR 2SC2458
Q351	8-729-245-83	TRANSISTOR 2SC2458
Q352	8-729-245-83	TRANSISTOR 2SC2458
Q353	8-729-245-83	TRANSISTOR 2SC2458
Q354	8-729-245-83	TRANSISTOR 2SC2458
Q355	8-729-245-83	TRANSISTOR 2SC2458
Q356	8-729-245-83	TRANSISTOR 2SC2458
Q401	8-729-201-04	TRANSISTOR 2SC2878
Q402	8-729-204-91	TRANSISTOR 2SA1049
Q403	8-729-245-83	TRANSISTOR 2SC2458
Q404	8-729-117-54	TRANSISTOR 2SA1175
Q405	8-729-245-83	TRANSISTOR 2SC2458
Q406	8-729-245-83	TRANSISTOR 2SC2458
Q407	8-729-117-54	TRANSISTOR 2SA1175
Q408	8-729-117-54	TRANSISTOR 2SA1175
Q451	8-729-201-04	TRANSISTOR 2SC2878
Q452	8-729-204-91	TRANSISTOR 2SA1049
Q501	8-729-180-93	TRANSISTOR 2SD809
Q502	8-729-173-13	TRANSISTOR 2SB731
Q503	8-729-245-83	TRANSISTOR 2SC2458
Q601	8-729-245-83	TRANSISTOR 2SC2458

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "△" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers ($\Delta-\Delta\Delta-\Delta\Delta-XX$ or $\Delta-\Delta\Delta\Delta-\Delta\Delta-X$) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

ELECTRICAL PARTS

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description
R102	1-246-465-00	(G-AEP)...CARBON	R103	1-246-545-00	CARBON
R104	1-247-147-00	CARBON	R105	1-246-545-00	CARBON
R106	1-247-135-00	CARBON	R107	1-247-135-00	CARBON
R108	1-247-135-00	CARBON	R109	1-246-539-00	CARBON
R110	1-246-539-00	CARBON	R111	1-246-539-00	CARBON
R112	1-247-171-00	CARBON	R113	1-246-505-00	CARBON
R114	1-246-505-00	CARBON	R115	1-247-179-00	CARBON
R116	1-247-139-00	CARBON	R117	1-246-479-00	CARBON
R118	1-247-155-00	CARBON	R119	1-246-495-00	CARBON
R120	1-247-155-00	CARBON	R121	1-246-495-00	CARBON
R122	1-247-155-00	CARBON	R123	1-246-495-00	CARBON
R124	1-246-529-00	CARBON	R125	1-247-155-00	CARBON
R126	1-246-495-00	CARBON	R127	1-246-495-00	CARBON
R128	1-246-495-00	CARBON	R129	1-246-495-00	CARBON
R130	1-247-155-00	CARBON	R131	1-247-155-00	CARBON
R132	1-247-179-00	CARBON	R133	1-247-155-00	CARBON
R134	1-247-155-00	CARBON	R135	1-247-155-00	CARBON
R136	1-247-179-00	CARBON	R138	1-247-155-00	CARBON
R137	1-247-155-00	CARBON	R139	1-247-155-00	CARBON
R140	1-247-155-00	CARBON	R152	1-246-465-00	(G-AEP)...CARBON
R153	1-246-545-00	CARBON	R154	1-247-147-00	CARBON
R155	1M	5%	R155	4.7K	5%
R156	1-247-135-00	CARBON	R156	1-247-135-00	CARBON
R157	1-247-135-00	CARBON	R157	1.5K	5%
R158	1-247-135-00	CARBON	R158	1.5K	5%
R159	1-246-539-00	CARBON	R159	560K	5%
R160	1-246-539-00	CARBON	R160	560K	5%
R161	1-246-539-00	CARBON	R161	560K	5%

CAPACITORS:

MF: μF , PF: $\mu\mu F$.

RESISTORS

- All resistors are in ohms.

• F : nonflammable

COILS

• MMH : mH , UH : μH

SEMICONDCTORS

In each case, U : μ , for example:

UA...: μA ..., UPA...: μPA ..., UPC...: μPC ,


UPD...: μPD ...

The components identified by shading and mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

FM STEREO/FM-AM TUNER

(ST-V10S)

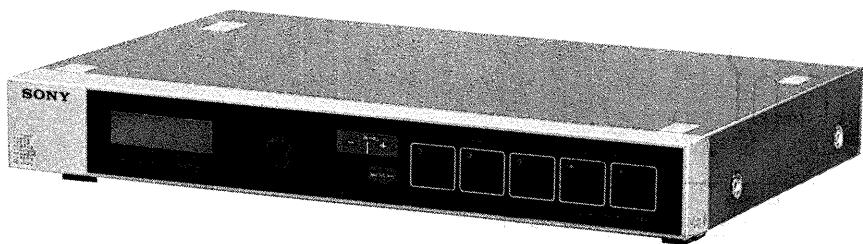


SERVICEING NOTE

● IF OFFSET ADJUSTMENT (FM IF)

Diode Installations Depending on the Ceramic Filters (CF102, 103)

This set employs three ceramic filters (CF102, 103) which should have the same color marking to identify their center frequency. Therefore FM IF offset adjustment by diodes (D405, 408) installation is necessary to match the center frequency of the ceramic filters used with FM intermediate frequency.

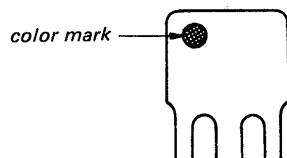

Ceramic filter		Diode installation		FM intermediate frequency (MHz)
Color mark	Center frequency (MHz)	D405	D408	
White	10.750	X	O	10.750
Red	10.700	X	X	10.700
Black	10.650	O	X	10.650


O: installed
X: not installed

FM intermediate frequency is determined by the three types as shown above. Ceramic filters of same center frequency should be used for CF102 and CF103.

SECTION 1

OUTLINE

1-1. BLOCK DIAGRAM

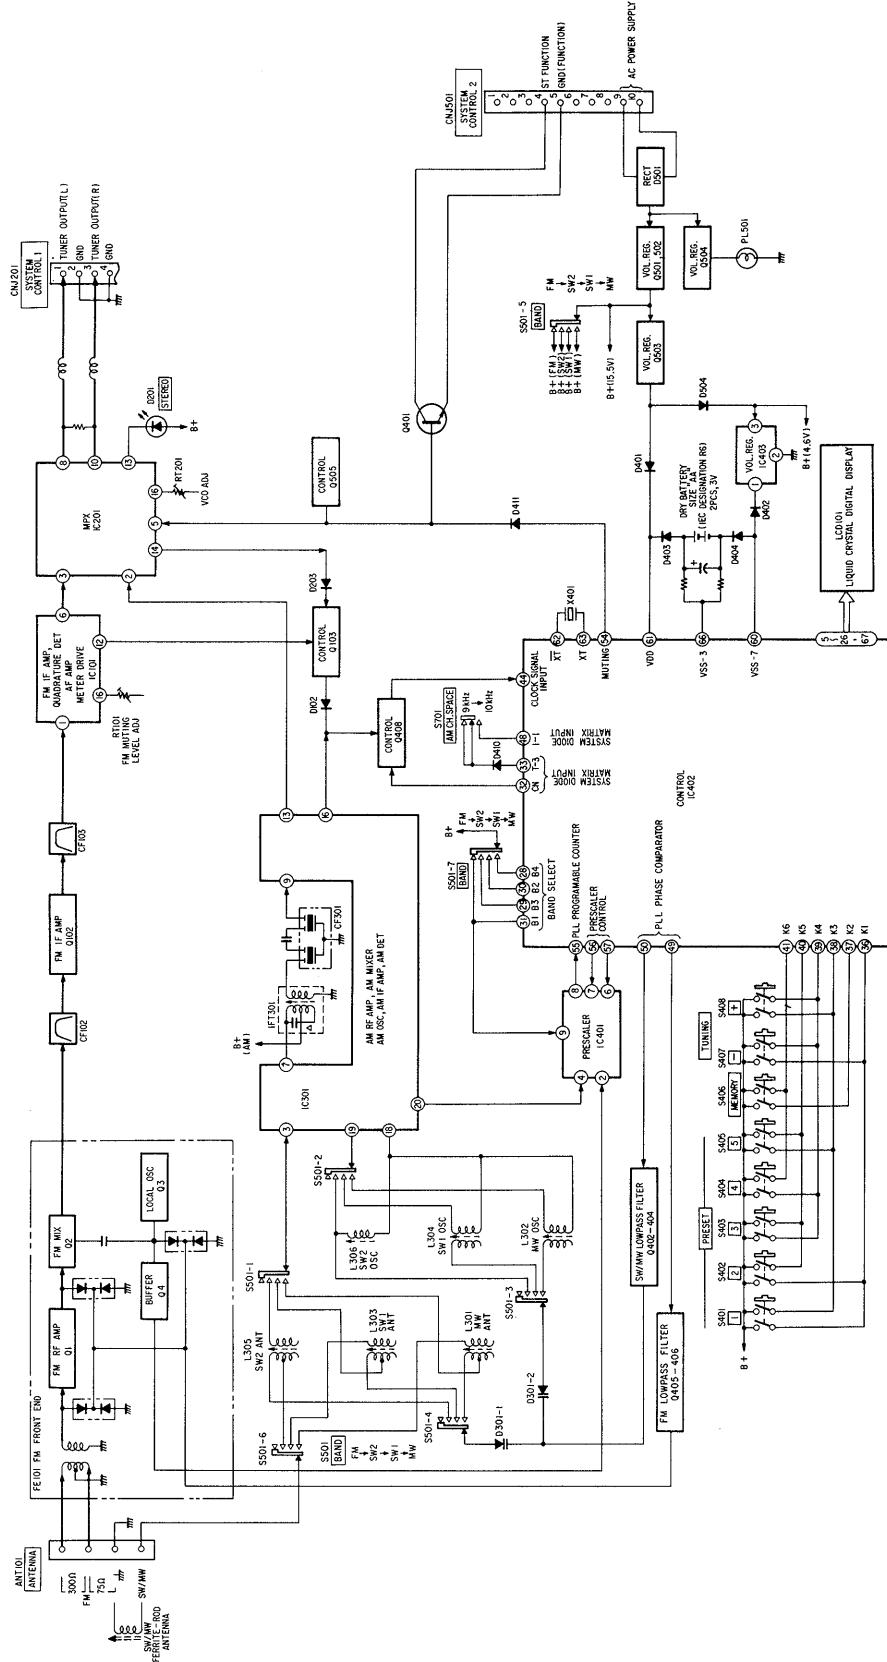

SECTION 2 DISASSEMBLY


Note: Follow the disassembly procedure in the numerical order given.

CASE REMOVAL

Remove case by taking out four screws.





TUNER BOARD REMOVAL

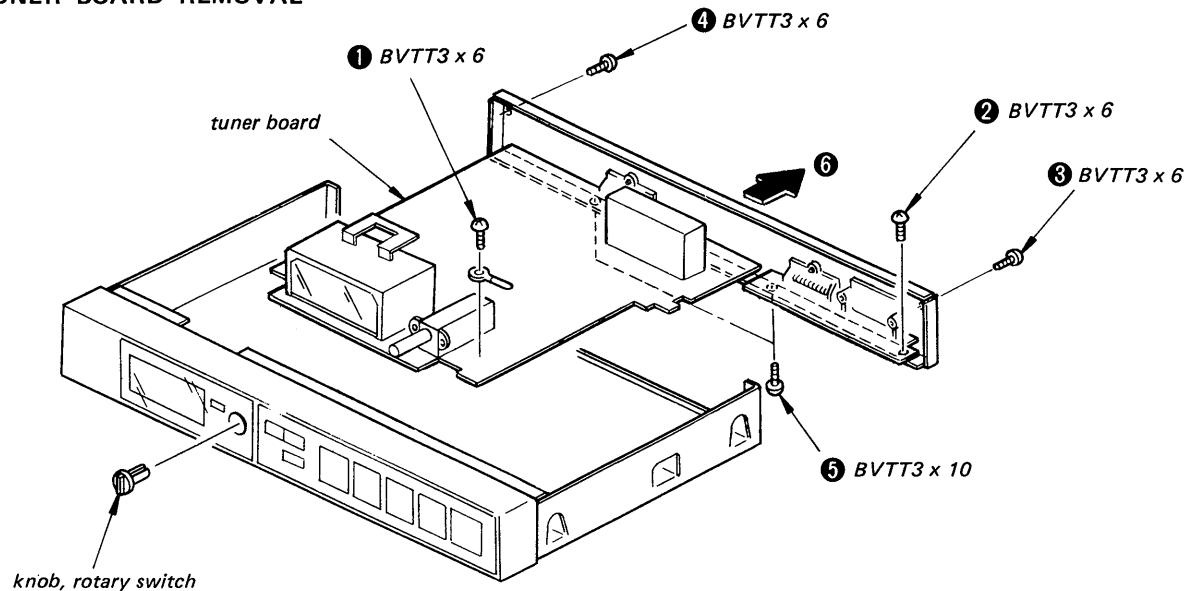

PANEL REMOVAL

Remove the claw by using the screwdriver as illustrated.

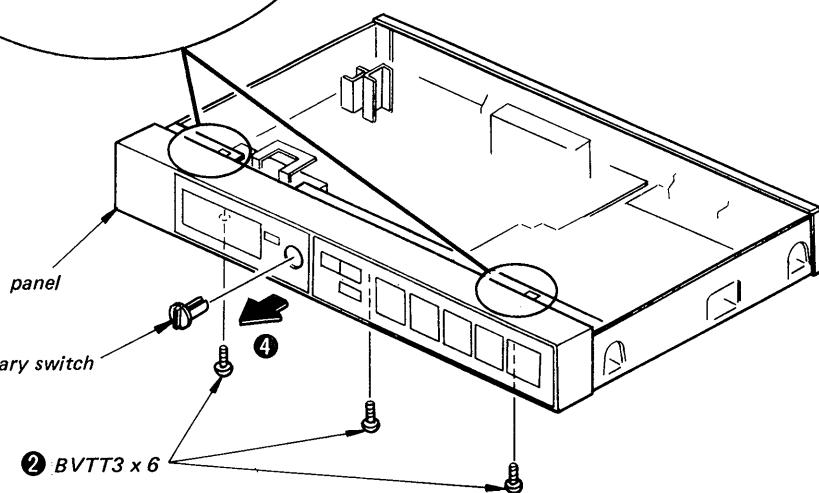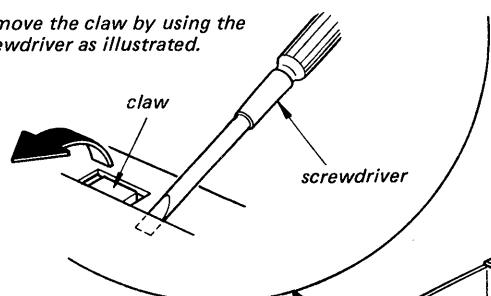


SECTION 3

ADJUSTMENTS

FM SECTION
FM Discriminator Alignment
Setting:


BAND SELECTOR switch FM

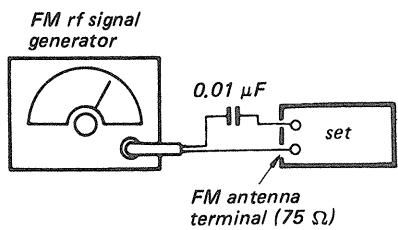Procedure:


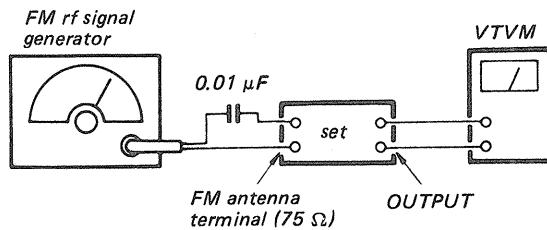
Carrier frequency: 98 MHz
Output level: 1 mV (60 dB)
Modulation: 1 kHz, 75 kHz deviation (100%)

1. Tune the set to 98 MHz.
2. Adjust IFT101 for 0 V reading on the VOM. NULL Adjustment

Note: When the ceramic filter is replaced, these adjustments should be made (See page ST-2).

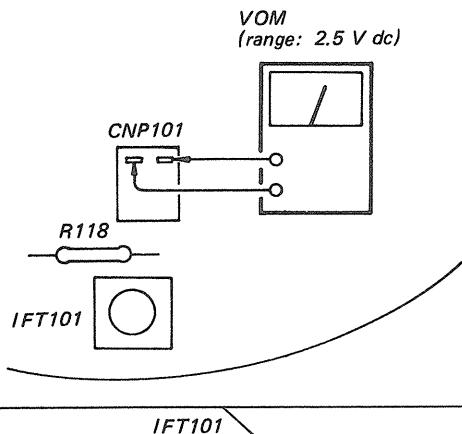

FM Muting Level Adjustment
Setting:

BAND SELECTOR switch FM

Procedure:


Carrier frequency: 98 MHz
Modulation: 1 kHz, 75 kHz deviation (100%)
Output level: 31.6 μ V (30 dB)

1. Tune the set to 98 MHz.
2. Adjust RT101 for a point the VTVM reading just drops to 0 V.

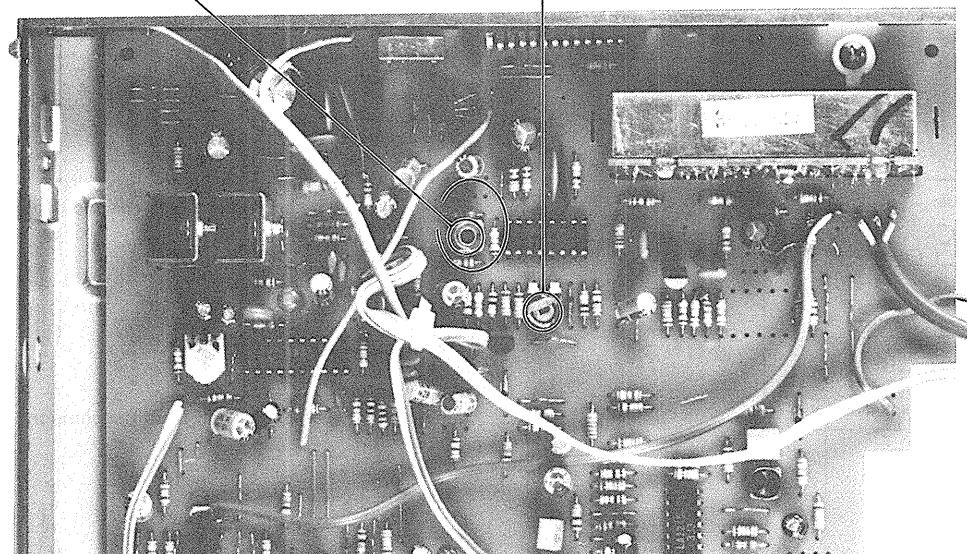
RT101


VCO Adjustment


Setting: BAND SELECTOR switch: FM

A) Regular Method

Procedure:

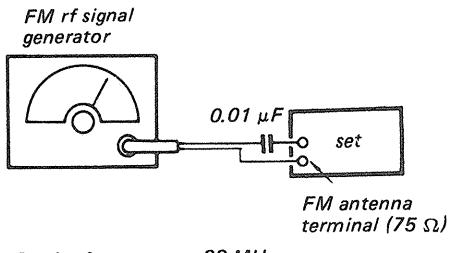


1. Tune the set to 98 MHz.
2. Adjust RT201 for 19 kHz \pm 50 Hz on the counter.

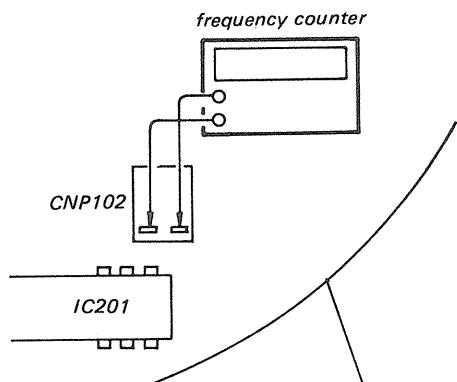


B) Simple Method

Procedure:

1. Tune the set to the FM stereo broadcasting signal.
2. Turn RT201 clockwise or counterclockwise and memorize the lighting-up range of the stereo LED.
3. Secure RT201 at the center of the lighting-up range of both turns as shown below.


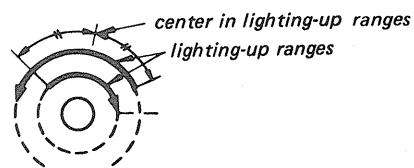


The FM front-end is carefully adjusted at the factory and is supplied as one whole block for replacement.

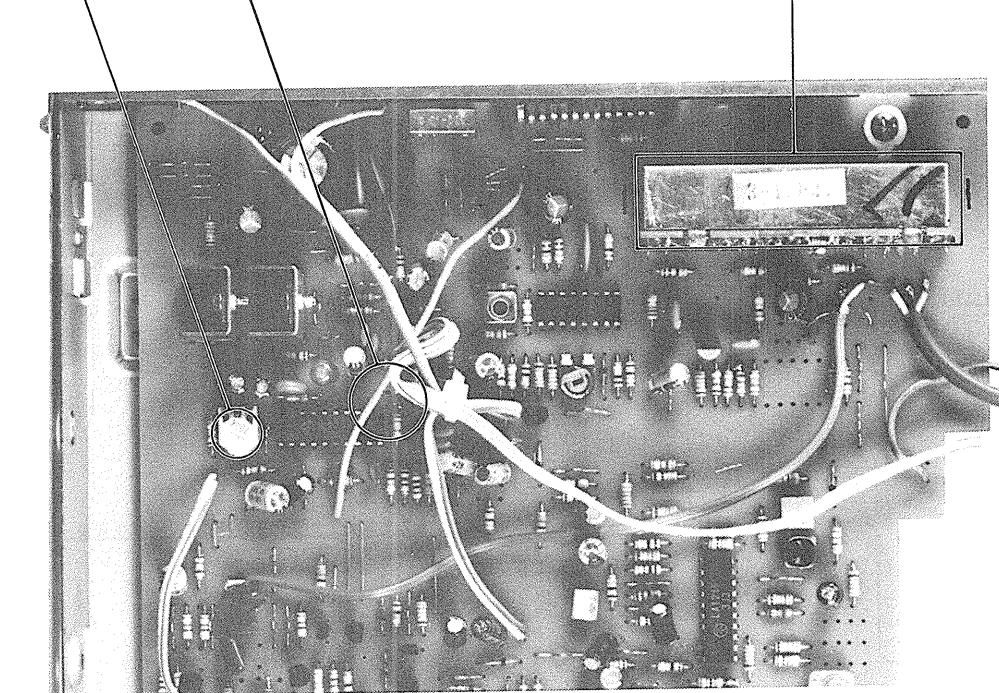


MW/SW SECTION

BAND SELECTOR switch: MW/SW₁/SW₂
AM CH. SPACE switch: 9 kHz

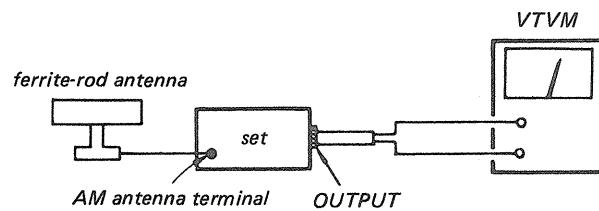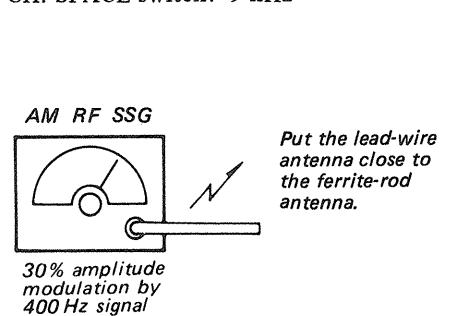


- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

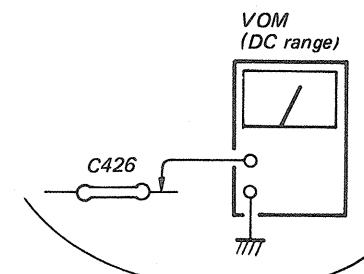

AM IF ALIGNMENT	
Adjust for a maximum reading on VTVM.	
IFT301	450 kHz

MW FREQUENCY COVERAGE ADJUSTMENT		
reading on VOM	frequency indication	adjustment part
1 ± 0.2 V	531 kHz	L302
9 ± 0.4 V	1,602 kHz	CT302

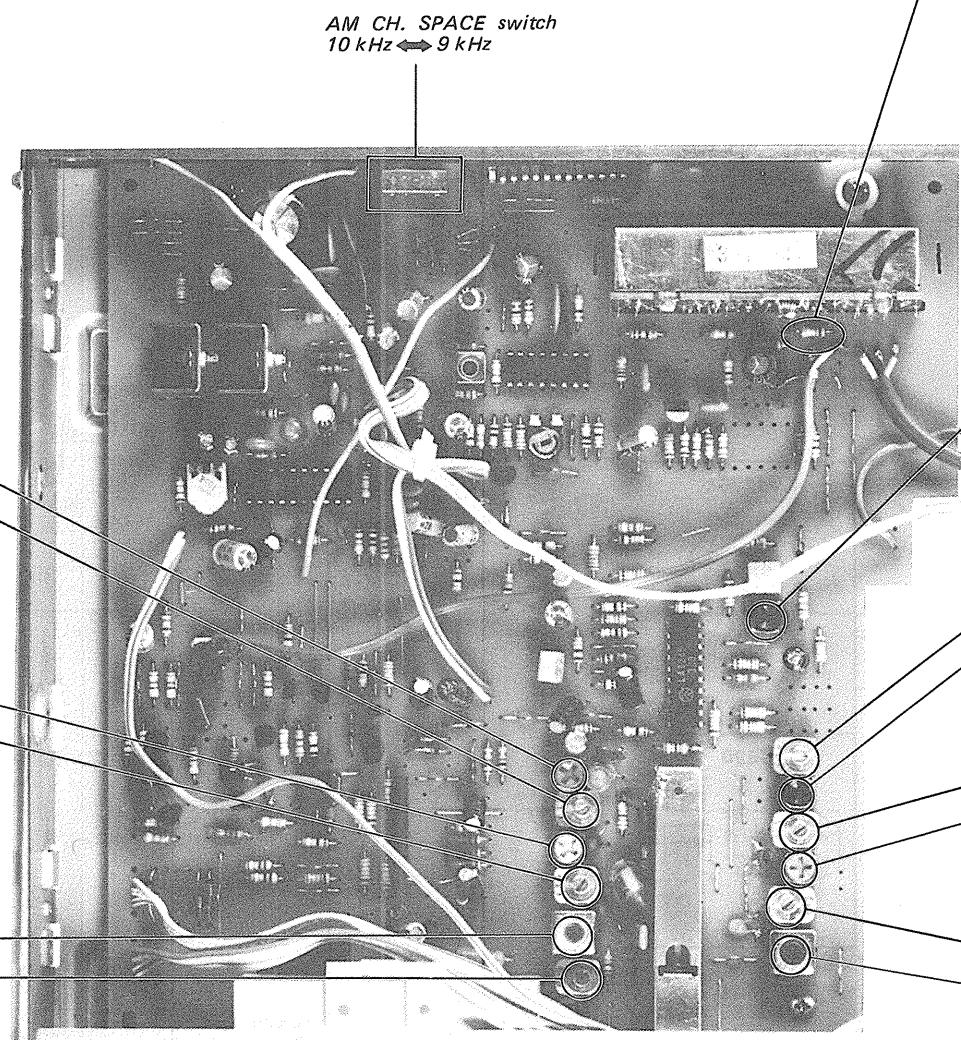



MW TRACKING ADJUSTMENT	
Adjust for a maximum reading on VTVM.	
CT301	1,404 kHz
L301	603 kHz

SW1 TRACKING ADJUSTMENT	
Adjust for a maximum reading on VTVM.	
CT303	6.5 MHz
L303	3.5 MHz


SW2 TRACKING ADJUSTMENT	
Adjust for a maximum reading on VTVM.	
CT305	20 MHz
L305	10 MHz

SECTION 4
DIAGRAMS

4-1. MOUNTING DIAGRAM

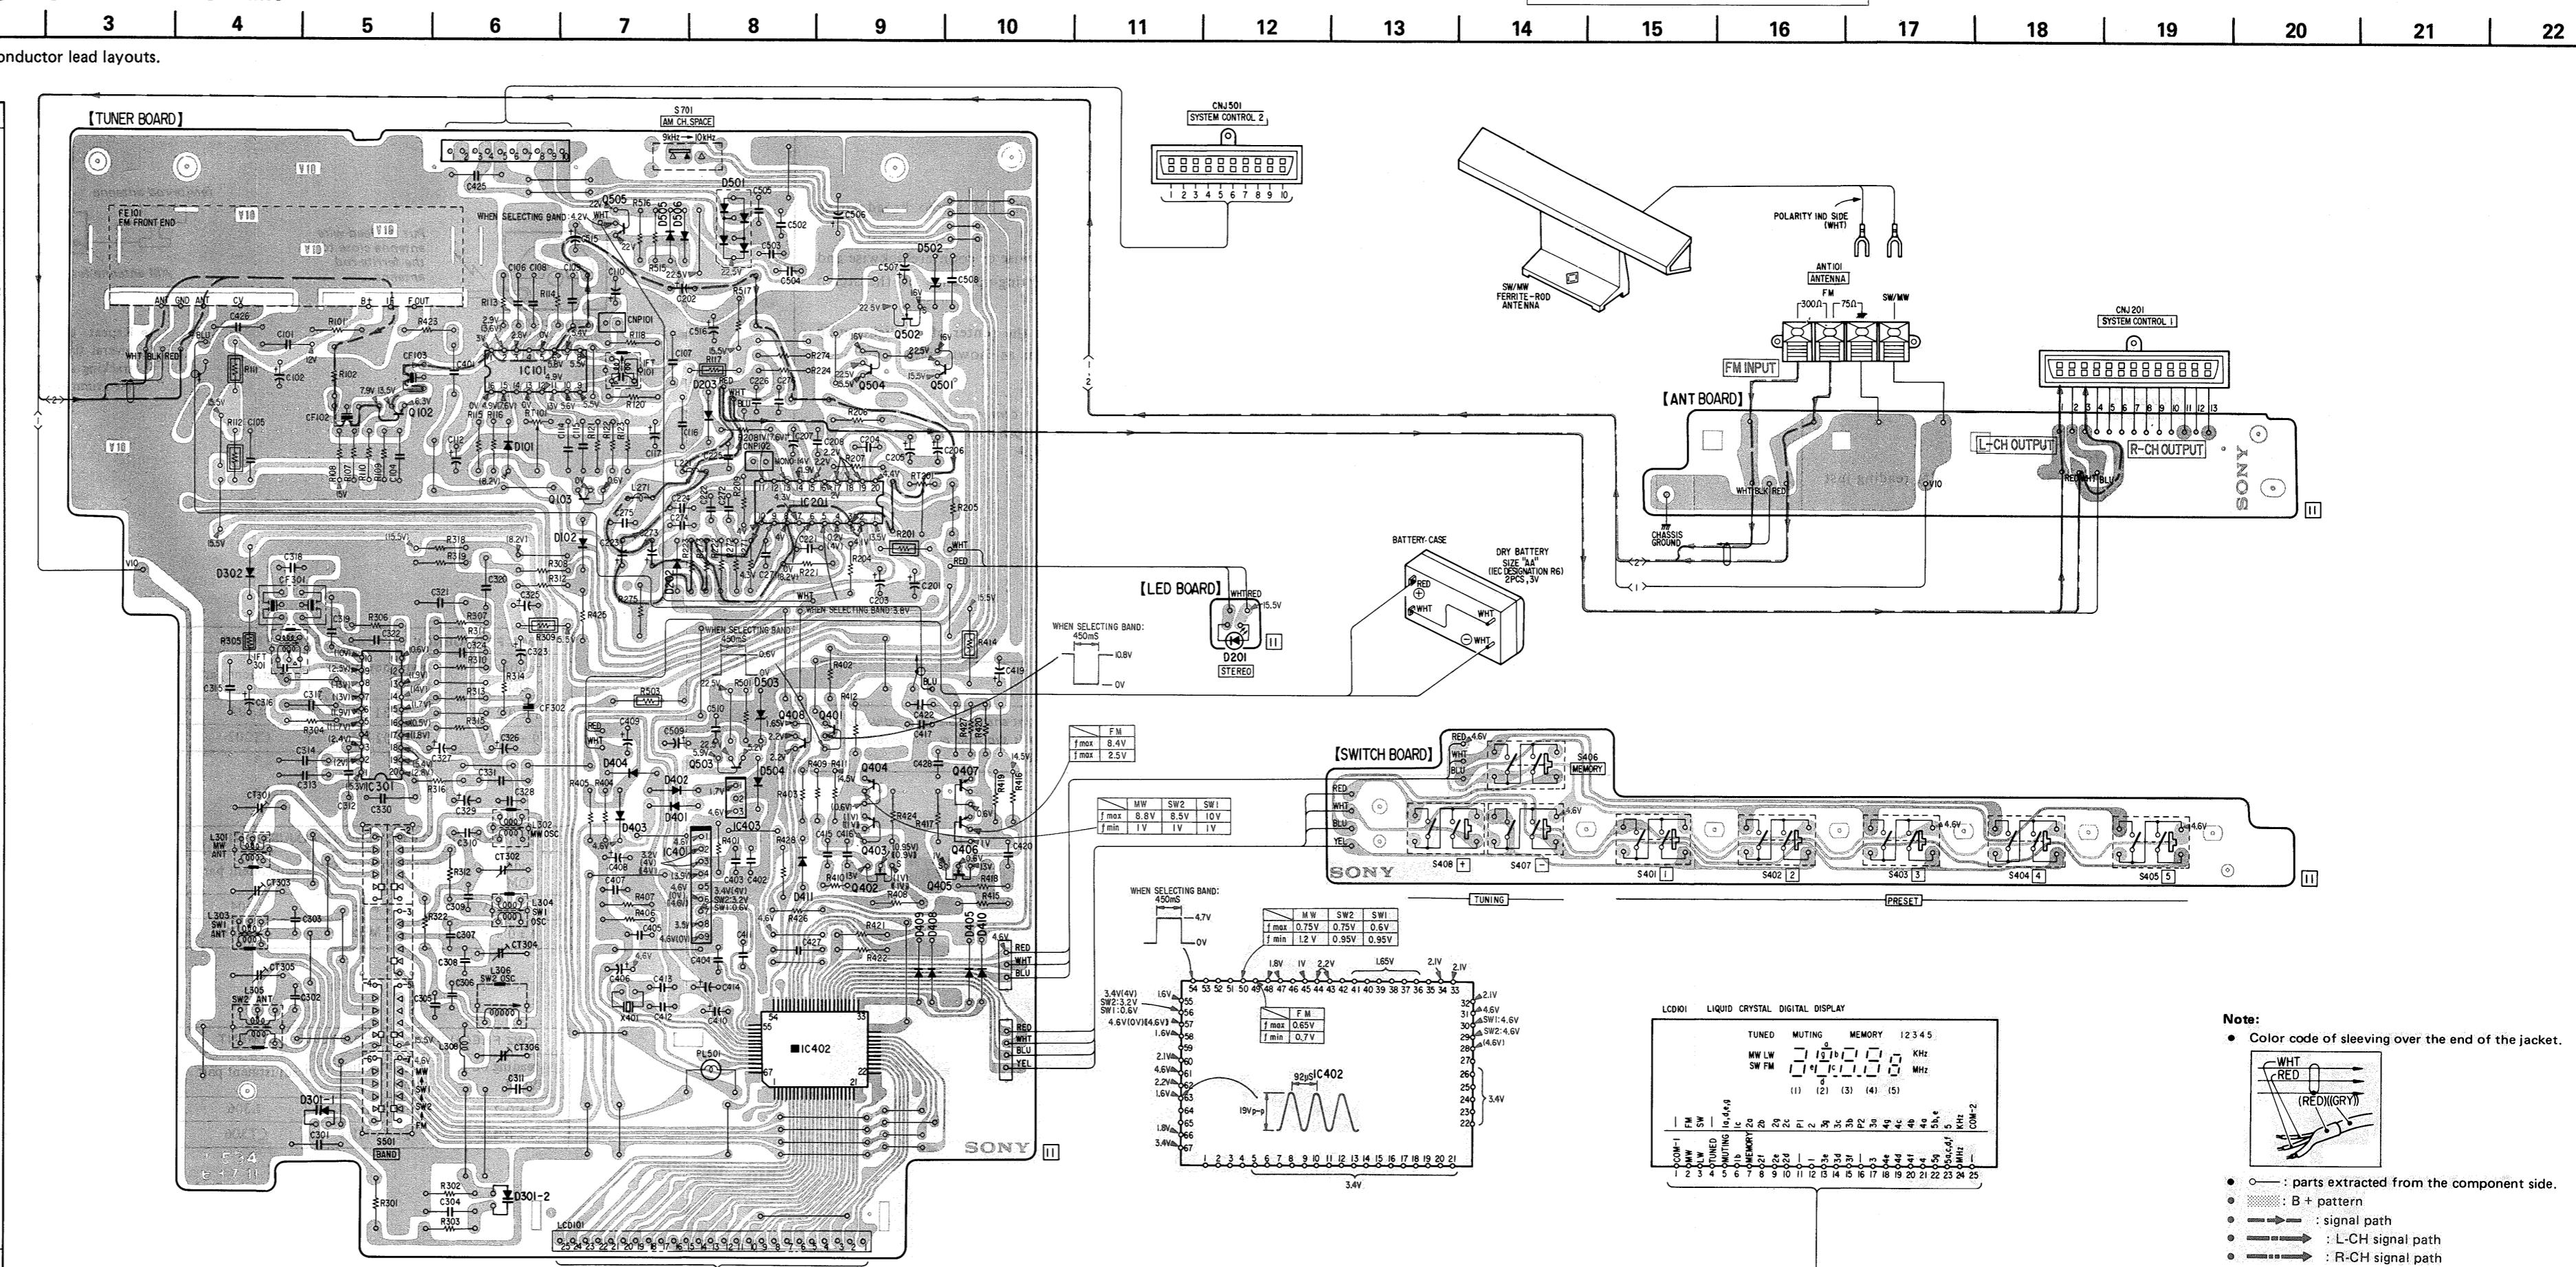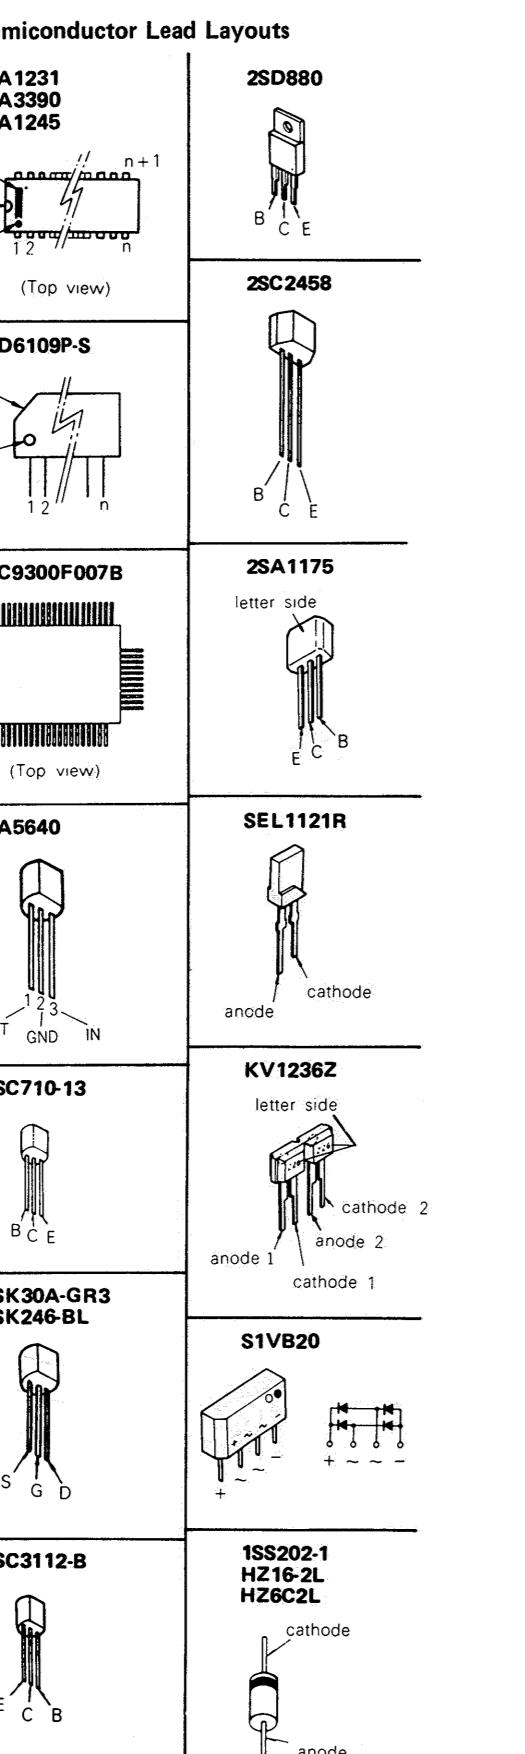

4-2. SCHEMATIC DIAGRAM

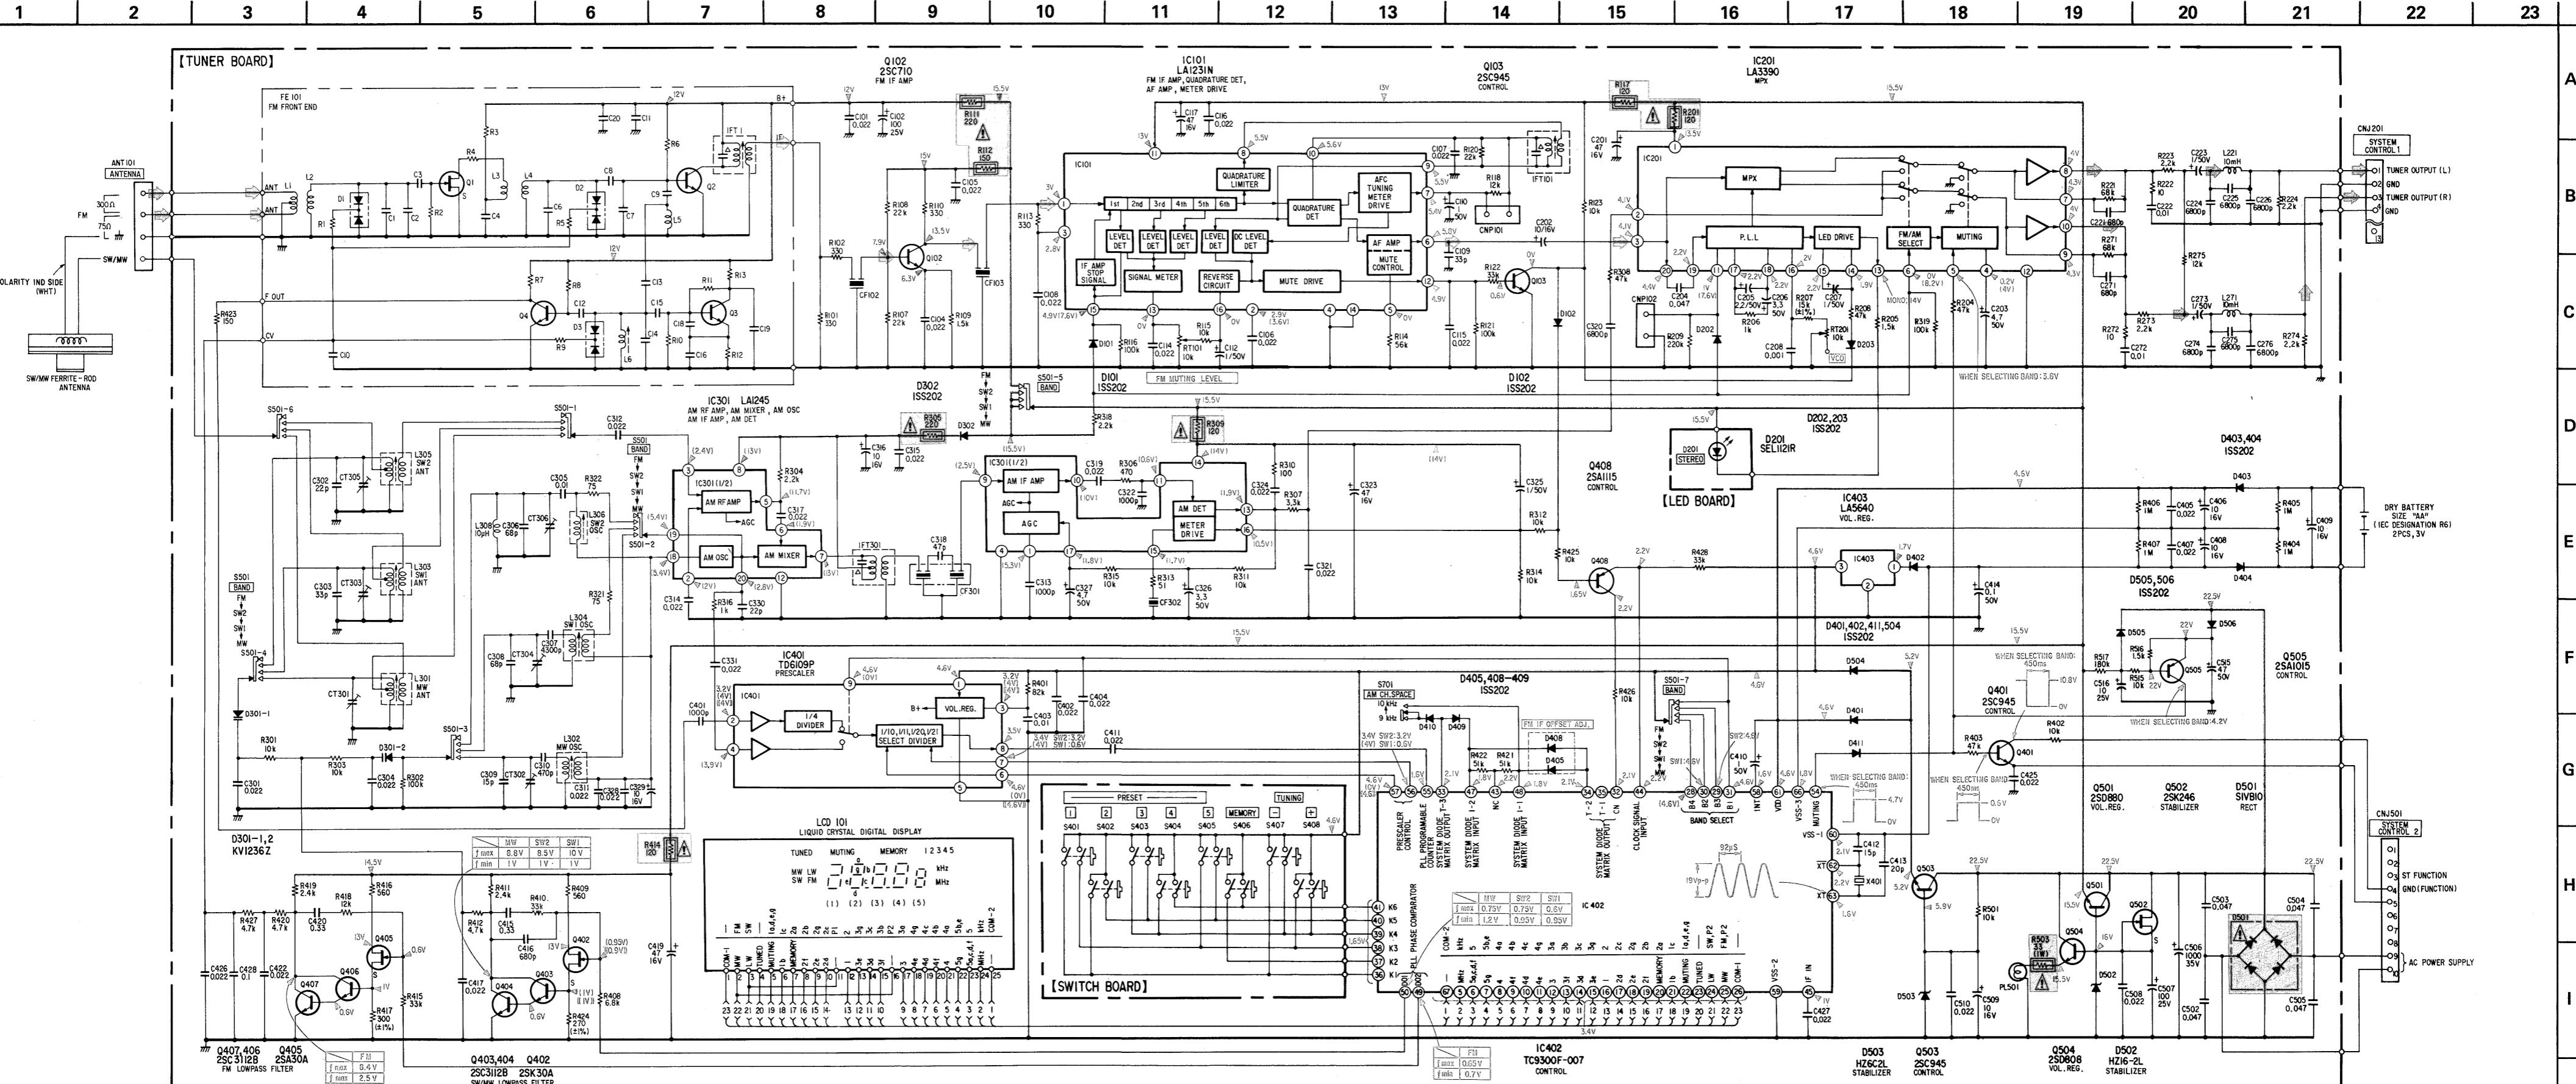

Note:


- All capacitors are in μF unless otherwise noted. pF: μpF 500V or less are not indicated except for electrolytics and tantalums.
- All resistors are in ohms, $\frac{1}{2}\text{W}$ unless otherwise noted.
- $\text{k}\Omega$: 1000 Ω , $\text{M}\Omega$: 1000 $\text{k}\Omega$

• : adjustment for repair.
 • : nonflammable resistor.
 • : internal component.
 • : panel designation.
 • : signal path.
 • : $\text{B}+$ bus.
 • Readings are taken under FM-signal conditions with VOM.
 () : MW ({ }): SW

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

Note: Voltages are measured with a VOM (50k Ω /V).

SECTION 5
EXPLODED VIEW AND PARTS LIST

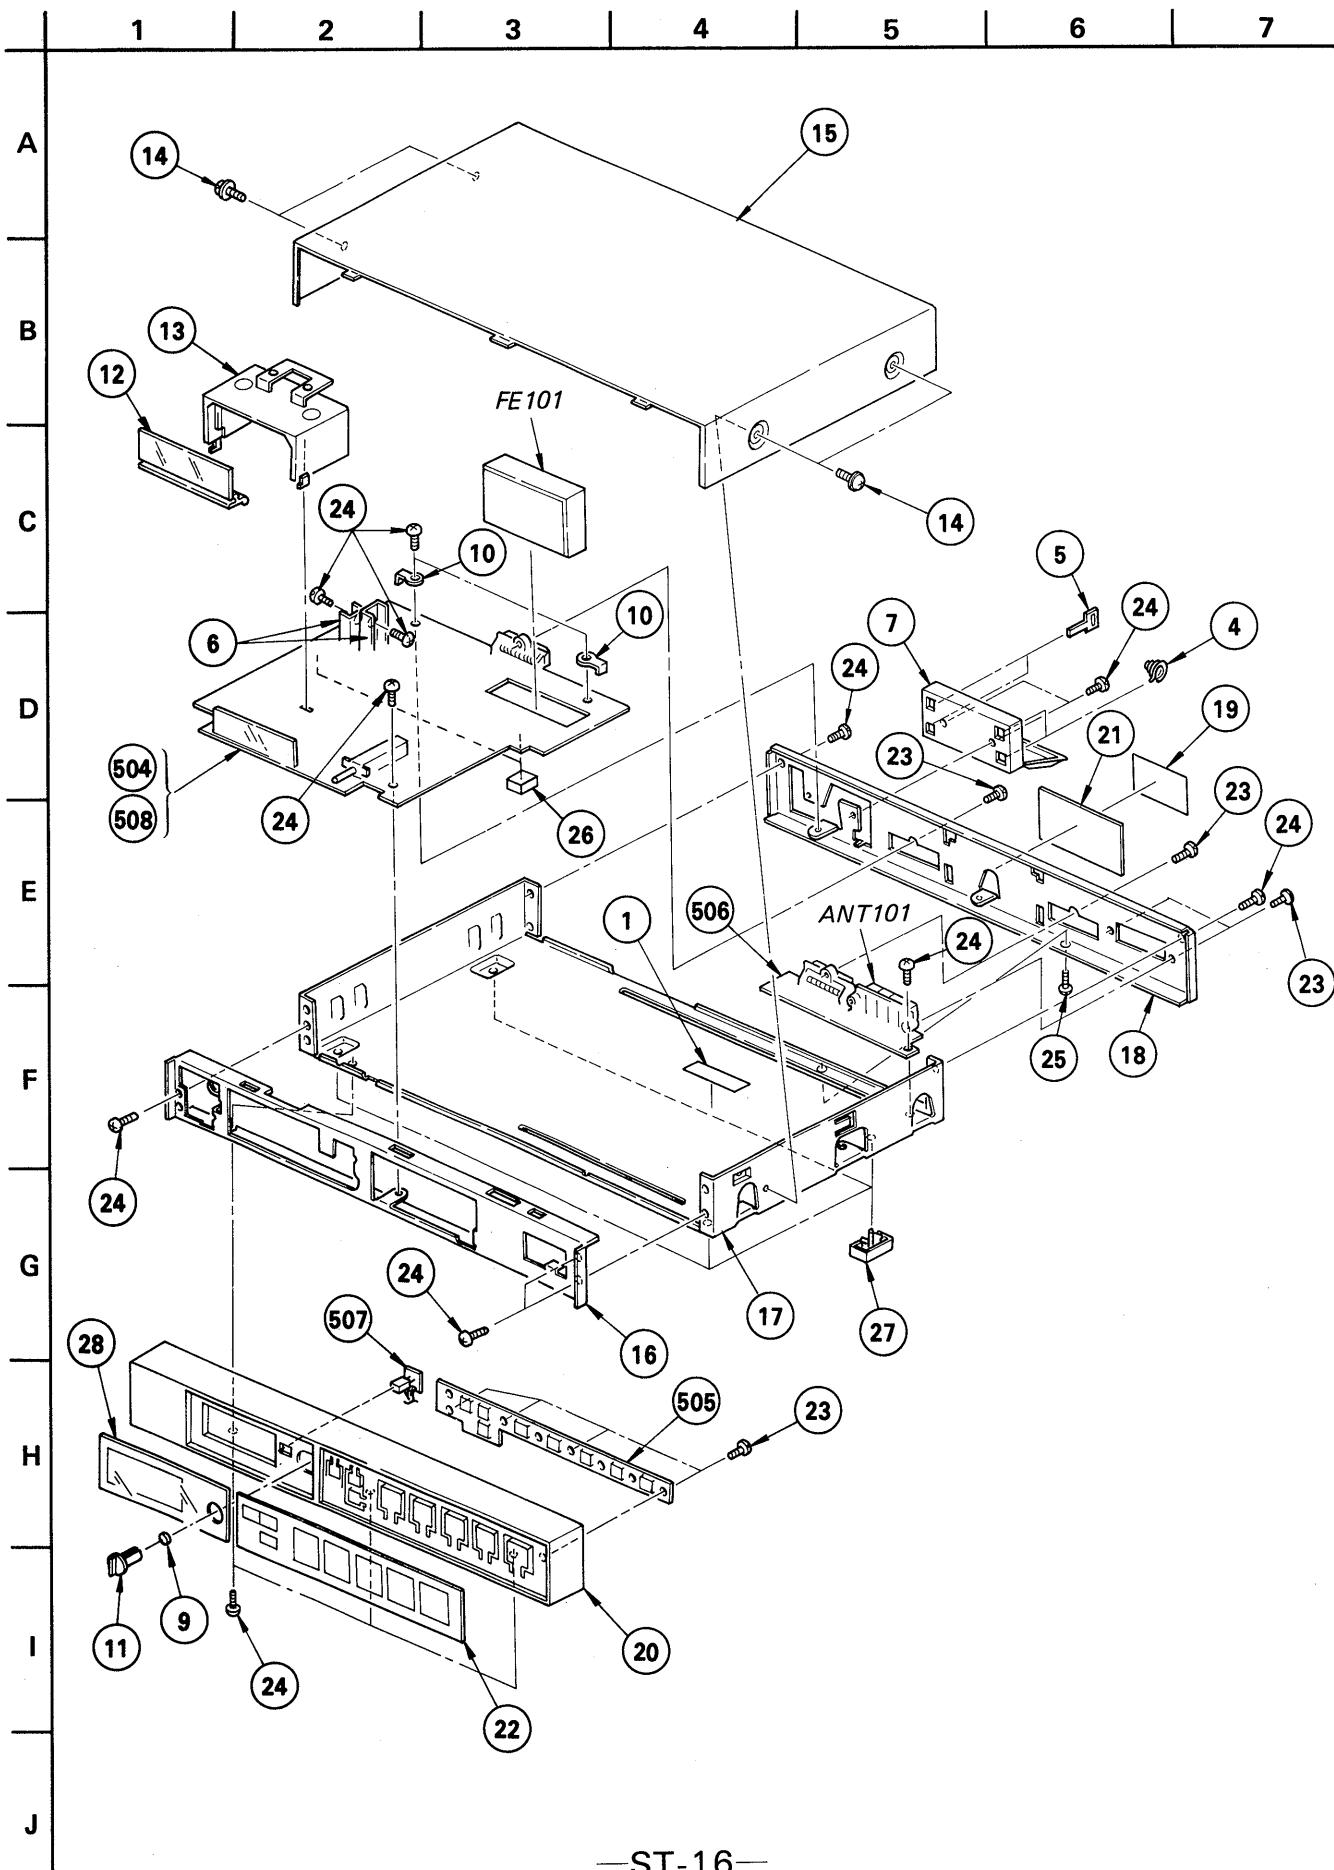

GENERAL SECTION

No.	Part No.	Description
1	3-701-030-00	LABEL, SERIAL NUMBER
2	
3	
4	3-883-424-00	SPRING
5	3-883-428-00	PLATE, TERMINAL (POSITIVE)
6	♦;4-875-327-01	HEAT SINK
7	4-875-530-00	CASE, BATTERY
8	
9	4-879-274-51	SPACER (t=2.5)
10	♦;4-881-629-00	PLATE (A), GROUND
11	4-884-847-21	KNOB (ST), ROTARY SWITCH
12	4-884-848-00	ILLUMINATOR (ST)
13	♦;4-884-856-00	HOUSE, LAMP
14	4-886-821-11	SCREW, M3 CASE
15	4-886-845-11	CASE
16	♦;4-888-213-11	PANEL, SUB
17	♦;4-888-214-21	CHASSIS
18	♦;4-888-235-32	PLATE, JACK
19	4-903-211-01	LABEL, MODEL NUMBER (E)
20	4-903-212-21	PANEL
21	4-903-213-01	PLATE, MASKING
22	4-903-216-22	SHEET, FUNCTION
23	7-685-646-11	SCREW +BVTP 3X8 TYPE2 N-S
24	7-685-871-01	SCREW +BVTT 3X6 (S)
25	7-685-873-01	SCREW +BVTT 3X10 (S)
26	9-911-841-XX	CUSHION
27	X-4886-405-1	FOOT ASSY
28	X-4903-203-1	PLATE ASSY, INDICATION

ELECTRICAL PARTS

Ref.No.	Part No.	Description	Value	Tolerance	Voltage
501	♦;1-560-060-00	PIN, CONNECTOR 2P			
502	♦;1-562-249-00	SOCKET, CONNECTOR 4P			
503	♦;1-562-327-00	SOCKET, CONNECTOR 3P			
504	♦;1-612-117-11	PC BOARD, TUNER			
505	♦;1-612-118-11	PC BOARD, SWITCH			
506	♦;1-612-119-11	PC BOARD, ANT			
507	♦;1-612-120-11	PC BOARD, LED			
508	♦;A-4351-383-A	MOUNTED PCB, TUNER			
ANT101 1-536-708-00 TERMINAL BOARD, PUSH 4P					
C101	1-161-494-00	CERAMIC	0.022MF	30%	25V
C102	1-123-333-00	ELECT	100MF	20%	25V
C104	1-161-494-00	CERAMIC	0.022MF	30%	25V
C105	1-161-494-00	CERAMIC	0.022MF	30%	25V
C106	1-161-494-00	CERAMIC	0.022MF	30%	25V
C107	1-161-494-00	CERAMIC	0.022MF	30%	25V
C108	1-161-494-00	CERAMIC	0.022MF	30%	25V
C109	1-161-265-00	CERAMIC	33PF	5%	50V
C110	1-123-380-00	ELECT	1MF	20%	50V
C112	1-123-380-00	ELECT	1MF	20%	50V
C114	1-161-494-00	CERAMIC	0.022MF	30%	25V
C115	1-161-494-00	CERAMIC	0.022MF	30%	25V
C116	1-161-494-00	CERAMIC	0.022MF	30%	25V
C117	1-123-319-00	ELECT	47MF	20%	16V
C201	1-123-319-00	ELECT	47MF	20%	16V
C202	1-123-356-00	ELECT	10MF	20%	16V
C203	1-123-369-00	ELECT	4.7MF	20%	50V
C204	1-108-246-00	MYLAR	0.047MF	10%	50V
C205	1-123-381-00	ELECT	2.2MF	20%	50V
C206	1-123-382-00	ELECT	3.3MF	20%	50V
C207	1-123-380-00	ELECT	1MF	20%	50V
C208	1-104-077-00	POLYSTYRENE	0.001MF	5%	50V
C221	1-102-116-00	CERAMIC	680PF	10%	50V
C222	1-101-004-00	CERAMIC	0.01MF		50V
C223	1-123-380-00	ELECT	1MF	20%	50V
C224	1-108-575-00	MYLAR	0.0068MF	5%	50V
C225	1-108-575-00	MYLAR	0.0068MF	5%	50V
C226	1-108-575-00	MYLAR	0.0068MF	5%	50V
C271	1-102-116-00	CERAMIC	680PF	10%	50V
C272	1-101-004-00	CERAMIC	0.01MF		50V
C273	1-123-380-00	ELECT	1MF	20%	50V
C274	1-108-575-00	MYLAR	0.0068MF	5%	50V
C275	1-108-575-00	MYLAR	0.0068MF	5%	50V
C276	1-108-575-00	MYLAR	0.0068MF	5%	50V
C301	1-161-494-00	CERAMIC	0.022MF	30%	25V
C303	1-102-877-00	CERAMIC	33PF	5%	50V

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "♦" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers ($\Delta-\Delta\Delta-\Delta\Delta-\Delta\Delta$ -XX or $\Delta-\Delta\Delta\Delta-\Delta\Delta\Delta-X$) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: $\mu\mu$ F.

RESISTORS

- All resistors are in ohms.
- F : nonflammable

COILS

• MMH : mH, UH : μ H

SEMICONDUCTORS

In each case, U : μ , for example:
 UA...: μ A..., UPA...: μ PA..., UPC...: μ PC,
 UPD...: μ PD...

ELECTRICAL PARTS

Ref.No.	Part No.	Description	Value	Tolerance	Rating
C304	1-161-494-00	CERAMIC	0.022MF	30%	25V
C305	1-108-239-00	MYLAR	0.01MF	10%	50V
C306	1-102-760-00	CERAMIC	68PF	5%	50V
C307	1-104-092-11	POLYSTYRENE	0.0043MF	5%	50V
C308	1-102-760-00	CERAMIC	68PF	5%	50V
C309	1-102-880-00	CERAMIC	15PF	5%	50V
C310	1-104-069-00	POLYSTYRENE	470PF	5%	50V
C311	1-101-005-00	CERAMIC	0.022MF	50V	
C312	1-161-494-00	CERAMIC	0.022MF	30%	25V
C313	1-161-323-00	CERAMIC	0.001MF	10%	50V
C314	1-161-494-00	CERAMIC	0.022MF	30%	25V
C315	1-161-494-00	CERAMIC	0.022MF	30%	25V
C316	1-123-356-00	ELECT	10MF	20%	16V
C317	1-161-494-00	CERAMIC	0.022MF	30%	25V
C318	1-161-267-00	CERAMIC	47PF	5%	50V
C319	1-161-494-00	CERAMIC	0.022MF	30%	25V
C320	1-161-329-00	CERAMIC	0.0068MF	30%	25V
C321	1-161-494-00	CERAMIC	0.022MF	30%	25V
C322	1-161-323-00	CERAMIC	0.001MF	10%	50V
C323	1-123-319-00	ELECT	47MF	20%	16V
C324	1-161-494-00	CERAMIC	0.022MF	30%	25V
C325	1-123-380-00	ELECT	1MF	20%	50V
C326	1-123-382-00	ELECT	3.3MF	20%	50V
C327	1-123-369-00	ELECT	4.7MF	20%	50V
C328	1-101-005-00	CERAMIC	0.022MF	50V	
C329	1-123-356-00	ELECT	10MF	20%	16V
C330	1-161-263-00	CERAMIC	22PF	5%	50V
C331	1-161-494-00	CERAMIC	0.022MF	30%	25V
C340	1-101-999-00	CERAMIC	10PF	0.5PF	50V
C401	1-161-323-00	CERAMIC	0.001MF	10%	50V
C402	1-161-494-00	CERAMIC	0.022MF	30%	25V
C403	1-161-330-00	CERAMIC	0.01MF	30%	25V
C404	1-161-494-00	CERAMIC	0.022MF	30%	25V
C405	1-161-494-00	CERAMIC	0.022MF	30%	25V
C406	1-123-356-00	ELECT	10MF	20%	16V
C407	1-161-494-00	CERAMIC	0.022MF	30%	25V
C408	1-123-356-00	ELECT	10MF	20%	16V
C409	1-123-356-00	ELECT	10MF	20%	16V
C410	1-123-380-00	ELECT	1MF	20%	50V
C411	1-161-494-00	CERAMIC	0.022MF	30%	25V
C412	1-102-851-00	CERAMIC	15PF	5%	50V
C413	1-101-974-00	CERAMIC	20PF	5%	50V
C414	1-123-607-00	ELECT	0.1MF	20%	50V
C415	1-130-638-00	FILM	0.33MF	5%	50V
C416	1-102-116-00	CERAMIC	680PF	10%	50V

ELECTRICAL PARTS

Ref.No.	Part No.	Description	Value	Tolerance	Rating
C417	1-101-005-00	CERAMIC	0.022MF	50V	
C419	1-123-319-00	ELECT	47MF	20%	16V
C420	1-130-638-00	FILM	0.33MF	5%	50V
C422	1-101-005-00	CERAMIC	0.022MF	50V	
C425	1-161-494-00	CERAMIC	0.022MF	30%	25V
C426	1-161-494-00	CERAMIC	0.022MF	30%	25V
C427	1-161-494-00	CERAMIC	0.022MF	30%	25V
C428	1-130-632-00	FILM	0.1MF	5%	50V
C502	1-108-246-00	MYLAR	0.047MF	10%	50V
C503	1-108-246-00	MYLAR	0.047MF	10%	50V
C504	1-108-246-00	MYLAR	0.047MF	10%	50V
C505	1-108-246-00	MYLAR	0.047MF	10%	50V
C506	1-123-349-00	ELECT	1000MF	20%	35V
C507	1-123-333-00	ELECT	100MF	20%	25V
C508	1-161-494-00	CERAMIC	0.022MF	30%	25V
C509	1-123-356-00	ELECT	10MF	20%	16V
C510	1-161-494-00	CERAMIC	0.022MF	30%	25V
C515	1-123-359-00	ELECT	47MF	20%	50V
C516	1-123-356-00	ELECT	10MF	20%	25V
CF102	1-527-968-00	FILTER, CERAMIC			
CF103	1-527-968-00	FILTER, CERAMIC			
CF301	1-527-937-00	FILTER, CERAMIC			
CF302	1-527-981-00	FILTER, CERAMIC			
CNJ201	1-562-068-00	SOCKET, CONNECTOR 13P			
CNJ501	1-562-479-11	SOCKET, CONNECTOR 10P			
CT301	1-141-171-00	CAP, TRIMMER 20P			
CT302	1-141-171-00	CAP, TRIMMER 20P			
CT303	1-141-181-11	CAP, TRIMMER			
CT304	1-141-181-11	CAP, TRIMMER			
CT305	1-141-181-11	CAP, TRIMMER			
CT306	1-141-181-11	CAP, TRIMMER			
D101	8-719-107-94	DIODE 1SS202-1			
D102	8-719-107-94	DIODE 1SS202-1			
D201	8-719-311-21	DIODE SEL1121R			
D202	8-719-107-94	DIODE 1SS202-1			
D203	8-719-107-94	DIODE 1SS202-1			
D301	8-719-902-79	DIODE KV1236Z			
D302	8-719-107-94	DIODE 1SS202-1			
D401	8-719-107-94	DIODE 1SS202-1			
D402	8-719-107-94	DIODE 1SS202-1			
D403	8-719-107-94	DIODE 1SS202-1			
D404	8-719-107-94	DIODE 1SS202-1			
D405	8-719-107-94	DIODE 1SS202-1			
D408	8-719-107-94	DIODE 1SS202-1			
D409	8-719-107-94	DIODE 1SS202-1			
D410	8-719-107-94	DIODE 1SS202-1			

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "♦" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers ($\Delta-\Delta\Delta-\Delta\Delta-\text{XX}$ or $\Delta-\Delta\Delta\Delta-\Delta\Delta-\text{X}$) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μF , PF: $\mu\mu\text{F}$.

RESISTORS

- All resistors are in ohms.
- F : nonflammable

COILS

MMH : mH, UH : μH

SEMICONDUCTORS

In each case, U : μ , for example:

UA...: $\mu\text{A}\dots$, UPA...: $\mu\text{PA}\dots$, UPC...: $\mu\text{PC}\dots$,

UPD...: $\mu\text{PD}\dots$

ELECTRICAL PARTS

Ref. No.	Part No.	Description
D411	8-719-107-94	DIODE 1SS202-1
D501	A.8-719-511-20	DIODE S1VB20
D502	8-719-901-62	DIODE HZ16-2L
D503	8-719-910-68	DIODE HZ6C2L
D504	8-719-107-94	DIODE 1SS202-1
D505	8-719-107-94	DIODE 1SS202-1
D506	8-719-107-94	DIODE 1SS202-1
FE101	A-4344-037-A	FRONT END
IC101	8-759-812-31	IC LA1231
IC201	8-759-833-90	IC LA3390
IC301	8-759-812-45	IC LA1245
IC401	8-759-202-10	IC TD6109P-S
IC402	8-759-202-09	IC TC9300F007B
IC403	8-759-800-63	IC LA5640
IFT101	1-404-419-00	COIL, DISCRIMINATOR
IFT301	1-404-535-11	COIL (WITH IFT)
L221	1-408-257-00	MICRO INDUCTOR 10MMH
L271	1-408-257-00	MICRO INDUCTOR 10MMH
L301	1-402-069-11	COIL (ANT)
L302	1-406-089-11	COIL (OSC)
L303	1-402-070-11	COIL (ANT)
L304	1-406-088-11	COIL (OSC)
L305	1-402-072-11	COIL (ANT)
L306	1-406-106-11	COIL (OSC)
L308	1-408-563-00	MICRO INDUCTOR 10UH
LCD1	1-806-643-00	DISPLAY PANEL, LIQUID CRYSTAL
PL501	1-518-557-11	LAMP, PILOT
Q102	8-729-671-13	TRANSISTOR 2SC710-13
Q103	8-729-245-83	TRANSISTOR 2SC2458
Q401	8-729-245-83	TRANSISTOR 2SC2458
Q402	8-729-203-05	TRANSISTOR 2SK30A-GR3
Q403	8-729-201-84	TRANSISTOR 2SC3112-B
Q404	8-729-201-84	TRANSISTOR 2SC3112-B
Q405	8-729-203-05	TRANSISTOR 2SK30A-GR3
Q406	8-729-201-84	TRANSISTOR 2SC3112-B
Q407	8-729-201-84	TRANSISTOR 2SC3112-B
Q408	8-729-117-54	TRANSISTOR 2SA1175
Q501	8-729-288-02	TRANSISTOR 2SD880
Q502	8-729-224-63	TRANSISTOR 2SK246-BL
Q503	8-729-245-83	TRANSISTOR 2SC2458
Q504	8-729-288-02	TRANSISTOR 2SD880
Q505	8-729-117-54	TRANSISTOR 2SA1175

ELECTRICAL PARTS

Ref. No.	Part No.	Description
R101	1-247-119-00	CARBON 330 5% 1/4W
R102	1-247-119-00	CARBON 330 5% 1/4W
R107	1-246-505-00	CARBON 22K 5% 1/4W
R108	1-246-505-00	CARBON 22K 5% 1/4W
R109	1-247-135-00	CARBON 1.5K 5% 1/4W
R110	1-247-119-00	CARBON 330 5% 1/4W
R111	A.1-247-115-00	CARBON 220 5% 1/4W F
R112	A.1-247-111-00	CARBON 150 5% 1/4W F
R113	1-247-119-00	CARBON 330 5% 1/4W
R114	1-247-173-00	CARBON 56K 5% 1/4W
R115	1-247-155-00	CARBON 10K 5% 1/4W
R116	1-247-179-00	CARBON 100K 5% 1/4W
R117	A.1-247-109-00	CARBON 120 5% 1/4W F
R118	1-246-499-00	CARBON 12K 5% 1/4W
R120	1-246-505-00	CARBON 22K 5% 1/4W
R121	1-247-179-00	CARBON 100K 5% 1/4W
R122	1-247-167-00	CARBON 33K 5% 1/4W
R123	1-247-155-00	CARBON 10K 5% 1/4W
R201	A.1-247-109-00	CARBON 120 5% 1/4W F
R204	1-247-171-00	CARBON 47K 5% 1/4W
R205	1-247-135-00	CARBON 1.5K 5% 1/4W
R206	1-247-131-00	CARBON 1K 5% 1/4W
R207	1-214-757-00	METAL 15K 1% 1/4W
R208	1-247-171-00	CARBON 47K 5% 1/4W
R209	1-246-529-00	CARBON 220K 5% 1/4W
R221	1-247-175-00	CARBON 68K 5% 1/4W
R222	1-247-083-00	CARBON 10 5% 1/4W
R223	1-247-139-00	CARBON 2.2K 5% 1/4W
R224	1-247-139-00	CARBON 2.2K 5% 1/4W
R271	1-247-175-00	CARBON 68K 5% 1/4W
R272	1-247-083-00	CARBON 10 5% 1/4W
R273	1-247-139-00	CARBON 2.2K 5% 1/4W
R274	1-247-139-00	CARBON 2.2K 5% 1/4W
R275	1-246-499-00	CARBON 12K 5% 1/4W
R301	1-247-155-00	CARBON 10K 5% 1/4W
R302	1-247-179-00	CARBON 100K 5% 1/4W
R303	1-247-155-00	CARBON 10K 5% 1/4W
R304	1-247-139-00	CARBON 2.2K 5% 1/4W
R305	A.1-247-115-00	CARBON 220 5% 1/4W F
R306	1-247-123-00	CARBON 470 5% 1/4W
R307	1-246-485-00	CARBON 3.3K 5% 1/4W
R308	1-247-171-00	CARBON 47K 5% 1/4W
R309	A.1-247-109-00	CARBON 120 5% 1/4W F
R310	1-247-107-00	CARBON 100 5% 1/4W
R311	1-247-155-00	CARBON 10K 5% 1/4W

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers ($\Delta-\Delta\Delta-\Delta\Delta\Delta-XX$ or $\Delta-\Delta\Delta\Delta-\Delta\Delta\Delta-X$) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: $\mu\mu$ F.

RESISTORS

- All resistors are in ohms.
- F : nonflammable

COILS

- MMH : mH, UH : μ H

SEMICONDUCTORS

In each case, U : μ , for example:
UA... : μ A..., UPA... : μ PA..., UPC... : μ PC,
UPD... : μ PD...

The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

ELECTRICAL PARTS

Ref.No.	Part No.	Description	Value	Tolerance	Power
R312	1-247-155-00	CARBON	10K	5%	1/4W
R313	1-246-442-00	CARBON	51	5%	1/4W
R314	1-247-155-00	CARBON	10K	5%	1/4W
R315	1-247-155-00	CARBON	10K	5%	1/4W
R316	1-247-131-00	CARBON	1K	5%	1/4W
R318	1-247-139-00	CARBON	2.2K	5%	1/4W
R319	1-247-179-00	CARBON	100K	5%	1/4W
R321	1-246-446-00	CARBON	75	5%	1/4W
R322	1-246-446-00	CARBON	75	5%	1/4W
R401	1-246-519-00	CARBON	82K	5%	1/4W
R402	1-247-155-00	CARBON	10K	5%	1/4W
R403	1-247-171-00	CARBON	47K	5%	1/4W
R404	1-246-545-00	CARBON	1M	5%	1/4W
R405	1-246-545-00	CARBON	1M	5%	1/4W
R406	1-246-545-00	CARBON	1M	5%	1/4W
R407	1-246-545-00	CARBON	1M	5%	1/4W
R408	1-247-151-00	CARBON	6.8K	5%	1/4W
R409	1-247-125-00	CARBON	560	5%	1/4W
R410	1-247-167-00	CARBON	33K	5%	1/4W
R411	1-246-482-00	CARBON	2.4K	5%	1/4W
R412	1-247-147-00	CARBON	4.7K	5%	1/4W
R414 A. 1-247-109-00	CARBON	120	5%	1/4W	F
R415	1-247-167-00	CARBON	33K	5%	1/4W
R416	1-247-125-00	CARBON	560	5%	1/4W
R417	1-214-716-00	METAL	300	1%	1/4W
R418	1-246-499-00	CARBON	12K	5%	1/4W
R419	1-246-482-00	CARBON	2.4K	5%	1/4W
R420	1-247-147-00	CARBON	4.7K	5%	1/4W
R421	1-246-514-00	CARBON	51K	5%	1/4W
R422	1-246-514-00	CARBON	51K	5%	1/4W
R423	1-247-111-00	CARBON	150	5%	1/4W
R424	1-214-118-00	METAL	270	1%	1/4W
R425	1-247-155-00	CARBON	10K	5%	1/4W
R426	1-247-155-00	CARBON	10K	5%	1/4W
R427	1-247-147-00	CARBON	4.7K	5%	1/4W
R428	1-247-167-00	CARBON	33K	5%	1/4W
R501	1-247-155-00	CARBON	10K	5%	1/4W
R503 A. 1-213-125-00	METAL OXIDE	33	5%	1W	F
R515	1-247-155-00	CARBON	10K	5%	1/4W
R516	1-247-135-00	CARBON	1.5K	5%	1/4W
R517	1-246-527-00	CARBON	180K	5%	1/4W
RT101	1-226-236-00	RES, ADJ, CARBON	10K		
RT201	1-228-505-00	RES, ADJ, METAL GLAZE	10K		

ELECTRICAL PARTS

Ref.No.	Part No.	Description
S401	1-552-174-00	SWITCH, PUSH (1)
S402	1-552-174-00	SWITCH, PUSH (2)
S403	1-552-174-00	SWITCH, PUSH (3)
S404	1-552-174-00	SWITCH, PUSH (4)
S405	1-552-174-00	SWITCH, PUSH (5)
S406	1-552-174-00	SWITCH, PUSH (MEMORY)
S407	1-552-174-00	SWITCH, PUSH (-)
S408	1-552-174-00	SWITCH, PUSH (+)
S501	1-554-267-00	SWITCH, ROTARY SLIDE (BAND)
S701	1-552-370-00	SWITCH, SLIDE (AM CH. SPACE)
X401	1-527-995-00	VIBRATOR, CRYSTAL

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (Δ-△△Δ-△△Δ-XX or Δ-△△△Δ-△△Δ-X) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF:μF, PF:μμF.

RESISTORS

- All resistors are in ohms.
- F : nonflammable

COILS

- MMH : mH, UH : μH


SEMICONDUCTORS

In each case, U : μ, for example:
 UA...: μA..., UPA...: μPA..., UPC...: μPC,
 UPD...: μPD...

The components identified by shading and mark ▲ are critical for safety.
 Replace only with part number specified.

STEREO CASSETTE DECK

(TC-V10)

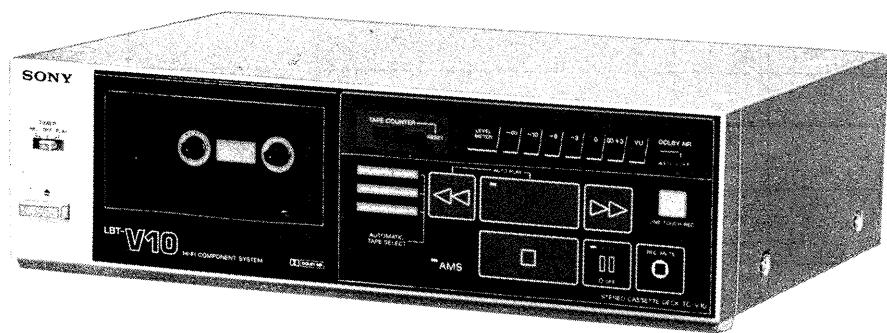

Tape Transport Mechanism Type	TCM-130V13
-------------------------------	------------


SECTION 1

OUTLINE

1-1. SERVICEING NOTE

This unit takes 10 V AC power source from the power amplifier unit TA-V10 together with the system-control signals using the connection cable, thus power-transformer less. When performing checks and repairs on the TC-V10, be sure to make a system setup. Otherwise, checkings and repairs may become in unsatisfactory.

1.2. BLOCK DIAGRAM

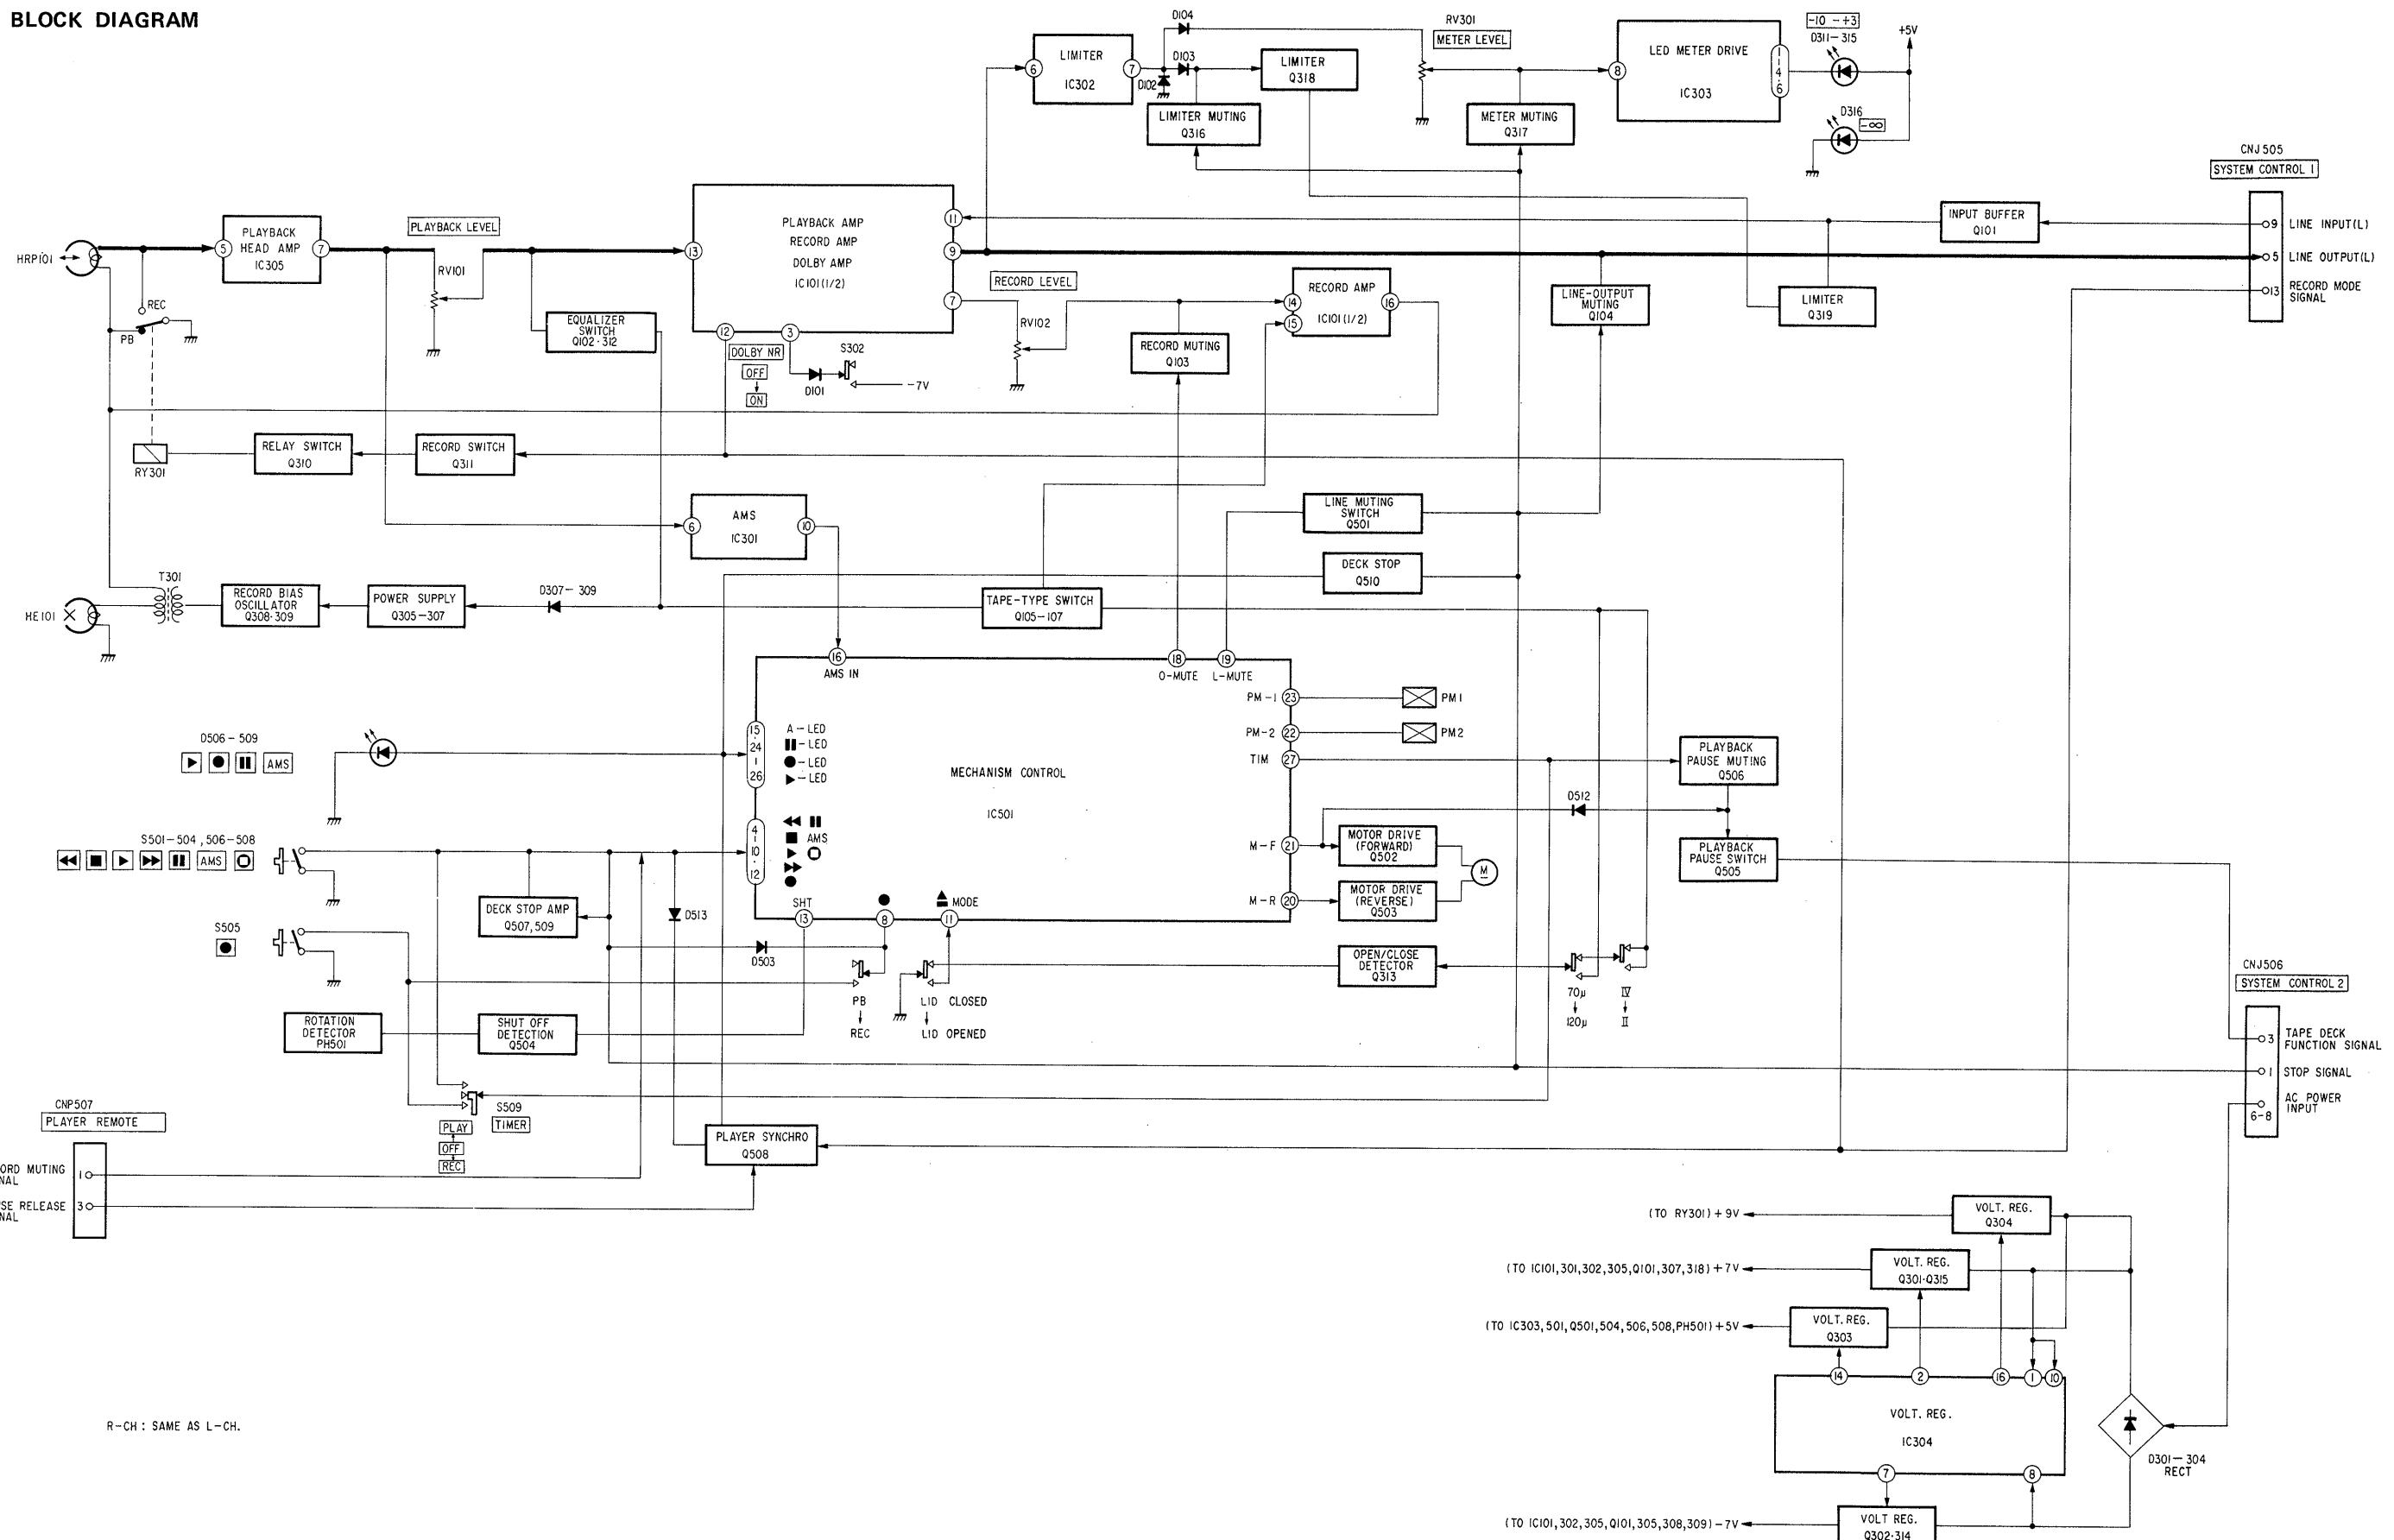

SECTION 2
DISASSEMBLY

**LBT-V10
TC-V10** **LBT-V10
TC-V10**


Note: Follow the disassembly procedure in the numerical order given.

CASE REMOVAL


Remove case by taking out four securing case.

AUDIO-SYSCON BOARD


Note: When performing checking to the audio/system control board with power applied, be sure to connect its ground pattern foil to the metal chassis.

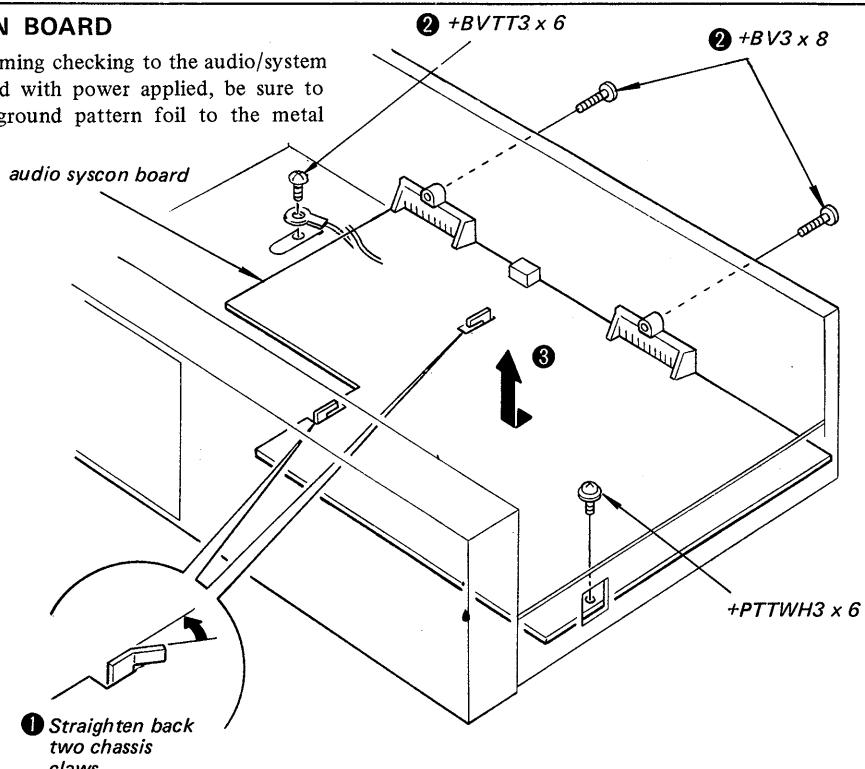


BOTTOM PLATE

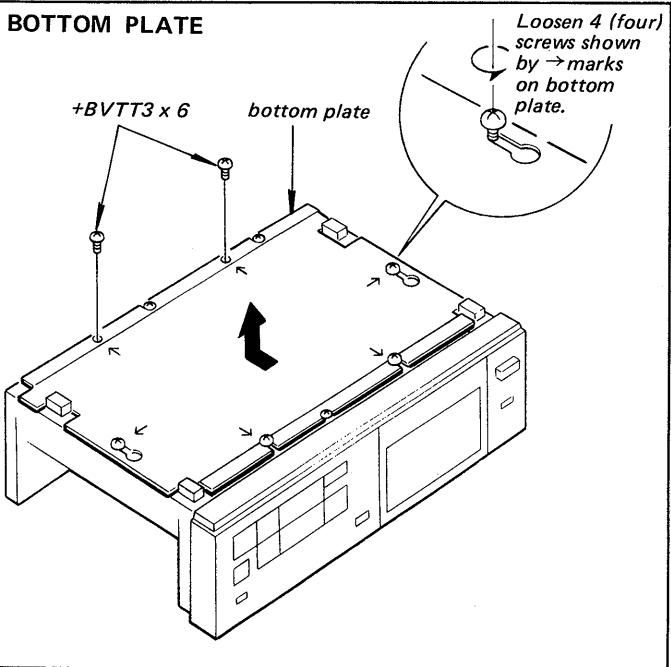


CASSETTE WINDOW / FRONT PANEL





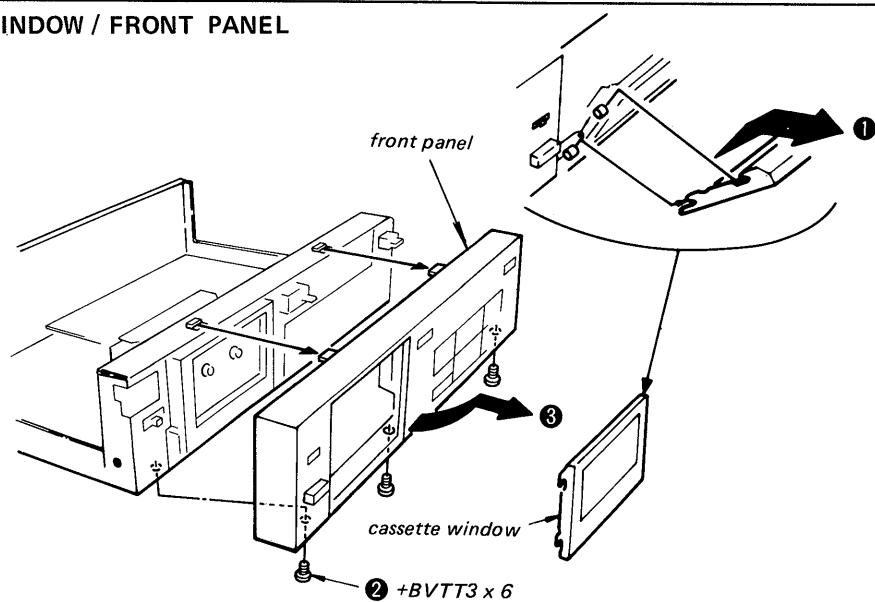


METER BOARD / CONTROL SWITCH BOARD

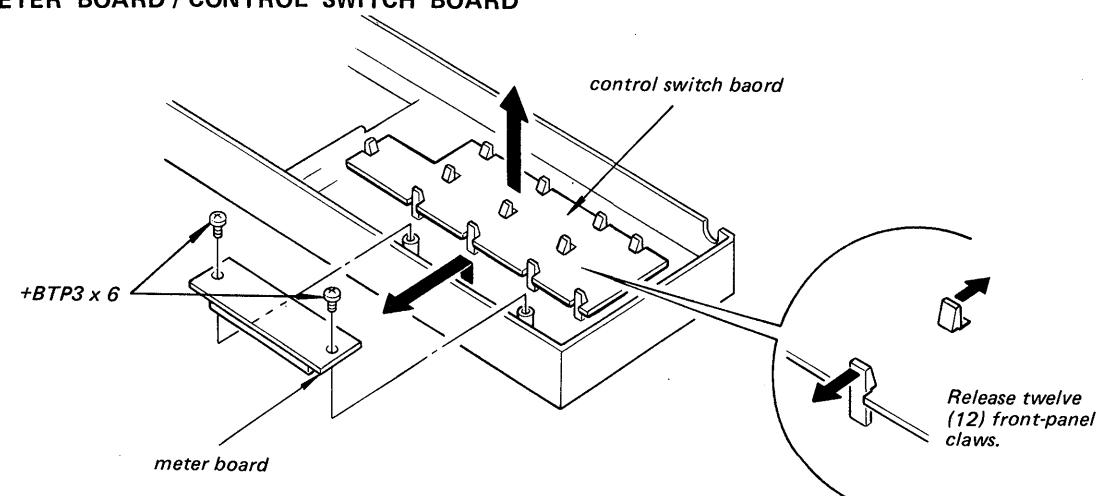

TAPE COUNTER / PHOTO INTERRUPT BOARD

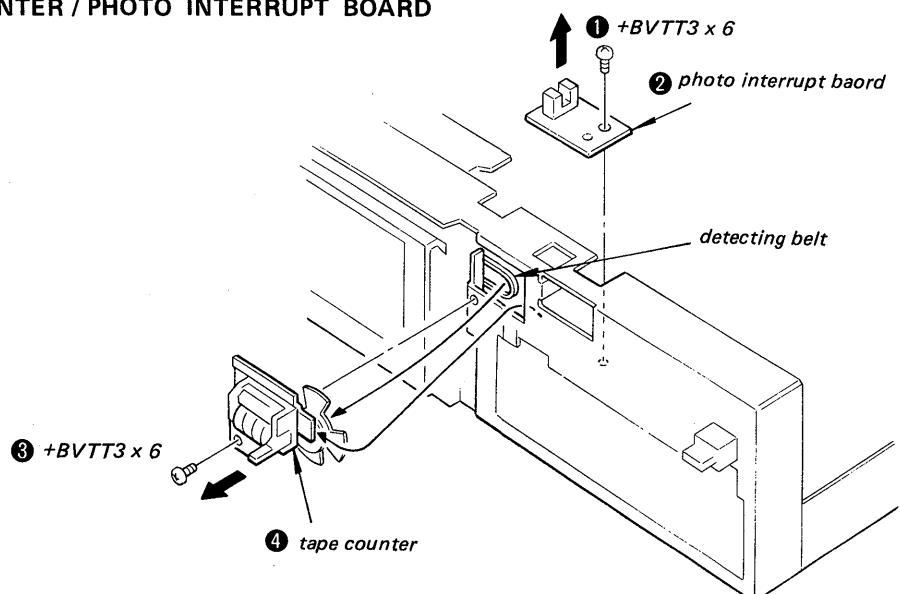

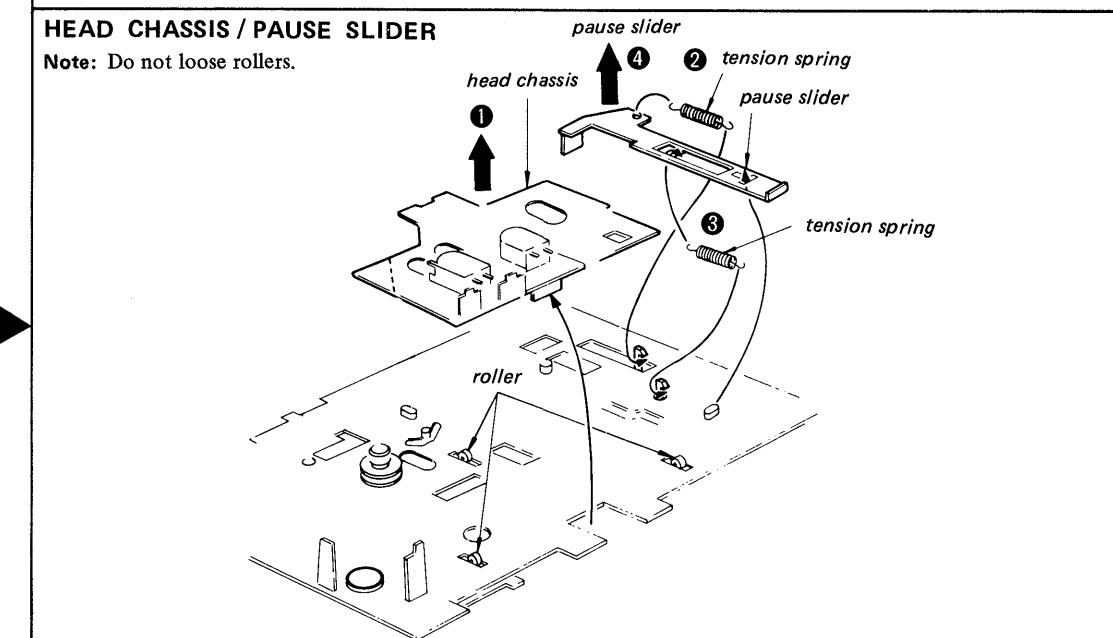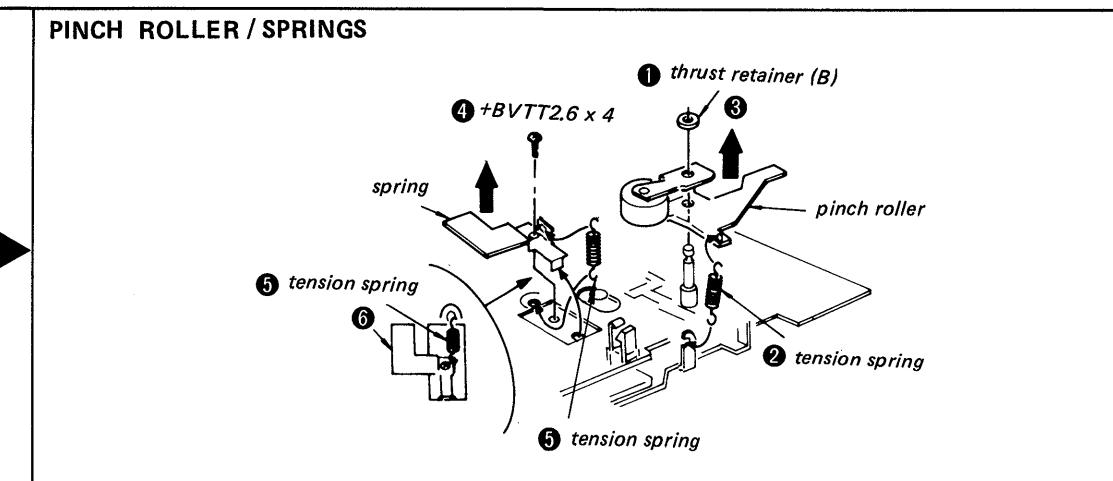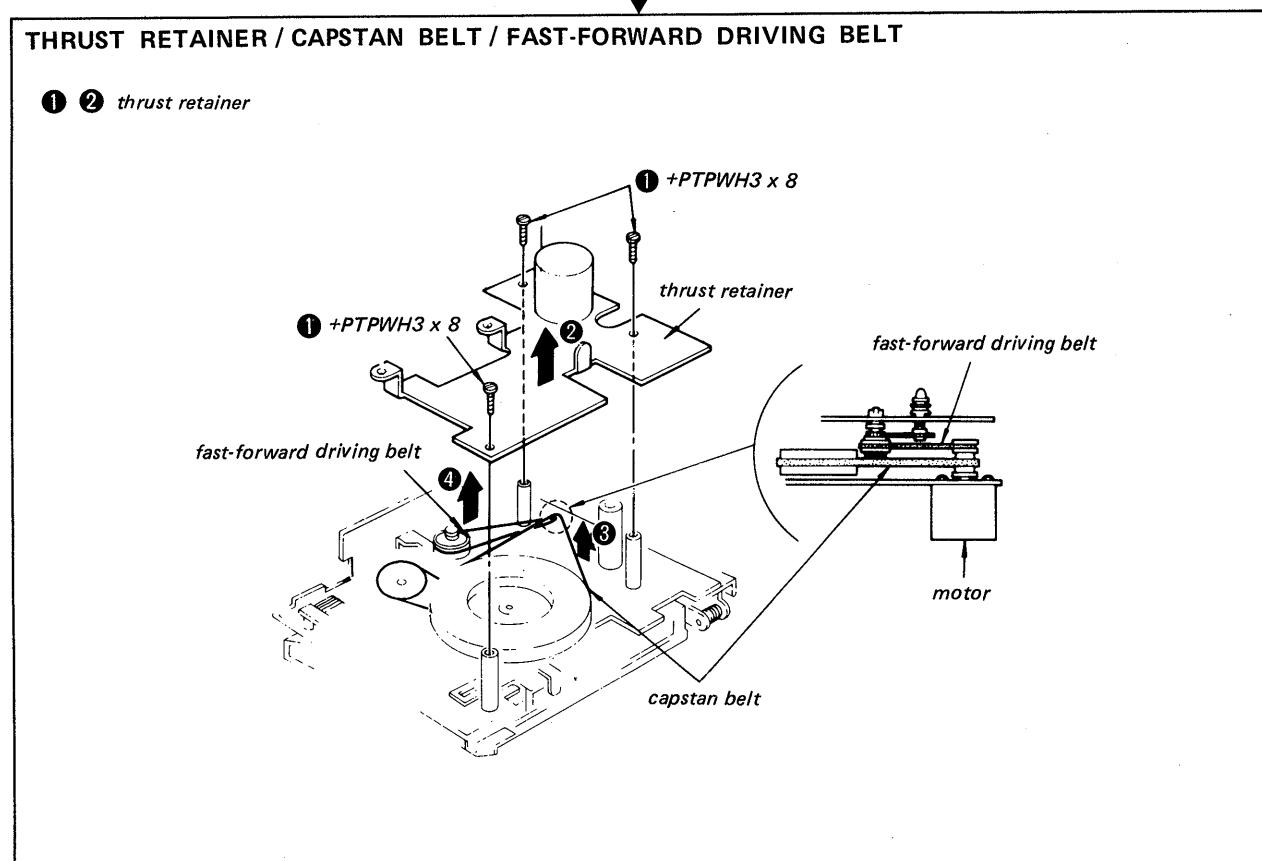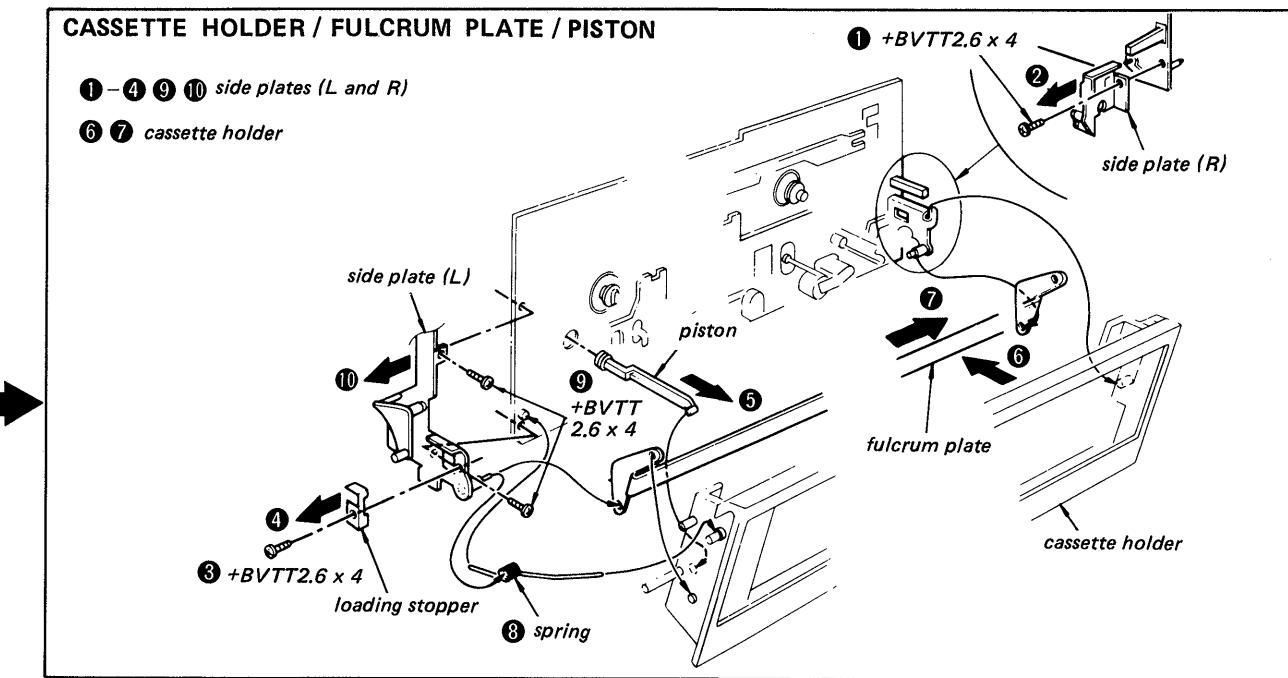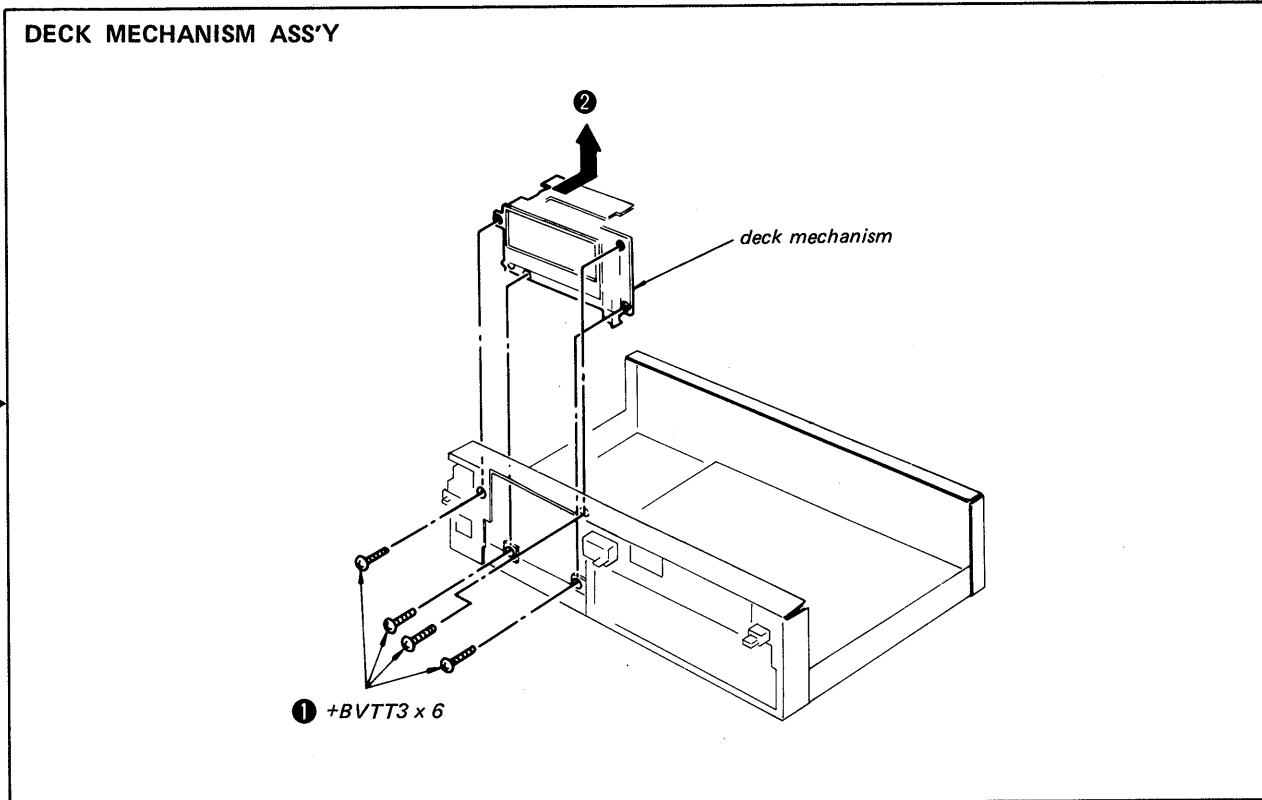

SECTION 3

ADJUSTMENTS

3-1. MECHANICAL ADJUSTMENTS

PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab:

record/playback head	pinch roller
erase head	rubber belts
capstan	idle
2. Demagnetize the record/playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Torque Measurement

Torque	Torque meter	Meter reading
Forward torque	CQ102C	30–63 g·cm (0.42–0.88 oz·inch)
Back tension torque	CQ102C	2.5–6.5 g·cm (0.03–0.09 oz·inch)
Fast-forward/rewind torque	CQ201B	80–165 g·cm (1.1–2.29 oz·inch)

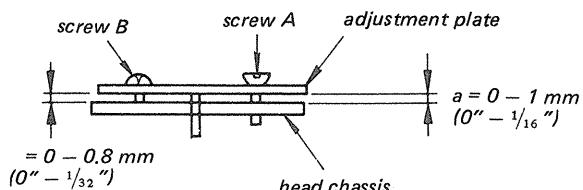
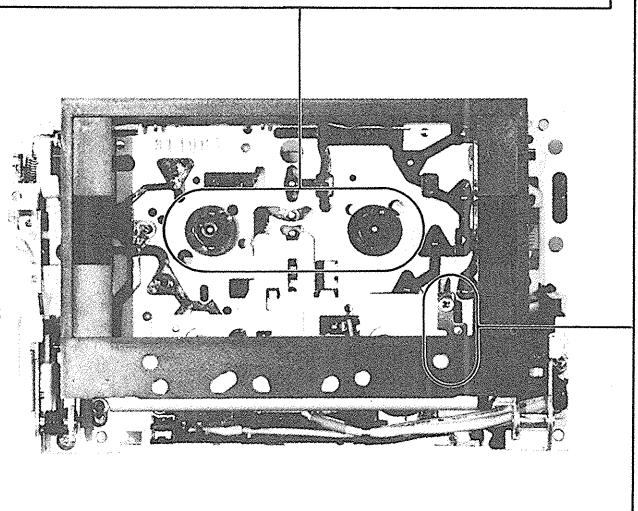


Fig. 1


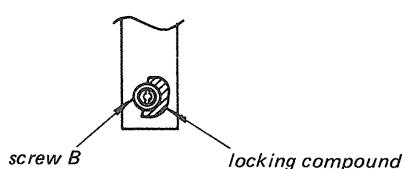


Fig. 2.

Clearance Between Pinch Roller And Capstan Shaft Adjustment

1. Mode: forward-pause

Adjust by bending section B of pause slider so that the clearance (A) between pinch roller and capstan shaft becomes 0.4 – 0.8 mm.

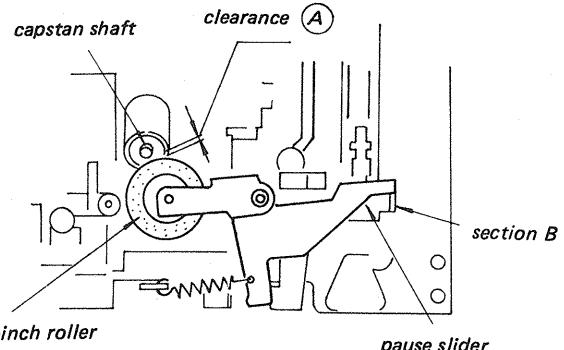


Head Moving Stroke Adjustment

— Playback and AMS Modes —

Procedure:


1. Put the unit in playback mode.
2. Adjust screw B so that the stroke becomes in 3.3 – 3.45 mm ($\frac{5}{32}$ "').
 a) Loosen screw when short.
 b) Tighten screw when long.
3. Check for a (overstroke) of more than 0.3 mm ($\frac{1}{32}$ ") when compared with a position of the head in normal playback mode.
4. Clearance between head chassis and adjustment plate should be 0 – 0.8 mm (0" – $\frac{1}{32}$ ") as shown in Fig. 1-a.
5. Put the unit in AMS mode.
6. Adjust screw A so that the stroke becomes in 1.9 mm – 2.1 mm ($\frac{3}{32}$ "').
 a) Loosen screw B when long.
 b) Tighten screw A when short.
7. Clearance between head chassis and adjustment plate should be 0 – 1 mm (0" – $\frac{1}{16}$ ") as shown in Fig. 1-a.
8. Lock the adjustment screws after the adjustment. Be sure to apply locking compound on only half (180°) of the screw head of screw B as shown in Fig. 2.

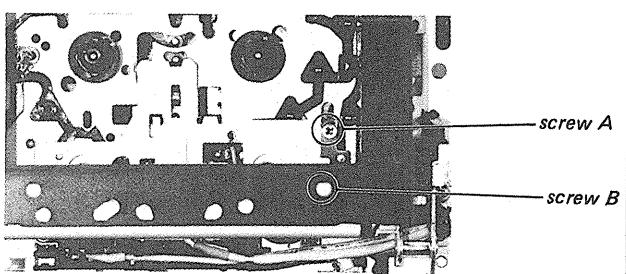



Tape Path Adjustment

Procedure:

1. Mode: playback Mirror tape cassette CQ-009C
2. When curl exists at "a" of erase-head's tape guide.
 - a) Loosen screw A and put appropriate head-height adjustment shim(s) to eliminate curl.
 - b) Total shim height should be less than 0.3 mm ($\frac{1}{32}$ ").
3. When curl exists at "b" of erase-head's tape guide.
 - a) Loosen screw A and remove one or more shim(s) already installed at the head, or use only one 0.1 mm thick shim.
 - b) Total shim removing should be within the amount of 0.3 mm ($\frac{1}{32}$ ") thickness.
4. When curl exist at "c" of record/playback head. Perform the same procedure in step 2 above using screw B.
5. When curl exist at "d" of record/playback head. Perform the same procedure in step 3 above using screw B.
6. After the adjustment, lock the screws with locking compound.

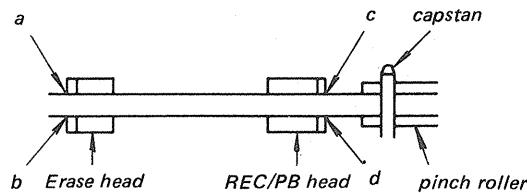

Seen with a mirror tape cassette.

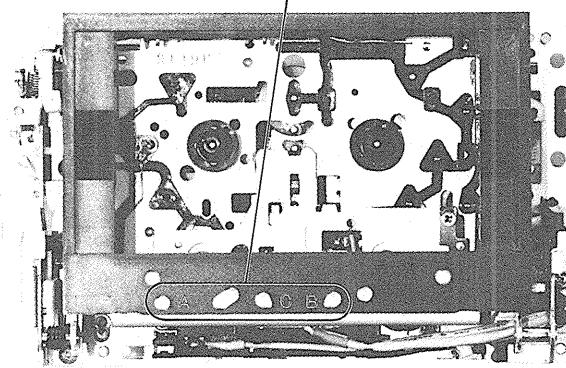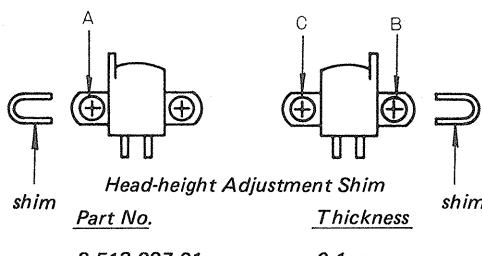


Soft Eject Speed Adjustment

Note: Place the unit on its side when performing this adjustment.

Procedure:

1. Put any tape cassette whose weight is equivalent to a "CHF 90" in the unit.
2. Be sure to install the cassette lid.
3. Adjust position of screw by repeating pressing ejection button and closing cassette lid so that the lid-opening time becomes in 0.4 to 1.0 second.
 - a) When fast: Tighten screw.
 - b) When slow: Loosen screw.

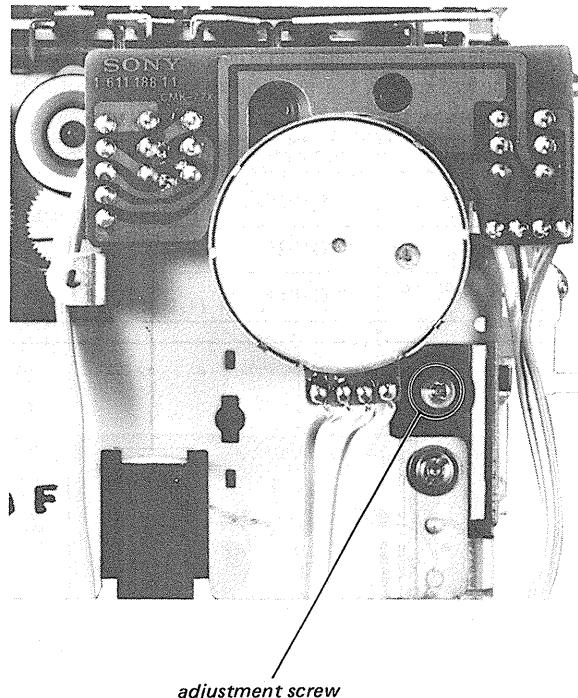

3-2. ELECTRICAL ADJUSTMENTS

Note: The adjustment should be performed in the order given in this service manual.
The adjustments should be performed for both L-CH and R-CH.


- Tape switches are automatically switched according to the tape used.

Tape	TAPE TYPE indicator
CS-15	TYPE I
CS-26	TYPE II
CS-40	TYPE IV

- Switches and controls should be set as follows unless otherwise specified.

DOLBY NR switch:	OFF
TIMER switch:	OFF

— Record Mode —

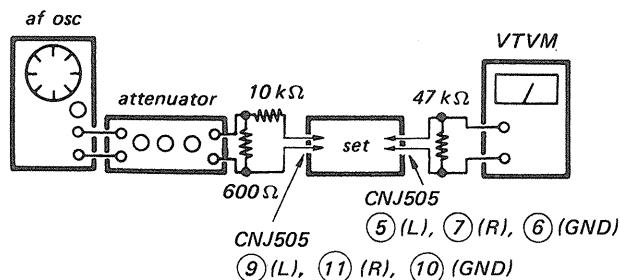


Standard Input Level

	CNJ505 9(L), 11(R)
source impedance	10 kΩ
input level	0.25 V (-10 dB)

Standard Output Level

	CNJ505 5(L), 7(R)
load impedance	47 kΩ
output level	0.44 V (-5 dB)

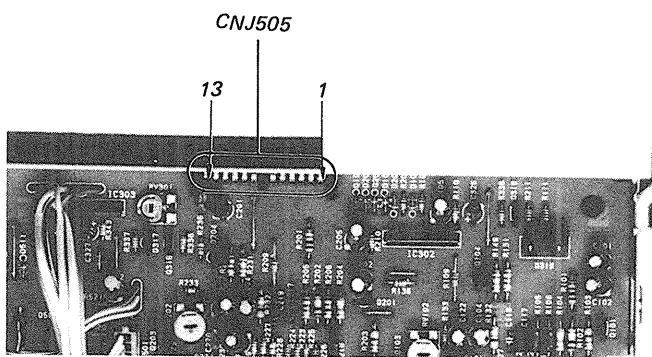


Tape Speed Adjustment

Setting:

DOLBY NR: OFF

Procedure:

1. Mode: playback

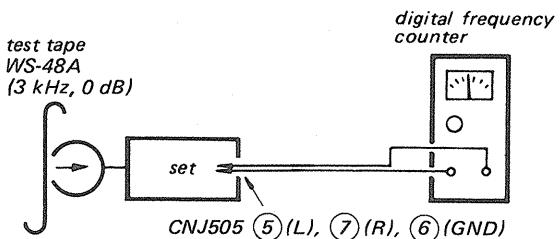

Play back the tape in forward mode, and adjust the adjustable resistor built in motor.


Specification:

Speed checker	Frequency counter
± 2.5%	2,925 – 3,075 Hz

Level difference between tape start and tape end: 1% (30 Hz)

Adjustment Location: Motor

Built-in adjustable resistor
(Adjust the speed by using screwdriver)
(When turning the screw clockwise,
speed is faster.)

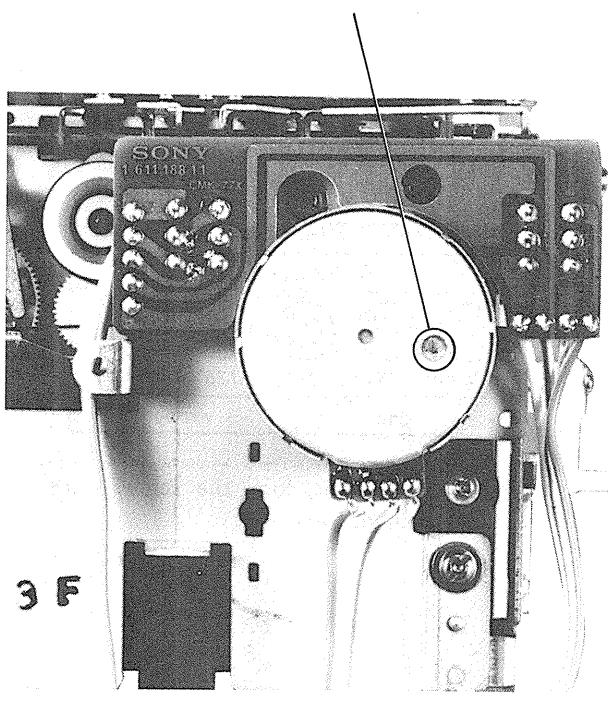


Record/playback Head Azimuth Adjustment


Procedure:

1. Mode: playback


test tape
P-4-A063
(6.3 kHz, -10 dB)

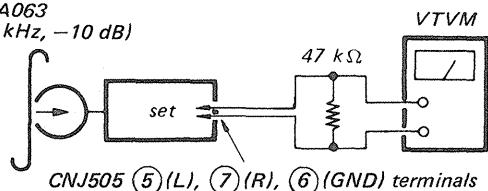

2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 1 dB.


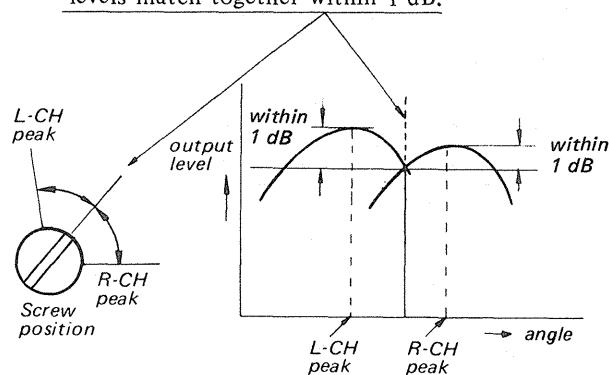


Adjustment Location:

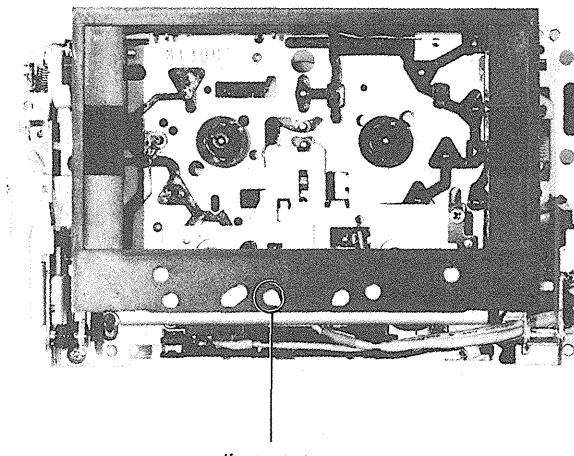

3. Mode: playback

test tape
P-4-A063
(6.3 kHz, -10 dB)

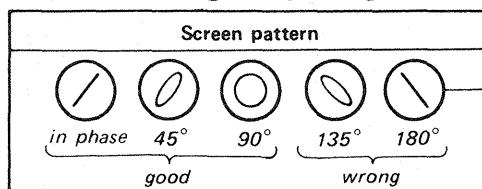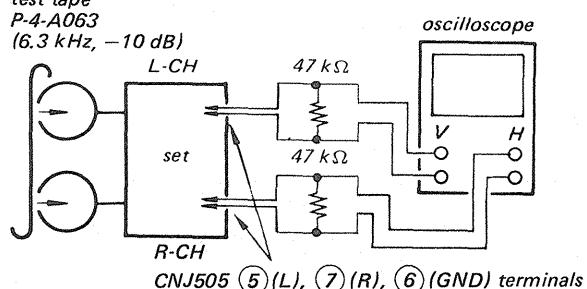


4. After the adjustment, lock the screws with locking compound.

Playback Level Adjustment

Procedure:

Mode: playback

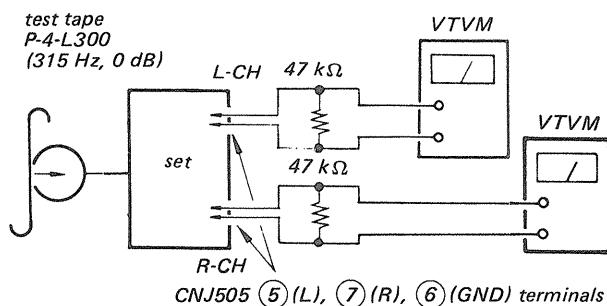

Adjust RV101 (L-CH) and RV201 (R-CH) so that the specification is met.


Specification:

LINE OUT level: 0.41 to 0.46 V
(-5.5 to -4.5 dB)

Level difference between channels:
less than 0.5 dB

Check that the CNJ505 (5) (L), (7) (R) terminal level does not change in playback mode while changing the mode from playback to stop several times.

Adjustment Location: audio syscon board

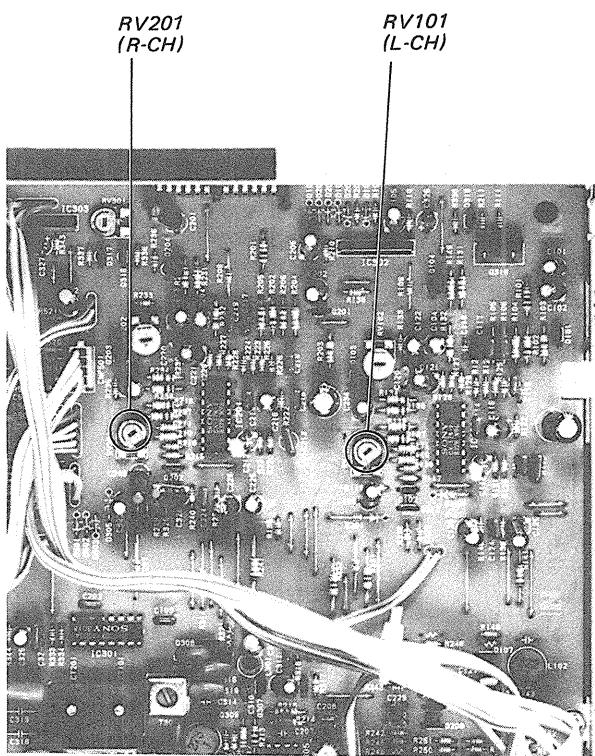


Record Bias Adjustment

Setting:


(See page TC-11.)

Procedure:

1. Mode: record

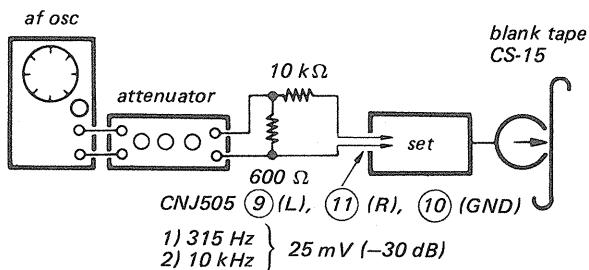


2. Mode: playback

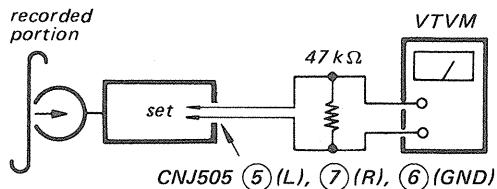

Confirm that the 10 kHz playback output is 0 dB relative to the 315 Hz output. If necessary, adjust CT101 (L-CH), CT201 (R-CH) and repeat the steps given above.

Adjustment Location: audio syscon board

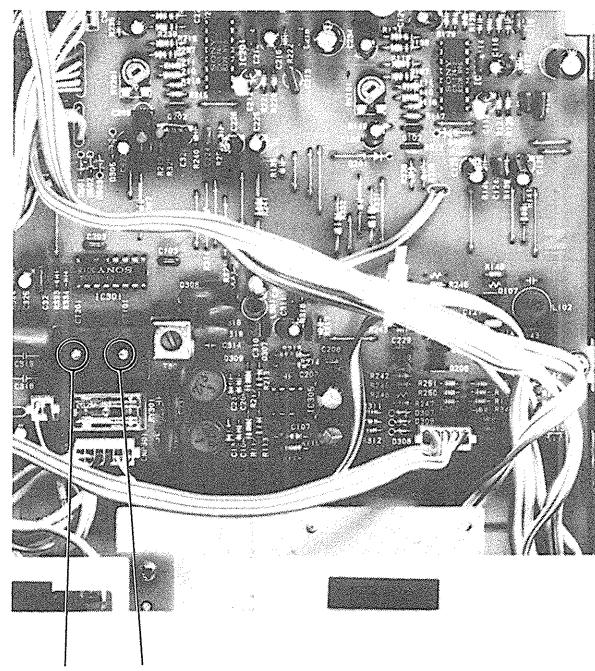


Record Level Adjustment

Setting:


(See page TC-11.)

Procedure:

1. Mode: record

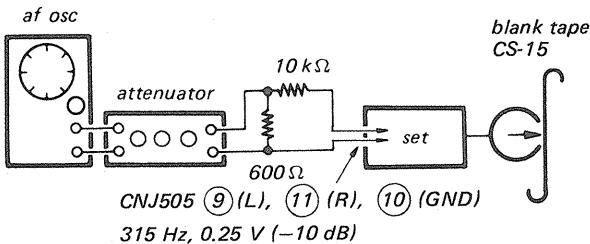

2. Mode: playback

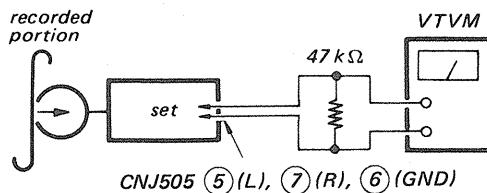


3. Play back the signal recorded in step 1.

Confirm that the signal level is within the specification below. If necessary, adjust RV102 (L-CH), RV202 (R-CH) and repeat the steps 1–3.

Specification:

LINE OUT level: 0.42 – 0.46 V
(-5.5 to -4.5 dB)

Adjustment Location: audio syscon board

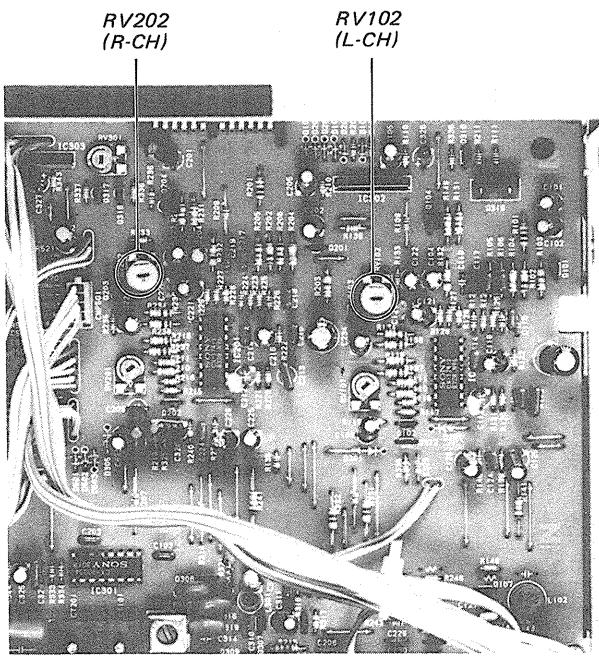


Level Meter Calibration

Procedure:


Mode: playback




















test tape
P-4-L300 (315 Hz, 0 dB)

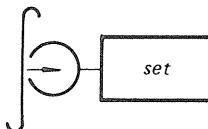

Adjust RV301 so that LEDs up to "0" scales of the meter go on.

Adjustment Location: audio syscon board

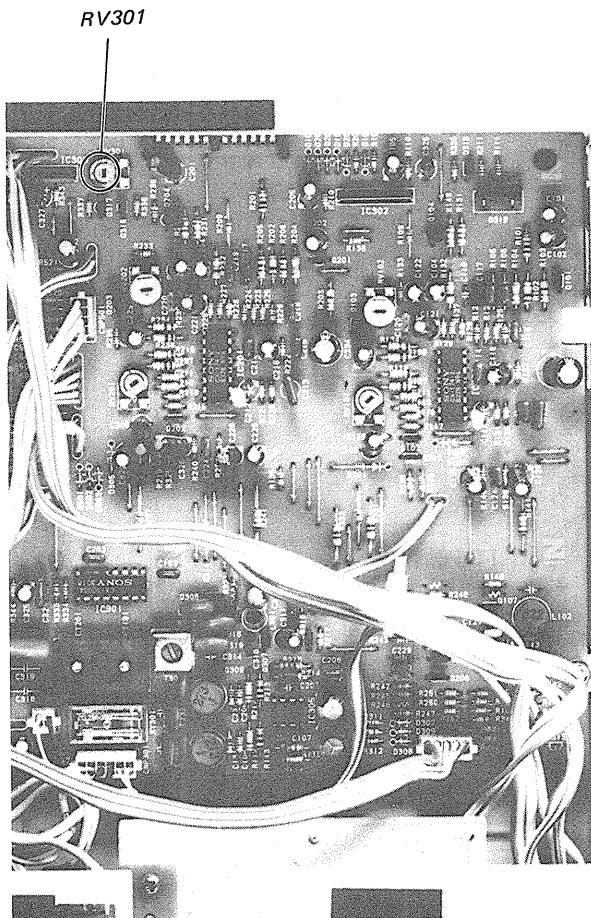

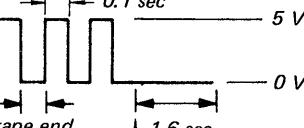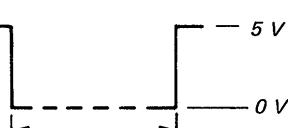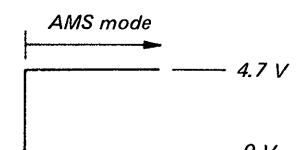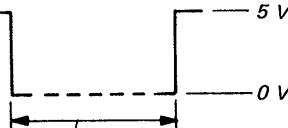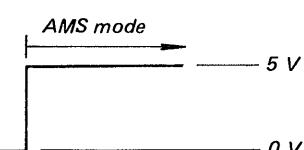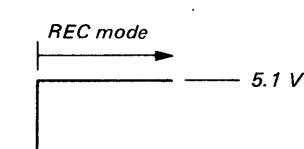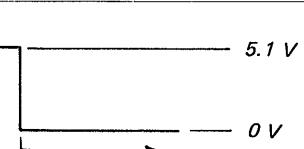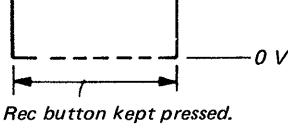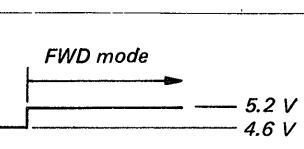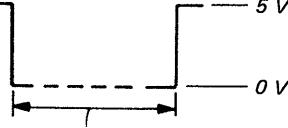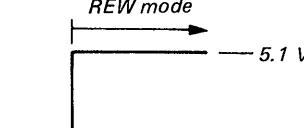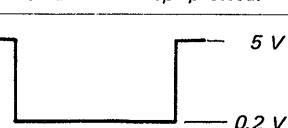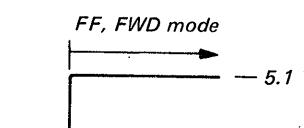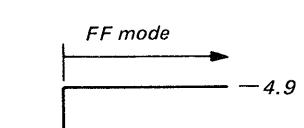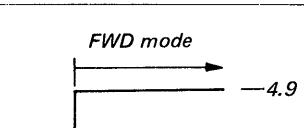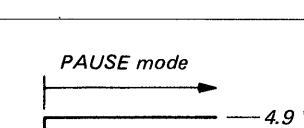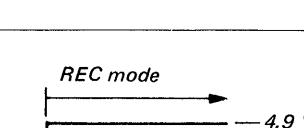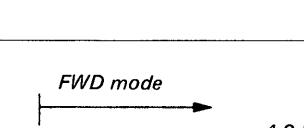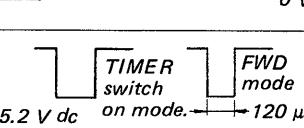
TERMINAL NAME, WAVEFORM AND OPERATING VOLTAGES OF IC501			
PIN NO.	Waveform or Voltages	PIN NO.	Waveform or Voltages
① G	GND	⑫ ●	 REC, MUTE button kept pressed.
② OSC	 1.2 Vp-p 100 μ s	⑬ SHUT	 0.1 sec tape end 0.6 sec 1.6 sec auto shut-off Stopped at tape end in forward mode. (May become 0 V after shut-off depending on the position of take-up reel table.)
③ RES	5.6 V dc	⑭ C	5.6 V dc
④ ▲	 REW button kept pressed.	⑮ AMS LED	 AMS mode
⑤ □	 STOP button kept pressed.	⑯ AMS	 AMS mode
⑥ ▶	 FWD button kept pressed.	⑰ BIAS	 REC mode
⑦ ▶▶	 FF button kept pressed.	⑱ OM	 REC mode
⑧ ●	 Rec button kept pressed.	⑲ LM	 FWD mode
⑨ ▶▶	 PAUSE button kept pressed.	⑳ M-R	 REW mode
⑩ AMS	 AMS button kept pressed.	㉑ M-F	 FF, FWD mode
⑪ ▲	Cassette lid Close: 5.2 V dc Open: 0 V dc	㉒ PM2	 FF mode
		㉓ PM1	 FWD mode
		㉔ ■■ LED	 PAUSE mode
		㉕ ● LED	 REC mode
		㉖ ▶ LED	 FWD mode
		㉗ TIM	 TIMER switch on mode. 5.2 V dc → 120 μ s
		㉘ Vcc	5.6 V dc

SECTION 4
DIAGRAMS

4-1. MOUNTING DIAGRAM



• Semiconductor Lead Layouts

1SS106
1SS202-1
10E-2
HZ9A2L

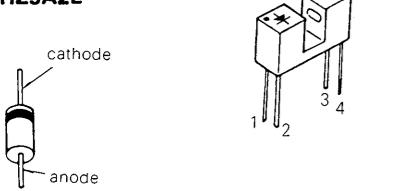


SPI201-20

2SA1175

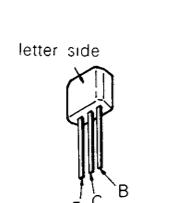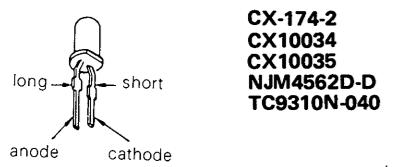GL-3NG5
GL-3PR5


CX-174-2
CX10034
CX10035
NJM4562D-D
TC9310N-040

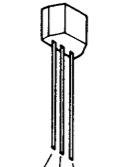

AA3432S




LB1403N
M5218L
UPA74V-FA

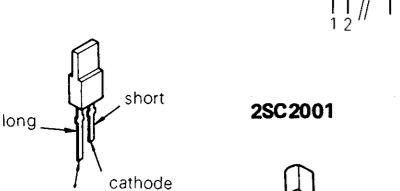2SB731
2SD809BG5532K
GL-9NG2


2SC2001




Note:
• Color code of sleeving over the end of the jacket.

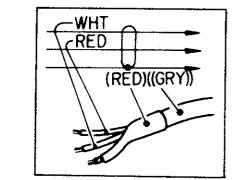

- : parts extracted from the component side.
- : B+ pattern
- : B- pattern
- : signal path
- : L-CH signal path
- : R-CH signal path

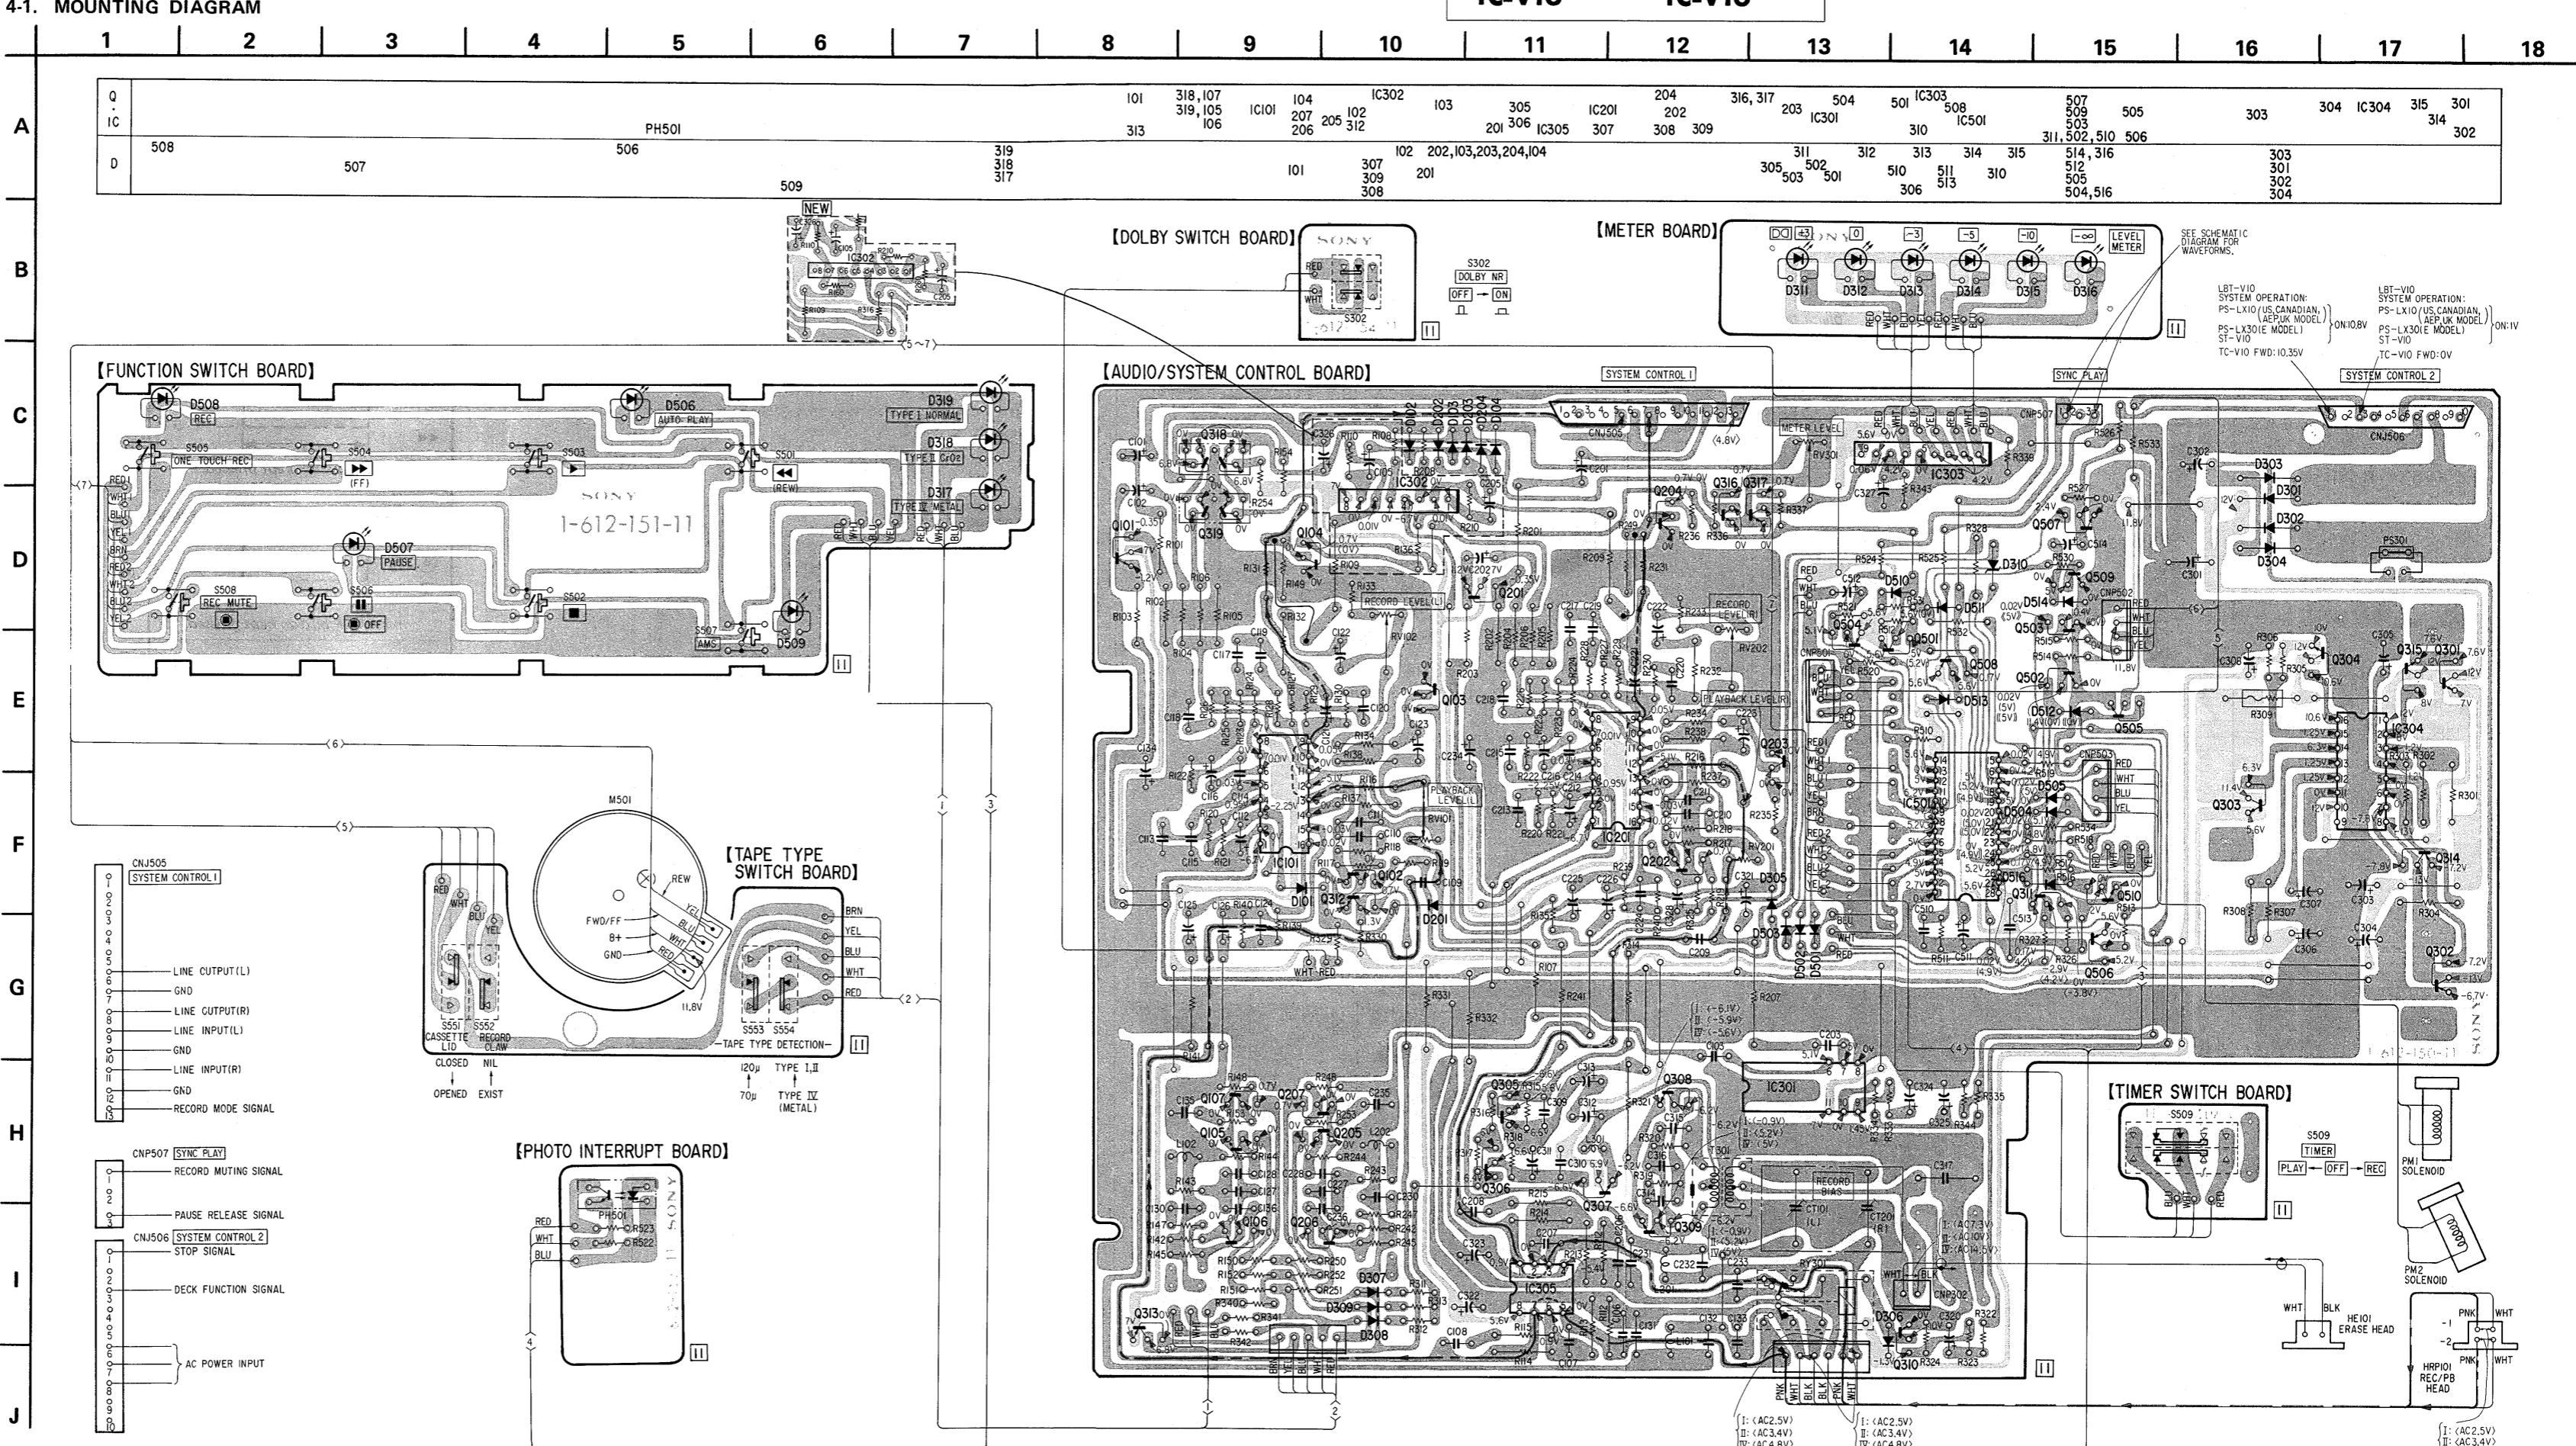

4-2. SCHEMATIC DIAGRAMS

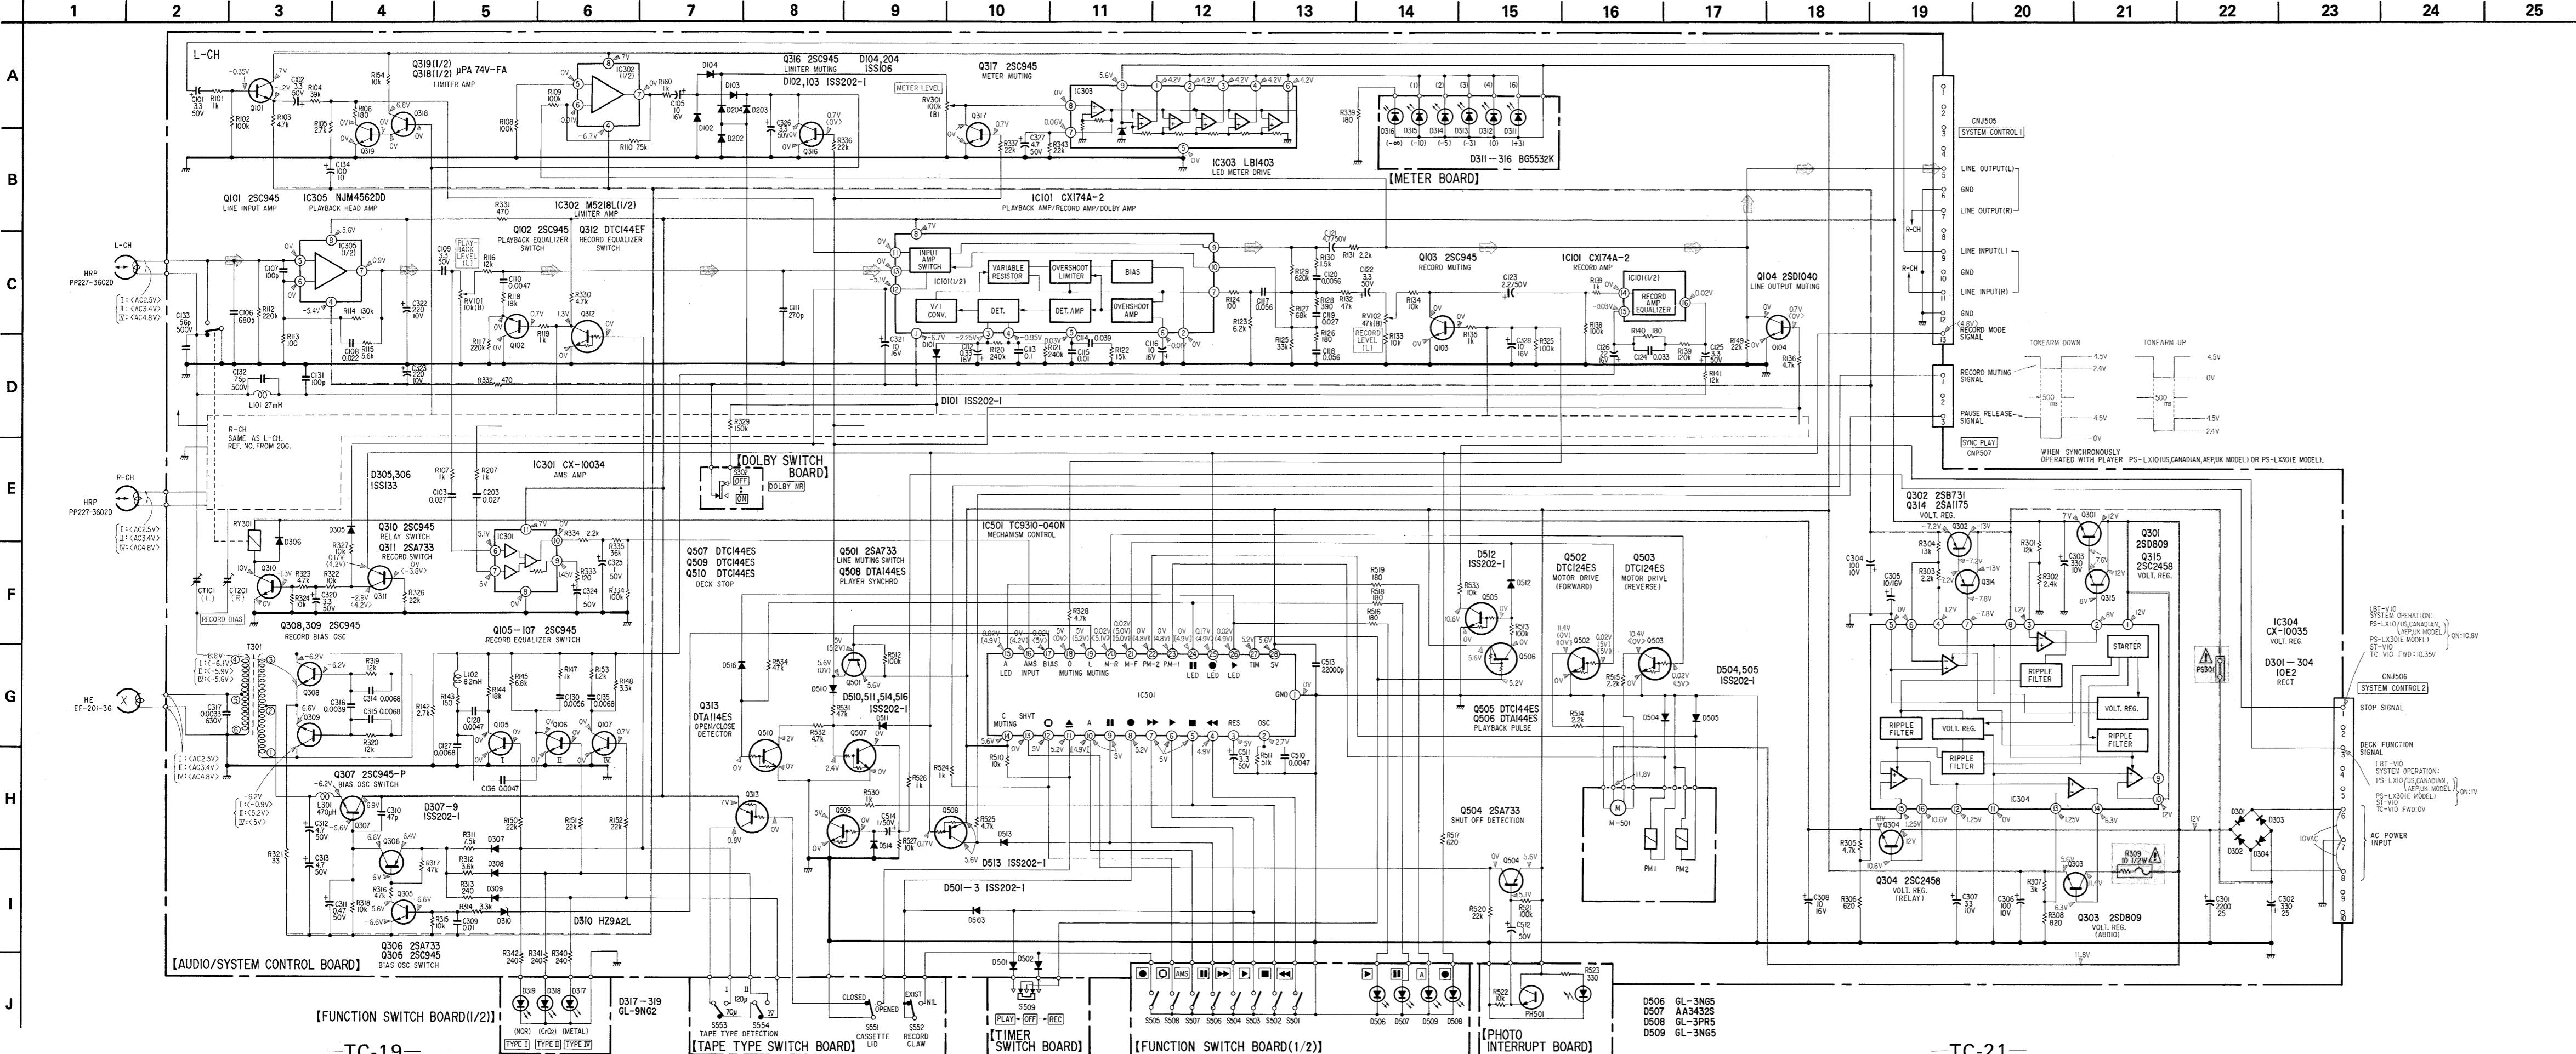

- Note:**
- Components for right channel have same values as for left channel. Reference numbers are coded from 201.
 - All capacitors are in μF unless otherwise noted. pF : μF
 - 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in ohms, $\frac{1}{2}\text{W}$ unless otherwise noted.
 - fusible resistor .
 - $\overline{\text{signal path}}$.
 - \square : panel designation.
 - \square : adjustment for repair.
 - \square : $\text{B}+$ bus.
 - \square : $\text{B}-$ bus.
 - Readings are taken under no-signal conditions with a VOM (20 k Ω /V).
 - { } : PLAY
 - [] : AMS
 - < > : REC
 - () : FF
 - $\triangleleft \triangleright$: REW
 - $\square \square$: PAUSE
 - no mark: STOP

• Switch

Ref. No.	Switch	Position
S302	DOLBY	OFF
S501	◀	OFF
S502	▶	OFF
S503	●	OFF
S504	■	OFF
S505	●	OFF
S506	■	OFF
S507	AMS	OFF
S508	FF	OFF
S509	REC	OFF
S551	PLAY	OFF
S553, 554	CASSETTE LID	CLOSE
S553, 554	TYPE I	EXIST
S553, 554	TYPE II	OFF
S553, 554	TYPE III	ON


Note: The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

SECTION 5
EXPLODED VIEWS AND PARTS LIST


1 2 3 4 5 6 7

5-1.


A

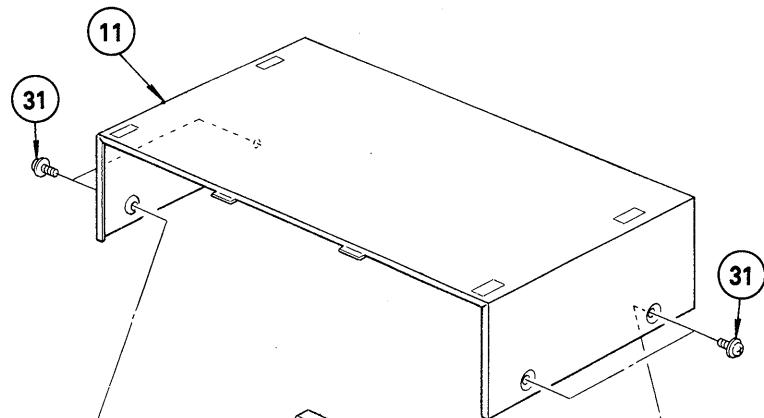


B

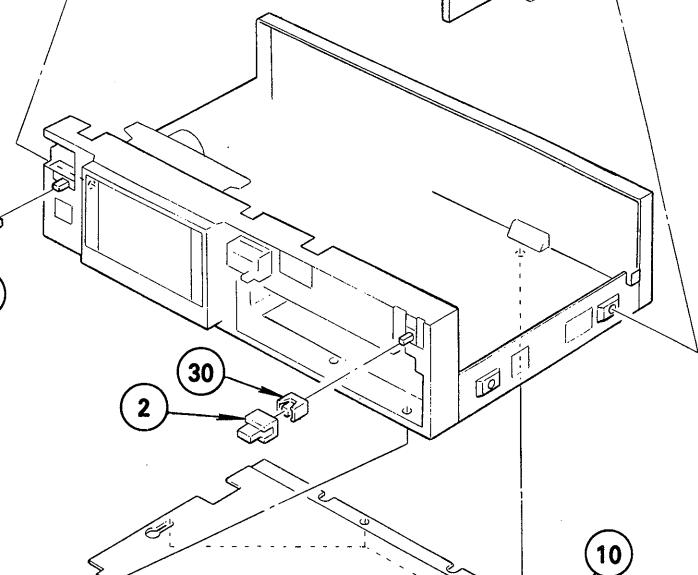


D

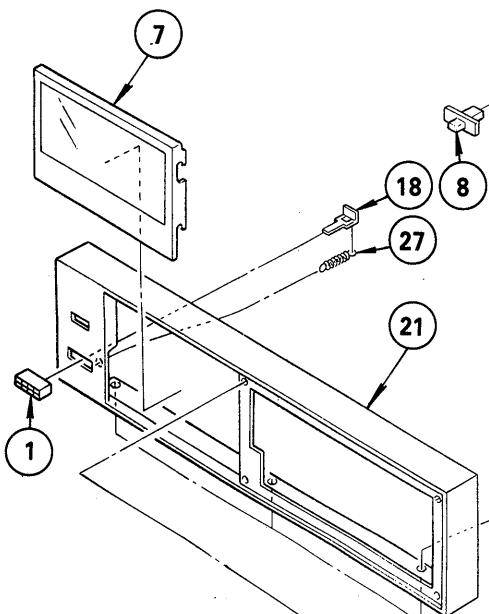


E

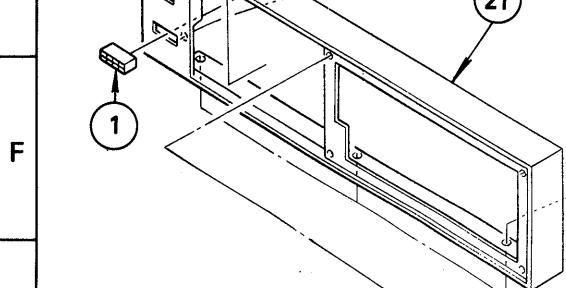

G

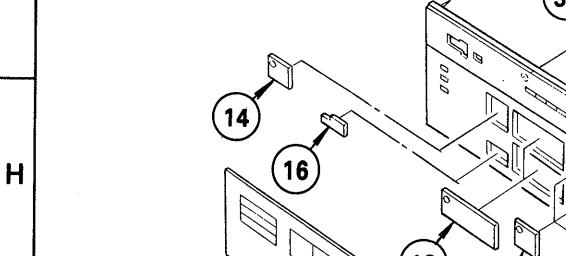


H

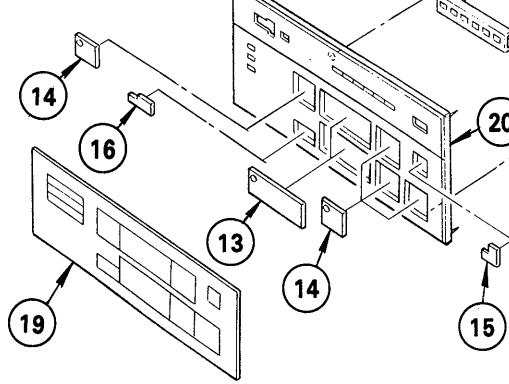

I




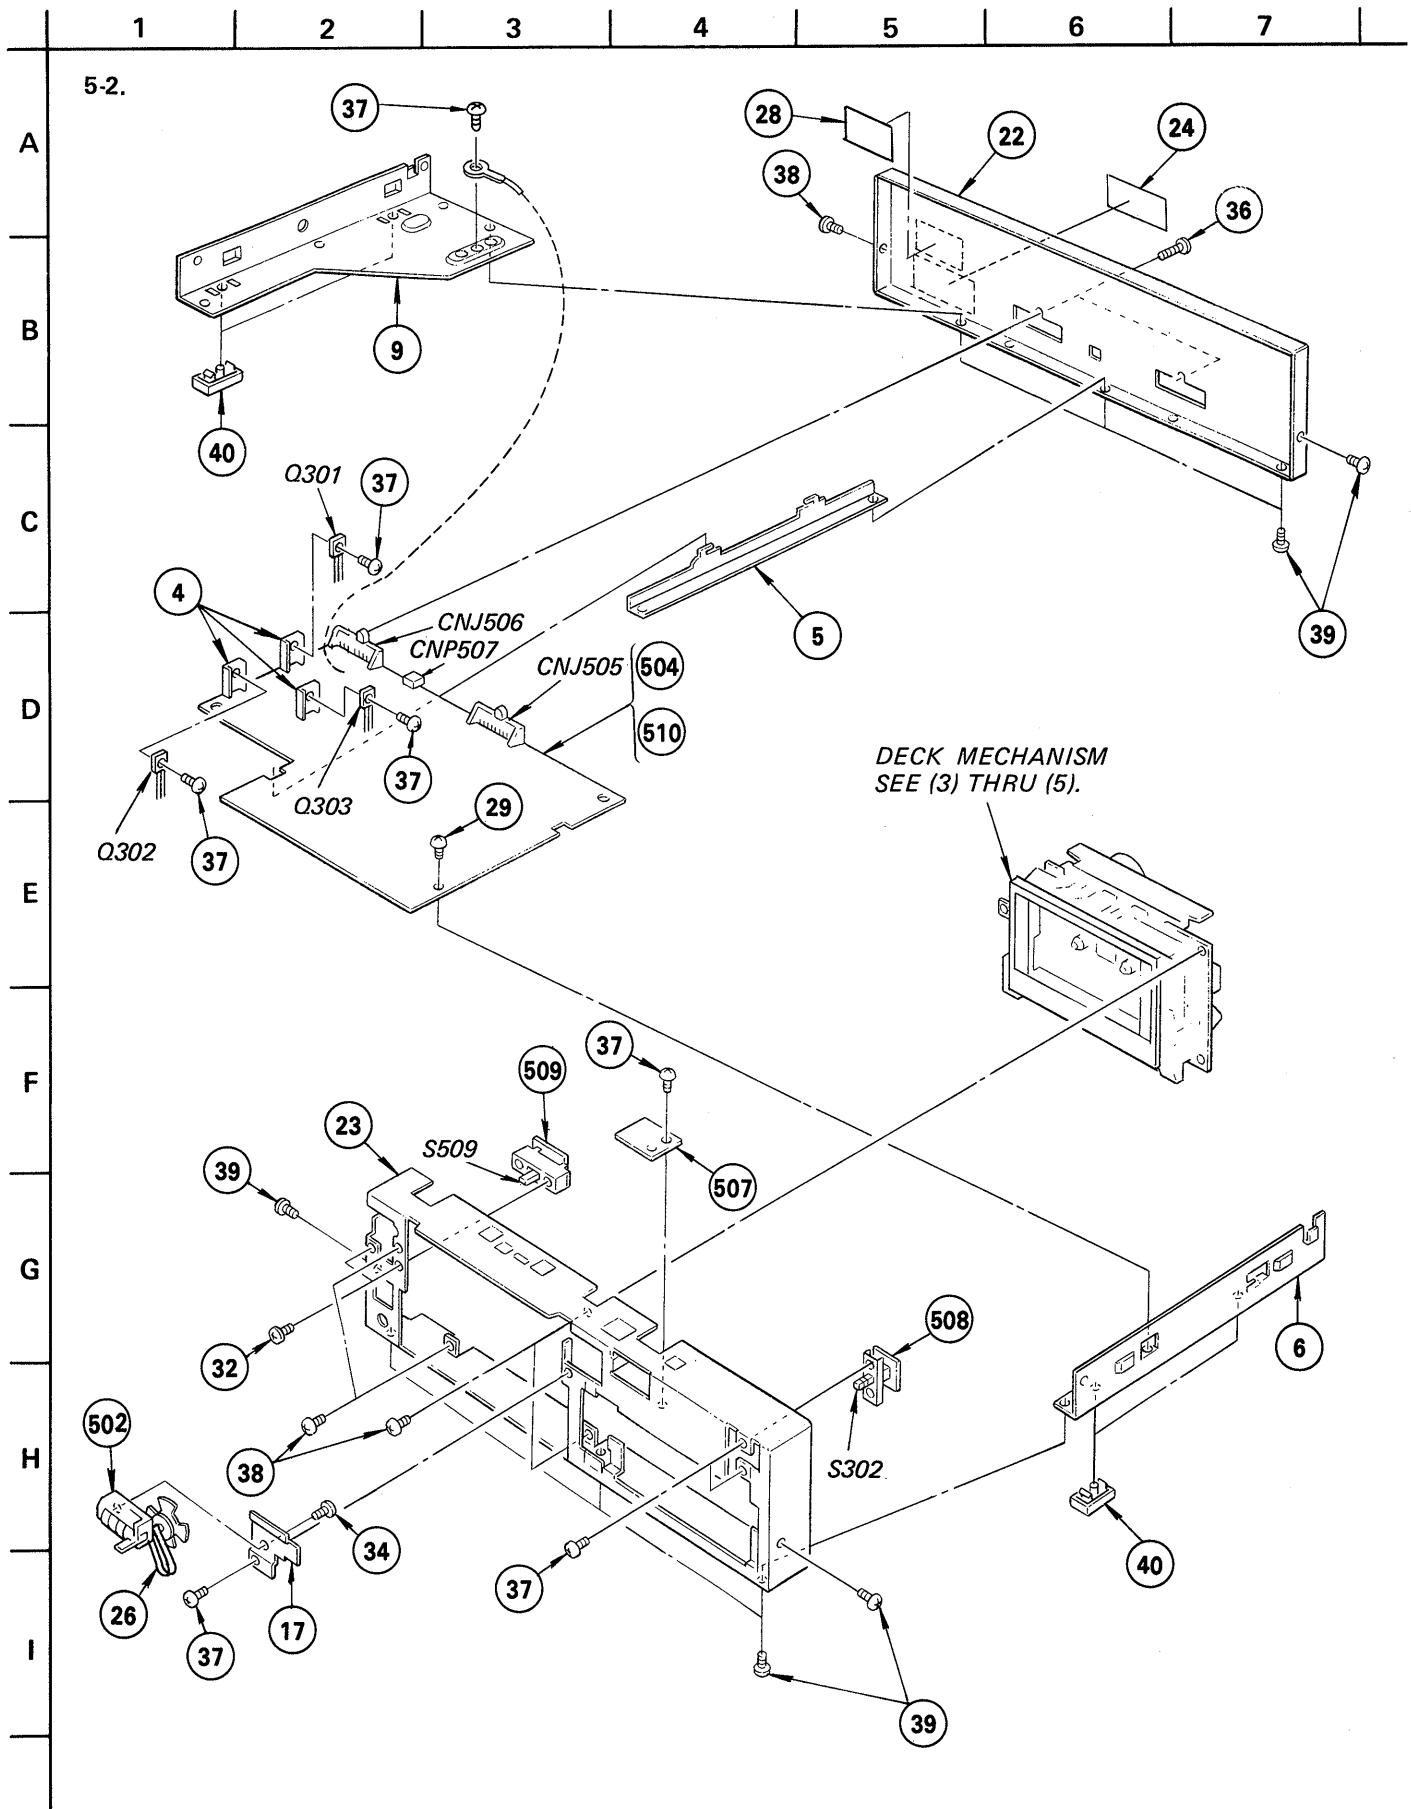


1 2 3 4 5 6 7

5-3.


A

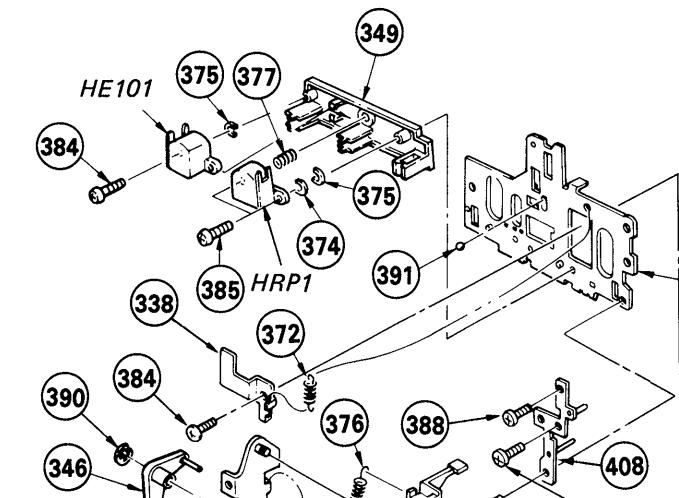


B

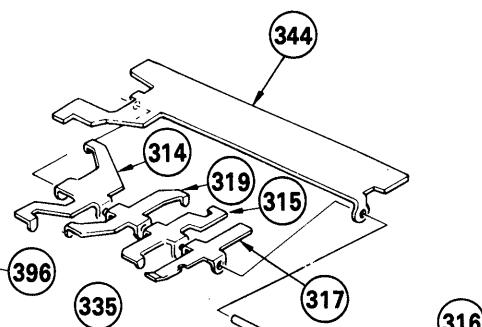


C

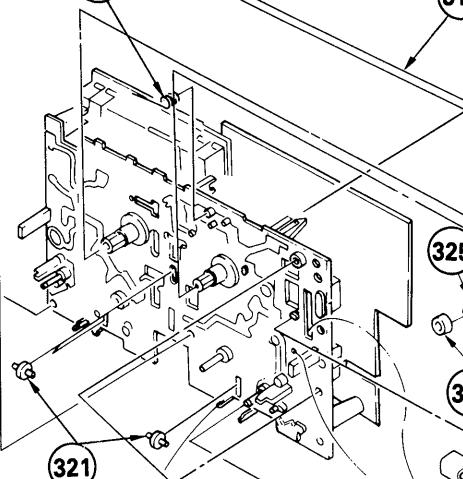

D

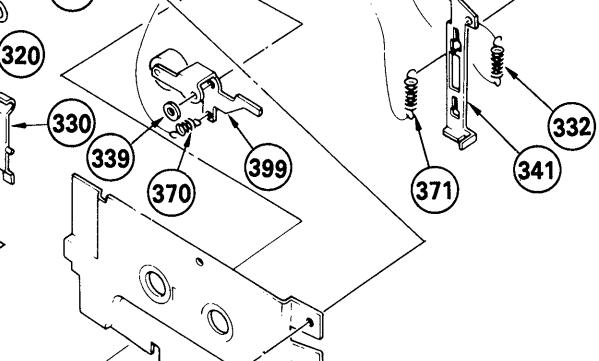

E

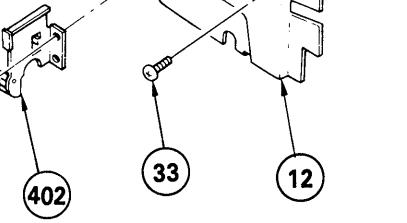

F



G




H




I

1 2 3 4 5 6 7

5-4.

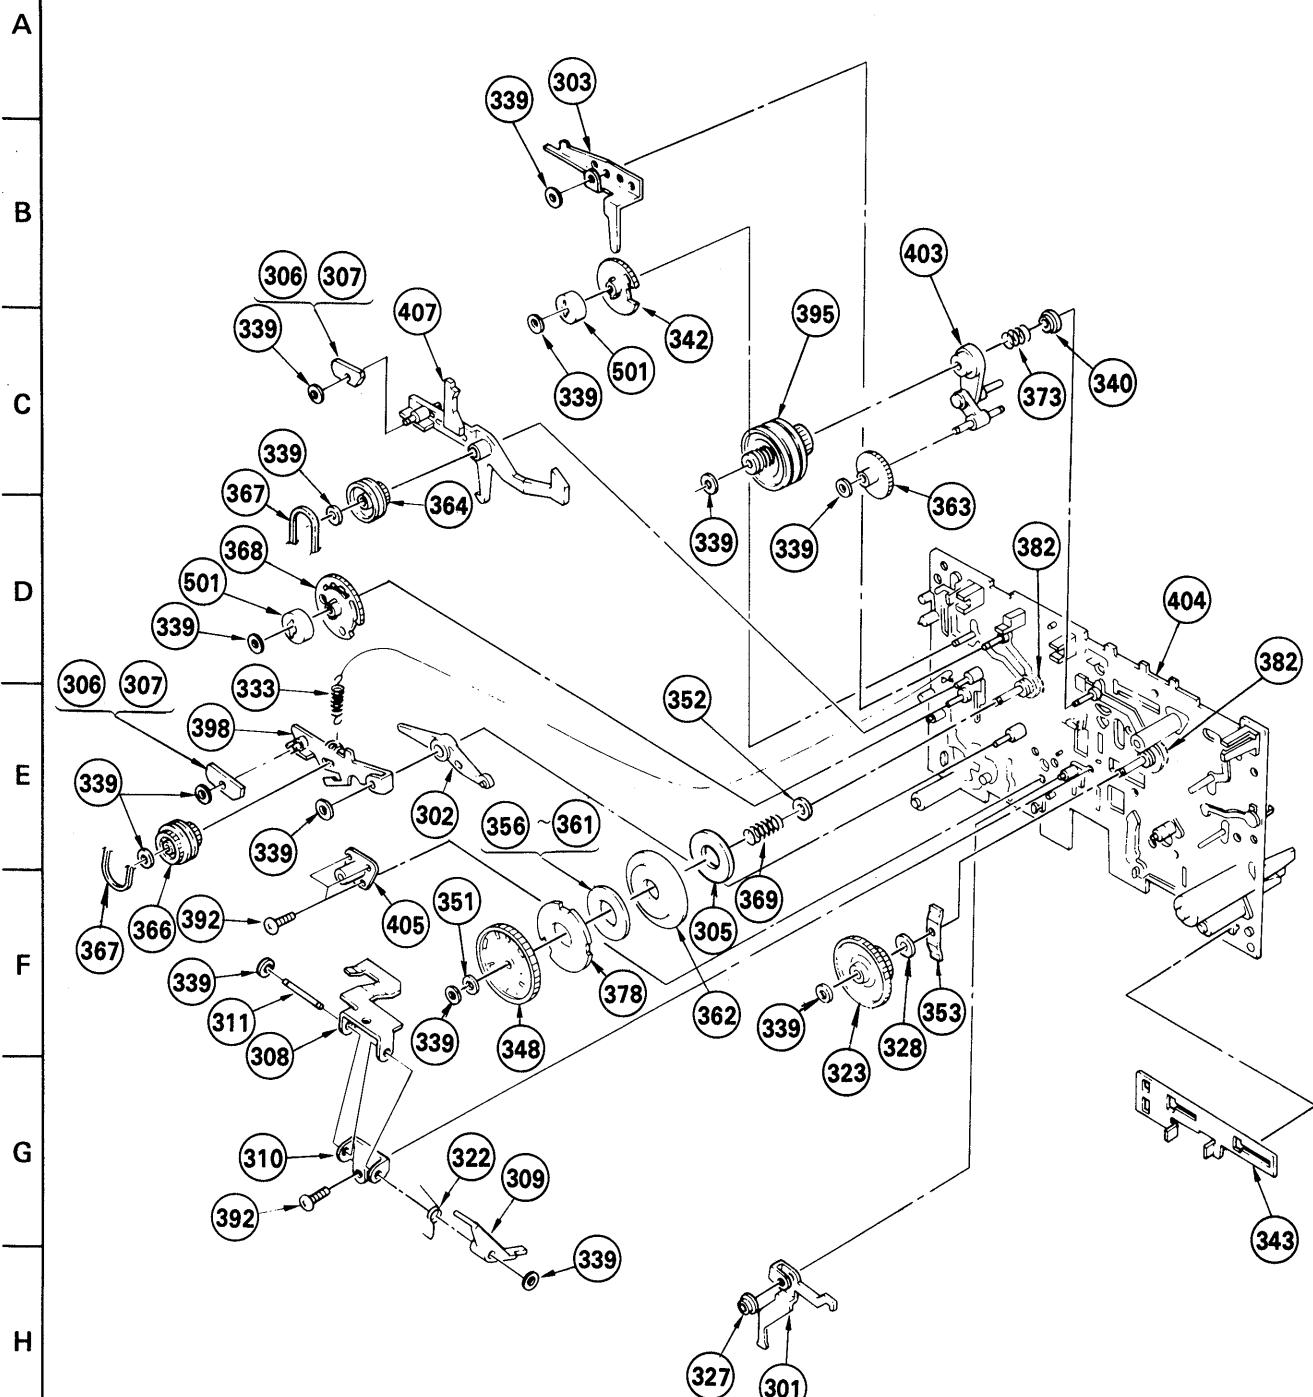

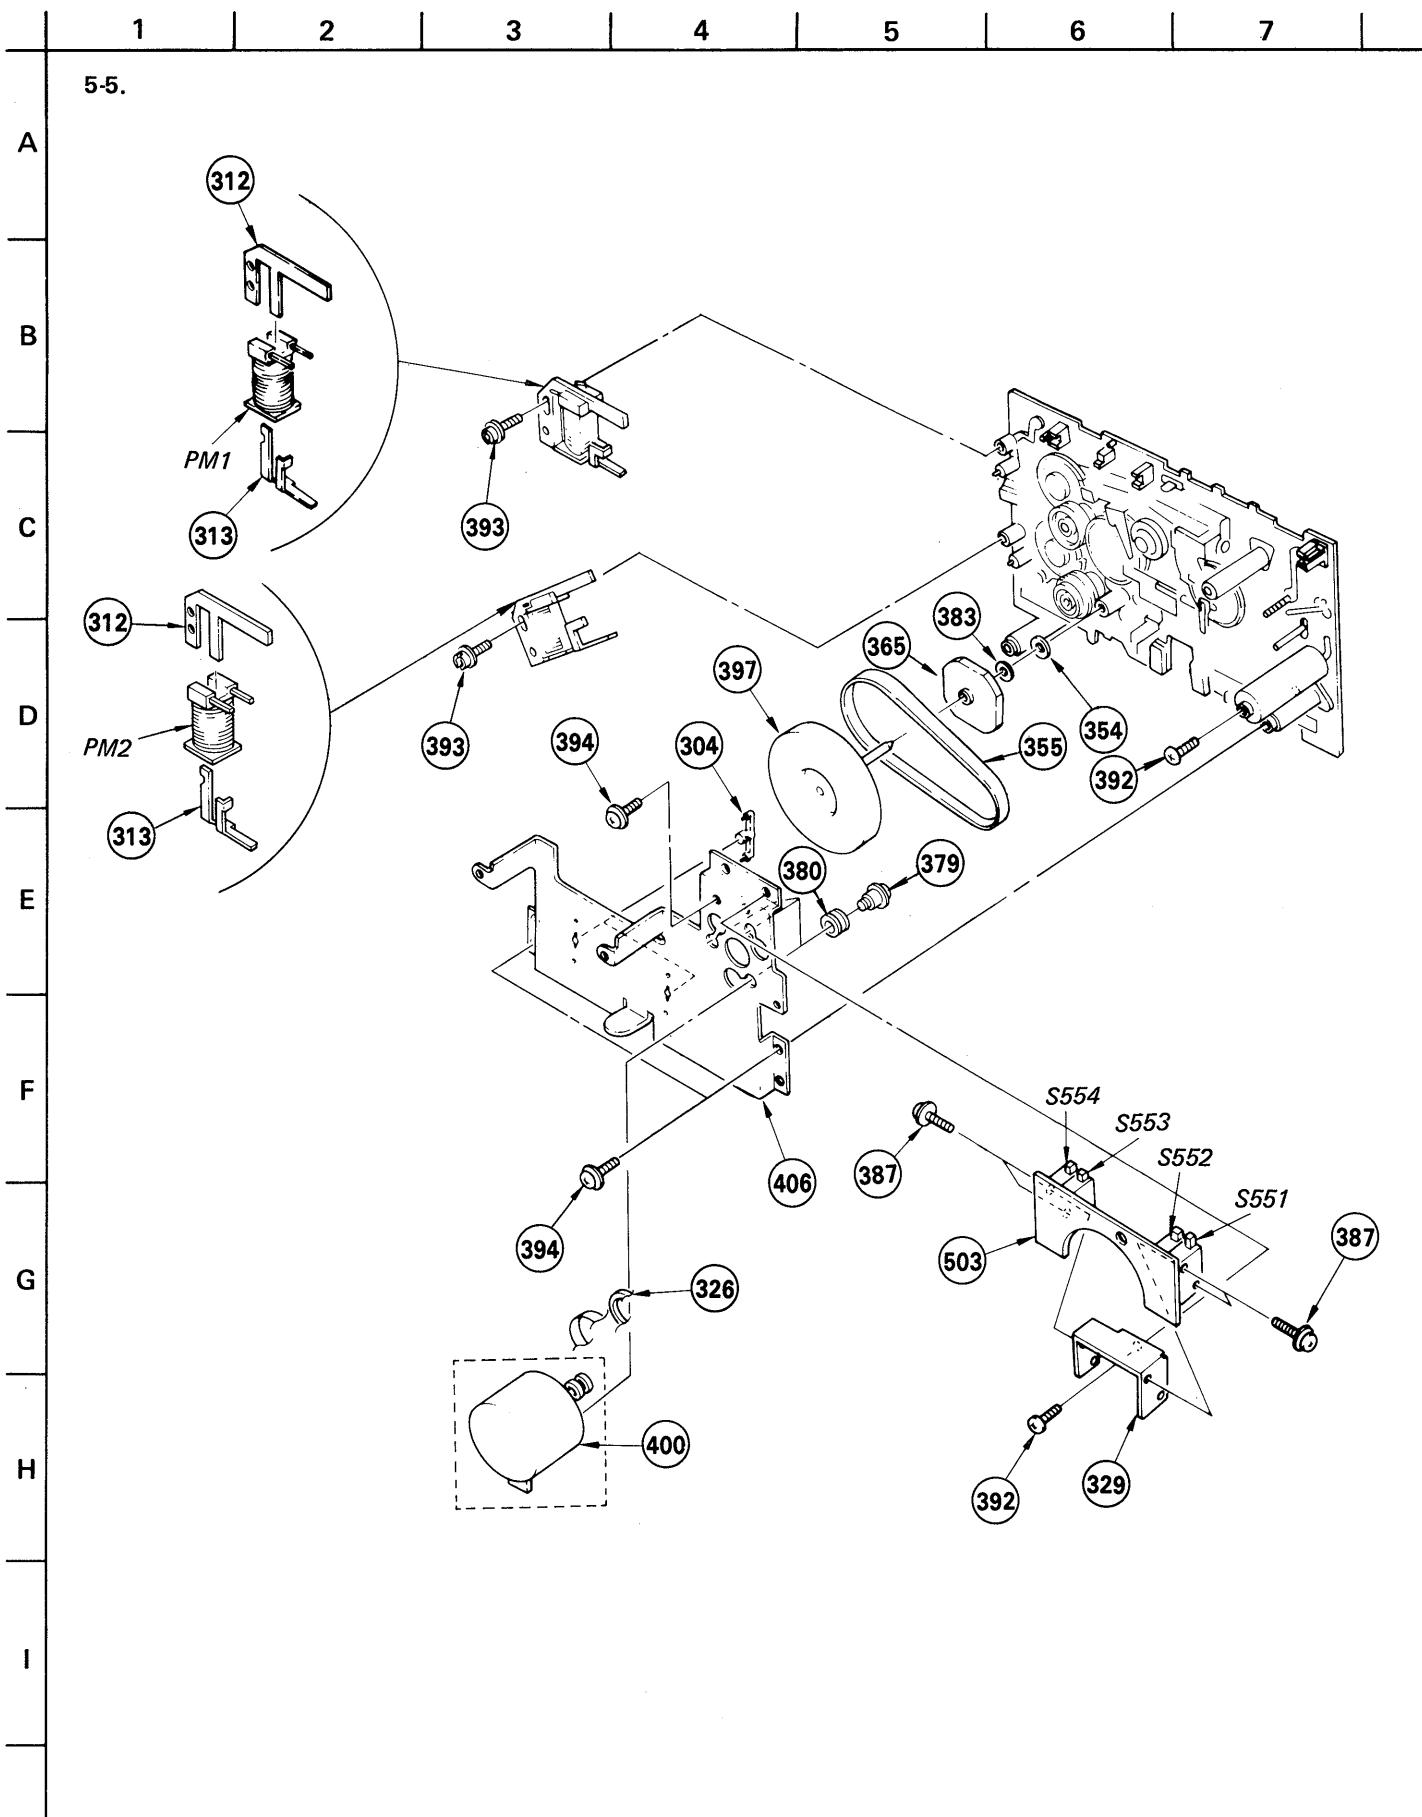

GENERAL SECTION

No.	Part No.	Description
1	3-304-419-01	(SILVER)...BUTTON, EJECT
1	3-304-419-21	(BLACK)...BUTTON, EJECT
2	3-304-926-11	(SILVER)...KNOB (A), PUSH
2	3-304-926-00	(BLACK)...KNOB (A), PUSH
3	3-307-390-00	BUSHING, LOADING SPRING
4	3-312-615-31	HEAT SINK
5	3-313-209-00	PLATE, RELAY
6	3-313-210-00	PLATE, SIDE, RIGHT
7	3-313-215-21	(SILVER)...WINDOW, CASSETTE
7	3-313-215-51	(BLACK)...WINDOW, CASSETTE
8	3-313-216-11	(SILVER)...KNOB, SWITCH, TIMER
8	3-313-216-21	(BLACK)...KNOB, SWITCH, TIMER
9	3-313-217-00	PLATE, SIDE, LEFT
10	3-313-220-00	PLATE, BOTTOM
11	3-313-223-01	(SILVER)...CASE
11	3-313-223-31	(BLACK)...CASE
12	3-313-234-00	PLATE, ORNAMENTAL, MD
13	3-313-254-01	BUTTON (LARGE), CONTROL
14	3-313-255-01	BUTTON (MIDDLE), CONTROL
15	3-313-256-01	BUTTON (SMALL), CONTROL
16	3-313-257-01	BUTTON, AMS
17	3-313-258-01	BRACKET, COUNTER
18	3-313-259-01	PLATE, SLIDE
19	3-313-260-01	(SILVER)...SHEET, SWITCH, CONTROL
19	3-313-260-31	(BLACK)...SHEET, SWITCH, CONTROL
20	3-313-261-02	(SILVER)...ESCUCHEON
20	3-313-261-21	(BLACK)...ESCUCHEON
21	3-313-262-01	(SILVER)...PANEL, FRONT
21	3-313-262-51	(BLACK)...PANEL, FRONT
22	3-313-263-11	PLATE, JACK (E, AEP, UK)
22	3-313-263-21	PLATE, JACK (US, CANADIAN)
23	3-313-264-01	CHASSIS, AMPLIFIER
24	3-313-266-01	LABEL, MODEL NUMBER (E)
25	3-313-269-01	HOLDER, LED
26	3-530-181-XX	BELT, DETECTING
27	3-540-244-00	SPRING, TENSION
28	3-701-030-00	LABEL, SERIAL NUMBER
29	3-703-249-01	SCREW, S TIGHT, +PTTWH 3X6
30	4-864-307-00	RING
31	4-886-821-11	(SILVER)...SCREW, M3 CASE
31	4-886-821-01	(BLACK)...SCREW, M3 CASE
32	7-621-773-93	SCREW +B 2.6X3
33	7-685-102-29	SCREW +P 2X4 TYPE2 SLIT
34	7-685-531-19	SCREW +BTP 2.6X4 TYPE2 N-S
35	7-685-545-19	SCREW +BTP 3X6 TYPE2 N-S
36	7-685-547-19	SCREW +BTP 3X10 TYPE2 N-S
37	7-685-871-01	SCREW +BVTT 3X6 (S)
38	7-685-871-09	SCREW +BVTT 3X6 (S)
39	7-685-872-01	SCREW +BVTT 3X8 (S)
40	X-4886-405-1	(SILVER)...FOOT ASSY
40	X-4886-405-2	(BLACK)...FOOT ASSY

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "♦" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers ($\Delta-\Delta\Delta-\Delta\Delta-\Delta\Delta-\Delta\Delta-\Delta\Delta-X$ or $\Delta-\Delta\Delta\Delta-\Delta\Delta\Delta-\Delta\Delta\Delta-X$) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: μ PF.

RESISTORS

• All resistors are in ohms.
• F : nonflammable

COILS

• MMH : mH, UH : μ H

SEMICONDUCTORS

In each case, U : μ , for example:
UA...: μ A..., UPA...: μ PA..., UPC...: μ PC,
UPD...: μ PD...

MECHANISM SECTION

No.	Part No.	Description
301	3-307-301-00	LEVER (RELAY), FWD SELECT
302	3-307-307-00	LEVER, FWD
303	3-307-308-00	LEVER, FF
304	3-307-309-00	RETAINER (A), THRUST
305	3-307-313-00	PLATE, YOKE
306	3-307-315-00	ARBOR, MOVABLE
307	3-307-315-01	ARBOR, MOVABLE
308	3-307-319-00	RETAINER, TAKE-UP GEAR
309	3-307-328-00	LEVER, TAKE-UP SELECTION
310	3-307-329-00	PLATE, FULCRUM, SELECTION LEVER
311	3-307-330-00	PIN, FULCRUM PLATE
312	3-307-332-00	ARBOR, FIXED
313	3-307-333-00	ARBOR, TRIGGER
314	3-307-337-00	LEVER, REC DETECTION
315	3-307-338-00	LEVER, METAL DETECTION
316	3-307-339-00	SHAFT, DETECTION LEVER
317	3-307-344-00	LEVER, HALF RETAINER
318	3-307-345-00	SLIDER, EJECT
319	3-307-346-00	LEVER, DETECTION
320	3-307-347-00	PISTON
321	3-307-348-00	ROLLER
322	3-307-355-00	SPRING
323	3-307-360-00	GEAR (S), REEL
324	3-307-362-00	CAP, REEL
325	3-307-363-00	CLAW (N), REEL
326	3-307-366-00	BELT, FAST FORWARD
327	3-307-367-00	BUSHING, SELECT LEVER
328	3-307-369-00	FELT, LIMITER
329	3-307-370-00	BRACKET, SWITCH
330	3-307-371-00	SPRING (LEFT)
331	3-307-372-00	SPRING (RIGHT)
332	3-307-374-00	SPRING, TENSION
333	3-307-378-00	SPRING, TENSION
334	3-307-380-00	SPRING, COMPRESSION
335	3-307-382-00	SPRING
336	3-307-383-00	SPRING
337	3-440-113-01	WASHER, LOADING SPRING
338	3-307-391-00	SPRING
339	3-307-394-00	RETAINER (B), THRUST
340	3-307-395-00	RETAINER, SPRING
341	3-307-397-00	SLIDER, PAUSE
342	3-307-401-00	GEAR, FF CAM
343	3-307-403-00	SLIDER, FWD
344	3-307-404-00	RETAINER, DETECTION SWITCH
345	3-307-405-00	PLATE, FULCRUM, CASSETTE HOLDER

MECHANISM SECTION

No.	Part No.	Description
346	3-307-406-00	LEVER, EJECT
347	3-307-407-31	HOLDER, CASSETTE
348	3-307-412-00	GEAR, TAKE-UP REEL
349	3-307-414-00	BRACKET, HEAD
350	3-307-416-00	STOPPER, LOADING
351	3-307-465-00	RETAINER, T SIDE
352	3-307-467-00	RETAINER, SPRING
353	3-307-475-00	PLATE, TENSION, BACK
354	3-307-482-00	WASHER, LUMILER
355	3-307-483-00	BELT (R), CAPSTAN
356	3-307-493-01	SPACER
357	3-307-493-11	SPACER
358	3-307-493-21	SPACER
359	3-307-493-31	SPACER
360	3-307-493-41	SPACER
361	3-307-493-51	SPACER
362	3-307-953-00	MAGNET, REEL TABLE
363	3-307-970-00	GEAR, FR
364	3-312-405-00	PULLEY, DRIVING
365	3-312-406-00	GEAR (T), PINION
366	3-312-408-00	GEAR (B), CONVERSION
367	3-312-409-00	BELT, FF DRIVING
368	3-312-412-00	GEAR (B), CAM, FWD
369	3-312-429-00	SPRING, COMPRESSION
370	3-312-432-00	SPRING, TENSION
371	3-312-448-00	SPRING, TENSION
372	3-312-451-00	SPRING, TENSION
373	3-312-452-00	SPRING, COMPRESSION
374	3-513-237-01	PLATE
375	3-513-237-11	PLATE
376	3-531-541-00	SPRING, TENSION
377	3-539-237-00	SPRING (3), COMPRESSION
378	3-561-827-00	PLATE (A), HYSTERESIS
379	3-570-027-00	SCREW, MOTOR
380	3-570-118-00	CUSHION, MOTOR
381	3-575-392-00	RING, PISTON
382	3-701-437-11	WASHER
383	3-701-438-11	WASHER, 2.5
384	3-701-465-00	SCREW, LOCK
385	3-701-466-00	SCREW, LOCK
386	3-701-467-00	SCREW, LOCK
387	7-621-760-05	+PSW, 2.6X16
388	7-621-770-20	SCREW +B 2X5
389	7-621-772-00	SCREW +B 2X3
390	7-624-105-04	STOP RING 2.3, TYPE -E

MECHANISM SECTION

No.	Part No.	Description
391	7-671-111-11	STEEL, BOUL 1.5MM
392	7-685-860-04	SCREW +BVTT 2.6X4 (S)
393	7-687-204-21	TOTSU PTPWH 2X6 NON-SLIT, TYPE2
394	7-687-246-21	SCREW, TOTSU PTPWH 3X8, TYPE2
395	A-2142-022-A	PULLEY ASSY, FR
396	X-3307-301-0	CHASSIS (N) ASSY, HEAD
397	X-3307-302-5	FLYWHEEL (N) ASSY
398	*;X-3307-305-0	LEVER ASSY, FWD LOCK
399	X-3307-307-0	PINCH ROLLER (N) ASSY
400	X-3307-308-0	MOTOR (N) ASSY
401	*;X-3307-309-0	PLATE (LEFT) ASSY, SIDE
402	*;X-3307-310-0	PLATE (RIGHT) ASSY, SIDE
403	X-3307-312-4	LEVER ASSY, FR
404	X-3307-330-1	CHASSIS (N) ASSY, MECHANICAL
405	X-3307-338-0	BEARING ASSY, CAPSTAN
406	X-3307-345-0	RETAINER, THRUST
407	X-3307-348-0	LEVER ASSY, FF LOCK
408	X-3307-920-0	PLATE ASSY, ADJUSTMENT

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers ($\Delta-\Delta\Delta\Delta-\Delta\Delta\Delta-XX$ or $\Delta-\Delta\Delta\Delta\Delta-\Delta\Delta\Delta-X$) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: $\mu\mu$ F.

RESISTORS

• All resistors are in ohms.

• F : nonflammable

COILS

• MMH : mH, UH : μ H

SEMICONDUCTORS

In each case, U : μ , for example:
 UA...: μ A..., UPA...: μ PA..., UPC...: μ PC,
 UPD...: μ PD...

ELECTRICAL PARTS

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
D104	8-719-911-06	DIODE 1SS106
D201	8-719-107-94	DIODE 1SS202-1
D202	8-719-107-94	DIODE 1SS202-1
D203	8-719-107-94	DIODE 1SS202-1
D204	8-719-911-06	DIODE 1SS106
D301	8-719-200-02	DIODE 10E-2
D302	8-719-200-02	DIODE 10E-2
D303	8-719-200-02	DIODE 10E-2
D304	8-719-200-02	DIODE 10E-2
D305	8-719-107-94	DIODE 1SS202-1
D306	8-719-107-94	DIODE 1SS202-1
D307	8-719-107-94	DIODE 1SS202-1
D308	8-719-107-94	DIODE 1SS202-1
D309	8-719-107-94	DIODE 1SS202-1
D310	8-719-910-92	DIODE HZ9A2L
D311	8-719-907-69	DIODE BG5532K
D312	8-719-907-69	DIODE BG5532K
D313	8-719-907-69	DIODE BG5532K
D314	8-719-907-69	DIODE BG5532K
D315	8-719-907-69	DIODE BG5532K
D316	8-719-907-69	DIODE BG5532K
D317	8-719-909-20	DIODE GL-9NG2
D318	8-719-909-20	DIODE GL-9NG2
D319	8-719-909-20	DIODE GL-9NG2
D501	8-719-107-94	DIODE 1SS202-1
D502	8-719-107-94	DIODE 1SS202-1
D503	8-719-107-94	DIODE 1SS202-1
D504	8-719-107-94	DIODE 1SS202-1
D505	8-719-107-94	DIODE 1SS202-1
D506	8-719-930-50	DIODE GL-3NG5
D507	8-719-934-34	DIODE AA3432S
D508	8-719-903-05	DIODE GL-3PR5
D509	8-719-930-50	DIODE GL-3NG5
D510	8-719-107-94	DIODE 1SS202-1
D511	8-719-107-94	DIODE 1SS202-1
D512	8-719-107-94	DIODE 1SS202-1
D513	8-719-107-94	DIODE 1SS202-1
D514	8-719-107-94	DIODE 1SS202-1
D516	8-719-107-94	DIODE 1SS202-1
HE101	8-825-724-00	HEAD, ERASE EF-201-36
HRP101	8-825-507-60	HEAD (PP227-3602D)
IC101	8-759-905-57	IC CX-174-2
IC201	8-759-905-57	IC CX-174-2
IC301	8-759-700-46	IC CX10034

ELECTRICAL PARTS

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
IC302	8-759-600-02	IC M5218L
IC303	8-759-801-04	IC LB1403N
IC304	8-759-700-47	IC CX10035
IC305	8-759-705-62	IC NJM4562D-D
IC501	8-759-202-05	IC TC9310N-040
L101	1-408-262-00	MICRO INDUCTOR 27MMH
L102	1-408-256-00	MICRO INDUCTOR 8.2MMH
L201	1-408-262-00	MICRO INDUCTOR 27MMH
L202	1-408-256-00	MICRO INDUCTOR 8.2MMH
L301	1-407-177-XX	MICRO INDUCTOR 470UH
M501	1-541-201-00	MOTOR
PHI501	8-719-902-90	PHOTO INTERRUPTOR SPI201-20
PM1	1-454-316-00	SOLENOID, PLUNGER
PM2	1-454-316-00	SOLENOID, PLUNGER
PS301 A1-532-605-00 LINK, IC		
Q101	8-729-245-83	TRANSISTOR 2SC2458
Q102	8-729-245-83	TRANSISTOR 2SC2458
Q103	8-729-245-83	TRANSISTOR 2SC2458
Q104	8-729-100-13	TRANSISTOR 2SC2001
Q105	8-729-245-83	TRANSISTOR 2SC2458
Q106	8-729-245-83	TRANSISTOR 2SC2458
Q107	8-729-245-83	TRANSISTOR 2SC2458
Q201	8-729-245-83	TRANSISTOR 2SC2458
Q202	8-729-245-83	TRANSISTOR 2SC2458
Q203	8-729-245-83	TRANSISTOR 2SC2458
Q204	8-729-100-13	TRANSISTOR 2SC2001
Q205	8-729-245-83	TRANSISTOR 2SC2458
Q206	8-729-245-83	TRANSISTOR 2SC2458
Q207	8-729-245-83	TRANSISTOR 2SC2458
Q301	8-729-180-93	TRANSISTOR 2SD809
Q302	8-729-173-13	TRANSISTOR 2SB731
Q303	8-729-180-93	TRANSISTOR 2SD809
Q304	8-729-245-83	TRANSISTOR 2SC2458
Q305	8-729-245-83	TRANSISTOR 2SC2458
Q306	8-729-117-54	TRANSISTOR 2SA1175
Q307	8-729-245-83	TRANSISTOR 2SC2458
Q308	8-729-245-83	TRANSISTOR 2SC2458
Q309	8-729-245-83	TRANSISTOR 2SC2458
Q310	8-729-245-83	TRANSISTOR 2SC2458
Q311	8-729-117-54	TRANSISTOR 2SA1175
Q312	8-729-900-89	TRANSISTOR DTC144ES
Q313	8-729-900-61	TRANSISTOR DTA114ES

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (△-△△△-△△△-XX or △-△△△△-△△△-X) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF:μF, PF:μμF.

RESISTORS

• All resistors are in ohms.

• F : nonflammable

COILS

• MMH : mH, UH : μH

SEMICONDUCTORS

In each case, U : μ, for example:

UA... : μA..., UPA... : μPA..., UPC... : μPC,

UPD... : μPD...

The components identified by shading and mark ▲ are critical for safety.
Replace only with part number specified.

ELECTRICAL PARTS

Ref. No.	Part No.	Description
Q314	8-729-117-54	TRANSISTOR 2SA1175
Q315	8-729-245-83	TRANSISTOR 2SC2458
Q316	8-729-245-83	TRANSISTOR 2SC2458
Q317	8-729-245-83	TRANSISTOR 2SC2458
Q318	8-759-101-13	IC UPA74V-FA
Q319	8-759-101-13	IC UPA74V-FA
Q501	8-729-117-54	TRANSISTOR 2SA1175
Q502	8-729-900-36	TRANSISTOR DTC124ES
Q503	8-729-900-36	TRANSISTOR DTC124ES
Q504	8-729-117-54	TRANSISTOR 2SA1175
Q505	8-729-900-89	TRANSISTOR DTC144ES
Q506	8-729-900-65	TRANSISTOR DTA144ES
Q507	8-729-900-89	TRANSISTOR DTC144ES
Q508	8-729-900-65	TRANSISTOR DTA144ES
Q509	8-729-900-89	TRANSISTOR DTC144ES
Q510	8-729-900-89	TRANSISTOR DTC144ES
R101	1-247-131-00	CARBON 1K 5% 1/4W
R102	1-247-179-00	CARBON 100K 5% 1/4W
R103	1-247-147-00	CARBON 4.7K 5% 1/4W
R104	1-246-511-00	CARBON 39K 5% 1/4W
R105	1-246-483-00	CARBON 2.7K 5% 1/4W
R106	1-246-455-00	CARBON 180 5% 1/4W
R107	1-247-131-00	CARBON 1K 5% 1/4W
R108	1-247-879-00	CARBON 100K 5% 1/6W
R109	1-247-879-00	CARBON 100K 5% 1/6W
R110	1-247-876-00	CARBON 75K 5% 1/6W
R112	1-246-529-00	CARBON 220K 5% 1/4W
R113	1-247-107-00	CARBON 100 5% 1/4W
R114	1-246-524-00	CARBON 130K 5% 1/4W
R115	1-247-149-00	CARBON 5.6K 5% 1/4W
R116	1-246-499-00	CARBON 12K 5% 1/4W
R117	1-247-887-00	CARBON 220K 5% 1/6W
R118	1-247-861-00	CARBON 18K 5% 1/6W
R119	1-247-831-00	CARBON 1K 5% 1/6W
R120	1-247-888-00	CARBON 240K 5% 1/6W
R121	1-247-888-00	CARBON 240K 5% 1/6W
R122	1-247-859-00	CARBON 15K 5% 1/6W
R123	1-247-850-00	CARBON 6.2K 5% 1/6W
R124	1-247-807-00	CARBON 100 5% 1/6W
R125	1-247-867-00	CARBON 33K 5% 1/6W
R126	1-247-813-00	CARBON 180 5% 1/6W
R127	1-247-875-00	CARBON 68K 5% 1/6W
R128	1-247-821-00	CARBON 390 5% 1/6W
R129	1-247-898-00	CARBON 620K 5% 1/6W
R130	1-247-835-00	CARBON 1.5K 5% 1/6W
R131	1-247-139-00	CARBON 2.2K 5% 1/4W

ELECTRICAL PARTS

Ref. No.	Part No.	Description
R132	1-247-171-00	CARBON 47K 5% 1/4W
R133	1-247-855-00	CARBON 10K 5% 1/6W
R134	1-247-155-00	CARBON 10K 5% 1/4W
R135	1-247-831-00	CARBON 1K 5% 1/6W
R136	1-247-847-00	CARBON 4.7K 5% 1/6W
R137	1-247-131-00	CARBON 1K 5% 1/4W
R138	1-247-179-00	CARBON 100K 5% 1/4W
R139	1-247-881-00	CARBON 120K 5% 1/6W
R140	1-247-885-00	CARBON 180K 5% 1/6W
R141	1-246-499-00	CARBON 12K 5% 1/4W
R142	1-247-841-00	CARBON 2.7K 5% 1/6W
R143	1-247-811-00	CARBON 150 5% 1/6W
R144	1-247-861-00	CARBON 18K 5% 1/6W
R145	1-247-851-00	CARBON 6.8K 5% 1/6W
R147	1-247-831-00	CARBON 1K 5% 1/6W
R148	1-247-843-00	CARBON 3.3K 5% 1/6W
R149	1-246-505-00	CARBON 22K 5% 1/4W
R150	1-247-863-00	CARBON 22K 5% 1/6W
R151	1-247-863-00	CARBON 22K 5% 1/6W
R152	1-247-863-00	CARBON 22K 5% 1/6W
R153	1-247-833-00	CARBON 1.2K 5% 1/6W
R154	1-247-855-00	CARBON 10K 5% 1/6W
R160	1-247-831-00	CARBON 1K 5% 1/6W
R301	1-246-499-00	CARBON 12K 5% 1/4W
R302	1-246-482-00	CARBON 2.4K 5% 1/4W
R303	1-247-139-00	CARBON 2.2K 5% 1/4W
R304	1-246-500-00	CARBON 13K 5% 1/4W
R305	1-247-847-00	CARBON 4.7K 5% 1/6W
R306	1-247-826-00	CARBON 620 5% 1/6W
R307	1-246-484-00	CARBON 3K 5% 1/4W
R308	1-246-471-00	CARBON 820 5% 1/4W
R309	▲ 1-217-434-00	FUSIBLE 10 5% 1/2W F
R311	1-247-852-00	CARBON 7.5K 5% 1/6W
R312	1-247-844-00	CARBON 3.6K 5% 1/6W
R313	1-247-816-00	CARBON 240 5% 1/6W
R314	1-246-485-00	CARBON 3.3K 5% 1/4W
R315	1-247-855-00	CARBON 10K 5% 1/6W
R316	1-247-871-00	CARBON 47K 5% 1/6W
R317	1-247-871-00	CARBON 47K 5% 1/6W
R318	1-247-855-00	CARBON 10K 5% 1/6W
R319	1-247-857-00	CARBON 12K 5% 1/6W
R320	1-247-857-00	CARBON 12K 5% 1/6W
R321	1-217-529-00	CARBON 33 5% 1/4W
R322	1-247-855-00	CARBON 10K 5% 1/6W
R323	1-247-847-00	CARBON 4.7K 5% 1/6W
R324	1-247-855-00	CARBON 10K 5% 1/6W

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (Δ-ΔΔΔ-ΔΔΔ-XX or Δ-ΔΔΔΔ-ΔΔΔ-X) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μF, PF: μμF.

RESISTORS

- All resistors are in ohms.
- F : nonflammable

COILS

- MMH : mH, UH : μH

SEMICONDUCTORS

In each case, U : μ, for example:
 UA... : μA..., UPA... : μPA..., UPC... : μPC,
 UPD... : μPD...

The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>				<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>						
R325	1-247-879-00	CARBON	100K	5%	1/6W	RV101	1-226-236-00	RES, ADJ, CARBON 10K	RV102	1-226-238-00	RES, ADJ, CARBON 50K	RV201	1-226-236-00	RES, ADJ, CARBON 10K
R326	1-247-863-00	CARBON	22K	5%	1/6W	RV202	1-226-238-00	RES, ADJ, CARBON 50K	RV301	1-226-239-00	RES, ADJ, CARBON 100K			
R327	1-247-855-00	CARBON	10K	5%	1/6W	RY301	1-515-473-00	RELAY						
R328	1-247-147-00	CARBON	4.7K	5%	1/4W	S302	1-554-763-11	SWITCH, PUSH (1 KEY)(DOLBY NR)	S501	1-553-856-00	SWITCH, KEY BOARD (REW)	S502	1-553-856-00	SWITCH, KEY BOARD (STOP)
R329	1-247-883-00	CARBON	150K	5%	1/6W	S503	1-553-856-00	SWITCH, KEY BOARD (PLAY)	S504	1-553-856-00	SWITCH, KEY BOARD (FF)	S505	1-553-856-00	SWITCH, KEY BOARD (REC)
R330	1-247-847-00	CARBON	4.7K	5%	1/6W	S506	1-553-856-00	SWITCH, KEY BOARD (PAUSE)	S507	1-553-856-00	SWITCH, KEY BOARD (AMS)	S508	1-553-856-00	SWITCH, KEY BOARD (REC MUTE)
R331	1-247-123-00	CARBON	470	5%	1/4W	S509	1-554-208-00	SWITCH, SLIDE (TIMER)	S551	1-554-205-00	SWITCH, PUSH	S552	1-554-205-00	SWITCH, PUSH
R332	1-247-123-00	CARBON	470	5%	1/4W	S553	1-554-205-00	SWITCH, PUSH	S554	1-554-205-00	SWITCH, PUSH			
R333	1-247-809-00	CARBON	120	5%	1/6W	T301	1-433-267-00	TRANSFORMER, OSCILLATOR						
R334	1-247-839-00	CARBON	2.2K	5%	1/6W									
R335	1-247-868-00	CARBON	36K	5%	1/6W									
R336	1-247-863-00	CARBON	22K	5%	1/6W									
R337	1-247-863-00	CARBON	22K	5%	1/6W									
R339	1-247-813-00	CARBON	180	5%	1/6W									
R340	1-247-816-00	CARBON	240	5%	1/6W									
R341	1-247-816-00	CARBON	240	5%	1/6W									
R342	1-247-816-00	CARBON	240	5%	1/6W									
R343	1-247-863-00	CARBON	22K	5%	1/6W									
R344	1-247-879-00	CARBON	100K	5%	1/6W									
R510	1-247-855-00	CARBON	10K	5%	1/6W									
R511	1-247-872-00	CARBON	51K	5%	1/6W									
R512	1-247-879-00	CARBON	100K	5%	1/6W									
R513	1-247-879-00	CARBON	100K	5%	1/6W									
R514	1-247-839-00	CARBON	2.2K	5%	1/6W									
R515	1-247-839-00	CARBON	2.2K	5%	1/6W									
R516	1-247-813-00	CARBON	180	5%	1/6W									
R517	1-247-826-00	CARBON	620	5%	1/6W									
R518	1-247-813-00	CARBON	180	5%	1/6W									
R519	1-247-813-00	CARBON	180	5%	1/6W									
R520	1-247-863-00	CARBON	22K	5%	1/6W									
R521	1-247-879-00	CARBON	100K	5%	1/6W									
R522	1-247-855-00	CARBON	10K	5%	1/6W									
R523	1-247-819-00	CARBON	330	5%	1/6W									
R524	1-247-831-00	CARBON	1K	5%	1/6W									
R525	1-247-847-00	CARBON	4.7K	5%	1/6W									
R526	1-247-831-00	CARBON	1K	5%	1/6W									
R527	1-247-855-00	CARBON	10K	5%	1/6W									
R530	1-247-831-00	CARBON	1K	5%	1/6W									
R531	1-247-871-00	CARBON	47K	5%	1/6W									
R532	1-247-847-00	CARBON	4.7K	5%	1/6W									
R533	1-247-855-00	CARBON	10K	5%	1/6W									
R534	1-247-871-00	CARBON	47K	5%	1/6W									

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "♦" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers ($\Delta-\Delta\Delta-\Delta\Delta-\Delta\Delta-XX$ or $\Delta-\Delta\Delta\Delta-\Delta\Delta\Delta-X$) may be different from those used in the set.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: $\mu\mu$ F.

RESISTORS

• All resistors are in ohms.

• F : nonflammable

COILS

• MMH : mH, UH : μ H


SEMICONDUCTORS

In each case, U : μ , for example:


UA...: μ A..., UPA...: μ PA..., UPC...: μ PC,

UPD...: μ PD...


SPEAKER SYSTEM [SS-V10]

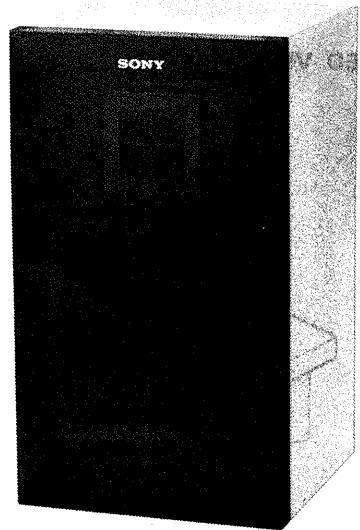


WIRING DIAGRAM

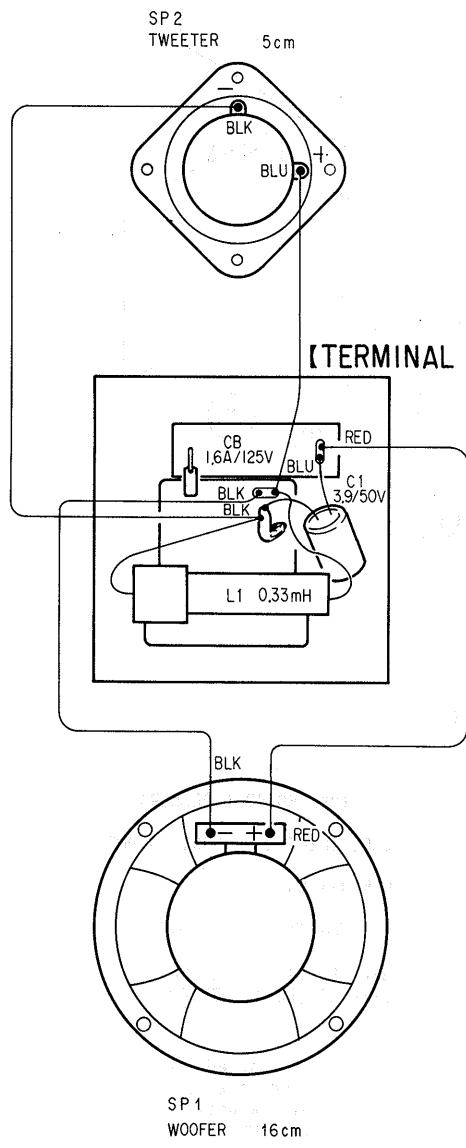

SCHEMATIC DIAGRAM

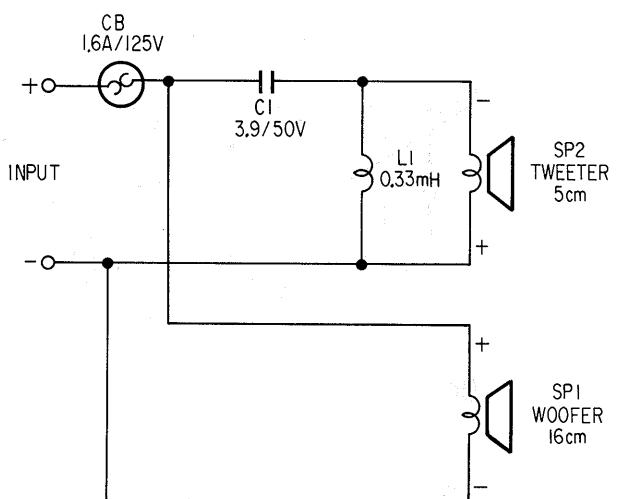

EXPLODED VIEW

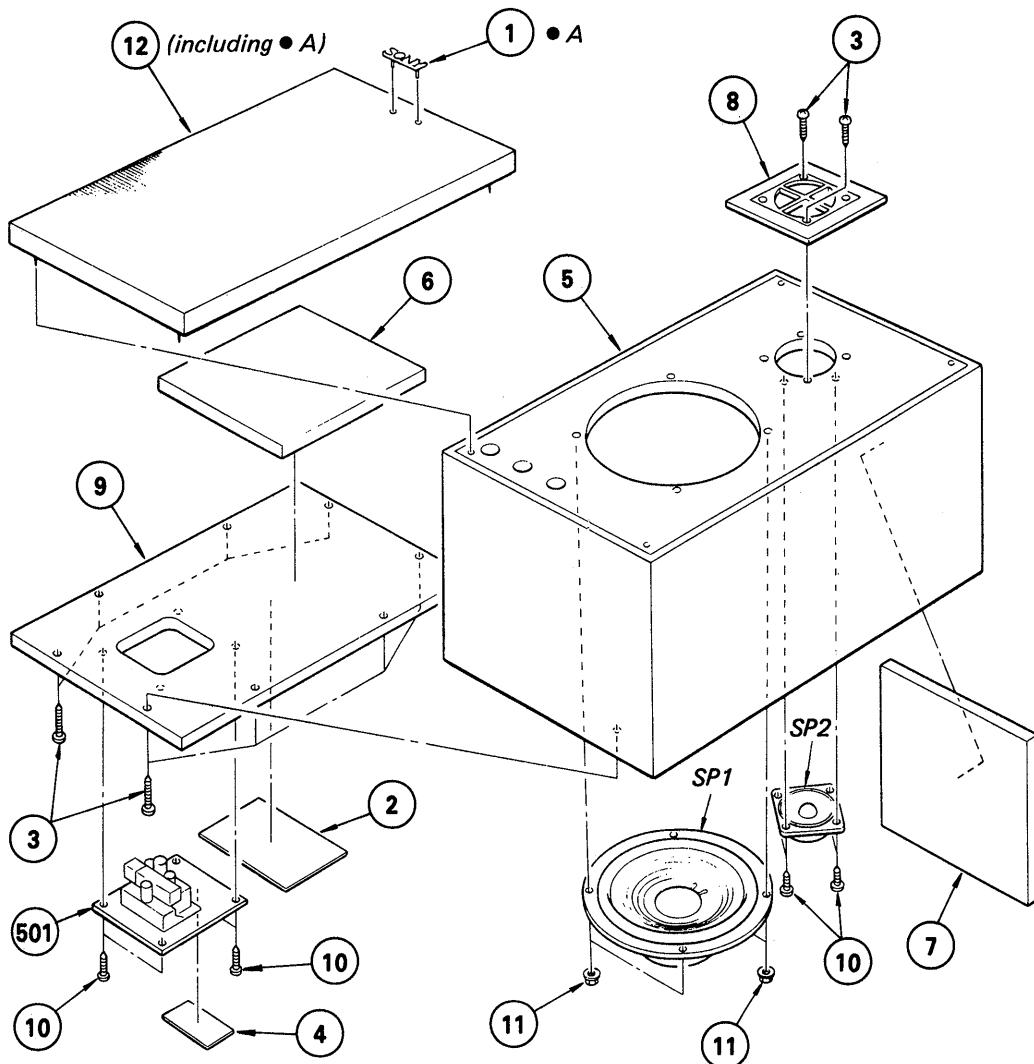

PARTS LIST

<u>GENERAL SECTION</u>			<u>ELECTRICAL PARTS</u>		
No.	Part No.	Description	Ref.No.	Part No.	Description
1	4-836-828-00	EMBLEM, SONY	501	1-536-690-00	TERMINAL BOARD (SPEAKER)
2	4-875-621-00	LABEL, CAUTION	C1	1-123-547-00	CAP, ELECT(NONPOLAR) 3.9MF 20% 50V
3	4-874-614-11	SCREW +BV4 3.5X14	CB	1-532-661-00	CIRCUIT BREAKER
4	4-903-104-01	LABEL, MODEL NUMBER	L1	1-459-174-00	NETWORK COIL (CHLS TYPE)
5	4-903-105-01	CABINET, SPEAKER	SP1	1-503-330-11	SPEAKER (16CM) WOOFER
6	4-903-106-01	ABSORBENT, ACOUSTIC, REAR BOARD	SP2	1-503-329-11	SPEAKER (5CM) TWEETER
7	4-903-108-01	ABSORBENT, ACOUSTIC, TOP BOARD			
8	4-903-110-01	DIFFUSER, TWC			
9	4-903-111-01	REAR, BOARD			
10	7-621-849-40	SCREW, WOOD +R 3.1X25			
11	7-684-023-04	N3 TYPE2			
12	X-4903-101-1	FRAME ASSY, GRILLE			

• Items marked "♦" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

SERVICE MANUAL SUPPLEMENT

CIRCUIT DESCRIPTION


Direct Function

This set uses LC7815 (IC102) as function switch IC.

The function signal is applied to IC102 from ST-V10, TC-V10, and PS-LX10 (or PS-LX30) connected with this set, and IC102 switches the input signal.

• Signal Path when each set is operating

Input signal of each set is switched.

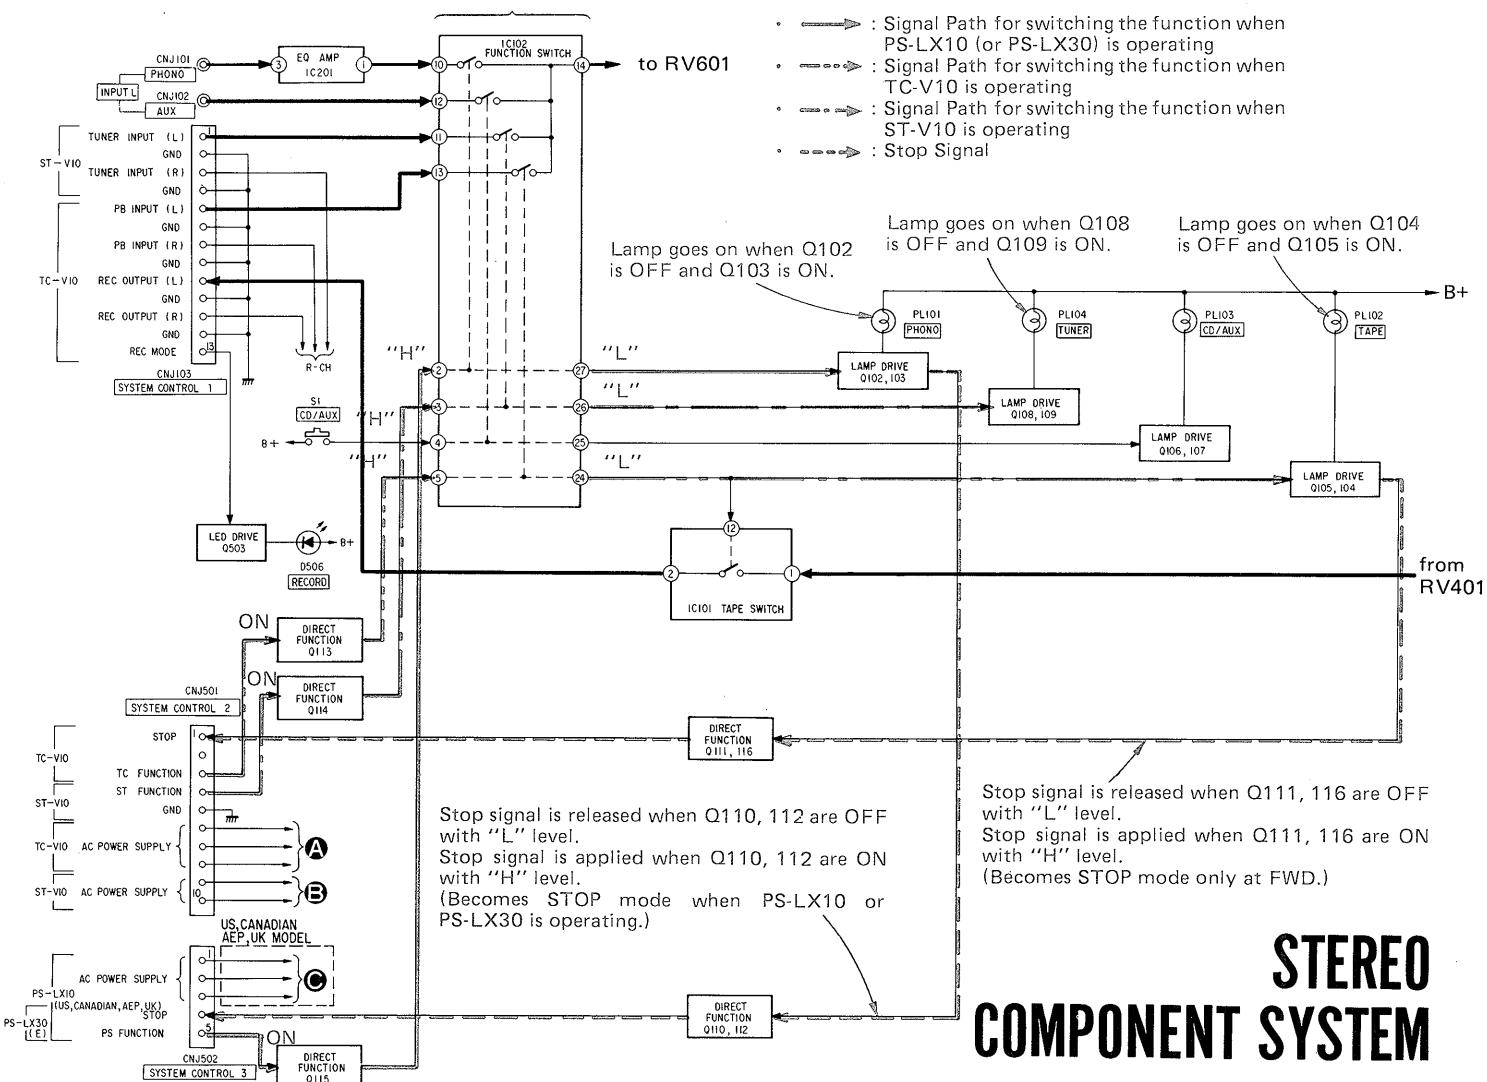

**STEREO
COMPONENT SYSTEM
SONY®**

9-951-365-32
(with 9-951-365-83)

Sony Corporation
Audio Group

—94—

Published by Customer Relations and Service Group

English
90H0502-1 (3)
Printed in Japan
© 1984. 3