

TC-TX313/TX515

SERVICE MANUAL

US Model
Tourist Model
TC-TX515

AEP Model
UK Model
E Model
TC-TX313/TX515



- TC-TX313 is the optional stereo cassette deck that can be used only with section DHC-MD313.
- TC-TX515 is the optional stereo cassette deck that can be used only with section DHC-MD515.

Photo: TC-TX515

SPECIFICATIONS

Recording system	4-track 2-channel stereo
Frequency response	(DOLBY NR OFF) 50 - 14,000 Hz (± 3 dB), using Sony TYPE I cassettes 50 - 15,000 Hz (± 3 dB), using Sony TYPE II cassettes
Input	TAPE IN (phono jacks): impedance 47 kilohms
Output	TAPE OUT (phono jacks): voltage 550 mV impedance 47 kilohms
General	
Power requirements	
US model:	120 V AC, 60 Hz
AEP, UK model:	220 - 230 V AC, 50 / 60 Hz
E, Tourist model:	110 - 120 V or 220 - 240 V AC, 50 / 60 Hz Adjustable with the voltage selector
Power consumption	12 W
Dimensions	Approx. 215 × 60 × 195 mm (w / h / d) incl. projecting parts and controls
Mass	Approx. 2.5 kg
Supplied accessories:	Audio connecting cords (2)

*Design and specifications are subject to change
without notice.*

Model Name Using Similar Mechanism	NEW
Tape Transport Mechanism Type	—

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.

“DOLBY” and the double-D symbol $\square\square$ are trademarks of Dolby Laboratories Licensing Corporation.

Notes on Chip Component Replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

STEREO CASSETTE DECK



SONY®

TABLE OF CONTENTS

1. GENERAL

Parts and Controls	3
--------------------------	---

2. TEST MODE

2-1. Checking the Items of Test Mode	4
--	---

3. DISASSEMBLY

3-1. Top Cover	5
3-2. Front Panel Assy	5
3-3. Front Board (TC-TX313)	6
3-4. Panel Board (TC-TX515).....	6
3-5. Back Plate	7
3-6. Bracket (Power Trans)	7
3-7. Main Board	8
3-8. TCM Assy	8
3-9. Lever	9
3-10. Tension Spring.....	9
3-11. Housing	10
3-12. Chassis	10
3-13. Motor (A)/(B) Assy	11
3-14. Head Plate	11
3-15. Pinch Roller Assy	12
3-16. Bracket (Head Unit)	12

4. MECHANICAL ADJUSTMENTS	13
---------------------------------	----

5. ELECTRICAL ADJUSTMENTS	13
---------------------------------	----

6. DIAGRAMS

6-1. Circuit Boards Location	16
6-2. Printed Wiring Board –Deck Section–	17
6-3. Schematic Diagram –Deck Section–	18
6-4. Printed Wiring Boards –Main Section–	20
6-5. Schematic Diagram –Main Section–	23
6-6. Printed Wiring Boards –Front Panel Section–	27
6-7. Schematic Diagram –Front Panel Section–.....	29
6-8. IC Pin Description	31

7. EXPLODED VIEWS


7-1. Top Cover Section	33
7-2. Front Panel Section (TC-TX313)	34
7-3. Front Panel Section (TC-TX515).....	35
7-4. Chassis Section	36
7-5. TCM Assy Section	37

8. ELECTRICAL PARTS LIST	38
--------------------------------	----

SECTION 1 GENERAL

• TC-TX313

Parts and Controls

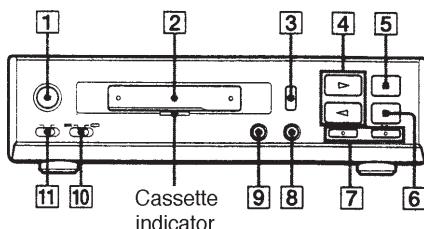

[1] POWER switch

Only the power to this set is turned on.

[2] Cassette slot

With a cassette inserted, the cassette indicator is illuminated red when the power is turned on.

[3] ▲ (eject) button

[4] < (lower side play)/> (upper side play) button

Even without cassette, the power to this set and the DHC-MD313 will be turned on when one of these buttons is pressed.

[5] II (pause) button

[6] π (stop) button

[7] <</>> (fast forward, fast backward/AMS) button

[8] ○ REC (recording) button

[9] CD SYNC (CD synchro) button


This button allows CD synchro recording to be executed as this set is interlocked with the DHC-MD313.

[10] DIRECTION switch

[11] DOLBY NR (Dolby Noise Reduction) switch

• TC-TX515

Parts and Controls

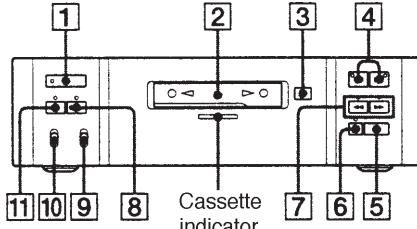

[1] POWER switch

Only the power to this set is turned on.

[2] Cassette slot

With a cassette inserted, the cassette indicator is illuminated red when the power is turned on.

[3] ▲ (eject) button

[4] < (lower side play)/> (upper side play) button

[5] ■ (stop) button

[6] II (pause) button

[7] <</>> (fast forward, fast backward/AMS) button

[8] ● REC (recording) button

[9] DIRECTION switch

[10] DOLBY NR (Dolby Noise Reduction) switch

[11] CD SYNC (CD synchro) button

This button allows CD synchro recording to be executed as this set is interlocked with the DHC-MD515.

SECTION 2 TEST MODE

2-1. CHECKING THE ITEMS OF TEST MODE

The set allows you to check the items of the test mode although this may not be directly related with the adjustment.

① Setting/Releasing the Test Mode:

1) Setting

With power OFF, short between test pin ① and pin ② of CN09 on the LOW-VOLTAGE board. (See page 15.)

Then, turn power ON to enter the test mode.

2) Releasing

Open between pin ① and pin ② of CN09.

② Items of Test Mode

1) Memory Stop

1-1) In side A record mode, press the REW (◀◀) button.

The tape is rewind to the start point of recording and stopped.

1-2) In side B record mode, press the FF (▶▶) button.

The tape is rewind to the start point of recording and stopped.

2) Memory Play

2-1) In side A record mode, press the FWD Auto Play

(▶+◀◀) buttons simultaneously. The tape is rewind to the start point of recording and FWD played.

2-2) In side B record mode, press the REV Auto Play

(◀+▶▶) buttons simultaneously. The tape is rewind to the start point of recording and REV played.

3) All LED Flickering

When no tape is inserted, all LED indicators are flickering.

4) Aging Operation

When tape with record erase preventing claw is inserted for both sides A and B, enter the aging operation start command by pressing [■] and [CD SYNC] simultaneously. The system will change the direction to one side and perform the following operations:

① Rewind in REW mode until side A of tape is stopped.

② Playback tape in FWD mode for 1 minute.

③ Pause mode.

④ Record tape for 3 minutes.

⑤ Forward tape in FF mode to the end of side A of tape.

⑥ Shut off and switch to side B.

⑦ Playback tape in REV mode for 1 minute.

⑧ Pause mode.

⑨ Record tape for 3 minutes.

⑩ Forward tape in FF mode to the end of side B of tape.

⑪ Shut off and switch to side A.


⑫ Repeat the procedure from ② to ⑪.

⑬ Pressing the STOP (■) button will release the set from these operations.


SECTION 3 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.


3-1. TOP COVER

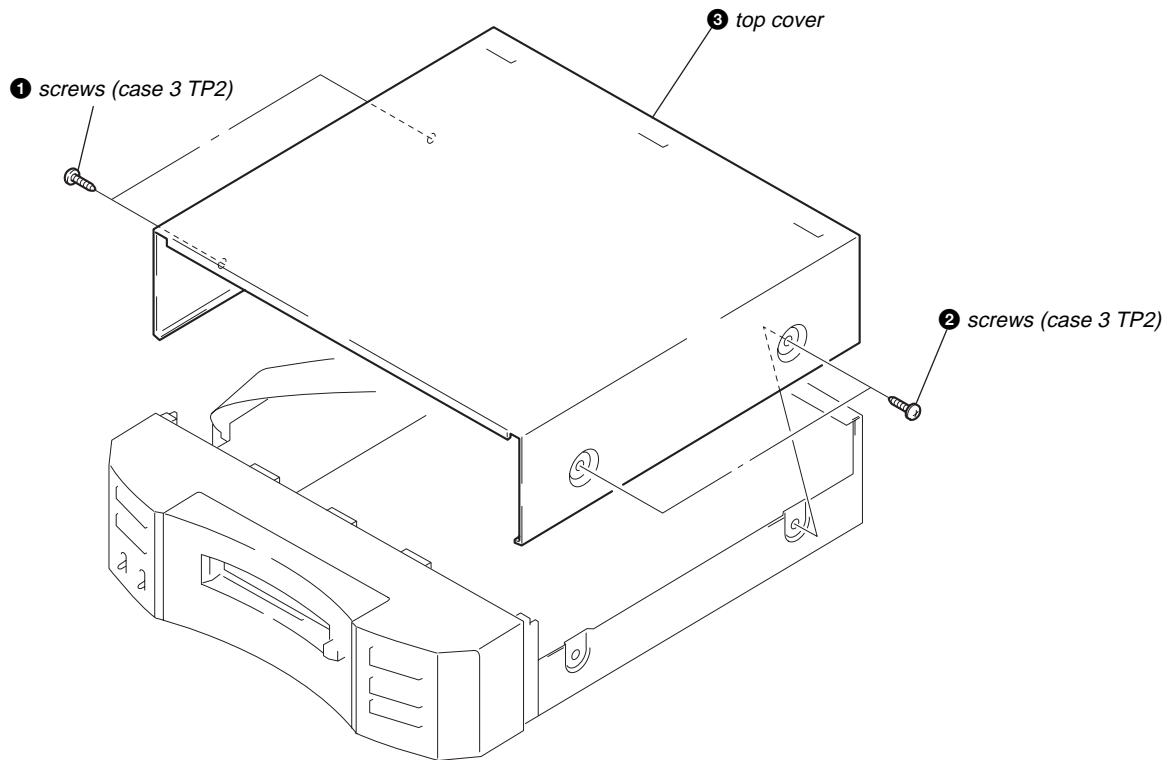


3-2. FRONT PANEL ASSY

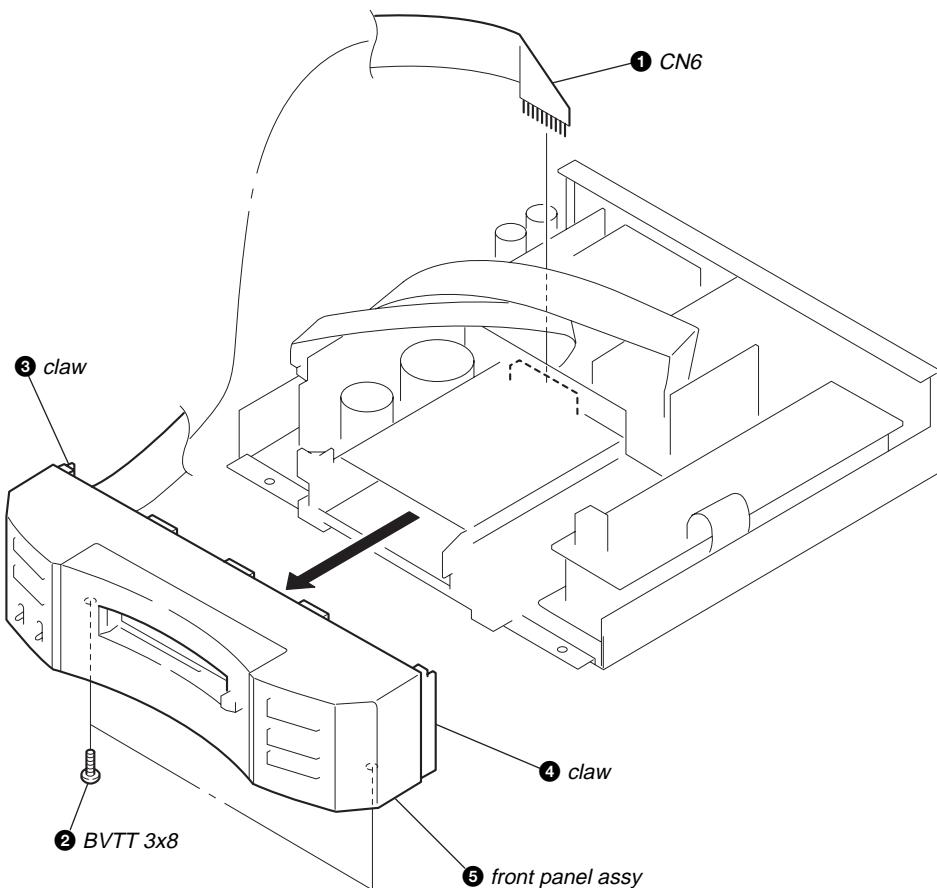


3-3. FRONT BOARD (TC-TX313)

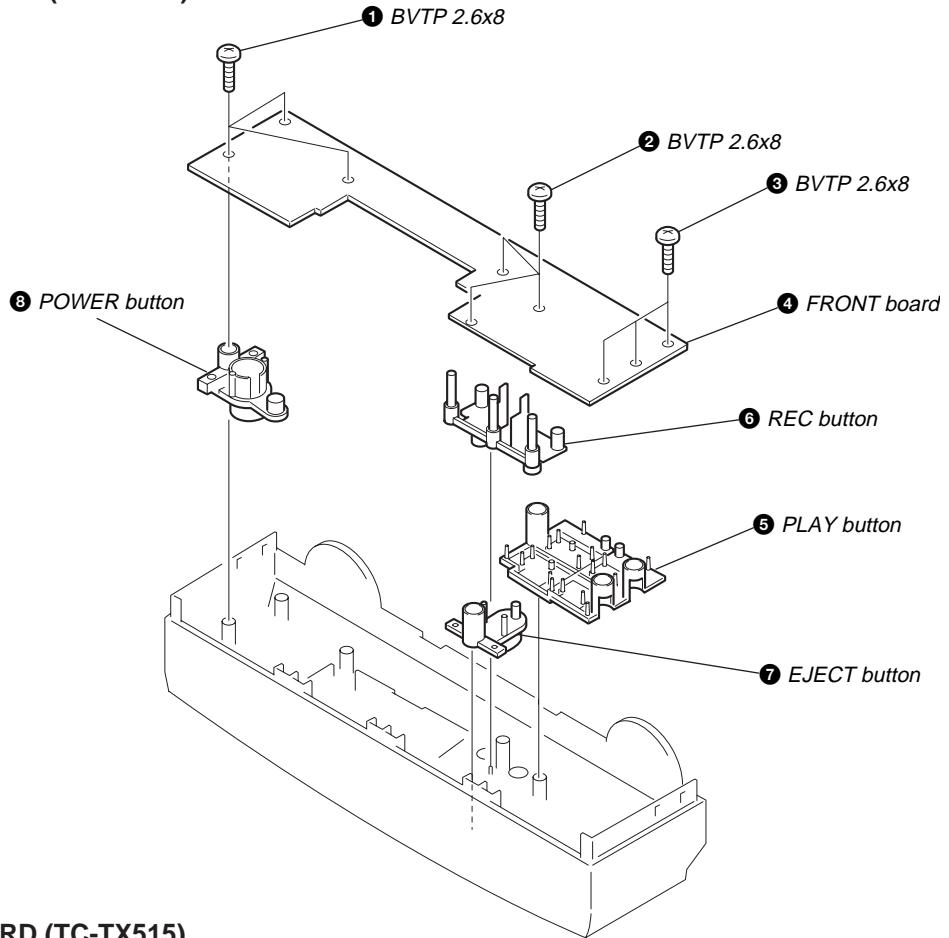


3-4. PANEL BOARD (TC-TX515)

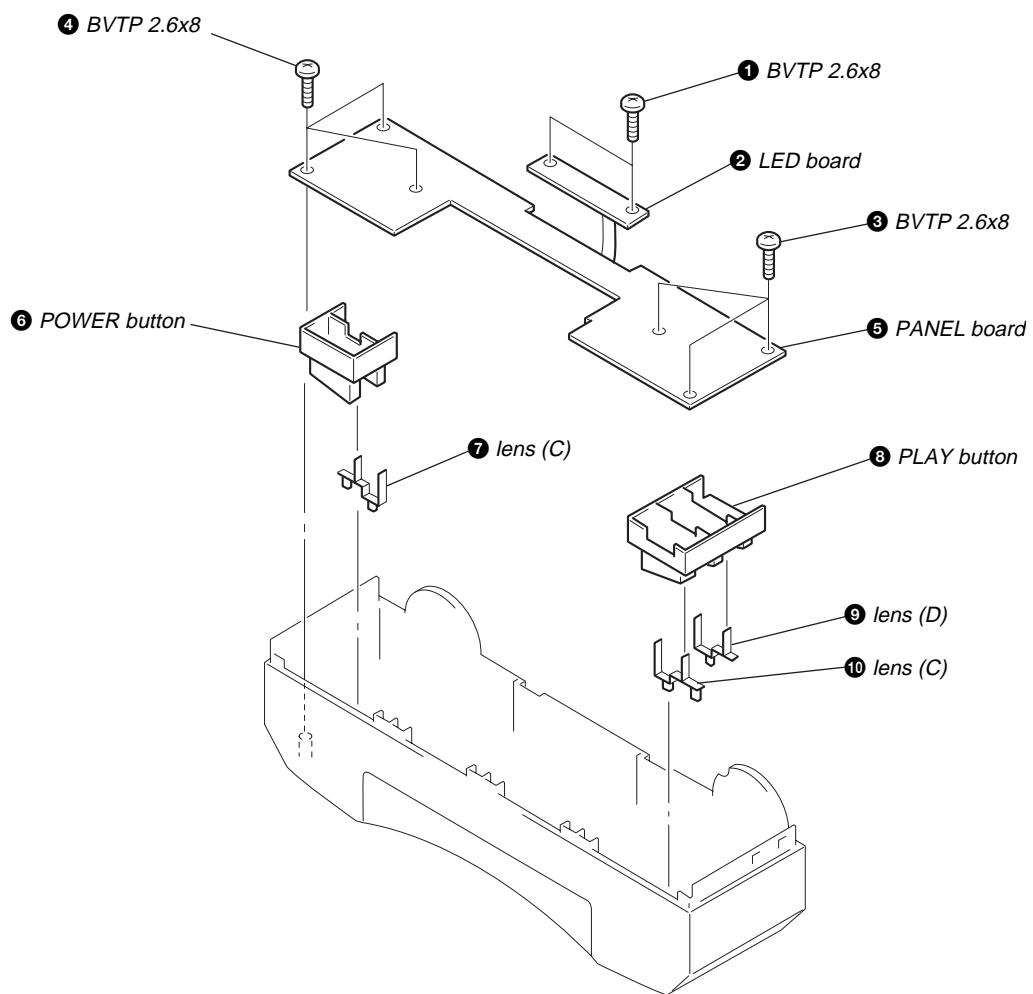


3-5. BACK PLATE

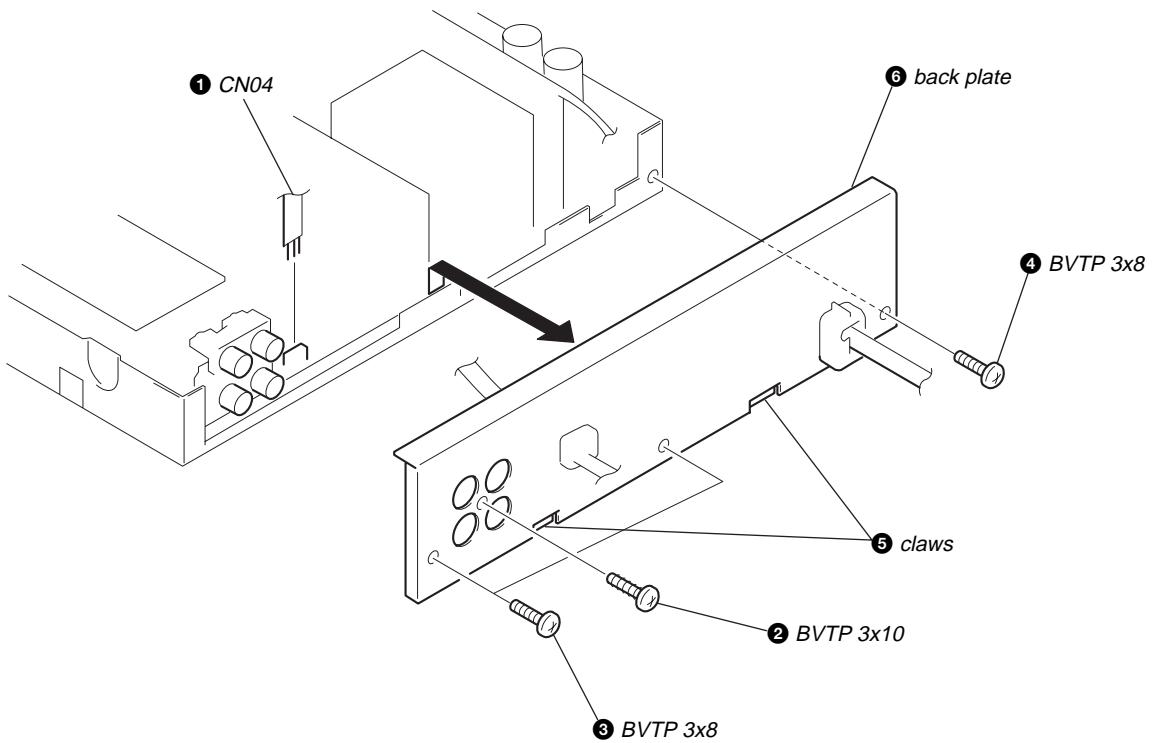


3-6. BRACKET (POWER TRANS)

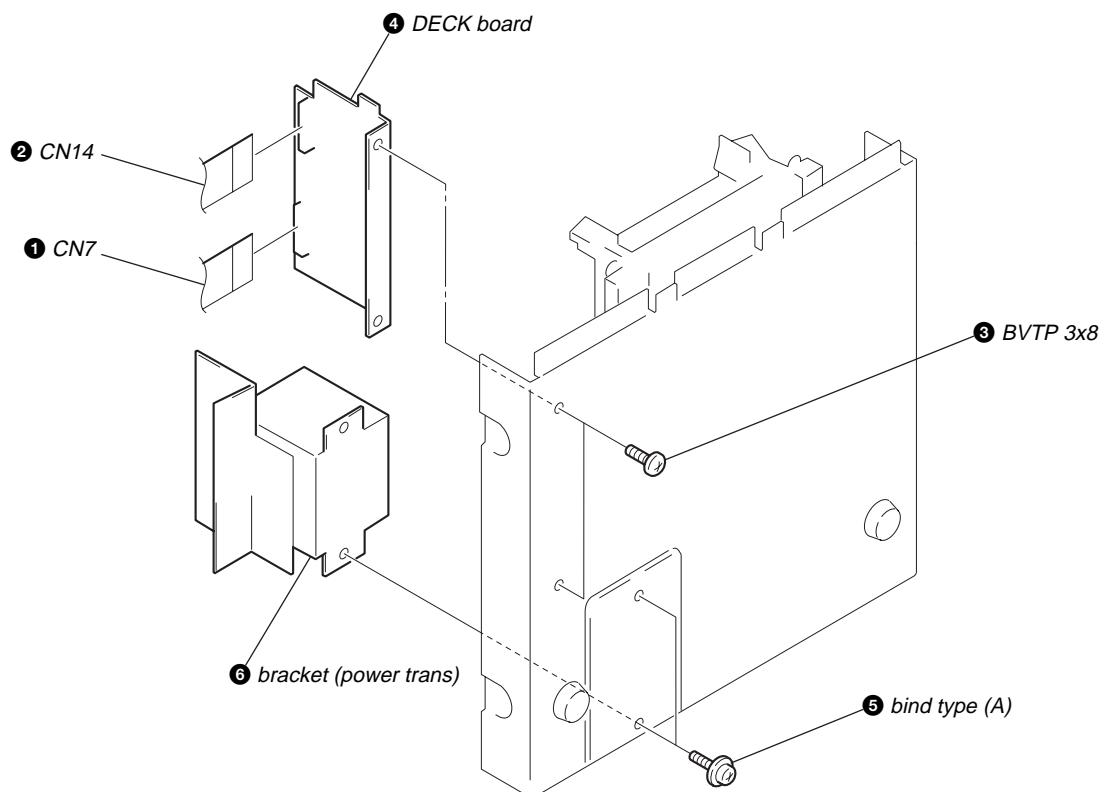


3-7. MAIN BOARD

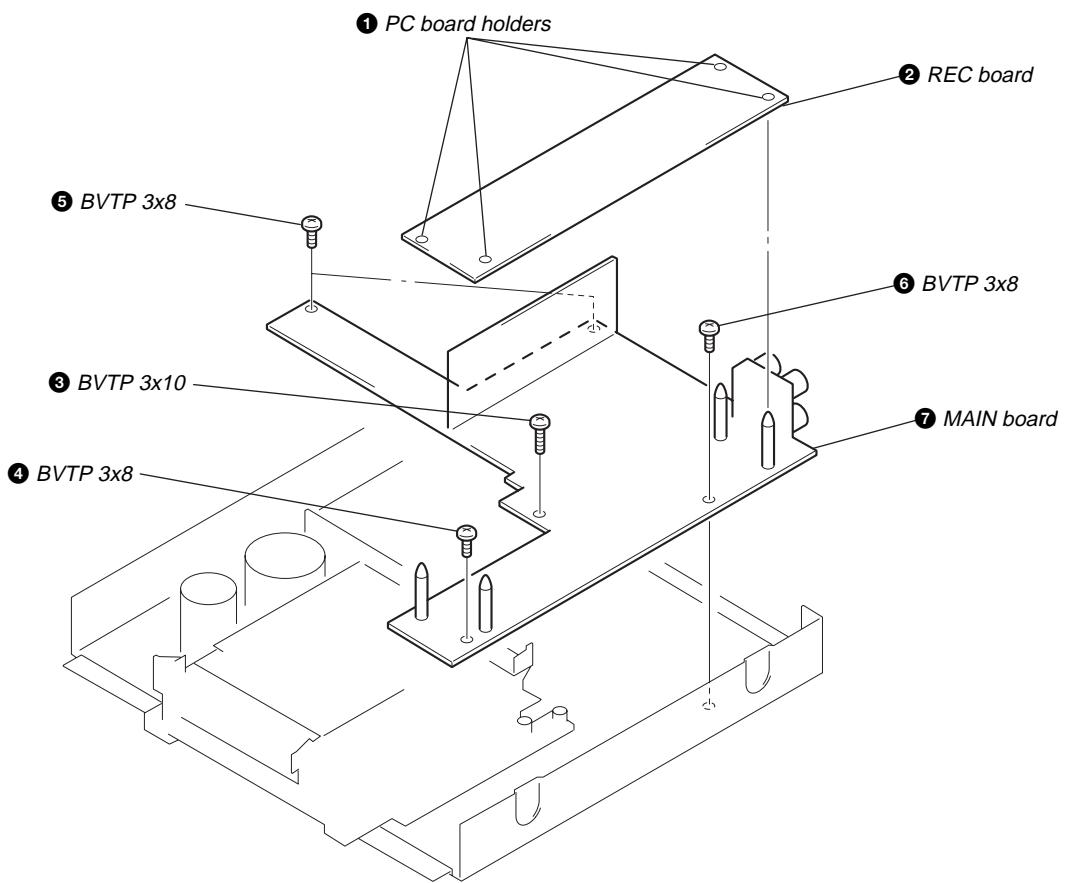


3-8. TCM ASSY

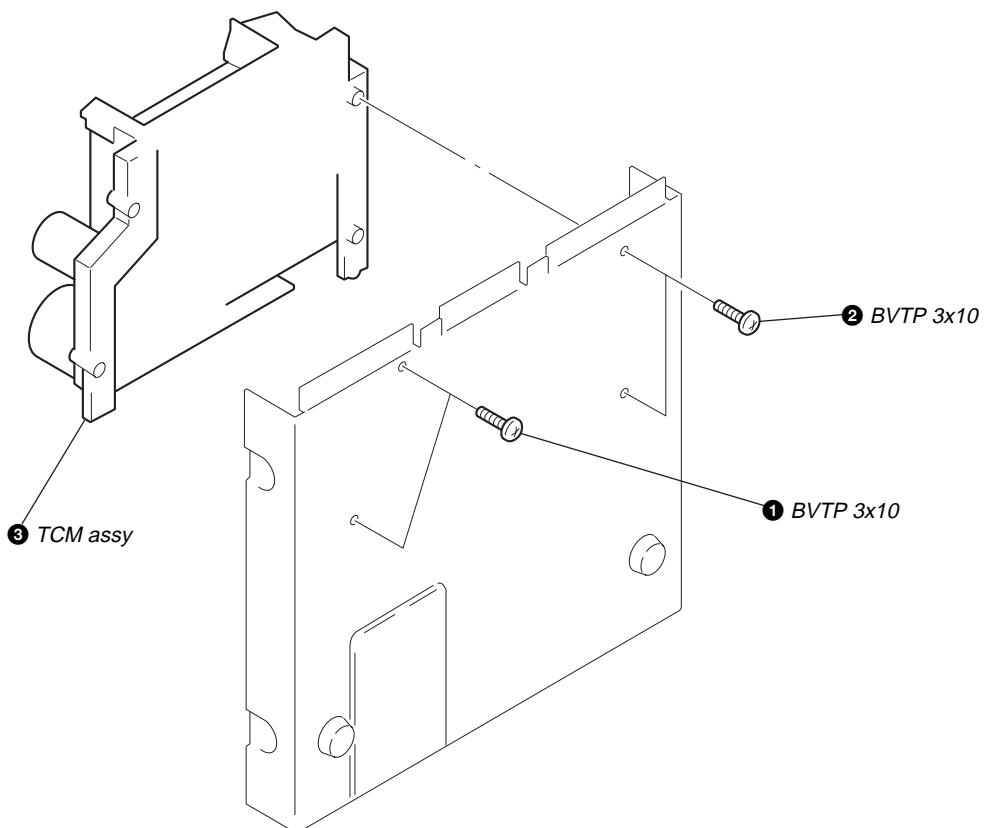


3-9. LEVER

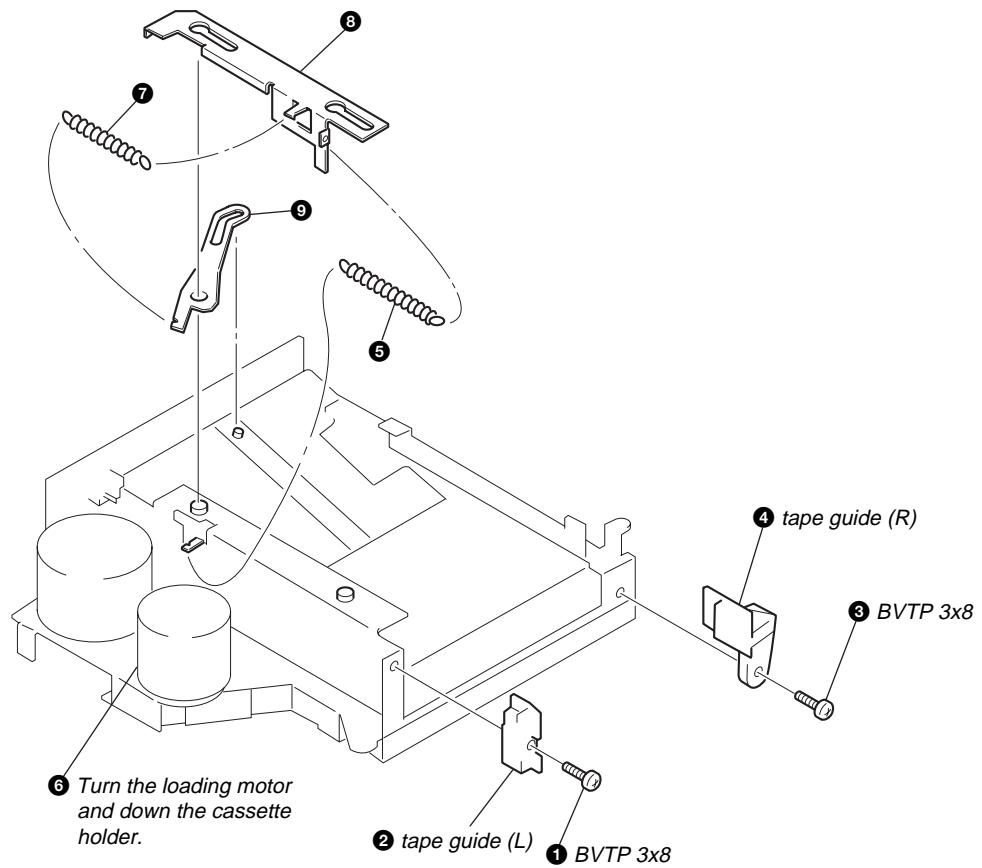


3-10. TENSION SPRING

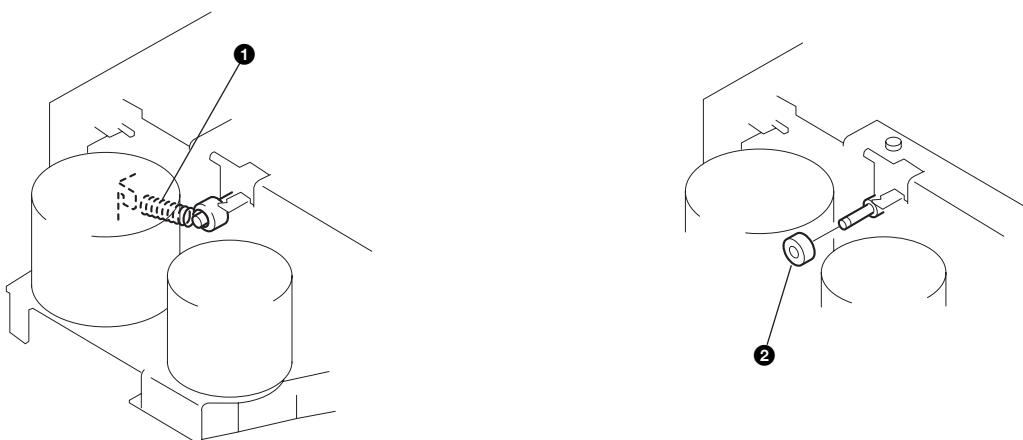


3-11. HOUSING

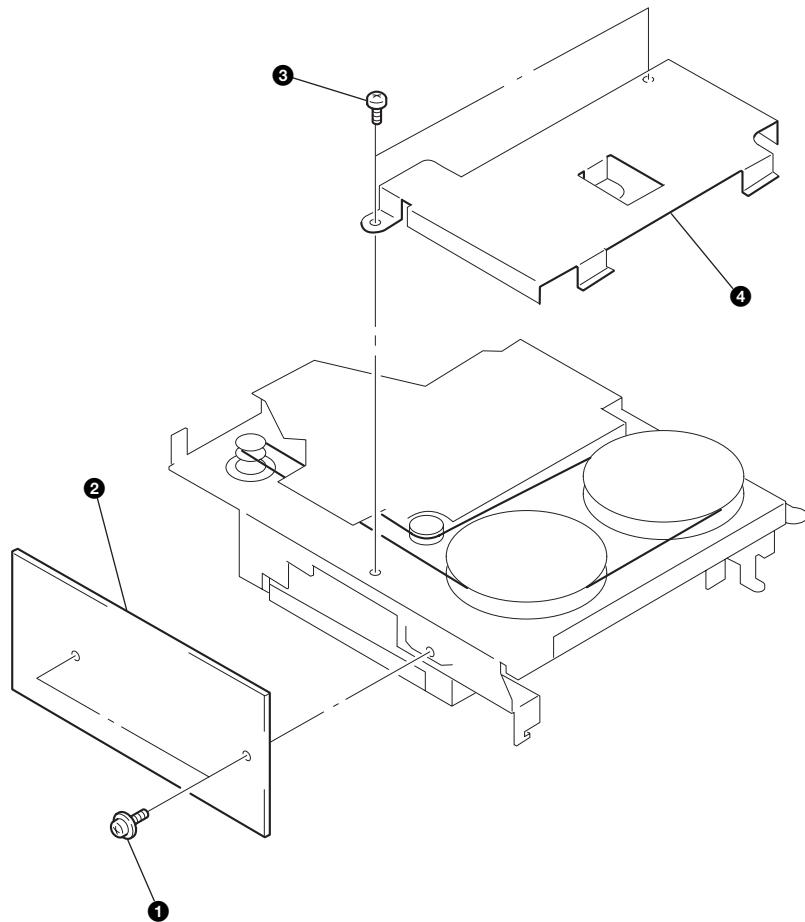

3-12. CHASSIS

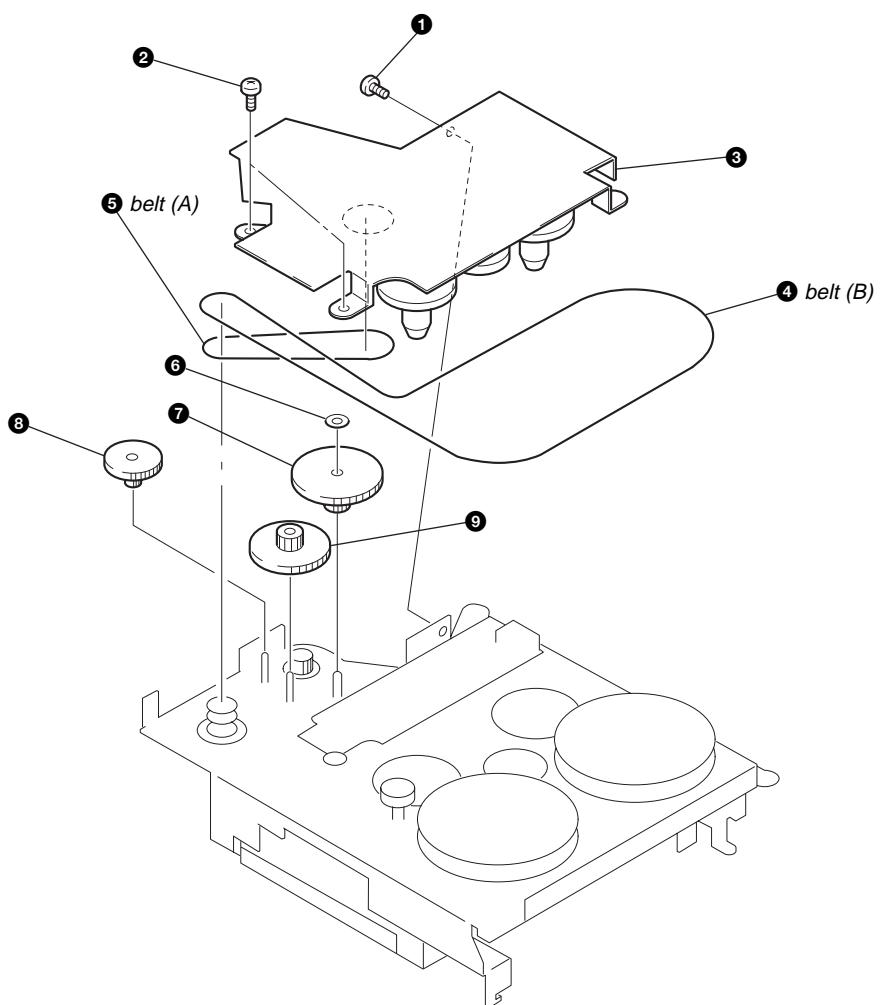


3-13. MOTOR (A)/(B) ASSY

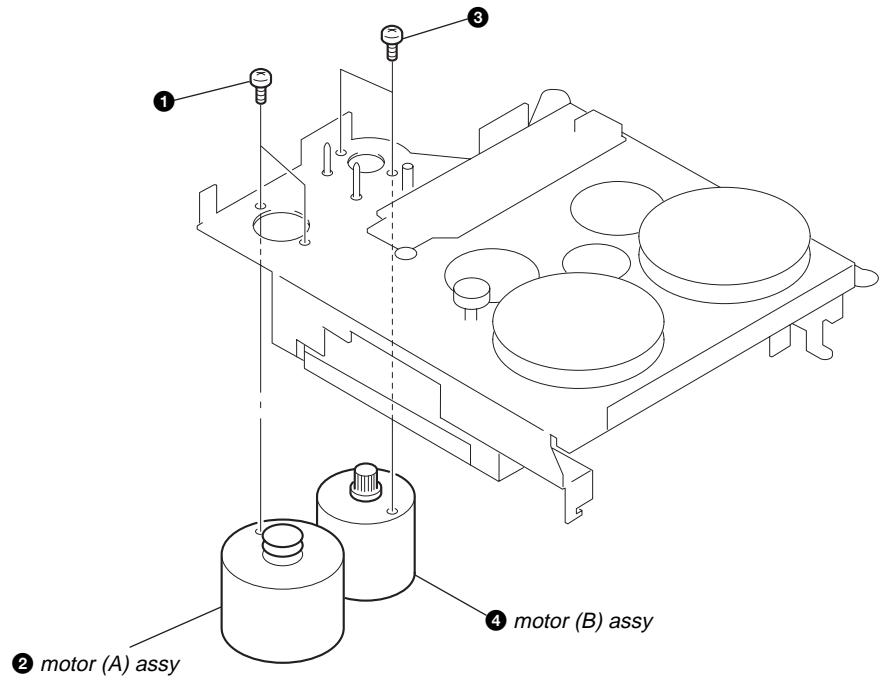


3-14. HEAD PLATE


Note : On install, set the portions A and B.

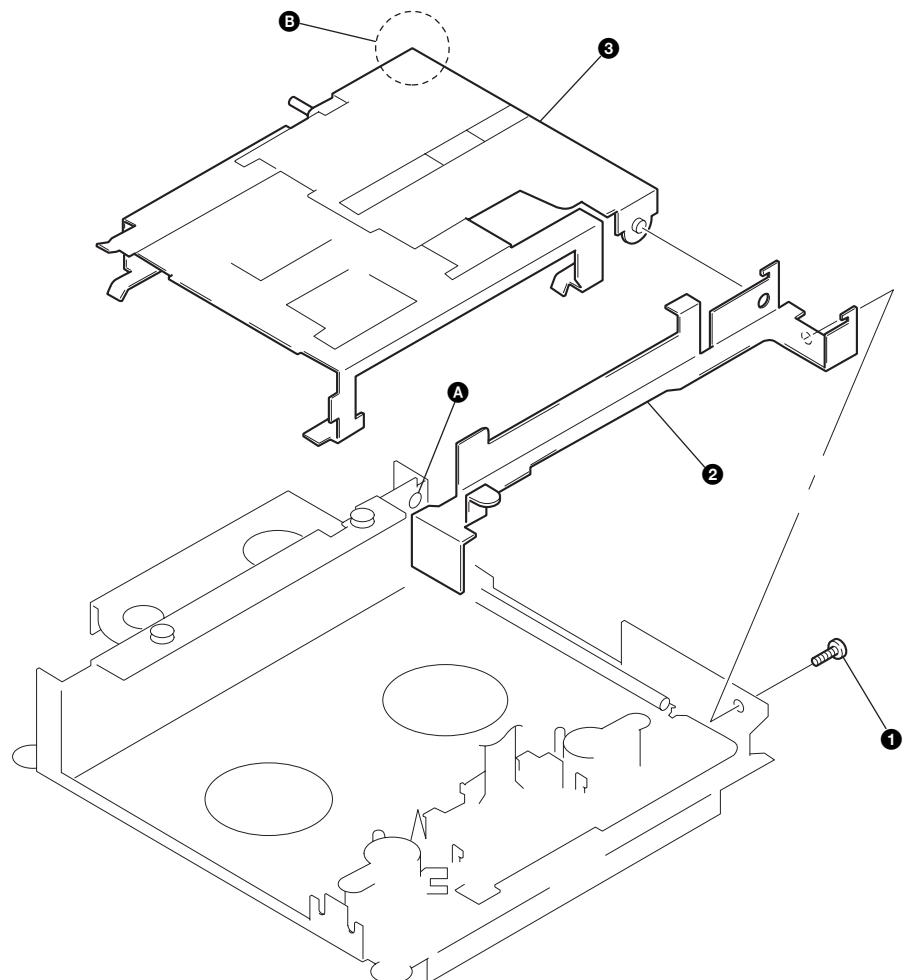

3-15. PINCH ROLLER ASSY

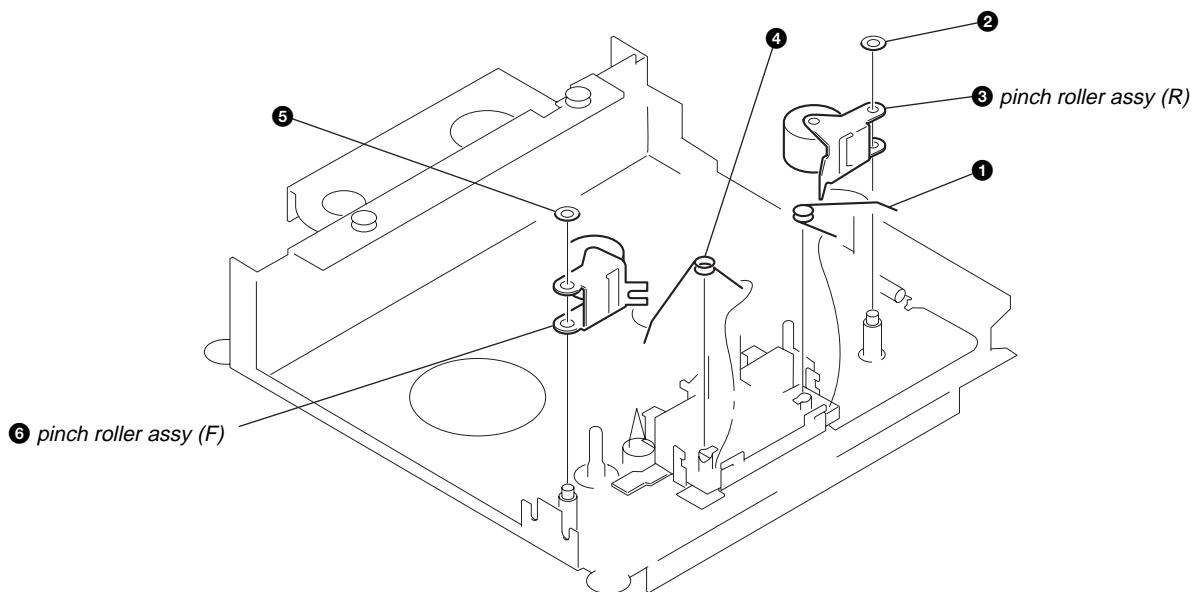

3-16. BRACKET (HEAD UNIT)

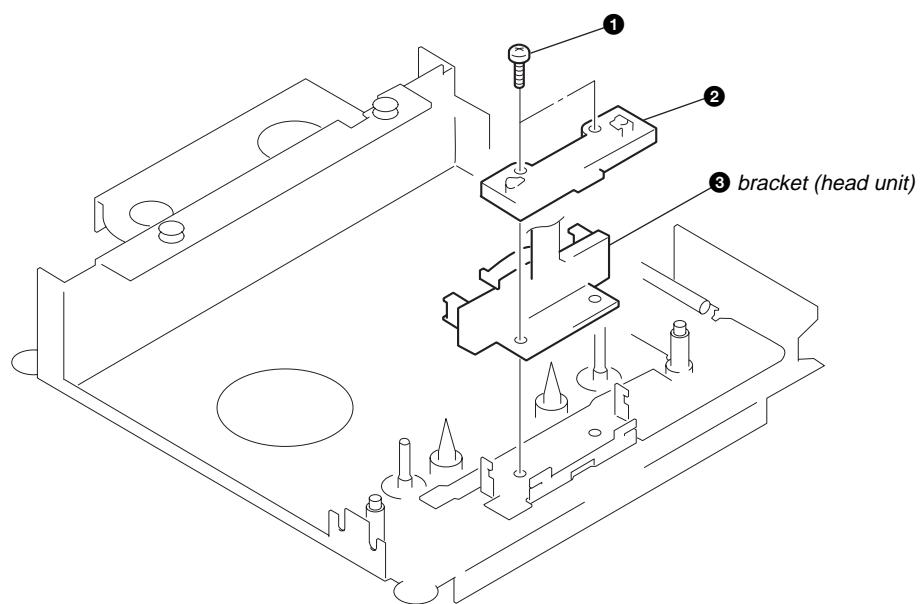

SECTION 4 MECHANICAL ADJUSTMENTS

PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab :

record/playback/erase head	pinch roller
rubber belts	capstan
idle	
2. Demagnetize the record/playback/erase head with a head demagnetizer. (Do not bring the head demagnetizer close to the erase head.)
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Torque Measurement

Mode	Torque Meter	Meter Reading
FWD	CQ-102C	35 – 80 g • cm (0.49 – 1.11 oz • inch)
FWD Back tension		1 – 7 g • cm (0.012 – 0.097 oz • inch)
REV	CQ-102RC	35 – 80 g • cm (0.49 – 1.11 oz • inch)
REV Back tension		1 – 7 g • cm (0.012 – 0.097 oz • inch)
FF, REW	CQ-201B	more than 40 g • cm (more than 0.56 oz • inch)

SECTION 5 ELECTRICAL ADJUSTMENTS

PRECAUTION

1. The adjustment should be performed in the publication. (Be sure to make playback adjustment at first.)
2. The adjustments and measurement should be performed for both L-CH and R-CH.
 - Switch position

DOLBY NR switch : OFF
DIRECTION switch : \leftrightarrow

Standard Input Level

Input terminal	TAPE IN
source impedance	10 k Ω
input signal level	0.49 V (-4 dB)

Standard Output Level

Output terminal	TAPE OUT (L-CH)
load impedance	47 k Ω
output signal level	0.49 V (-4 dB)

Test Tape


Type	Signal	Used for
P-4-A100	10 kHz, -10 dB	Azimuth Adjustment
P-4-L300	315 Hz, 0 dB	PB Level Adjustment
WS-48A	3 kHz, 0 dB	Tape Speed Adjustment

0 dB = 0.775 V

Tape Speed Adjustment

Procedure :

- Mode: FWD playback

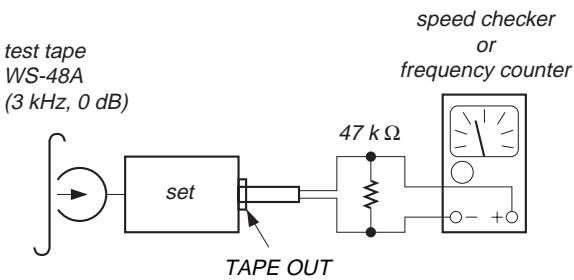

Adjustment Limits : normal speed

Speed checker	Frequency counter
-3 to +3 %	2,910 to 3,090 Hz

Confirm that the deviation between tape top and tape end is within 3%.

Adjustment Location : Capstan motor volume (See page 15.)


Sample Value of Wow and flutter

W. RMS (JIS) within 0.3%
(test tape : WS-48A)

Playback Level Adjustment

Procedure :

- Mode: FWD playback
- Adjust SFR03 (L-CH) and SFR04 (R-CH) on MAIN board so that the reading on level meter meets the adjustment limits below.

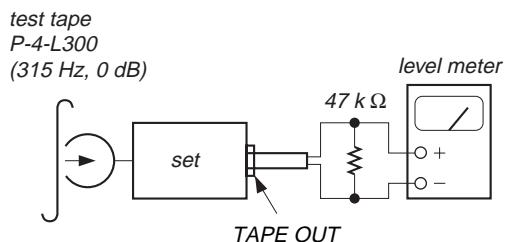

Adjustment Limits :

TAPE OUT level	Level difference between channels
-4 ± 2 dB (0.39 to 0.62 V)	within 2 dB

Check that the TAPE OUT level does not change even if Playback and Stop operation is repeated several times.

Adjustment Location : MAIN board (See page 15.)


Record Bias Adjustment

Setting :


Set to the TEST mode. (See page 4.)

Procedure :

- Mode: Record

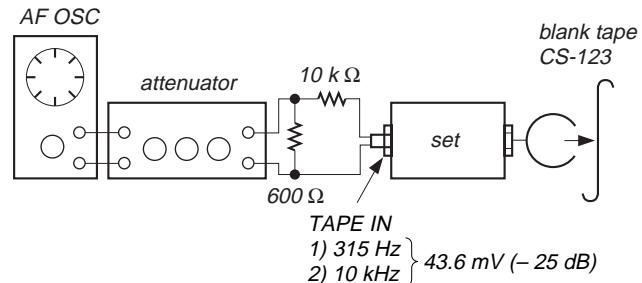

- Mode: Playback

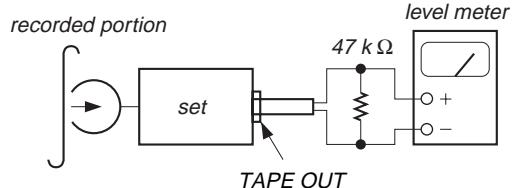

- Confirm playback the signal recorded in step 1 become adjustment level as follows.
- If these levels do not adjustment level, adjust SFR01 (L-CH) and SFR02 (R-CH) on REC board to repeat step 1 and 2.

Adjustment Level : Difference of playback output of 10 kHz to playback output of 315 Hz : 0 ± 0.5 dB

Adjustment Location : REC board (See page 15.)


Record Level Adjustment

Setting :


Set to the TEST mode. (See page 4.)

Procedure :

- Mode: Record

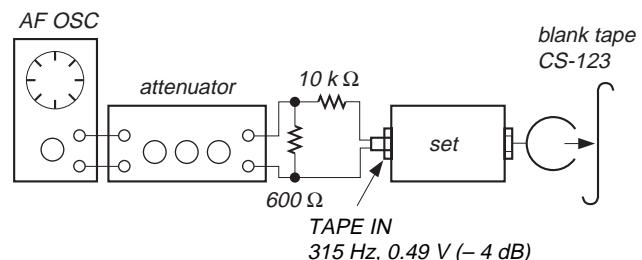

- Mode: Playback

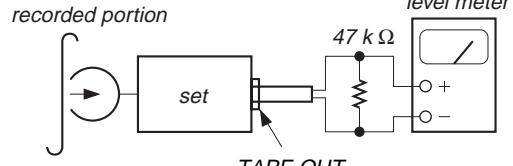


- Confirm playback the signal recorded in step 1 become adjustment level as follows.
- If these levels do not adjustment level, adjust SFR11 (L-CH) and SFR12 (R-CH) on REC board to repeat step 1 and 2.

Adjustment Level : Playback output level of 315 Hz :
 -4 ± 2 dB (0.39 to 0.62 V)

Adjustment Location : REC board (See page 15.)


Adjustment Location :

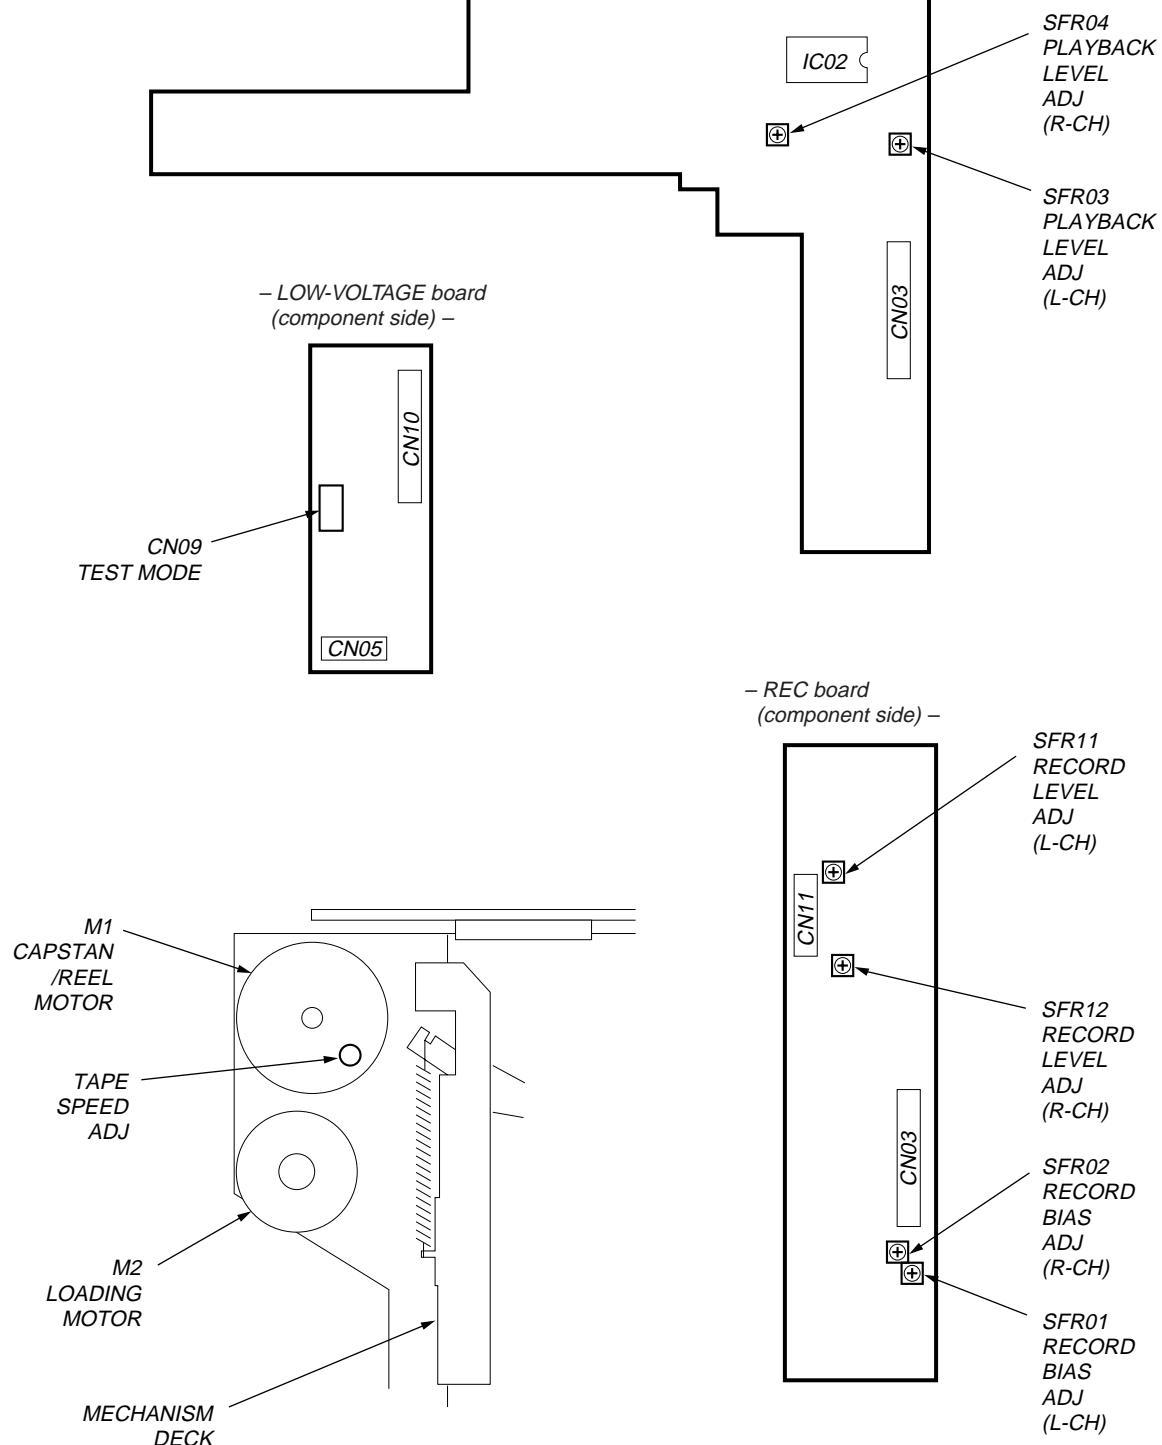


SECTION 6 DIAGRAMS

6-1. CIRCUIT BOARDS LOCATION


- TC-TX313

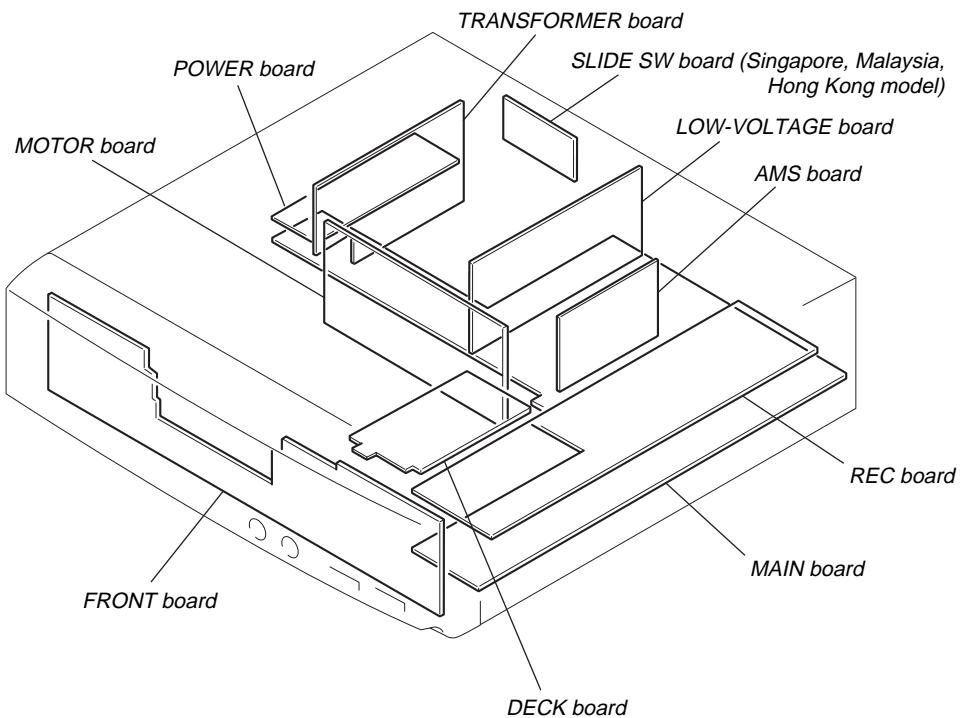

- TC-TX515

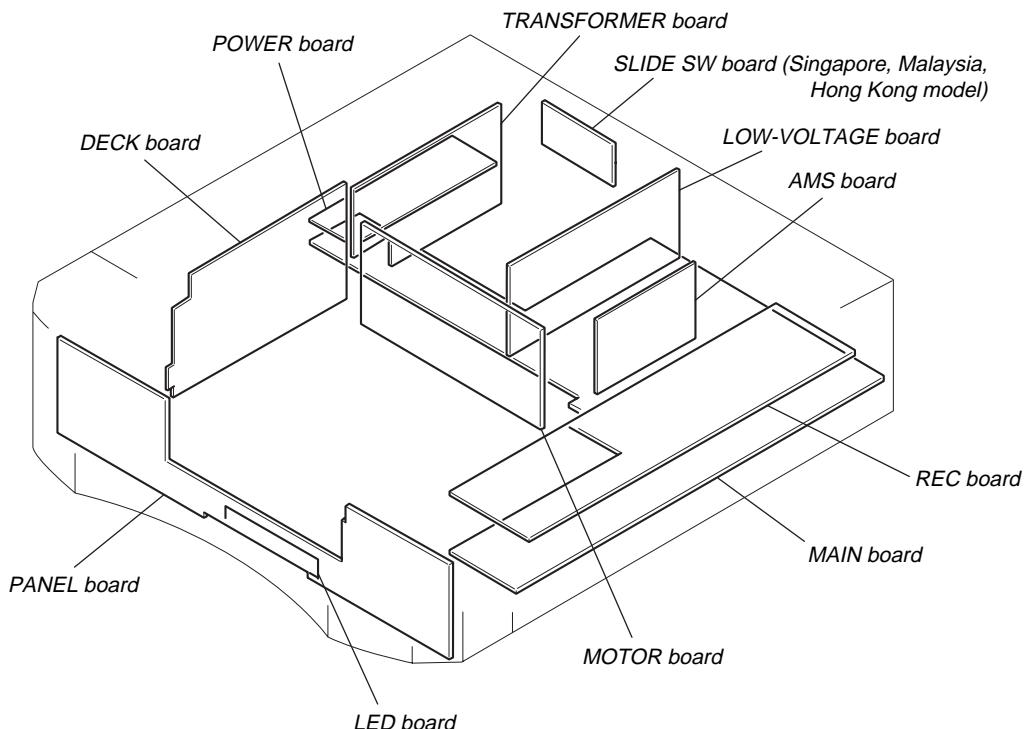

6-2. PRINTED WIRING BOARD — DECK SECTION —

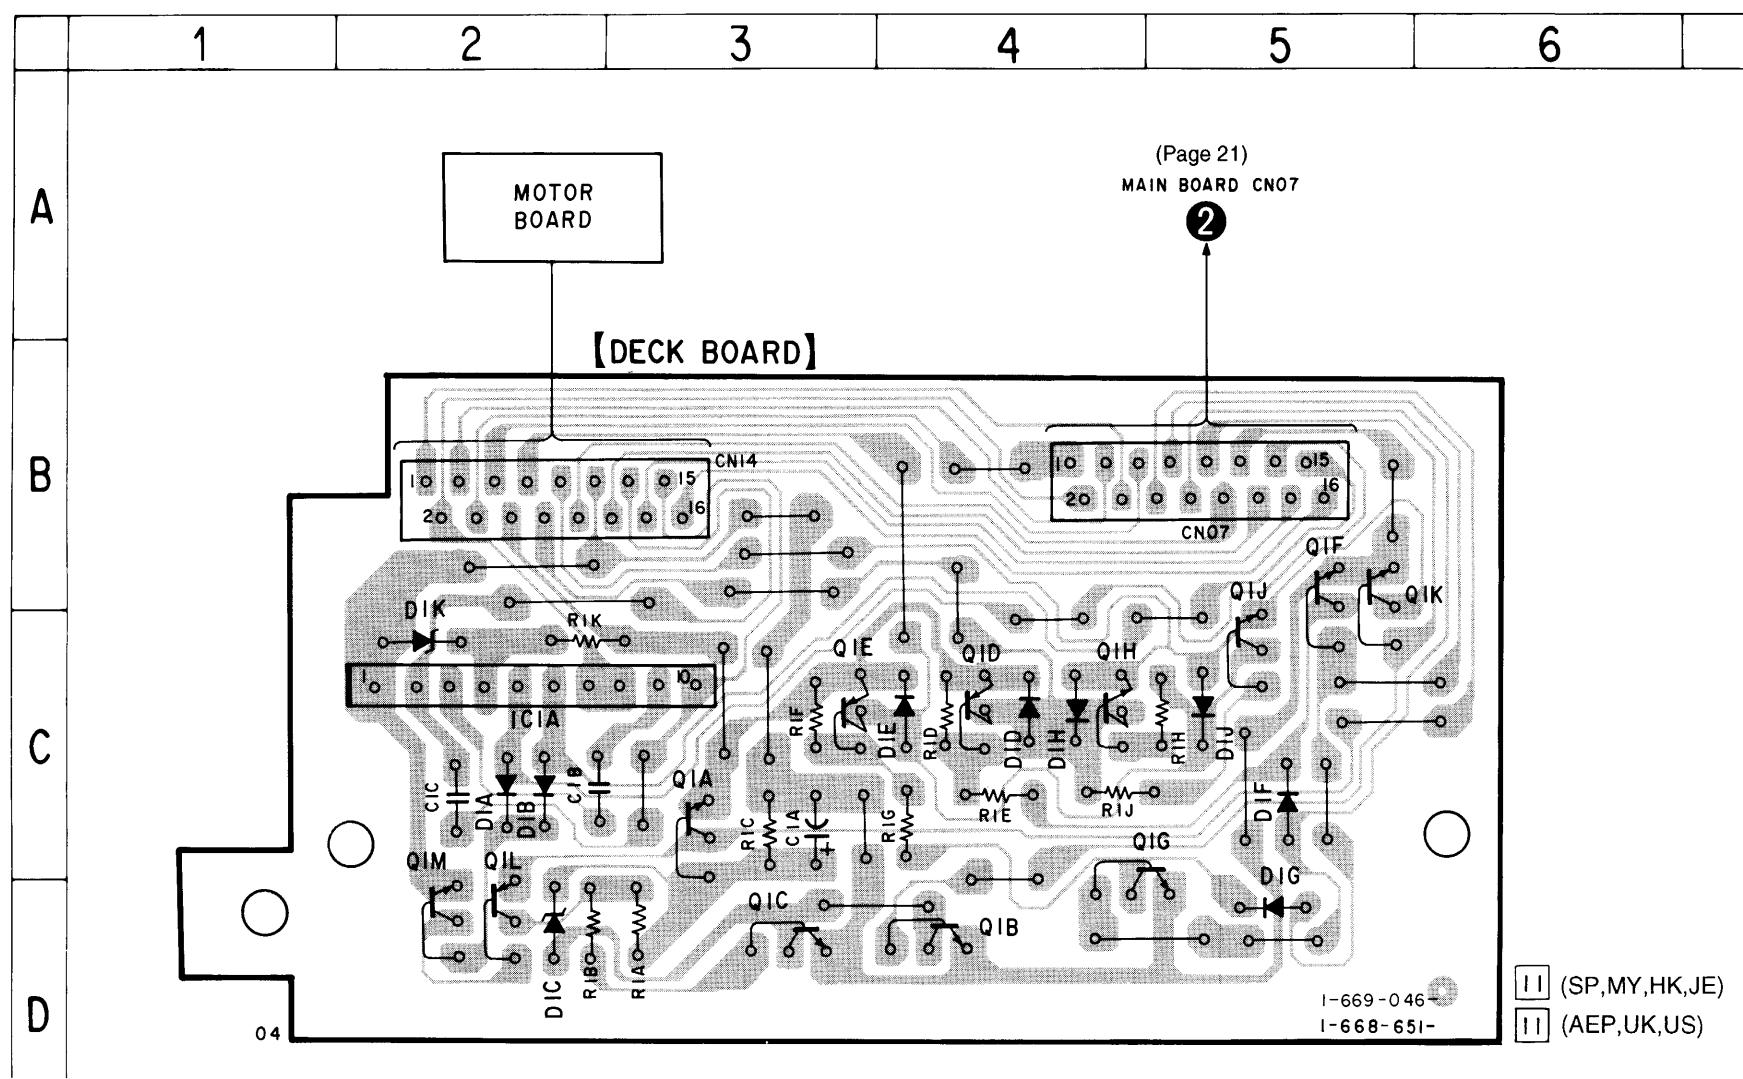


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D1A	C-2	Q1A	C-3
D1B	C-2	Q1B	D-4
D1C	D-2	Q1C	D-3
D1D	C-4	Q1D	C-4
D1E	C-4	Q1E	C-3
D1F	C-5	Q1F	B-5
D1G	D-5	Q1G	D-4
D1H	C-4	Q1H	C-4
D1J	C-5	Q1J	C-5
D1K	C-2	Q1K	B-5
IC1A	C-2	Q1L	D-2
		Q1M	D-2

Note:
• : parts extracted from the component side.
• : Pattern from the side which enables seeing.

6-3. SCHEMATIC DIAGRAM — DECK SECTION — • Refer to page 26 for IC Block Diagrams.

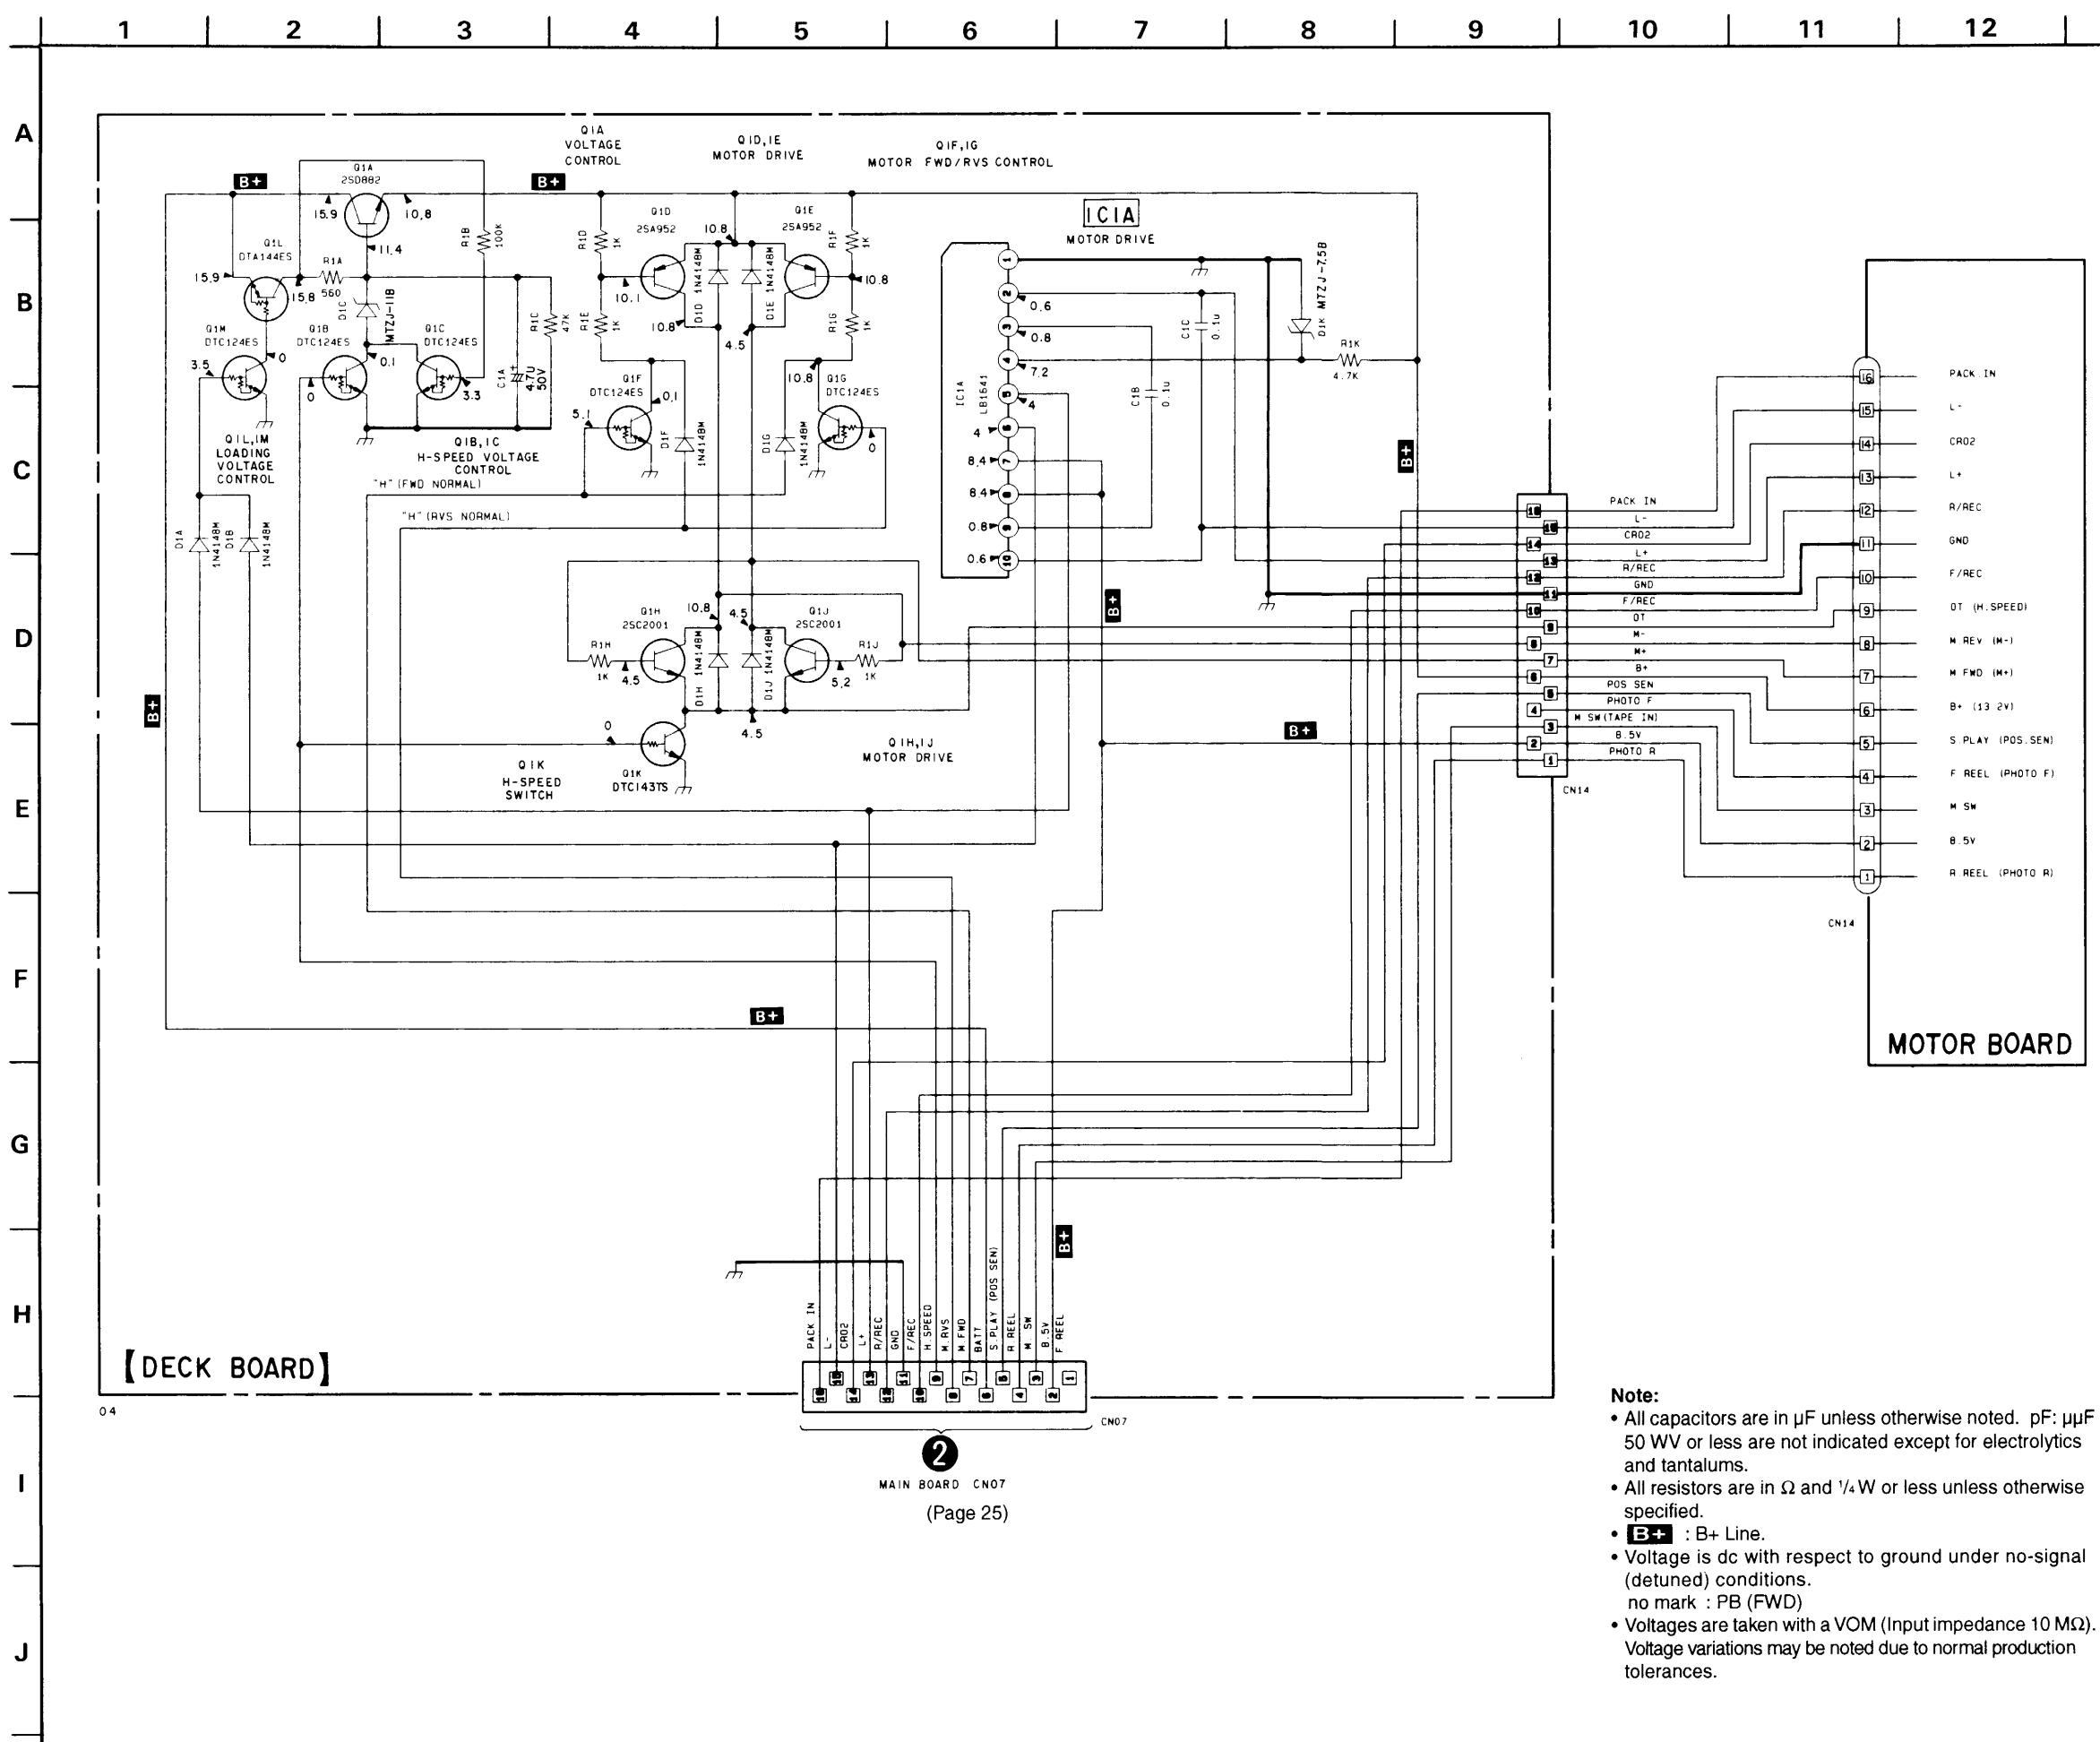


- Note:
- All capacitors are in μF unless otherwise noted. pF : μpF 50 mV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
 - B+** : B+ Line.
 - Voltage is dc with respect to ground under no-signal (detuned) conditions.
no mark : PB (FWD)
 - Voltages are taken with a VOM (Input impedance 10 $\text{M}\Omega$). Voltage variations may be noted due to normal production tolerances.

6-4. PRINTED WIRING BOARDS — MAIN SECTION —


• Semiconductor Location			
Ref. No.	Location	Ref. No.	Location
D01	J-5	Q05	H-6
D03	G-2	Q06	H-2
D04	F-3	Q07	H-3
D11	B-13	Q08	G-3
D12	B-7	Q09	G-3
D13	B-7	Q11	F-3
D14	B-6	Q12	C-6
D15	D-17	Q13	C-5
D20	J-18	Q15	B-8
D21	I-18	Q51	D-6
D22	I-18	Q52	D-6
D23	I-18	Q53	C-12
D24	J-18	Q54	C-12
D25	J-18	Q55	B-12
D26	B-2	Q56	B-12
D27	F-1	Q57	C-7
D28	D-13	Q59	C-7
D32	D-8	Q60	B-12
D34	C-7	Q65	B-2
D35	F-12	Q66	B-3
		Q67	B-2
IC01	F-5	Q68	B-1
IC02	D-5	Q69	F-2
IC03	C-12	Q70	C-3
IC04	C-8	Q71	B-13
IC05	B-7	Q72	D-13
IC06	D-17	Q74	C-6
IC07	B-17	Q76	C-6
IC08	C-17	Q81	B-5
IC09	D-2	Q82	B-4
IC11	E-13		

Note:

- : parts extracted from the component side.
- : parts mounted on the conductor side.
- [] : indicates side identified with part number.
- ▨ : Pattern from the side which enables seeing.

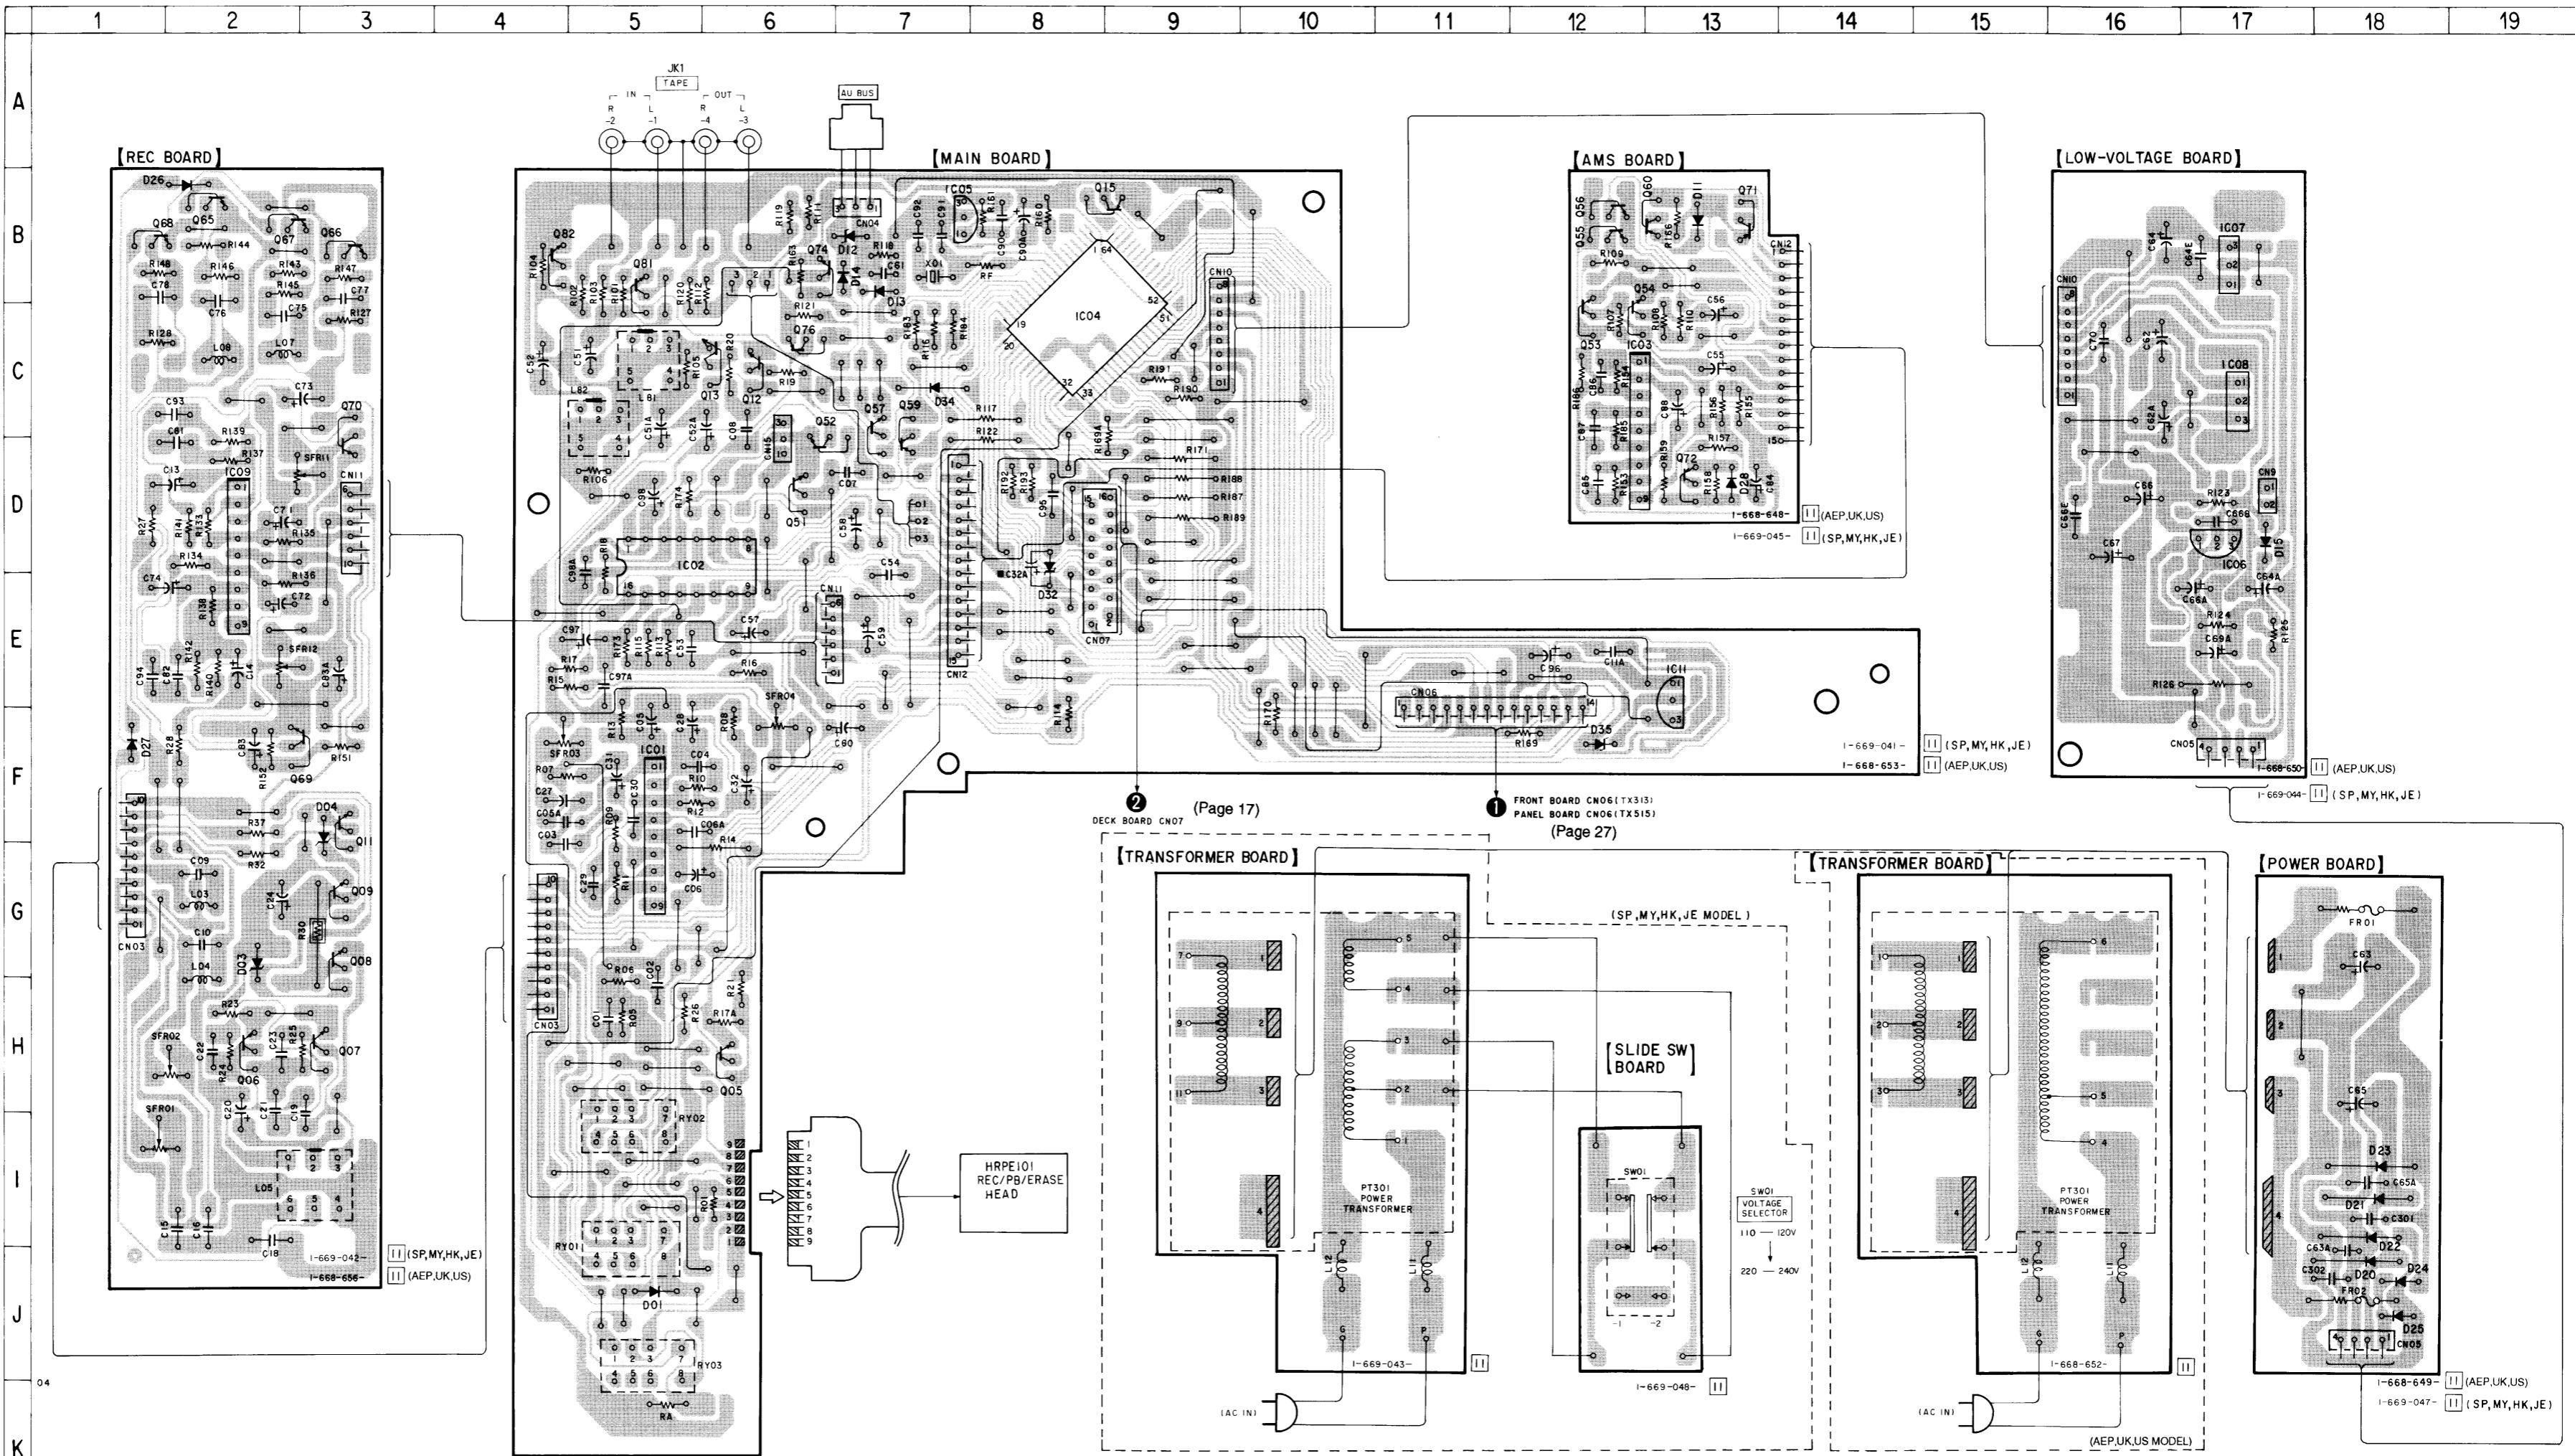

6-5. SCHEMATIC DIAGRAM — MAIN SECTION —

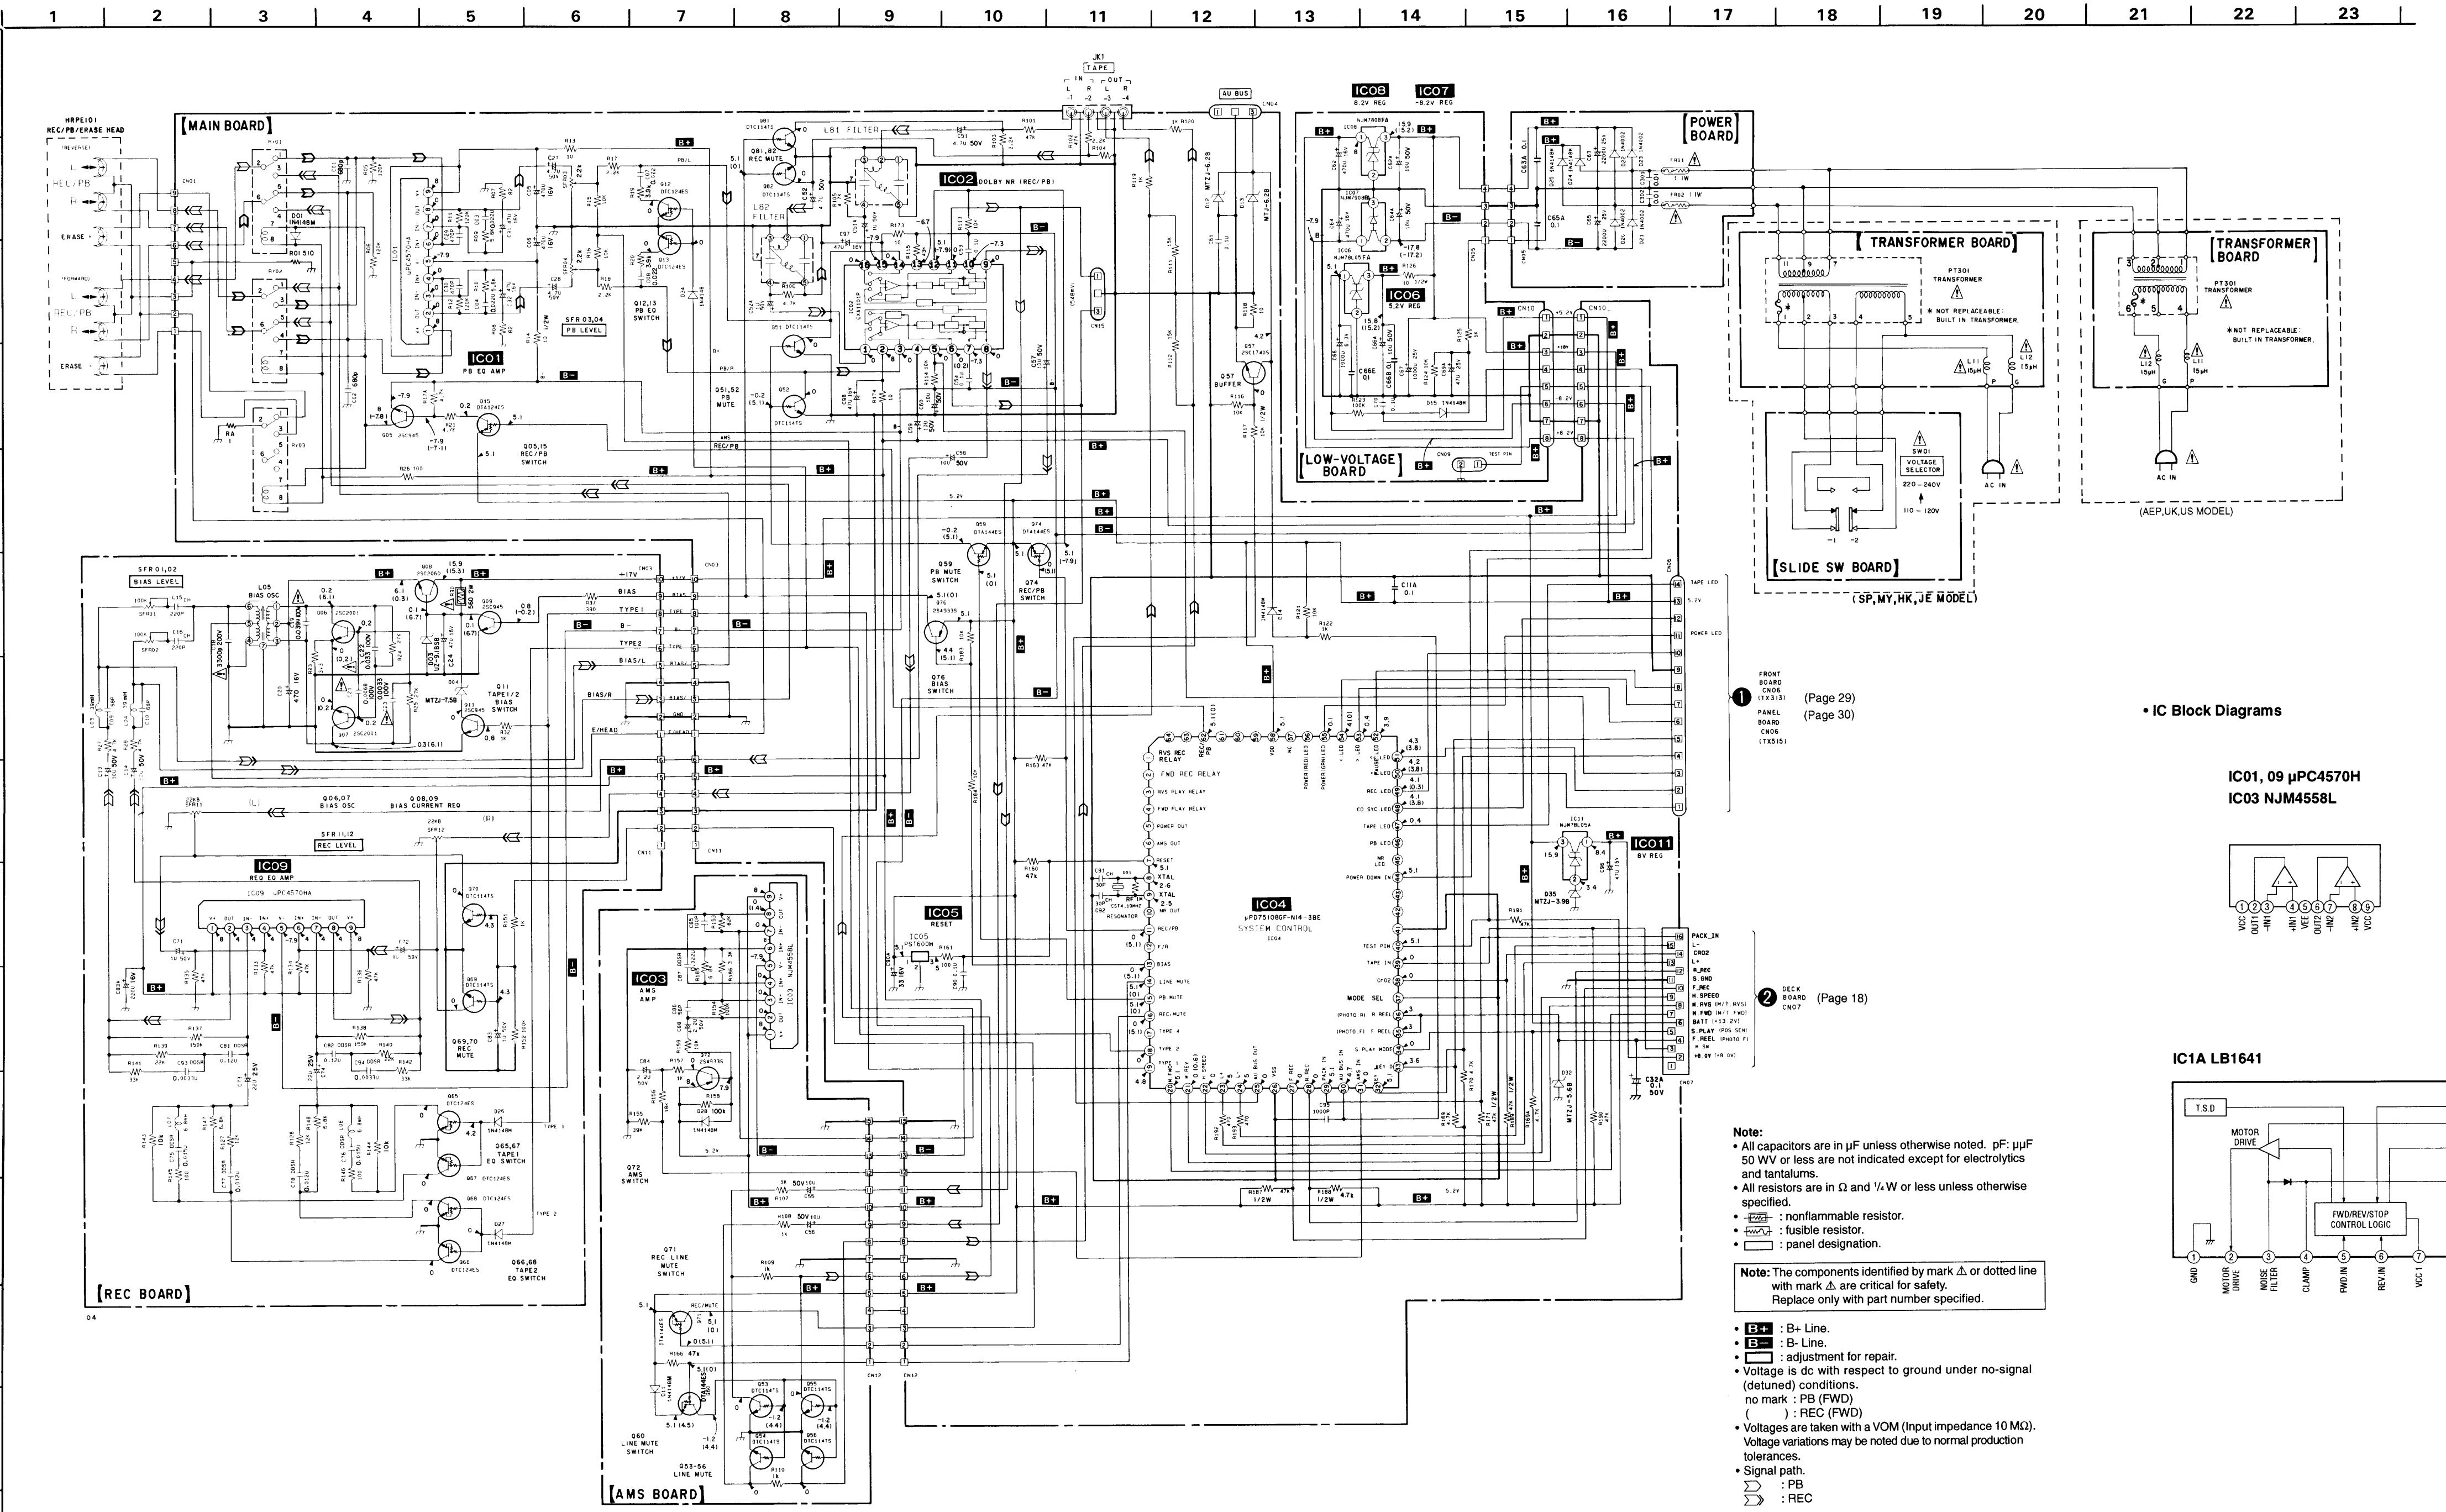


TC-TX313/TX515


6-6. PRINTED WIRING BOARDS — FRONT PANEL SECTION —

• Semiconductor Location	
Ref. No.	Location
D851	B-8
(D851)	G-2
D852	B-8
(D852)	G-3
D853	B-10
(D853)	G-10
D854	C-10
(D854)	C-11
D855	C-11
(D855)	F-10
D856	B-5
(D856)	G-6
D857	B-11
(D857)	G-11
D858	B-10
(D858)	G-10
D859	C-2
(D859)	G-2

() : LED, PANEL board
(TC-TX515)

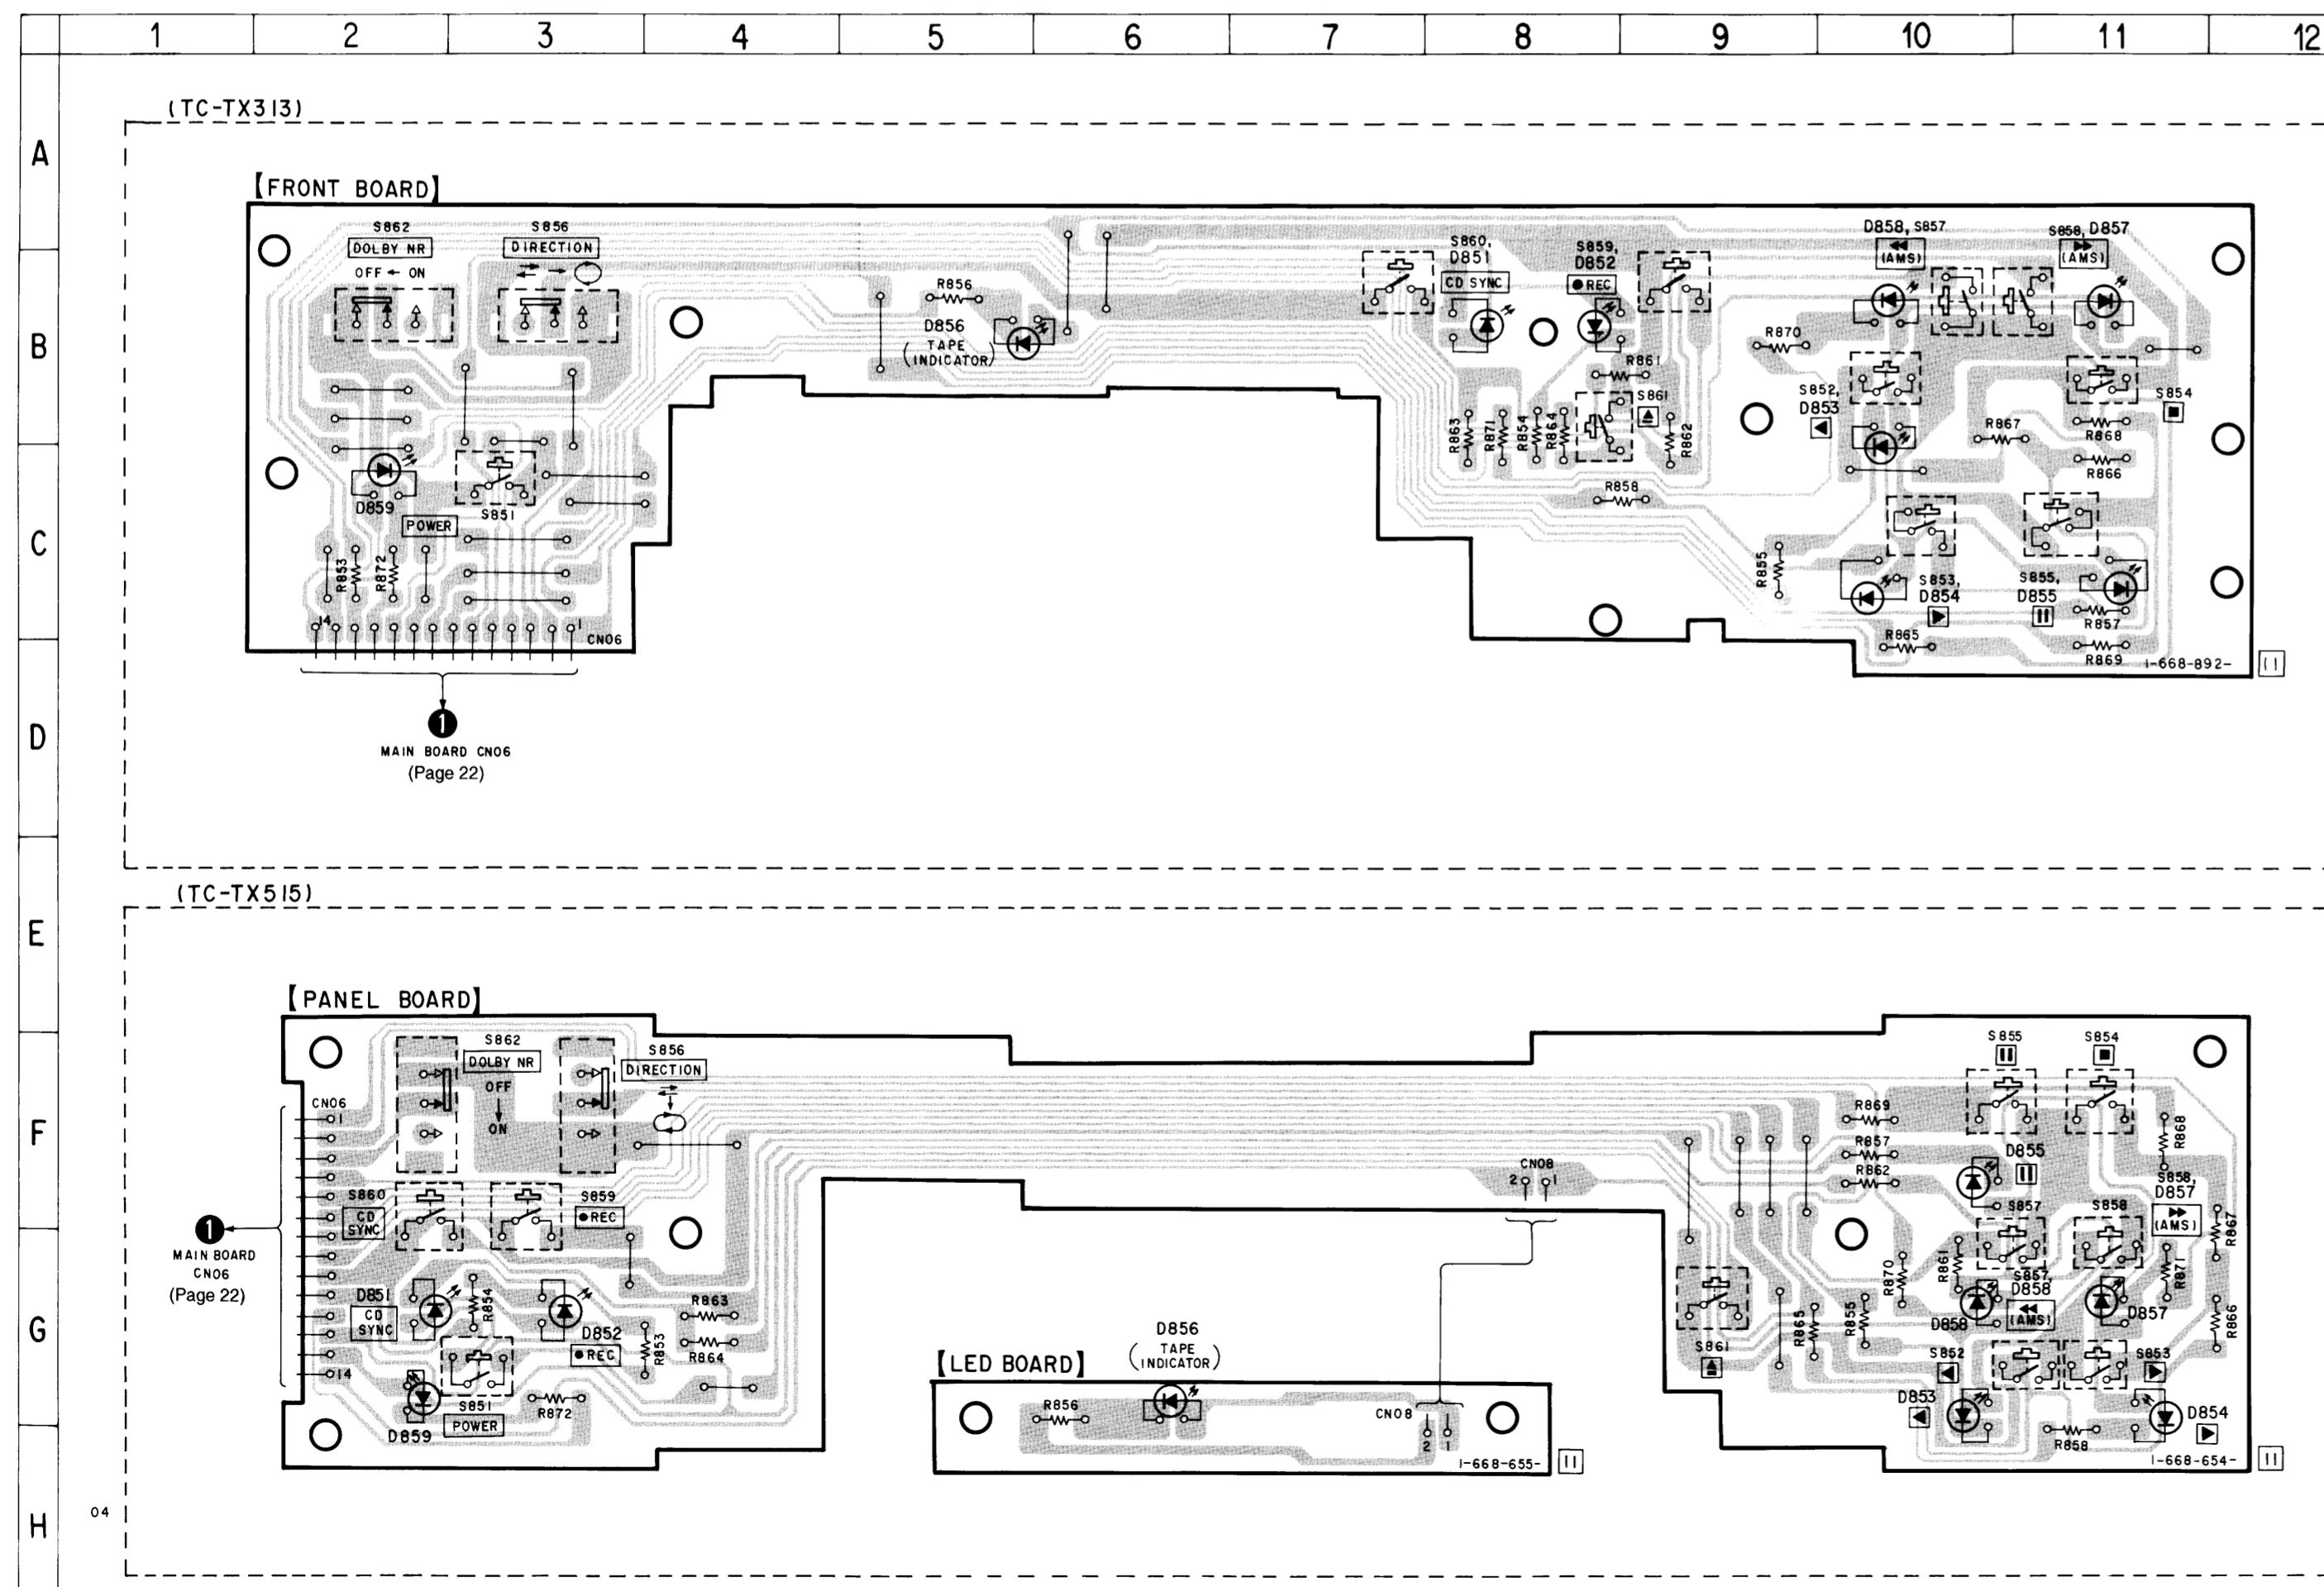

6-7. SCHEMATIC DIAGRAM — FRONT PANEL SECTION —

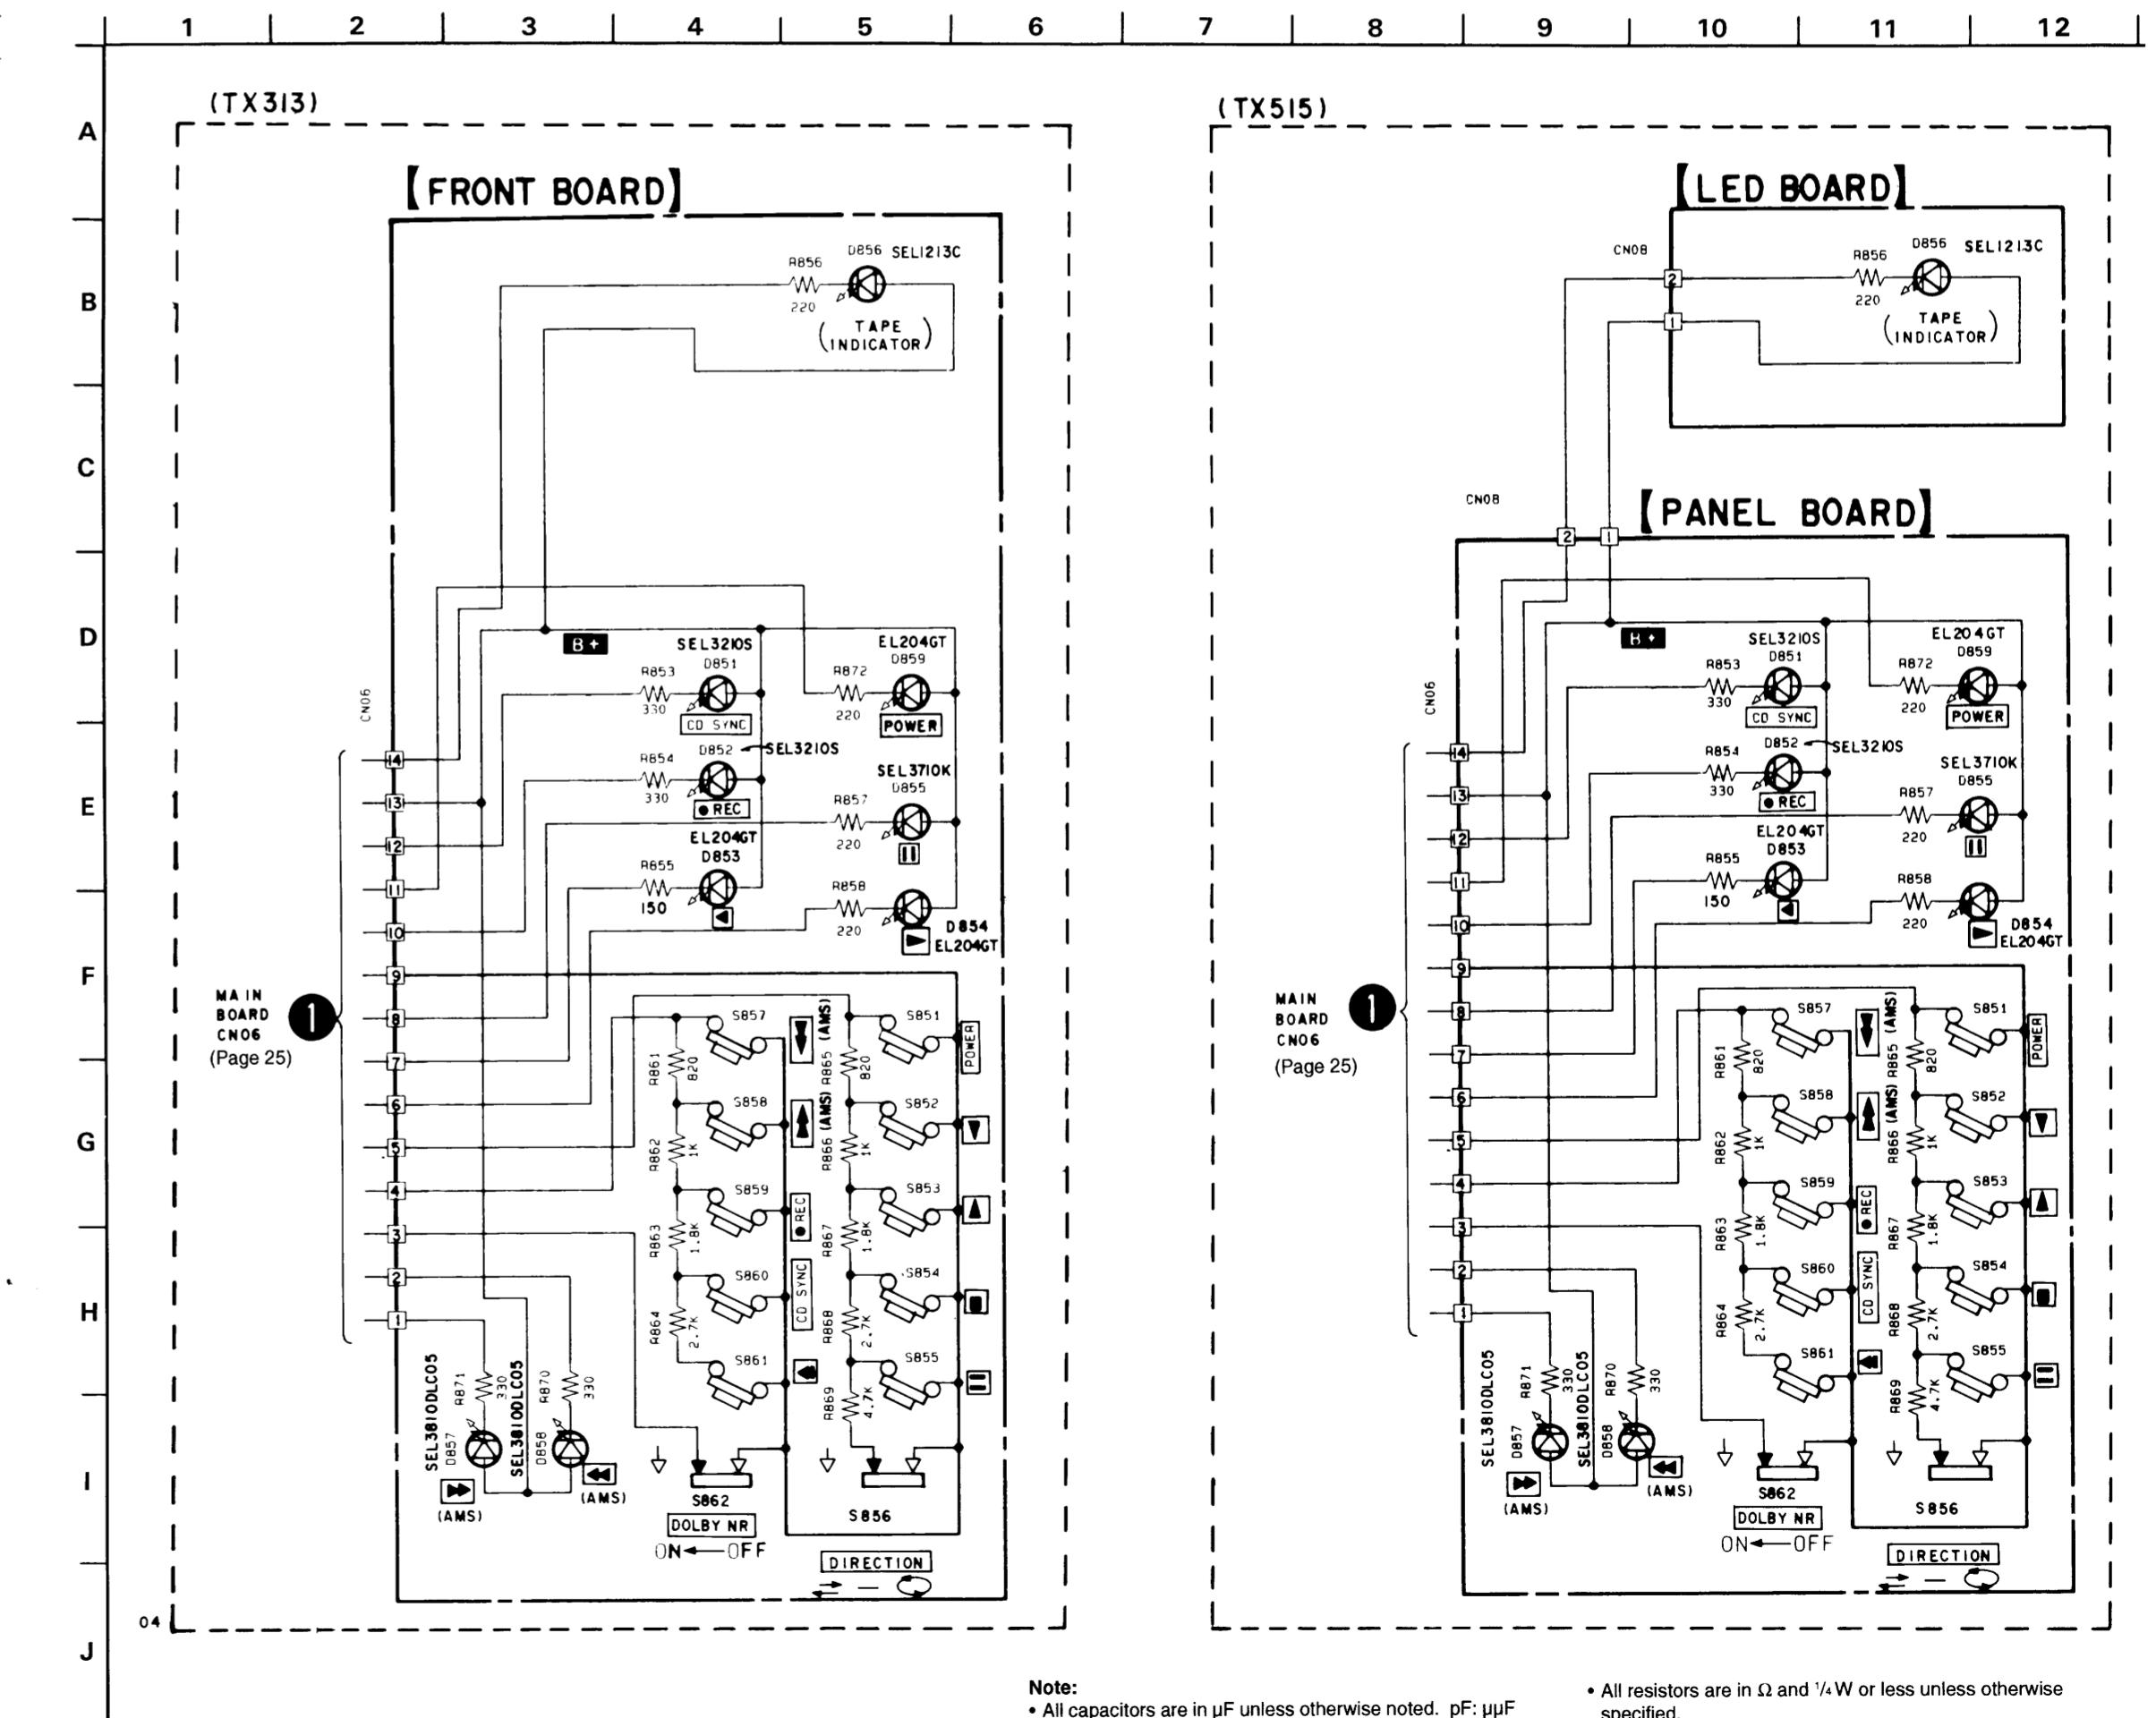

Note:
• All capacitors are in μ F unless otherwise noted. pF: $\mu\mu$ F 50 WV or less are not indicated except for electrolytics and tantalums.
• () : panel designation.
• B+ : B+ Line.

• All resistors are in Ω and $1/4W$ or less unless otherwise specified.
• () : panel designation.
• B+ : B+ Line.

6-8. IC PIN DESCRIPTION

• IC04 μPD75108GF-N14-3BE (SYSTEM CONTROL)

Pin No.	Pin Name	I/O	Pin Description
1	RVS REC RELAY	O	RVS REC relay control output (Not used in this set.)
2	FWD REC RELAY	O	FWD REC relay control output (Not used in this set.)
3	RVS PLAY RELAY	O	RVS PLAY relay control output (Not used in this set.)
4	FWD PLAY RELAY	O	FWD PLAY relay control output (Not used in this set.)
5	POWER OUT	O	Power output (Not used in this set.)
6	AMS OUT	O	AMS gain control output (Not used in this set.)
7	RESET	I	Reset input (L : Reset)
8	XTAL	—	Oscillator circuit (4.19 MHz)
9	XTAL	—	Oscillator circuit (4.19 MHz)
10	NR OUT	O	Noise reduction signal output (Not used in this set.)
11	REC/PB	O	REC/PB select output (H : REC, L : PB)
12	F/R	O	RVS/FWD select output (H : RVS, L : FWD) (Not used in this set.)
13	BIAS	O	Bias oscillation control output (H : ON, L : OFF)
14	LINE MUTE	O	Line mute control output (H : OFF, L : ON)
15	PB.MUTE	O	PB mute control output (H : OFF, L : ON)
16	REC.MUTE	O	REC mute control output (H : OFF, L : ON)
17	TAPE 4	O	REC equalizer select output (H : METAL) (Not used in this set.)
18	TAPE 2	O	REC equalizer select output (H : CrO ₂)
19	TAPE 1	O	REC equalizer select output (H : NORMAL)
20	M.FWD	O	Reel motor forward direction rotation output
21	M.REV	O	Reel motor reverse direction rotation output
22	H.SPEED	O	Tape speed control output
23	L+	O	Loading motor forward direction rotation output
24	L-	O	Loading motor reverse direction rotation output
25	AU BUS OUT	O	AU BUS signal output
26	VSS	—	Ground
27	F.REC	I	Mechanism deck FWD REC PROOF claw detection signal input (H : REC inhibit)
28	R.REC	I	Mechanism deck RVS REC PROOF claw detection signal input (H : REC inhibit)
29	PACK IN	I	Loading detection signal input
30	AU BUS IN	I	AU BUS signal input
31	AMS IN	I	AMS signal input
32	KEY 1	I	Key switch input 1
33	KEY 0	I	Key switch input 0
34	S.PLAY MODE	I	Mechanism deck tape position detection signal input
35	F.REEL	I	Mechanism deck FWD reel sensor detection signal input
36	R.REEL	I	Mechanism deck RVS reel sensor detection signal input
37	MODE SEL	I	Connect to Ground in this set.
38	CrO ₂	I	Mechanism deck CrO ₂ switch input
39	TAPE IN	I	Mechanism deck HALF switch input
40	TEST PIN	I	Input for test mode. (L : Test mode)
41	NC	I	Connect to Ground in this set.
42, 43	NC	O	Not used in this set.
44	POWER DOWN IN	I	Power detection input
45	NR.LED	O	NR LED output (Not used in this set.)
46	PB.LED	O	PLAYBACK LED output (Not used in this set.)
47	TAPE.LED	O	Tape indicator LED output
48	CD SYC.LED	O	CD SYNC LED output
49	REC.LED	O	REC LED output
50	>>.LED	O	▶ LED output
51	<<.LED	O	◀ LED output
52	PAUSE.LED	O	PAUSE LED output

Pin No.	Pin Name	I/O	Pin Description
53	>.LED	O	► LED output
54	<.LED	O	◀ LED output
55	POWER(GRN)LED	O	POWER LED output
56	POWER(RED)LED	O	POWER LED output (Not used in this set.)
57	NC	—	Not used in this set.
58	VDD	—	Power supply pin
59 – 61	NC	—	Not used in this set.
62	REC/PB	O	REC/PB select output (H : REC, L : PB)
63, 64	NC	—	Not used in this set.

SECTION 7 EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Abbreviation


SP	: Singapore model
MY	: Malaysia model
HK	: Hong Kong model
JE	: Tourist model

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts Example :
 KNOB, BALANCE (WHITE) ... (RED)
 ↑ ↑
 Parts Color Cabinet's Color

- Accessories and packing materials and hardware (# mark) list are given in the last of this parts list.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.


7-1. TOP COVER SECTION

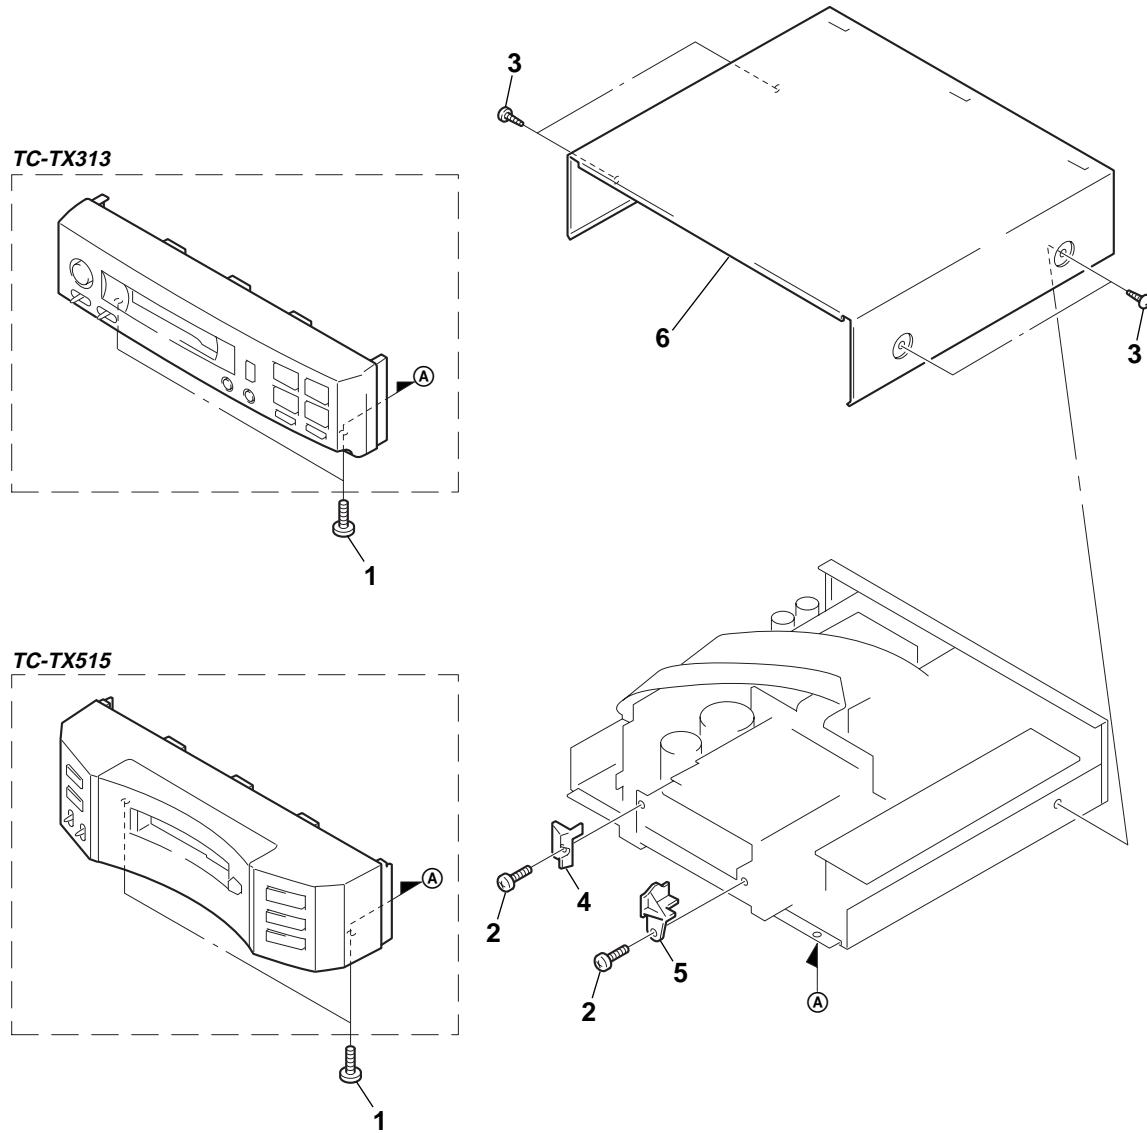

Ref. No.	Part No.	Description
1	7-685-872-09	SCREW +BVTT 3X8 (S)
2	4-951-620-01	SCREW (2.6X8), +BVTP
3	3-363-099-51	SCREW (CASE 3 TP2)
* 4	3-020-436-01	TAPE GUIDE (L)


Remark	Ref. No.	Part No.	Description	Remark
	* 5	3-020-437-01	TAPE GUIDE (R)	
	* 6	3-020-400-01	TOP COVER (TX515)	
	* 6	3-021-541-01	TOP COVER (TX313)	

**7-2. FRONT PANEL SECTION
(TC-TX313)**

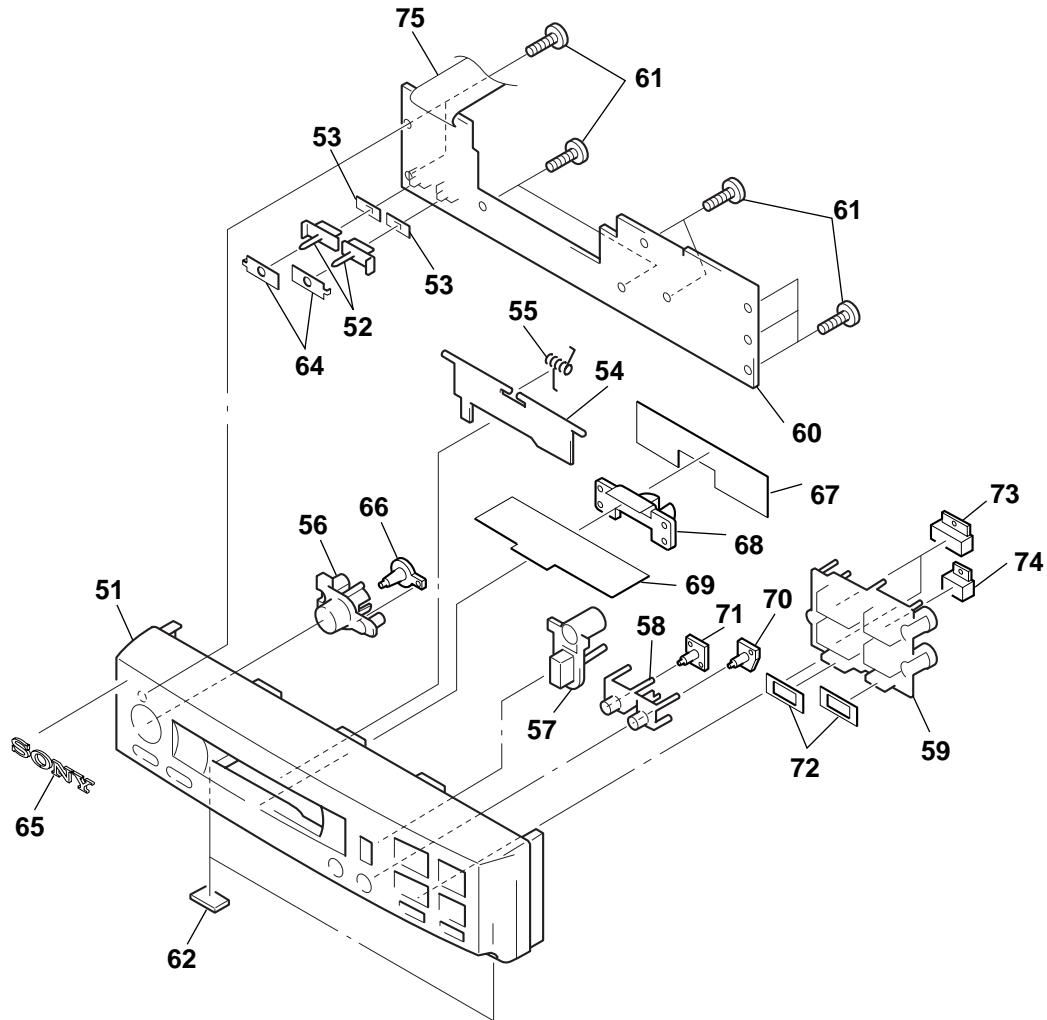


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-021-944-01	FRONT PANEL		64	3-021-565-01	KNOB PAD	
52	3-021-557-01	DOLBY KNOB		65	4-962-708-01	EMBLEM (4-A), SONY	
53	3-020-421-01	SWITCH PAD		66	3-021-560-01	POWER LENS	
54	3-021-555-01	DOOR CASSETTE		67	3-021-572-01	EVA SHEET (A)	
55	3-020-419-01	DOOR SPRING		68	3-021-567-01	TAPE INDICATOR	
56	3-021-556-01	POWER BUTTON		69	3-021-571-01	PVC SHEET (B)	
57	3-021-559-01	EJECT BUTTON		70	3-021-569-01	REC.LENS	
58	3-021-570-01	REC.BUTTON		71	3-021-568-01	CD SYNCHRO LENS	
59	3-021-558-01	PLAY BUTTON		72	3-021-566-01	PVC SHEET (A)	
* 60	A-2007-757-A	FRONT BOARD, COMPLETE		73	3-021-562-01	PLAY BUTTON LENS (B)	
61	4-951-620-01	SCREW (2.6X8), +BVTP		74	3-021-561-01	PLAY BUTTON LENS (A)	
62	3-020-401-01	FOOT (FRONT)		75	3-022-176-01	BRACKET (FLEXIBLE D)	
63	3-021-564-01	DIRECTION KNOB					

**7-3. FRONT PANEL SECTION
(TC-TX515)**

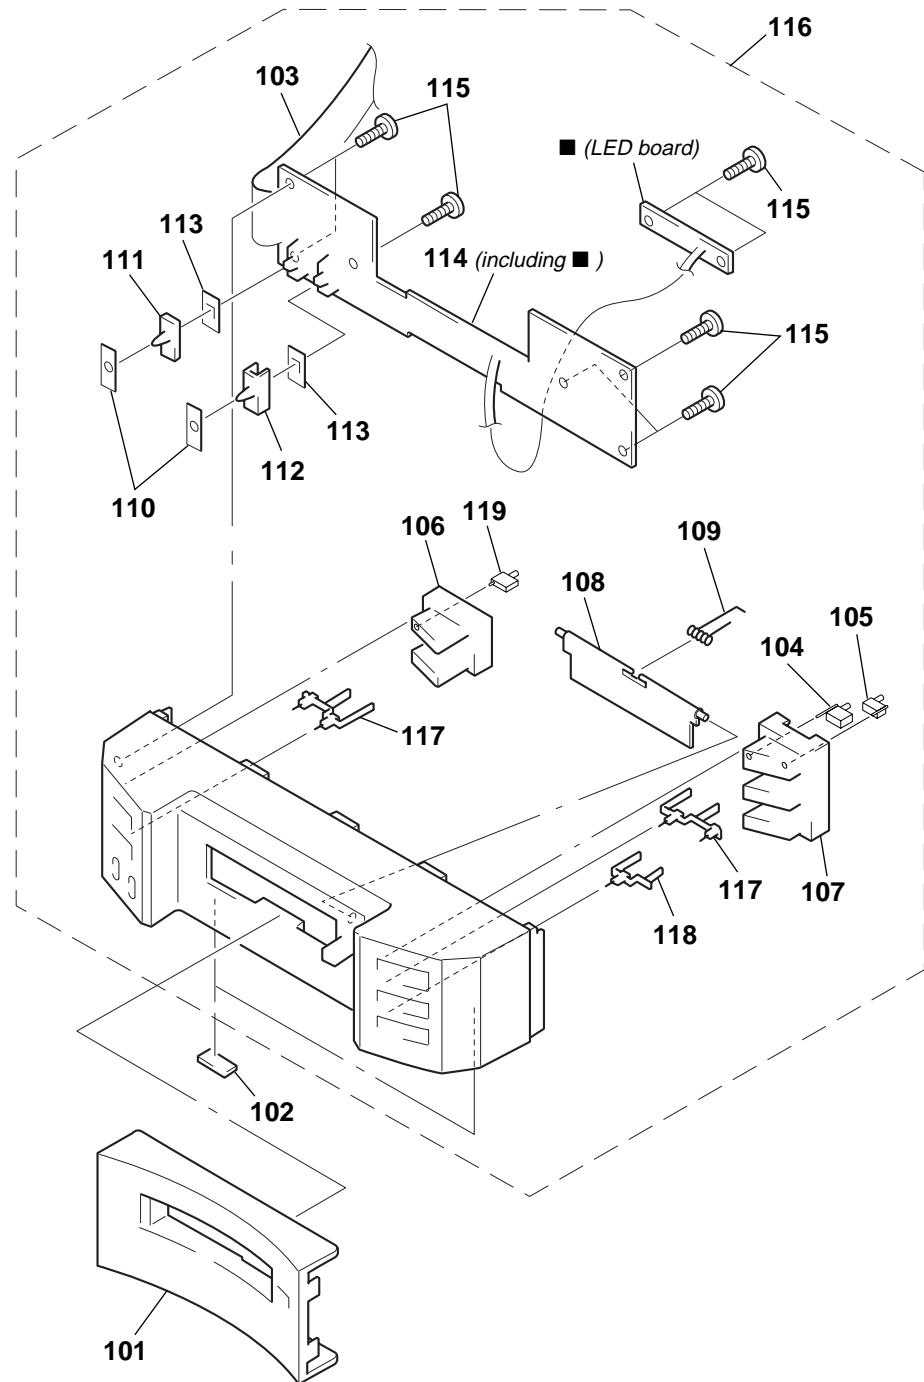


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	3-020-398-01	FRONT WINDOW		111	3-020-410-01	DOLBY KNOB	
102	3-020-401-01	FOOT (FRONT)		112	3-020-418-01	DIRECTION KNOB	
103	3-020-963-01	BRACKET (FLEXIBLE C)		113	3-020-421-01	SWITCH PAD	
104	3-020-413-01	LENS (A)		*114	A-2056-697-A	PANEL BOARD, COMPLETE	
105	3-020-414-01	LENS (B)		115	4-951-620-01	SCREW (2.6X8), +BVTP	
106	3-020-409-01	POWER BUTTON		116	A-2004-639-A	PANEL ASSY, FRONT	
107	3-020-411-01	PLAY BUTTON		117	3-020-415-01	LENS (C)	
108	3-020-408-01	DOOR CASSETTE		118	3-020-416-01	LENS (D)	
109	3-020-419-01	DOOR SPRING		119	3-020-417-01	POWER INDICATOR	
110	3-020-422-01	KNOB PAD					

7-4. CHASSIS SECTION

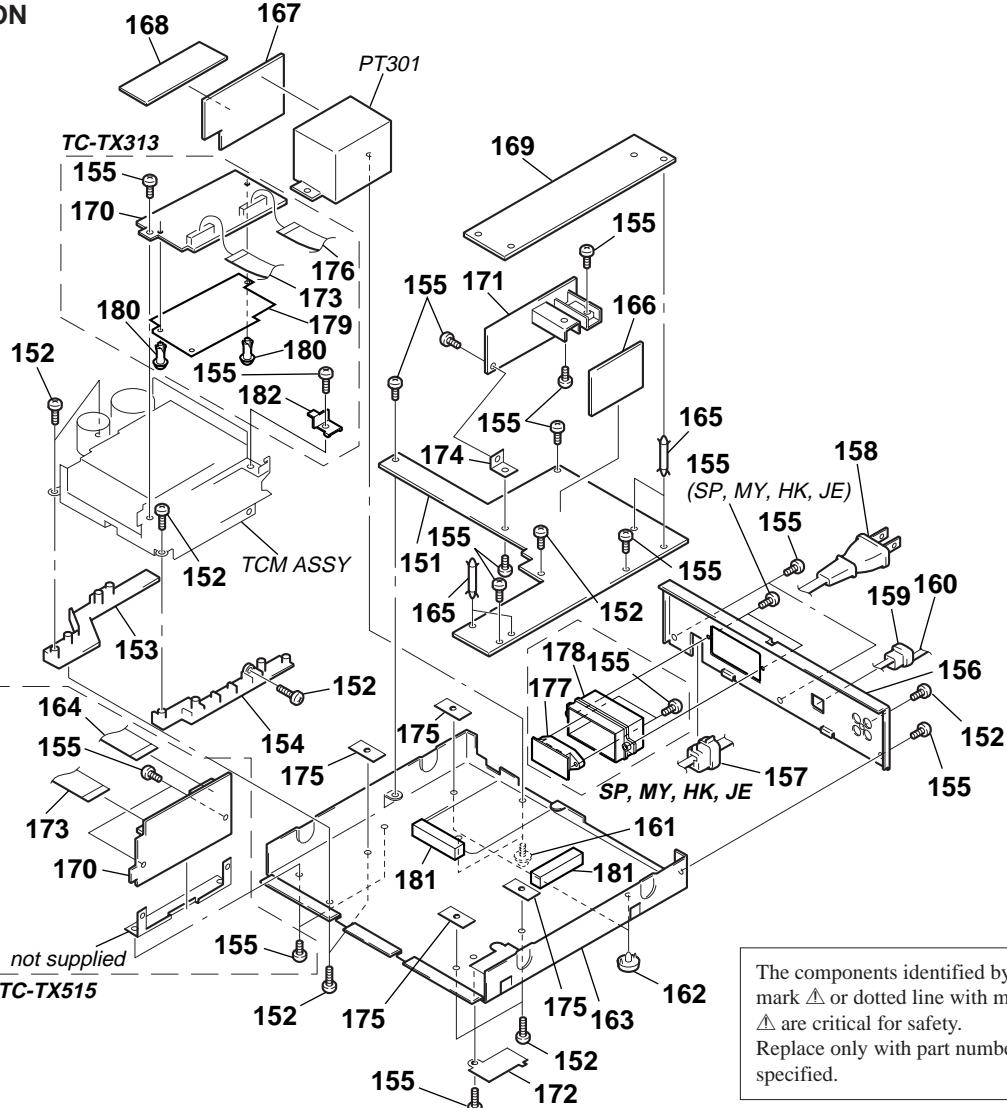

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 151	A-2007-767-A	MAIN BOARD, COMPLETE (SP,MY,HK,JE)		* 167	1-668-652-11	TRANSFORMER BOARD (AEP,UK,US)	
* 151	A-2056-691-A	MAIN BOARD, COMPLETE (AEP,UK,US)		* 167	1-669-043-11	TRANSFORMER BOARD (SP,MY,HK,JE)	
152	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S		* 168	1-668-649-11	POWER BOARD (AEP,UK,US)	
* 153	3-020-425-01	DECK CHASSIS (L)		* 168	1-669-047-11	POWER BOARD (SP,MY,HK,JE)	
* 154	3-020-434-01	DECK CHASSIS (R)		* 169	A-2007-768-A	REC BOARD, COMPLETE (SP,MY,HK,JE)	
155	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S		* 169	A-2056-692-A	REC BOARD, COMPLETE (AEP,UK,US)	
* 156	3-021-912-01	BACK PLATE (TX515:AEP,UK)		* 170	1-668-651-11	DECK BOARD (AEP,UK,US)	
* 156	3-021-924-01	BACK PLATE (TX515:SP,MY,HK,JE)		* 170	1-669-046-11	DECK BOARD (SP,MY,HK,JE)	
* 156	3-021-943-01	BACK PLATE (TX313:AEP,UK)		* 171	1-668-650-11	LOW-VOLTAGE BOARD (AEP,UK,US)	
* 156	3-021-968-01	BACK PLATE (TX313:SP,MY,HK)		* 171	1-669-044-11	LOW-VOLTAGE BOARD (SP,MY,HK,JE)	
* 156	3-024-252-01	BACK PLATE (TX515:US)		* 172	3-020-439-01	BOTTOM COVER	
157	3-020-432-01	CORD STOPPER		173	3-020-962-01	BRACKET (FLEXIBLE B)	
\triangle 158	3-021-914-01	BRACKET (AC CORD) (EXCEPT UK,US)		* 174	3-020-429-01	BACK PLATE BRACKET (A)	
\triangle 158	3-021-917-01	BRACKET (AC CORD) (UK)		175	3-020-438-01	HEMELON WASHER	
\triangle 158	3-021-977-01	BRACKET (AC CORD) (US)		176	3-021-552-01	BRACKET (FLEXIBLE A) (TX313)	
159	3-020-426-01	CORD BUSHING		* 177	1-669-048-11	SLIDE SW BOARD (SP,MY,HK,JE)	
160	3-020-433-01	BRACKET (3P WIRE) (AU BUS)		178	3-021-922-01	SWITCH COVER (SP,MY,HK,JE)	
161	3-020-440-01	BIND TYPE (A)		179	3-021-548-01	DECK PC BOARD SHEET (TX313)	
162	3-020-399-01	FOOT (REAR)		180	3-021-550-01	P-RIVET (TX313)	
* 163	3-020-428-01	BOTTOM PLATE		181	3-021-549-01	CUSHION (TX313)	
164	3-020-961-01	BRACKET (FLEXIBLE A) (TX515)		182	3-021-545-01	DECK BRACKET (TX313)	
* 165	3-020-435-01	PC BOARD HOLDER		\triangle PT301	3-021-913-01	BRACKET (POWER TRANS) (AEP,UK)	
* 166	1-668-648-11	AMS BOARD (AEP,UK,US)		\triangle PT301	3-021-925-01	BRACKET (POWER TRANS) (SP,MY,HK,JE)	
* 166	1-669-045-11	AMS BOARD (SP,MY,HK,JE)		\triangle PT301	3-021-976-01	BRACKET (POWER TRANS) (US)	

7-5. TCM ASSY SECTION

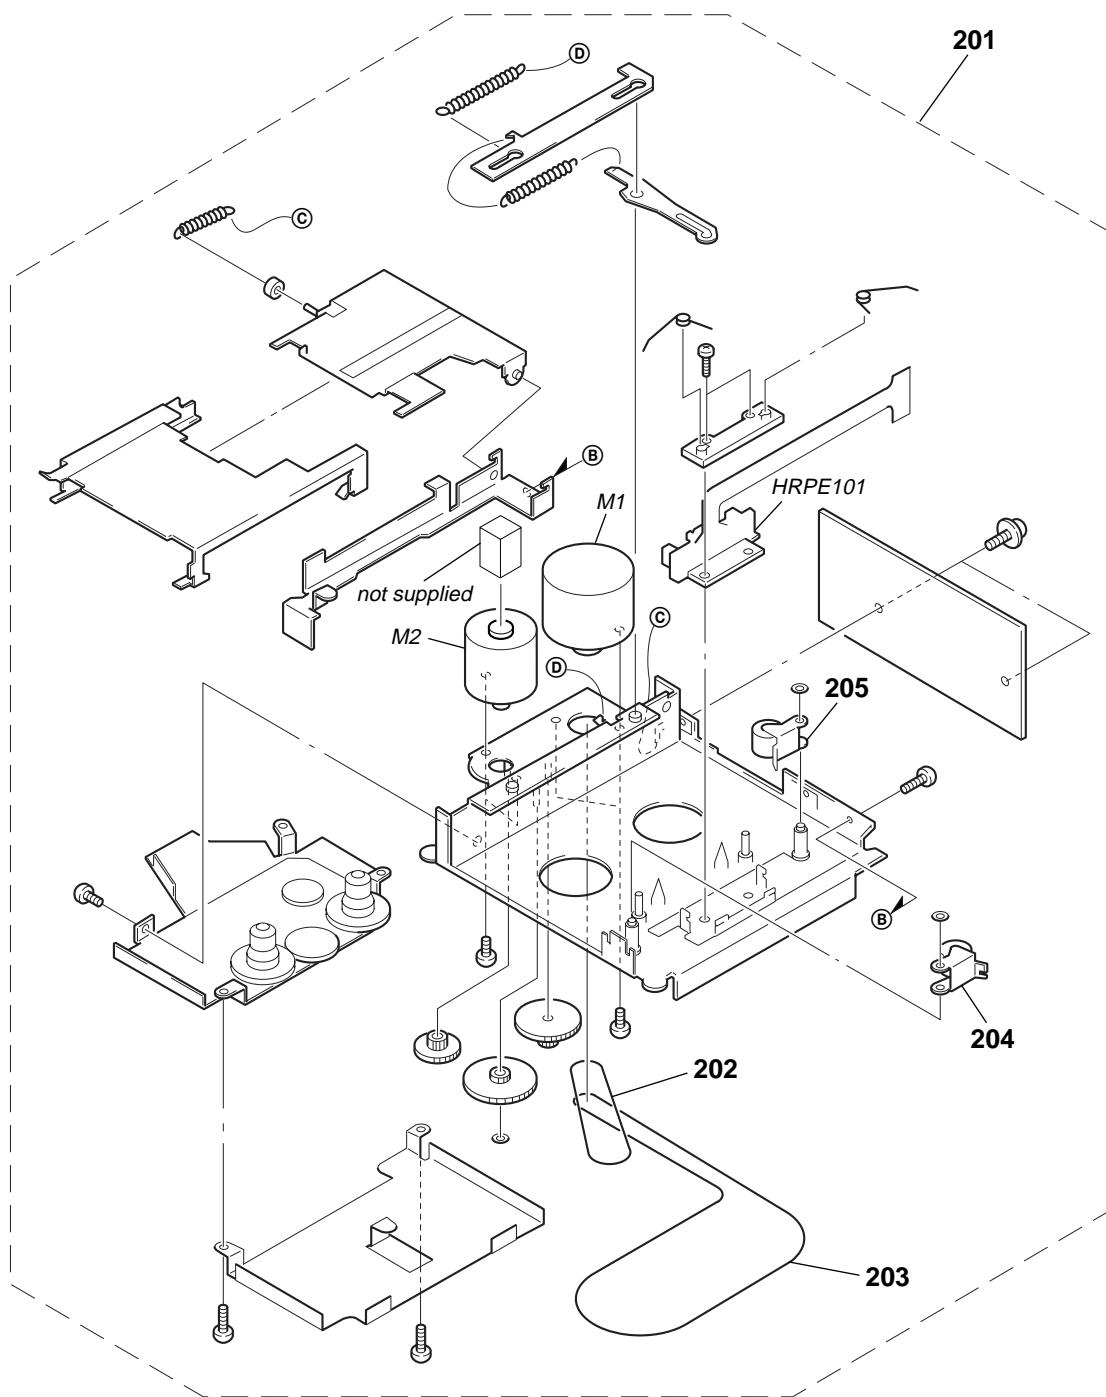

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 201	A-2004-641-A	TCM ASSY		205	3-020-450-01	PINCH ROLLER ASSY (R)	
202	3-020-444-01	BELT (A)		HRPE101	3-020-446-01	BRACKET (HEAD UNIT)	
203	3-020-445-01	BELT (B)		M1	3-020-447-01	MOTOR (A) ASSY (REEL/CAPSTAN)	
204	3-020-443-01	PINCH ROLLER ASSY (F)		M2	3-020-448-01	MOTOR (B) ASSY (LOADING)	

SECTION 8

ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

• Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• SEMICONDUCTORS

In each case, u : μ , for example:
uA.. : μ A.. uPA.. : μ PA..
uPB.. : μ PB.. uPC.. : μ PC.. uPD.. : μ PD..

• CAPACITORS

uF : μ F

• COILS

uH : μ H

The components identified by mark \triangle or dotted line with mark. \triangle are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

• Abbreviation

SP : Singapore model

MY : Malaysia model

HK : Hong Kong model

JE : Tourist model

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark						
*	1-668-648-11	AMS BOARD (AEP,UK,US)				*	1-668-651-11	DECK BOARD (AEP,UK,US)									
*	1-669-045-11	AMS BOARD (SP,MY,HK,JE)			*****	*	1-669-046-11	DECK BOARD (SP,MY,HK,JE)			*****						
< CAPACITOR >																	
C55	1-124-907-11	ELECT	10uF	20%	50V		3-020-961-01	BRACKET (FLEXIBLE A) (TX515)									
C56	1-124-907-11	ELECT	10uF	20%	50V		3-020-962-01	BRACKET (FLEXIBLE B)									
C84	1-126-961-11	ELECT	2.2uF	20%	50V		3-021-552-01	BRACKET (FLEXIBLE A) (TX313)									
C85	1-162-282-31	CERAMIC	100PF	10%	50V	< CAPACITOR >											
C86	1-162-217-31	CERAMIC	56PF	5%	50V	C1A	1-126-963-11	ELECT	4.7uF	20%	50V						
C87	1-101-005-00	CERAMIC	22000PF		50V	C1B	1-164-159-11	CERAMIC	0.1uF		50V						
C88	1-126-961-11	ELECT	2.2uF	20%	50V	C1C	1-164-159-11	CERAMIC	0.1uF		50V						
< CONNECTOR >																	
< DIODE >																	
D11	8-719-901-33	DIODE	1SS133			*	CN07	1-568-835-11	SOCKET, CONNECTOR 16P								
D28	8-719-901-33	DIODE	1SS133			CN14	1-580-123-11	SOCKET, CONNECTOR 16P									
< DIODE >																	
< IC >																	
IC03	8-759-505-55	IC	NJM4558L			D1A	8-719-901-33	DIODE	1SS133								
< TRANSISTOR >																	
Q53	8-729-029-68	TRANSISTOR	DTC114TSA			D1B	8-719-901-33	DIODE	1SS133								
Q54	8-729-029-68	TRANSISTOR	DTC114TSA			D1C	8-719-921-80	DIODE	MTZJ-11B								
Q55	8-729-029-68	TRANSISTOR	DTC114TSA			D1D	8-719-901-33	DIODE	1SS133								
Q56	8-729-029-68	TRANSISTOR	DTC114TSA			D1E	8-719-901-33	DIODE	1SS133								
Q60	8-729-900-65	TRANSISTOR	DTA144ES			D1F	8-719-901-33	DIODE	1SS133								
Q71	8-729-900-65	TRANSISTOR	DTA144ES			D1G	8-719-901-33	DIODE	1SS133								
Q72	8-729-119-76	TRANSISTOR	2SA1175-HFE			D1H	8-719-901-33	DIODE	1SS133								
< RESISTOR >																	
R107	1-249-417-11	CARBON	1K	5%	1/4W	IC1A	8-759-822-09	IC	LB1641								
R108	1-249-417-11	CARBON	1K	5%	1/4W	< TRANSISTOR >											
R109	1-249-417-11	CARBON	1K	5%	1/4W	Q1A	8-729-188-23	TRANSISTOR	2SD882-P								
R110	1-249-417-11	CARBON	1K	5%	1/4W	Q1B	8-729-029-86	TRANSISTOR	DTC124ESA								
R153	1-249-440-11	CARBON	82K	5%	1/4W	Q1C	8-729-029-86	TRANSISTOR	DTC124ESA								
R154	1-247-879-11	CARBON	100K	5%	1/4W	Q1D	8-729-195-23	TRANSISTOR	2SA952								
R155	1-249-436-11	CARBON	39K	5%	1/4W	Q1E	8-729-195-23	TRANSISTOR	2SA952								
R156	1-249-432-11	CARBON	18K	5%	1/4W	Q1F	8-729-029-86	TRANSISTOR	DTC124ESA								
R157	1-249-417-11	CARBON	1K	5%	1/4W	Q1G	8-729-029-86	TRANSISTOR	DTC124ESA								
R158	1-247-879-11	CARBON	100K	5%	1/4W	Q1H	8-729-142-46	TRANSISTOR	2SC2001-LK								
R159	1-247-855-11	CARBON	10K	5%	1/4W	Q1J	8-729-142-46	TRANSISTOR	2SC2001-LK								
R166	1-247-871-11	CARBON	47K	5%	1/4W	Q1K	8-729-029-94	TRANSISTOR	DTC143TSA								
R185	1-249-427-11	CARBON	6.8K	5%	1/4W	Q1L	8-729-422-57	TRANSISTOR	UN4111								
R186	1-247-843-11	CARBON	3.3K	5%	1/4W	Q1M	8-729-029-86	TRANSISTOR	DTC124ESA								

DECK	FRONT	LOW-VOLTAGE
-------------	--------------	--------------------

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark											
< RESISTOR >																				
R1A	1-247-825-11	CARBON	560	5%	1/4W	S852	1-571-760-11	SWITCH, KEY BOARD (◀)												
R1B	1-247-879-11	CARBON	100K	5%	1/4W	S853	1-571-760-11	SWITCH, KEY BOARD (▶)												
R1C	1-247-871-11	CARBON	47K	5%	1/4W	S854	1-571-760-11	SWITCH, KEY BOARD (■)												
R1D	1-249-417-11	CARBON	1K	5%	1/4W	S855	1-571-760-11	SWITCH, KEY BOARD (II)												
R1E	1-249-417-11	CARBON	1K	5%	1/4W	S856	1-771-304-11	SWITCH, SLIDE (DIRECTION)												
R1F	1-249-417-11	CARBON	1K	5%	1/4W	S857	1-571-760-11	SWITCH, KEY BOARD (◀ (AMS))												
R1G	1-249-417-11	CARBON	1K	5%	1/4W	S858	1-571-760-11	SWITCH, KEY BOARD (▶ (AMS))												
R1H	1-249-417-11	CARBON	1K	5%	1/4W	S859	1-571-760-11	SWITCH, KEY BOARD (● REC)												
R1J	1-249-417-11	CARBON	1K	5%	1/4W	S860	1-571-760-11	SWITCH, KEY BOARD (CD SYNC)												
R1K	1-247-847-11	CARBON	4.7K	5%	1/4W	S861	1-571-760-11	SWITCH, KEY BOARD (▲)												

*	A-2007-757-A	FRONT BOARD, COMPLETE (TX313)				*	1-668-650-11	LOW-VOLTAGE BOARD (AEP,UK,US)												
*	3-021-575-01	LED COVER (A)				*	1-669-044-11	LOW-VOLTAGE BOARD (SP,MY,HK,JE)												
*	3-021-576-01	LED COVER (B)				*****														
*	3-021-577-01	LED COVER (C)				< CAPACITOR >														
	3-022-176-01	BRACKET (FLEXIBLE D)				C62	1-126-941-11	ELECT	470uF	20%	16V									
< DIODE >												C62A	1-124-907-11	ELECT	10uF	20%	50V			
D851	8-719-028-88	LED SEL3210S-D-LC05 (CD SYNC)				C64	1-126-941-11	ELECT	470uF	20%	16V									
D852	8-719-028-88	LED SEL3210S-D-LC05 (● REC)				C64A	1-124-907-11	ELECT	10uF	20%	50V									
D853	8-719-047-69	LED EL204GT (◀)				C66	1-124-471-00	ELECT	1000uF	20%	6.3V									
D854	8-719-047-69	LED EL204GT (▶)				C66A	1-124-907-11	ELECT	10uF	20%	50V									
D855	8-719-028-87	LED SEL3710K-D-LC05 (II)				C66B	1-162-851-11	CERAMIC	0.1uF	10%	16V									
D856	8-719-300-79	LED SEL1213C (TAPE INDICATOR)				C66E	1-162-851-11	CERAMIC	0.1uF	10%	16V									
D857	8-719-023-78	LED SEL3810DLC05 (▶ (AMS))				C67	1-126-942-61	ELECT	1000uF	20%	25V									
D858	8-719-023-78	LED SEL3810DLC05 (◀ (AMS))				C69A	1-104-664-11	ELECT	47uF	20%	25V									
D859	8-719-047-69	LED EL204GT (POWER)				C70	1-164-159-11	CERAMIC	0.1uF				50V				< CONNECTOR >			
< RESISTOR >												CN10	1-784-406-11	CONNENTOR, BOARD TO BOARD 8P				< DIODE >		
R853	1-249-411-11	CARBON	330	5%	1/4W	D15	8-719-901-33	DIODE 1SS133												
R854	1-249-411-11	CARBON	330	5%	1/4W	< IC >												< RESISTOR >		
R855	1-249-407-11	CARBON	150	5%	1/4W	IC06	8-759-708-05	IC NJM78L05A												
R856	1-249-409-11	CARBON	220	5%	1/4W	IC07	8-759-990-36	IC RC7908FA												
R857	1-249-409-11	CARBON	220	5%	1/4W	IC08	8-759-982-07	IC RC7808FA												
R858	1-249-409-11	CARBON	220	5%	1/4W	< RESISTOR >												< SWITCH >		
R861	1-249-416-11	CARBON	820	5%	1/4W	R123	1-247-879-11	CARBON	100K	5%	1/4W									
R862	1-249-417-11	CARBON	1K	5%	1/4W	R124	1-247-855-11	CARBON	10K	5%	1/4W									
R863	1-249-420-11	CARBON	1.8K	5%	1/4W	R125	1-249-417-11	CARBON	1K	5%	1/4W									
R864	1-247-841-11	CARBON	2.7K	5%	1/4W	R126	1-260-076-11	CARBON	10	5%	1/2W									
R865	1-249-416-11	CARBON	820	5%	1/4W	*****												< SWITCH >		
R866	1-249-417-11	CARBON	1K	5%	1/4W	S851	1-571-760-11	SWITCH, KEY BOARD (POWER)												
R867	1-249-420-11	CARBON	1.8K	5%	1/4W															
R868	1-247-841-11	CARBON	2.7K	5%	1/4W															
R869	1-247-847-11	CARBON	4.7K	5%	1/4W															
R870	1-249-411-11	CARBON	330	5%	1/4W															
R871	1-249-411-11	CARBON	330	5%	1/4W															
R872	1-249-409-11	CARBON	220	5%	1/4W															

MAIN

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remark</u>			
*	A-2007-767-A	MAIN BOARD, COMPLETE (SP,MY,HK,JE)				D34	8-719-055-76	DIODE	1N4148					
*	A-2056-691-A	MAIN BOARD, COMPLETE (AEP,UK,US)			*****	D35	8-719-109-72	DIODE	RD3.9ES-B2					
< IC >														
3-020-433-01 BRACKET (3P WIRE) (AU BUS)														
< CAPACITOR >														
C01	1-162-292-31	CERAMIC	680PF	10%	50V	IC01	8-759-112-93	IC	uPC4570HA-1					
C02	1-162-292-31	CERAMIC	680PF	10%	50V	IC02	8-752-057-19	IC	CXA1101P					
C03	1-136-157-00	FILM	0.022uF	5%	50V	IC04	8-759-497-87	IC	uPD75108GF-N14-3BE					
C04	1-136-157-00	FILM	0.022uF	5%	50V	IC05	8-759-165-85	IC	PST600H-T					
C05	1-126-941-11	ELECT	470uF	20%	16V	IC11	8-759-708-05	IC	NJM78L05A					
< JACK >														
C06	1-126-941-11	ELECT	470uF	20%	16V	JK1	1-770-614-21	JACK, PIN 4P (TAPE IN/OUT)						
C07	1-136-157-00	FILM	0.022uF	5%	50V	< FILTER >								
C08	1-136-157-00	FILM	0.022uF	5%	50V	L81	1-234-023-11	FILTER, MPX						
C11A	1-161-772-11	CERAMIC	0.1uF	10%	25V	L82	1-234-023-11	FILTER, MPX						
C27	1-126-963-11	ELECT	4.7uF	20%	50V	< TRANSISTOR >								
C28	1-126-963-11	ELECT	4.7uF	20%	50V	Q05	8-729-194-57	TRANSISTOR	2SC945-P					
C29	1-162-290-31	CERAMIC	470PF	10%	50V	Q12	8-729-029-86	TRANSISTOR	DTC124ESA					
C30	1-162-290-31	CERAMIC	470PF	10%	50V	Q13	8-729-029-86	TRANSISTOR	DTC124ESA					
C31	1-104-664-11	ELECT	47uF	20%	16V	Q15	8-729-900-63	TRANSISTOR	DTA124ES					
C32	1-104-664-11	ELECT	47uF	20%	16V	Q51	8-729-029-68	TRANSISTOR	DTC114TSA					
C32A	1-126-956-11	ELECT	0.1uF	20%	50V	Q52	8-729-029-68	TRANSISTOR	DTC114TSA					
C51	1-126-963-11	ELECT	4.7uF	20%	50V	Q57	8-729-119-78	TRANSISTOR	2SC403SP-51					
C51A	1-124-903-11	ELECT	1uF	20%	50V	Q59	8-729-900-65	TRANSISTOR	DTA144ES					
C52	1-126-963-11	ELECT	4.7uF	20%	50V	Q74	8-729-900-65	TRANSISTOR	DTA144ES					
C52A	1-124-903-11	ELECT	1uF	20%	50V	Q76	8-729-119-76	TRANSISTOR	2SA1175-HFE					
C53	1-136-165-00	FILM	0.1uF	5%	50V	Q81	8-729-029-68	TRANSISTOR	DTC114TSA					
C54	1-136-165-00	FILM	0.1uF	5%	50V	Q82	8-729-029-68	TRANSISTOR	DTC114TSA					
C57	1-124-907-11	ELECT	10uF	20%	50V	< RESISTOR >								
C58	1-124-907-11	ELECT	10uF	20%	50V	R01	1-249-442-11	CARBON	510	5%	1/4W			
C59	1-124-907-11	ELECT	10uF	20%	50V	R05	1-247-881-00	CARBON	120K	5%	1/4W			
C60	1-124-907-11	ELECT	10uF	20%	50V	R06	1-247-881-00	CARBON	120K	5%	1/4W			
C61	1-164-159-11	CERAMIC	0.1uF	50V		R07	1-249-404-00	CARBON	82	5%	1/4W			
C90	1-164-159-11	CERAMIC	0.1uF	50V		R08	1-249-404-00	CARBON	82	5%	1/4W			
C90A	1-104-663-11	ELECT	33uF	20%	16V	R09	1-247-849-11	CARBON	5.6K	5%	1/4W			
C91	1-164-057-11	CERAMIC	30PF	5%	50V	R10	1-247-849-11	CARBON	5.6K	5%	1/4W			
C92	1-164-057-11	CERAMIC	30PF	5%	50V	R11	1-247-881-00	CARBON	120K	5%	1/4W			
C95	1-162-294-31	CERAMIC	0.001uF	10%	50V	R12	1-247-881-00	CARBON	120K	5%	1/4W			
C96	1-104-664-11	ELECT	47uF	20%	16V	R13	1-249-393-11	CARBON	10	5%	1/4W			
C97	1-104-664-11	ELECT	47uF	20%	16V	R14	1-260-076-11	CARBON	10	5%	1/2W			
C98	1-104-664-11	ELECT	47uF	20%	16V	R15	1-247-855-11	CARBON	10K	5%	1/4W			
< CONNECTOR >														
CN04	1-574-314-11	CORD (WITH CONNECTOR) (AU BUS)				R16	1-247-855-11	CARBON	10K	5%	1/4W			
* CN07	1-568-835-11	SOCKET, CONNECTOR 16P				R17	1-247-839-11	CARBON	2.2K	5%	1/4W			
CN10	1-784-407-11	CONNECTOR, BOARD TO BOARD 8P				R17A	1-247-847-11	CARBON	4.7K	5%	1/4W			
< DIODE >														
D01	8-719-901-33	DIODE	1SS133			R18	1-247-839-11	CARBON	2.2K	5%	1/4W			
D12	8-719-921-54	DIODE	MTZJ-6.2B			R19	1-249-424-11	CARBON	3.9K	5%	1/4W			
D13	8-719-921-54	DIODE	MTZJ-6.2B			R20	1-249-424-11	CARBON	3.9K	5%	1/4W			
D14	8-719-901-33	DIODE	1SS133			R21	1-247-847-11	CARBON	4.7K	5%	1/4W			
D32	8-719-109-89	DIODE	RD5.6ESB2			R26	1-247-807-11	CARBON	100	5%	1/4W			

MAIN

PANEL

LED

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description		Remark
R101	1-247-871-11	CARBON	47K	5%	1/4W	*	A-2056-697-A	PANEL BOARD, COMPLETE (TX515) (including LED BOARD)		*****
R102	1-247-871-11	CARBON	47K	5%	1/4W					*****
R103	1-247-839-11	CARBON	2.2K	5%	1/4W					*****
R104	1-247-839-11	CARBON	2.2K	5%	1/4W					*****
R105	1-247-847-11	CARBON	4.7K	5%	1/4W		3-020-963-01	BRACKET (FLEXIBLE C)		
							3-021-253-01	HOLDER LED		
R106	1-247-847-11	CARBON	4.7K	5%	1/4W					< DIODE >
R111	1-249-431-11	CARBON	15K	5%	1/4W					
R112	1-249-431-11	CARBON	15K	5%	1/4W	D851	8-719-028-88	LED SEL3210S-D-LC05 (CD SYNC)		
R113	1-247-855-11	CARBON	10K	5%	1/4W	D852	8-719-028-88	LED SEL3210S-D-LC05 (● REC)		
R114	1-247-855-11	CARBON	10K	5%	1/4W	D853	8-719-047-69	LED EL204GT (◀)		
R115	1-247-870-11	CARBON	43K	5%	1/4W	D854	8-719-047-69	LED EL204GT (▶)		
R116	1-247-855-11	CARBON	10K	5%	1/4W	D855	8-719-028-87	LED SEL3710K-D-LC05 (II)		
R117	1-260-111-11	CARBON	10K	5%	1/2W					
R118	1-249-393-11	CARBON	10	5%	1/4W	D856	8-719-300-79	LED SEL1213C (TAPE INDICATOR)		
R119	1-249-417-11	CARBON	1K	5%	1/4W	D857	8-719-023-78	LED SEL3810DLC05 (▶ (AMS))		
R120	1-249-417-11	CARBON	1K	5%	1/4W	D858	8-719-023-78	LED SEL3810DLC05 (◀ (AMS))		
R121	1-247-855-11	CARBON	10K	5%	1/4W	D859	8-719-047-69	LED EL204GT (POWER)		
R122	1-260-099-11	CARBON	1K	5%	1/2W					< RESISTOR >
R160	1-247-871-11	CARBON	47K	5%	1/4W	R853	1-249-411-11	CARBON	330	5% 1/4W
R161	1-247-807-11	CARBON	100	5%	1/4W	R854	1-249-411-11	CARBON	330	5% 1/4W
R163	1-247-871-11	CARBON	47K	5%	1/4W	R855	1-249-407-11	CARBON	150	5% 1/4W
R169	1-247-847-11	CARBON	4.7K	5%	1/4W	R856	1-249-409-11	CARBON	220	5% 1/4W
R169A	1-247-847-11	CARBON	4.7K	5%	1/4W	R857	1-249-409-11	CARBON	220	5% 1/4W
R171	1-260-119-11	CARBON	47K	5%	1/2W	R858	1-249-409-11	CARBON	220	5% 1/4W
R173	1-249-393-11	CARBON	10	5%	1/4W	R861	1-249-416-11	CARBON	820	5% 1/4W
R174	1-249-393-11	CARBON	10	5%	1/4W	R862	1-249-417-11	CARBON	1K	5% 1/4W
R183	1-247-855-11	CARBON	10K	5%	1/4W	R863	1-249-420-11	CARBON	1.8K	5% 1/4W
R184	1-247-855-11	CARBON	10K	5%	1/4W	R864	1-247-841-11	CARBON	2.7K	5% 1/4W
R187	1-260-119-11	CARBON	47K	5%	1/2W	R865	1-249-416-11	CARBON	820	5% 1/4W
R188	1-260-107-11	CARBON	4.7K	5%	1/2W	R866	1-249-417-11	CARBON	1K	5% 1/4W
R189	1-260-119-11	CARBON	47K	5%	1/2W	R867	1-249-420-11	CARBON	1.8K	5% 1/4W
R190	1-247-871-11	CARBON	47K	5%	1/4W	R868	1-247-841-11	CARBON	2.7K	5% 1/4W
R191	1-247-871-11	CARBON	47K	5%	1/4W	R869	1-247-847-11	CARBON	4.7K	5% 1/4W
R192	1-249-413-11	CARBON	470	5%	1/4W	R870	1-249-411-11	CARBON	330	5% 1/4W
R193	1-249-413-11	CARBON	470	5%	1/4W	R871	1-249-411-11	CARBON	330	5% 1/4W
RA	1-249-381-11	CARBON	1	5%	1/4W	R872	1-249-409-11	CARBON	220	5% 1/4W
RF	1-247-903-00	CARBON	1M	5%	1/4W					< SWITCH >
						S851	1-571-760-11	SWITCH, KEY BOARD (POWER)		
RY01	1-755-244-11	RELAY				S852	1-571-760-11	SWITCH, KEY BOARD (◀)		
RY02	1-755-244-11	RELAY				S853	1-571-760-11	SWITCH, KEY BOARD (▶)		
RY03	1-755-244-11	RELAY				S854	1-571-760-11	SWITCH, KEY BOARD (■)		
						S855	1-571-760-11	SWITCH, KEY BOARD (II)		
						S856	1-771-304-11	SWITCH, SLIDE (DIRECTION)		
						S857	1-571-760-11	SWITCH, KEY BOARD (◀ (AMS))		
SFR03	1-238-598-11	RES, ADJ, CARBON	2.2K			S858	1-571-760-11	SWITCH, KEY BOARD (▶ (AMS))		
SFR04	1-238-598-11	RES, ADJ, CARBON	2.2K			S859	1-571-760-11	SWITCH, KEY BOARD (● REC)		
						S860	1-571-760-11	SWITCH, KEY BOARD (CD SYNC)		
						S861	1-571-760-11	SWITCH, KEY BOARD (▲)		
X01	1-767-130-11	VIBRATOR, CERAMIC (4.19MHz)				S862	1-771-304-11	SWITCH, SLIDE (DOLBY NR)		

POWER

REC

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark				
*	1-668-649-11	POWER BOARD (AEP,UK,US)		C83	1-124-903-11	ELECT	1uF 20% 50V				
*	1-669-047-11	POWER BOARD (SP,MY,HK,JE)	*****	C83A	1-104-666-11	ELECT	220uF 20% 16V				
< CAPACITOR >											
C63	1-126-943-11	ELECT	2200uF 20% 25V	D03	8-719-010-62	DIODE UZ-9.1BSB					
C65	1-126-943-11	ELECT	2200uF 20% 25V	D04	8-719-921-63	DIODE MTZJ-7.5B					
C301	1-102-129-00	CERAMIC	10000PF 10% 50V	D26	8-719-901-33	DIODE 1SS133					
C302	1-102-129-00	CERAMIC	10000PF 10% 50V	D27	8-719-901-33	DIODE 1SS133					
C63A	1-162-851-11	CERAMIC	0.1uF 10% 16V	< DIODE >							
C65A	1-162-851-11	CERAMIC	0.1uF 10% 16V	IC09	8-759-112-93	IC uPC4570HA-1					
< DIODE >											
D20	8-719-200-02	DIODE 10E2		< COIL >							
D21	8-719-200-02	DIODE 10E2		L03	1-416-568-11	COIL, CHOKE	39mH				
D22	8-719-200-02	DIODE 10E2		L04	1-416-568-11	COIL, CHOKE	39mH				
D23	8-719-200-02	DIODE 10E2		L05	1-431-706-11	TRANSFORMER, BIAS OSCILLATION					
D24	8-719-901-33	DIODE 1SS133		L07	1-416-567-11	COIL, CHOKE	6.8mH				
D25	8-719-901-33	DIODE 1SS133		L08	1-416-567-11	COIL, CHOKE	6.8mH				
< RESISTOR >											
△FR01	1-213-036-11	FUSIBLE	1 5% 1W F	Q06	8-729-142-46	TRANSISTOR 2SC2001-LK					
△FR02	1-213-036-11	FUSIBLE	1 5% 1W F	Q07	8-729-142-46	TRANSISTOR 2SC2001-LK					

*	A-2056-692-A	REC BOARD, COMPLETE (AEP,UK,US)		Q08	8-729-140-96	TRANSISTOR 2SD774-34					
*	A-2007-768-A	REC BOARD, COMPLETE (SP,MY,HK,JE)	*****	Q09	8-729-194-57	TRANSISTOR 2SC945-P					
< CAPACITOR >											
C09	1-164-066-11	CERAMIC	68PF 5% 50V	Q11	8-729-194-57	TRANSISTOR 2SC945-P					
C10	1-164-066-11	CERAMIC	68PF 5% 50V	< TRANSISTOR >							
C13	1-124-907-11	ELECT	10uF 20% 50V	Q65	8-729-029-86	TRANSISTOR DTC124ESA					
C14	1-124-907-11	ELECT	10uF 20% 50V	Q66	8-729-029-86	TRANSISTOR DTC124ESA					
C15	1-164-077-11	CERAMIC	220PF 10% 50V	Q67	8-729-029-86	TRANSISTOR DTC124ESA					
C16	1-164-077-11	CERAMIC	220PF 10% 50V	Q68	8-729-029-86	TRANSISTOR DTC124ESA					
△C18	1-104-990-11	FILM	0.0033uF 5% 200V	Q69	8-729-029-68	TRANSISTOR DTC114TSA					
△C19	1-137-464-11	FILM	0.039uF 5% 100V	< RESISTOR >							
C20	1-126-941-11	ELECT	470uF 20% 16V	R23	1-249-387-11	CARBON 3.3 5% 1/4W					
△C21	1-137-392-11	FILM	0.0068uF 5% 100V	R24	1-249-434-11	CARBON 27K 5% 1/4W					
△C22	1-137-390-11	FILM	0.0033uF 5% 100V	R25	1-249-434-11	CARBON 27K 5% 1/4W					
△C23	1-137-390-11	FILM	0.0033uF 5% 100V	R27	1-247-847-11	CARBON 4.7K 5% 1/4W					
C24	1-104-664-11	ELECT	47uF 20% 16V	R28	1-247-847-11	CARBON 4.7K 5% 1/4W					
C71	1-124-903-11	ELECT	1uF 20% 50V	△R30	1-216-455-11	METAL OXIDE 560 5% 2W F					
C72	1-124-903-11	ELECT	1uF 20% 50V	R32	1-249-417-11	CARBON 1K 5% 1/4W					
C73	1-126-233-11	ELECT	22uF 20% 50V	R37	1-249-412-11	CARBON 390 5% 1/4W					
C74	1-126-233-11	ELECT	22uF 20% 50V	R127	1-249-430-11	CARBON 12K 5% 1/4W					
C75	1-136-155-00	FILM	0.015uF 5% 50V	R128	1-249-430-11	CARBON 12K 5% 1/4W					
C76	1-136-155-00	FILM	0.015uF 5% 50V	< RESISTOR >							
C77	1-136-154-00	FILM	0.012uF 5% 50V	R133	1-247-871-11	CARBON 47K 5% 1/4W					
C78	1-136-154-00	FILM	0.012uF 5% 50V	R134	1-247-871-11	CARBON 47K 5% 1/4W					
C81	1-136-166-00	FILM	0.12uF 5% 50V	R135	1-247-871-11	CARBON 47K 5% 1/4W					
C82	1-136-166-00	FILM	0.12uF 5% 50V	R136	1-247-871-11	CARBON 47K 5% 1/4W					
				R137	1-247-883-00	CARBON 150K 5% 1/4W					
				R138	1-247-883-00	CARBON 150K 5% 1/4W					
				R139	1-247-863-11	CARBON 22K 5% 1/4W					
				R140	1-247-863-11	CARBON 22K 5% 1/4W					

The components identified by mark △ or dotted line with mark.
 △ are critical for safety.
 Replace only with part number specified.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>					
R141	1-247-867-11	CARBON	33K	5%	1/4W			
R142	1-247-867-11	CARBON	33K	5%	1/4W			
R143	1-247-855-11	CARBON	10K	5%	1/4W			
R144	1-247-855-11	CARBON	10K	5%	1/4W			
R145	1-247-807-11	CARBON	100	5%	1/4W			
R146	1-247-807-11	CARBON	100	5%	1/4W			
R147	1-249-427-11	CARBON	6.8K	5%	1/4W			
R148	1-249-427-11	CARBON	6.8K	5%	1/4W			
R151	1-249-417-11	CARBON	1K	5%	1/4W			
R152	1-247-879-11	CARBON	100K	5%	1/4W			
< VARIABLE RESISTOR >								
SFR01	1-238-603-11	RES, ADJ, CARBON	100K					
SFR02	1-238-603-11	RES, ADJ, CARBON	100K					
SFR11	1-238-601-11	RES, ADJ, CARBON	22K					
SFR12	1-238-601-11	RES, ADJ, CARBON	22K					

*	1-669-048-11	SLIDE SW BOARD (SP,MY,HK,JE)	*****					
< SWITCH >								
△SW01	3-021-926-01	BRACKET (SLIDE SW) (VOLTAGE SELECTOR)	*****					

*	1-668-652-11	TRANSFORMER BOARD (AEP,UK,US)	*****					
*	1-669-043-11	TRANSFORMER BOARD (SP,MY,HK,JE)	*****					
< COIL >								
△L11	1-416-566-11	COIL, CHOKE	15uH					
△L12	1-416-566-11	COIL, CHOKE	15uH					
< TRANSFORMER >								
△PT301	3-021-913-01	BRACKET (POWER TRANS) (AEP,UK)	*****					
△PT301	3-021-925-01	BRACKET (POWER TRANS) (SP,MY,HK,JE)	*****					
△PT301	3-021-976-01	BRACKET (POWER TRANS) (US)	*****					

MISCELLANEOUS								

△158	3-021-914-01	BRACKET (AC CORD) (EXCEPT UK,US)	*****					
△158	3-021-917-01	BRACKET (AC CORD) (UK)	*****					
△158	3-021-977-01	BRACKET (AC CORD) (US)	*****					
HRPE101	3-020-446-01	BRACKET (HEAD UNIT)	*****					
M1	3-020-447-01	MOTOR (A) ASSY (REEL/CAPSTAN)	*****					

M2	3-020-448-01	MOTOR (B) ASSY (LOADING)	*****					
△PT301	3-021-913-01	BRACKET (POWER TRANS) (AEP,UK)	*****					
△PT301	3-021-925-01	BRACKET (POWER TRANS) (SP,MY,HK,JE)	*****					
△PT301	3-021-976-01	BRACKET (POWER TRANS) (US)	*****					

The components identified by mark △ or dotted line with mark. △ are critical for safety. Replace only with part number specified.

