


Service Manual

Active Subwoofer System

SB-WA330GCS

Colour

(S)...Silver Type

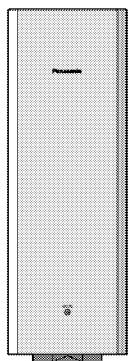

SB-WA330

Specification

■ Active subwoofer

| | |
|-----------------------------|--|
| Type | 1 way, 1 speaker, bass-ref. |
| Speaker unit | |
| Woofer | 17 cm cone type 4 Ω |
| Input power | 200 W (Music) |
| Output sound pressure level | 80 dB/W (1.0 m) |
| Frequency range | 40 Hz-220 Hz (-16 dB) 45 Hz-180 Hz (-10 dB) |
| Dimensions (W x H x D) | 160 x 450 x 424 mm |
| Mass | 11.5 kg |

Note :

Specifications are subject to change without notice.

Mass and dimensions are approximate.

■ System : SC-HT500 (GC)

Music Center: SA-HT500 (GC)

Satellite speakers: SB-HT690 (P)

Active Subwoofer: SB-WA330 (GCS)

Music Center: SA-HT700 (GC)

Satellite speakers: SB-HT700 (P)

Active Subwoofer: SB-WA330 (GCS)

■ System : SC-HT700 (GC)

Music Center: SA-HT700 (GCS)

Satellite speakers: SB-HT700 (P)

Active Subwoofer: SB-WA330 (GCS)

■ General

| | |
|-------------------|---|
| Power supply | AC 110 V/127 V/220-230 V/240 V, 50/60 Hz |
| Power consumption | 210 W |

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

| | Page | | Page |
|---|------|--|------|
| 1 Safety Precautions | 3 | 3 Before Use | 4 |
| 1.1. GENERAL GUIDELINES | 3 | 4 Before Repair and Adjustment | 4 |
| 2 Handling the Lead-free Solder | 4 | 5 Protection Circuitry | 4 |
| 2.1. About lead free solder (PbF) | 4 | 6 Connection of the Speaker Cables | 5 |

Panasonic

© 2003 PANASONIC AVC Networks Singapore Pte. Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

| | | | |
|--|-----------|--|-----------|
| 7 Disassembly Procedure | 6 | 12 Wiring Connection Diagram | 19 |
| 7.1. Disassembly of the Speaker Unit | 6 | 13 Illustration of IC's, Transistors and Diodes | 20 |
| 7.2. Main Component Replacement Procedures | 9 | 14 Parts Location and Replacement Parts List | 21 |
| 8 Connection of the Speaker Wiring | 9 | 14.1. Cabinet | 22 |
| 9 Block Diagram | 10 | 14.2. Component Parts List | 24 |
| 10 Schematic Diagram | 11 | 14.3. Packing Materials & Accessories Parts List | 27 |
| 11 Printed Circuit Board | 15 | 14.4. Packaging | 27 |

1 Safety Precautions

1.1. GENERAL GUIDELINES

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.1.1. LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between $1M\Omega$ and 5.2Ω .
When the exposed metal does not have a return path to the chassis, the reading must be ∞ .

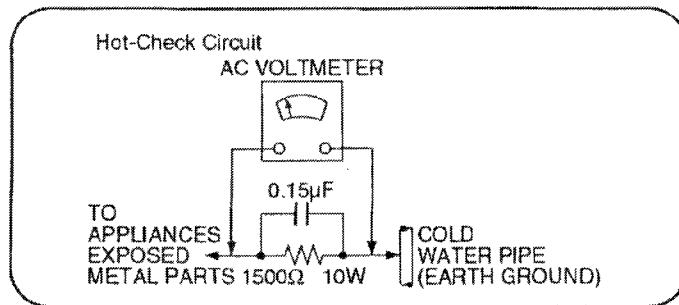


Fig. 1

1.1.2. LEAKAGE CURRENT HOT CHECK (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a $1.5k\Omega$, 10 watts resistor, in parallel with a $0.15\mu F$ capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

2 Handling the Lead-free Solder

2.1. About lead free solder (PbF)

Distinction of PbF P.C.B. :

P.C.B.s (manufactured) using lead free solder will have a PbF stamp on the P.C.B.

Caution:

- Pb free solder has a higher melting point than standard solder; Typically the melting point is 50 - 70°F (30 - 40°C) higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to $700 \pm 20^{\circ}\text{F}$ ($370 \pm 10^{\circ}\text{C}$).
- Pb free solder will tend to splash when heated too high (about 1100°F/600°C).
- When soldering or unsoldering, please completely remove all of the solder on the pins or solder area, and be sure to heat the soldering points with the Pb free solder until it melts enough.

3 Before Use

Be sure to disconnect the mains cord before adjusting the voltage selector. Use a minus (-) screwdriver to set the voltage selector (on the rear panel) to the voltage setting for the area in which the unit will be used.

(If the power supply in your area is 117V or 120V, set to the "127V" position.)

Note that this unit will be seriously damaged if this setting is not made correctly. (There is no voltage selector for some countries; the correct voltage is already set.)

4 Before Repair and Adjustment

Disconnect AC power, discharge Power Supply Capacitors C546, C547, C548, C549 through a $10\ \Omega$, 1 W resistor to ground.

DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices.

After repairs are completed, restore power gradually using a variac, to avoid overcurrent.

Current consumption at AC 220~230V, 50Hz in NO SIGNAL mode should be ~400 mA.

5 Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlined below:


1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

Note :

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

6 Connection of the Speaker Cables

- Be sure to connect speaker cables before connecting the AC power supply cord.
 - The load impedance of any speaker used with this unit must be 4Ω .
 - Be sure to connect the cable from the right speaker to the right terminal and the cable from the left speaker to the left terminal.
1. Strip off the outer covering, and twist the center conductor. Make sure the bare ends of the wires are not unravelled. (If they are, twist them tight again.)
 2. Insert the wire to the rear panel of the unit and close the lever.

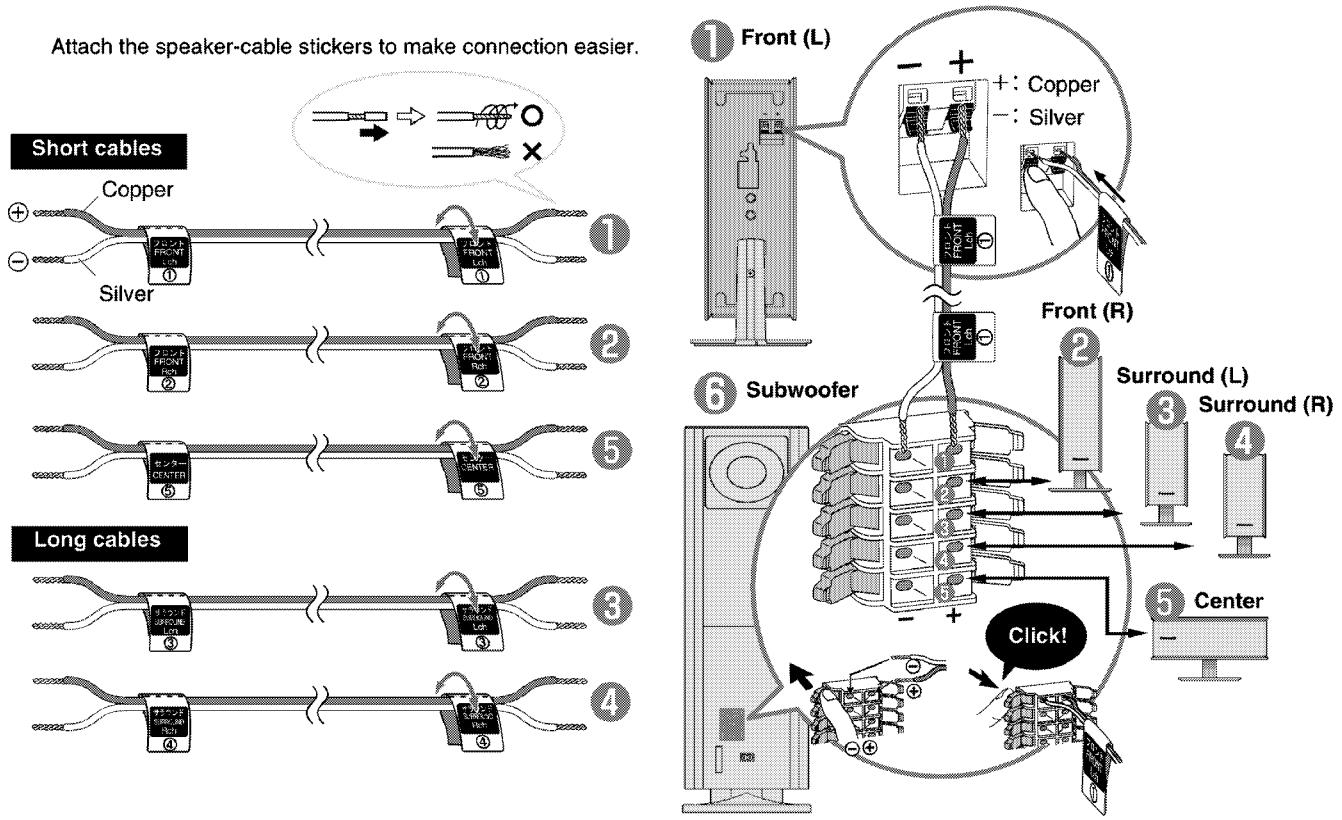

Notes :

- To prevent damage to circuitry, never short-circuit positive (+) and negative (-) speaker wires.
- Be sure to connect only positive (red) wires to positive (+) terminals and negative (black) wires to negative (-) terminals.

7 Disassembly Procedure

"ATTENTION SERVICER"

Some chassis components may have sharp edges.


Be careful when disassembling and servicing.

1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
2. For reassembly after operation checks or replacement, reverse the respective procedures.
Special reassembly procedures are described only when required.
3. Select items from the following index when checks or replacement are required.


Contents

- Disassembly of the Speaker Unit
- Main Component Replacement Procedures

7.1. Disassembly of the Speaker Unit

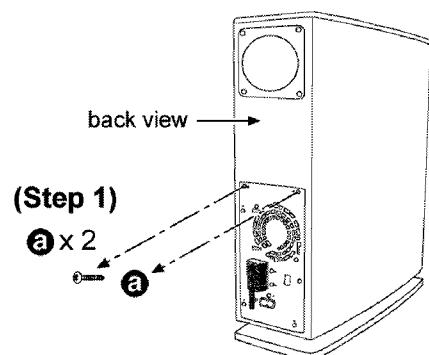


Step 1: Remove 2 screws from the rear panel.

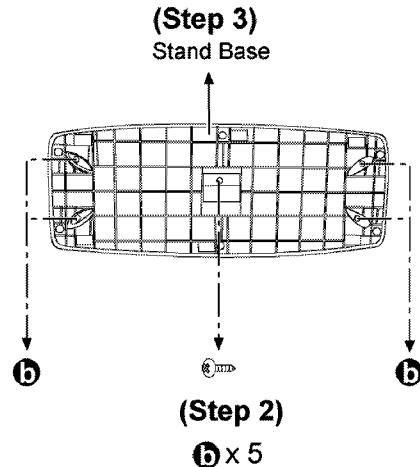


Step 2: Remove all screws.


Step 3: Remove the Stand Base.

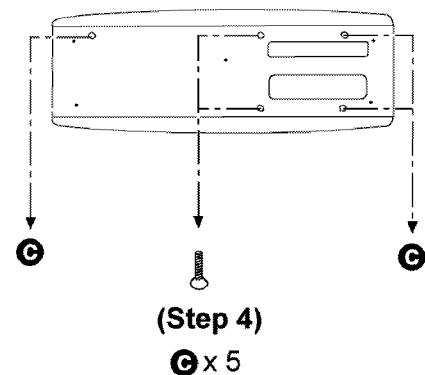


Step 4: Remove 5 screws from the speaker bottom.

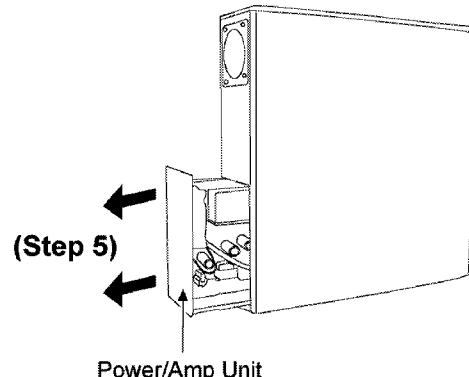

Step 5: Pull the Power/Amp Unit as shown.

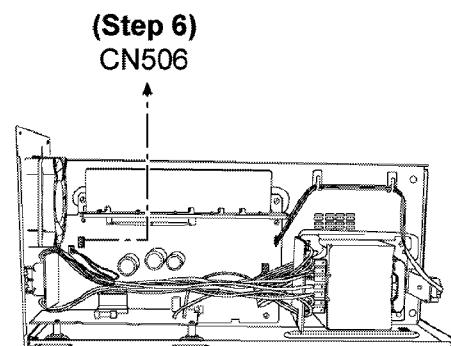


Step 6: Release the connector CN506 and pull out the Power/Amp Unit.

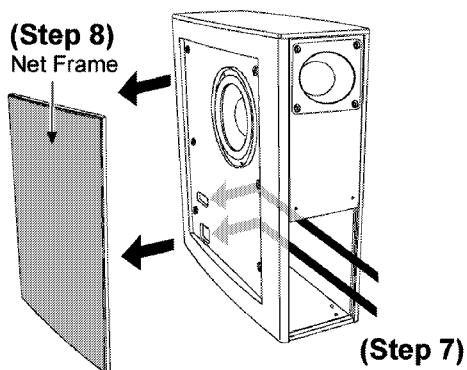


Step 7: Push the Net Frame from two holes inside the unit.

Step 8: Remove the Net Frame.

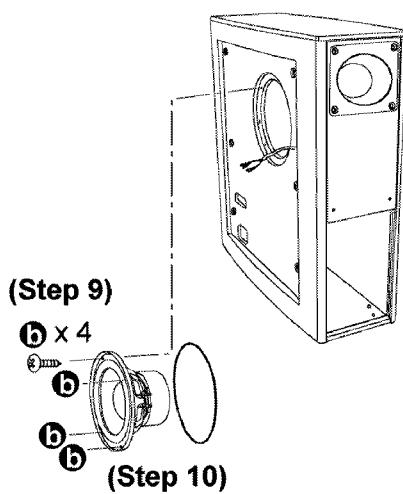


Step 9: Remove all the screws.

Step 10: Remove the Speaker.

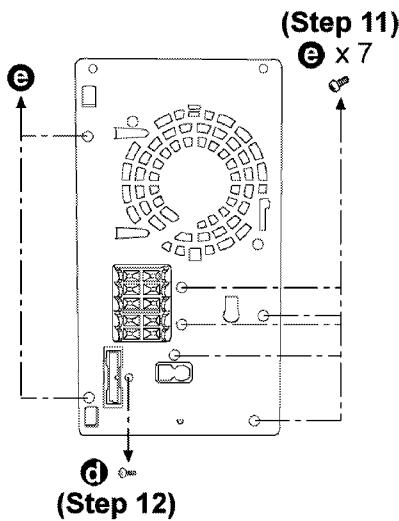


Step 11 & 12: Remove all the screws.

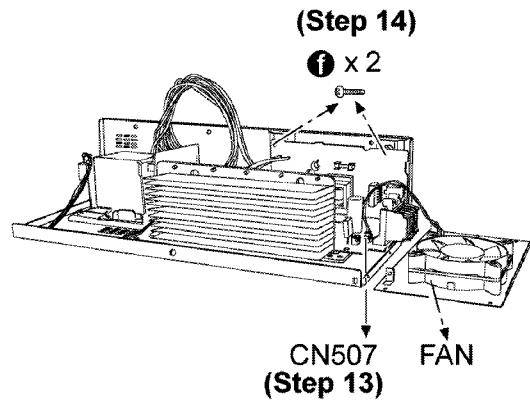


Step 13: Release the connector CN507.


Step 14: Remove the 2 screws.

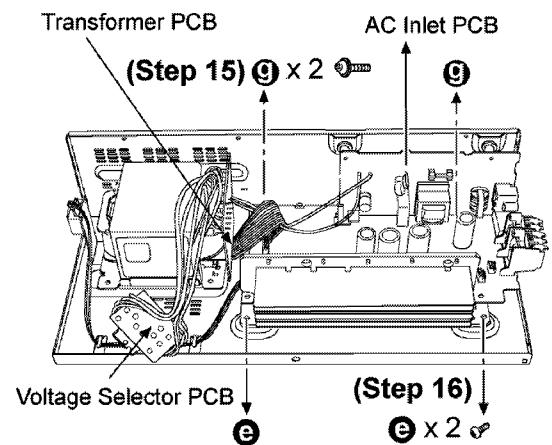

Step 15 & 16: Remove all the screws.

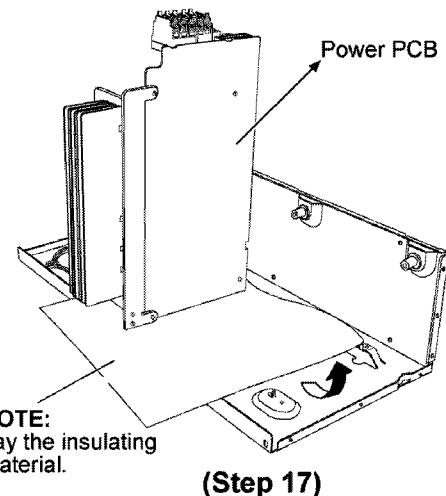

Step 17: Place the Power PCB as shown for checking.


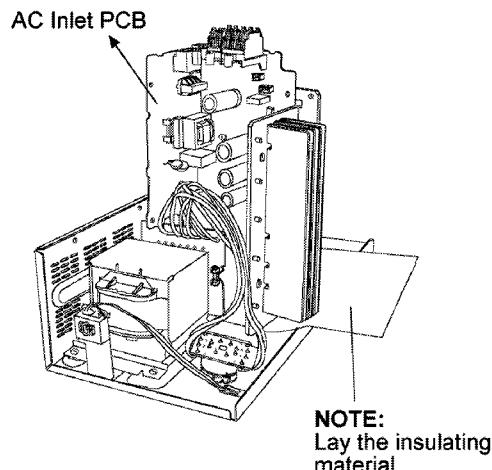


NOTE:
Lay the insulating
material.

Checking for AC Inlet PCB.

7.2. Main Component Replacement Procedures


7.2.1. Replacement of the Power IC

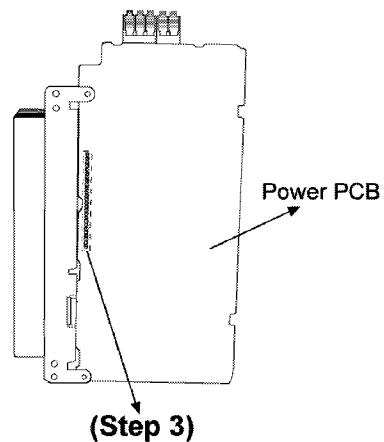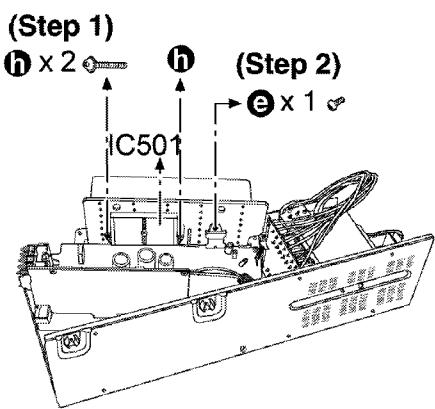


Step 1 & 2: Remove all the screws.

Step 3: Desolder the Power IC terminal and replace the component.

8 Connection of the Speaker Wiring

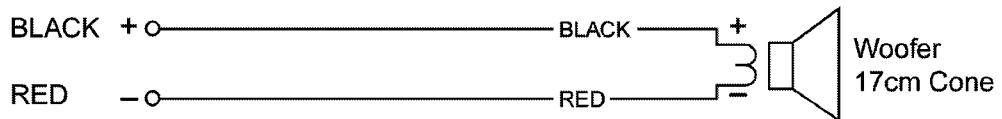

9 Block Diagram

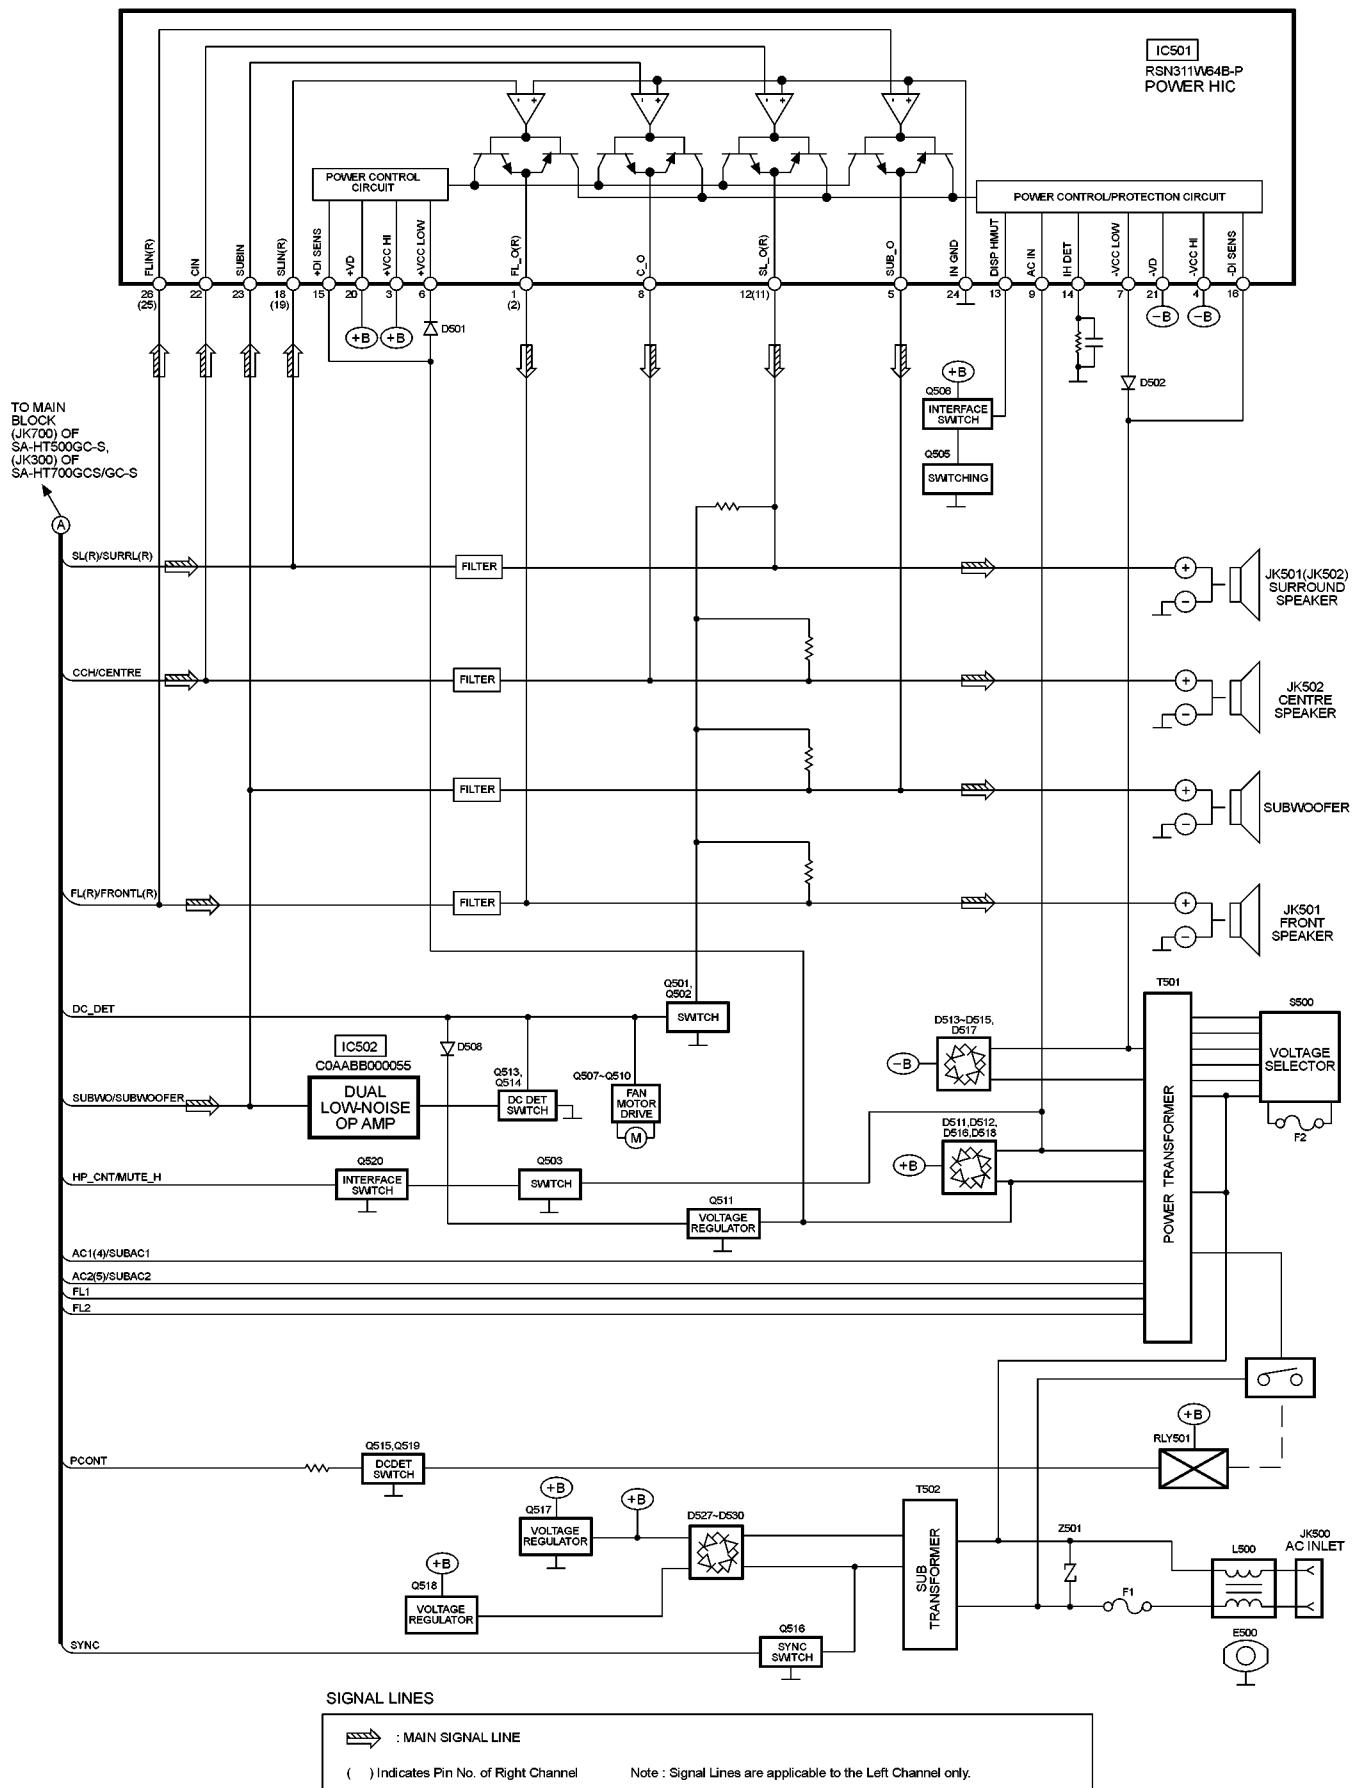

10 Schematic Diagram

(All schematic diagrams may be modified at any time with the development of the new technology)

Note:

- The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis. Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.

- **Importance safety notice :**

Components identified by  mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-

quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

Caution !

IC, LSI and VLSI are sensitive to static electricity.


Secondary trouble can be prevented by taking care during repair.

- Cover the parts boxes made of plastics with aluminium foil.
- Put a conductive mat on the work table.
- Ground the soldering iron.
- Do not touch the pins of IC, LSI or VLSI with fingers directly.

SCHEMATIC DIAGRAM-1

A POWER CIRCUIT

— - - : -B SIGNAL LINE → : MAIN SIGNAL LINE
 — — : +B SIGNAL LINE

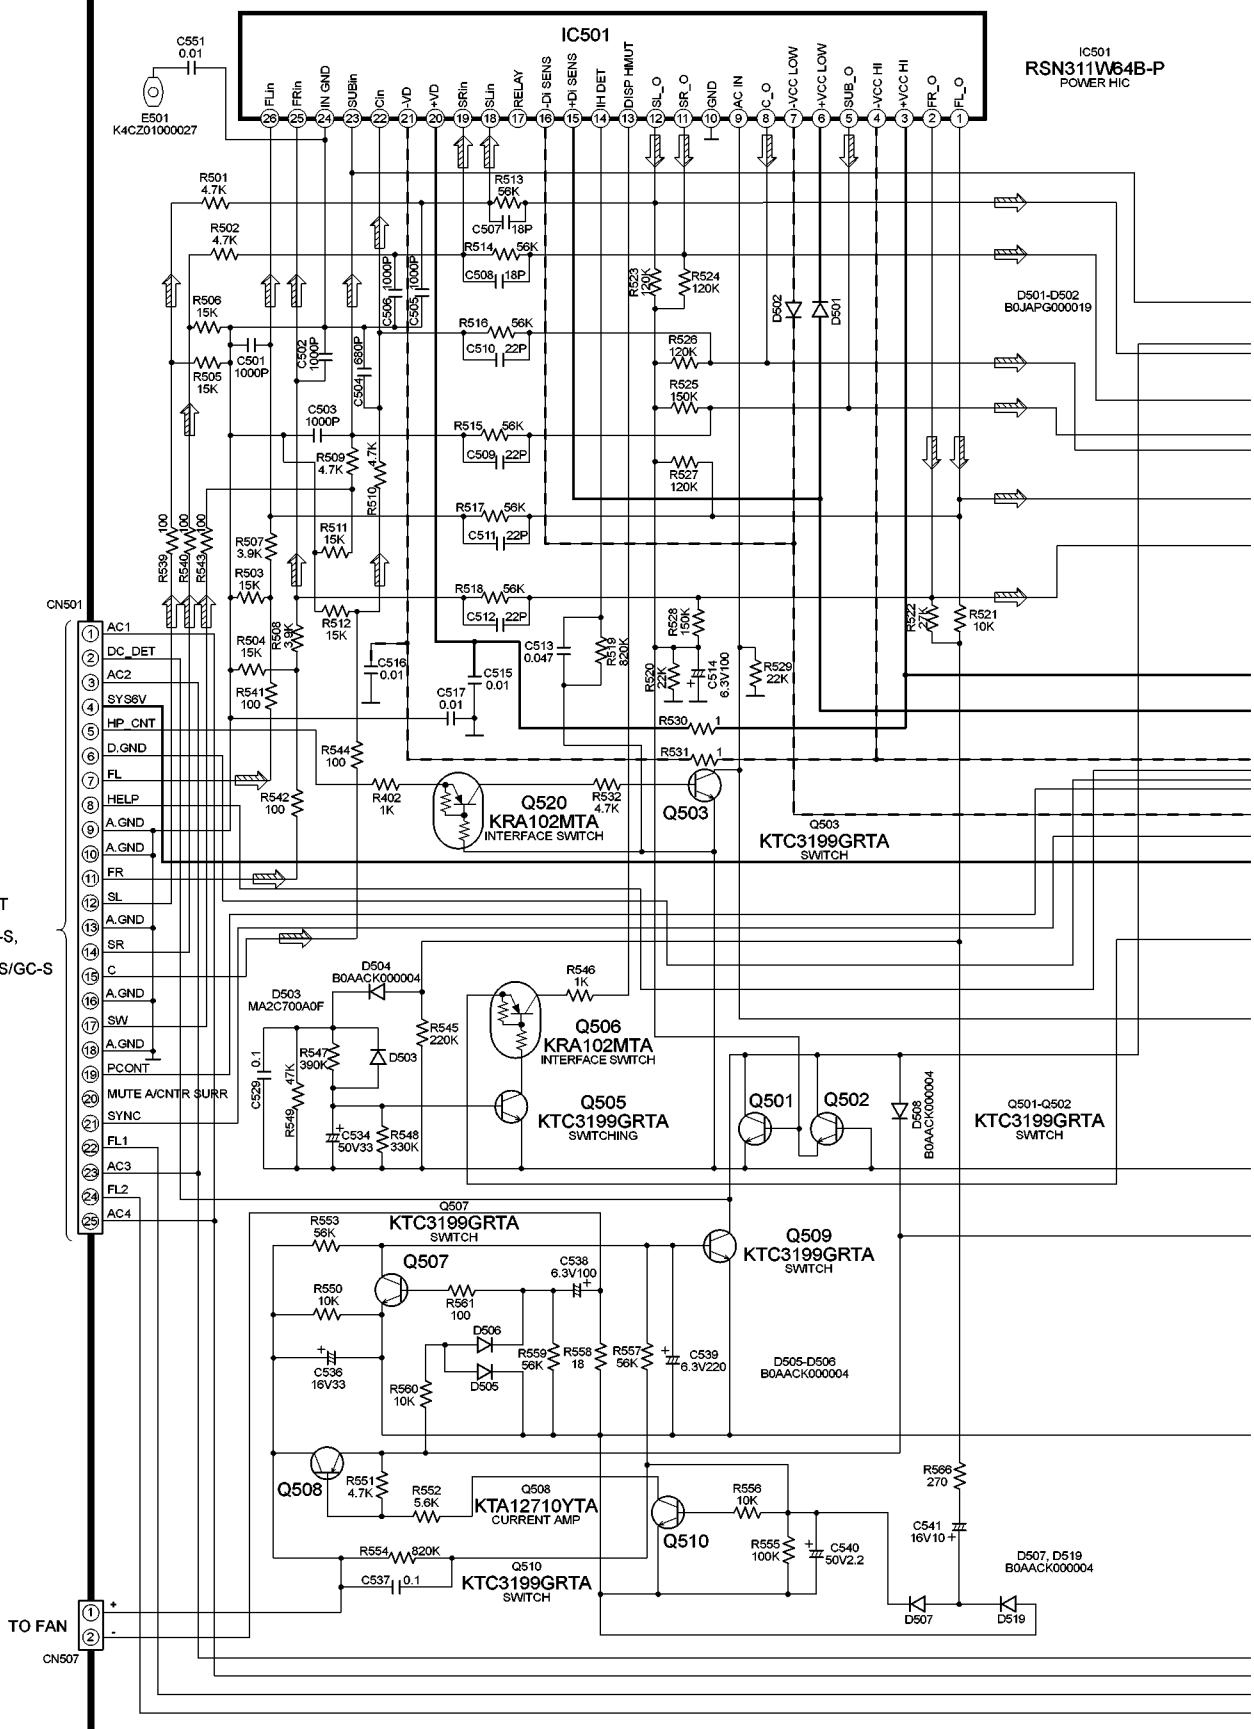


SCHEMATIC DIAGRAM-2

A POWER CIRCUIT

- - - : -B SIGNAL LINE


 : MAIN SIGNAL LINE

— : +B SIGNAL LINE

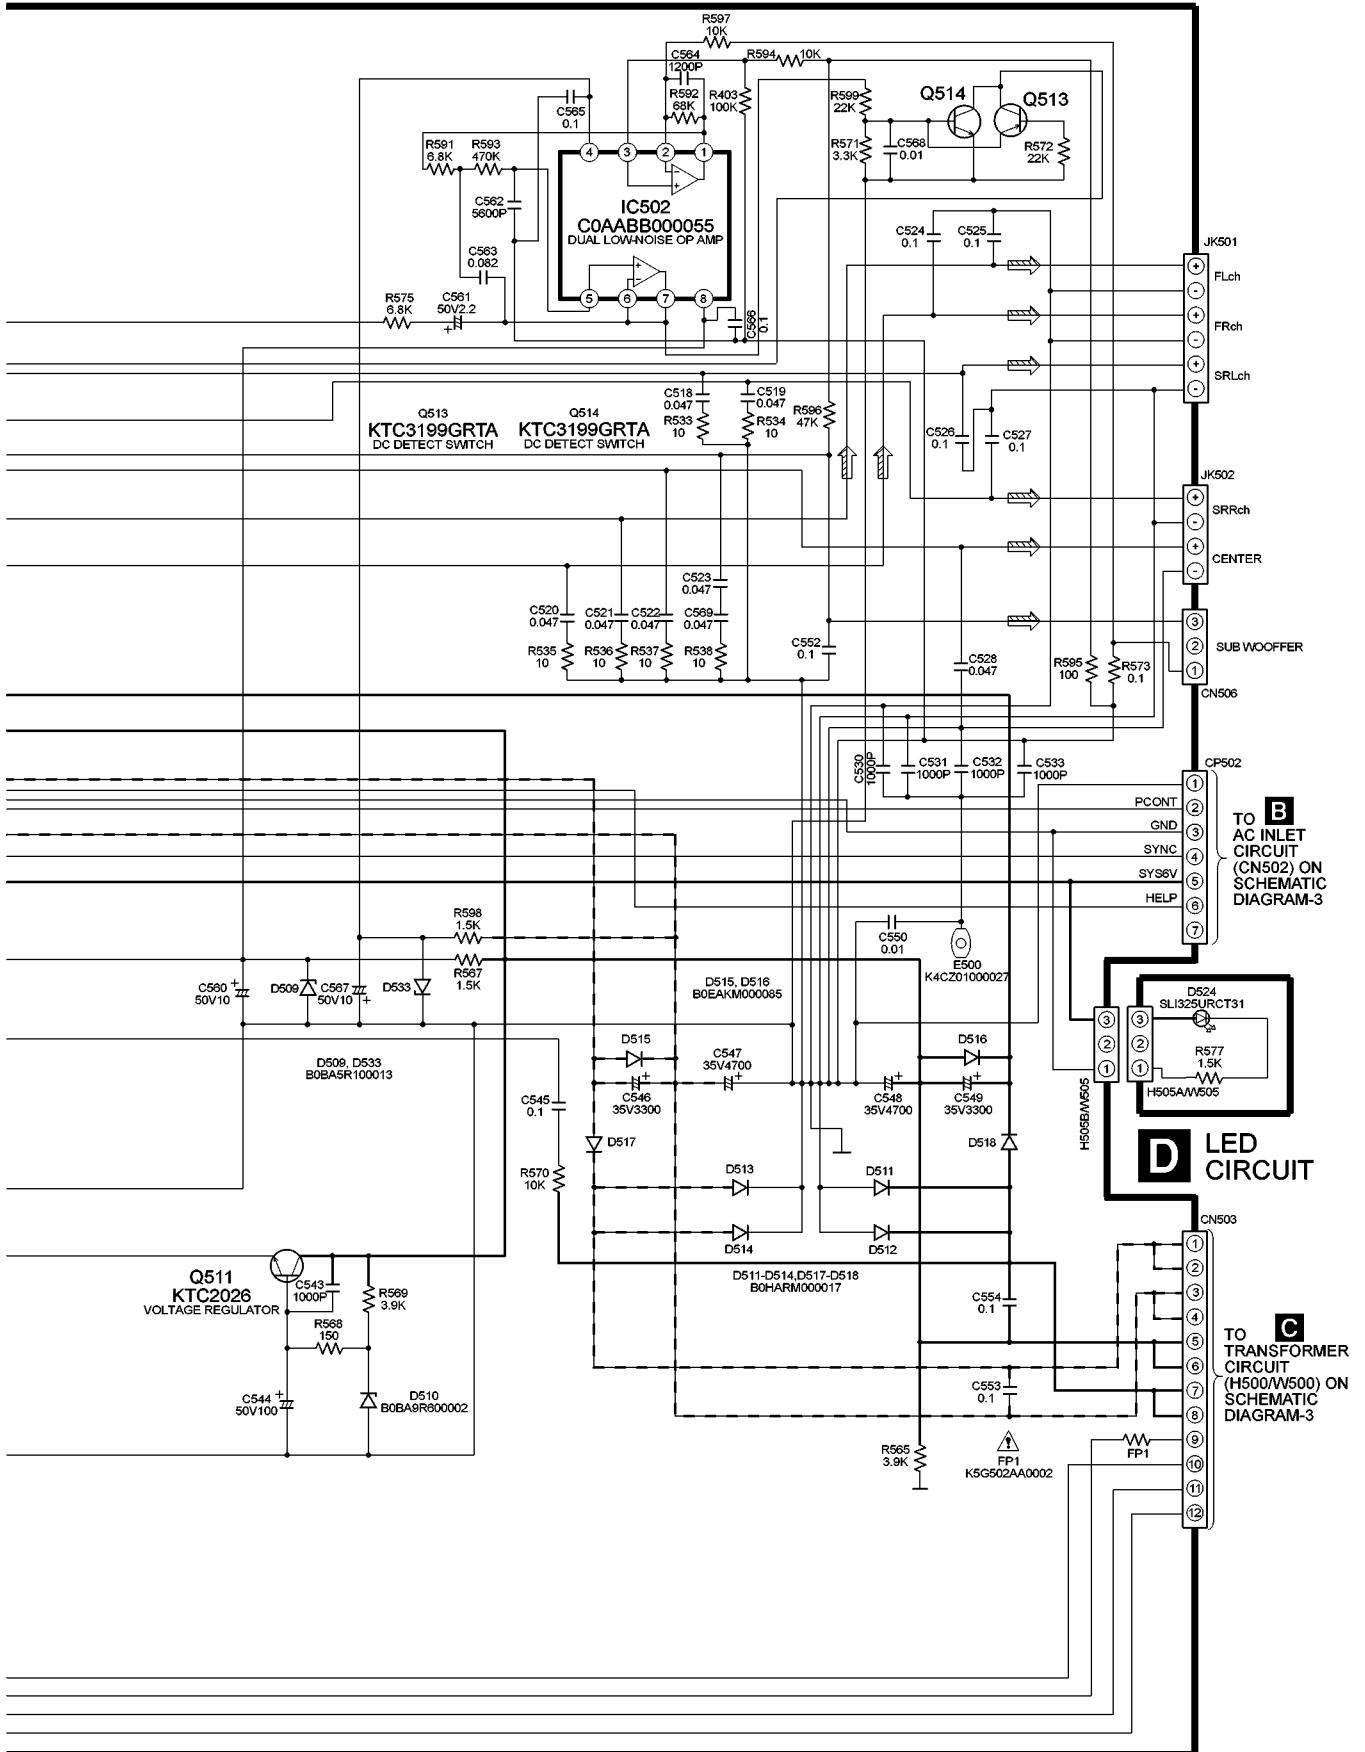


SCHEMATIC DIAGRAM-3


— - : -B SIGNAL LINE
— : +B SIGNAL LINE

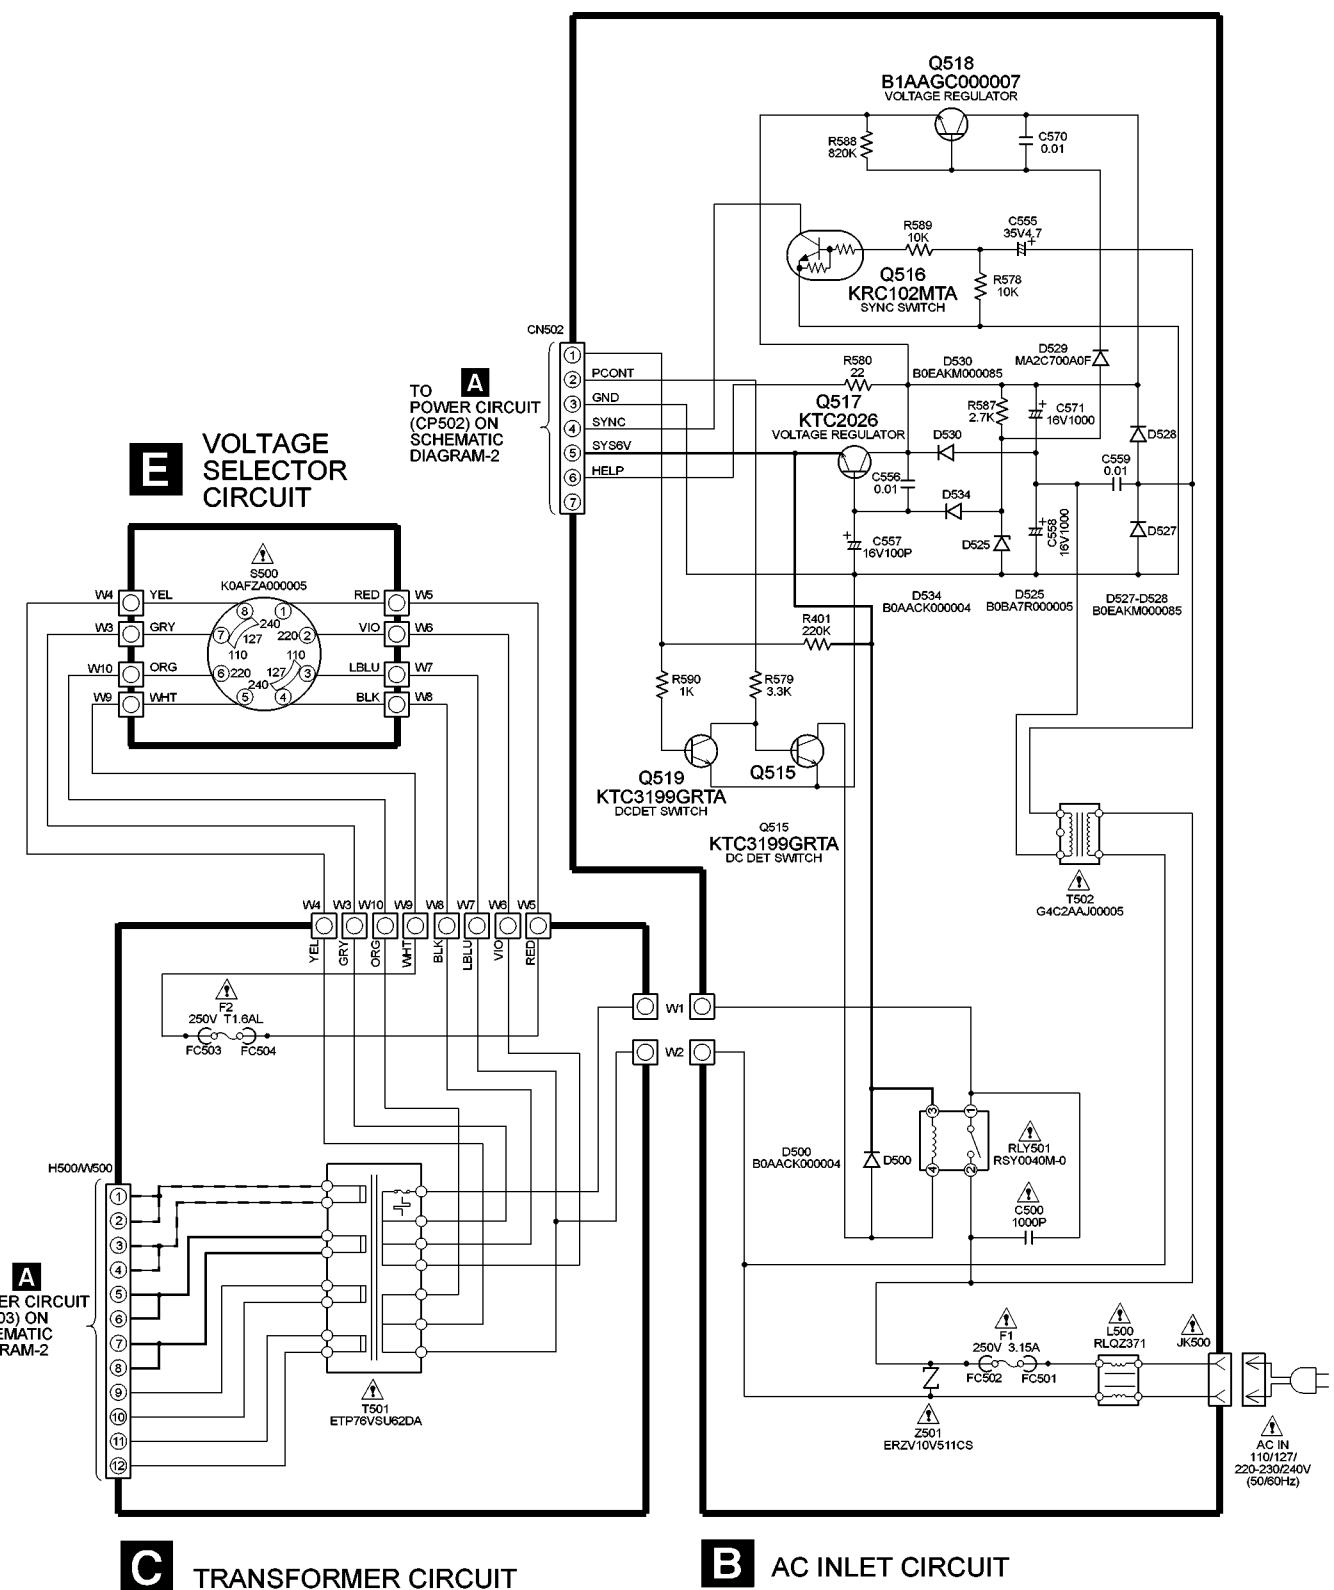

11 Printed Circuit Board

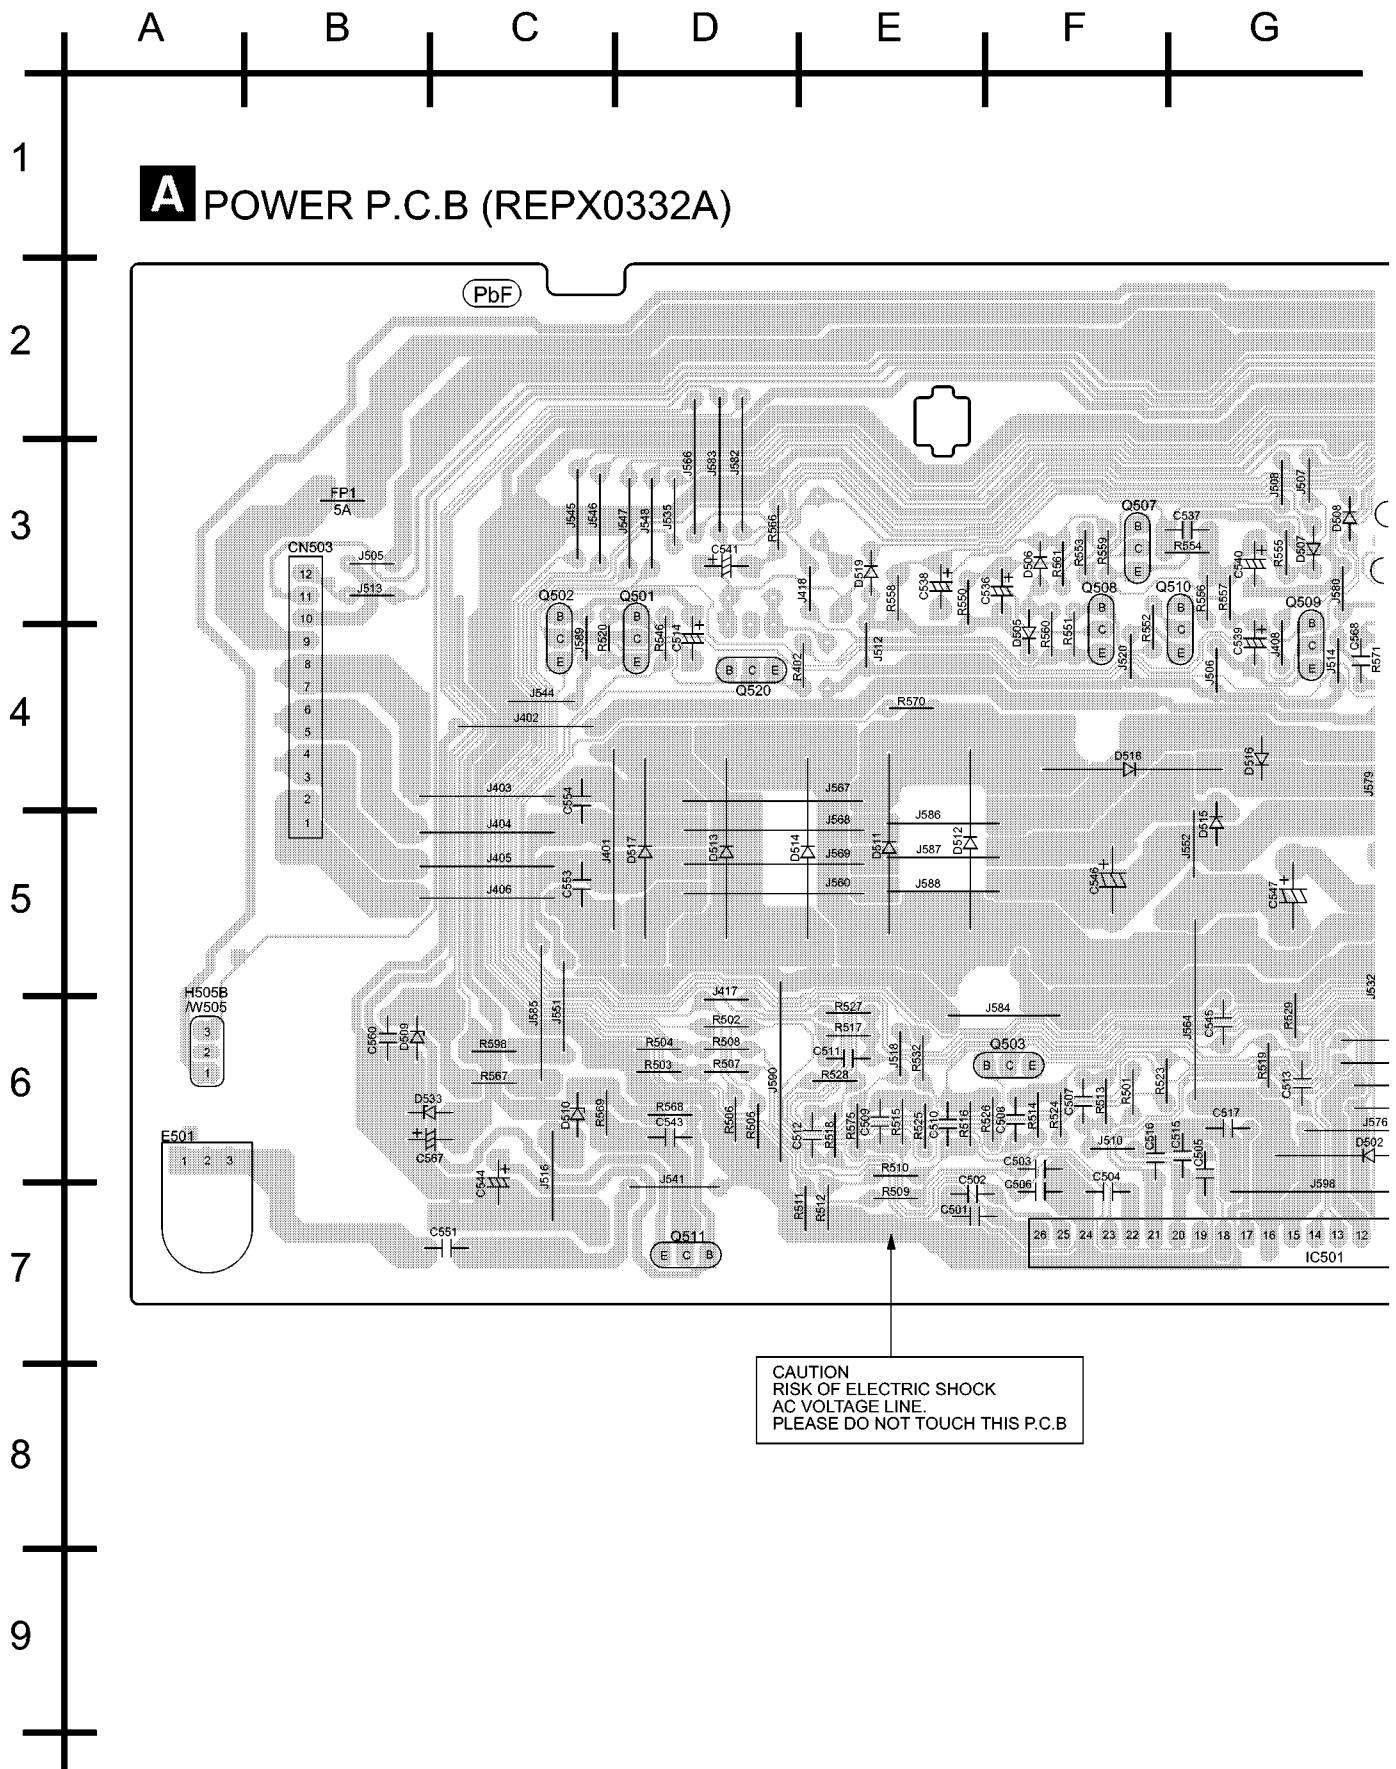


G H I J K L M

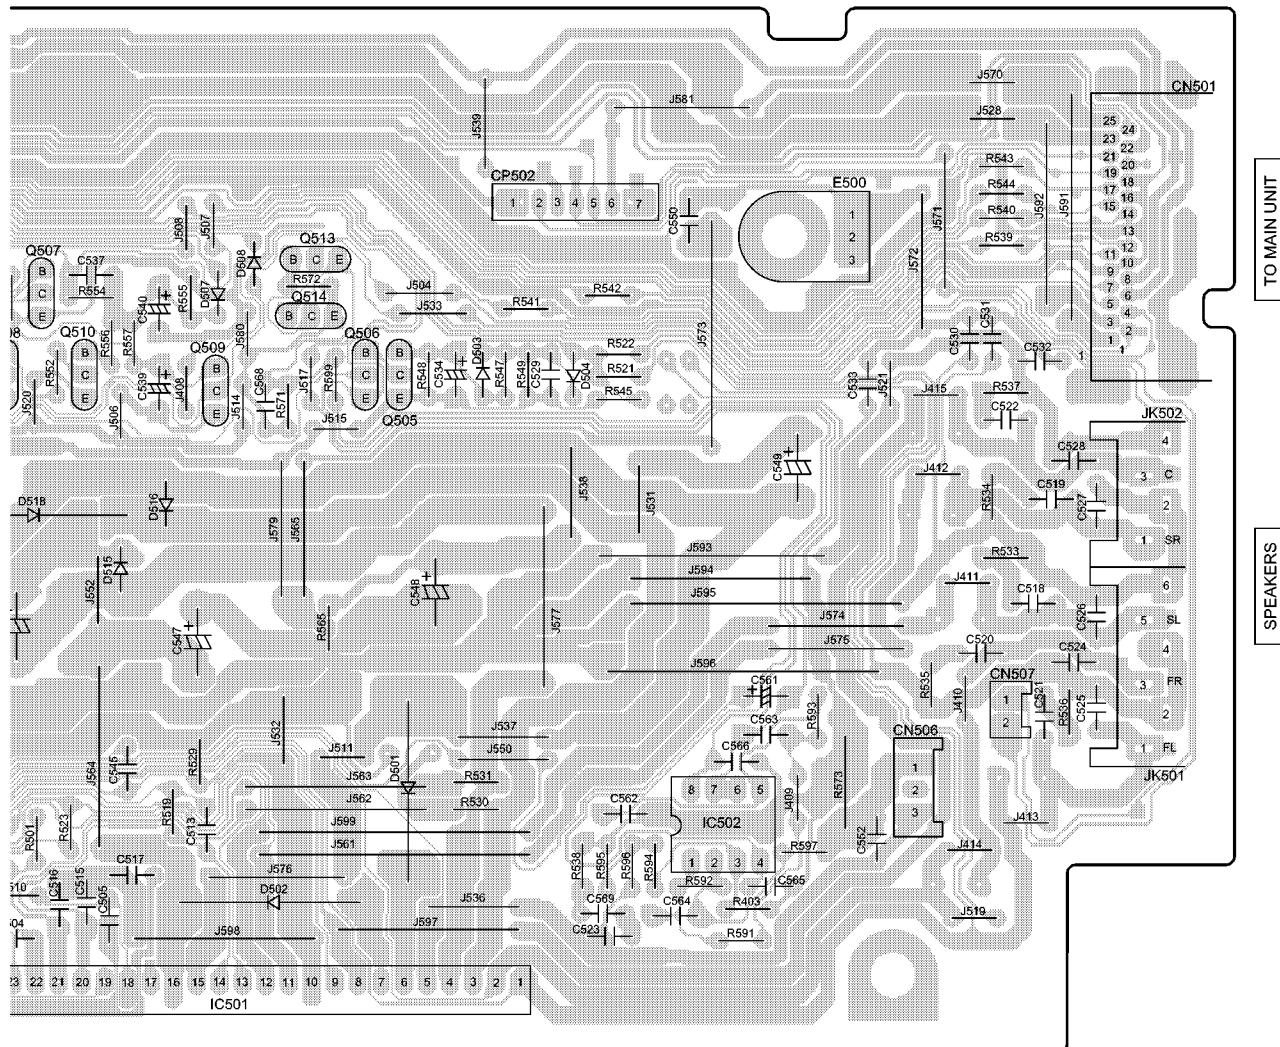


A B C D E F G

B AC INLET P.C.B (REPX0332A)


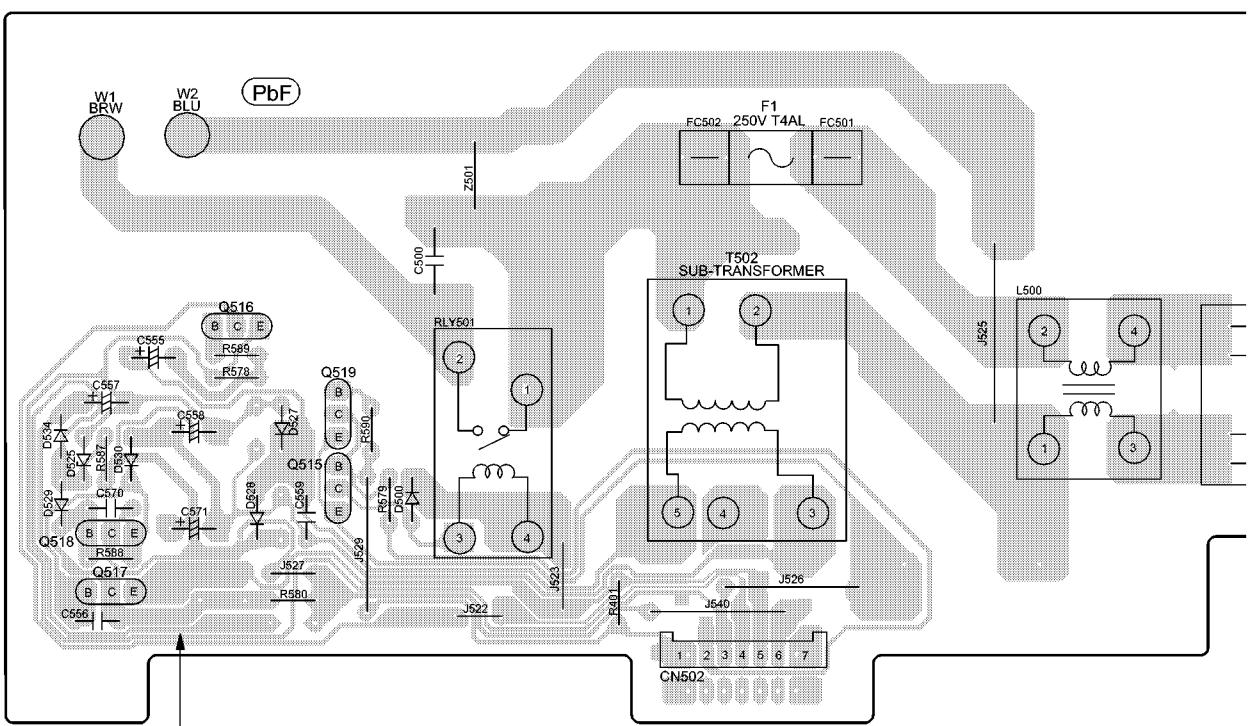


D LED P.C.B (REPX0332A)

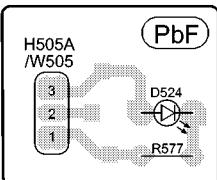


G H I J K L M

C TRANSFORMER P.C.B
(REPX0332A)

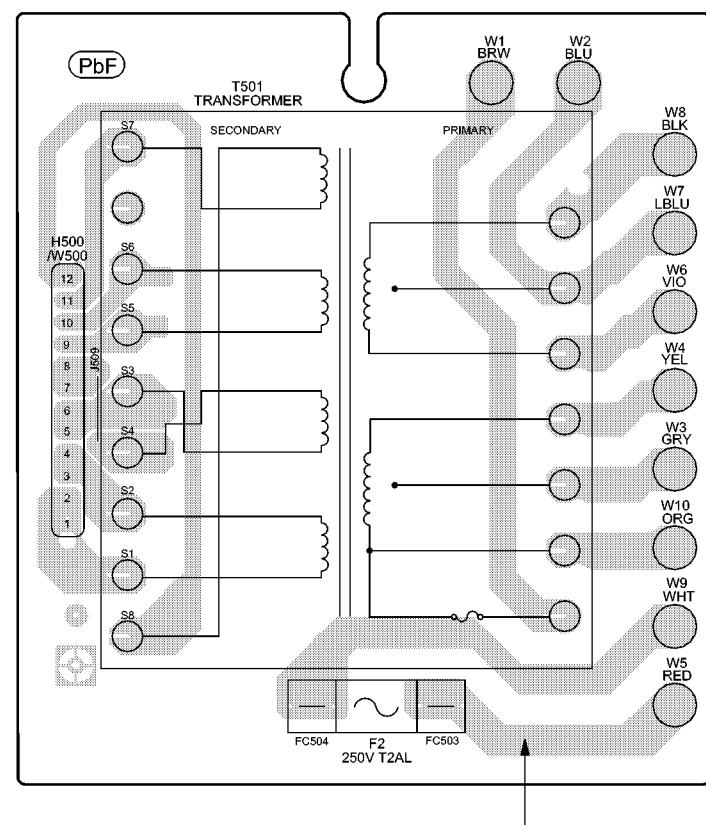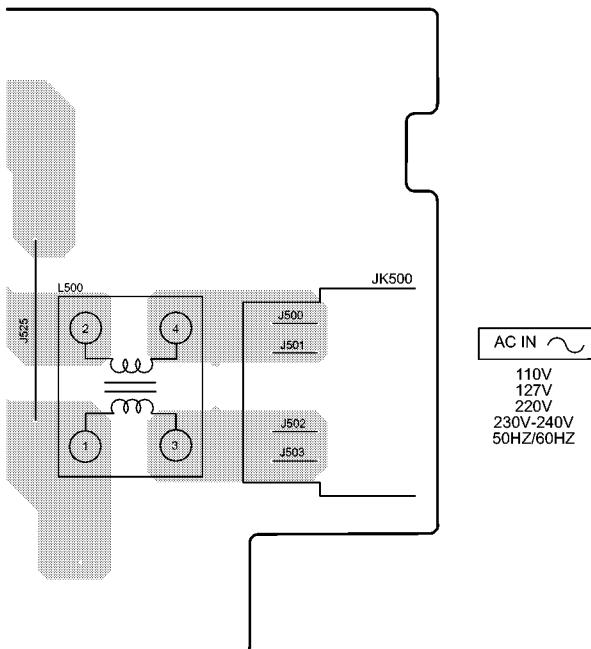


CAUTION
RISK OF ELECTRIC SHOCK
AC VOLTAGE LINE.
PLEASE DO NOT TOUCH THIS P.C.B.














E VOLTAGE SELECTOR P.C.B
(REPX0332A)

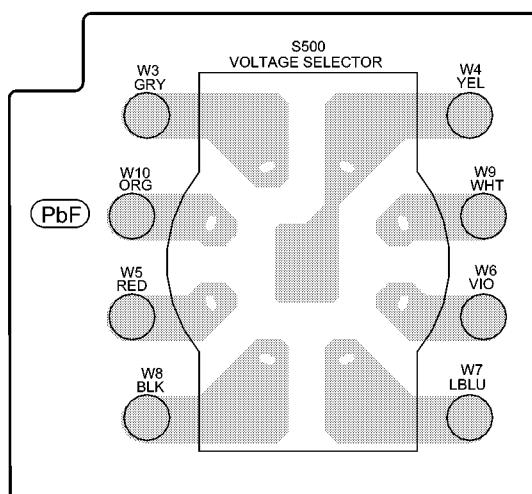

12 Wiring Connection Diagram

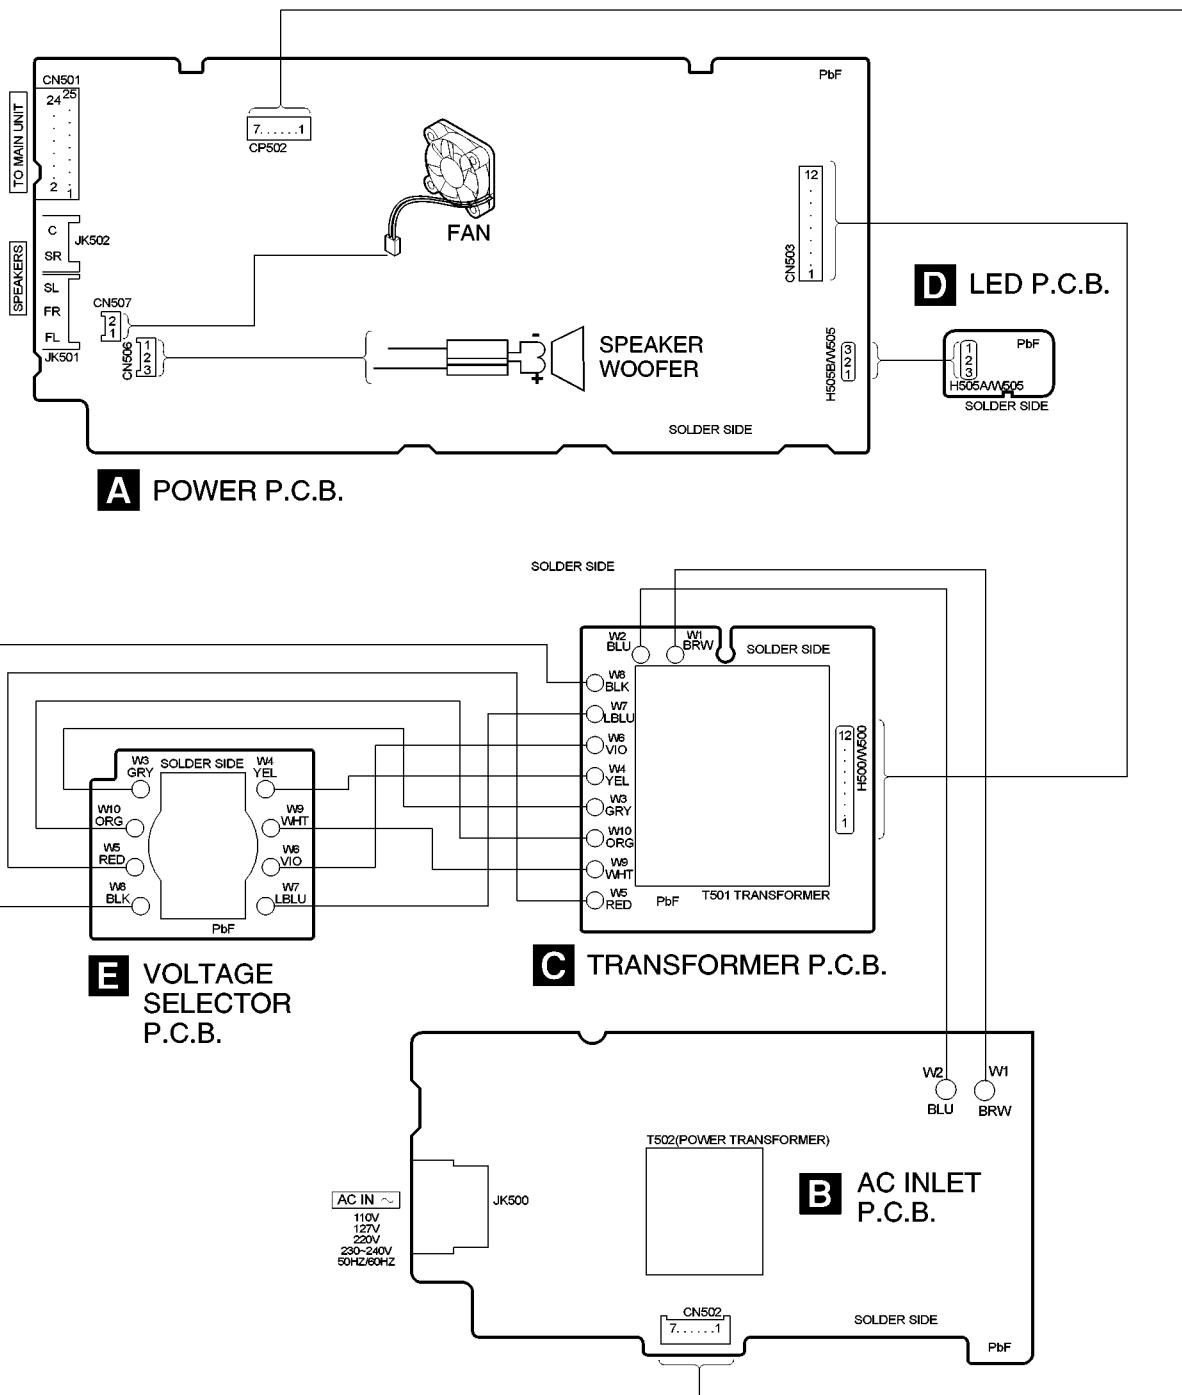

13 Illustration of IC's, Transistors and Diodes
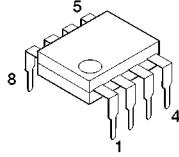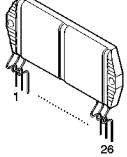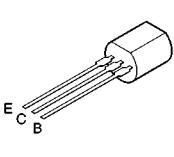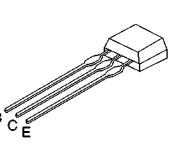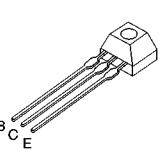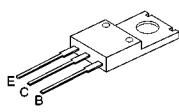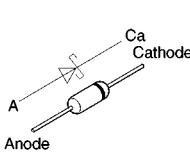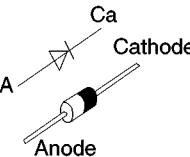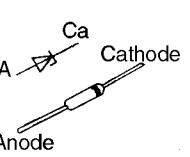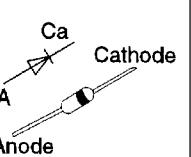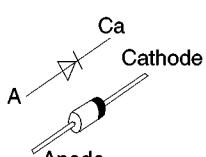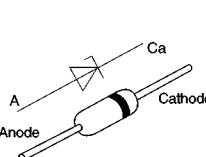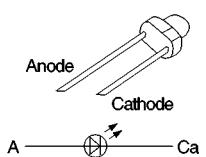
| | | | | |
|---|---|---|--|--|
| C0AABB000055  | RSN311W64B-P  | KTA12710YTA  | B1AAGC000007  | KRA102MTA KRC102MTA KTC3199GRTA  |
| KTC2026  | MA2C700A0F  | B0HARM000017  | B0BA9R600002  | B0AACK000004  |
| B0EAKM000085 B0JAPG000019  | B0BA7R000005 B0BA5R100013  | SLI325URCT31  | | |

14 Parts Location and Replacement Parts List

Notes:

- Important safety notice:

Components identified by Δ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardent (resistors), high-quality sound (capacitors), low noise (resistors), etc are used.

When replacing any of these components, be sure to use only manufacturer's specified parts shown in the parts list.

- The parenthesized indications in the Remarks columns specify the areas or colour. (Refer to the cover page for area or colour)

Parts without these indications can be used for all areas.

- Capacitor values are in microfarads (μF) unless specified otherwise, P= Pico-farads (pF), F= Farads.

- Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM).


- The marking (RTL) indicates that the Retention Time is limited for this items. After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of a availability is dependent on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

- [M] Indicates in the Remarks columns indicates parts supplied by PAVCSG.

- The "(SF)" mark denotes the standard part.

14.1. Cabinet

14.1.1. Cabinet Parts Location

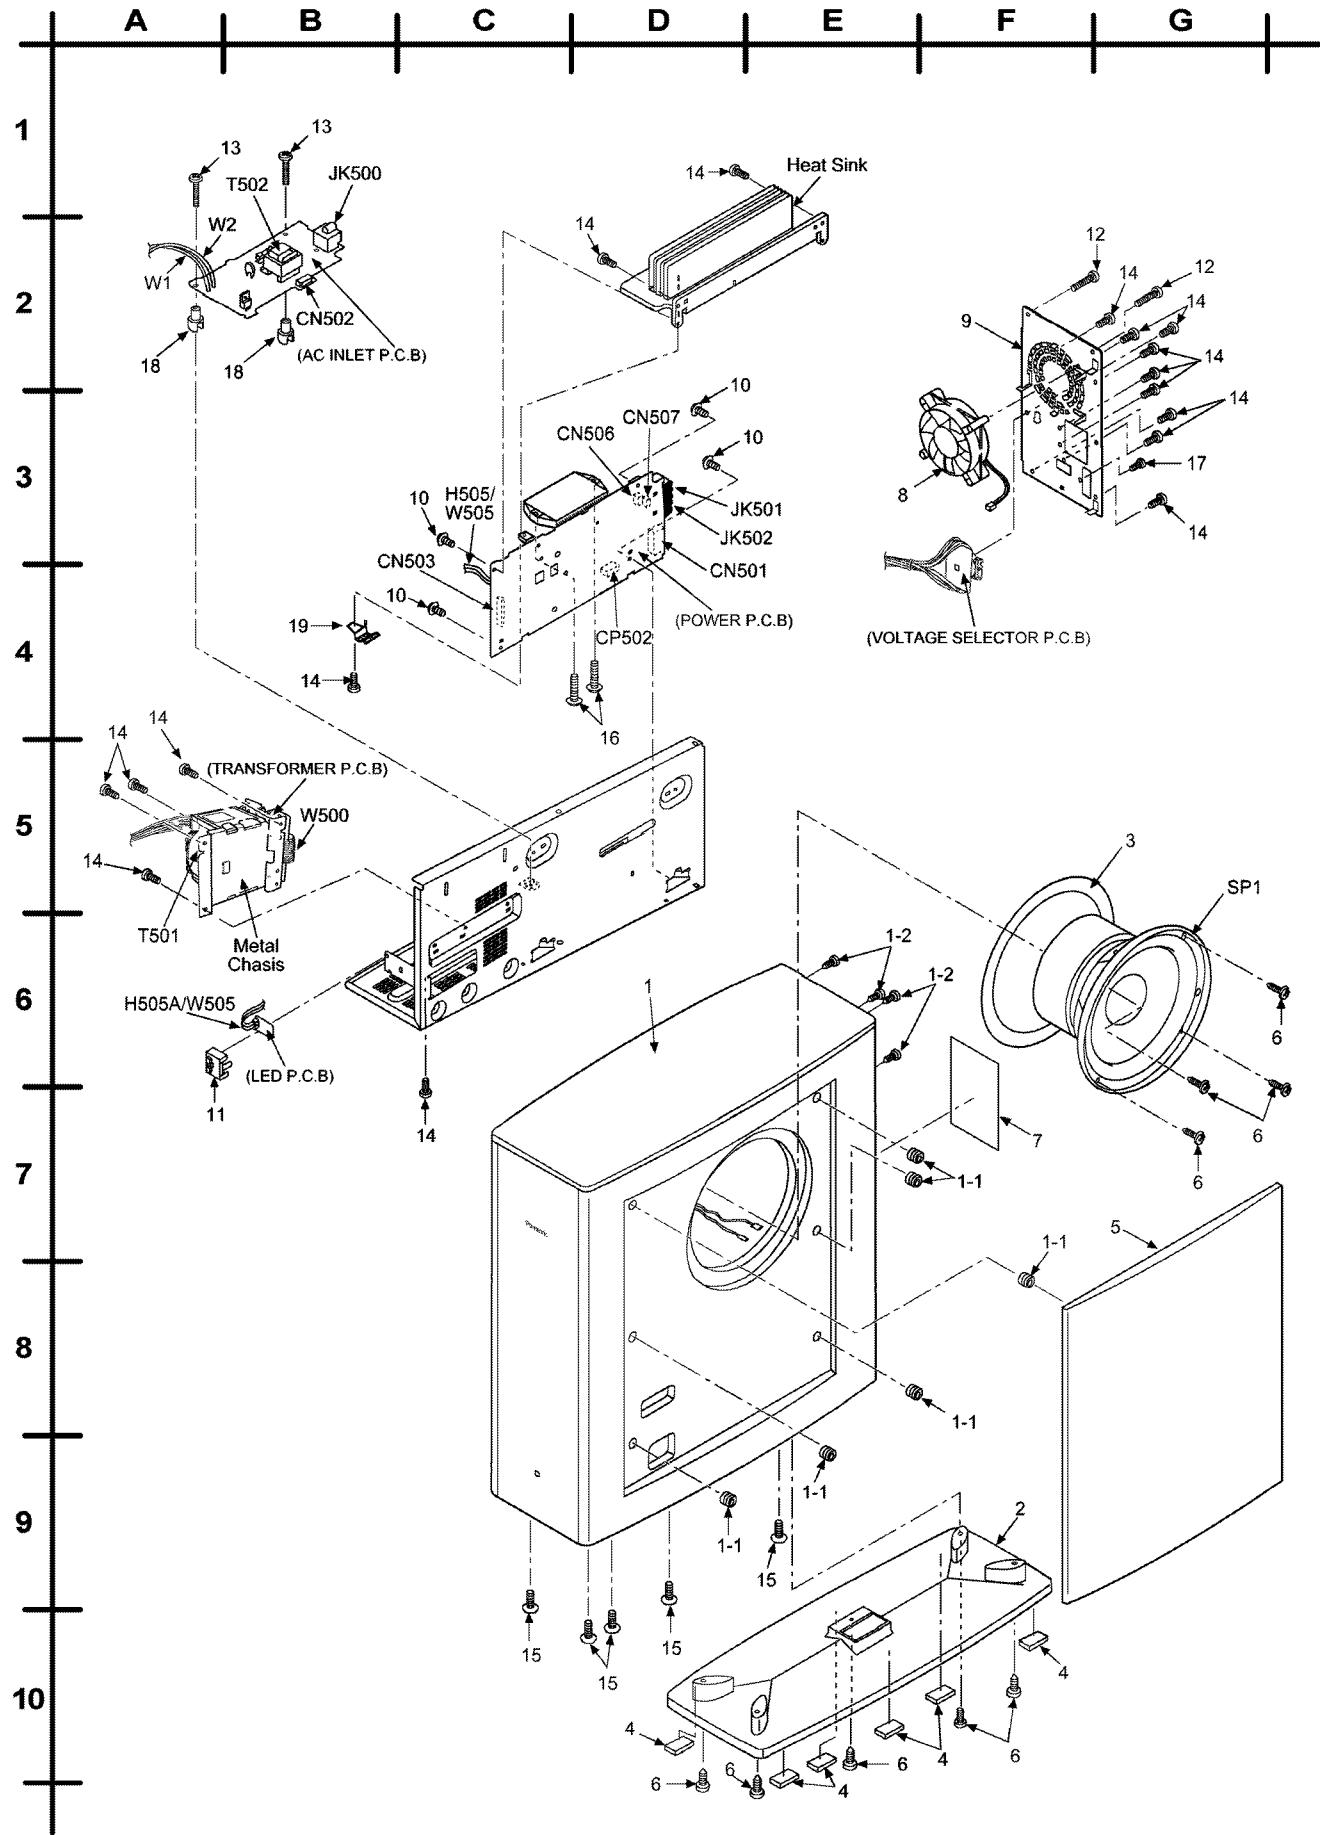

14.1.2. Cabinet Parts List

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| | | CABINET AND CHASSIS | |
| 1 | RFKHBWAMT1PS | SPK CABINET ASS'Y | [M] |
| 1-1 | RMG0520-K | CATCH | [M] |
| 1-2 | XTB4+12AFN | SCREW | [M] |
| 2 | RGK1601-S | STAND ORNAMENT | [M] |
| 3 | RMQ0705 | EVA PACKING | [M] |
| 4 | RKA0147-K | FOOT | [M] |
| 5 | RYB0298AJ | NET FRAME ASS'Y | [M] |
| 6 | XTB4+14AFN | SCREW (WOOFER) | [M] |
| 7 | RGNX0175E-S | SPEC LABEL | [M] |
| 8 | REM0072-3 | FAN | [M] |
| 9 | RGR0332B-MA | REAR PANEL | [M] |
| 10 | RHD30092 | SCREW (MAIN PCB) | [M] |
| 11 | RMR1485-W | LED HOLDER | [M] |
| 12 | XTB3+16AFZ | SCREW | [M] |
| 13 | XTB3+20JFZ | SCREW | [M] |
| 14 | XTB3+8JFZ1 | SCREW | [M] |
| 15 | XTS4+20JFZ | SCREW | [M] |
| 16 | XTW3+15T | SCREW | [M] |
| 17 | XYC26+CJ6FZ | SCREW | [M] |
| 18 | SHE187-6J | PCB SUPPORT | [M] |
| 19 | RMC0158-S | TR. FIXTURE | [M] |

14.2. Component Parts List

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|---|-----------|
| | | PRINTED CIRCUIT BOARD | |
| | | | |
| | REPX0332A | POWER P.C.B. / AC INLET P.C.B. / TRANSFORMER P.C.B. / VOLTAGE SELECTOR P.C.B. / LED P.C.B. | [M] (RTL) |
| | | | |
| | | INTEGRATED CIRCUITS | |
| | | | |
| IC501 | RSN311W64B-P | HIC | [M] |
| IC502 | COAABB000055 | IC AMP | [M] |
| | | | |
| | | TRANSISTORS | |
| Q501 | KTC3199GRTA | TRANSISTOR | [M] |
| Q502 | KTC3199GRTA | TRANSISTOR | [M] |
| Q503 | KTC3199GRTA | TRANSISTOR | [M] |
| Q505 | KTC3199GRTA | TRANSISTOR | [M] |
| Q506 | KRA102MTA | TRANSISTOR | [M] |
| Q507 | KTC3199GRTA | TRANSISTOR | [M] |
| Q508 | KTA12710YTA | TRANSISTOR | [M] |
| Q509 | KTC3199GRTA | TRANSISTOR | [M] |
| Q510 | KTC3199GRTA | TRANSISTOR | [M] |
| Q511 | KTC2026 | TRANSISTOR | [M] |
| Q513 | KTC3199GRTA | TRANSISTOR | [M] |
| Q514 | KTC3199GRTA | TRANSISTOR | [M] |
| Q515 | KTC3199GRTA | TRANSISTOR | [M] |
| Q516 | KRC102MTA | TRANSISTOR | [M] |
| Q517 | KTC2026 | TRANSISTOR | [M] |
| Q518 | B1AACG000007 | TRANSISTOR | [M] |
| Q519 | KTC3199GRTA | TRANSISTOR | [M] |
| Q520 | KRA102MTA | TRANSISTOR | [M] |
| | | | |
| | | DIODES | |
| D500 | B0AACK000004 | DIODE | [M] |
| D501 | B0JAPG000019 | DIODE | [M] |
| D502 | B0JAPG000019 | DIODE | [M] |
| D503 | MA2C700A0F | DIODE | [M] |
| D504 | B0AACK000004 | DIODE | [M] |
| D505 | B0AACK000004 | DIODE | [M] |
| D506 | B0AACK000004 | DIODE | [M] |
| D507 | B0AACK000004 | DIODE | [M] |
| D508 | B0AACK000004 | DIODE | [M] |
| D509 | B0BA5R100013 | DIODE | [M] |
| D510 | B0BA9R600002 | DIODE | [M] |
| D511 | B0HARM000017 | DIODE | [M] |
| D512 | B0HARM000017 | DIODE | [M] |
| D513 | B0HARM000017 | DIODE | [M] |
| D514 | B0HARM000017 | DIODE | [M] |
| D515 | B0EAKM000085 | DIODE | [M] |
| D516 | B0EAKM000085 | DIODE | [M] |
| D517 | B0HARM000017 | DIODE | [M] |
| D518 | B0HARM000017 | DIODE | [M] |
| D519 | B0AACK000004 | DIODE | [M] |
| D524 | SLI325URCT31 | DIODE | [M] |
| D525 | B0BA7R000005 | DIODE | [M] |
| D527 | B0EAKM000085 | DIODE | [M] |
| D528 | B0EAKM000085 | DIODE | [M] |
| D529 | MA2C700A0F | DIODE | [M] |
| D530 | B0EAKM000085 | DIODE | [M] |
| D533 | B0BA5R100013 | DIODE | [M] |
| D534 | B0AACK000004 | DIODE | [M] |
| | | CONNECTORS | |
| CN501 | K1FB125B0095 | SYSTEM CONNECTOR | [M] |
| CN502 | K1KB07B00020 | 2P CONNECTOR | [M] |
| CN503 | K1KA12A00066 | CONNECTOR | [M] |
| CN506 | K1KA03A00006 | CONNECTOR | [M] |
| CN507 | K1KA02A00008 | CONNECTOR | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| CP502 | K1KA07A00123 | 2P CONNECTOR | [M] |
| | | COILS & TRANSFORMERS | |
| L500 | RLQZ371 | LINE FILTER | [M] △ |
| T501 | ETP76VSU62DA | POWER TRANSFORMER | [M] △ |
| T502 | G4C2AAJ00005 | BACK-UP TRANSFORMER | [M] △ |
| | | COMPONENT COMBINATION | |
| Z501 | ERZV10V511CS | ZENER | [M] △ |
| | | SPEAKER | |
| SP1 | EAST17PL21A6 | SPEAKER | [M] |
| | | RELAY | |
| RLY501 | RSY0040M-0 | PRIMARY RELAY | [M] △ |
| | | FUSES | |
| F1 | K5D312BK0010 | 3.15A FUSE | [M] △ |
| F2 | K5D162BK0005 | 1.6A FUSE | [M] △ |
| | | FUSE HOLDERS | |
| FC501 | EYF52BC | FUSE HOLDER | [M] |
| FC502 | EYF52BC | FUSE HOLDER | [M] |
| FC503 | EYF52BC | FUSE HOLDER | [M] |
| FC504 | EYF52BC | FUSE HOLDER | [M] |
| | | FUSE PROTECTOR | |
| FP1 | K5G502AA0002 | 5A FUSE PROTECTOR | [M] △ |
| | | HOLDERS | |
| H500 | K1YF12000002 | 12P WIRE HOLDER | [M] |
| H505A | RMR0312 | 3P CABLE HOLDER | [M] |
| H505B | RMR0312 | 3P CABLE HOLDER | [M] |
| | | JACKS | |
| JK500 | K2AA2B000004 | JK AC INLET | [M] △ |
| JK501 | K4BC06B00027 | JK 6P SPEAKER | [M] |
| JK502 | K4BC04B00056 | JK 4P SPEAKER | [M] |
| | | EARTH TERMINAL | |
| E500 | K4CZ01000027 | TERMINALS | [M] |
| E501 | K4CZ01000027 | TERMINALS | [M] |
| | | WIRES | |
| W1 | REE1205 | WIRE UNIT | [M] |
| W2 | REE1204 | WIRE UNIT | [M] |
| W3 | REEX0248 | PRIMARY WIRE | [M] |
| W4 | REEX0240 | PRIMARY WIRE | [M] |
| W5 | REEX0245 | PRIMARY WIRE | [M] |
| W6 | REEX0242 | PRIMAY WIRE | [M] |
| W7 | REEX0243 | PRIMAY WIRE | [M] |
| W8 | REEX0244 | PRIMARY WIRE | [M] |
| W9 | REEX0241 | PRIMARY WIRE | [M] |
| W10 | REEX0247 | PRIMARY WIRE | [M] |
| W500 | REX1146 | WIRE UNIT | [M] |
| W505 | RWJ1103320XX | 3P STRAND TYPE WIRE | [M] |
| | | RESISTORS | |
| R401 | ERDS2TJ224T | 220K 1/4W | [M] |
| R402 | ERDS2TJ102T | 1K 1/4W | [M] |
| R403 | ERDS2TJ104T | 100K 1/4W | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| R501 | ERDS2TJ472T | 4.7K 1/4W | [M] |
| R502 | ERDS2TJ472T | 4.7K 1/4W | [M] |
| R503 | ERDS2TJ153T | 15K 1/4W | [M] |
| R504 | ERDS2TJ153T | 15K 1/4W | [M] |
| R505 | ERDS2TJ153T | 15K 1/4W | [M] |
| R506 | ERDS2TJ153T | 15K 1/4W | [M] |
| R507 | ERDS2TJ392T | 3.9K 1/4W | [M] |
| R508 | ERDS2TJ392T | 3.9K 1/4W | [M] |
| R509 | ERDS2TJ472T | 4.7K 1/4W | [M] |
| R510 | ERDS2TJ472T | 4.7K 1/4W | [M] |
| R511 | ERDS2TJ153T | 15K 1/4W | [M] |
| R512 | ERDS2TJ153T | 15K 1/4W | [M] |
| R513 | ERDS2TJ563T | 56K 1/4W | [M] |
| R514 | ERDS2TJ563T | 56K 1/4W | [M] |
| R515 | ERDS2TJ563T | 56K 1/4W | [M] |
| R516 | ERDS2TJ563T | 56K 1/4W | [M] |
| R517 | ERDS2TJ563T | 56K 1/4W | [M] |
| R518 | ERDS2TJ563T | 56K 1/4W | [M] |
| R519 | ERDS2TJ824T | 820K 1/4W | [M] |
| R520 | ERDS2TJ223T | 22K 1/4W | [M] |
| R521 | ERDS2TJ103T | 10K 1/4W | [M] |
| R522 | ERDS2TJ273T | 27K 1/4W | [M] |
| R523 | ERDS2TJ124T | 120K 1/4W | [M] |
| R524 | ERDS2TJ124T | 120K 1/4W | [M] |
| R525 | ERDS2TJ154T | 150K 1/4W | [M] |
| R526 | ERDS2TJ124T | 120K 1/4W | [M] |
| R527 | ERDS2TJ124T | 120K 1/4W | [M] |
| R528 | ERDS2TJ154T | 150K 1/4W | [M] |
| R529 | ERDS2TJ223T | 22K 1/4W | [M] |
| R530 | ERD25FVJ1R0T | 1 1/4W | [M] |
| R531 | ERD25FVJ1R0T | 1 1/4W | [M] |
| R532 | ERDS2TJ472T | 4.7K 1/4W | [M] |
| R533 | ERDS1FVJ100T | 10 1/2W | [M] |
| R534 | ERDS1FVJ100T | 10 1/2W | [M] |
| R535 | ERDS1FVJ100T | 10 1/2W | [M] |
| R536 | ERDS1FVJ100T | 10 1/2W | [M] |
| R537 | ERDS1FVJ100T | 10 1/2W | [M] |
| R538 | ERDS1FVJ100T | 10 1/2W | [M] |
| R539 | ERDS2TJ101T | 100 1/4W | [M] |
| R540 | ERDS2TJ101T | 100 1/4W | [M] |
| R541 | ERDS2TJ101T | 100 1/4W | [M] |
| R542 | ERDS2TJ101T | 100 1/4W | [M] |
| R543 | ERDS2TJ101T | 100 1/4W | [M] |
| R544 | ERDS2TJ101T | 100 1/4W | [M] |
| R545 | ERDS2TJ224T | 220K 1/4W | [M] |
| R546 | ERDS2TJ102T | 1K 1/4W | [M] |
| R547 | ERDS2TJ394T | 390K 1/4W | [M] |
| R548 | ERDS2TJ334T | 330K 1/4W | [M] |
| R549 | ERDS2TJ473T | 47K 1/4W | [M] |
| R550 | ERDS2TJ103T | 10K 1/4W | [M] |
| R551 | ERDS2TJ472T | 4.7K 1/4W | [M] |
| R552 | ERDS2TJ562T | 5.6K 1/4W | [M] |
| R553 | ERDS2TJ563T | 56K 1/4W | [M] |
| R554 | ERDS2TJ824T | 820K 1/4W | [M] |
| R555 | ERDS2TJ104T | 100K 1/4W | [M] |
| R556 | ERDS2TJ103T | 10K 1/4W | [M] |
| R557 | ERDS2TJ563T | 56K 1/4W | [M] |
| R558 | ERDS1FVJ180T | 18 1/2W | [M] |
| R559 | ERDS2TJ563T | 56K 1/4W | [M] |
| R560 | ERDS2TJ103T | 10K 1/4W | [M] |
| R561 | ERDS2TJ101T | 100 1/4W | [M] |
| R565 | ERDS1FVJ392T | 3.9K 1/2W | [M] |
| R566 | ERDS2TJ271T | 270 1/4W | [M] |
| R567 | ERDS1FVJ152T | 1.5K 1/2W | [M] |
| R568 | ERDS2TJ151T | 150 1/4W | [M] |
| R569 | ERDS1FVJ392T | 3.9K 1/2W | [M] |
| R570 | ERDS2TJ103T | 10K 1/4W | [M] |
| R571 | ERDS2TJ332T | 3.3K 1/4W | [M] |
| R572 | ERDS2TJ223T | 22K 1/4W | [M] |
| R573 | D0XGR10JA005 | 0.1 1/10W | [M] |
| R575 | ERDS2TJ682T | 6.8K 1/4W | [M] |
| R577 | ERDS2TJ152T | 1.5K 1/4W | [M] |
| R578 | ERDS2TJ103T | 10K 1/4W | [M] |
| R579 | ERDS2TJ332T | 3.3K 1/4W | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|---------------|-------------------------|---------|
| R580 | ERDS2TJ220T | 22 1/4W | [M] |
| R587 | ERDS2TJ272T | 2.7K 1/4W | [M] |
| R588 | ERDS2TJ824T | 820K 1/4W | [M] |
| R589 | ERDS2TJ103T | 10K 1/4W | [M] |
| R590 | ERDS2TJ102T | 1K 1/4W | [M] |
| R591 | ERDS2TJ682T | 6.8K 1/4W | [M] |
| R592 | ERDS2TJ683T | 68K 1/4W | [M] |
| R593 | ERDS2TJ474T | 470K 1/4W | [M] |
| R594 | ERDS2TJ103T | 10K 1/4W | [M] |
| R595 | ERDS2TJ101T | 100 1/4W | [M] |
| R596 | ERDS2TJ473T | 47K 1/4W | [M] |
| R597 | ERDS2TJ103T | 10K 1/4W | [M] |
| R598 | ERDS1FVJ152T | 1.5K 1/2W | [M] |
| R599 | ERDS2TJ223T | 22K 1/4W | [M] |
| | | CAPACITORS | |
| C500 | ECKWRS102MBC | 1000P 400V | [M] △ |
| C501 | ECBT1H102KB5 | 1000P 50V | [M] |
| C502 | ECBT1H102KB5 | 1000P 50V | [M] |
| C503 | ECBT1H102KB5 | 1000P 50V | [M] |
| C504 | ECBT1H681KB5 | 680P 50V | [M] |
| C505 | ECBT1H102KB5 | 1000P 50V | [M] |
| C506 | ECBT1H102KB5 | 1000P 50V | [M] |
| C507 | ECBT1H180JC5 | 18P 50V | [M] |
| C508 | ECBT1H180JC5 | 18P 50V | [M] |
| C509 | ECBT1H220JC5 | 22P 50V | [M] |
| C510 | ECBT1H220JC5 | 22P 50V | [M] |
| C511 | ECBT1H220JC5 | 22P 50V | [M] |
| C512 | ECBT1H220JC5 | 22P 50V | [M] |
| C513 | F1D1H473A012 | 0.047 50V | [M] |
| C514 | ECA0JM101B | 100 6.3V | [M] |
| C515 | ECKR2H103ZF5 | 0.01 500V | [M] |
| C516 | ECKR2H103ZF5 | 0.01 500V | [M] |
| C517 | ECBT1C103NS5 | 0.01 16V | [M] |
| C518 | F1D1H473A012 | 0.047 50V | [M] |
| C519 | F1D1H473A012 | 0.047 50V | [M] |
| C520 | F1D1H473A012 | 0.047 50V | [M] |
| C521 | F1D1H473A012 | 0.047 50V | [M] |
| C522 | F1D1H473A012 | 0.047 50V | [M] |
| C523 | F1D1H473A012 | 0.047 50V | [M] |
| C524 | F1D1H1040002 | 0.1 50V | [M] |
| C525 | F1D1H1040002 | 0.1 50V | [M] |
| C526 | F1D1H1040002 | 0.1 50V | [M] |
| C527 | F1D1H1040002 | 0.1 50V | [M] |
| C528 | F1D1H473A012 | 0.047 50V | [M] |
| C529 | F1D1H1040002 | 0.1 50V | [M] |
| C530 | ECBT1H102KB5 | 1000P 50V | [M] |
| C531 | ECBT1H102KB5 | 1000P 50V | [M] |
| C532 | ECBT1H102KB5 | 1000P 50V | [M] |
| C533 | ECBT1H102KB5 | 1000P 50V | [M] |
| C534 | ECA1HM330B | 33 50V | [M] |
| C536 | ECEA1CKA330B | 33 16V | [M] |
| C537 | F1D1H1040002 | 0.1 50V | [M] |
| C538 | ECA0JM101B | 100 6.3V | [M] |
| C539 | ECEA0JKA221B | 220 6.3V | [M] |
| C540 | ECEA1HK2A2R2B | 2.2 50V | [M] |
| C541 | ECEA1CKA100B | 10 16V | [M] |
| C543 | ECBT1H102KB5 | 1000P 50V | [M] |
| C544 | ECA1HM101B | 100 50V | [M] |
| C545 | F1D1H1040002 | 0.1 50V | [M] |
| C546 | ECA1VM332B | 3300 35V | [M] |
| C547 | ECA1VM472B | 4700 35V | [M] |
| C548 | ECA1VM472B | 4700 35V | [M] |
| C549 | ECA1VM332B | 3300 35V | [M] |
| C550 | ECBT1C103NS5 | 0.01 16V | [M] |
| C551 | ECBT1H103KB5 | 0.01 50V | [M] |
| C552 | F1D1H1040002 | 0.1 50V | [M] |
| C553 | ECQE1104KF3 | 0.1 100V | [M] |
| C554 | ECQE1104KF3 | 0.1 100V | [M] |
| C555 | ECEA1VKA4R7B | 4.7 35V | [M] |
| C556 | ECBT1H103KB5 | 0.01 50V | [M] |
| C557 | F2A1C101A234 | 100P 16V | [M] |
| C558 | ECA1CM102B | 1000 16V | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| C559 | ECBT1H103KB5 | 0.01 50V | [M] |
| C560 | ECA1HM100B | 10 50V | [M] |
| C561 | ECA1HKA2R2B | 2.2 50V | [M] |
| C562 | ECQB1H562JF3 | 5600P 50V | [M] |
| C563 | ECQV1H823JL3 | 0.082 50V | [M] |
| C564 | ECBT1C122KR5 | 1200P 16V | [M] |
| C565 | F1D1H1040002 | 0.1 50V | [M] |
| C566 | F1D1H1040002 | 0.1 50V | [M] |
| C567 | ECA1HM100B | 10 50V | [M] |
| C568 | ECBT1C103NS5 | 0.01 16V | [M] |
| C569 | F1D1H473A012 | 0.047 50V | [M] |
| C570 | ECBT1H103KB5 | 0.01 50V | [M] |
| C571 | ECA1CM102B | 1000 16V | [M] |

14.3. Packing Materials & Accessories Parts List

| Ref. No. | Part No. | Part Name & Description | Remarks |
|--------------------------|----------|-------------------------|---------|
| PACKING MATERIALS | | | |
| P1 | RPF0357 | MIRAMAT (STAND) | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|----------|-------------------------|---------|
| P2 | RPNX0189 | POLYFOAM | [M] |
| P3 | RPPX0045 | MIRAMAT (S.WOOFER) | [M] |

14.4. Packaging

