


Service Manual

Amplifier

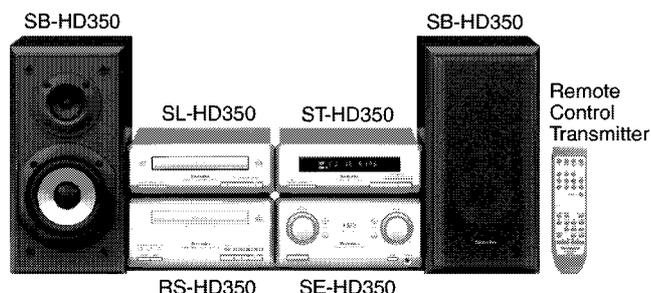

SE-HD350

Colour

(N).....Gold Type

Areas

(E).....Europe.

(EB).....Great Britain.

(EG).....Germany, Italy, France.

(EP).....Russia.

Because of unique interconnecting cables, when a component requires service, send or bring in the entire system.

System	SC-HD350
Tuner	ST-HD350
Amplifier	SE-HD350
CD Player	SL-HD350
Cassette Deck	RS-HD350
Speakers*	SB-HD350

*: Made in Spain.

Specifications

Amplifier section

Power output:

DIN 1 kHz, THD 1 %, both channels driven; 2 × 17 W (6 Ω)

RMS 1 kHz, THD 10 %, both channels driven; 2 × 22 W (6 Ω)

Total harmonic distortion:

Half power at 1 kHz; 0.07 % (6 Ω)

Load impedance:

6 Ω

S/N:

78 dB

Rated power, 2 V input, VGCA ON;

98 dB

Headphones

Jack type:

3.5 mm STEREO

Load impedance:

16 – 32 Ω

General

Power supply:

(E), (EG), (EP) areas;

AC 230 V, 50 Hz

(EB) area;

AC 230 – 240 V, 50 Hz

Power consumption:

73 W

STANDBY condition;

0.9 W

Dimensions (W×H×D):

206×104.8×273 mm

Mass:

2.7 kg

Notes: Specifications are subject to change without notice.

Mass and dimensions are approximate.

Total harmonic distortion is measured by the digital spectrum analyzer.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Technics®

© 2001 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

CONTENTS

	Page		Page
1 Before Repair	2	7 To Supply Power Source and Signal Check	8
2 Protection Circuitry	2	8 Schematic Diagram Notes	8
3 Accessories	3	9 Schematic Diagram	9
4 Caution for AC Mains Lead	4	10 Printed Circuit Board Diagram	13
5 Location of Controls	5	11 Type Illustration of ICs, Transistors and Diodes	17
6 Operation Checks and Component Replacement Procedures6		12 Wiring Connection Diagram	18
6.1. Checking for the power supply P.C.B.	6	13 Block Diagram	19
6.2. Checking for the operation P.C.B.	6	14 Replacement Parts List	20
6.3. Checking for the main P.C.B.	7	15 Cabinet Parts Location	23
6.4. Replacement for the power IC	7	16 Packaging	24

1 Before Repair

1. Turn off the power supply. Using a 10 Ω , 10 W resistor, connect both ends of power supply capacitors (C601, C602) in order to discharge the voltage.
2. Before turning the power supply on, after completion of repair, slowly apply the primary voltage by using a power supply voltage controller to make sure that the consumed current at 50 Hz in NO SIGNAL mode should be shown below with respect to supply voltage 230/240 V.

Power supply voltage	AC 230 V	AC 240 V
Consumed current 50 Hz	30 - 140 mA	

2 Protection Circuitry

The protection circuitry may have operated if either of the following conditions is noticed:

- No sound is heard when the power is supplied.
- Sound stops during a performance.

The functions of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are shorted, or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlined below:


1. Press the Standby/on button, switch to standby mode.
2. Determine the cause of the problem and correct it.
3. Press the Standby/on button once again, supply the power.

Note:


When the protection circuitry functions, the unit will not operate unless the Standby/on button is first switched Standby and then ON again.

3 Accessories


- AC power supply cord for (E), (EG), (EP) areas (RJA0019-1X).....1 pc.

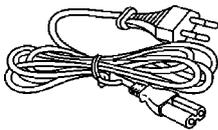


- AC power supply cord for (EB) area (RJA0053-2X).....1 pc.

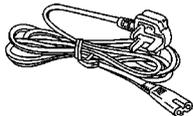

- AM loop antenna set (RSA0033B).....1 pc.

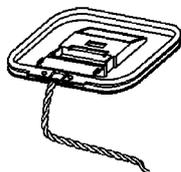


- FM indoor antenna (RSA0007).....1 pc.

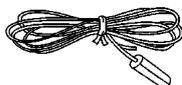

- Speaker cords (REE1057) (Red, Black).....2 pcs.




- Remote control transmitter (EUR7702010).....1 pc.

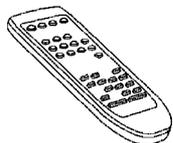

- Remote control batteries (R6/LR6, AA, UM-3).....2 pcs.

Note: These are available on sales route.

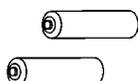

- Antenna plug adaptor for (EB) area (SJP9009).....1 pc.



4 Caution for AC Mains Lead

(For United Kingdom)

("EB" area code model only)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal which is coloured Blue or marked with the letter N or coloured Black or Blue.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  OR COLOURED GREEN OR GREEN/YELLOW.

THIS PLUG IS NOT WATERPROOF—KEEP DRY.

Before use

Remove the connector cover.

How to replace the fuse

The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

Figure A


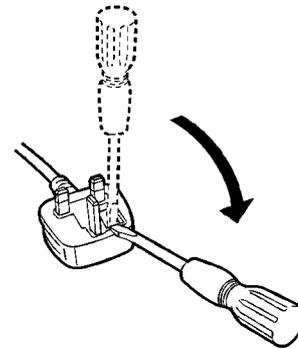


Figure B

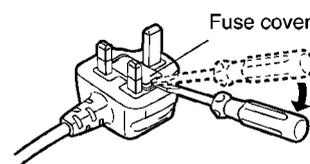

2. Replace the fuse and close or attach the fuse cover.

Figure A



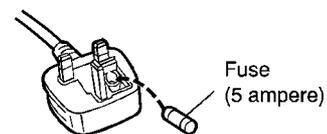



Figure B

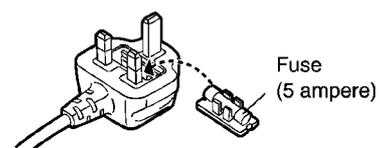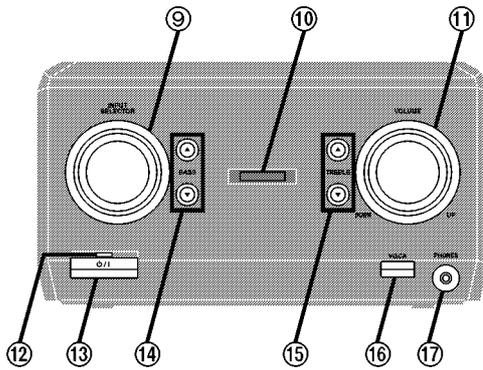

5 Location of Controls

A

A Amplifier

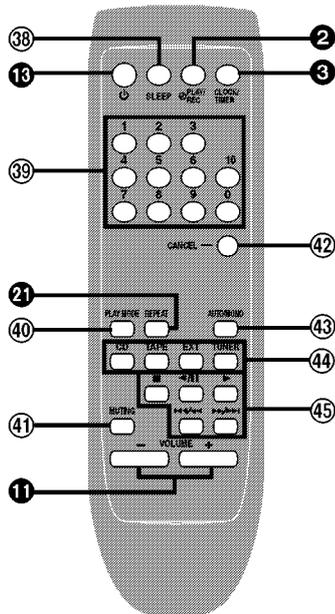- ⑨ **Input selector (INPUT SELECTOR)**
- ⑩ **VGCA indicator (VGCA)**
- ⑪ **Volume control (VOLUME)**
- ⑫ **Standby indicator**
When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.
- ⑬ **Standby/on switch (⏻/⏻)**
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ⑭ **Bass buttons (BASS ▲, ▼)**
- ⑮ **Treble buttons (TREBLE ▲, ▼)**
- ⑯ **VGCA (variable gain control amplifier) button (VGCA)**
- ⑰ **Headphone jack (PHONES)**

B

B Remote control


Buttons ②, ③, ⑪, ⑯, and ⑲ function in the same way as the controls on the main unit.

- ⑳ **Sleep timer button (SLEEP)**
- ㉑ **Numbered buttons**
- ㉒ **Play mode button (PLAY MODE)**
- ㉓ **Muting button (MUTING)**
- ㉔ **Cancel button (CANCEL)**
- ㉕ **FM mode button (AUTO/MONO)**
- ㉖ **Input select buttons (CD, TAPE, EXT, TUNER)**
- ㉗ **Basic operating buttons**
Function changes according to the source.


6 Operation Checks and Component Replacement Procedures

- This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
- For reassembly after operation checks or replacement, reverse the respective procedures. Special reassembly procedures are described only when required.

6.1. Checking for the power supply P.C.B.

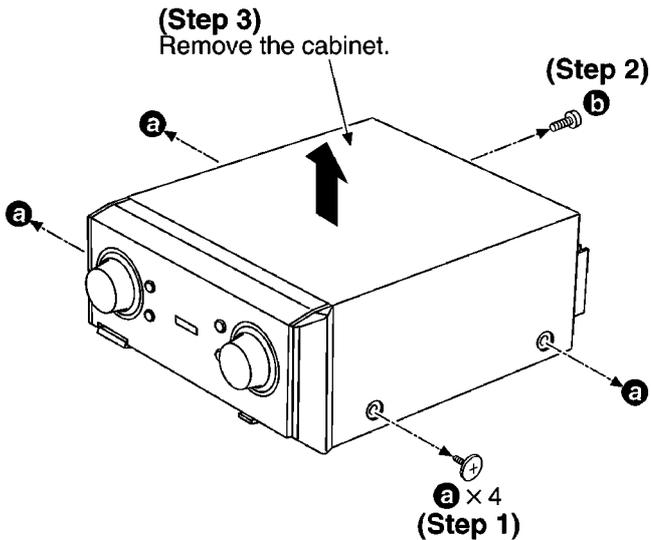


- Check the power supply P.C.B. as shown below.

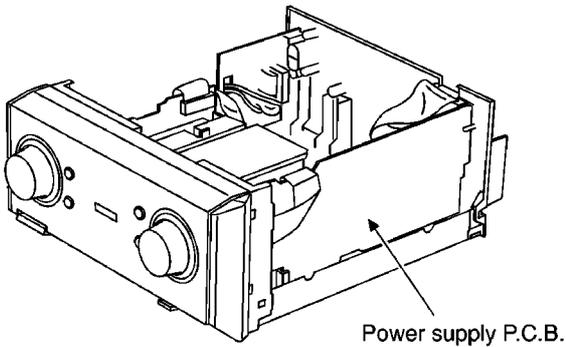


6.2. Checking for the operation P.C.B.

- Follow the (Step 1) - (Step 3) of item 6.1.

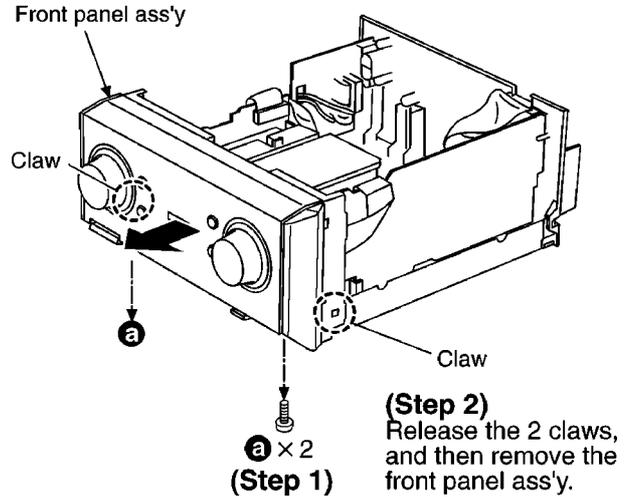


- Check the operation P.C.B. as shown below.

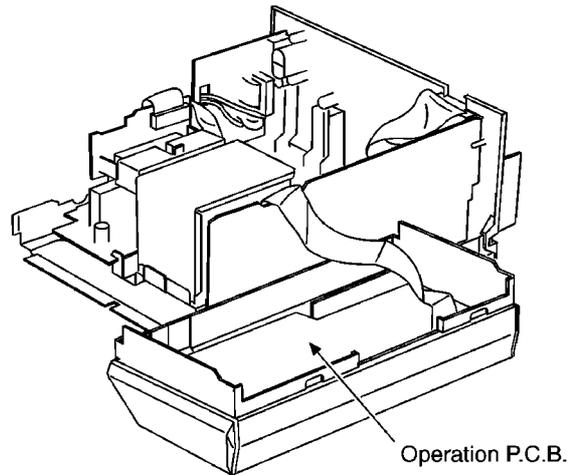


6.3. Checking for the main P.C.B.

- Follow the (Step 1) - (Step 3) of item 6.1.

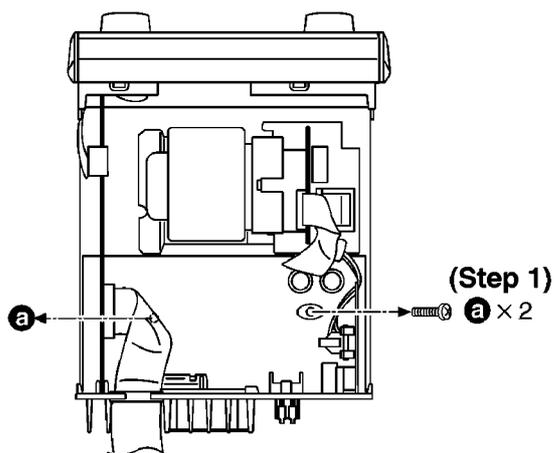


(Step 3)
Release the 2 claws, and then remove the rear panel.

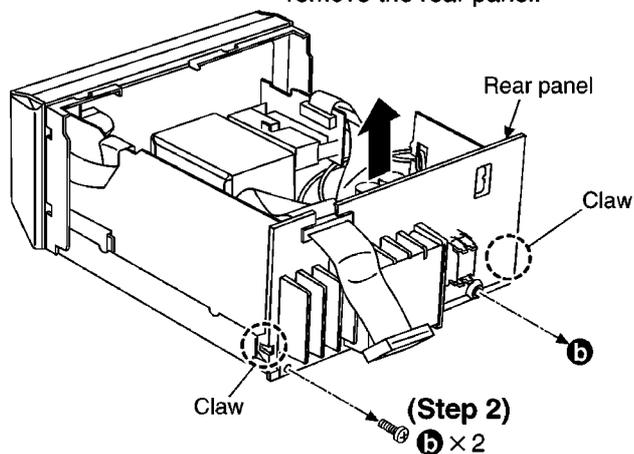

- Check the main P.C.B. as shown below.

(Step 4)

Turn the rear panel, power supply P.C.B. and main P.C.B., and then put on the them to front panel ass'y.

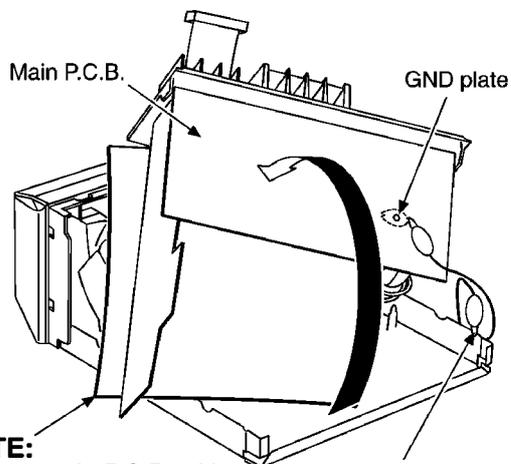

NOTE:
Insulate main P.C.B. with insulation material to avoid short-circuit.



(Step 5)
Connect the lead wire.

6.4. Replacement for the power IC

- Follow the (Step 1) - (Step 3) of item 6.1.
- Follow the (Step 1) - (Step 3) of item 6.3.

(Step 1)

Remove the 3 connectors.

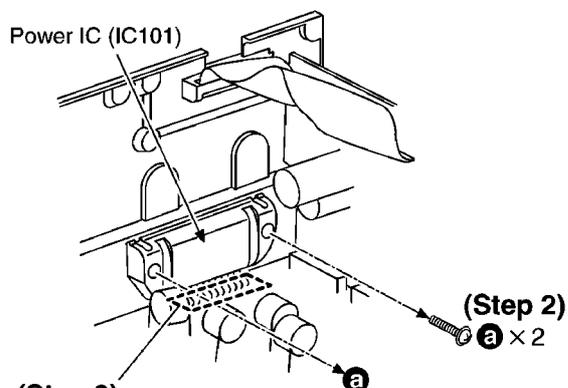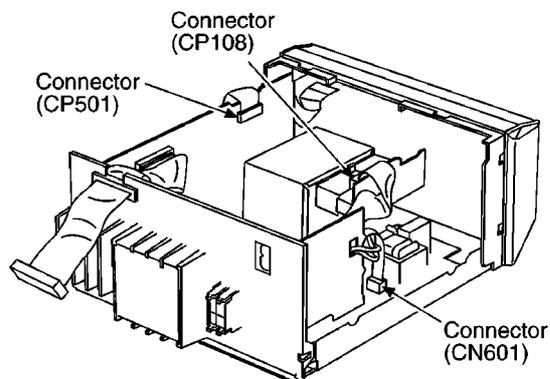

(Step 3)
Unsolder the terminals of power IC.

NOTE:

When mounting the power IC apply silicone compound (RFKX0002) to the rear side of power IC.

7 To Supply Power Source and Signal Check

To operate this unit SE-HD350 normally, it is necessary to connect to the unit ST-HD350. When operating the unit SE-HD350, be sure to connect to the unit ST-HD350 by connection cable.

1. Connect with the Tuner (ST-HD350). Refer to Fig. 7-1.
2. Connect the AC power supply cord to the Amplifier (SE-HD350). Refer to Fig. 7-1.

3. Connect the speakers to speaker terminal.
Refer to Fig. 7-1.
4. Turn on the power of the Amplifier (SE-HD350).
5. Set INPUT SELECTER to select the external source (EXT) of the Amplifier (SE-HD350).
6. Input a sound signal to external input terminal of the Tuner (ST-HD350), and confirm to be outputted from the speaker.

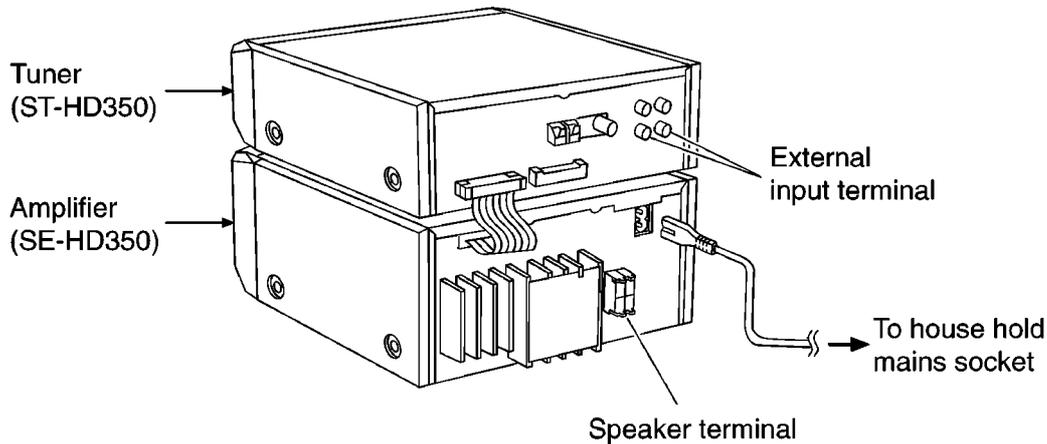


Fig. 7-1.

8 Schematic Diagram Notes

- This schematic diagram may be modified at any time with the development of new technology.

Notes:

S501:	Power standby/on switch ( /I)
S503:	Bass down switch (BASS ▼)
S504:	Bass up switch (BASS ▲)
S505:	VGCA (variable gain control amplifier) switch (VGCA)
S506:	Treble down switch (TREBLE ▼)
S507:	Treble up switch (TREBLE ▲)
VR501:	Input selector VR (INPUT SELECTOR)
VR502:	Volume control VR (VOLUME)

- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.

No mark : Power ON

- Important safety notice:

Components identified by  mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- The supply part number is described alone in the

replacement parts list.

• Caution!

IC and LSI are sensitive to static electricity.

Secondary trouble can be prevented by taking care during repair.


Cover the parts boxes made of plastics with aluminum foil.

Ground the soldering iron.

Put a conductive mat on the work table.

Do not touch the legs of IC or LSI with the fingers directly.


- Voltage and signal line

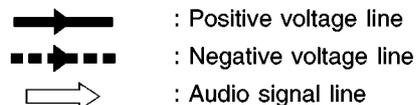


9 Schematic Diagram

A POWER SUPPLY CIRCUIT


: POSITIVE VOLTAGE LINE
 : NEGATIVE VOLTAGE LINE : AUDIO SIGNAL LINE

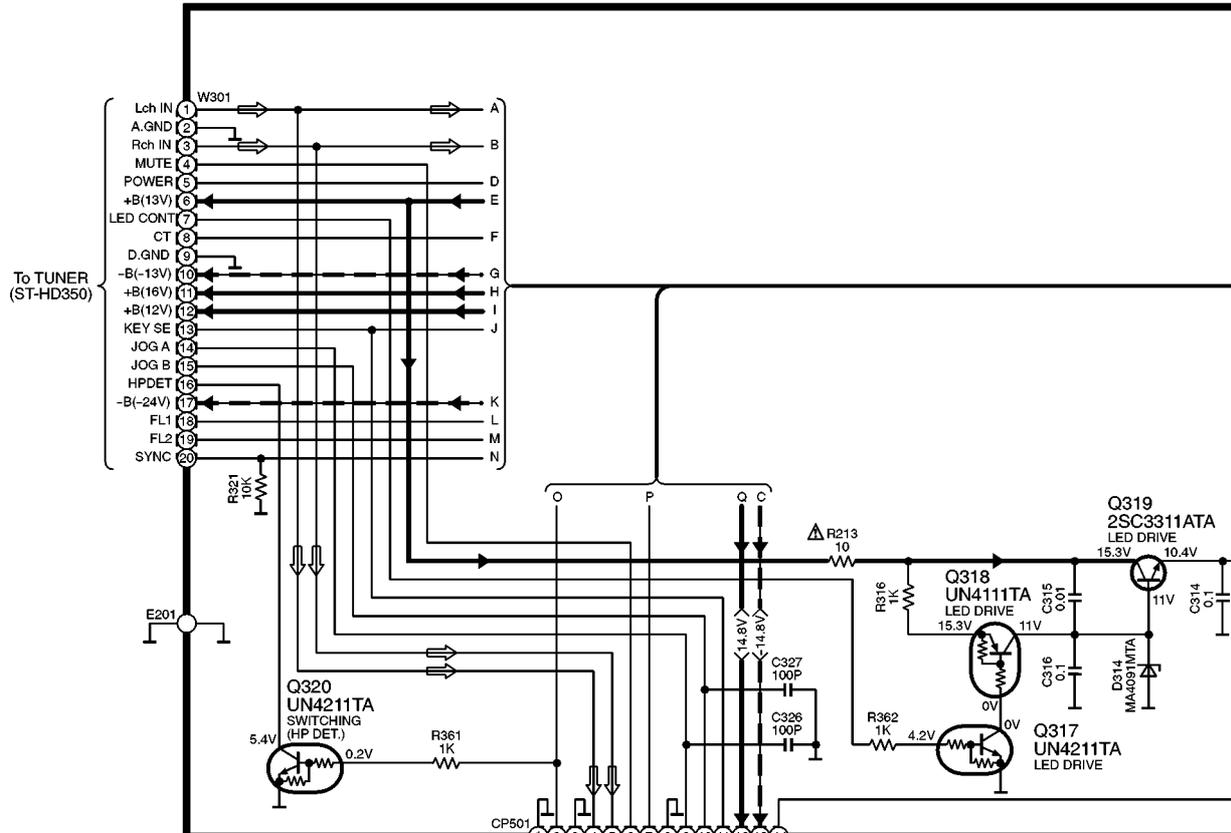

B OPERATION CIRCUIT


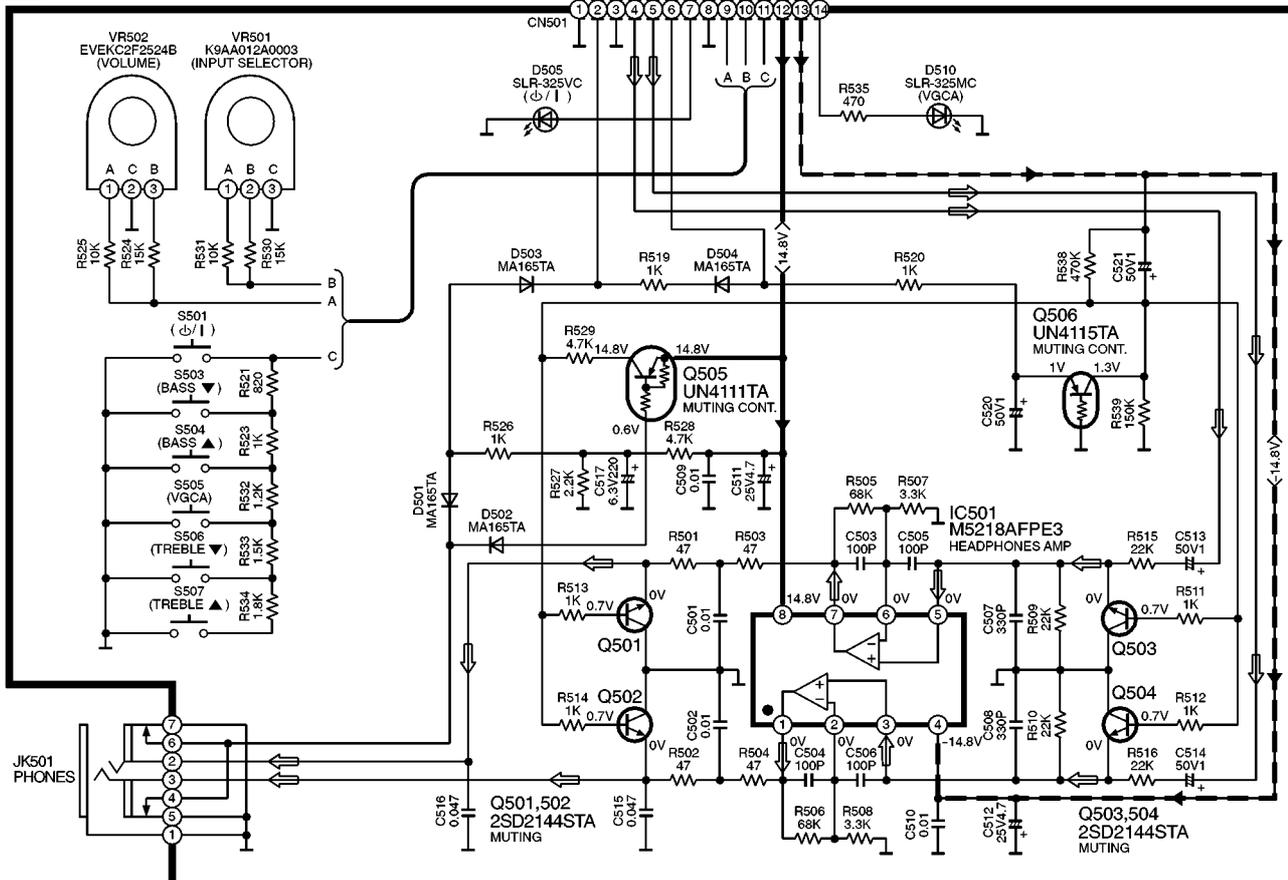


→ : POSITIVE VOLTAGE LINE - - - - - : NEGATIVE VOLTAGE LINE ⇨ : AUDIO SIGNAL LINE

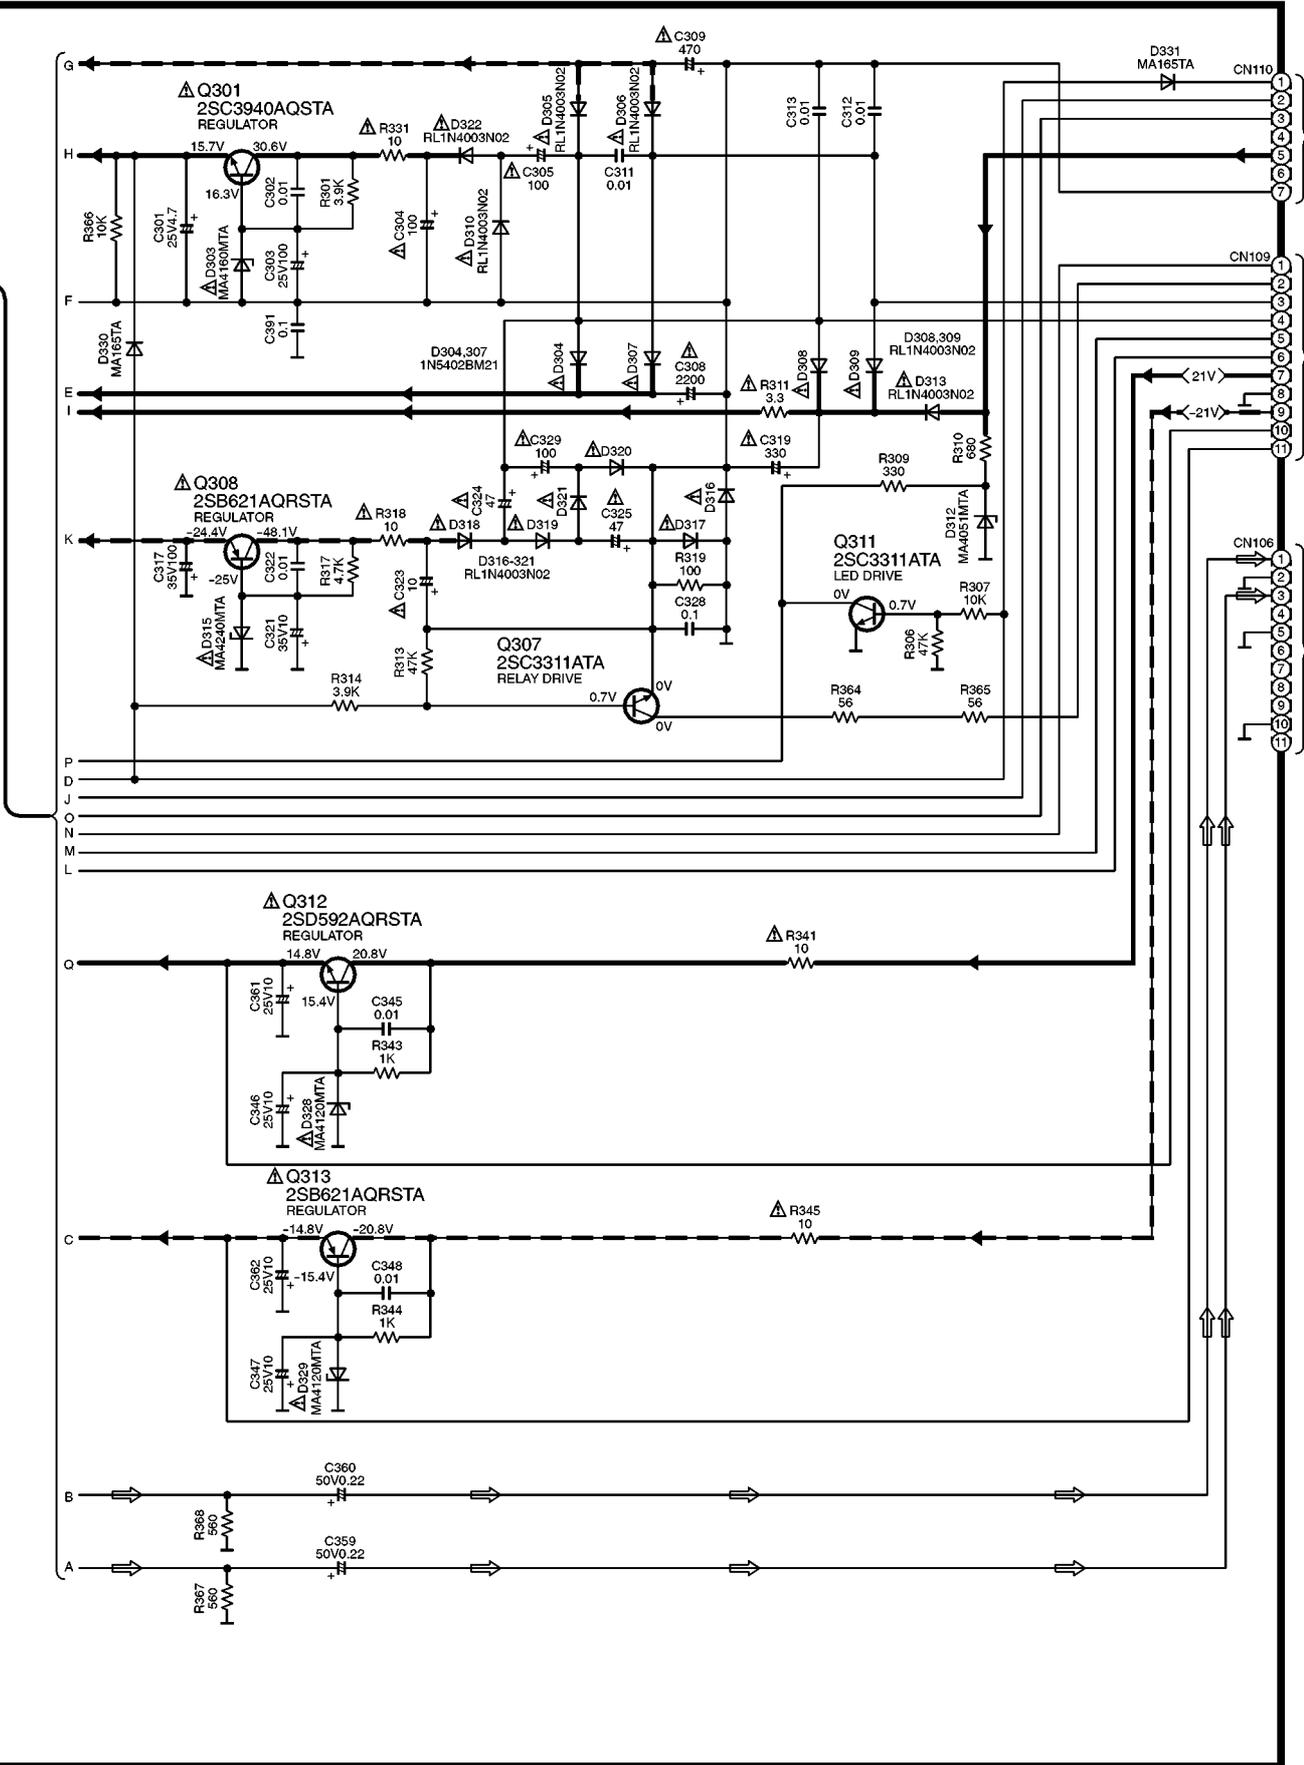


C MAIN CIRCUIT

→ : POSITIVE VOLTAGE LINE
 - - - : NEGATIVE VOLTAGE LINE ⇨ : AUDIO SIGNAL LINE

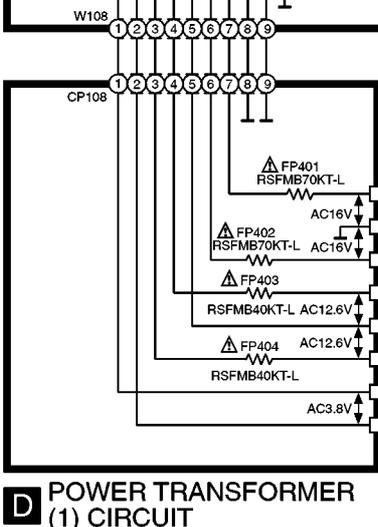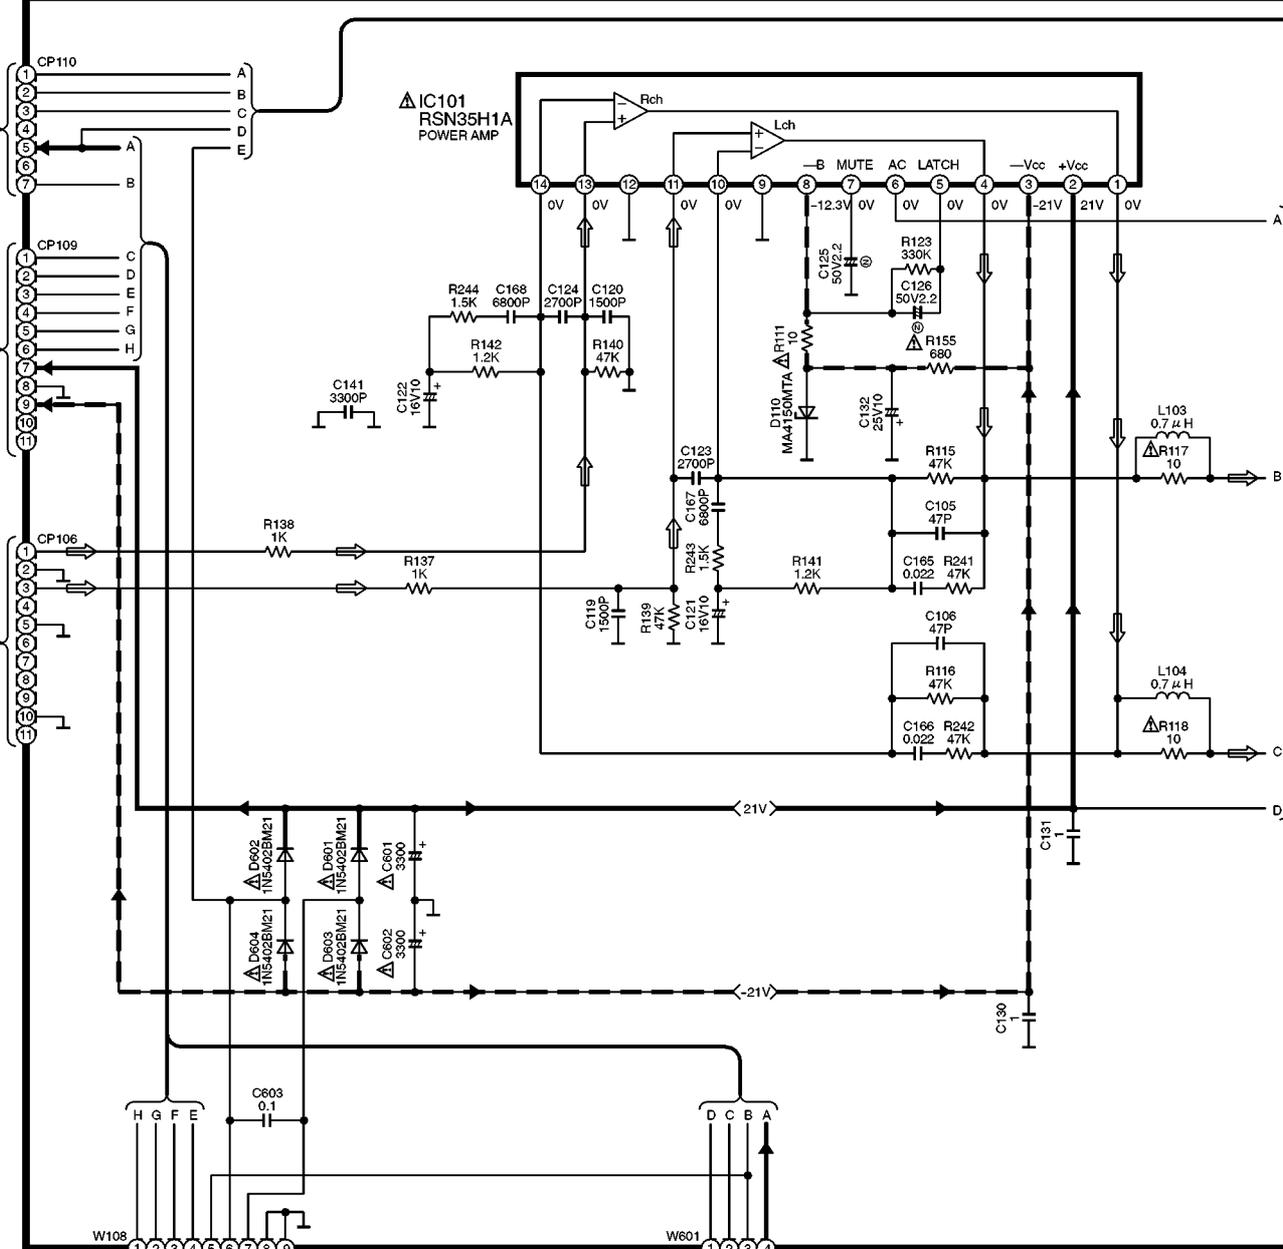


D POWER TRANSFORMER (1) CIRCUIT

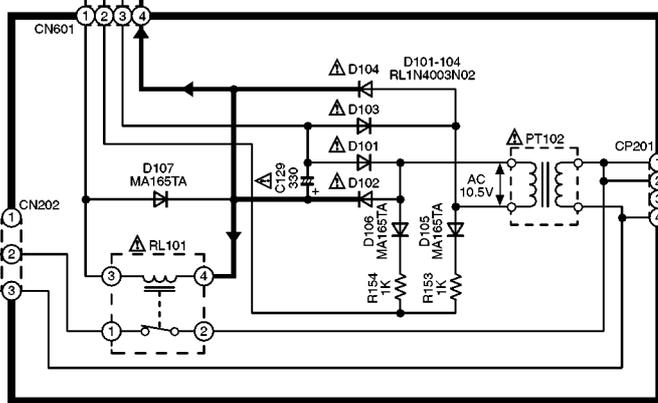


E POWER TRANSFORMER(2) CIRCUIT


⇨:AUDIO SIGNAL LINE

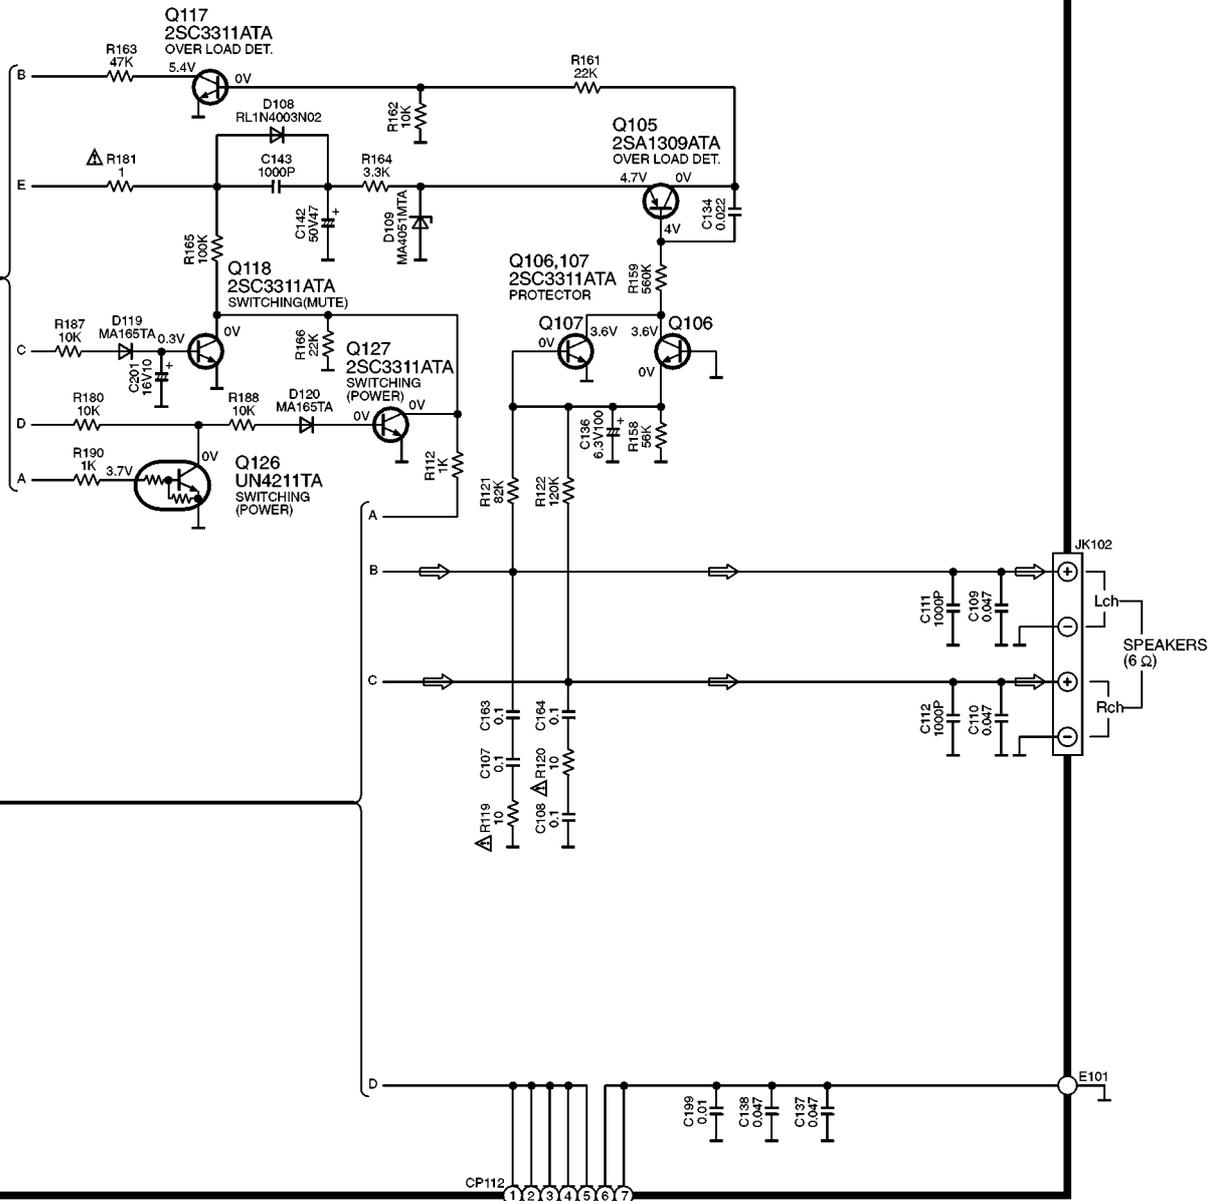


F AC IN CIRCUIT

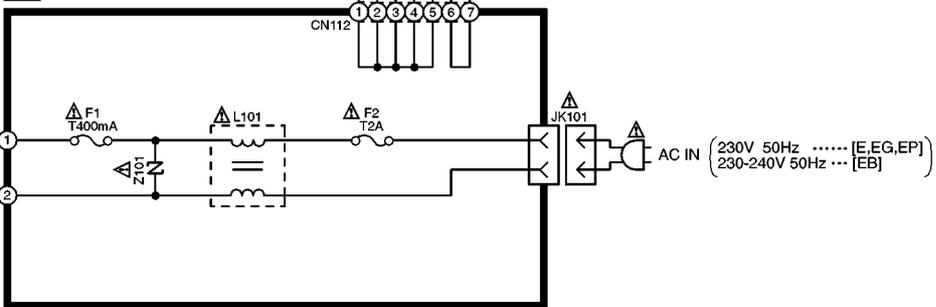

10 Printed Circuit Board Diagram

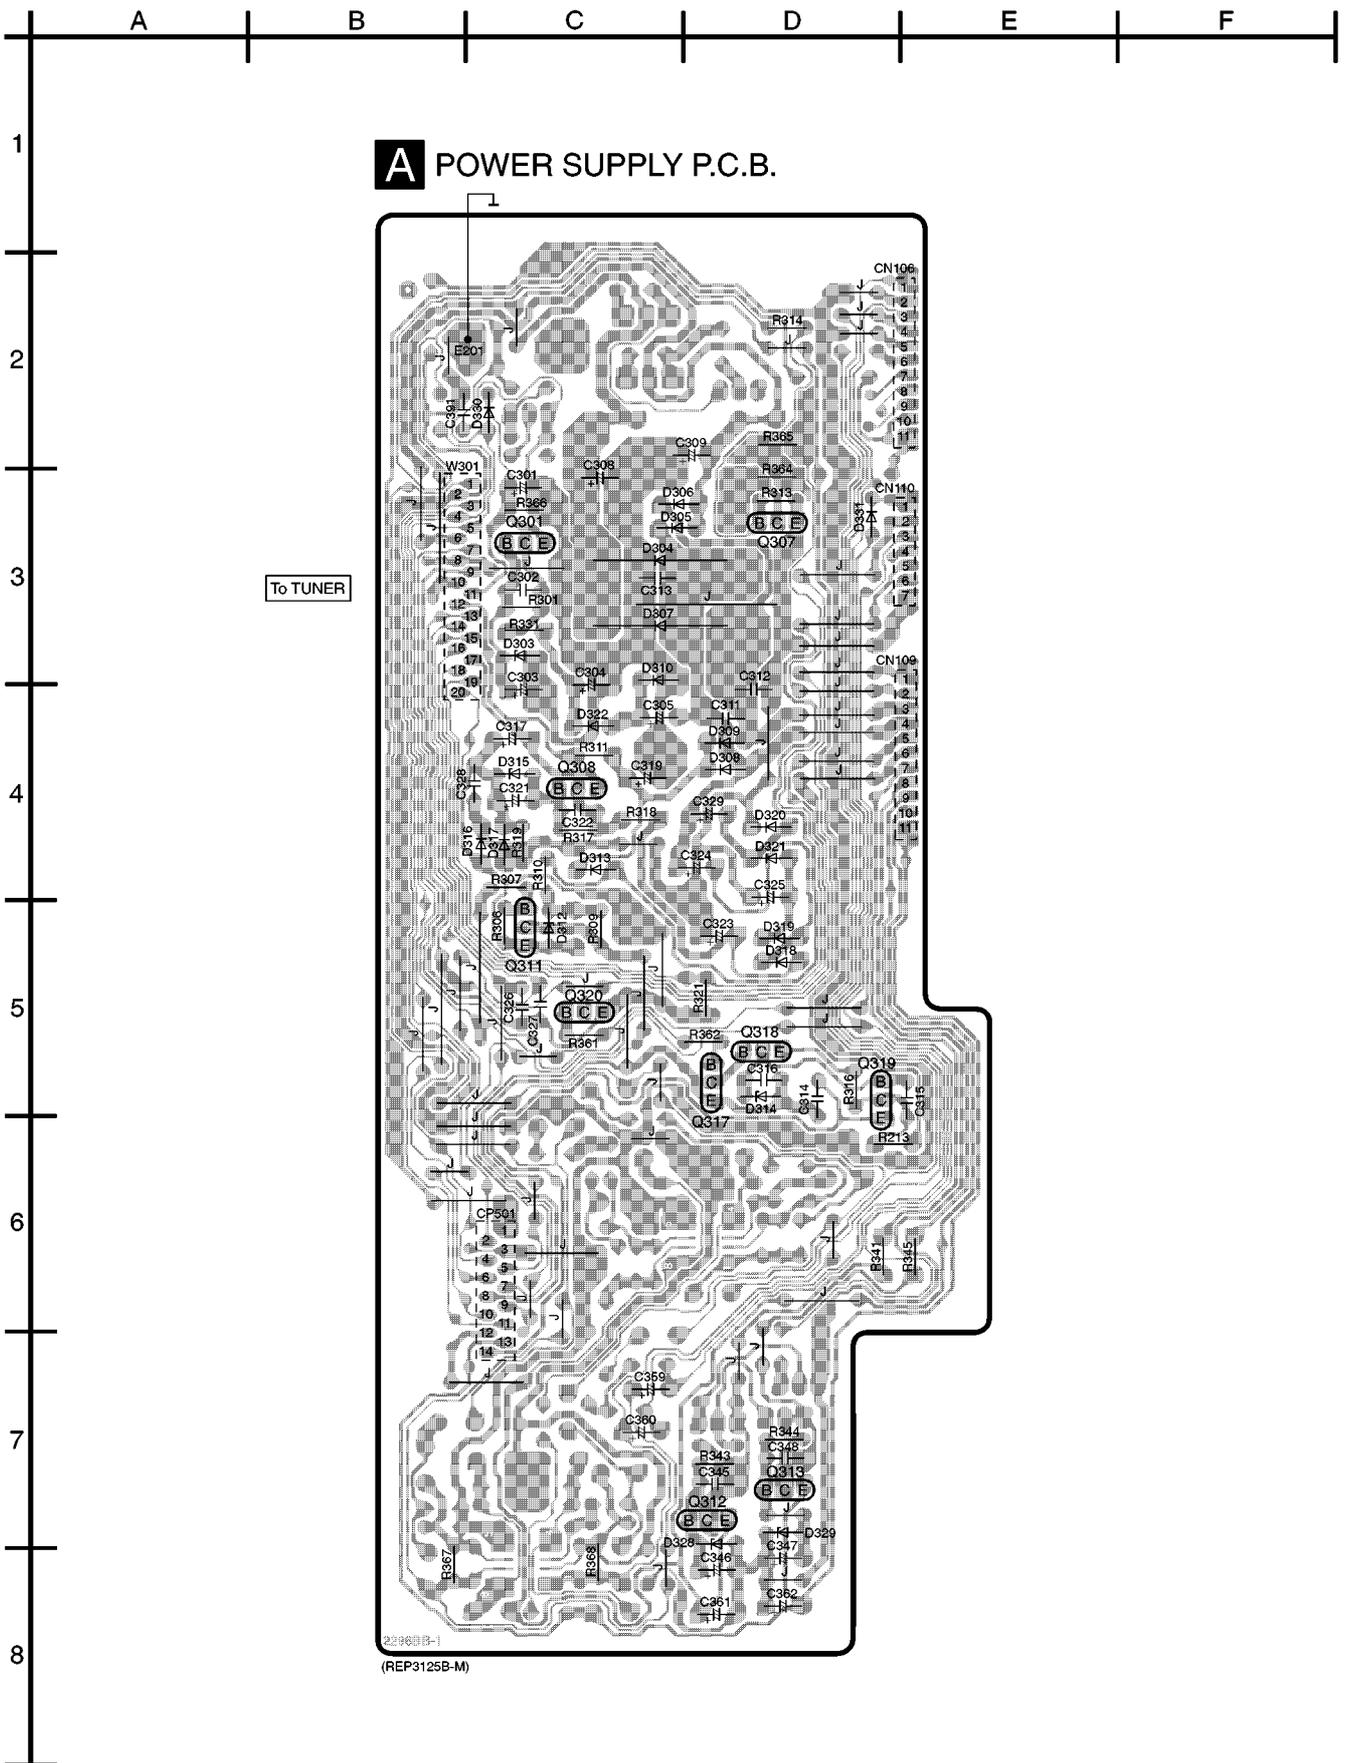

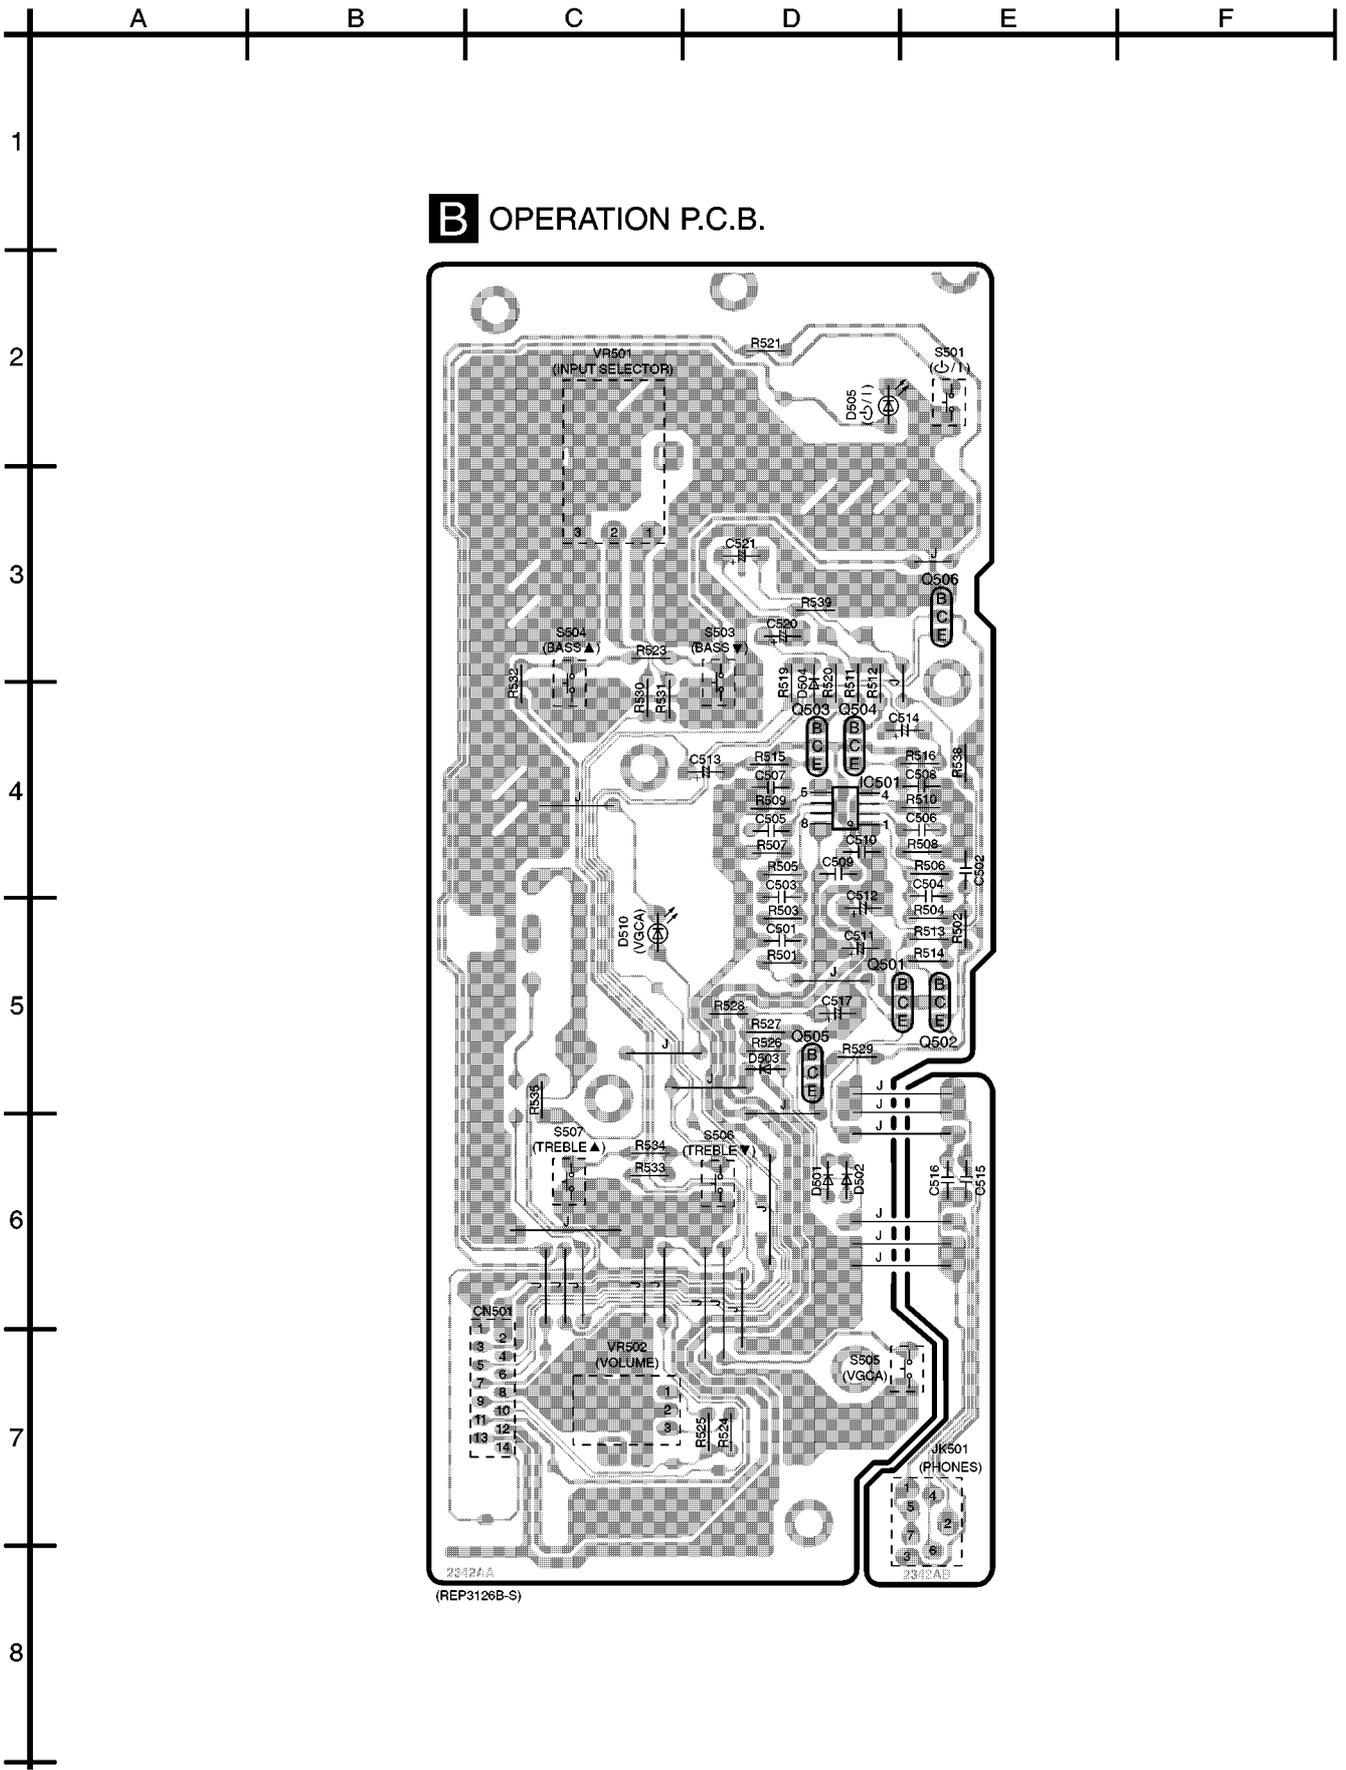

B OPERATION P.C.B.

23427.A
(REP3126B-S)

23428.AB

A B C D E F

1

C MAIN P.C.B.

2

3



4


5

6












7

8

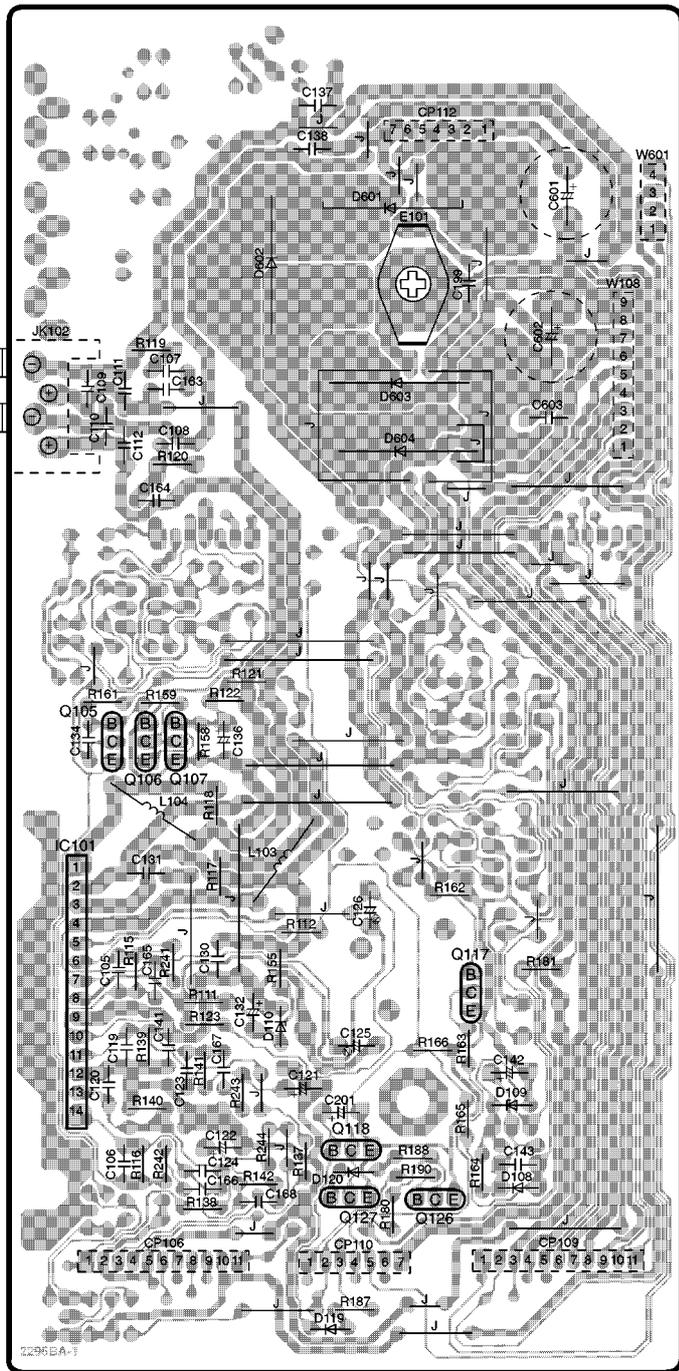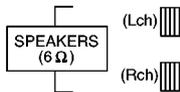


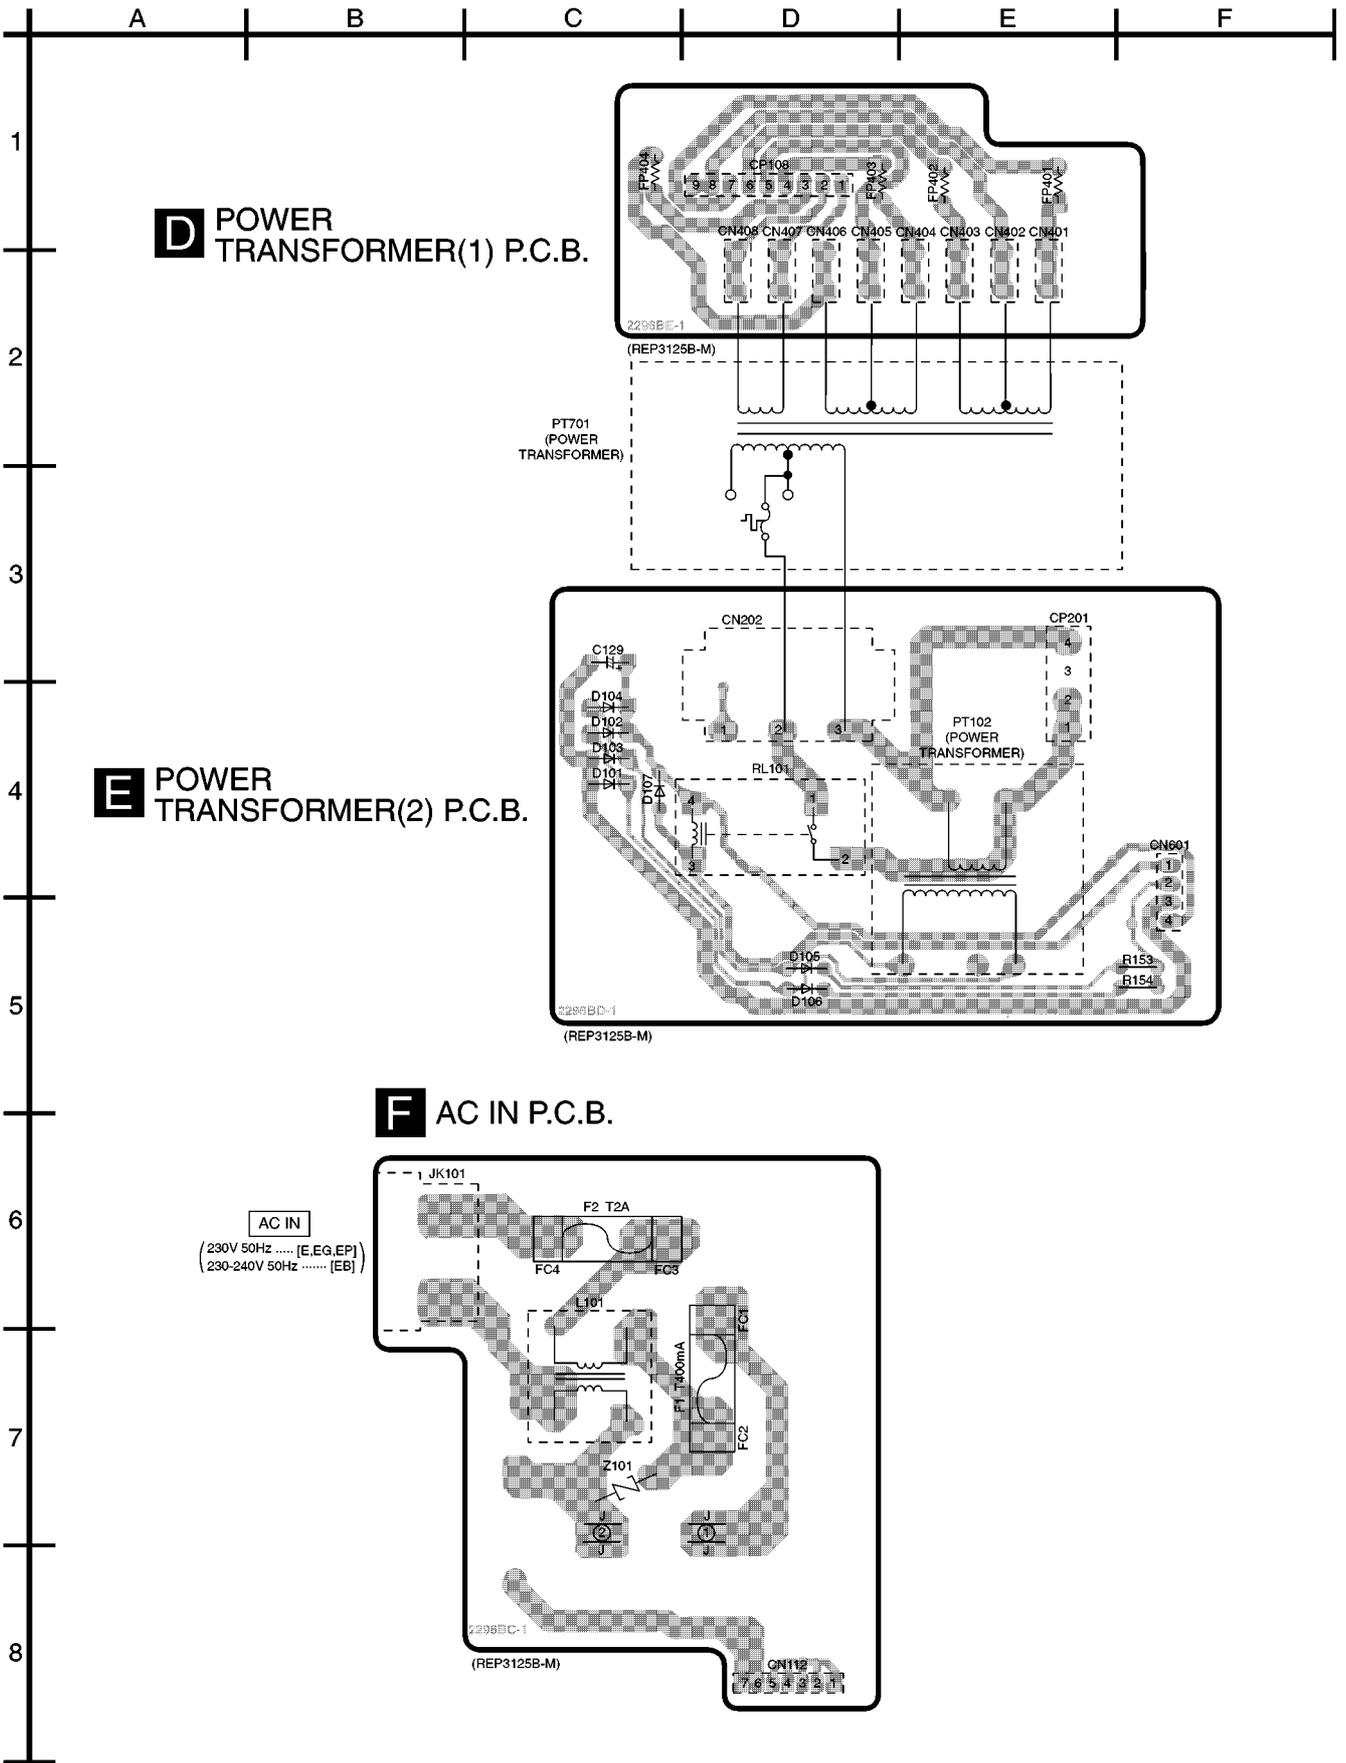

11 Type Illustration of ICs, Transistors and Diodes
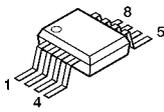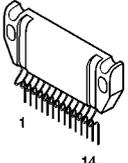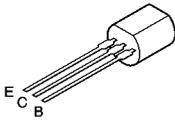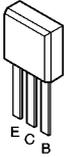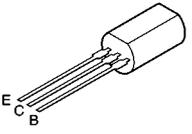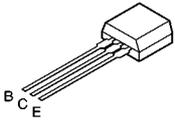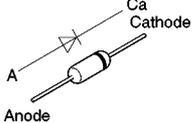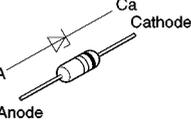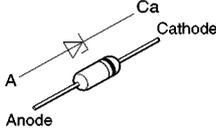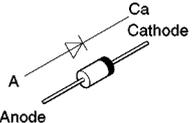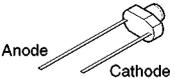
<p>M5218AFPE3</p> 	<p>RSN35H1A</p> 	<p>2SB621AQRSTA 2SD592AQRSTA</p> 	 <p>2SA1309ATA 2SC3311ATA UN4111TA UN4115TA UN4211TA</p>	<p>2SC3940AQSTA</p> 
<p>2SD2144STA</p> 	<p>MA165TA</p> 	<p>MA4051MTA</p> 	 <p>MA4091MTA MA4120MTA MA4150MTA MA4160MTA MA4240MTA</p>	<p>1N5402BM21 RL1N4003N02</p> 
 <p>SLR-325MC SLR-325VC</p> 				


12 Wiring Connection Diagram

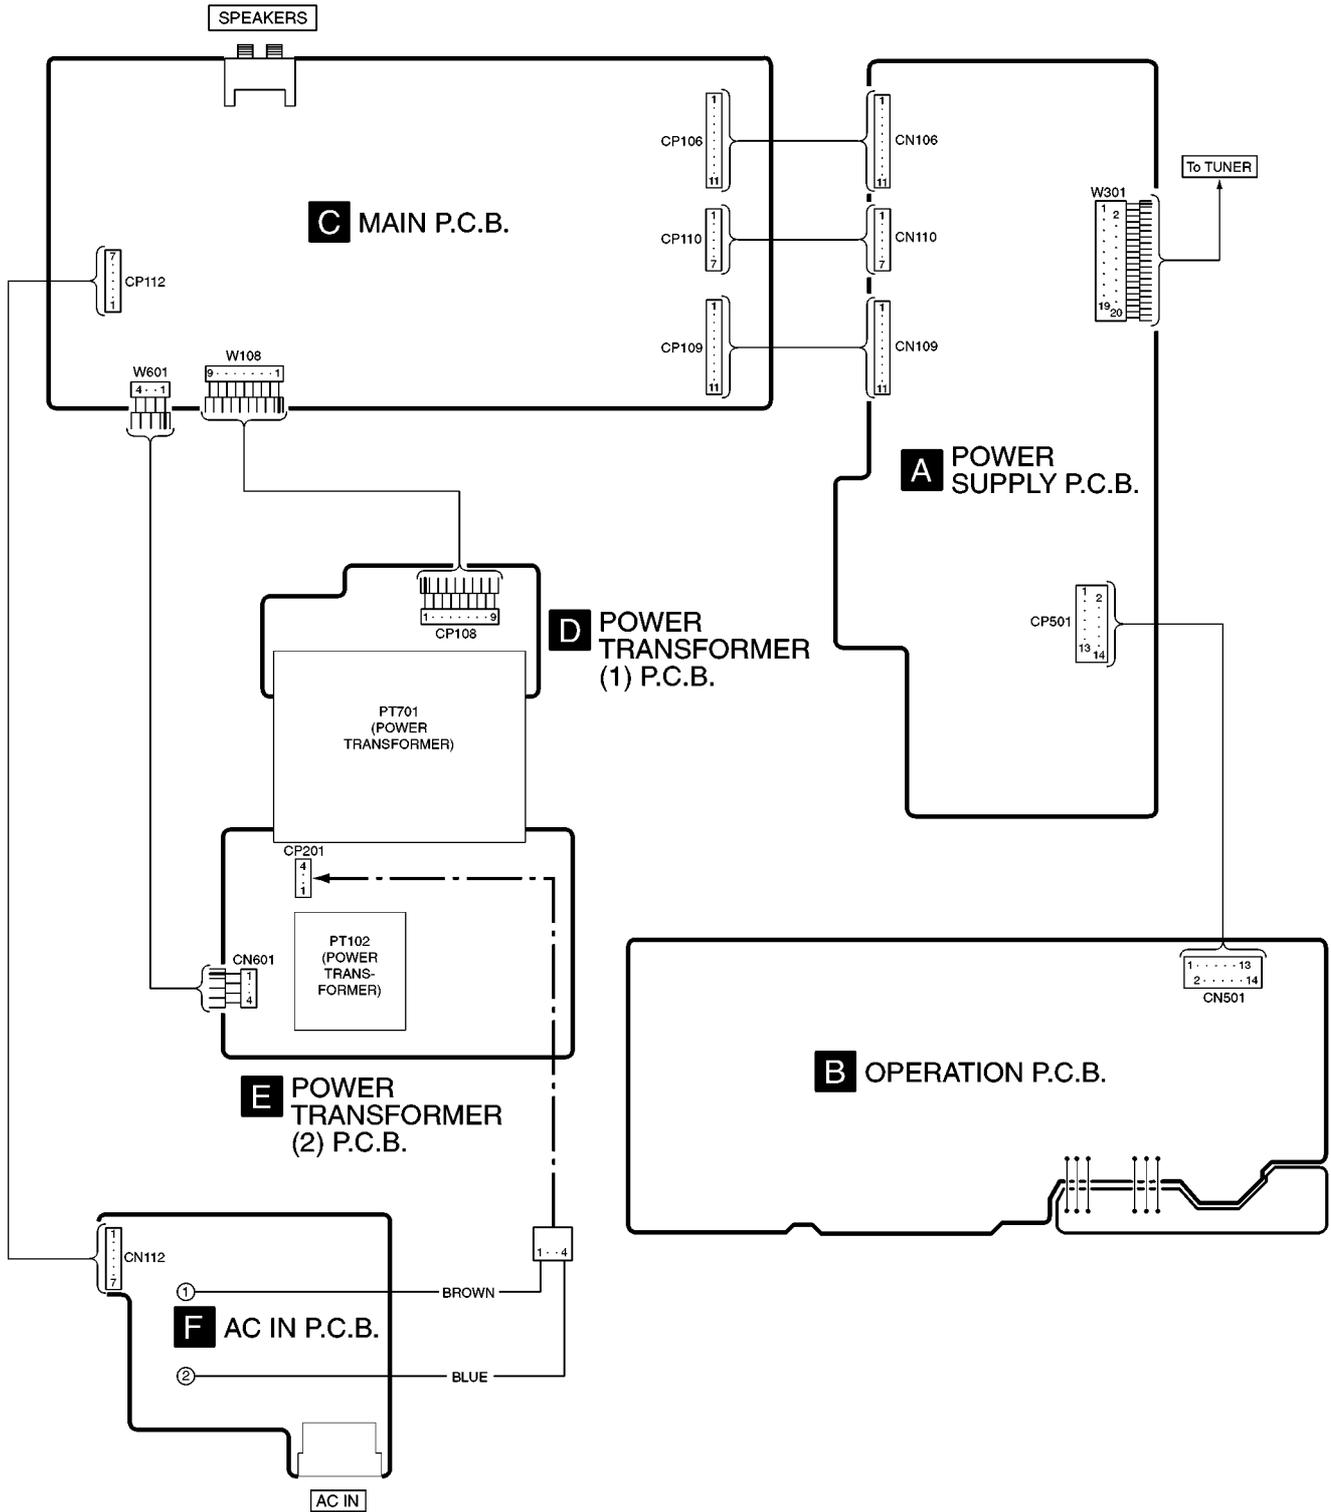

13 Block Diagram

NOTES

- → : AUDIO SIGNAL LINE
- () indicates pin No. Right channel.

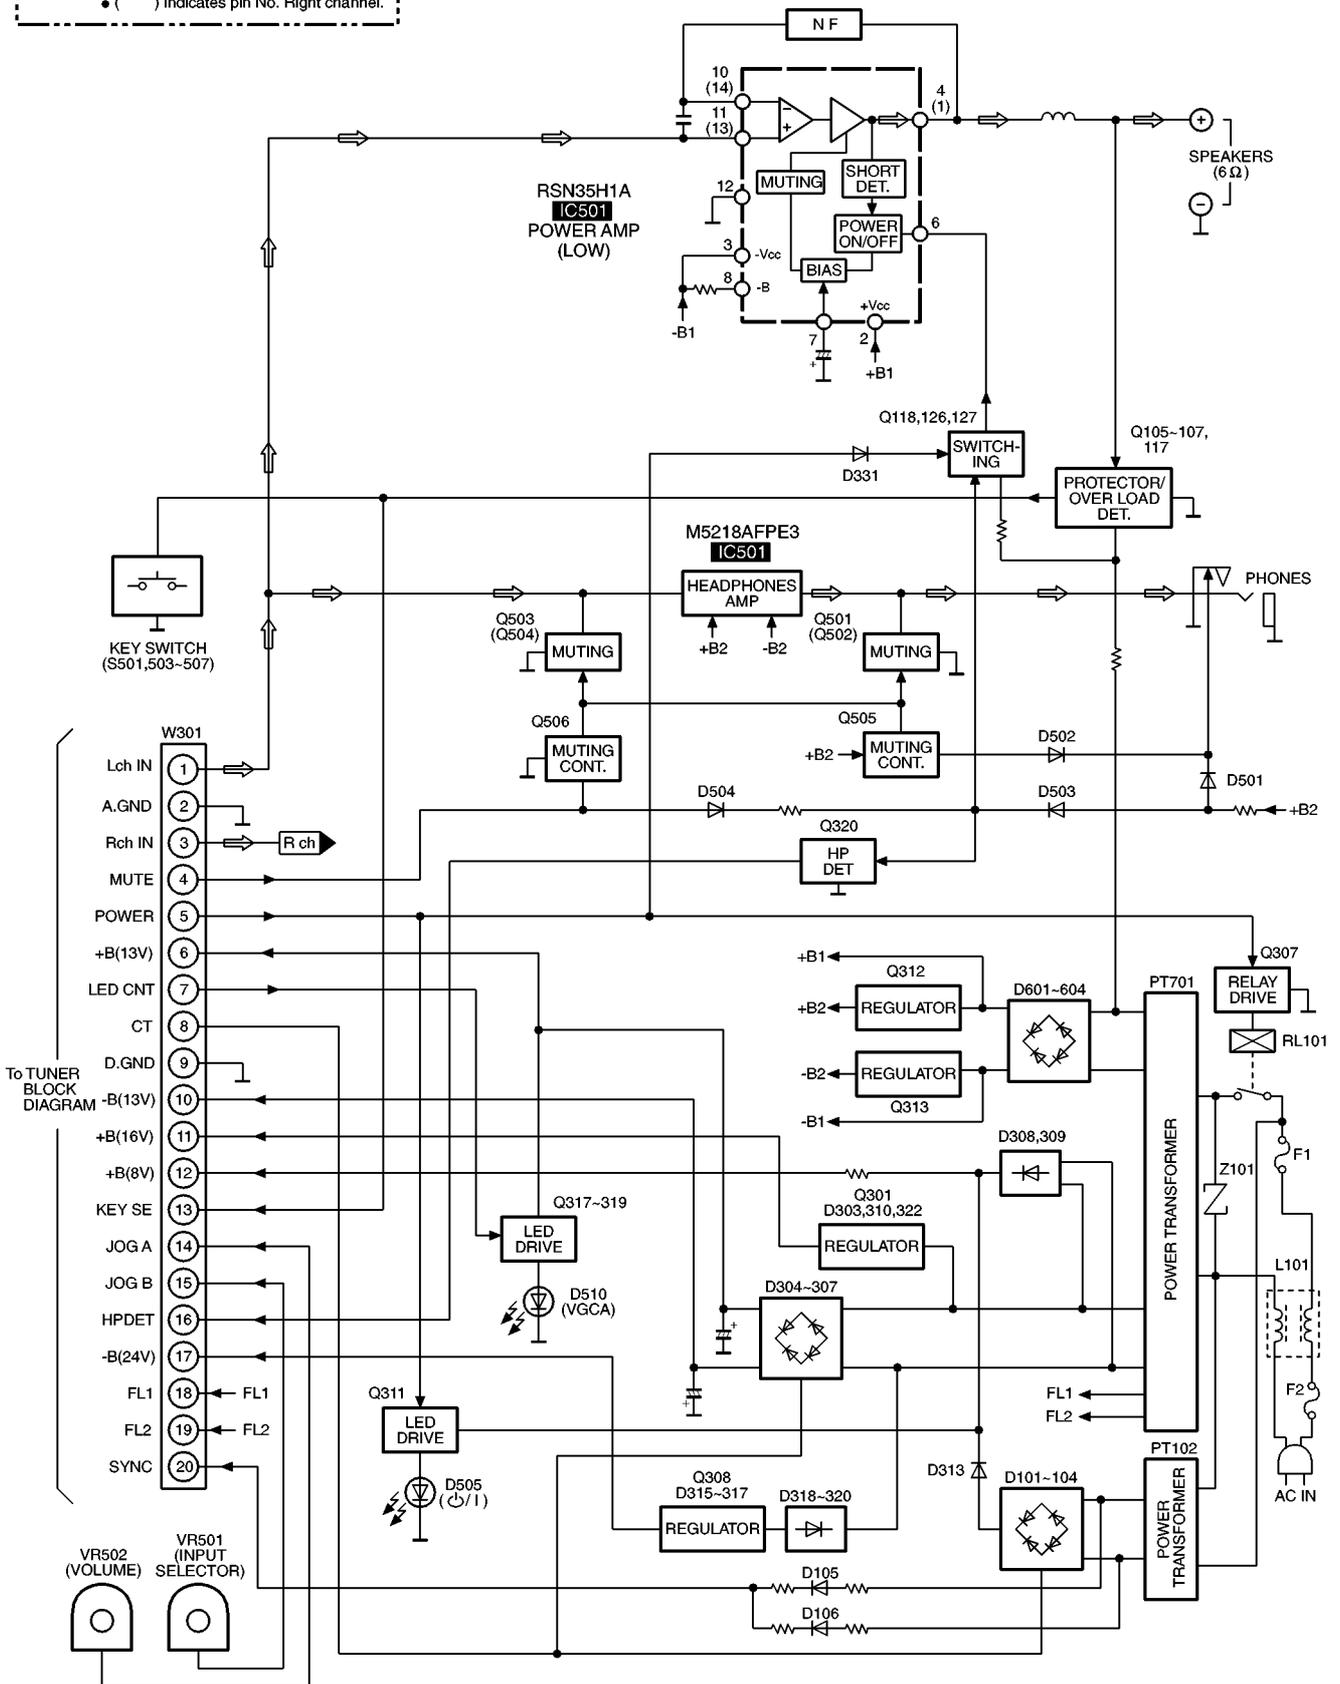

14 Replacement Parts List

Notes:

- Important safety notice:

Components identified by \triangle mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- The <IA> <IB> <IC> <ID> marks in Remarks indicate language of instruction manual.

<IA>: Spanish

<IB>: English

<IC>: Netherlands, Swedish, Danish

<ID>: German, French, Italian

- The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
- The marking [RTL] indicates that Retention Time is Limited for this item. After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependent on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.
- All parts are supplied by MESA.

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
1	RHD30007-1S	SCREW	4	
2	RGL0532-Q	VGCA INDICATOR	1	
3	RGW0358-S	VOL KNOB	1	
4	RGW0363-S	SELECTOR KNOB	1	
5	RMZ0339	ZNR COVER	1	
6	XTB3+8JFZ	SCREW	2	
7	RGN1995D-K	NAME PLATE	1	(E) (EG)
7	RGN1995E-K	NAME PLATE	1	(EB)
7	RGN1995F-K1	NAME PLATE	1	(EP)
8	RKA0114-K	FOOT	4	
8-1	RKA0083-K	CUSHION	4	
9	XTB3+5JFZ	SCREW	4	
10	REE1087	FFC	1	
11	RGL0541-Q	STANDBY INDICATOR	1	
12	RGF0838A-S	SUB PANEL	1	
13	RGU1936-S	BUTTON, POWER	1	
14	RKM0412E-N	CASE COVER	1	
15	RGG0186A-S	AL PANEL	1	
16	RGK1332-N	VOLUME ORNAMENT	2	
17	RHN90001	NUT	2	
18	XTBS26+8J	SCREW	4	
19	XTBS3+8JFZ1	SCREW	8	
20	RHD26016	SCREW	1	
21	XTB3+20JFZ	SCREW	4	
22	XTB3+6JFZ	SCREW	4	
23	XTW3+15T	SCREW	2	
24	REX0962	FLAT CABLE (W301/20P)	1	
25	RGK1333-S	SIDE PLATE (L)	1	
26	RGK1334-S	SIDE PLATE (R)	1	
A1	EUR7702010	REMOTE CONTROLLER	1	
A1-1	UR64EC2337E	BATT. COVER	1	
A2	REE1057	SPEAKER CORD	2	


Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
A3	RQCA0808	SETTING GUIDE	1	(EB)
A4	RJA0019-1X	AC POWER SUPPLY CORD	1	(E) (EG) (EP) \triangle
A4	RJA0053-2X	AC POWER SUPPLY CORD	1	(EB) \triangle
A5	SJP9009	AC PLUG ADAPTOR	1	(EB)
A6	RQCB0169	SERVICE CENTER LIST	1	(E) (EB) (EG)
A7	RQT5745-E	INSTRUCTION MANUAL	1	(E) <IA>
A7	RQT5744-B	INSTRUCTION MANUAL	1	(EB) (EP) <IB>
A7	RQT5742-D	INSTRUCTION MANUAL	1	(EG) <IC>
A7	RQT5743-H	INSTRUCTION MANUAL	1	(EG) <ID>
A8	RSA0007	FM INDOOR ANTENNA	1	
A9	RSA0033B	AM LOOP ANTENNA	1	
C105,06	ECBT1H470J5	50V 47P	2	F1D1H470A006
C107,08	ECBT1H104ZF5	50V 0.1U	2	F1E1H104A001
C109,10	ECBT1H473KB5	50V 0.047U	2	
C111,12	ECBT1H102KB5	50V 1000P	2	F1D1H102A012
C119,20	ECBT1C152KR5	16V 1500P	2	
C121,22	ECA1CAK100XB	16V 10U	2	
C123,24	ECBT1C272KR5	16V 2700P	2	
C125,26	ECEA1HSN2R2	50V 2.2U	2	
C129	ECA1CM331	330U	1	\triangle
C130,31	ECBT1H105ZF5	50V 1U	2	F1E1H105A001
C132	ECA1EAK100XB	25V 10U	1	
C134	ECBT1H223KB5	50V 0.022U	1	F1D1H223A012
C136	ECA0JAK101XB	6.3V 100U	1	
C137,38	ECBT1H473KB5	50V 0.047U	2	
C141	ECBT1C332KR5	16V 3300P	1	
C142	ECA1HAM470XB	50V 47U	1	
C143	ECKR2H102ZF5	500V 1000P	1	
C163,64	ECBT1H104ZF5	50V 0.1U	2	F1E1H104A001
C165,66	ECBT1H223KB5	50V 0.022U	2	F1D1H223A012
C167,68	ECBT1C682KR5	16V 6800P	2	F1D1C682A010
C199	ECBT1H103KB5	50V 0.01U	1	
C201	ECA1CAK100XB	16V 10U	1	
C301	ECA1EAK4R7XB	25V 4.7U	1	
C302	ECBT1H103KB5	50V 0.01U	1	
C303	ECA1EAM101XB	25V 100U	1	
C304	ECA1HML01	100U	1	\triangle
C305	ECA1EAM101XB	100U	1	\triangle
C308	ECA1EM222	2200U	1	\triangle
C309	RCE1EM471BV	470U	1	\triangle
C311	ECKR1H103ZF5	50V 0.01U	1	F1B1H1030001
C312,13	ECBT1H103KB5	50V 0.01U	2	
C314	ECBT1H104KB5	50V 0.1U	1	
C315	ECBT1H103KB5	50V 0.01U	1	
C316	ECBT1H104ZF5	50V 0.1U	1	F1E1H104A001
C317	ECA1VML01	35V 100U	1	
C319	ECA1EAM331XB	330U	1	\triangle
C321	RCE1VKA100BG	35V 10U	1	F2A1V1000011
C322	ECBT1H103KB5	50V 0.01U	1	
C323	ECA2AM100	10U	1	\triangle
C324,25	ECA1HAM470XB	47U	2	\triangle
C326,27	ECBT1H101KB5	50V 100P	2	F1D1H101A012
C328	ECBT1H104ZF5	50V 0.1U	1	F1E1H104A001
C329	ECA1EAM101XB	100U	1	\triangle
C345	ECBT1H103KB5	50V 0.01U	1	
C346,47	ECA1EAK100XB	25V 10U	2	
C348	ECBT1H103KB5	50V 0.01U	1	
C359,60	ECA1HAKR22XB	50V 0.22U	2	
C361,62	ECA1EAK100XB	25V 10U	2	
C391	ECBT1H104ZF5	50V 0.1U	1	F1E1H104A001
C501,02	ECBT1H103KB5	50V 0.01U	2	
C503-06	ECBT1H101KB5	50V 100P	4	F1D1H101A012
C507,08	ECBT1H331KB5	50V 330P	2	F1D1H331A012
C509,10	ECBT1H103KB5	50V 0.01U	2	
C511,12	ECA1EAK4R7XB	25V 4.7U	2	
C513,14	ECA1HAK010XI	50V 1U	2	ECA1HAK010XB
C515,16	ECBT1H473ZF5	50V 0.047U	2	
C517	ECA0JAK221XB	6.3V 220U	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C520,21	ECA1HAK010XI	50V 1U	2	ECA1HAK010XB
C601,02	ECA1VAM332XE	3300U	2	△
C603	ECQE1104KF3	100V 0.1U	1	
CN106	RJU100W11	CONNECTOR (11P)	1	
CN109	RJU100W11	CONNECTOR (11P)	1	
CN110	RJU100W07	CONNECTOR (7P)	1	K1KB07A00018
CN112	RJU100W07	CONNECTOR (7P)	1	K1KB07A00018
CN202	SJS305-1	CONNECTOR (3P)	1	
CN401-08	RJS1A1101T1	CONNECTOR (1P)	8	
CN501	RJS1A6214-1	CONNECTOR (14P)	1	K1MN14C00002
CN601	RJS1A6604T1	CONNECTOR (4P)	1	K1MP04A00008
CP106	RJT100W11	CONNECTOR (11P)	1	
CP108	RJS9T6ZA	CONNECTOR (9P)	1	K1MP09B00005
CP109	RJT100W11	CONNECTOR (11P)	1	
CP110	RJT100W07	CONNECTOR (7P)	1	K1KA07A00082
CP112	RJT100W07	CONNECTOR (7P)	1	K1KA07A00082
CP201	RJPLA4204-1	CONNECTOR (4P)	1	K1KA03A00143
CP501	RJS1A6714-Q	CONNECTOR (14P)	1	K1MN14B00054
D101-04	RL1N4003N02	DIODE	4	△
D105-07	MA165	DIODE	3	MA2C165
D108	RL1N4003N02	DIODE	1	
D109	MA4051M	DIODE	1	MAZ40510M
D110	MA4150M	DIODE	1	MAZ41500M
D119,20	MA165	DIODE	2	MA2C165
D303	MA4160M	DIODE	1	MAZ41600M △
D304	1N5402BF	DIODE	1	△
D305,06	RL1N4003N02	DIODE	2	△
D307	1N5402BF	DIODE	1	△
D308-10	RL1N4003N02	DIODE	3	△
D312	MA4051M	DIODE	1	MAZ40510M
D313	RL1N4003N02	DIODE	1	△
D314	MA4091M	DIODE	1	MAZ40910M
D315	MA4240H	DIODE	1	MAZ42400H △
D316-22	RL1N4003N02	DIODE	7	△
D328,29	MA4120M	DIODE	2	MAZ41200M △
D330,31	MA165	DIODE	2	MA2C165
D501-04	MA165	DIODE	4	MA2C165
D505	SLR-325VC	LED	1	B3AAA0000487
D510	SLR-325MC	LED	1	B3ABA0000187
D601-04	1N5402BF	DIODE	4	△
F1	XBA2C04TB0	FUSE	1	K5D401BL0002 △
F2	XBA2C20TB0	FUSE	1	K5D202BL0001 △
FP401,02	RSFMB70KT-L	FUSE PROTECTOR	2	△
FP403,04	RSFMB40KT-L	PROTECTOR	2	K5G402A00010 △
IC101	RSN35H1A	IC	1	△
IC501	M5218AFPE3	IC	1	C0ABBB000163
JK101	SJS9236-1	AC JACK	1	K2AA2B000002 △
JK102	K4BC04B00030	SP TERMINAL	1	
JK501	RJJ37TK01-2C	HP JACK	1	K2HC103B0049
L101	RLQZ371	LINE FILTER	1	ELF15N035AN △
L103,04	RLQYR73MW1-0	SPEAKER COIL	2	GOZZ00001606
P1	RPF0139-1	PROTECTION BAG (F.B.)	4	
P2	RPG5251	GIFT BOX (RS/SE)	1	
P2	RPG5252	GIFT BOX (ST/SL)	1	
P3	RPN1390	PAD (RS)	1	
P3	RPN1388	PAD (SE)	1	
P3	RPN1389	PAD (SL/ST)	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
P4	RPG5253	GIFT BOX (SYSTEM)	1	(EG)
P4	RPG5254	GIFT BOX (SYSTEM)	1	(EB)
P4	RPG5255	GIFT BOX (SYSTEM)	1	(E)
P4	RPG5256	GIFT BOX (SYSTEM)	1	(EP)
P5	RPQ1142	SPACER	1	
P6	SPP740-1	PROTECTION BAG	1	
PCB1	REP3125B-M	MAIN P.C.B	1	[RTL]
PCB2	REP3126B-S	OPERATION P.C.B.	1	[RTL]
PT102	RTP1H3E001	POWER TRANSFORMER	1	△
PT701	RTP2M5B023	POWER TRANSFORMER	1	(EB) △
PT701	RTP2M5E026	POWER TRANSFORMER	1	(E) (EG) (EP) △
Q105	2SA1309ATA	TRANSISTOR	1	2SA1309AWA
Q106,07	2SC3311ATA	TRANSISTOR	2	2SC3311A0A
Q117,18	2SC3311ATA	TRANSISTOR	2	2SC3311A0A
Q126	UN4211	TRANSISTOR	1	UNR4211
Q127	2SC3311ATA	TRANSISTOR	1	2SC3311A0A
Q301	2SC3940AQSTA	TRANSISTOR	1	2SC3940ARA △
Q307	2SC3311ATA	TRANSISTOR	1	2SC3311A0A
Q308	2SB621A-R	TRANSISTOR	1	2SB0621AH △
Q311	2SC3311ATA	TRANSISTOR	1	2SC3311A0A
Q312	2SD592AR	TRANSISTOR	1	2SD0592AR △
Q313	2SB621A-R	TRANSISTOR	1	2SB0621AH △
Q317	UN4211	TRANSISTOR	1	UNR4211
Q318	UN4111	TRANSISTOR	1	UNR4111
Q319	2SC3311ATA	TRANSISTOR	1	2SC3311A0A
Q320	UN4211	TRANSISTOR	1	UNR4211
Q501-04	2SC3327A	TRANSISTOR	4	
Q505	UN4111	TRANSISTOR	1	UNR4111
Q506	UN4115	TRANSISTOR	1	UNR4115
R111	ERD2FCG100	10	1	△
R112	ERDS2FJ102	1/4W 1K	1	
R115,16	ERDS2FJ473	1/4W 47K	2	
R117,18	ERDS2FJ100	10	2	△
R119,20	ERDS1FJ100	10	2	△
R121	ERDS2FJ823	1/4W 82K	1	
R122	ERDS2FJ124	1/4W 120K	1	
R123	ERDS2FJ334	1/4W 330K	1	
R137,38	ERDS2FJ102	1/4W 1K	2	
R139,40	ERDS2FJ473	1/4W 47K	2	
R141,42	ERDS2FJ122	1/4W 1.2K	2	
R153,54	ERDS2FJ102	1/4W 1K	2	
R155	ERDS1FJ681	680	1	△
R158	ERDS2FJ563	1/4W 56K	1	
R159	ERDS2FJ564	1/4W 560K	1	
R161	ERDS2FJ223	1/4W 22K	1	
R162	ERDS2FJ103	1/4W 10K	1	
R163	ERDS2FJ473	1/4W 47K	1	
R164	ERDS2FJ332	1/4W 3.3K	1	
R165	ERDS2FJ104	1/4W 100K	1	
R166	ERDS2FJ223	1/4W 22K	1	
R180	ERDS2FJ103	1/4W 10K	1	
R181	ERDS2FJ1R0	1	1	△
R187,88	ERDS2FJ103	1/4W 10K	2	
R190	ERDS2FJ102	1/4W 1K	1	
R213	ERD2FCG100	10	1	△
R241,42	ERDS2FJ473	1/4W 47K	2	
R243,44	ERDS2FJ152	1/4W 1.5K	2	
R301	ERDS2FJ392	1/4W 3.9K	1	
R306	ERDS2FJ473	1/4W 47K	1	
R307	ERDS2FJ103	1/4W 10K	1	
R309	ERDS2FJ331	1/4W 330	1	
R310	ERDS2FJ681	1/4W 680	1	
R311	ERDS1FJ3R3	3.3	1	△
R313	ERDS2FJ473	1/4W 47K	1	
R314	ERDS2FJ392	1/4W 3.9K	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R316	ERDS2FJ102	1/4W 1K	1	
R317	ERDS2FJ472	1/4W 4.7K	1	
R318	ERDS2FJ100	10	1	△
R319	ERDS2FJ101	1/4W 100	1	
R321	ERDS2FJ103	1/4W 10K	1	
R331	ERD2FCG100	10	1	△
R341	ERD2FCG100	10	1	△
R343,44	ERDS2FJ102	1/4W 1K	2	
R345	ERD2FCG100	10	1	△
R361,62	ERDS2FJ102	1/4W 1K	2	
R364,65	ERDS2FJ560	1/4W 56	2	
R366	ERDS2FJ103	1/4W 10K	1	
R367,68	ERDS2FJ561	1/4W 560	2	
R501-04	ERDS2FJ470	1/4W 47	4	
R505,06	ERDS2FJ683	1/4W 68K	2	
R507,08	ERDS2FJ332	1/4W 3.3K	2	
R509,10	ERDS2FJ223	1/4W 22K	2	
R511-14	ERDS2FJ102	1/4W 1K	4	
R515,16	ERDS2FJ223	1/4W 22K	2	
R519,20	ERDS2FJ102	1/4W 1K	2	
R521	ERDS2FJ821	1/4W 820	1	
R523	ERDS2FJ102	1/4W 1K	1	
R524	ERDS2FJ153	1/4W 15K	1	
R525	ERDS2FJ103	1/4W 10K	1	
R526	ERDS2FJ102	1/4W 1K	1	
R527	ERDS2FJ222	1/4W 2.2K	1	
R528,29	ERDS2FJ472	1/4W 4.7K	2	
R530	ERDS2FJ153	1/4W 15K	1	
R531	ERDS2FJ103	1/4W 10K	1	
R532	ERDS2FJ122	1/4W 1.2K	1	
R533	ERDS2FJ152	1/4W 1.5K	1	
R534	ERDS2FJ182	1/4W 1.8K	1	
R535	ERDS2FJ471	1/4W 470	1	
R538	ERDS2FJ474	1/4W 470K	1	
R539	ERDS2FJ154	1/4W 150K	1	
RL101	RSY0040M-0	RELAY	1	△
S501	EVQ11G05R	SW, POWER	1	
S503-07	EVQ11G05R	SW, PUSH	5	
VR501	K9AA012A0003	V.R., INPUT SELECTOR	1	
VR502	EVEKC2F2524B	V.R., VOLUME	1	
Z101	ERZV10V511CS	ZNR	1	△

15 Cabinet Parts Location

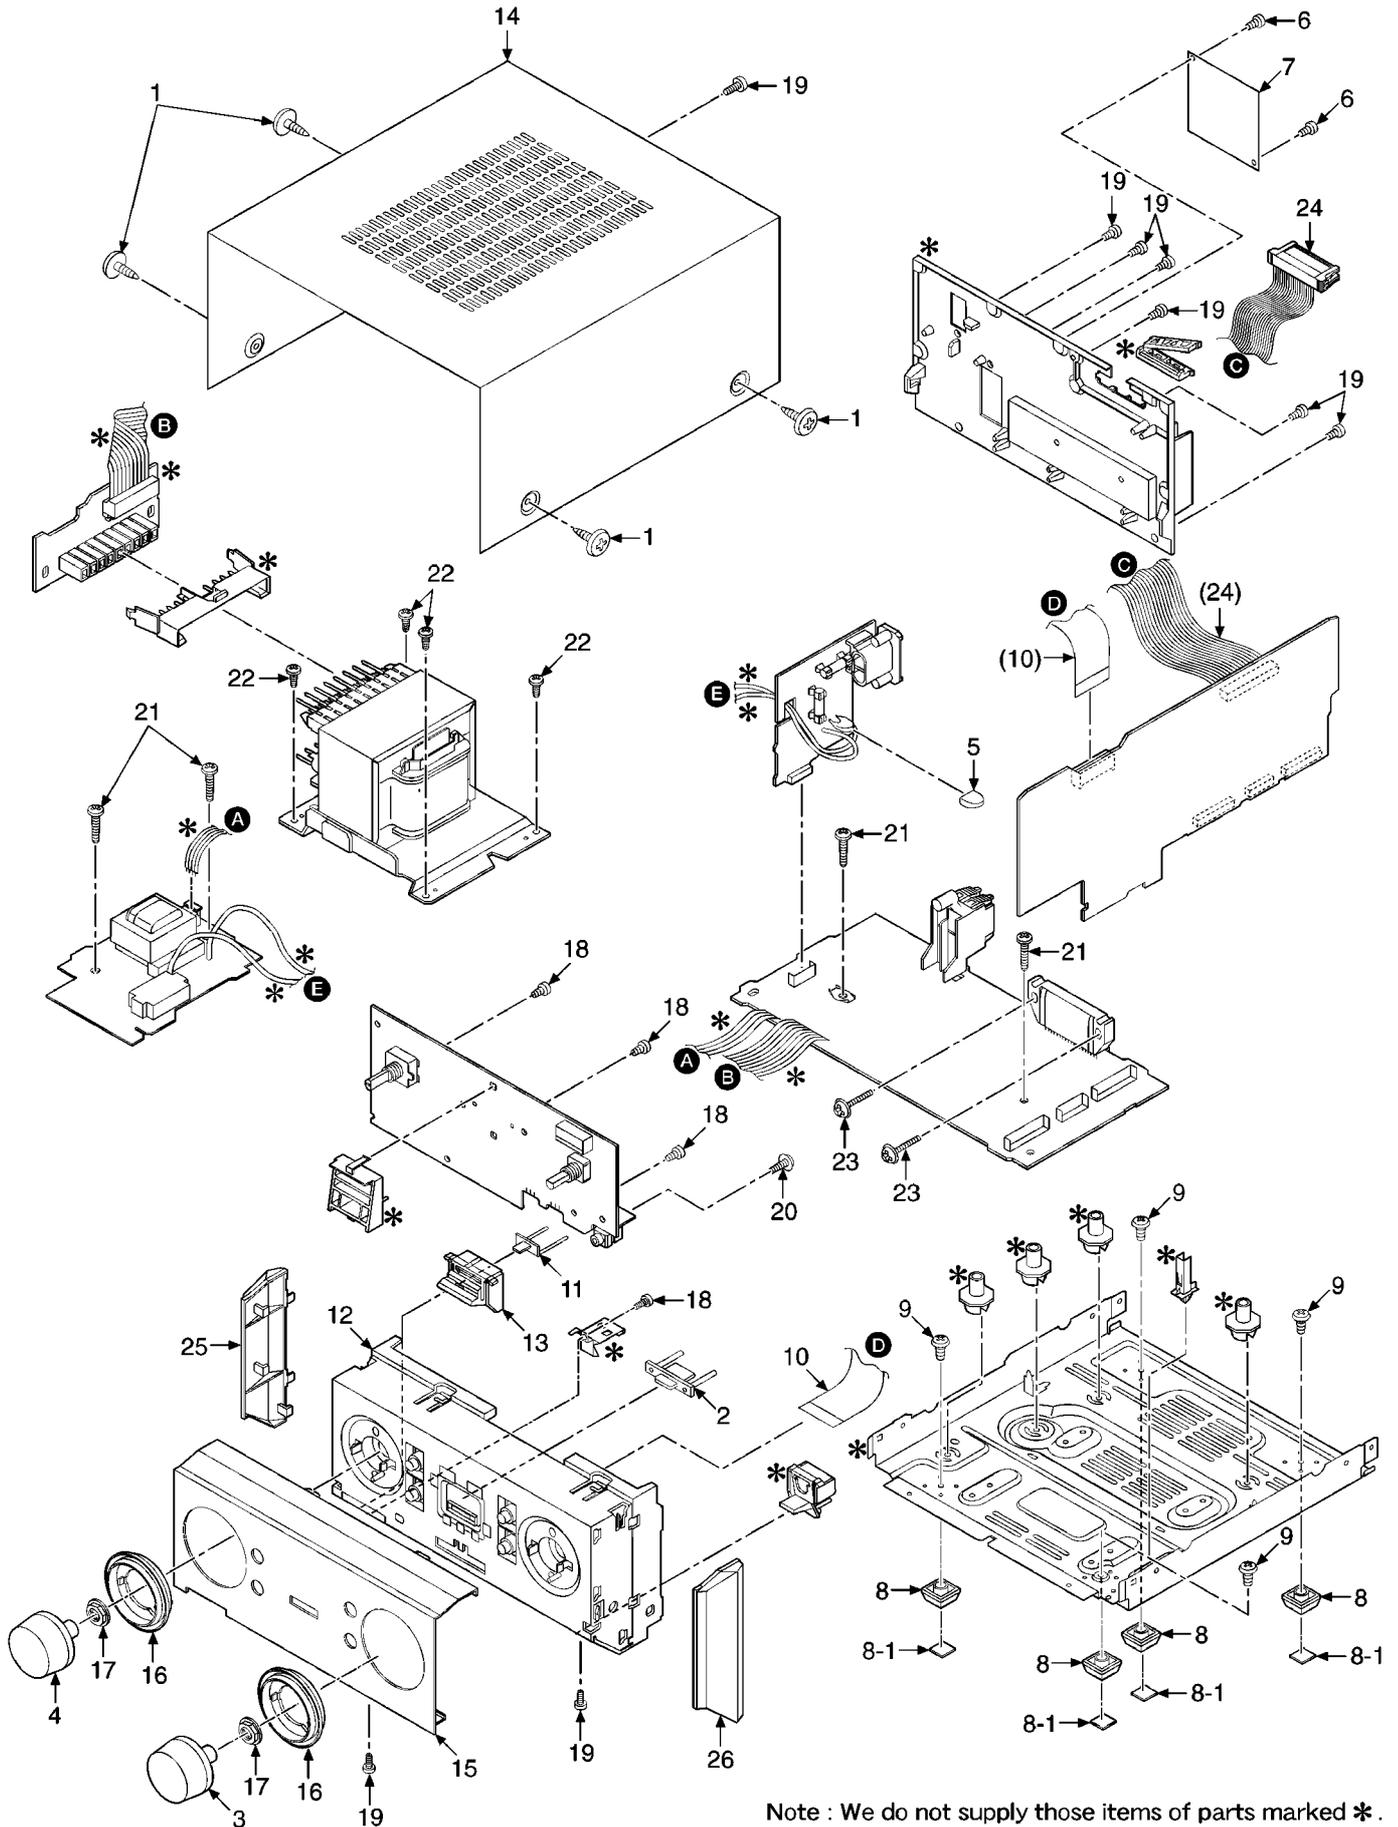

Note : We do not supply those items of parts marked *.

16 Packaging

