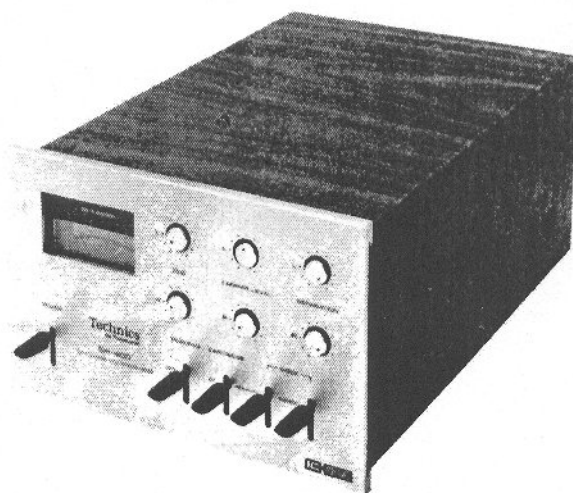


Service Manual

Technics
by Panasonic

STEREO
Technics
by Panasonic

MODEL SH-400

SPECIFICATIONS

Phono Input Sensitivity	1 ~ 5mV (SC/MAG)
Phono Input Impedance	2.2Kohm (Semi-conductor) 68Kohm (Magnetic Type)
Rated Output Level	200mV
Output Impedance	300ohm
Frequency Response	20 ~ 16,000Hz (Overall)
S/N Ratio	60dB
Channel Separation	55dB (Left-Right)
Power Supply MECA, MELCA	120V 50/60Hz
PX, Europe	110, 125, 210, 240, 50/60Hz
Power Consumption	12W (MECA, MELCA) 8W (PX, Europe)
Num of Semi-conductors	21C's, 2FET's, 39-Tr. 31-Dio.
Dimensions (W.H.D.)	8"-1/16 x 5"-1/2" x 13" (205 x 140 x 330)
Weight	3.9Kg, 8Lbs 10oz.

LOCATIONS OF PARTS

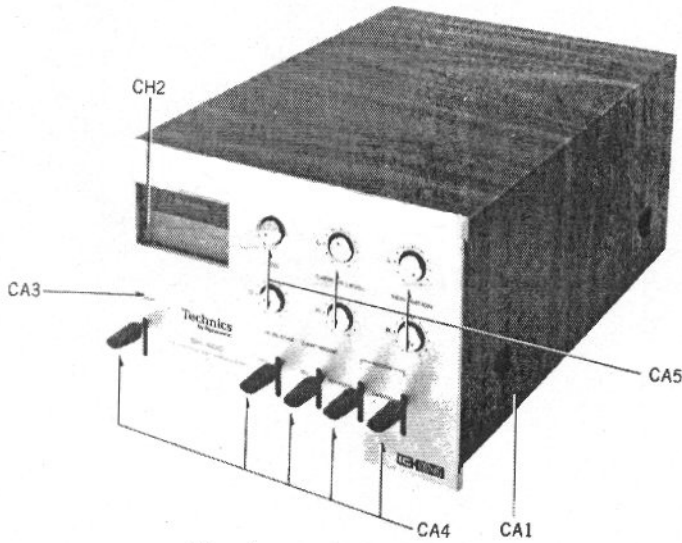


Fig. 1

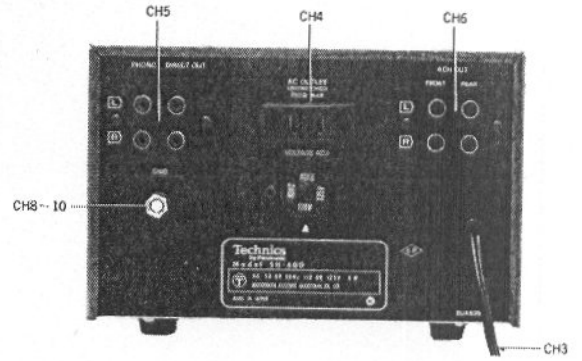


Fig. 2

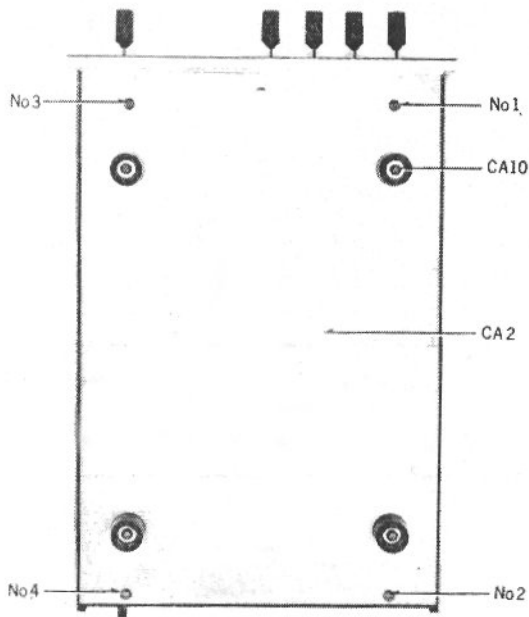


Fig. 3

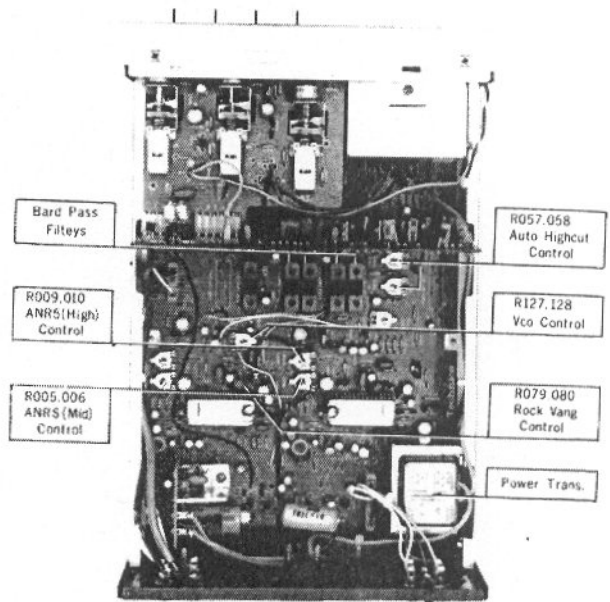


Fig. 4

DISASSEMBLY INSTRUCTIONS

TO REMOVE CHASSIS

1. Remove four (4) case holding screws.
2. Remove four (4) bottom plate holding screws.
3. Remove case and bottom plate in arrow direction

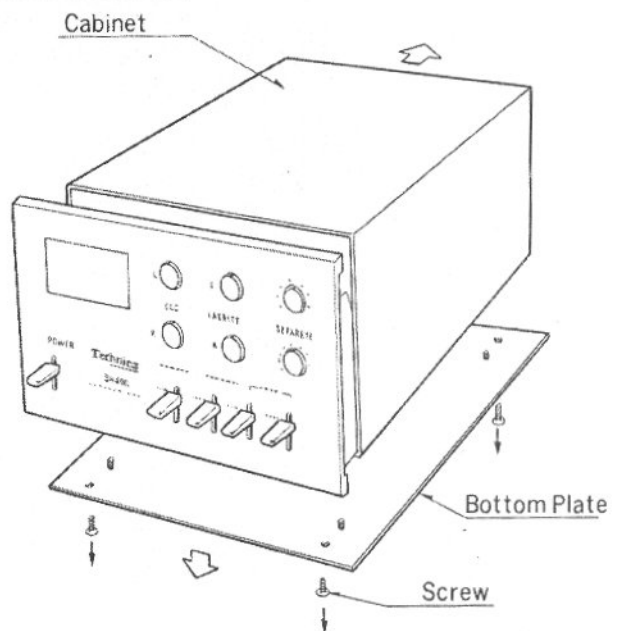


Fig. 5

ALIGNMENT INSTRUCTIONS

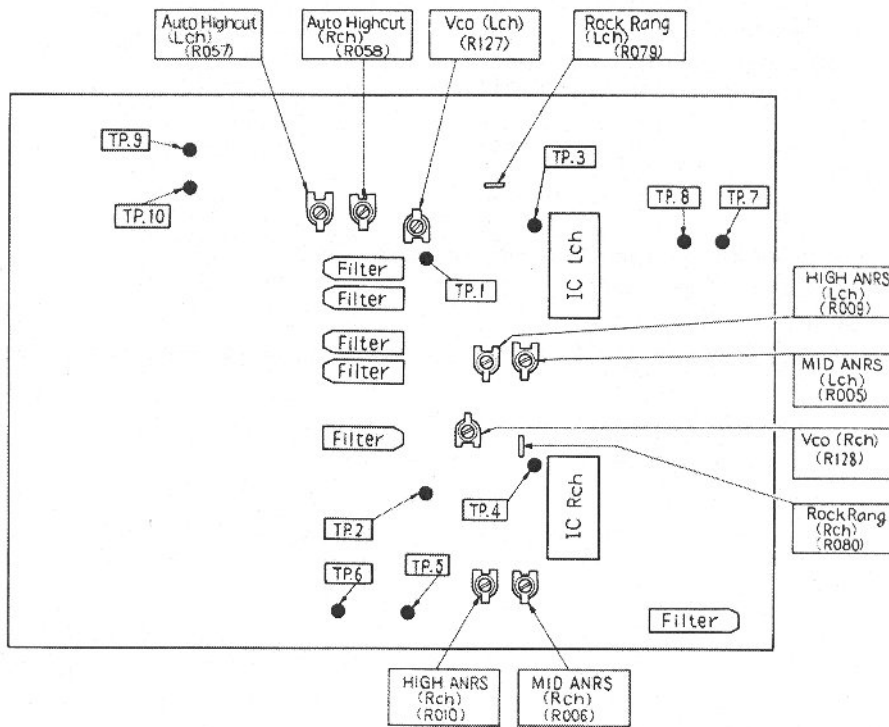


Fig. 6

FREE RUNNING FREQUENCY ALIGNMENT (Refer to Fig. 6)

* L-Channel

1. Connect to 22 of IC and earth through electrolytic capacitor (25V 10 μ F). Connect the negative pole of it to earth.
2. Connect a Frequency Counter to the TP3 through resistor. (100Kohm)
3. Adjust 30KHz by 30KHz Adj. (R127)

* R-Channel

1. Connect to 22 of IC and earth through electrolytic capacitor (25V 10 μ F). Connect the negative pole of it to earth.
2. Connect a Frequency Counter to the TP4 through resistor. (100Kohm)
3. Adjust 30KHz by 30KHz Adj. (R128)

ROCK RANGE ALIGNMENT (Refer to Fig. 6 and Fig. 7)

* Signal Generator

Output: 1mV, 1KHz, 8KHz deviation signal

* Oscilloscope

Connect to the sub channel detector output.

L-channel C033-R027

R-channel C034-R028

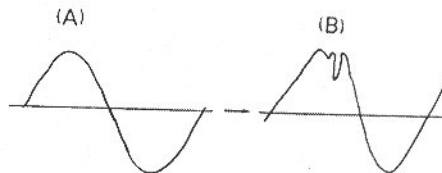


Fig. 7

* L-Channel

1. Connect the signal generator to the TP5 through electrolytic capacitor (25V10).
2. Connect the resistor (1Kohm) between the TP5 and the earth.
3. Adjust the output wave to the Fig. 7 (B) by the resistor (R079).

* R-Channel

1. Connect the signal generator to the TP6 through electrolytic capacitor (25V10)
2. Connect the resistor (1Kohm) between the TP6 and the earth.
3. Adjust the output wave to the Fig. 7 (B) by the resistor (R080)

* The resistors (R079, R080) must be moved from the maximum position to the minimum position.

AUTOMATIC NOISE REDUCTION SYSTEM ALIGNMENT (Refer to Fig. 6)

*** Signal generator**

Output: 1mV, 30KHz, nonmodulated signal

- * Connect the TP5 and the TP6 at the same time.

A. MEDIUM ANRS

*** Oscillator**

Output: 70mV, 630KHz

*** L-Channel**

1. Connect the signal generator to the TP5 through electrolytic capacitor (25V10).
2. Connect the oscillator to between C033 and R027.
3. Connect oscilloscope to the TP7.
4. Adjust 31 decibel down at the output by MID ANRS (R005) when the input signal goes down to 20 decibel.

*** R-Channel**

1. Connect the signal generator to the TP6 through electrolytic capacitor (25V10).
2. Connect the oscillator to between C034 and R028.
3. Connect oscilloscope to the TP8.
4. Adjust 31 decibel down at the output by MID ANRS (R006) when the input signal goes down to 20 decibel.

B. HIGH ANRS

*** Oscillator**

Output: 500mV 15KHz

*** L-Channel**

1. Connect the signal generator to the TP5 through electrolytic capacitor (25V10).
2. Connect the oscillator to between C033 and R027
3. Connect oscilloscope to the TP7.
4. Adjust 32 decibel down at the output by HIGH ANRS (R009) when the input signal goes down to 20 decibel

*** R-Channel**

1. Connect the signal generator to the TP6 through electrolytic capacitor (25V10)
2. Connect the oscillator to between C034 and R028.
3. Connect oscilloscope to the TP8.
4. Adjust 32 decibel down at the output by HIGH ANRS (R010) when the input signal goes down to 20 decibel.

AUTO HIGH-CUT ALIGNMENT (Refer to Fig. 6)

*** Signal generator**

Output: 5KHz, 1.3KHz deviation

Output level is the point when the carrier input level (TP9 or TP10) becomes to 5mV.

*** L-Channel**

1. Connect the signal generator to the TP5 through electrolytic capacitor (25V10)
2. Connect oscilloscope to the TP7.
3. Down the output level of the signal generator to 3 decibel..
4. Adjust 3 decibel down from the first level at the output by R057.

*** R-Channel**

1. Connect the signal generator to the TP6 through electrolytic capacitor (25V10)
2. Connect oscilloscope to the TP8.
3. Down the output level of the signal generator to 3 decibel.
4. Adjust 3 decibel down from the first level at the output by R058.

BEFORE OPERATION

ADJUSTMENTS FOR SEPARATION, CARRIER LEVEL, C.C.C.

The following three adjustments should be made before operation

After making all connections, the following three adjustments should be made in order to assure the best performance of CD-4 records.

1. Separation adjustment
2. Adjustment of the carrier level (30 kHz level adjustment)
3. Adjustment of the carrier crosstalk canceller

In addition, these adjustments should also be made before this unit is used for the first time, if the cartridge of the record player is exchanged, if the stylus is exchanged, or if adjustments are accidentally disturbed.

Before adjustment:


- (1) The 4-channel automatic/stereo selector ⑨ should be set to the "4CH AUTO" position, and the demodulate/direct selector ⑩ should be set to the "DEMOD" position.
- (2) The cartridge selector ⑧ should be set to the position corresponding to the type of cartridge used on the record player.

SC:


Set to this position if a semi-conductor cartridge is used.

MAG:

Set to this position if a magnetic cartridge is used.

- (3) The hi-blend switch ⑦ should be set to the "OFF" position.
- (4) The carrier crosstalk canceller volume adjustment control pushbuttons ③, the carrier level volume adjustment control pushbuttons ④, and the separation volume adjustment control pushbuttons ⑤ should be set to the pushed () position.
- (5) Turn on the power switch ⑥.

Adjustment notes


- (1) Be careful, when pushing inward () the various pushbuttons, such as when completing the adjustment of the separation or the carrier level, that the pushbutton does not become turned. If it is accidentally turned, the best adjustment point may get out of position.
- (2) Even if, after the adjustment is completed, these volume control pushbuttons are turned after they have been pushed inward, the best adjustment point will get out of position. Be absolutely sure never to turn them, therefore, after they have been pushed inward.
- (3) You can turn down the volume of the amplifier or the receiver for the adjustment of the record but since you can use the "adjustment meter" ① of the unit, you need not turn down the volume.

HOW TO MAKE ADJUSTMENTS

Order of adjustment

- Be sure to make adjustments in the following order:

1. Separation, 2. carrier level, 3. carrier crosstalk canceller.

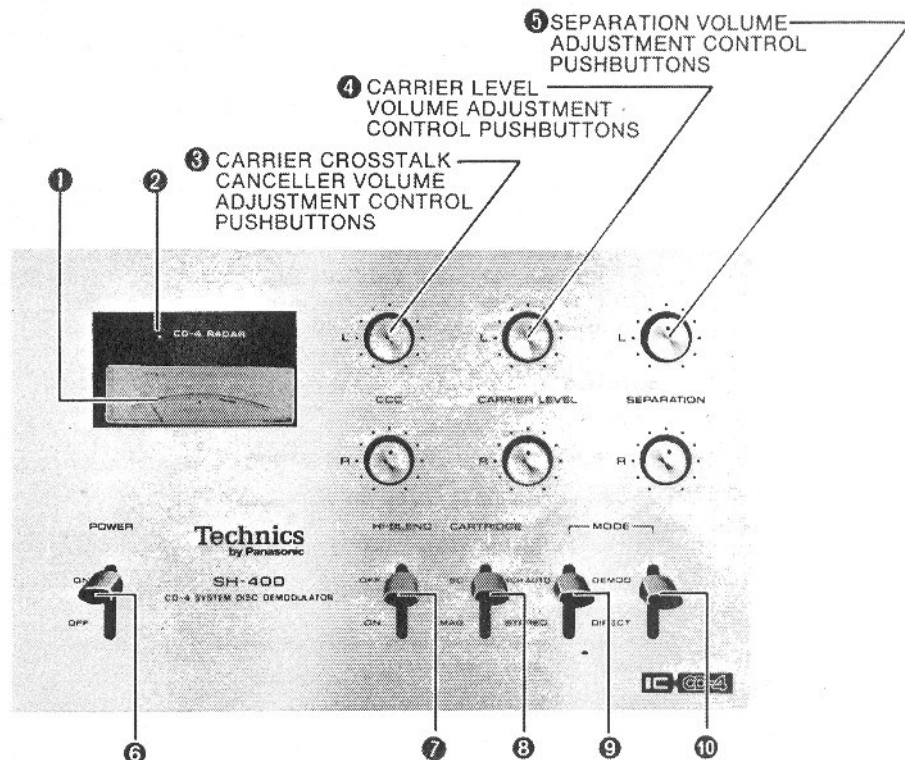

1. Separation adjustment

- (1) Push the left (L) and right (R) carrier level volume adjustment control pushbuttons ④ to the released (┐→┌) position, turn them both completely clockwise, and then push them both inward again (┌→┐).
- (2) Left channel adjustment
 - Push only the left (L) separation volume adjustment control pushbutton ⑤ to the released (┐→┌) position.
 - When playing the separation adjustment signal on side A of the test record (included with this unit), turn the left (L) separation volume adjustment control pushbutton ⑤ to the left and right to find the setting at which the indicator needle of the adjustment meter ① moves as far as it will go to the left (the minimum position).
 - After this adjustment, push the volume adjustment control pushbutton inward (┌→┐).
- (3) Right channel adjustment
 - Push only the right (R) separation volume adjustment control pushbutton ⑤ to the released (┐→┌) position.
 - In the same way as for the left channel adjustment, play the signal for separation adjustment. Then turn the right (R) separation volume adjustment control pushbutton to the left or right to find the setting at which the indicator needle of the adjustment meter ① moves as far as it will go to the left (the minimum position).
 - After this adjustment, push the volume adjustment control pushbutton inward (┌→┐).

This finishes the adjustments of the separation.

2. Carrier level adjustment (30 kHz level adjustment)

- (1) Left channel adjustment
 - Push only the left (L) carrier level volume adjustment control pushbutton ④ to the released (┐→┌) position.
 - While playing the carrier level adjustment signal on side A of the test record (included with this unit), turn the left (L) carrier level volume adjustment control pushbutton ④ to the left or right to find the setting at which the indicator needle of the adjustment meter ① moves to the position as shown on the right photo.
 - After finishing this adjustment, push the volume pushbutton inward (┌→┐).
- (2) Right channel adjustment
 - Push only the right (R) carrier level volume adjustment control pushbutton ④ to the released (┐→┌) position.
 - In the same way as for the left channel adjustment, play the signal for performing adjustment of the carrier level. Then turn the right (R) carrier level volume adjustment control pushbutton to the left or right and adjust so that the indicator needle of the adjustment meter ① moves to the position shown in figure below.
 - After this adjustment, push the volume control pushbutton inward (┌→┐).

This finishes the adjustments of the carrier level.


3. Carrier crosstalk canceller (C.C.C.) adjustment

- (1) Left channel adjustment
 - Pushing only the left (L) carrier crosstalk canceller volume adjustment control pushbutton ③ to the released (┐→┌) position.
 - While playing the carrier crosstalk canceller adjustment signal on side A of the test record, turn the left carrier crosstalk canceller volume adjustment control pushbutton ③ to the left or right to find the setting at which the indicator needle of the adjustment meter ① moves as far as it will go to the left (the minimum position).
 - After finishing the adjustment, push the volume adjustment control pushbutton inward (┌→┐).
- (2) Right channel adjustment
 - Push only the right (R) carrier crosstalk canceller volume adjustment control pushbutton ③ to the released (┐→┌) position.
 - In the same way as for the left channel adjustment, play the signal for adjustment of the carrier crosstalk canceller. Then turn the right (R) carrier crosstalk canceller volume adjustment control pushbutton to the left and right in order to determine the setting at which the indicator needle moves as far as possible to the left (the minimum position).
 - After finishing this adjustment, push the volume adjustment control pushbutton inward (┌→┐).

This finishes the adjustments of the carrier crosstalk canceller.

(Notes) When adjusting the carrier crosstalk canceller volume adjustment control pushbuttons, the following conditions may occur. These, however, do not indicate that the unit is out of order.

- (1) The indicator needle of the adjustment meter ① may fluctuate slightly because of the characteristic of the cartridge which is used.
- (2) Depending upon the characteristic of the cartridge which is used, the fluctuation of the indicator needle of the adjustment meter ①, and thus the adjustment position, may be different for the left and right sides.
- (3) While turning the carrier crosstalk canceller volume adjustment control pushbuttons ③, the indication needle of the adjustment meter ① may fluctuate to the right side first, before then fluctuating to the left side.

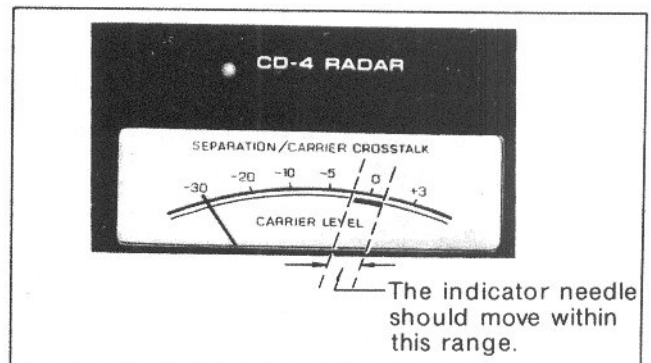

TROUBLESHOOTING GUIDE

Any "trouble" which might be noted in a system including the CD-4 system can usually be traced to the record, the cartridge, the turntable, the demodulator, or the connections between these, or to the manner in which one or all of these are operated. Even though the symptom seems to indicate the fault to be in one component, careful examination often shows it to be elsewhere, or to be an outside cause, or indeed due to incorrect operation. In addition,


sound reproduction becomes ever more faithful to the original as improvements are made in the manufacture of high fidelity components, making the listener ever more conscious of noise which, until recently, was "hidden" within the music itself. The following table can be successfully used to locate the cause, and provide the corresponding remedy, of many of the problems which may be encountered.




Symptom	Main cause	Remedy
<ul style="list-style-type: none"> Abnormal noise <p>(Noise is heard at the "4CH AUTO" position but not at the "STEREO" position during performance of a discrete 4-channel record.)</p>	<ul style="list-style-type: none"> The stylus is worn out. 	<ul style="list-style-type: none"> The stylus can be used for 300 to 400 hours. If used longer, noise is apt to increase and, moreover, the record may be damaged. It should be replaced with a new one.
	<ul style="list-style-type: none"> There is dust on the record or on the tip of the stylus. 	<ul style="list-style-type: none"> Any dust on the surface of the record is apt to interfere with satisfactory reproduction. Be sure, therefore, to clean away dust completely, using a cleaner or other effective method. To remove dust from the tip of the stylus.
<ul style="list-style-type: none"> Abnormal noise, continually or intermittently. Left/right sound separation is unsatisfactory. 	<ul style="list-style-type: none"> The demodulator of the CD-4 system is located near a television set. 	<ul style="list-style-type: none"> Maintain a distance of more than 2 feet between the demodulator and the television set.
	<ul style="list-style-type: none"> Stylus pressure is incorrect. 	<ul style="list-style-type: none"> Be sure that the stylus pressure is set to the position specified for the cartridge.
<ul style="list-style-type: none"> Noise (hum) is heard continually between record performances. 	<ul style="list-style-type: none"> The ground wire from the turntable isn't connected correctly. 	<ul style="list-style-type: none"> Connect the ground wire from the turntable to the GND terminal of this unit.
<ul style="list-style-type: none"> There is distortion in the sound, or unusual vibration. 	<ul style="list-style-type: none"> The stylus pressure is incorrect. 	<ul style="list-style-type: none"> Be sure that the stylus pressure is set to the specified pressure for the cartridge.
	<ul style="list-style-type: none"> There is dust on the record or on the tip of the stylus. 	<ul style="list-style-type: none"> Dust on the record should be removed with the cleaner. Dust on the tip of the stylus should be removed with the cleaner.
	<ul style="list-style-type: none"> The stylus tip is worn. 	<ul style="list-style-type: none"> The stylus can be used for 300 to 400 hours. If used longer, noise is apt to increase and, moreover, the record may be damaged. It should be replaced with a new one.
<ul style="list-style-type: none"> Front/rear separation is unsatisfactory. 	<ul style="list-style-type: none"> The stylus pressure is incorrect. 	<ul style="list-style-type: none"> Be sure that the stylus pressure is set to the specified pressure for the cartridge.
	<ul style="list-style-type: none"> The cartridge phase is reversed. 	<ul style="list-style-type: none"> Please confirm that the "L", "R" of the lead wire is properly connected to the cartridge.
	<ul style="list-style-type: none"> The record or the stylus is dirty. 	<ul style="list-style-type: none"> Use the cleaner to remove dust from the record; use the cleaner to remove dust on the tip of the stylus.


The term CD-4 record used in these operating instructions refers to any discrete 4-channel record including those labeled "Quadradisc (RCA, WEA, PROJECT 3, etc.)" "CD-4," etc.

SCHEMATIC DIAGRAM

MODEL SH-400

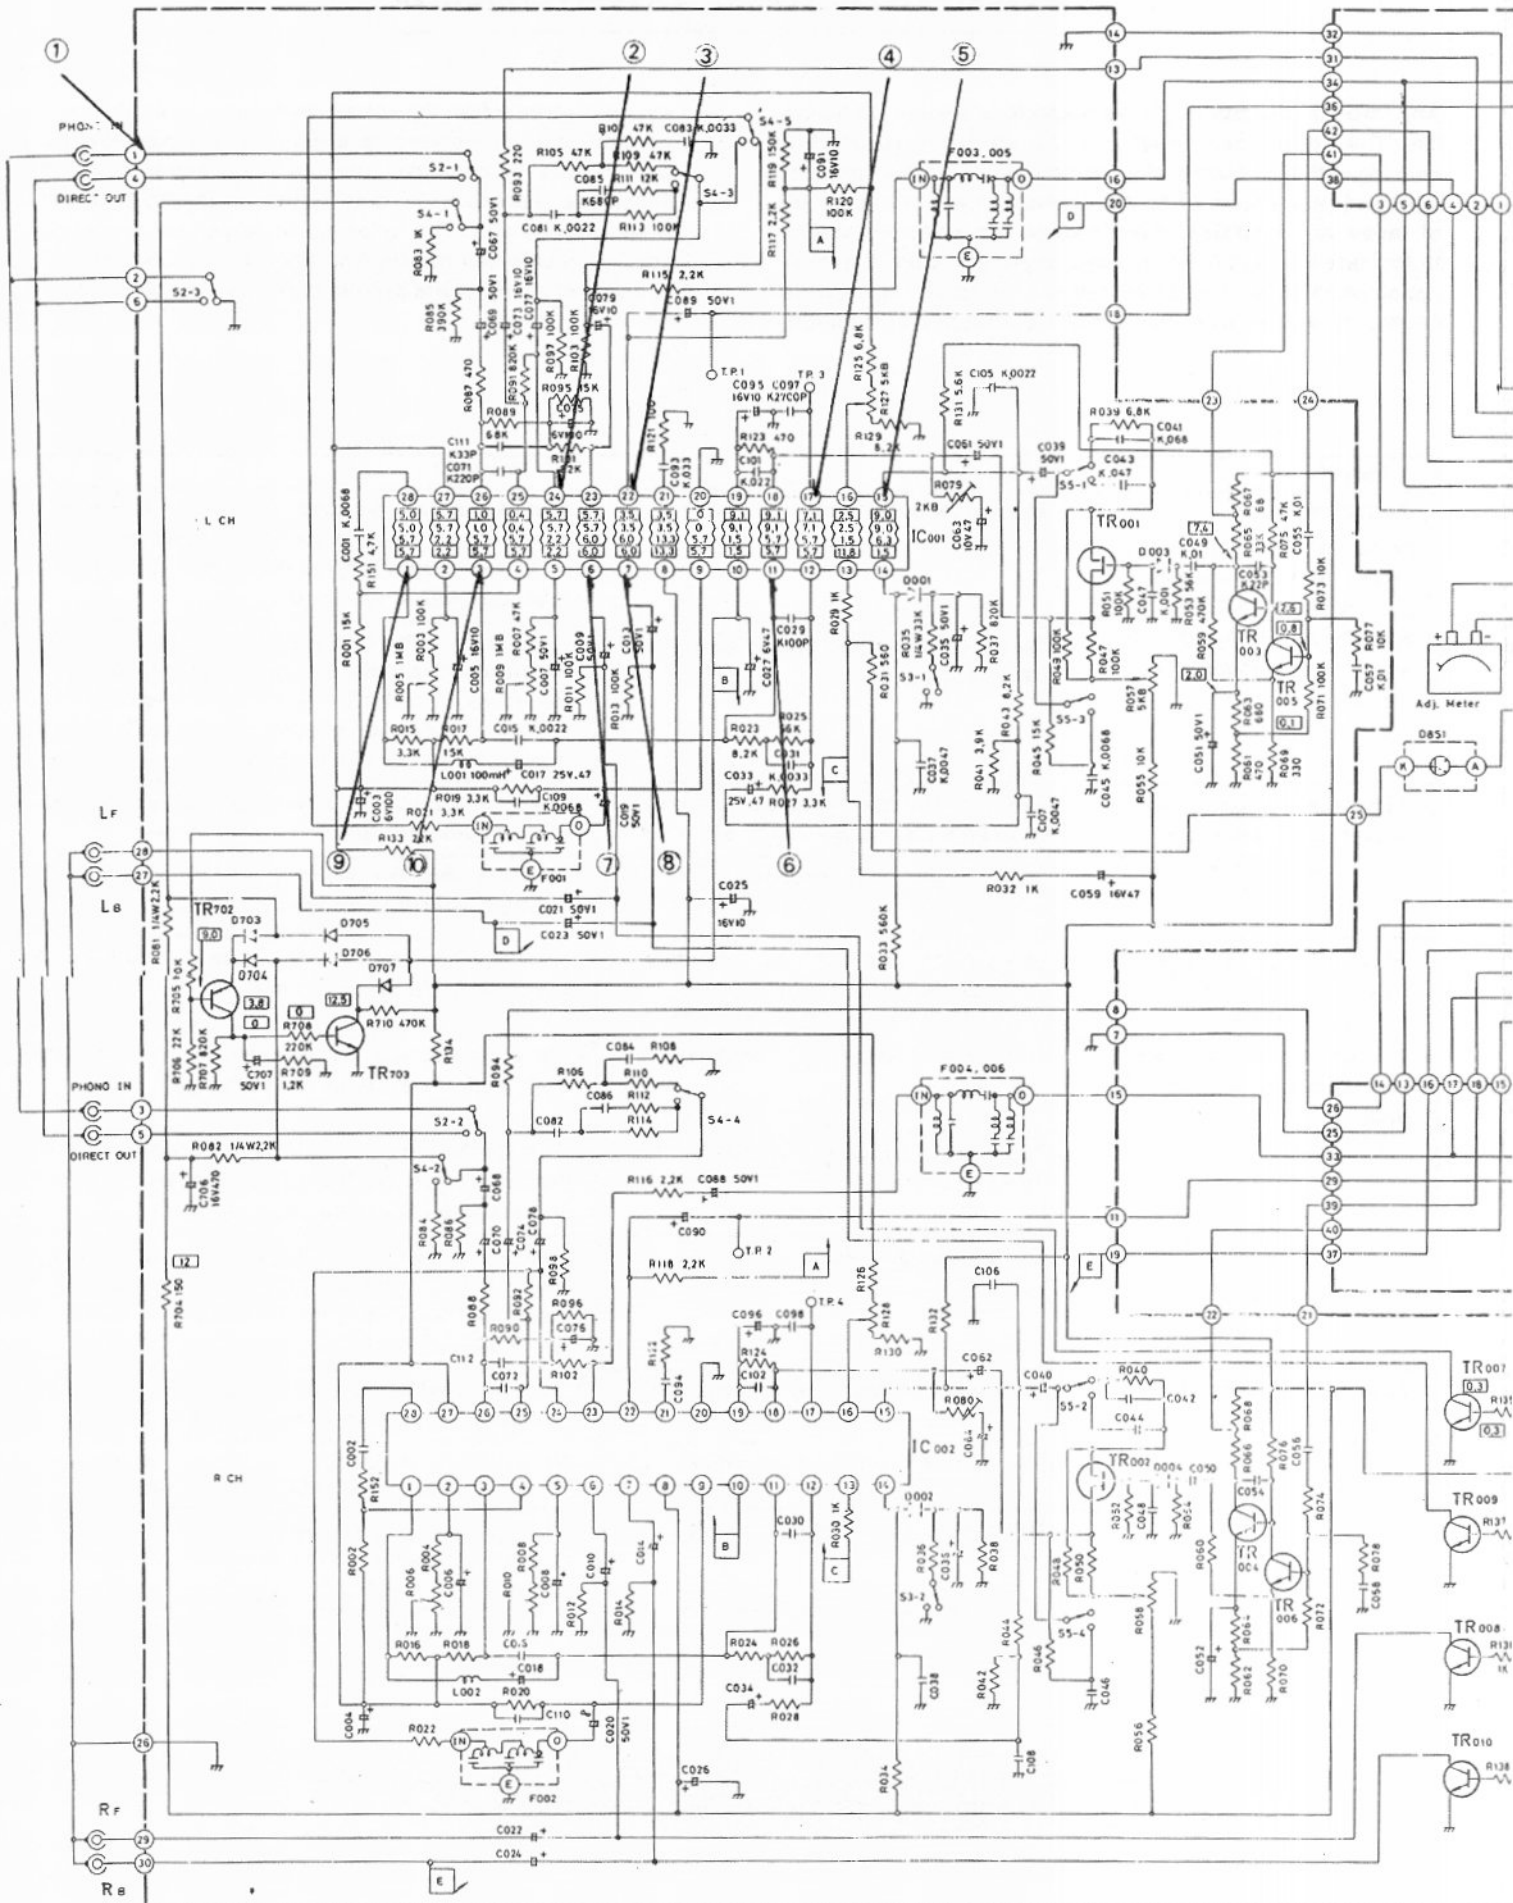

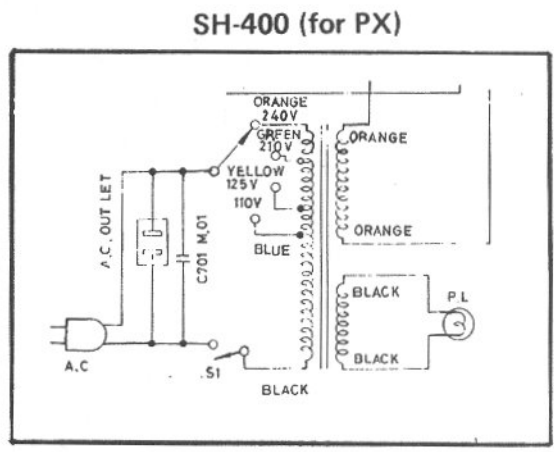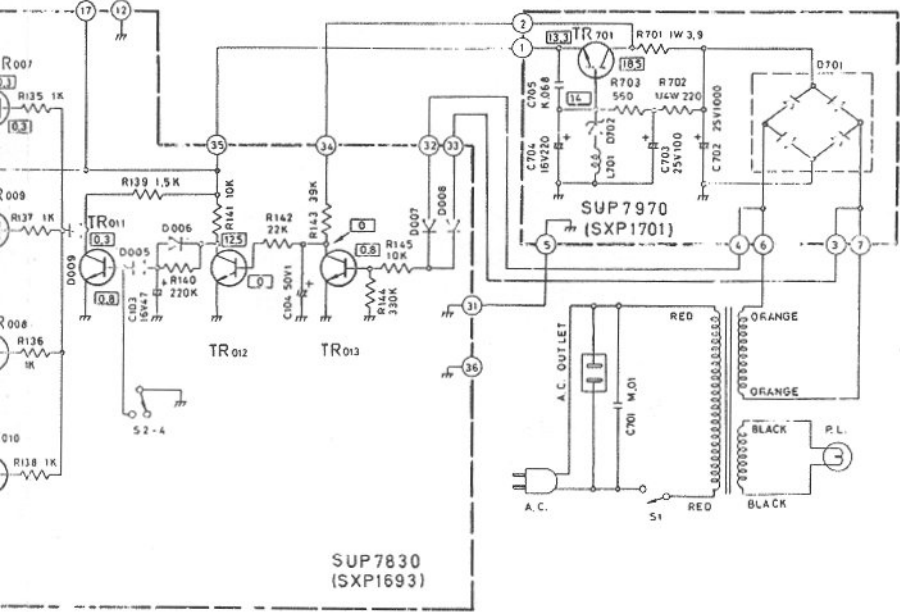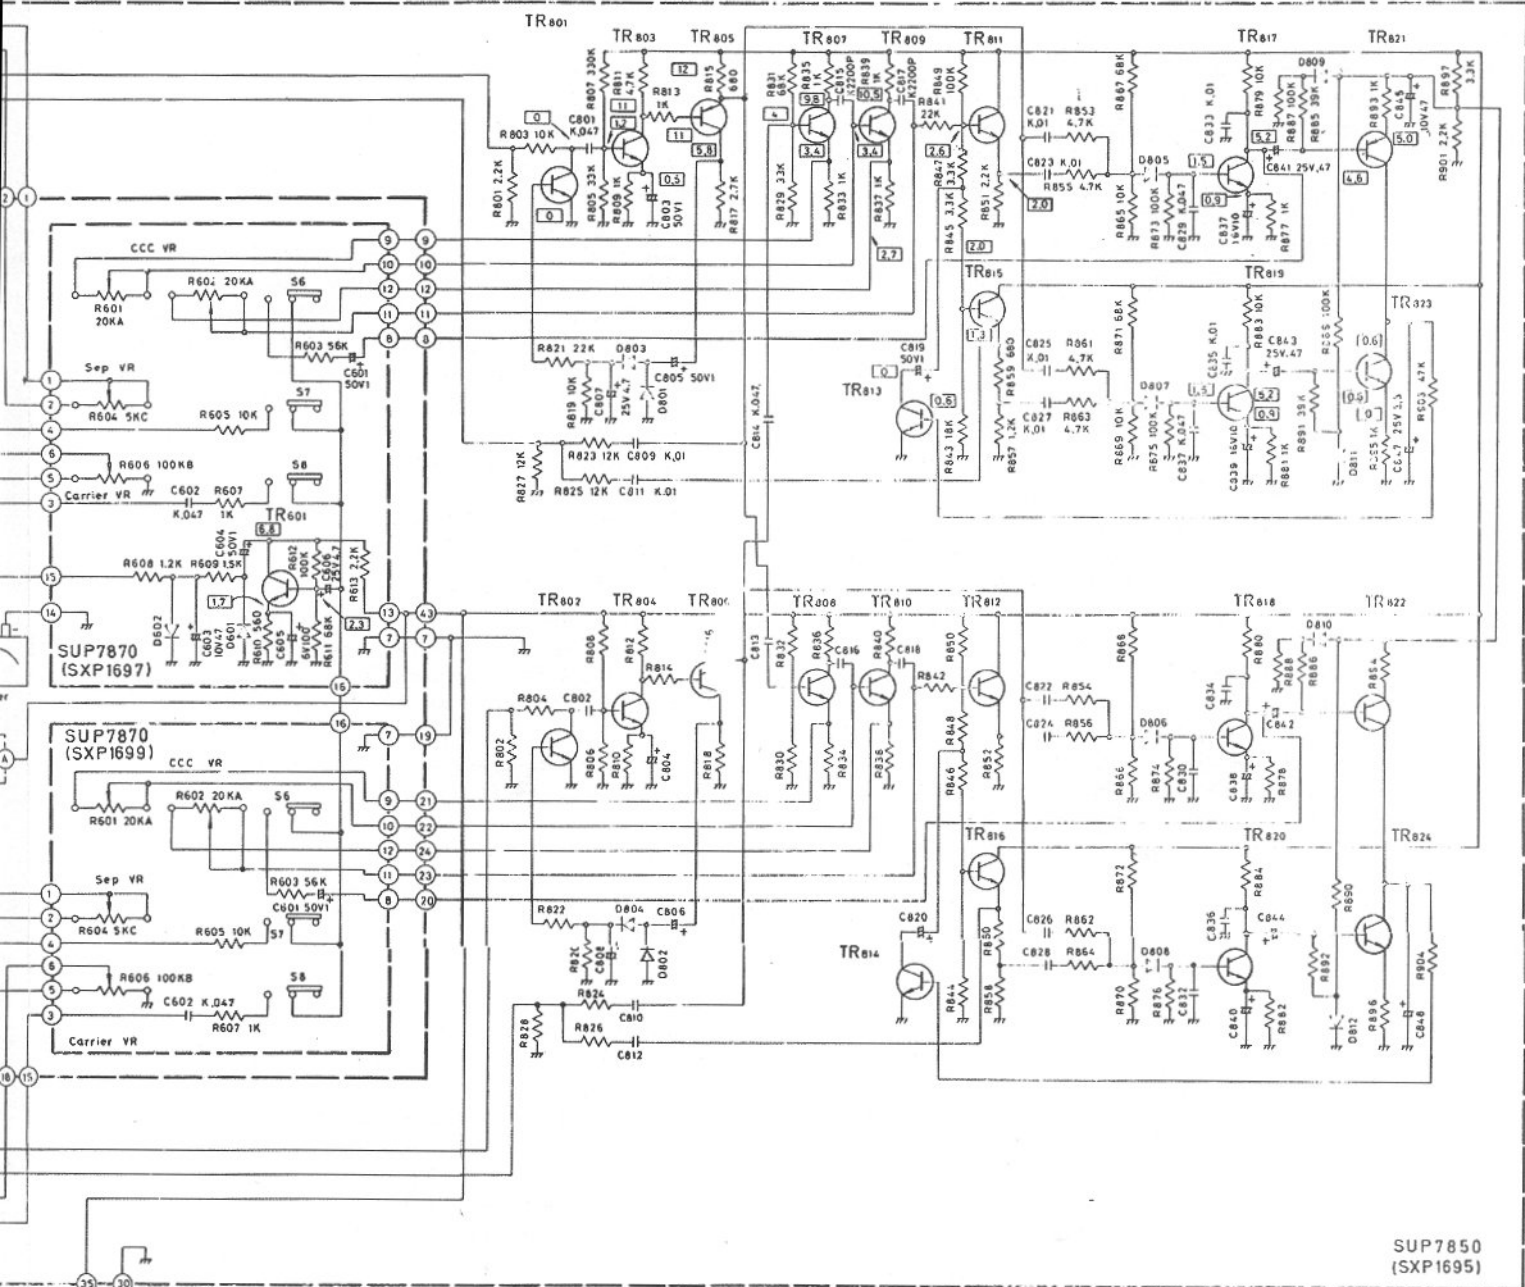

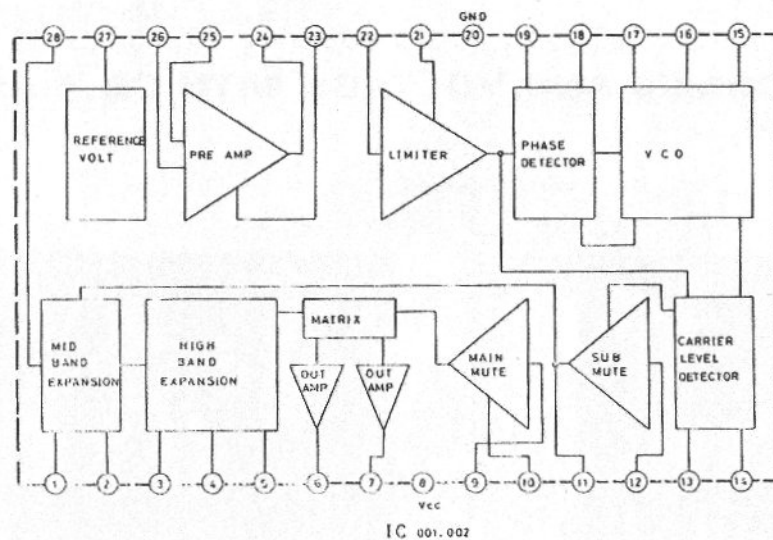

TRANSISTORS

TR 001.002	2SK30
TR 003-013, 601, 703, 801-004 807-870, 823, 824	2SC828
TR 707, 805, 806, 821, 822	2SA564
TR 701	2SC1226A

DIODES

D 001.002, 005-008, 703-707	MA150
D 003, 004, 601, 801-808	OA90
D 602, 809-812	SVDMA26-1
D 701	SVDSIRB10
D 702	SVDMZ214A
D 851	SVDLN23
D 009	SVDMA26-2

IC'S

IC 001.002	QSI5022
------------	---------

NOTES

1. Corresponds to the number on the printed wiring boards.
2. DC Voltage measurements are taken with a circuit Tester,
(100 KΩ/V) from chassis ground.
 Shows the Voltage without any signal.
 Shows the Voltage with CD-4 signal.
3. Tolerance K ±10% M ±20% J ±5% P ±0 - +100%


SWITCHES

- | | |
|------------|--|
| S1 | Power Switch now in OFF position
moves OFF → ON |
| S2-1, 52-3 | Mode Switch now in Demodu position
moves Demodu → Direct |
| S3-1, 3-2 | Mode Switch now in 4ch Auto position
moves 4ch Auto → 2ch |
| S4-1-4-5 | Cartridge Selector Switch now in 5C position
moves 5C → Mag |
| S5-1-5-4 | High-Blend switch now in OFF position
moves OFF → ON |
| S6-8 | Meter Selector Switch now in OFF position
moves OFF → ON |


This schematic diagram might be modified
with the development of technology.

Note: ... Test point for waveform with
CD-4 Adjustment Signal Generator.


STANDARD WAVEFORMES AND VOLTAGE WITH CD-4 ADJUSTMENT SIGNAL GENERATOR

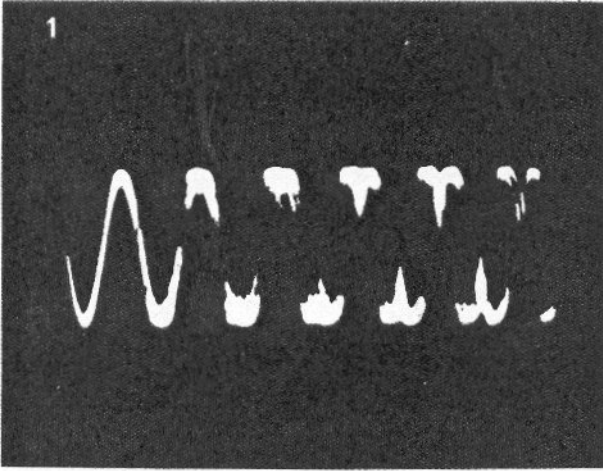

1. Note: Phono Input signal. (AC Level 3mV, 20 μ sec)

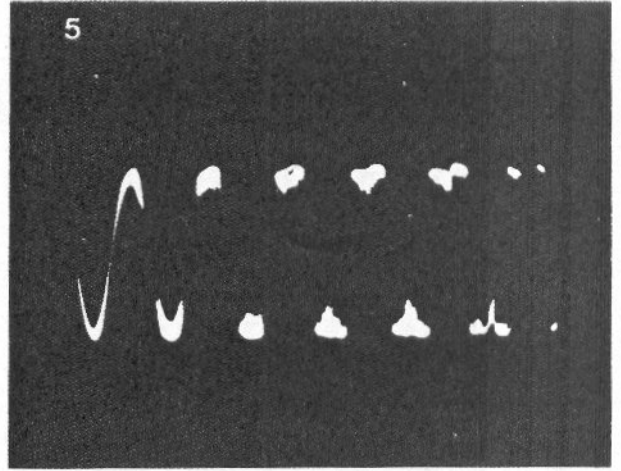


5. Note: Detector Out (AC Level 21mV, 0.5msec)

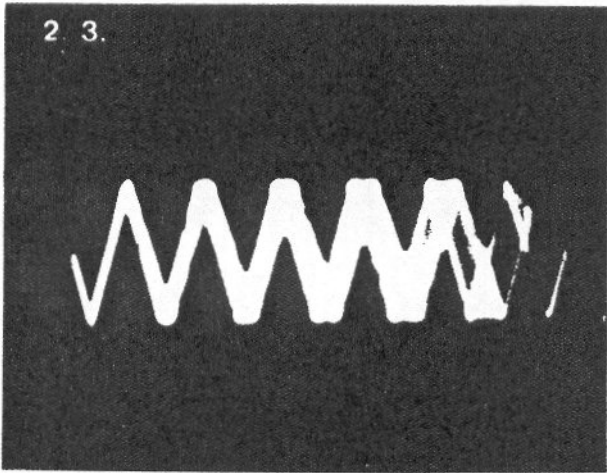

2. Note: Subchannel Out (AC level 490mV, 20 μ sec)


3. Note: Limitter Input (AC Level 190mV, 20 μ sec)

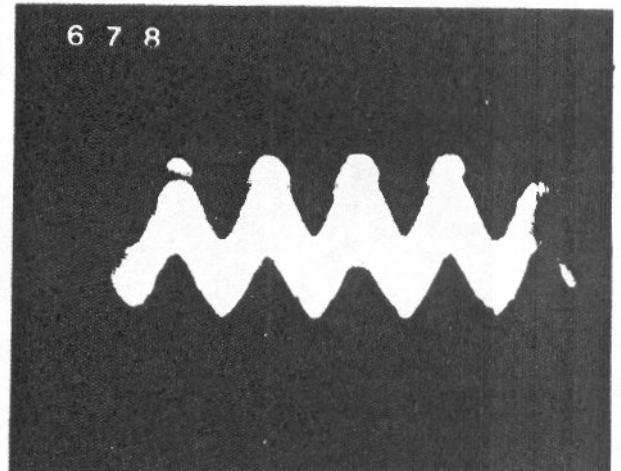


6. Note: FM-PM Out (AC Level 210mV, 0.5msec)

7. Note: Matrix Out (AC Level 160mV, 0.5msec)

8. Note: Matrix Out (AC Level 160mV, 0.5msec)

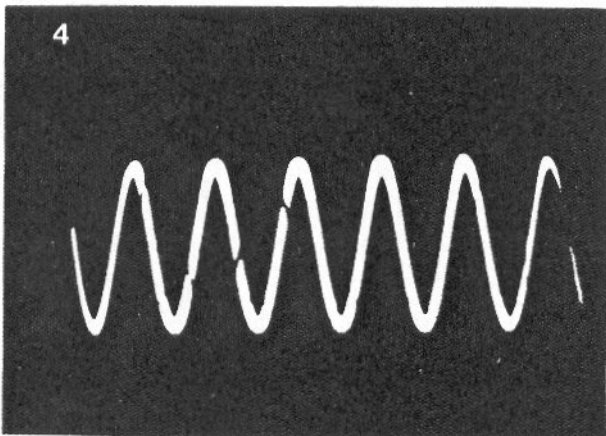

4. Note: Vco (AC Level 420mV, 20 μ sec)

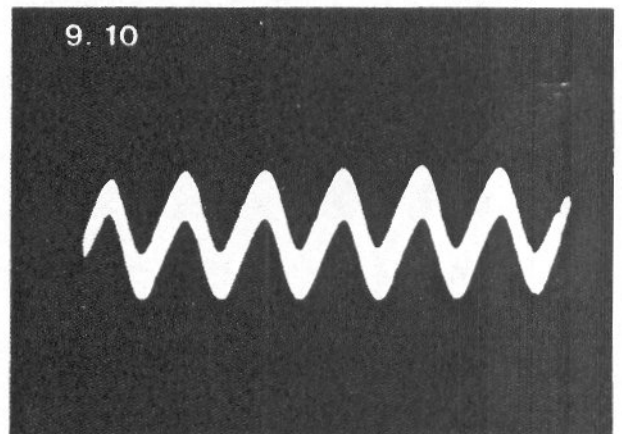


9. Note: A.N.R.S. (AC Level 190mV, 0.5msec)

10. Note: A.N.R.S. (AC Level 40mV, 0.5msec)

CIRCUIT BOARD CD-4 DEMODULATOR

C.C.C

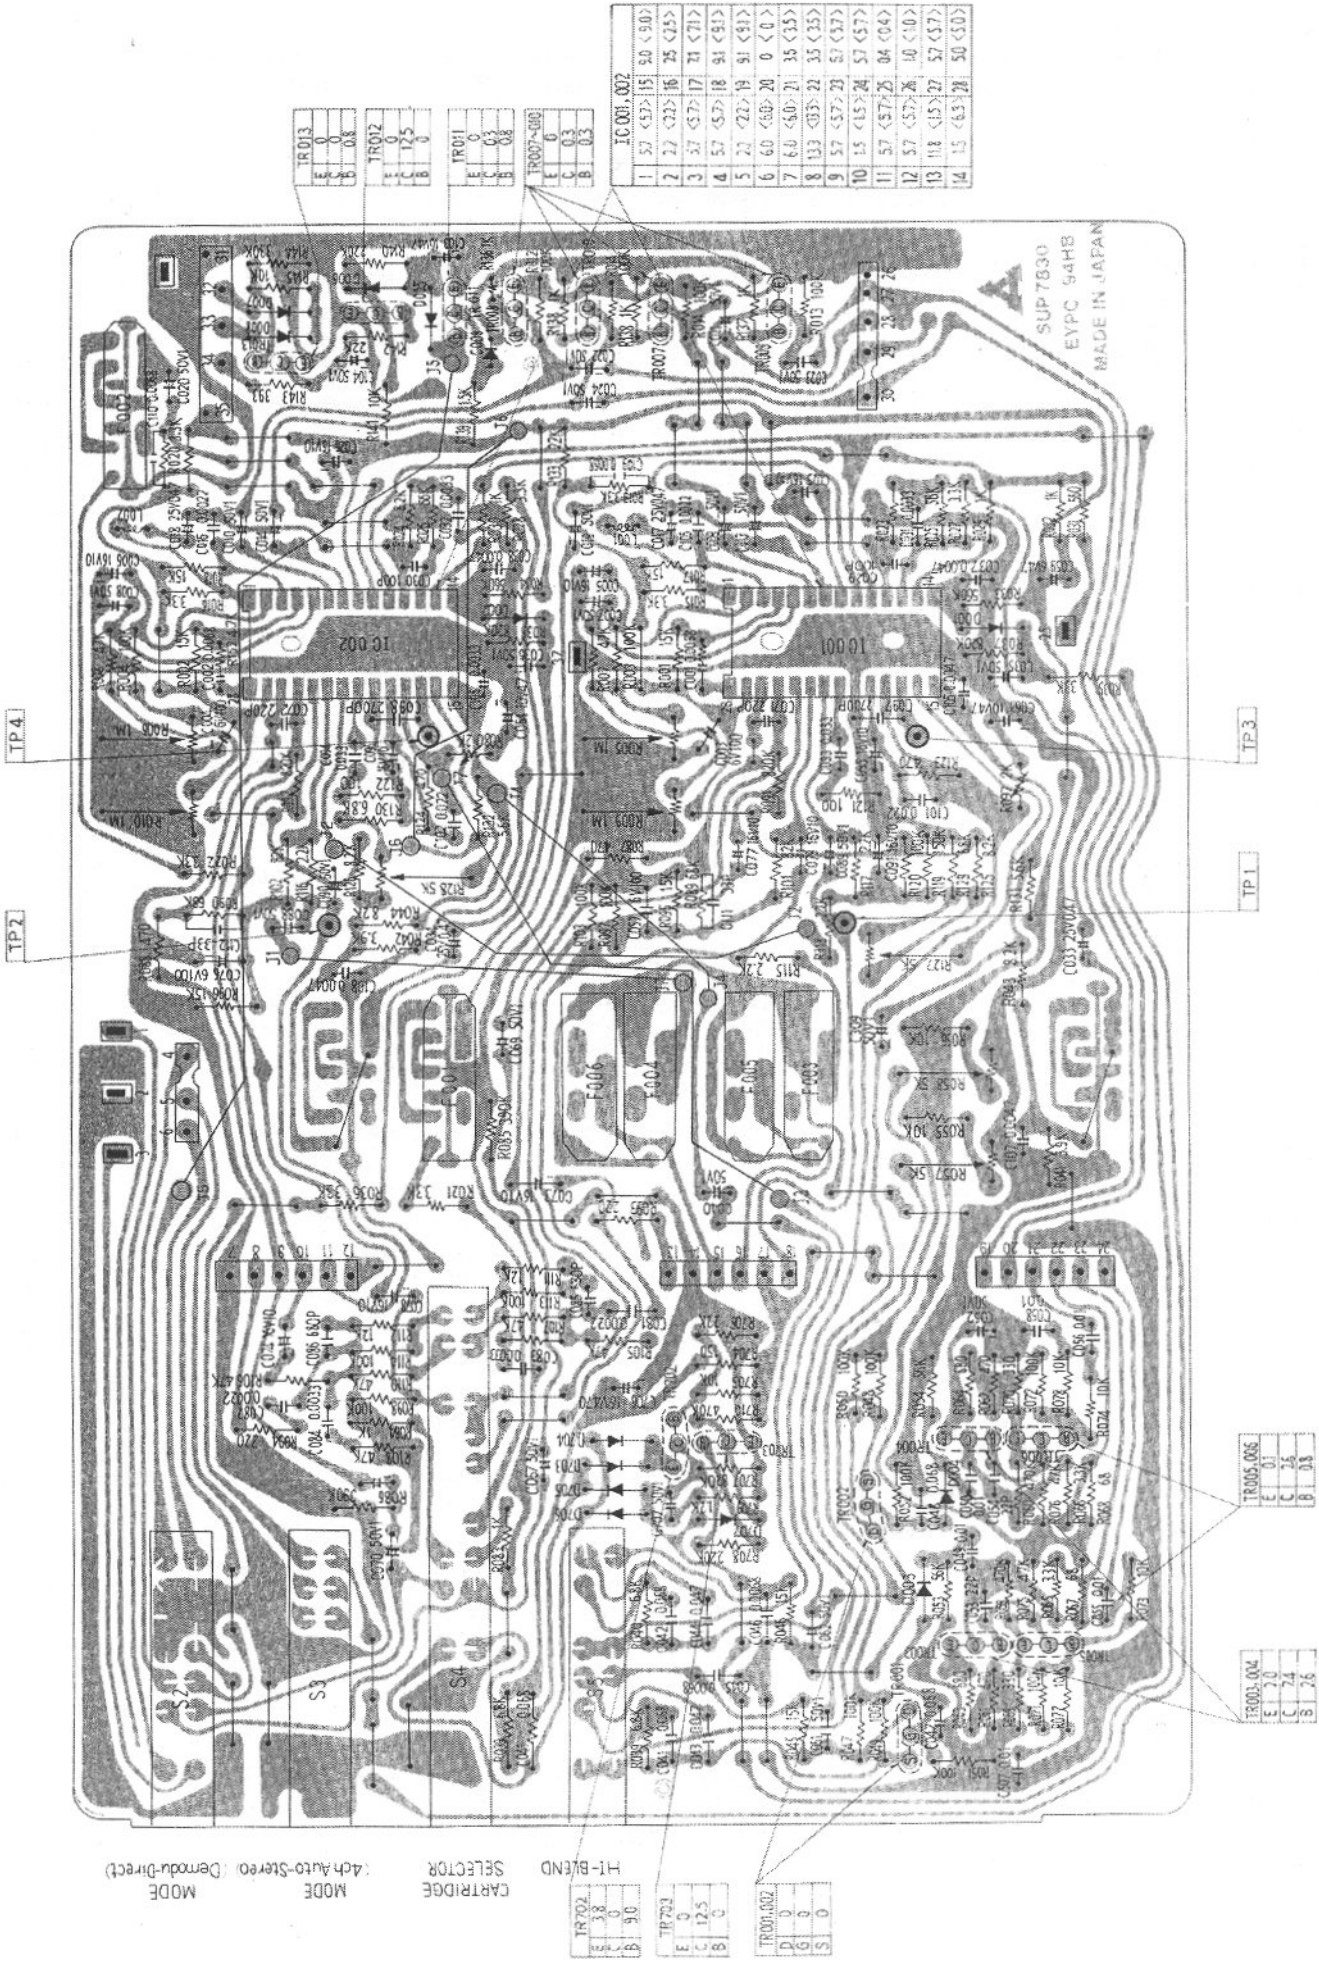

IC 001, 002	
1	57 <57> 15 50 <50>
2	27 <27> 16 25 <25>
3	37 <37> 17 31 <31>
4	57 <57> 18 31 <31>
5	27 <27> 19 31 <31>
6	60 <60> 20 0 <0>
7	60 <60> 21 35 <35>
8	133 <133> 21 35 <35>
9	57 <57> 23 57 <57>
10	15 <15> 24 57 <57>
11	57 <57> 26 04 <04>
12	57 <57> 26 10 <10>
13	118 <118> 27 57 <57>
14	15 <15> 28 50 <50>

TR003	
E	0
B	0.8
F	0

TR002	
E	0
B	1.5
F	0

TR001	
E	0
B	0.8
F	0

TR007-008	
E	0
B	0.3
F	0

TR702	
E	0
B	3.8
F	9.0

TR703	
E	0
B	12.5
F	0

TR001, 002	
E	0
B	0
F	0

TR005, 006	
E	0.1
B	0.8
F	0

TR003, 004	
E	7.0
B	3.5
F	7.4
S	7.6

MODE
 3-4ch Auto-Stereo (Demodu-Direct)

CARTRIIDGE
 SELECTOR

H1-BLEND

METER

POWER

SUP 7630
 EYPC 54HB
 MADE IN JAPAN


TP.4

TP.2



TP.1

TP.3


C.C.

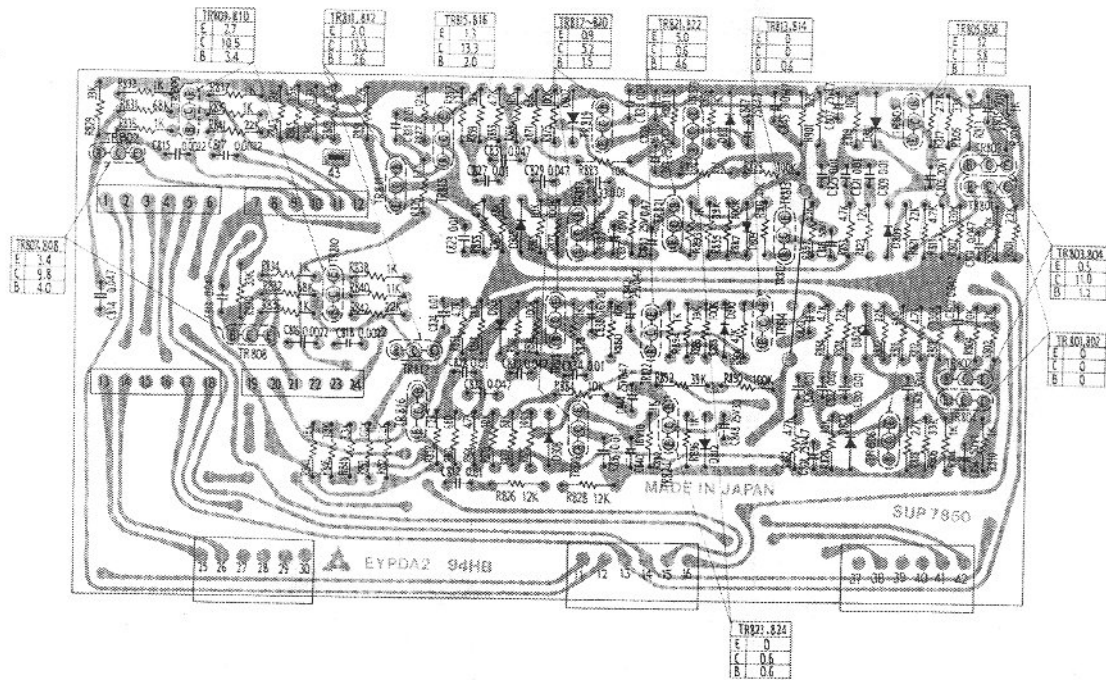


METER AMP

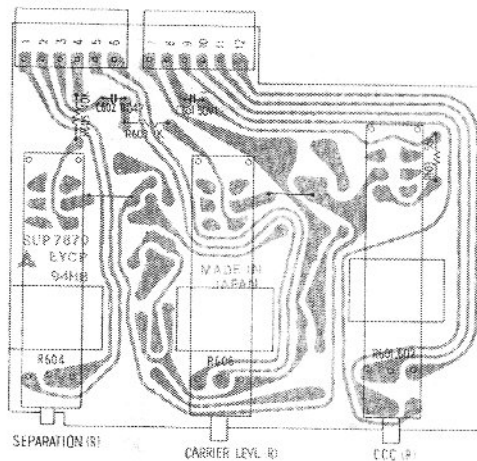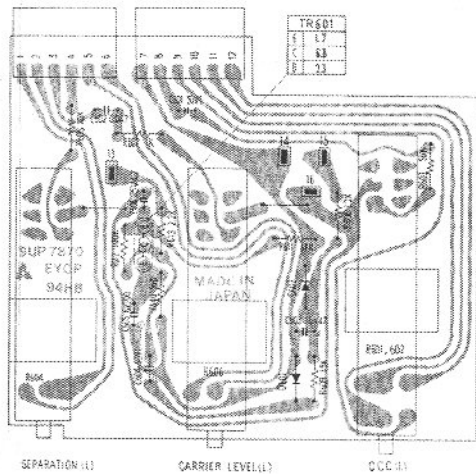


POWER PROTECTION

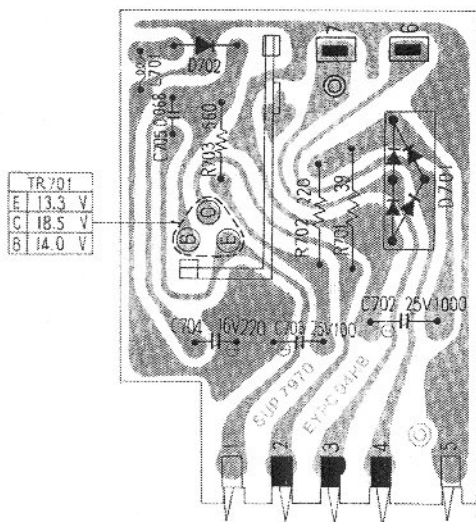

CONNECTIONS FOR A CD-4 SYSTEM

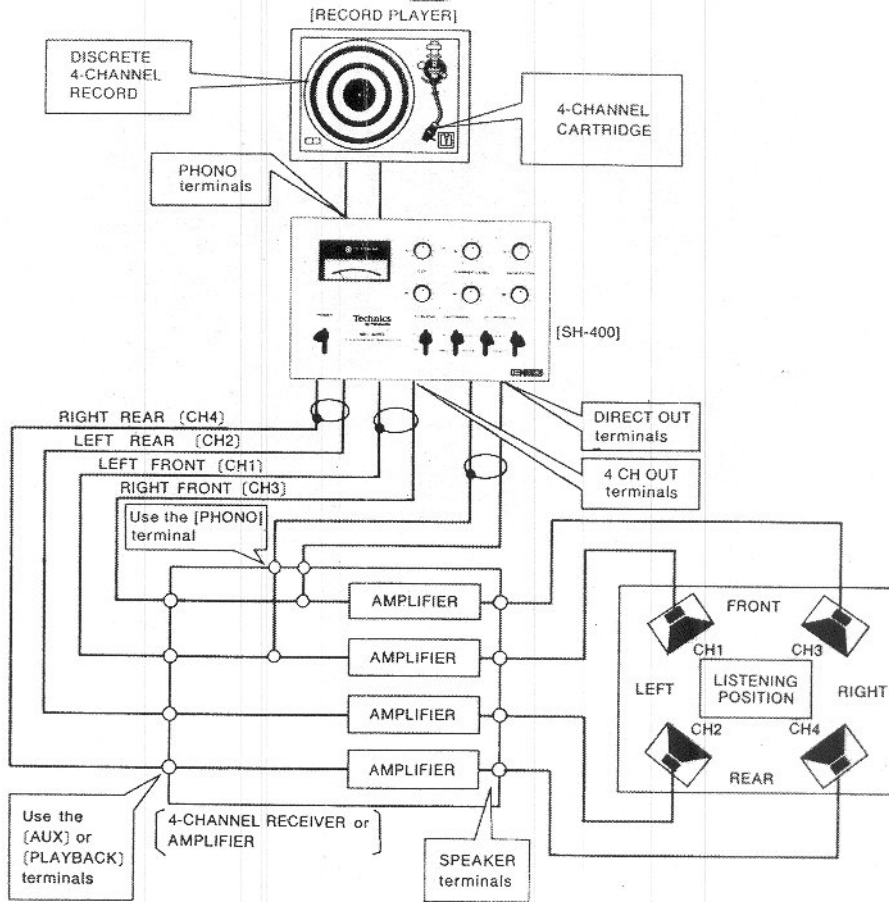

COMPONENT PACKING PROCEDURE

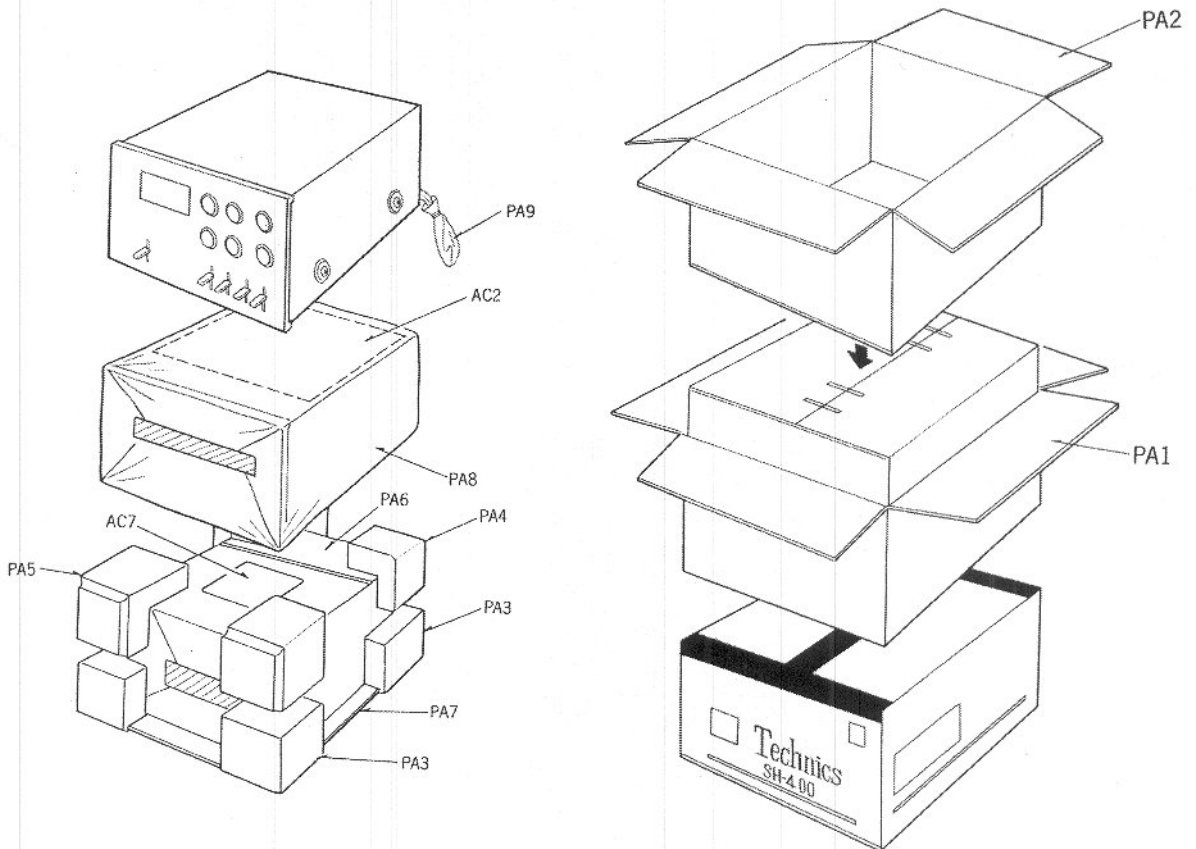

REPLACEMENT PARTS LIST

Note: K indicates 18 serrations parts.

Ref. No.	Part No.	Description	Per Set (PCS.)	Remarks	Ref. No.	Part No.	Description	Per Set (PCS.)	Remarks
IC and TRANSISTORS					R039,040,129,130	ERD18TJ682	6.8KΩ 1/8W ±5% Carbon	4	
IC001,002	SVIOS5022	Demodulator	2		R041,042	ERD18TJ392	3.9KΩ 1/8W ±5% Carbon	2	
TR001,002	2SK30AY	Auto highcut	2		R055,056,073,074,077,078	ERD18TJ103	10KΩ 1/8W ±5% Carbon	9	
TR003-006	2SC828-RST	Auto highcut	4		141,145,705				
TR007-010	2SC828-RST	Muting	4		R059,060710	ERD18TJ474	470KΩ 1/8W ±5% Carbon	3	
TR011	2SC828-RST	Muting	1		R061,062,087,088,123,124	ERD18TJ471	470Ω 1/8W ±5% Carbon	6	
TR012,013	2SC828-RST	Muting	2		R063,064	ERD18TJ681	680Ω 1/8W ±5% Carbon	2	
TR601	2SC828-RST	Meter Amp.	1		R067,068	ERD18TJ680	68Ω 1/8W ±5% Carbon	2	
TR701	A2SC1226-PQR	Ripple Filter	1		R069,070	ERD18TJ331	330Ω 1/8W ±5% Carbon	2	
TR702	2SA564-QR	Muting	1		R081,082	ERD14TJ222	2.2KΩ 1/4W ±5% Carbon	2	
TR703	2SC828-RST	Muting	1		R085,086	ERD18TJ394	390KΩ 1/8W ±5% Carbon	2	
TR801,802	2SC828-RST	C.C.C.	2		R089,090	ERD18TJ683	68KΩ 1/8W ±5% Carbon	2	
TR803,804	2SC828-RST	C.C.C.	2		R093,094	ERD18TJ221	220Ω 1/8W ±5% Carbon	2	
TR805,806	2SA564-QR	C.C.C.	2		R101,102	ERD18TJ823	82KΩ 1/8W ±5% Carbon	2	
TR807,808	2SC828-RST	C.C.C.	2		R111,112	ERD18TJ123	12KΩ 1/8W ±5% Carbon	2	
TR809,810	2SC828-RST	C.C.C.	2		R115-118	ERD18TJ222	2.2KΩ 1/8W ±5% Carbon	4	
TR811,812	2SC828-RST	C.C.C.	4		R119	ERD18TJ154	150KΩ 1/8W ±5% Carbon	1	
815,816					R121,122	ERD18TJ101	100Ω 1/8W ±5% Carbon	2	
TR813,814	2SC828-RST	C.C.C.	2		R131,132	ERD18TJ562	5.6KΩ 1/8W ±5% Carbon	2	
TR817,820	2SC828-RST	C.C.C.	4		R133,134,142,706	ERD18TJ223	22KΩ 1/8W ±5% Carbon	4	
TR821,822	2SA564-QR	C.C.C.	2		R136,607x2,809,810,813,814,833-840	ERD18TJ102	1KΩ 1/8W ±5% Carbon	23	
TR823,824	2SC828-RST	C.C.C.	2		877,878,881,882,893-896				
DIODES					R139	ERD18TJ152	1.5KΩ 1/8W ±5% Carbon	1	
D001,002,005-008,703-707	MA150	Demodulator	11		R140,708	ERD18TJ224	220KΩ 1/8W ±5% Carbon	2	
D003,004	OA90	Demodulator	2		R143	ERD18TJ393	39KΩ 1/8W ±5% Carbon	1	
D009	MA26-2	Demodulator	1		R144	ERD18TJ334	330KΩ 1/8W ±5% Carbon	1	
D601	OA90	Rectifier	1		R151,152,811,812,853-856	ERD18TJ472	4.7KΩ 1/8W ±5% Carbon	12	
D602	MA26-1	Rectifier	1		861-864				
D701	SVDS1RB10	Rectifier	1		R603x2	ERD18TJ563	56KΩ 1/8W ±5% Carbon	2	
D702	SVDMZ214A	Stabilizer	1		R605x2,803	ERD18TJ103	10KΩ 1/8W ±5% Carbon	14	
D801-804	OA90	C.C.C.	4		804,819,820,865,866,869,870,879,880,883,884				
D805-808	OA90	C.C.C.	4		R608,857,858	ERD18TJ122	1.2KΩ 1/8W ±5% Carbon	3	
D809-812	MA26-1	C.C.C.	4		R609	ERD18TJ152	1.5KΩ 1/8W ±5% Carbon	1	
D851	LN23	CD-4 Rader, L.E.D.	1		R610	ERD18TJ561	560Ω 1/8W ±5% Carbon	1	
COILS and TRANSFORMER					R611,831,832,867,868,871,872	ERD18TJ683	68KΩ 1/8W ±5% Carbon	7	
L001,002	SLQR104-1K	Choke Coil	2	○	R612,849,850,873-876,887-890	ERD18TJ104	100KΩ 1/8W ±5% Carbon	11	
L701	SLQX250-1	Choke Coil	1		R613	ERD18TJ222	2.2KΩ 1/8W ±5% Carbon	1	
T801	SLT5K43	Power Transformer (for PX)	1	○	R701	ERX1ANJ3R9	3.9Ω 1W ±5% Metallic Film	1	
T801	SLT5K39	Power Transformer (for U.S.A.)	1	○	R702	ERD14TJ221	220Ω 1/4W ±5% Carbon	1	
RESISTORS					R703	ERD18TJ561	560Ω 1/8W ±5% Carbon	1	
R001,002,017,018,045,046,085,096	ERD18TJ153	15KΩ 1/8W ±5% Carbon	8		R704	ERD18TJ151	150Ω 1/8W ±5% Carbon	1	
R003,004,011-014,047-052,071,072,097,098,103,113,114,120	ERD18TJ104	100KΩ 1/8W ±5% Carbon	20		R709	ERD18TJ122	1.2KΩ 1/8W ±5% Carbon	1	
R007,008,075,076,105-110	ERD18TJ473	47KΩ 1/8W ±5% Carbon	10		R801,802,851,852,901	ERD18TJ222	2.2KΩ 1/8W ±5% Carbon	5	
R015,016,021,022,027,028,065,066	ERD18TJ332	3.3KΩ 1/8W ±5% Carbon	8		R805,806,829,830	ERD18TJ333	33KΩ 1/8W ±5% Carbon	4	
R019,020,845-846,897	ERD18TJ332	3.3KΩ 1/8W ±5% Carbon	7		R807,808	ERD18TJ334	330KΩ 1/8W ±5% Carbon	2	
R023,024,043,044,125,126	ERD18TJ822	8.2KΩ 1/8W ±5% Carbon	6		R815,816,859,860	ERD18TJ681	680Ω 1/8W ±5% Carbon	4	
R025,026,053,054	ERD18TJ563	560KΩ 1/8W ±5% Carbon	4		R817,818	ERD18TJ272	2.7KΩ 1/8W ±5% Carbon	2	
R025,030,032,063,084,135,137,138	ERD18TJ102	1KΩ 1/8W ±5% Carbon	8		R821,822,841,842	ERD18TJ223	22KΩ 1/8W ±5% Carbon	4	
R031	ERD18TJ561	560Ω 1/8W ±5% Carbon	1		R823-828	ERD18TJ123	12KΩ 1/8W ±5% Carbon	6	
R033,034	ERD18TJ564	560KΩ 1/8W ±5% Carbon	2		R843,844	ERD18TJ183	18KΩ 1/8W ±5% Carbon	2	
R035	ERD14TJ333	33KΩ 1/4W ±5% Carbon	1		R885,886,891,892	ERD18TJ393	39KΩ 1/8W ±5% Carbon	4	
R036	ERD18TJ333	33KΩ 1/8W ±5% Carbon	1		R903,904	ERD18TJ473	47KΩ 1/8W ±5% Carbon	2	
R037,038,091,092,707	ERD18TJ824	820KΩ 1/8W ±5% Carbon	5		CAPACITORS				
					C001,002,045,046,109,110	ECQM05682KZ	0.0068μF 50V ±10% Polyester	6	
					C003,004,075,076	ECEA6V100LF	100μF 6V ±10% Electrolytic	4	

Service Manual

Technics
by Panasonic

STEREO
Technics
by Panasonic

Supplementary-1

MODEL SH-400

- * This service manual includes only the changes of the SH-400 service manual (ORDER NO. SD7410-443).
- * This manual should be filed with the service manual for model SH-400 (ORDER NO. SD7410-443).

CHANGES

● Addition

○ Deletion

■ REPLACEMENT PARTS LIST

Ref. No.	Change of Part No.		Description	Per Set (Pcs.)	Remarks
	Old Part No. →	New Part No.			
T801	SLT5K43	SLT5K49	Power Transformer (for PX)	1	
T801	SLT5K39	SLT5K45	Power Transformer (for U.S.A.)	1	
S5	SSLA26S	SSLA26-1S	High Blend Switch	1	
CH8	SNEA204-28	SNEA204-2S	Earth Terminal	1	
CH11	SMP2220	SMP229	Lamp Holder	1	
AC1	SQF885	SQF885-1	Printed Matter (for PX)	1	
AC1-1	SQF881	SQF881-1	" (for U.S.A.)	1	
AC1-2	SQF883	SQF883-1	" (for Canada)	1	
AC3	●	SJP2151	Low Capacitor Cord (PIN-PIN)	1	
AC4	●	SJP2129	Shield Cord (PIN-PIN)	3	