

Service Manual

Equalizer

Stereo Graphic Equalizer

SH-8058**Color**

| | |
|-----------|-------------|
| (S) | Silver Type |
| (K) | Black Type |

Area

| Color | Area |
|--------|--------------------------------|
| (S)(K) | (PC)European Audio Club. |

Please use this manual together with the service manual for Model No.SH-8058,
Order No.HAD8803078C9.

The destination (PC) is the same as (XA) regarding the specifications, parts used, and all others. Accordingly, part Nos.in the (XA) column are applicable to (PC).

Technics

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-01, Japan

Printed in Japan
F880500470 TW

Service Manual


Stereo Graphic Equalizer

Equalizer

SH-8058

Color

| | |
|-----------|-------------|
| (S) | Silver Type |
| (K) | Black Type |

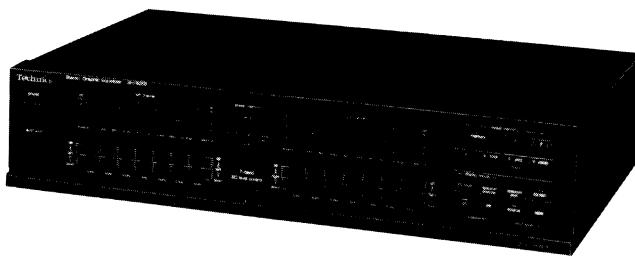

Area

| Color | Area |
|--------|---|
| (S)(K) | (EX)Continental Europe. |
| (S)(K) | (Ei)Italy. |
| (S)(K) | (EG)F.R.Germany. |
| (S)(K) | (EB)Belgium. |
| (S)(K) | (EK)United Kingdom. |
| (S)(K) | (EF)France. |
| (S)(K) | (EH)Holland. |
| (S)(K) | (XL)Australia. |
| (S)(K) | (XA)Asia,Latin America,Middle Near East,Africa and Oceania. |
| (S)(K) | (PA)Far East PX. |
| (S)(K) | (PE)European Military. |
| (S)(K) | (XB)Saudi Arabia. |

SPECIFICATIONS (DIN 45 500)

| | |
|---|---|
| Frequency response (center position) | 5 Hz ~ 100 kHz, -3 dB |
| Maximum output voltage | 8 V (1 kHz, THD 0.03%) |
| Rated output voltage | 1 V |
| Rated total harmonic distortion | 0.005% (20 Hz ~ 20 kHz) 0.003% (1 kHz) |
| Input sensitivity | 1 V |
| Signal-to-noise ratio | 107 dB (IHF'A) 100 dB (DIN) |
| Maximum input voltage | 8 V (1 kHz) |
| Input impedance | 47 kΩ |
| Gain | 0±1 dB |
| Band level controls | +12 dB ~ -12 dB (7 frequency ranges, in 2 dB steps) |
| Center frequency | 63 Hz, 160 Hz, 400 Hz, 1 kHz 2.5 kHz, 6.3 kHz, 16 kHz |
| Channel separation 1 kHz | 2.5 kHz, 6.3 kHz, 16 kHz 60 dB (DIN) |

Channel balance

250 Hz ~ 6300 Hz

± 0.5 dB (DIN)

GENERAL

| | | |
|--------------|----------------------------------|--|
| Power supply | For Continental Europe | AC 220 V, 50 Hz/60 Hz |
| | For United Kingdom and Australia | AC 240 V, 50 Hz/60 Hz |
| | For others | AC 110 V ~ 127 V/220 V ~ 240 V, 50 Hz/60 Hz |

Power consumption

11 W
(With power switch off : 6 W)Dimensions
(W × H × D)430 X 102.6 X 229mm
(16-1/16" X 4-1/16" X 9-1/32")

Weight

2.8 kg (6.2 lb.)

Specifications are subject to change without notice
for further improvement. Weight and dimensions are
approximate.

CONTENTS

| | Page |
|--|--------|
| CONNECTIONS..... | 2 |
| LOCATION OF CONTROLS..... | 3,4 |
| DISASSEMBLY INSTRUCTIONS..... | 5,6 |
| ACCESSORIES..... | 6 |
| SCHEMATIC DIAGRAM..... | 7 ~ 13 |
| DESCRIPTION OF FL PANEL..... | 13 |
| TERMINAL GUIDE OF TRANSISTORS, DIODES AND IC'S..... | 14 |

| | Page |
|--------------------------------------|---------|
| CIRCUIT BOARDS AND WIRING | |
| CONNECTION DIAGRAM | 15 ~ 16 |
| REPLACEMENT PARTS LIST(Cabinet)..... | 17 |
| EXPLODED VIEW | 18 |
| BLOCK DIAGRAM..... | 19,20 |
| FUNCTIONS OF IC TERMINALS | 21 |
| RESISTORS AND CAPACITORS | 22,23 |
| REPLACEMENT PARTS LIST..... | 24,25 |

Technics


Matsushita Electric Trading Co., Ltd.
P.O. Box 288, CentraOsaka JapanPanasonic Tokyo Office
Matsushita Electric Trading Co., Ltd.
6th Floor, World Trade Center Bldg.,
No. 4-1, Hamamatsu-cho 2-Chome, Minato-ku,
Tokyo 105, Japan

■ CONNECTIONS

Note:

When making the connections below in order to prepare the timer for a timer recording of a radio broadcast, be sure to make the settings so that the power of this unit will also be switched ON.

Connection to the external input/output (EXT IN/EXT OUT) terminals of an amplifier.

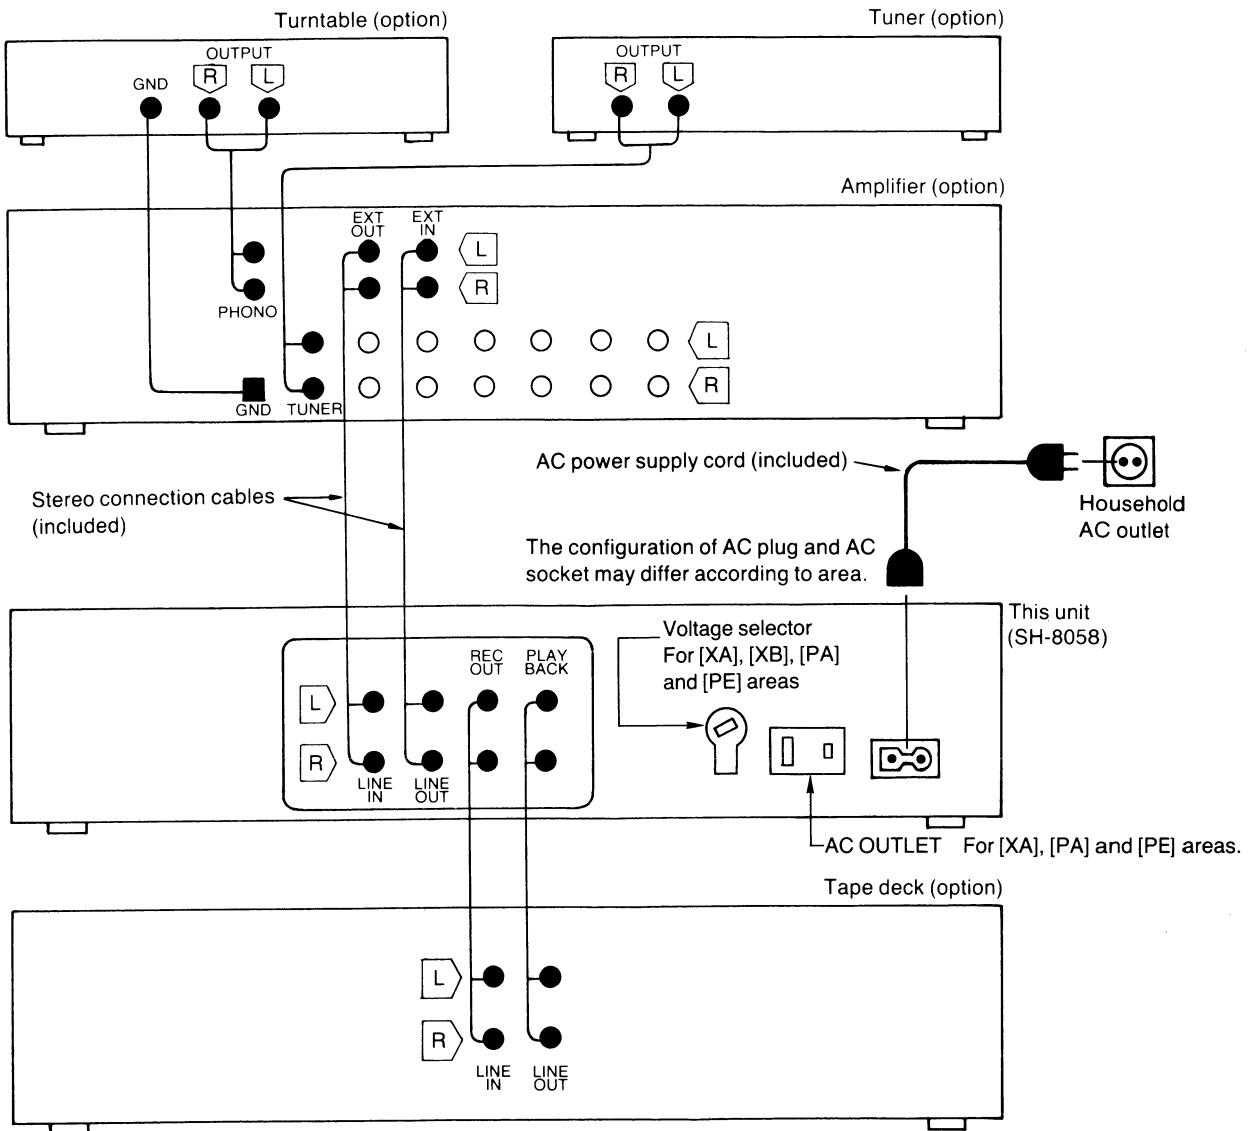


Power cord plug...

Leave the power cord plug of this unit connected to an electrical outlet even when the unit is switched standby if you are listening to discs or a radio broadcast, etc.
See "Power-through" function on page 3.

Connection to the TAPE terminals of an amplifier.

The connections between the amplifier and this unit change to those shown in the figure below, but other connections are the same as those shown in the figure above.

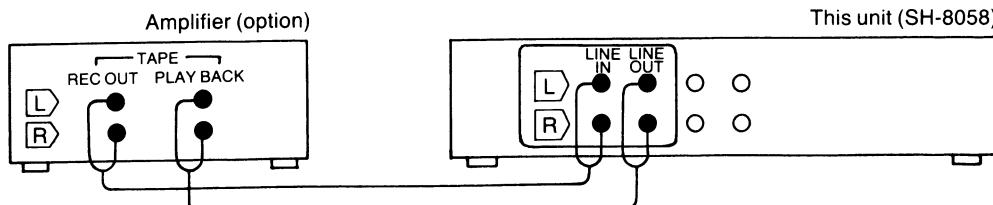

Note that the way the input and output cords are routed (for example, if they are tangled with the power cord) could cause a hum to be emitted.

■ LOCATION OF CONTROLS

• Power "standby () - on" switch

This switch turns on and to standby the secondary circuit power only. The unit is in the "standby" condition when this switch is set to the " () " position. Regardless of the switch setting, the primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

Note:

For this unit, even if this switch is switched to the "standby" position, there is still a slight power consumption of about 6 watts; this is in order to assure the retention of the "most recent" memory and the preset-memory functions.

"Power-through" function

Discs, radio broadcasts, etc. can be heard even if the power of this unit is switched to standby.

When using this feature, set the amplifier's selector to the source you want to hear, and, before switching "standby" this unit, press either the input selector buttons marked "source" or "tape".

• Right-channel spectrum/equalization display

The display shows the right channel spectrum or equalization level. The display of the spectrum or equalization level is shown in the same way as for the left channel.

• Equalization-preset indicators (1~6)

The indicator (1~6) corresponding to the preset-memory buttons will illuminate.

• Memory indicator (memory)

This indicator will flash for about five seconds when the memory button is pressed.

• Memory button (memory)

To enter an equalization curve into the memory, first press this button, and then, while the memory indicator is flashing (about 5 seconds), press one of the preset-memory buttons to complete the memorization of the equalization curve.

• Display mode buttons (display mode)

These buttons are used to select either the display of the spectrum or of the equalization level.

EQ level: When this button is pressed, the equalization level is shown on the display.

spectrum analyzer: When this button is pressed, the spectrum is shown on the display.

• Preset-memory buttons (preset memory)

These buttons are used to preset the equalization curves into the memory. After curves have been preset into the memory, it is then possible to quickly and easily select the desired curve by simply pressing the corresponding button. There are six memory areas: three are for fixed-equalization-level memory, and three are for use by the user.

• Spectrum level button (spectrum level)

Press this button to adjust the sensitivity of the spectrum display. Each time the button is pressed, the mode changes as follows.

Average level → High level → Average level
Low level ←

• When listening at high volume levels, select low level.

• When listening at low volume levels, select high level.

• When listening at average volume levels, select average level.

This will keep the spectrum indicators close to the center of the display for easy visibility.

When the button is selected as above, "full range" indicator also change to the same level as spectrum indicators.

• Equalization recording button /indicator (EQ rec)

Press this button to record the sound corrected by the equalizer to the tape deck connected to this unit. When the button is pressed, the indicator will illuminate.

Note: For equalization recording, be sure to set the equalization buttons to "on" and press the input selector buttons to "source".


This only works for tape decks connected to this unit.

• Input selector buttons/indicators (input selector)

These buttons are used to select the source to be heard. The indicator for the pressed button will illuminate.

source: Set to this position to listen to equipment (disc player, tuner, etc.) connected to the amplifier, or to record to the tape deck connected to this unit.

tape: Set to this position to listen to tape deck connected to this unit.

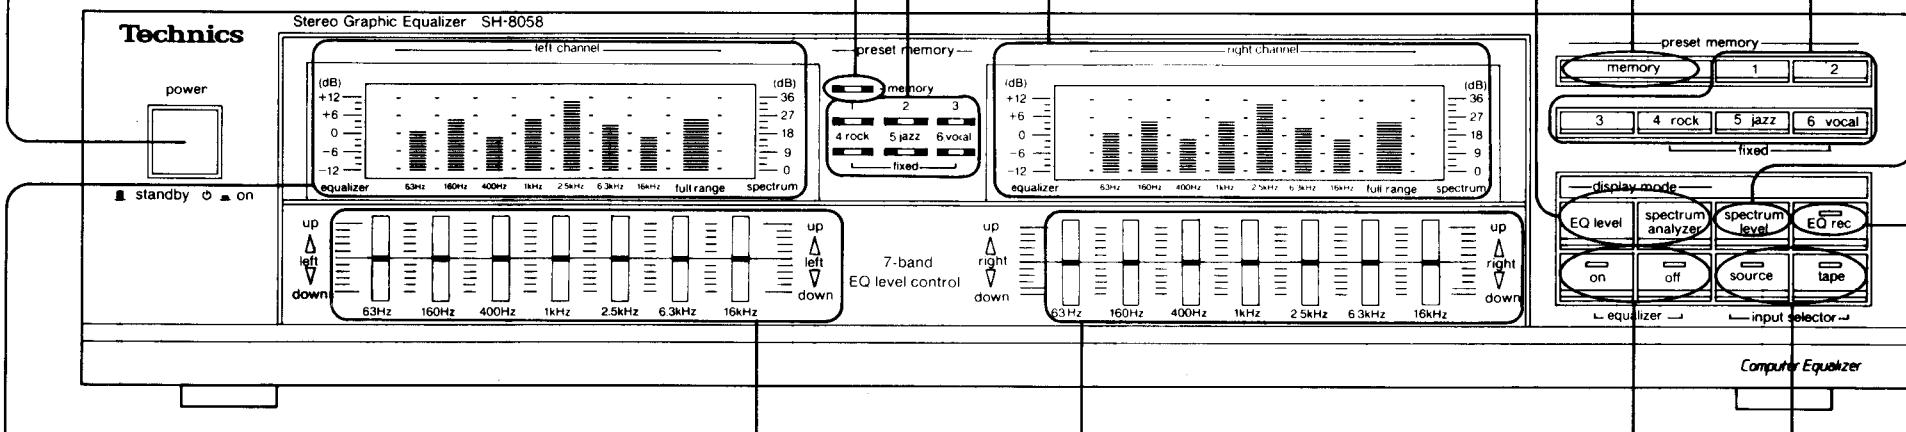


• Left-channel spectrum/equalization display

The display shows the left channel spectrum or equalization level. The spectrum is shown by using bars, and the equalization level is shown by using a dot-type (=) display.

The "full range" area on the right side displays the combined level of all of the frequency bands.

The "full range" display corresponds each setting of the spectrum level.

Spectrum display

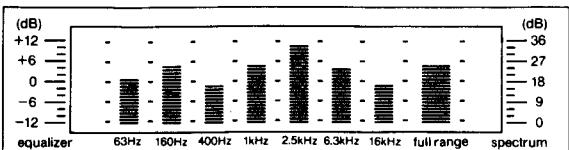

• Left-channel level-control buttons (EQ level control)

These buttons are used for adjustment of the equalization level of the left channel. When the button corresponding to the frequency to be adjusted is pressed, the equalization level of the left channel changes in 2-dB steps.

If a button is pressed and held, the equalization level of the left channel can be varied continuously throughout a maximum range of ±12 dB.

• Equalization buttons/indicators (equalizer)

These buttons can be used to select the type of equalization correction to be applied to the left and right channel.

on: Select this position to make an equalization correction.


off: Select this position if no equalization correction is desired.

Note that the "on" position is automatically selected if a preset-memory button or a level-control button is pressed while these buttons are set to the "off" position.

• Right-channel level-control buttons (EQ level control)






These buttons function in the same way as the left-channel level-control buttons.

Equalization display

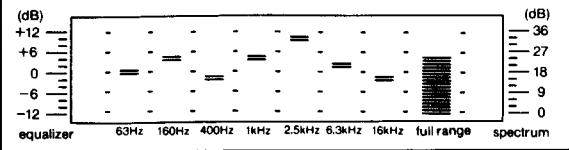


■ DISASSEMBLY INSTRUCTIONS

| Ref. No. 1 | How to remove the cabinet | Ref. No. 2 | How to remove the front panel |
|------------------|--|------------------|--|
| Procedure 1 | • Remove the 5 screws (①~⑤). | Procedure 1→2 | 1. Remove the flat cable (J101, J102, J103, J104, J105). 2. Remove the 3 screws (①~③). 3. Remove the front panel in the direction of the arrow. |
| Ref. No. 3 | How to remove the power switch P.C.B. | Ref. No. 4 | How to remove the main P.C.B. |
| Procedure 1→3 | 1. Remove the power switch knob by pushing it from behind the front panel. 2. Remove the flat cable (J101). 3. Remove the 2 screws (①, ②). | Procedure 1→4 | 1. Remove the 6 screws (①~⑥). 2. Remove the flat cable (J101, J102, J103, J104, J105). 3. Remove the 4 screws (⑦~⑩). 4. Pull out the claws in the direction of the arrow, and remove the AC outlet. 5. Remove the main P.C.B. in the direction of the arrow. |

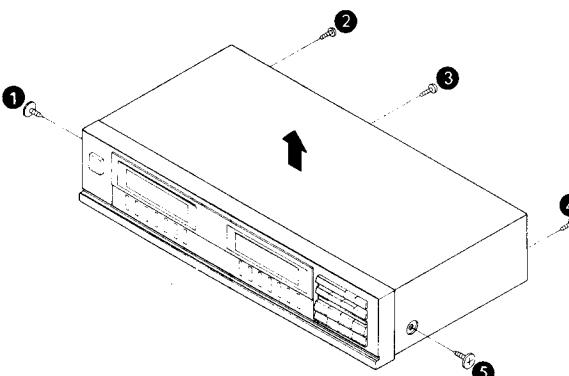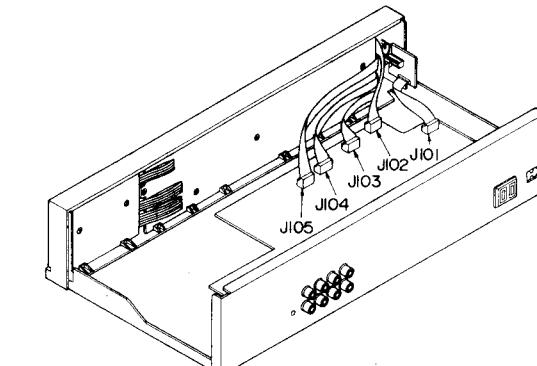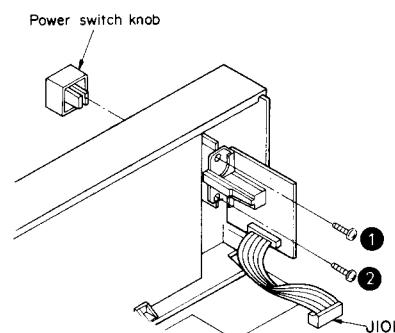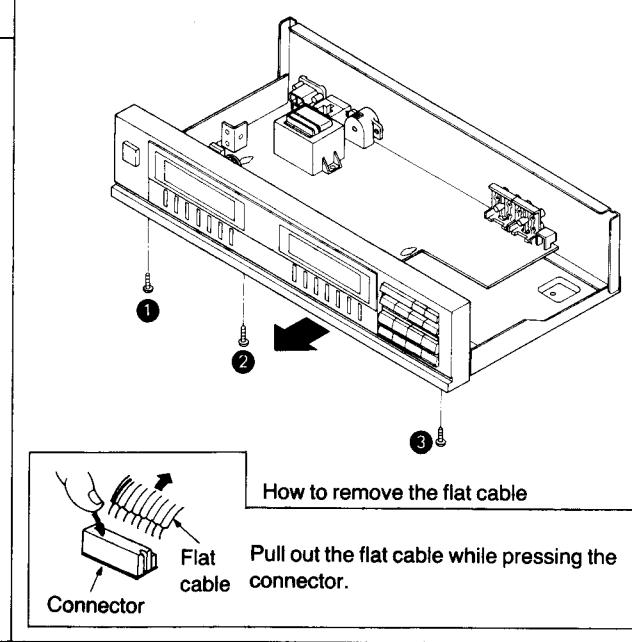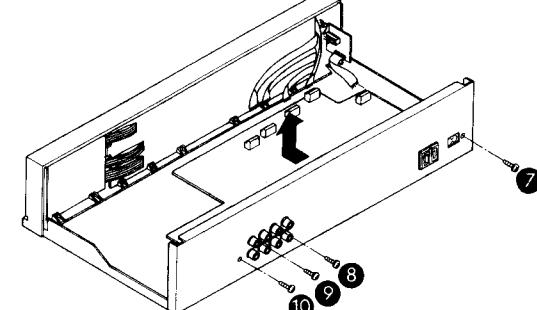




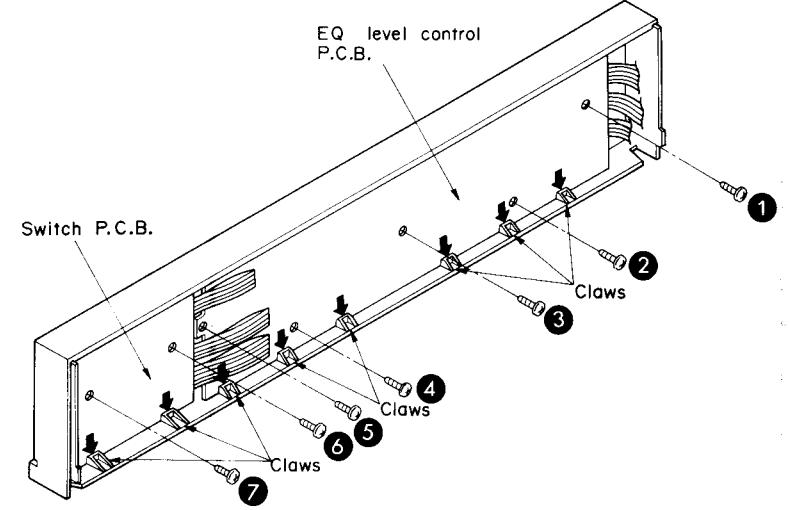

| Ref. No. 5 | How to remove the EQ level control P.C.B. and switch P.C.B. |
|--|--|
| Procedure 1→3→5 | |
| How to remove the EQ level control P.C.B. | 1. Remove the 5 screws (①~⑤). 2. Push the 6 claws. 3. Remove the EQ level control P.C.B. |
| How to remove the switch P.C.B. | 1. Remove the 2 screws (⑥, ⑦). 2. Push the 2 claws. 3. Remove the switch P.C.B. |

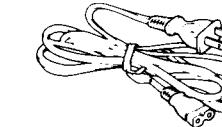


■ ACCESSORIES

- AC power supply cord 1



- (SFDAC05G2) For [EK] area only.
(SJA168) For [PA] and [PE] areas.
(SJA173) For [XL] area only.
(SJA183) For [XB] area only.
(SJA185) For [XA] area only.
(SFDAC05E03) For others.

- Stereo connection cables 2

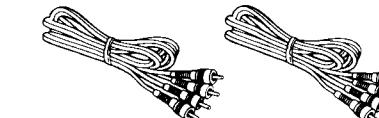


(SJPK2202-1)

- Remote-control cable 1



(SJP2257T)

■ SCHEMATIC DIAGRAM

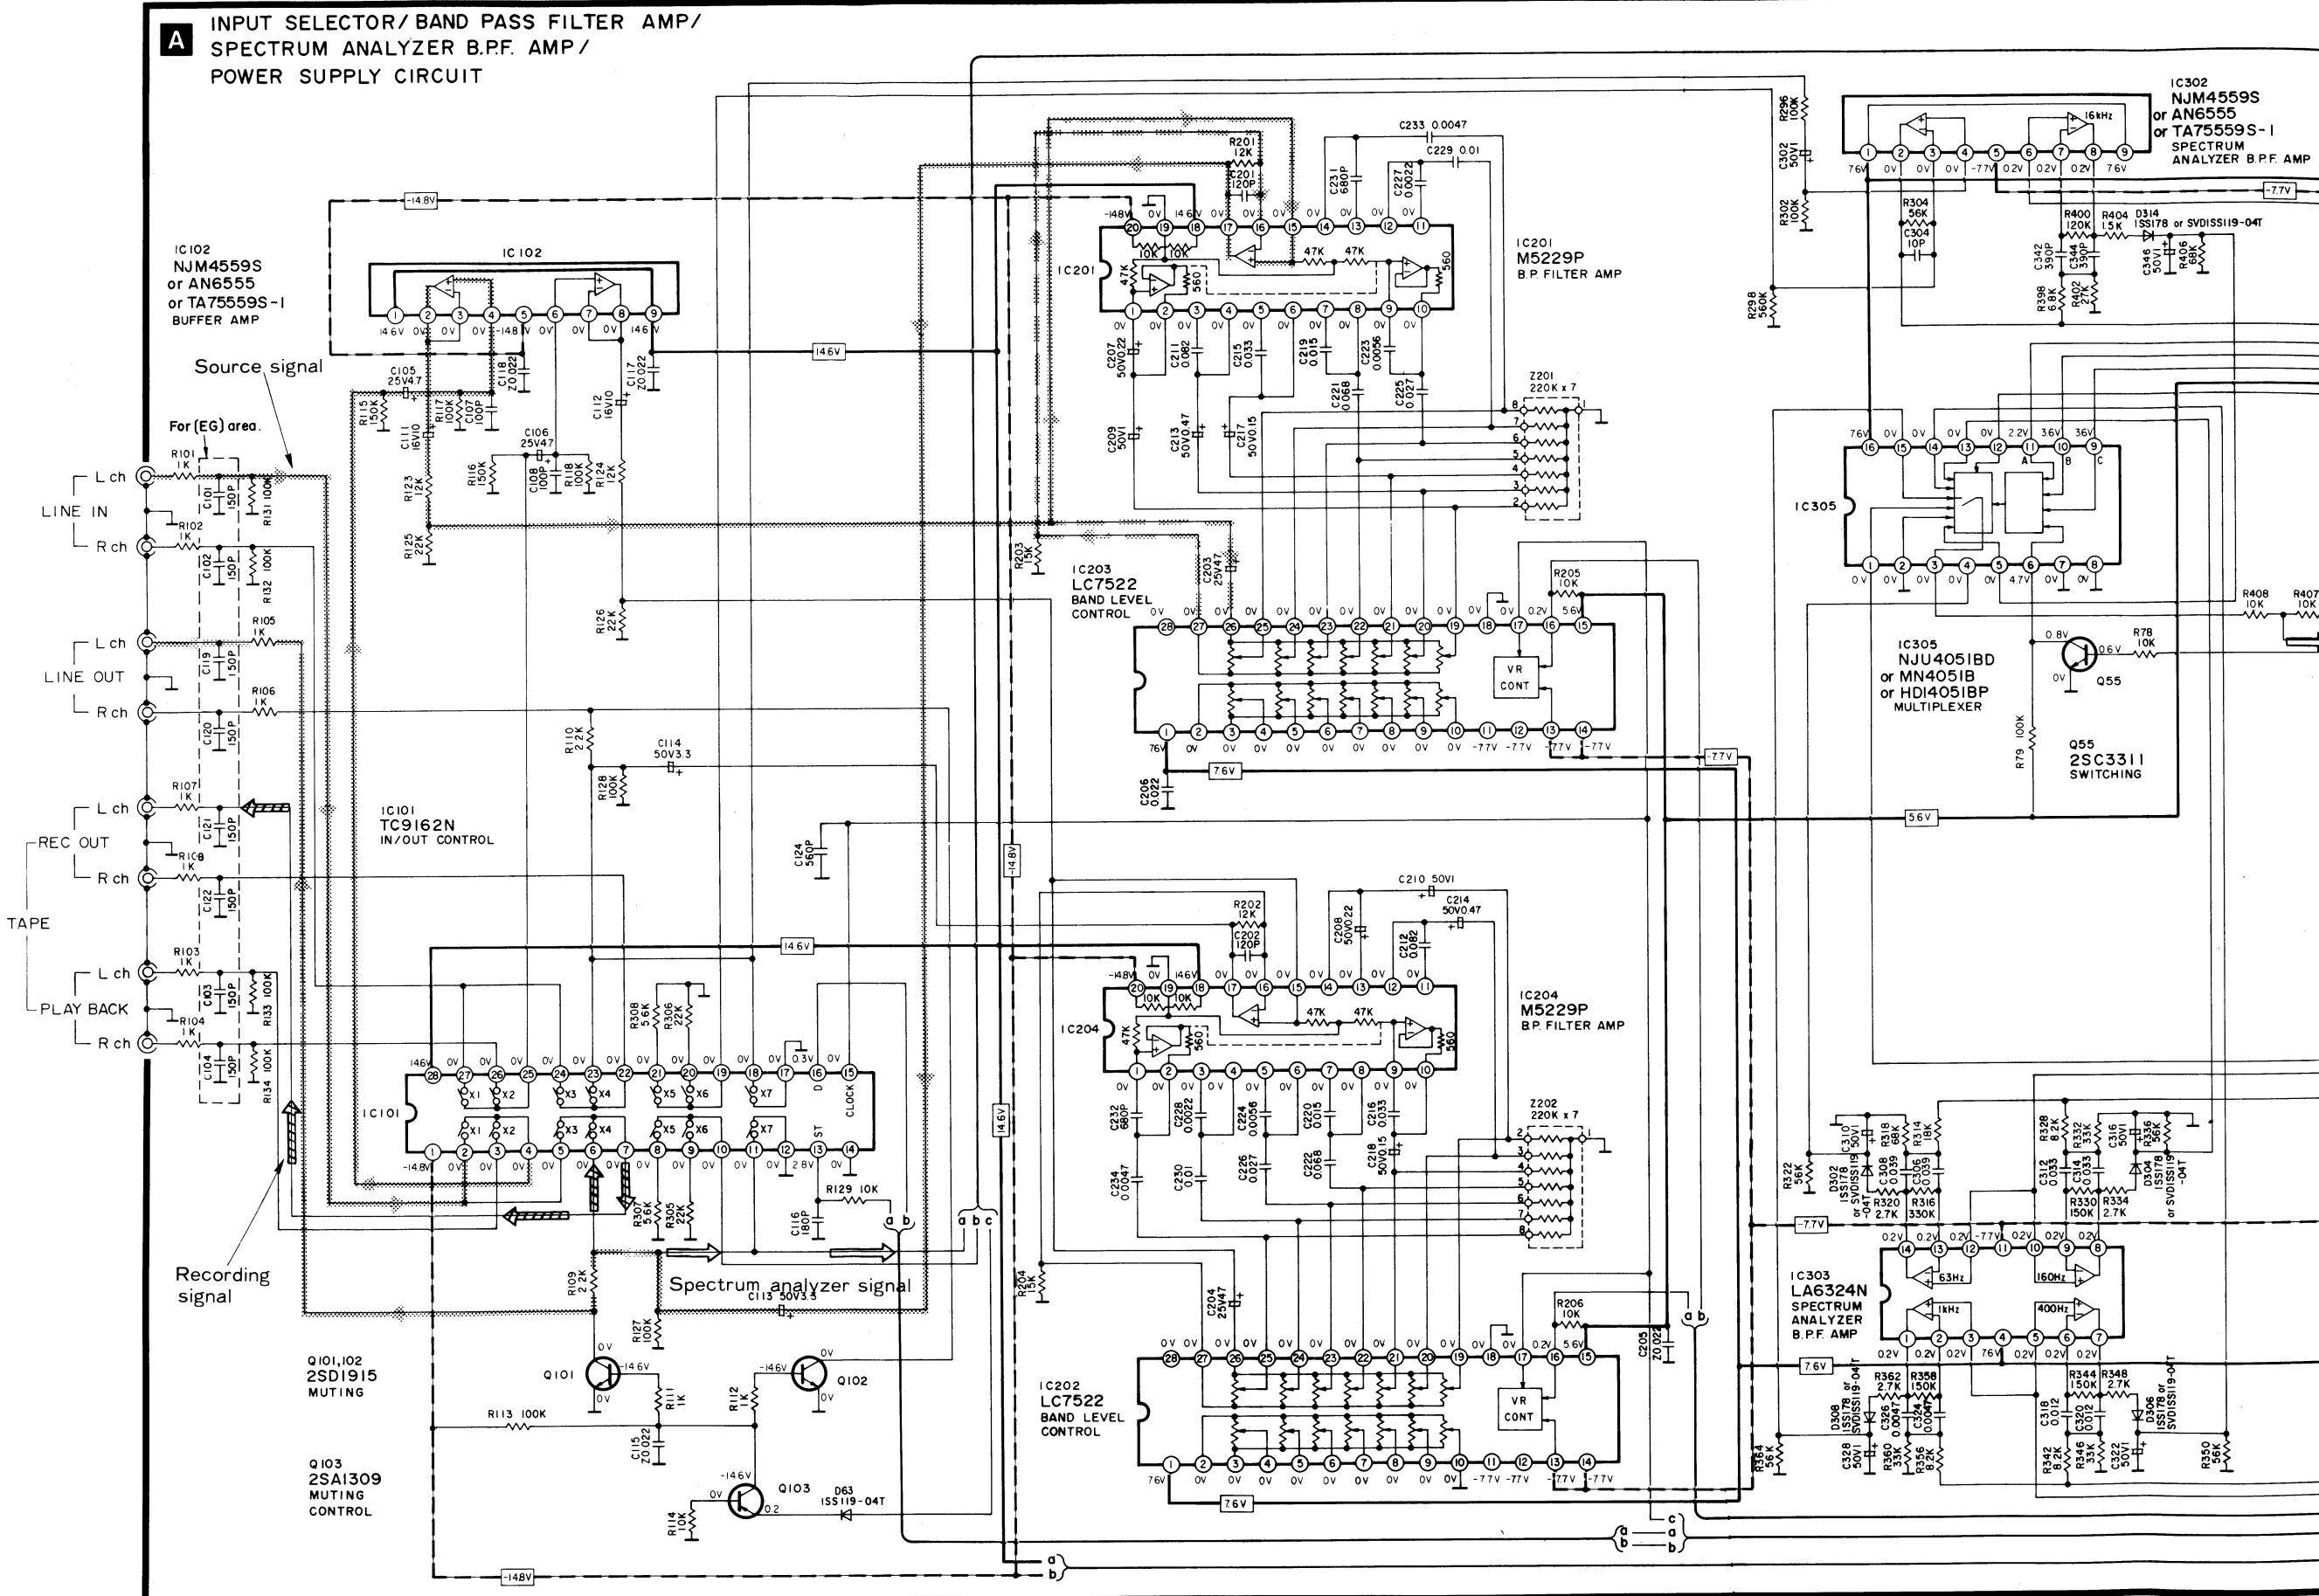

13


14


1

2

23

2

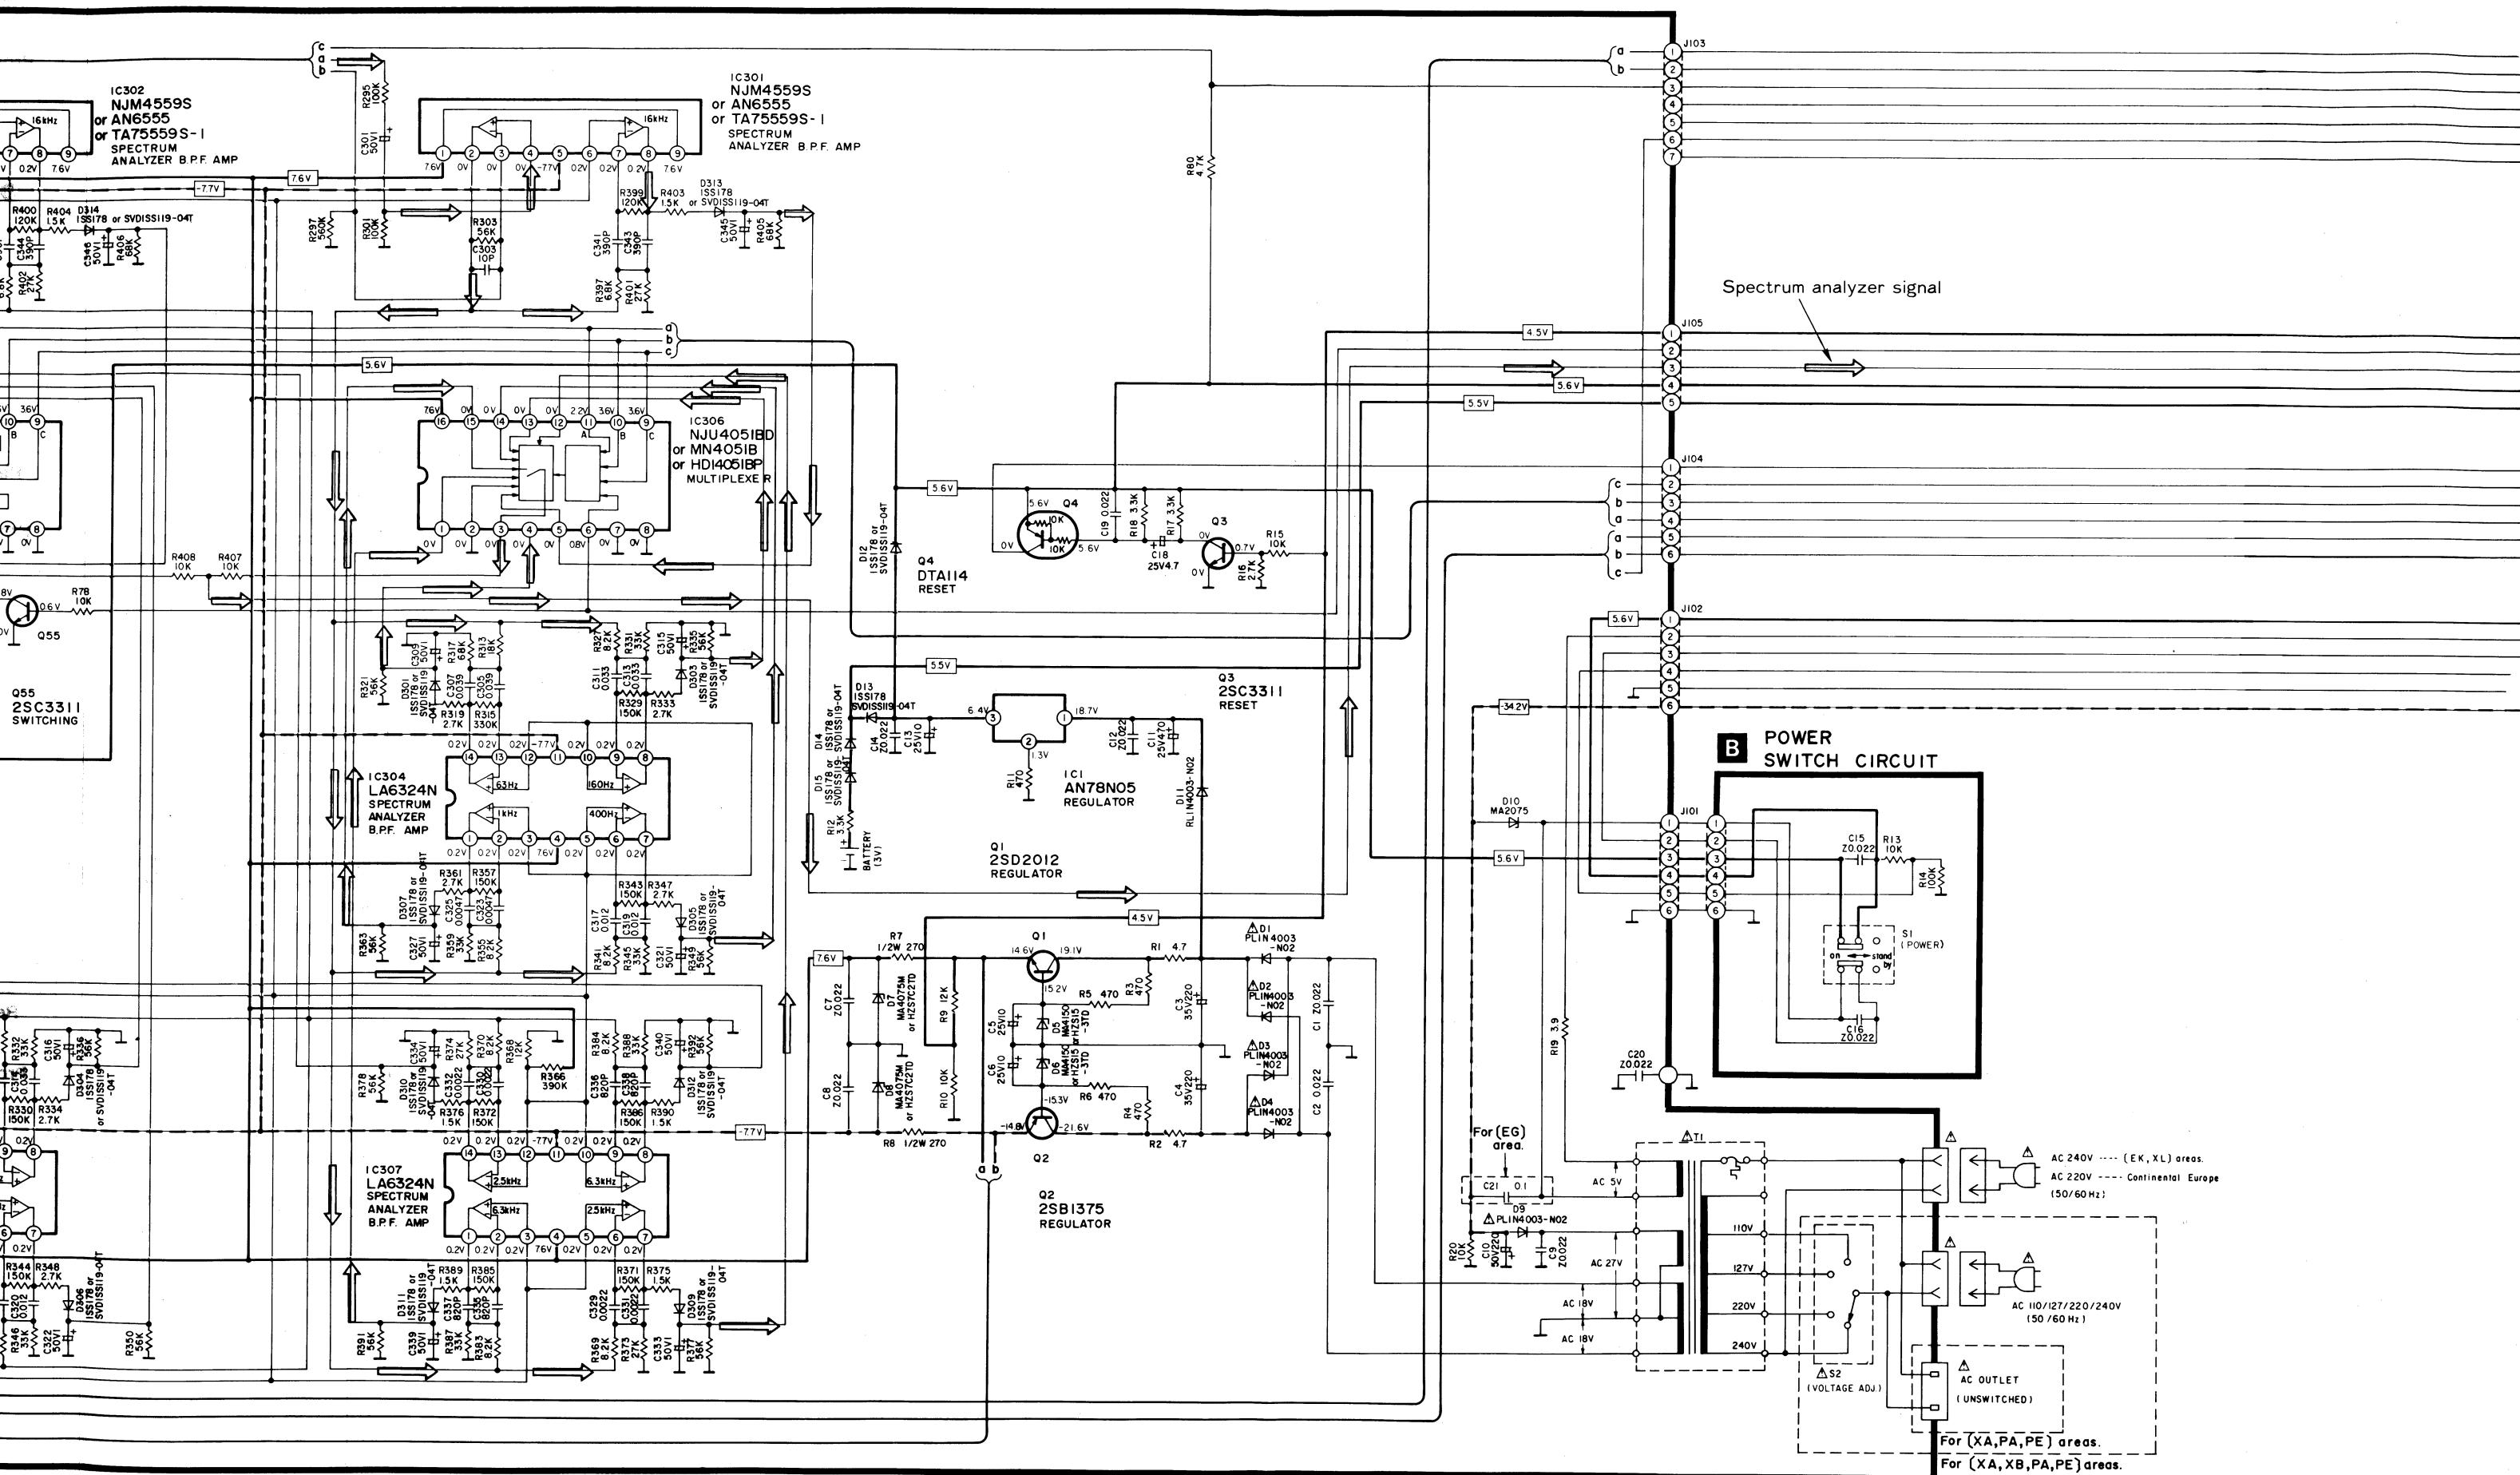

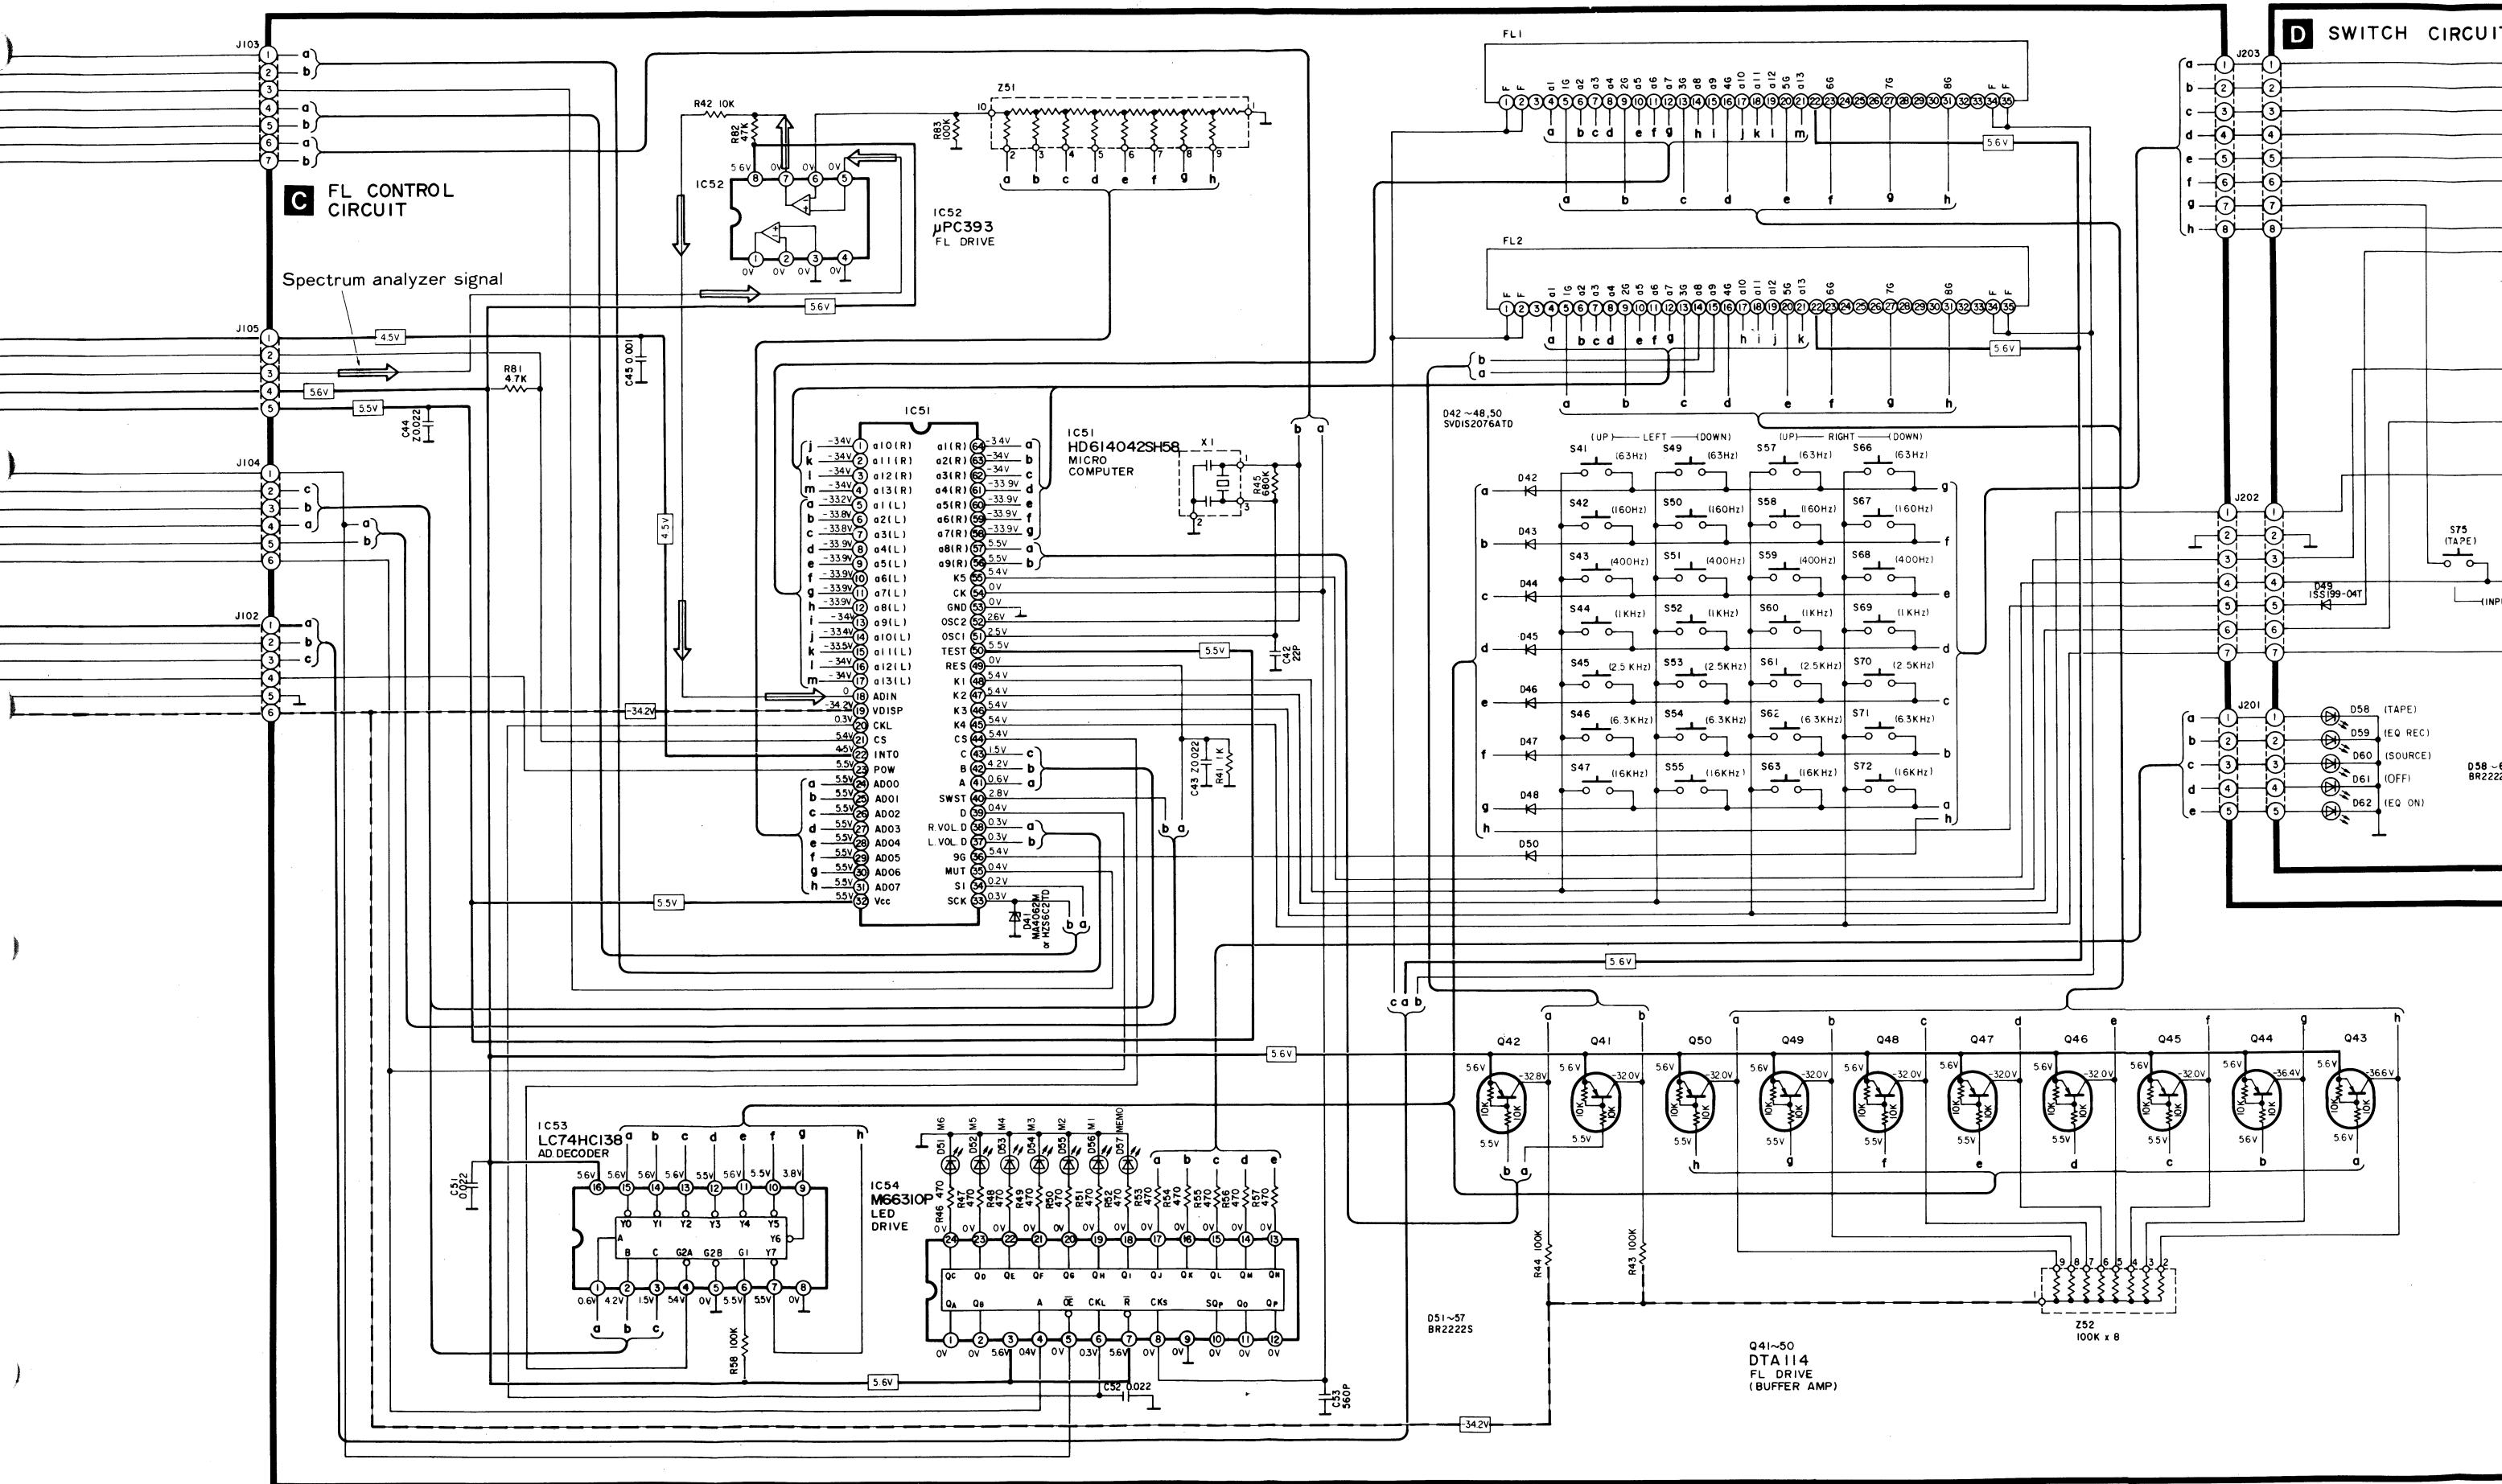

40

41


42

43

44

45

46

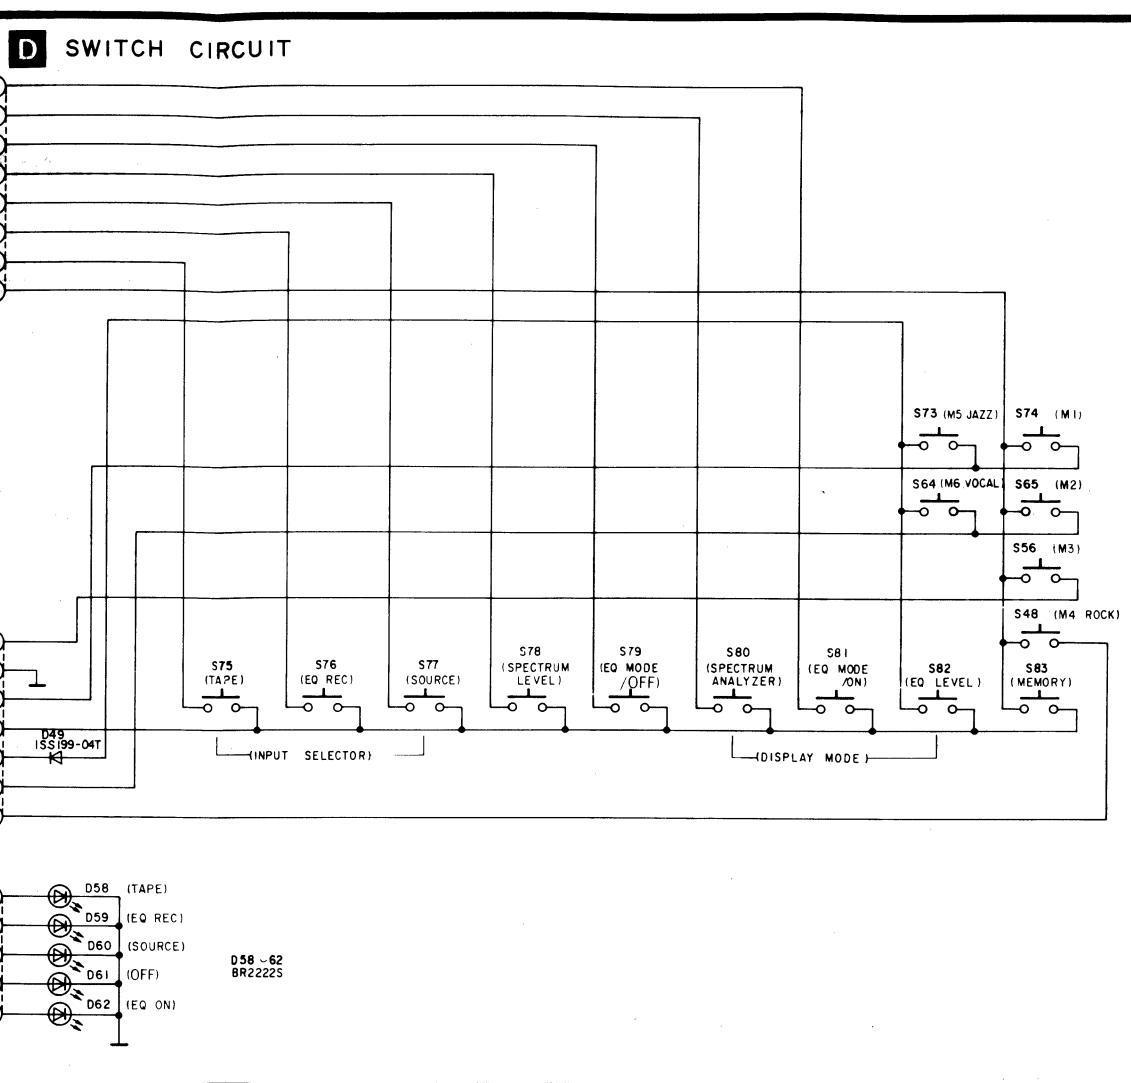

(This schematic diagram may be modified at any time with the development of new technology.)

Notes:

- S1: Power switch in "on" position.
- S2: Voltage selector switch in "240 V" position.
(110 V ↔ 127 V ↔ 220 V ↔ 240 V)
- For (XA), (XB), (PA) and (PE) areas.
- S41~S47: Equalizer level "up" control switches at each frequency (Lch).
- S48: Preset-memory "4 rock" switch.
- S49~S55: Equalizer level "down" control switches at each frequency (Lch).
- S56: Preset-memory "3" switch.
- S57~S63: Equalizer level "up" control switches at each frequency (Rch).
- S64: Preset-memory "6 vocal" switch.
- S65: Preset-memory "2" switch.
- S66~S72: Equalizer level "down" control switches at each frequency (Rch).
- S73: Preset-memory "5 jazz" switch.
- S74: Preset-memory "1" switch.
- S75, S77: Input selector switches.
- S75; tape S77; source Equalization recording switch.
- S78: Spectrum level switch.
- S79, S81: Equalization switches.
- S79; off S81; on
- S80, S82: Display mode switches.
- S80; Spectrum analyzer S82; EQ level
- S83: Memory switch.

Source signal B.P.F. signal
 Spectrum analyzer Recording Signal
 Signal Positive Voltage lines
 Positive Negative Voltage lines

Important safety notice:
 Components identified by mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.


***Caution!**
 IC and LSI are sensitive to static electricity.
 Secondary trouble can be prevented by taking care during repair.
 *Cover the parts boxes made of plastics with aluminum foil.
 *Ground the soldering iron.
 *Put a conductive mat on the work table.
 *Do not touch the legs of IC or LSI with the fingers directly.

CAUTION:


This lithium battery is a critical component (Type No. BR2032-1VC, Mfrd by Matsushita Battery Industrial Co., Ltd.). Please observe for the proper polarity and the exact location when replacing it and soldering the replacement lithium battery in.

VARNING:

Detta litiumbatteri (av typ Nr. BR2032-1VC, tillverkad av Matsushita Battery Industrial Co., Ltd.) är en kritisk komponent. Var säker om att iaktta korrekt polaritet och exakt läge av litiumbatteriet under ersättning och lödning av ersättningsbatteriet.


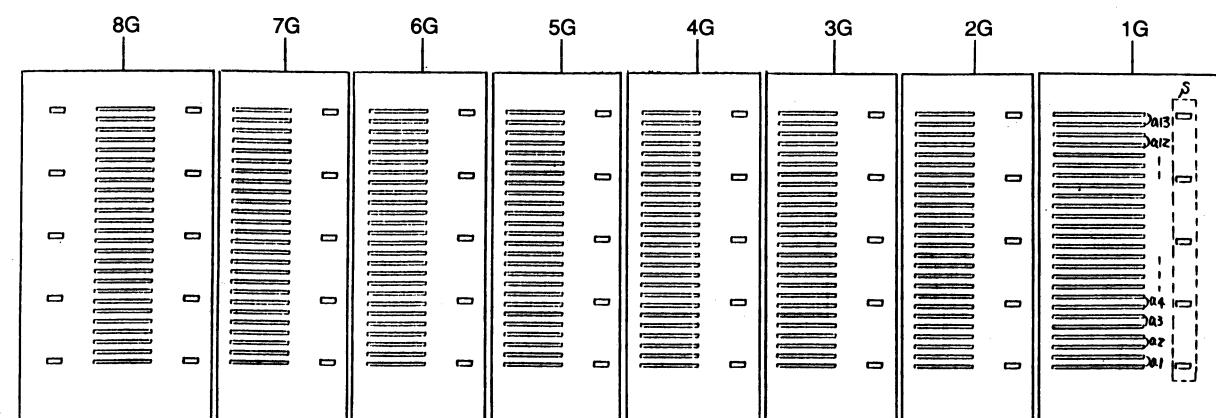
■ DESCRIPTION OF FL PANEL**•GRID ASSIGNMENT****•PIN CONNECTION**

| PIN NO. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | | | | | | | | |
|---------|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|---|---|---|---|---|---|---|---|
| CONNEC- | F | F | N | a | G | 2 | 3 | 4 | a | 2 | a | 5 | a | 6 | 7 | 3 | 8 | a | 4 | 10 | a | 11 | 12 | 5 | G | 13 | S | 6 | N | P | N | P | 7 | N | P | N | P | 8 | N | P | 1 | F | F |
| TION | 2 | 2 | P | 1 | G | 2 | 3 | 4 | a | 2 | G | 5 | a | 6 | 7 | 3 | 8 | a | 4 | 10 | a | 11 | 12 | 5 | G | 13 | S | 6 | N | P | N | P | 7 | N | P | N | P | 8 | N | P | 1 | 1 | |

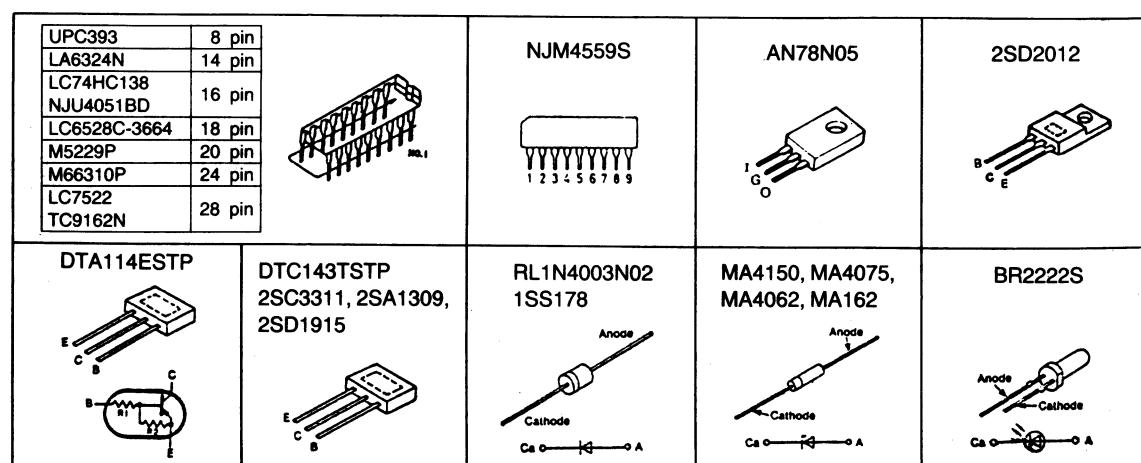
•TERMINAL GUIDE OF TRANSISTORS, DIODES AND IC's

Notes : * Impo
Comp
manu
* Brac
Parts


CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

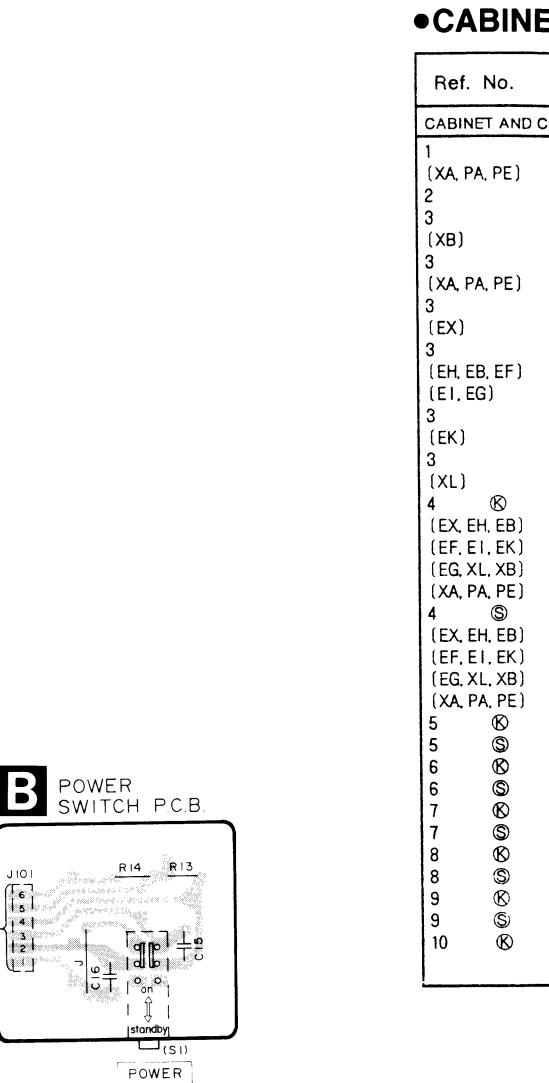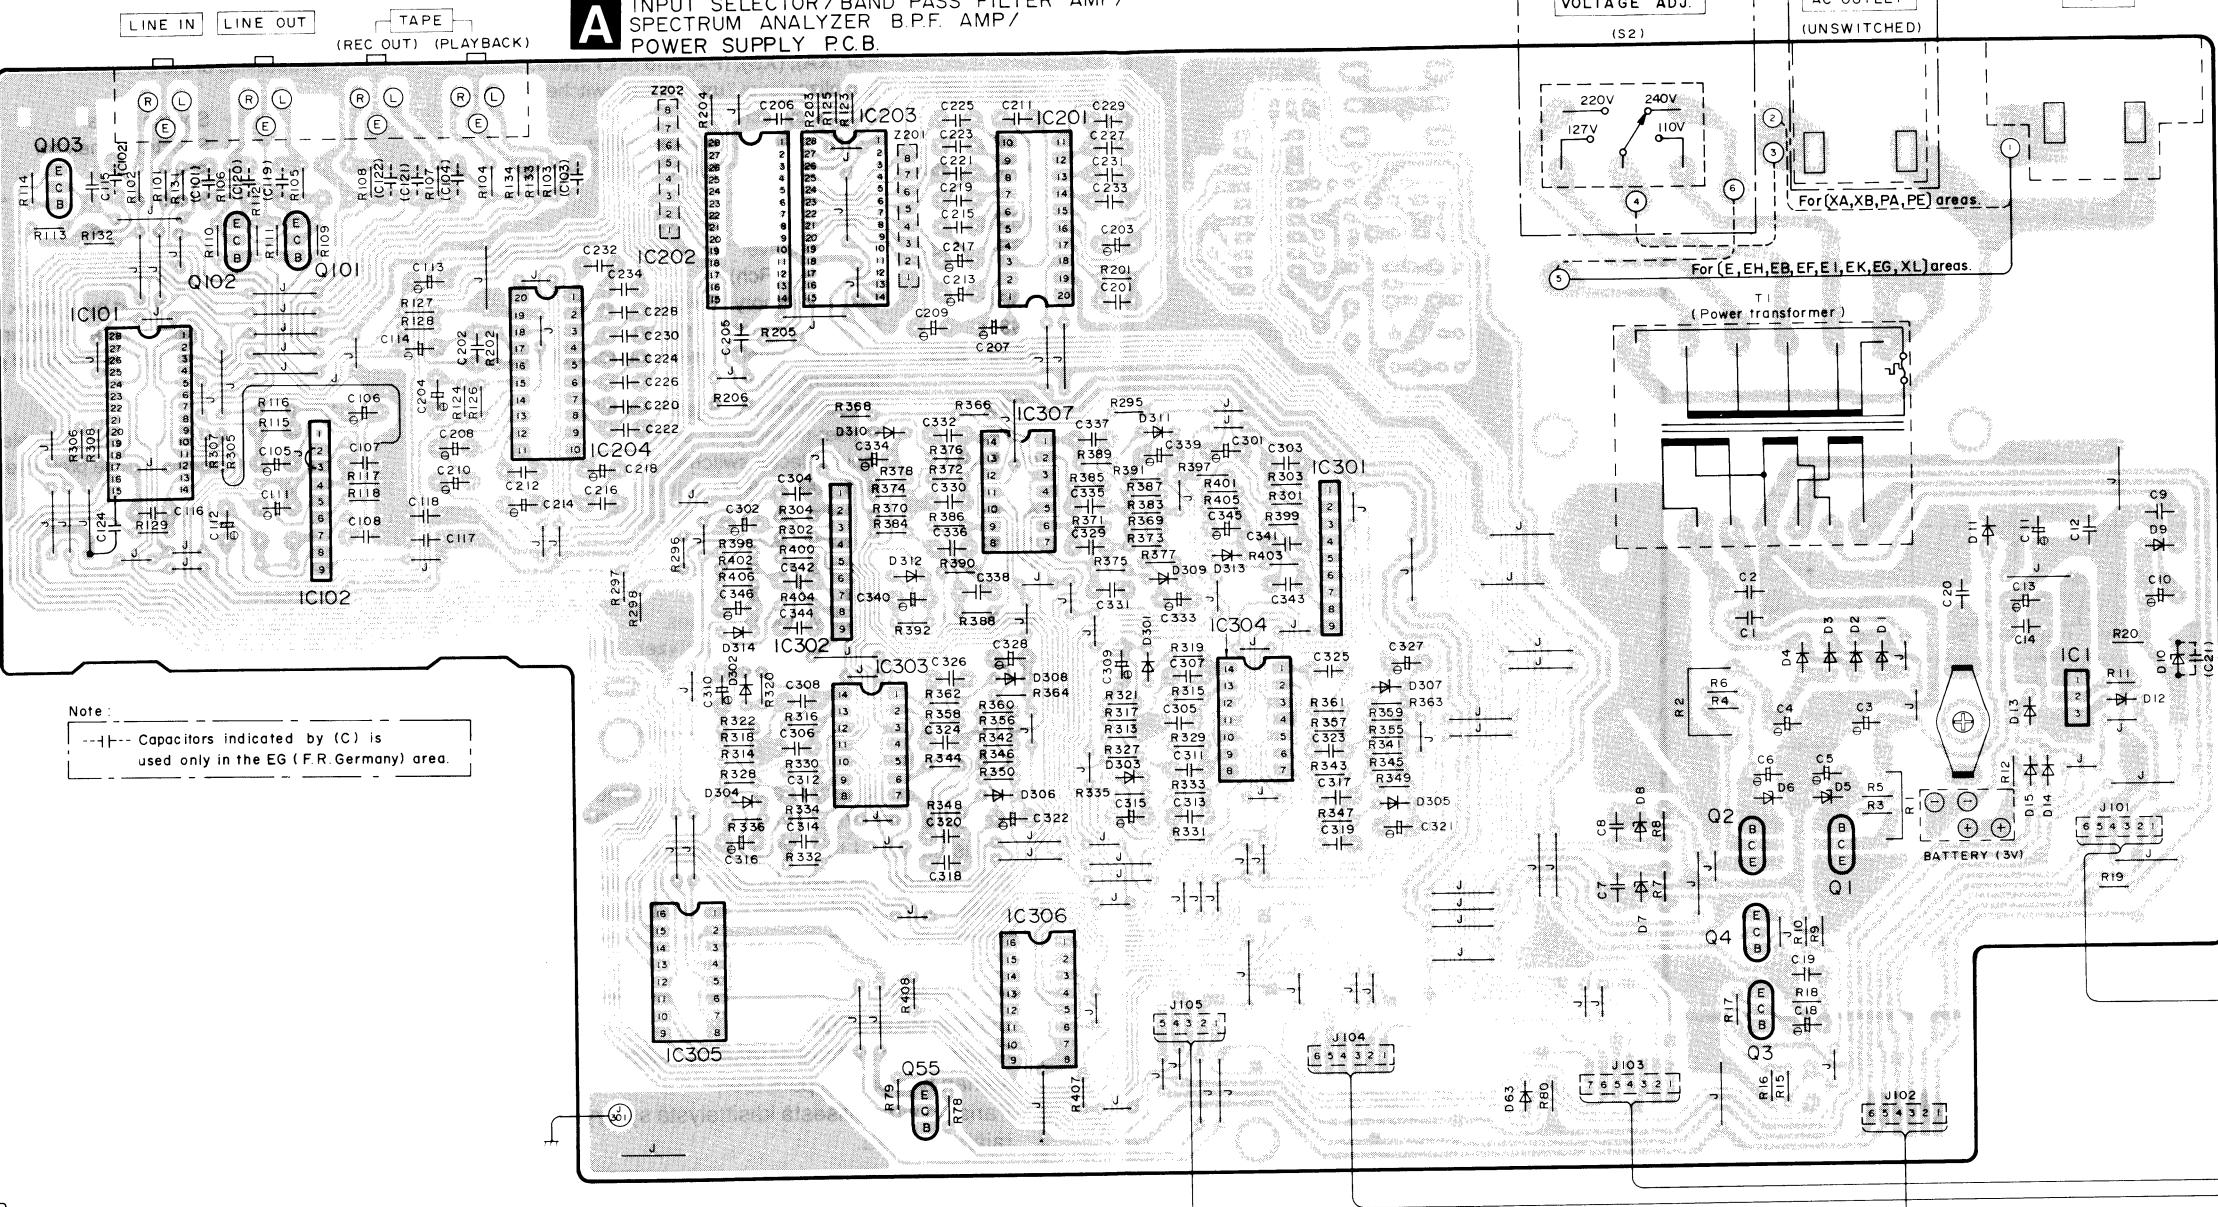

D SWITCH PCB

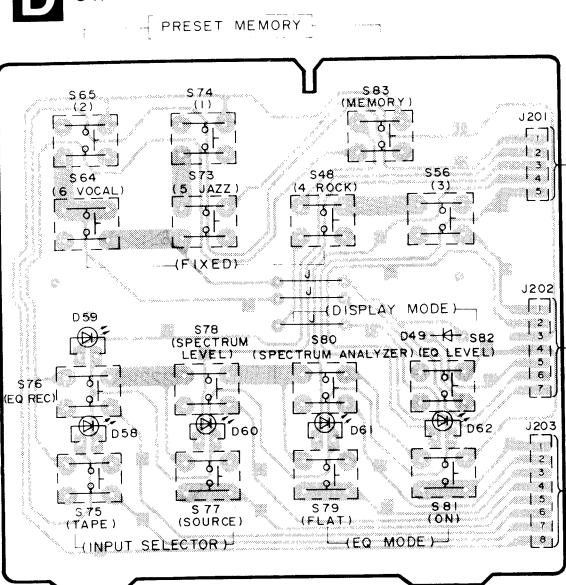

C FL CONTROL PCB

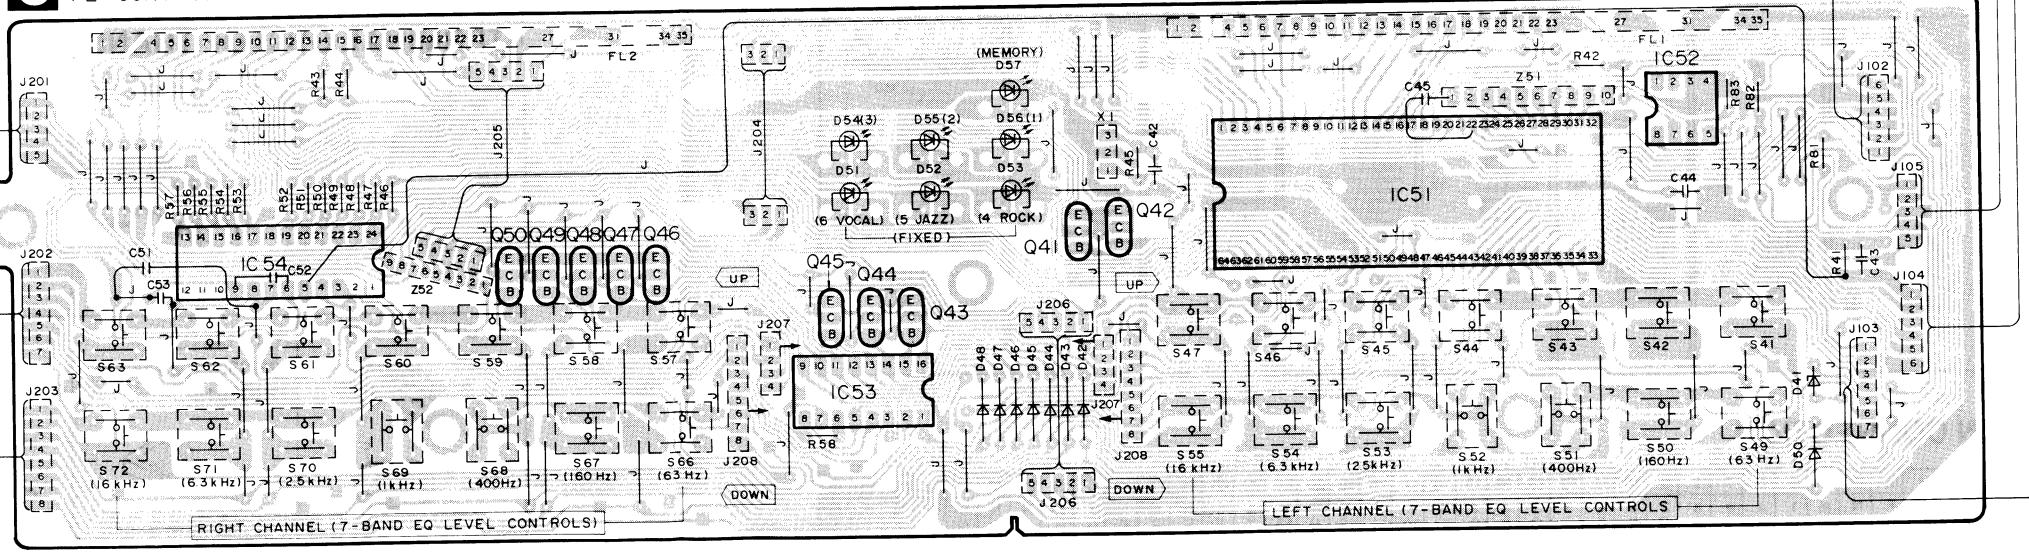


■ REPLACEMENT PARTS LIST

Notes: * Important safety notice:
 Components identified by mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 * Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)
 Parts without these indications can be used for all areas.


• CABINET PARTS LIST

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|---|--------------|-------------------|----------|--------------|---------------|
| CABINET AND CHASSIS | | | | | |
| 1 (XA, PA, PE) | SJS9330A | AC OUTLET COVER | 10 (S) | SBCH8058-SE2 | BUTTON |
| 2 | SKU11257-4 | BOTTOM BOARD | 12 | SLWK500 | BRACKET |
| 3 (XB) | SGPK510-2A | PANEL | 13 (K) | SBCK74 | BUTTON |
| 3 (XA, PA, PE) | SGPK510-3A | PANEL | 13 (S) | SBCK74-1 | BUTTON |
| 3 (EX) | SGPK510A | PANEL | 14 (K) | SBC66-5 | BUTTON, POWER |
| 3 (EH, EB, EF) (EI, EG) | SGPK510B | PANEL | 14 (S) | SBC66 | BUTTON, POWER |
| (EK) | SGPK510C | PANEL | 15 | SHE187-K | SPACER |
| (XL) | SGPK510D | PANEL | 16 | XTB3+10G | SCREW |
| 4 (S) (EX, EH, EB) (EF, EI, EK) (EG, XL, XB) (XA, PA, PE) | SGYKH8058-KE | PANEL | 17 | XTB3+8J | SCREW |
| 4 (S) (EX, EH, EB) (EF, EI, EK) (EG, XL, XB) (XA, PA, PE) | SGYKH8058-SE | PANEL | 18 | XTB3+8GFZ | SCREW |
| 5 (S) | SDUK21A | PLATE | 19 | XTB3+8JFZ | SCREW |
| 5 (S) | SDUK21B | PLATE | 20 | XTW3+20T | SCREW |
| 6 (S) | SGUK30A | TRANSPARENT PLATE | 21 | XTBS3+20F1 | SCREW |
| 6 (S) | SGUK30B | TRANSPARENT PLATE | 22 | SKLK10 | FOOT |
| 7 (S) | SBCK78A | BUTTON | 24 (K) | SKCK170K99 | CABINET |
| 7 (S) | SBCK78-2A | BUTTON | 24 (S) | SKCK170S98 | CABINET |
| 8 (S) | SBCK79A | BUTTON | 25 | XTB3+8JFZ | SCREW |
| 8 (S) | SBCK79-2A | BUTTON | 26 (K) | SNE2095-5 | SCREW |
| 9 (S) | SBCH8058-KM1 | BUTTON | 26 (S) | SNE2095-4 | SCREW |
| 9 (S) | SBCH8058-SE1 | BUTTON | 27 (S) | SJS9330B | AC OUTLET |
| 10 (S) | SBCH8058-KM2 | BUTTON | 28 | SJSD0505 | CONNECTOR(5P) |
| | | | 28 | SJSD0605 | CONNECTOR(6P) |
| | | | 28 | SJSD0705 | CONNECTOR(7P) |
| | | | 29 | SJS50271DS | CONNECTOR |
| | | | 30 | SJSK90503DS | CONNECTOR(5P) |
| | | | 30 | SJSK90603DS | CONNECTOR(6P) |
| | | | 30 | SJSK90703DS | CONNECTOR(7P) |
| | | | 30 | SJSK90803DS | CONNECTOR(8P) |
| | | | 33 (Δ) | SJS9236 | AC INLET |
| | | | 34 | SKLK11 | FOOT |
| | | | 35 | SHRK957 | HOLDER |
| | | | 36 | SJF3057NA | TERMINAL |
| | | | 37 (Δ) | SJSD16 | AC INLET |
| | | | (XL) | | |

■ EXPLODED VIEWS

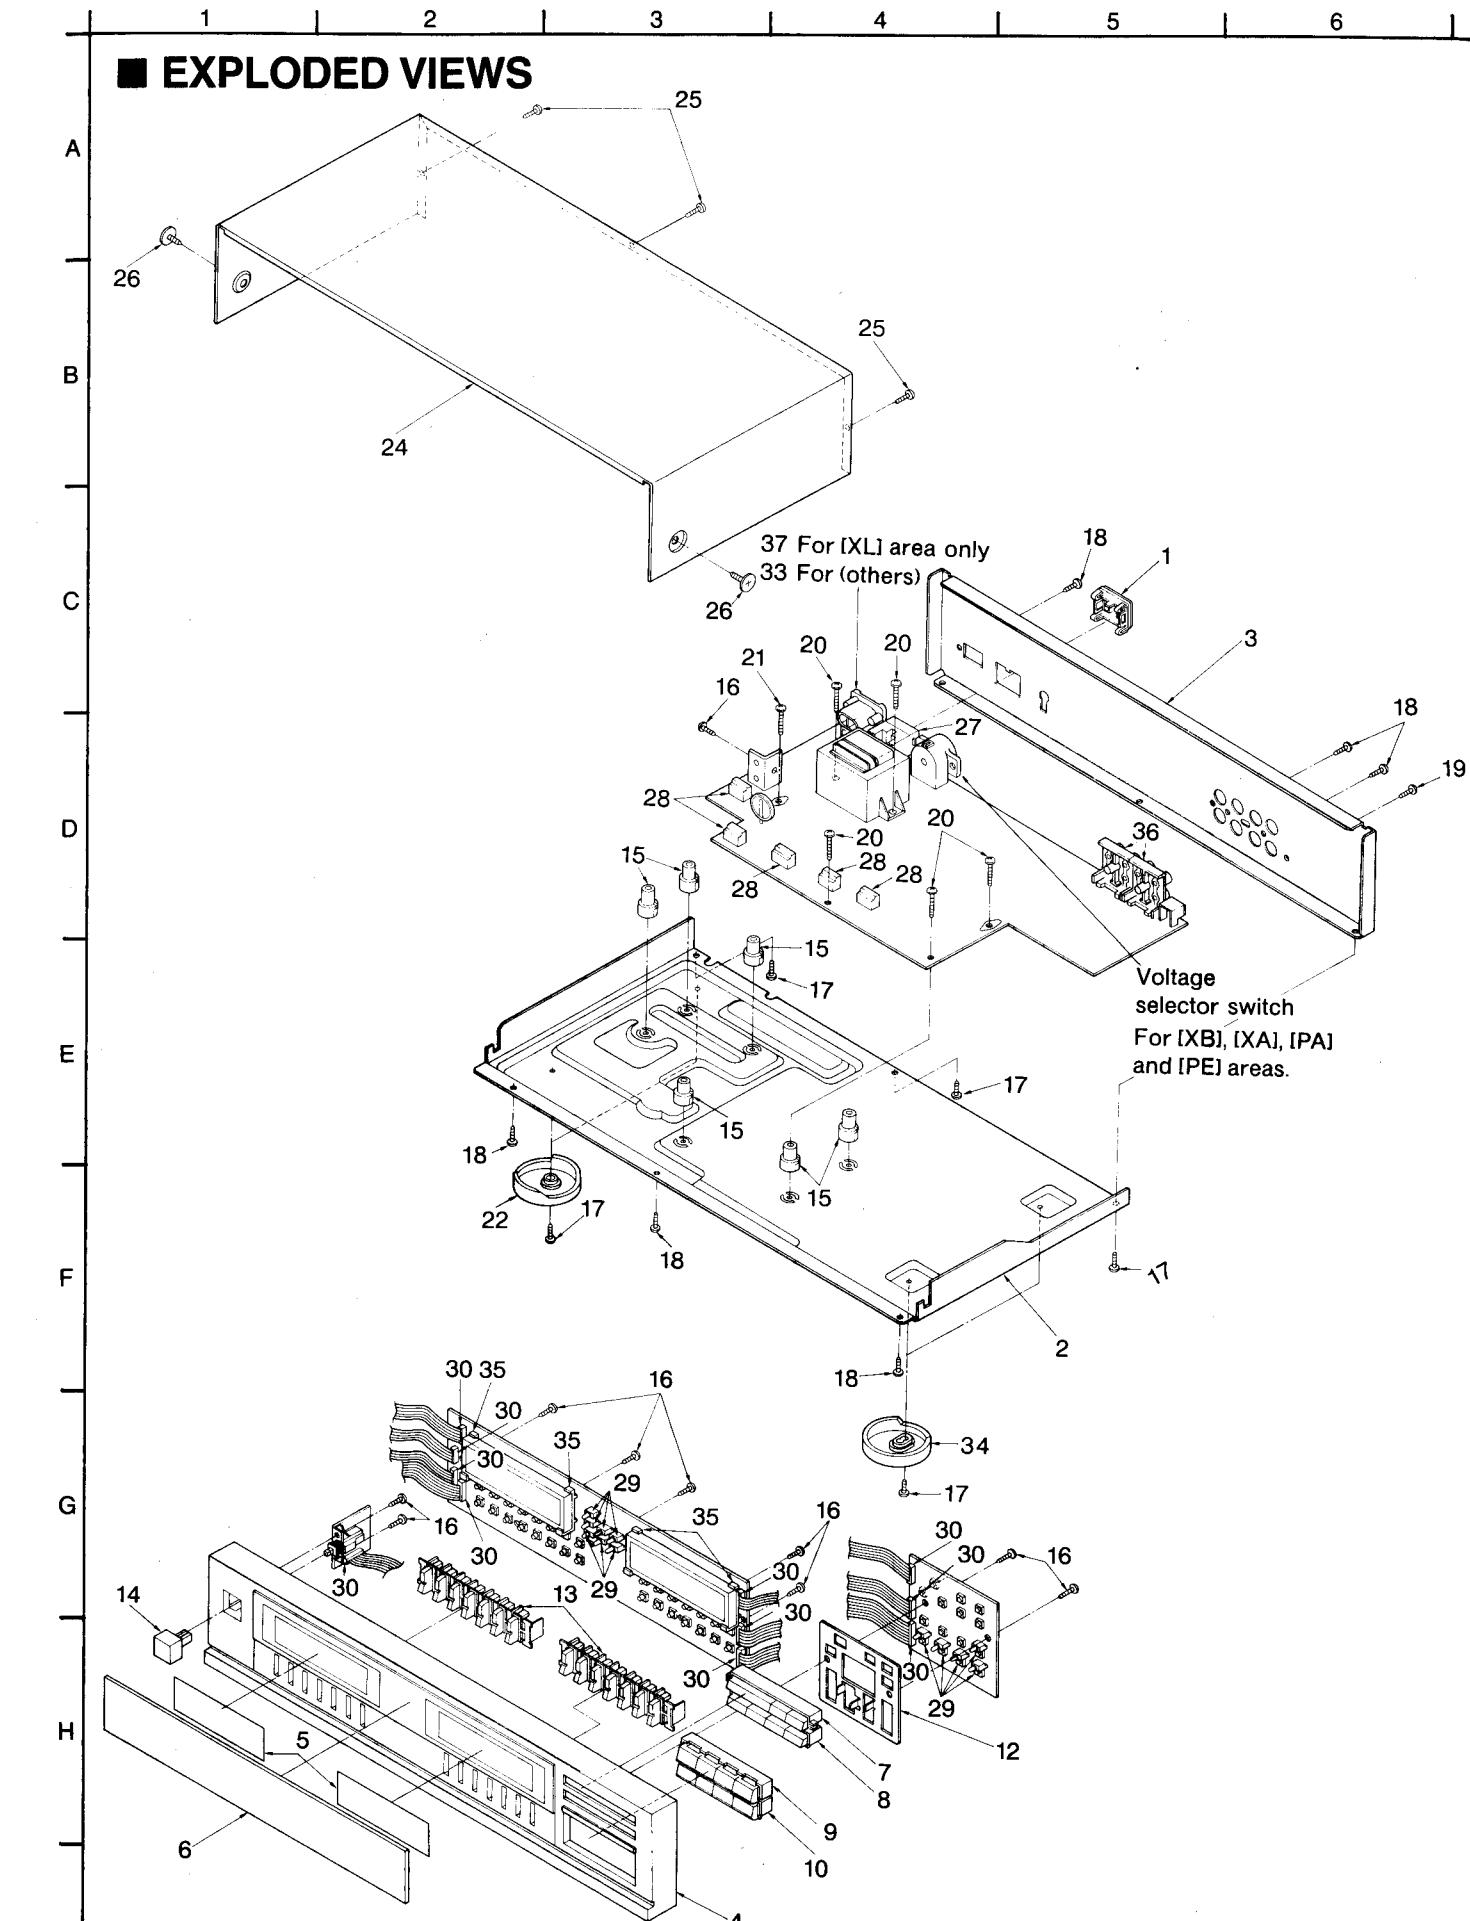


BLOCK DIAGRAM

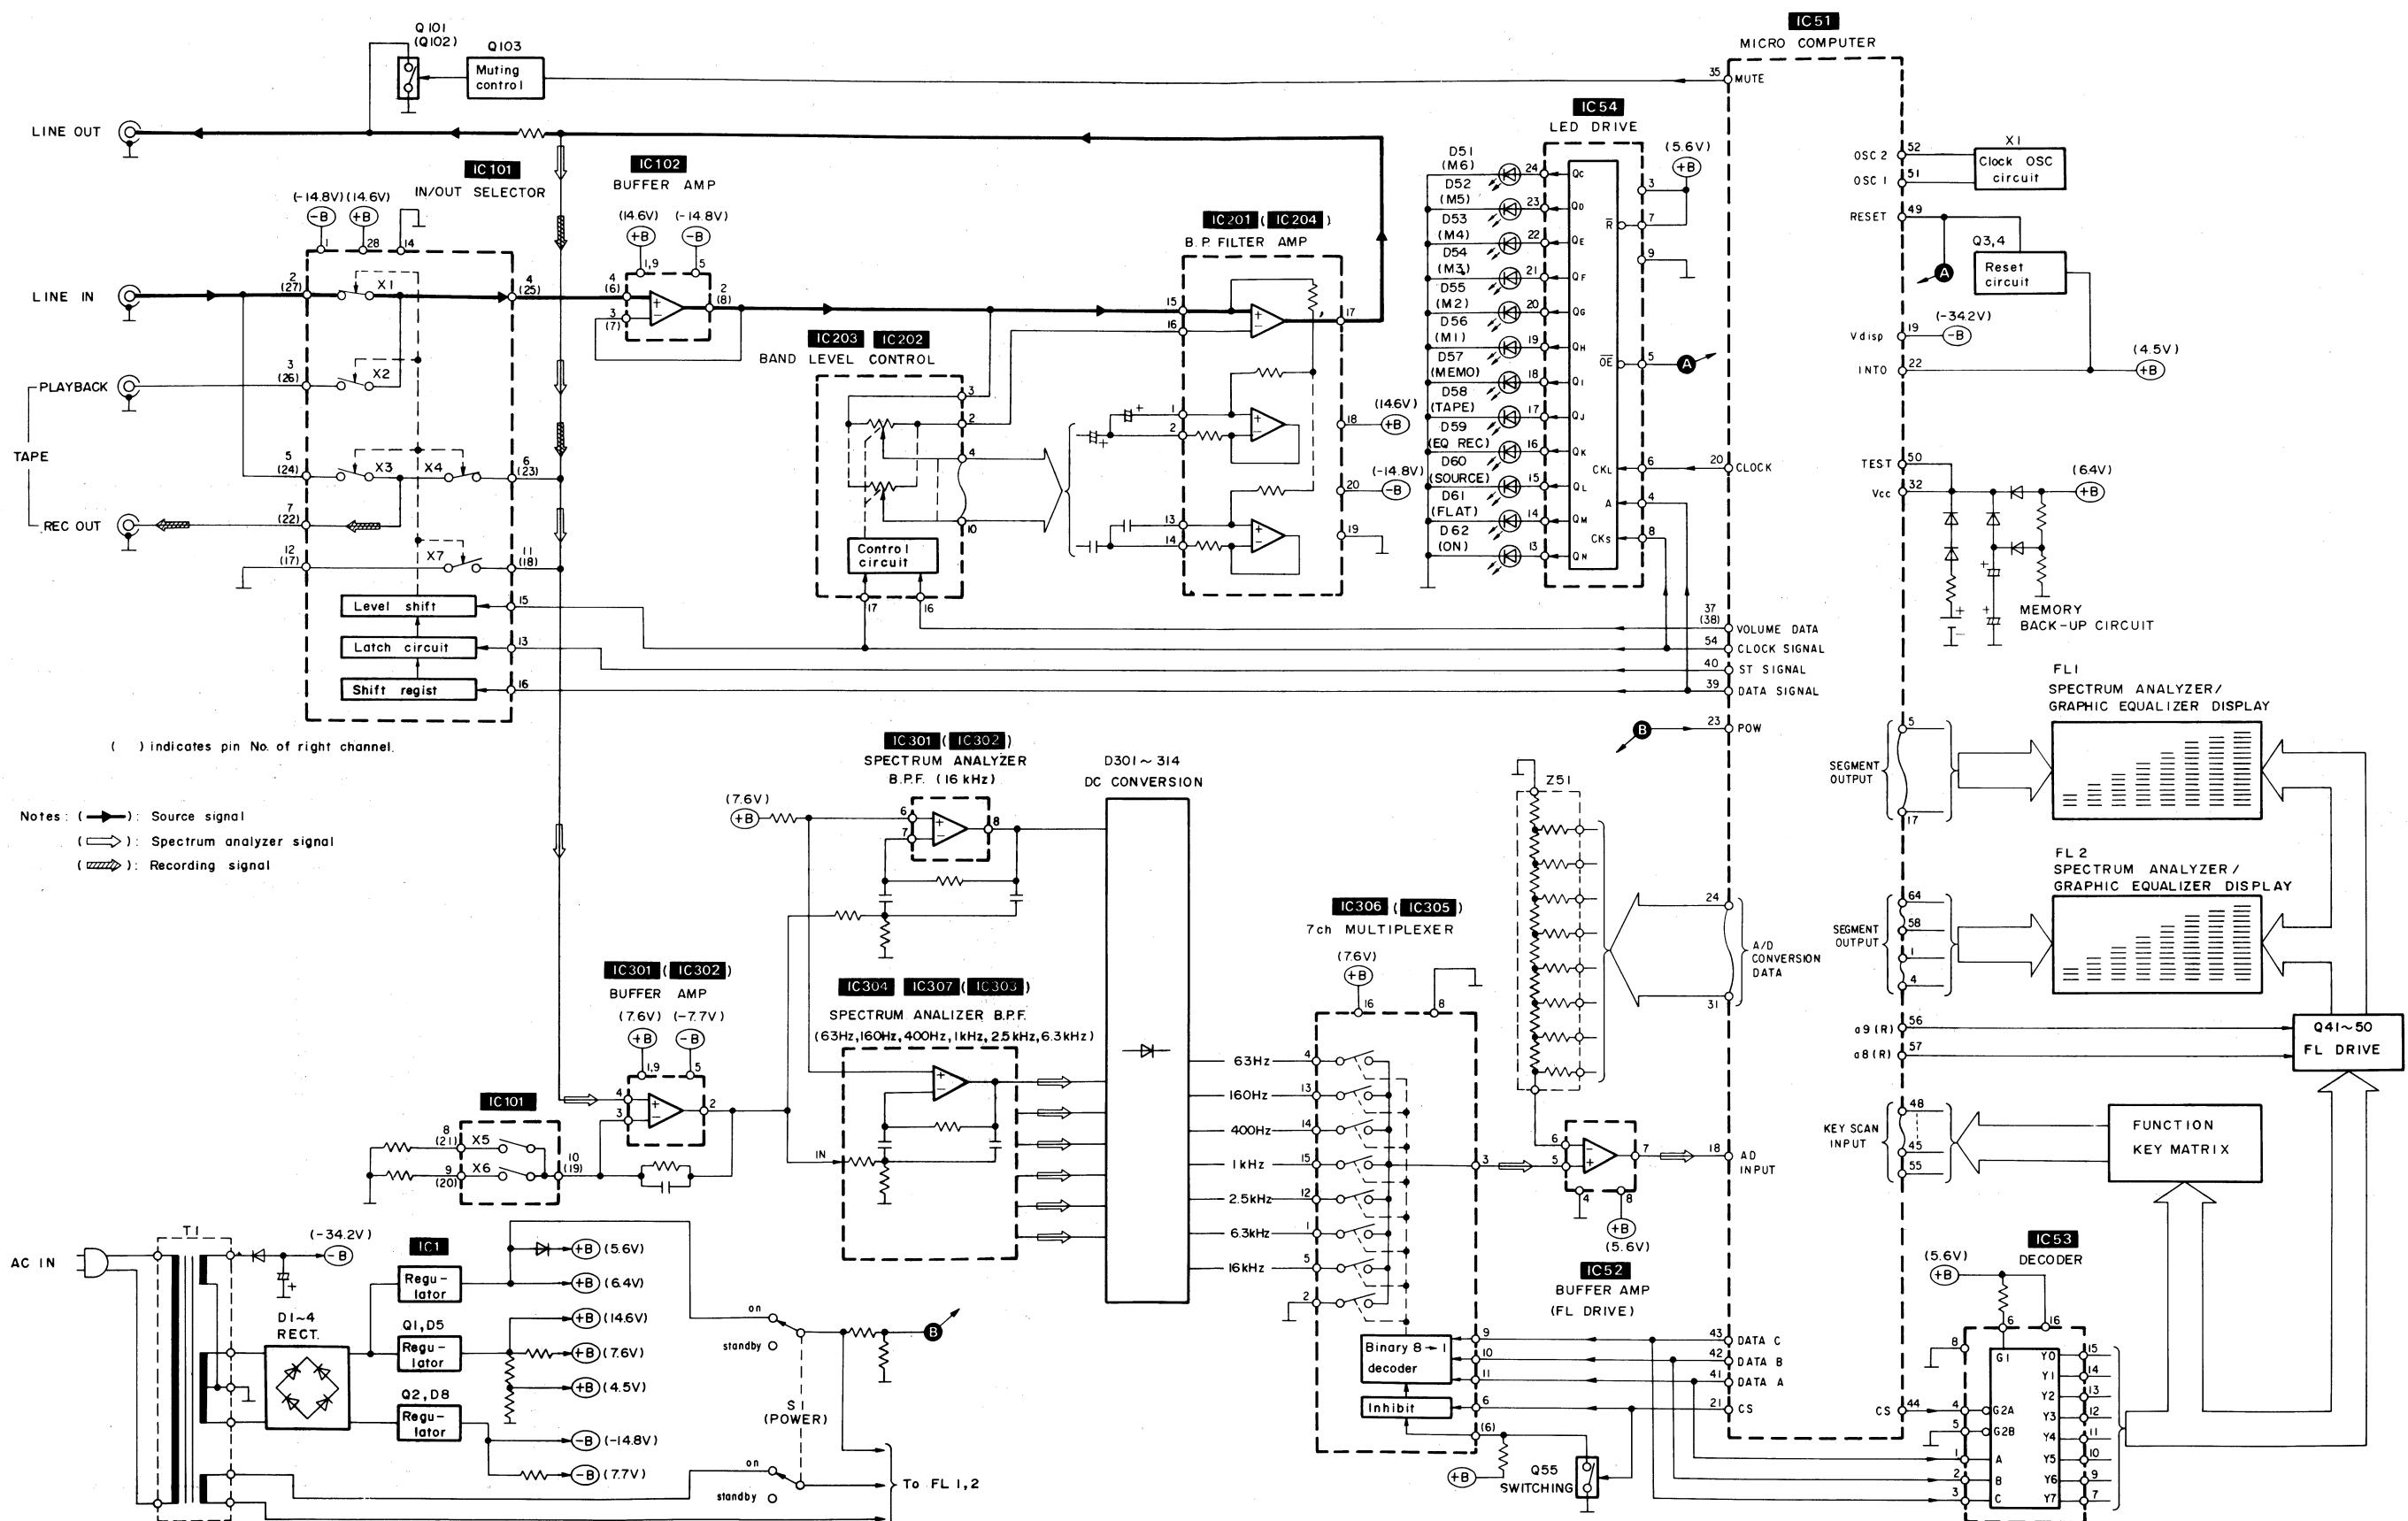

■ FUNCTIONS OF IC TERMINALS

● Microcomputer IC51 (HD614042 SH58)

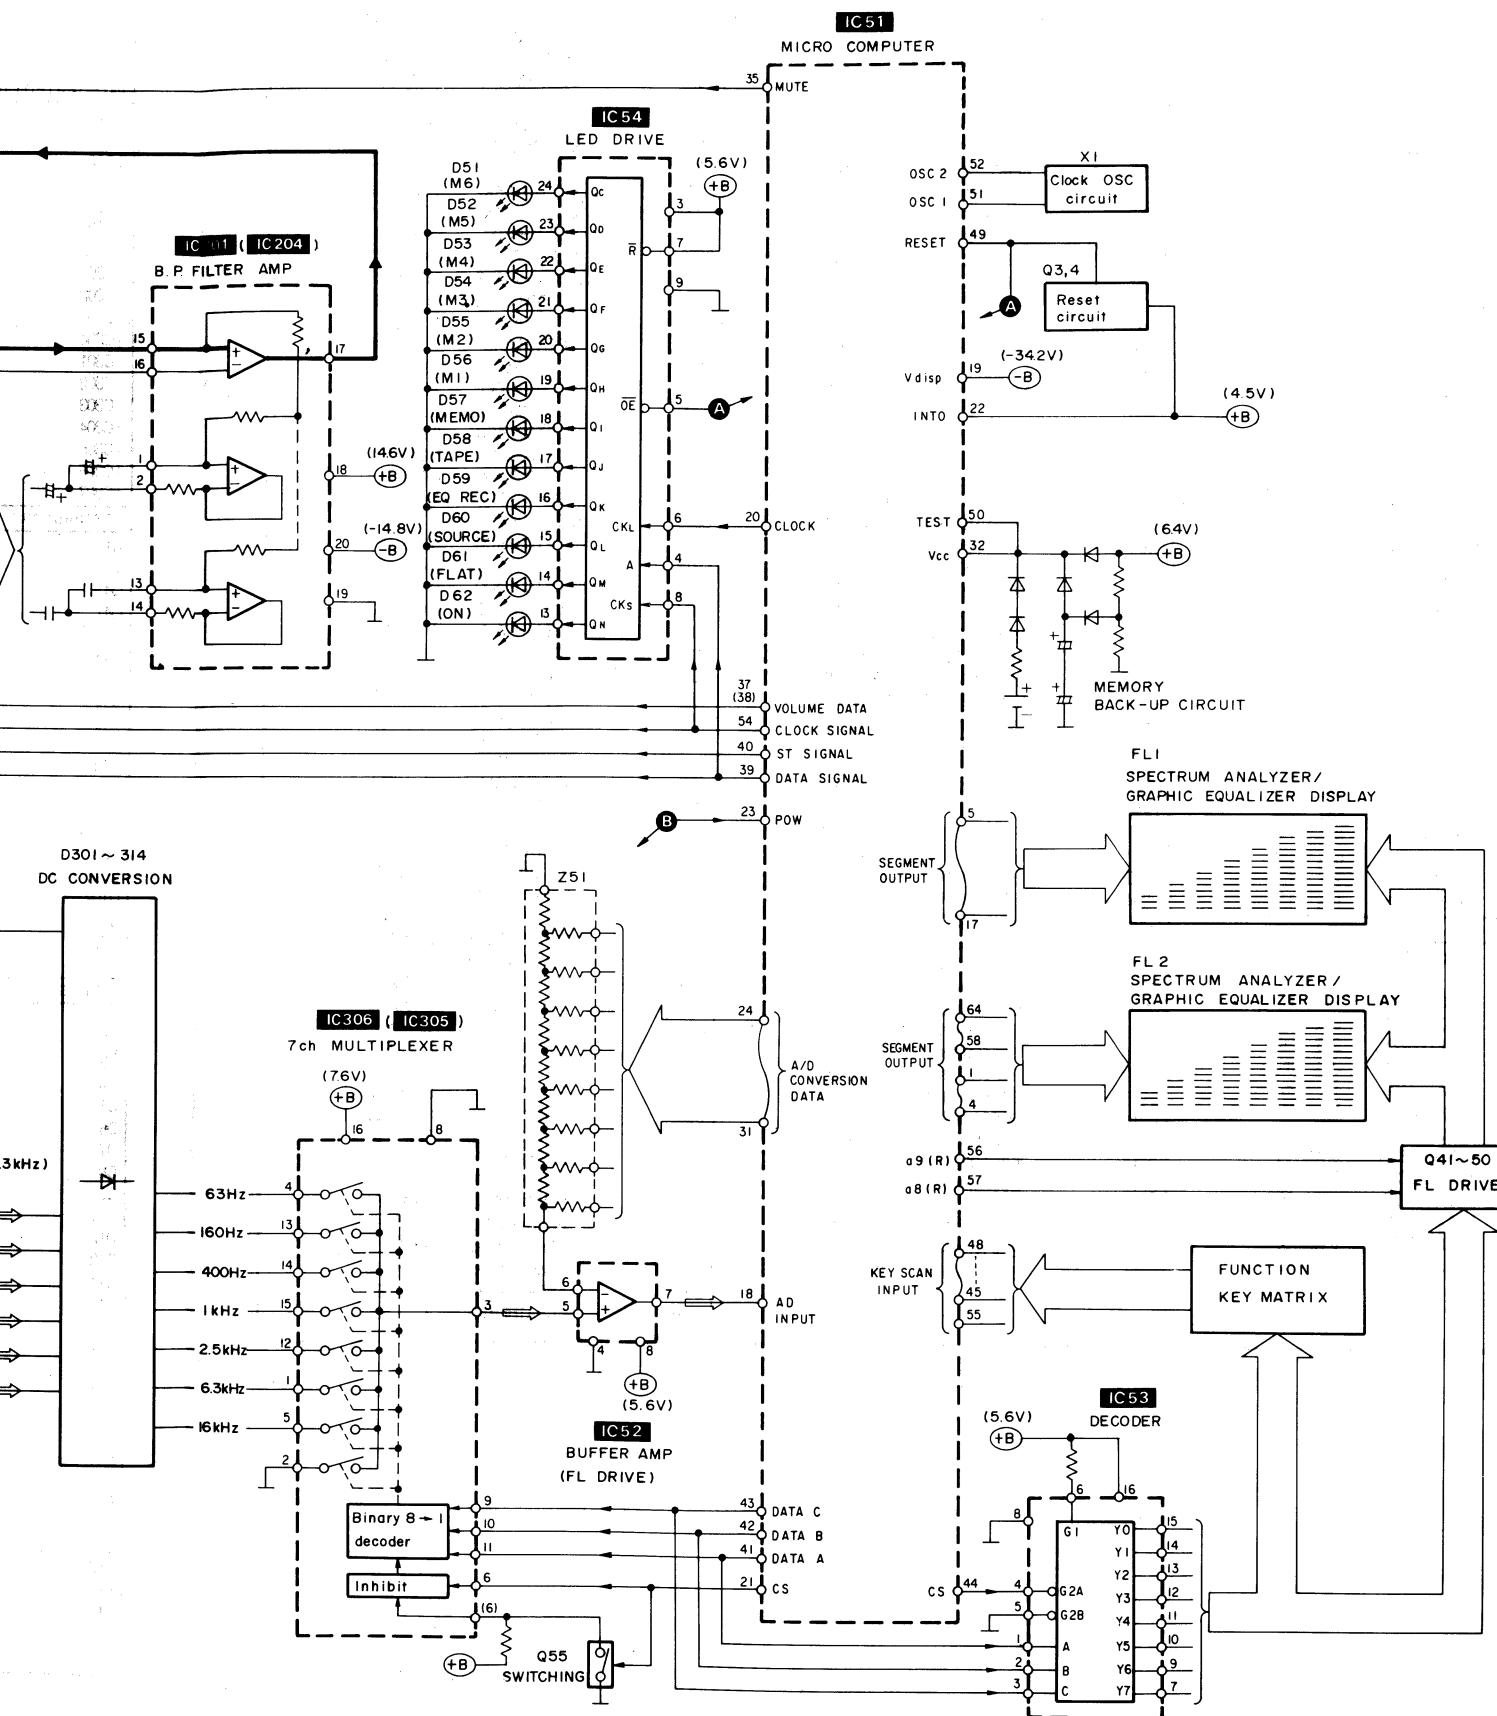

| Pin No. | Symbol | I/O | Function |
|---------|-----------|-----|---|
| 1 | D11 | O | +6 dB segment output to FL meter. (Rch) |
| 2 | D12 | O | +8 dB segment output to FL meter. (Rch) |
| 3 | D13 | O | +10 dB segment output to FL meter. (Rch) |
| 4 | D14 | O | +12 dB segment output to FL meter. (Rch) |
| 5 | D15 | O | -12 dB segment output to FL meter. (Lch) |
| 6 | R00 | O | -10 dB segment output to FL meter. (Lch) |
| 7 | R01 | O | -8 dB segment output to FL meter. (Lch) |
| 8 | R02 | O | -6 dB segment output to FL meter. (Lch) |
| 9 | R03 | O | -4 dB segment output to FL meter. (Lch) |
| 10 | R10 | O | -2 dB segment output to FL meter. (Lch) |
| 11 | R11 | O | 0 dB segment output to FL meter. (Lch) |
| 12 | R12 | O | +2 dB segment output to FL meter. (Lch) |
| 13 | R13 | O | +4 dB segment output to FL meter. (Lch) |
| 14 | R20 | O | +6 dB segment output to FL meter. (Lch) |
| 15 | R21 | O | +8 dB segment output to FL meter. (Lch) |
| 16 | R22 | O | +10 dB segment output to FL meter. (Lch) |
| 17 | R23 | O | +12 dB segment output to FL meter. (Lch) |
| 18 | RA0 | I | A/D input, high withstand voltage. |
| 19 | RA1/VD1SP | I | Output power supply (-32 V) for high withstand voltage terminals. |
| 20 | R30 | O | LED Driver, CKL output |
| 21 | R31 | O | MPX, CS output (Lch, Rch) |
| 22 | R32/INT0 | I | Mode selector terminal. H: Active mode L: Stop mode |
| 23 | R33/INT1 | I | Power switch ON/OFF detection terminal. H: ON L: OFF |
| 24 | R50 | O | A/D conversion data bit 0 output. |
| 25 | R51 | O | A/D conversion data bit 1 output. |
| 26 | R52 | O | A/D conversion data bit 2 output. |
| 27 | R53 | O | A/D conversion data bit 3 output. |
| 28 | R60 | O | A/D conversion data bit 4 output. |
| 29 | R61 | O | A/D conversion data bit 5 output. |
| 30 | R62 | O | A/D conversion data bit 6 output. |
| 31 | R63 | O | A/D conversion data bit 7 output. |
| 32 | VCC | I | 5 V power supply. |

| Pin No. | Symbol | I/O | Function |
|---------|---------|-----|--|
| 33 | R40/SCK | I | Remote control data. Communication data clock input. |
| 34 | R41/SI | I | Remote control data. Communication data input. |
| 35 | R42 | O | Muting control. H: ON L: OFF |
| 36 | R43 | O | Key scan output. |
| 37 | R70 | O | Electronic volume control data output. (Lch) |
| 38 | R71 | O | Electronic volume control data output. (Rch) |
| 39 | R72 | O | Electronic switch and LED driver data output. |
| 40 | R73 | O | Electronic switch strobe output. |
| 41 | R80 | O | MPX data A output. |
| 42 | R81 | O | MPX data B output. |
| 43 | R82 | O | MPX data C output. |
| 44 | R83 | O | Grid control output. |
| 45 | R90 | I | Key signal input. |
| 46 | R91 | I | Key signal input. |
| 47 | R92 | I | Key signal input. |
| 48 | R93 | I | Key signal input. |
| 49 | RESET | I | Reset signal input. |
| 50 | TEST | — | — |
| 51 | OSC1 | I | Clock signal input. |
| 52 | OSC2 | O | Clock signal output. |
| 53 | GND | I | Grounding |
| 54 | D0 | O | Electronic switch, volume and LED driver clock output. |
| 55 | D1 | O | Key signal input. |
| 56 | D2 | O | +4 dB segment output to FL meter. (Rch) |
| 57 | D3 | O | +2 dB segment output to FL meter. (Rch) |
| 58 | D4 | O | 0 dB segment output to FL meter. (Rch) |
| 59 | D5 | O | -2 dB segment output to FL meter. (Rch) |
| 60 | D6 | O | -4 dB segment output to FL meter. (Rch) |
| 61 | D7 | O | -6 dB segment output to FL meter. (Rch) |
| 62 | D8 | O | -8 dB segment output to FL meter. (Rch) |
| 63 | D9 | O | -10 dB segment output to FL meter. (Rch) |
| 64 | D10 | O | -12 dB segment output to FL meter. (Rch) |

■ RESISTORS AND CAPACITORS

Notes : * Important safety notice : Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 * Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)
 Parts without these indications can be used for all areas.

Numbering System of Resistor

Example:

| | | | | |
|--------|----------------|-------|-----------|-------|
| ERD | 25 | F | J | 102 |
| Type | Wattage | Shape | Tolerance | Value |
| (1/4W) | (1k Ω) | | | |
| ERX | 2 | AN | J | 471 |

| | | | | |
|------|-----------------|-------|-----------|-------|
| Type | Wattage | Shape | Tolerance | Value |
| (2W) | (470 Ω) | | | |

Numbering System of Capacitor

Example:

| | | | | |
|-------|-----------------|-------|-----------|-------------|
| ECKD | 1H | 102 | Z | F |
| Type | Voltage | Value | Tolerance | Peculiarity |
| (50V) | (0.001 μ F) | | | |

| | | | | |
|-------|--------------|-------------|-------|--|
| ECEA | 50 | M | 330 | |
| Type | Voltage | Peculiarity | Value | |
| (50V) | (33 μ F) | | | |

● Capacity are in microfarads (μ F) unless specified otherwise, P = Pico-farads (pF), F = Farads (F).

● Resistance are in ohms (Ω), unless specified otherwise, 1K = 1,000 Ω , 1M = 1.000k Ω .

| Ref. No. | Part No. | Value. | Ref. No. | Part No. | Value. | Ref. No. | Part No. | Value. |
|---------------------------------|------------|----------|------------|------------|----------|------------|------------|----------|
| RESISTORS(VALUE,WATTAGE) | | | | | | | | |
| R1 | ERD2FC4J47 | 4.7 1/4 | R81 | ERDS2TJ472 | 4.7K 1/4 | R301 | ERDS2TJ104 | 100K 1/4 |
| R2 | ERD2FC4J47 | 4.7 1/4 | R82 | ERDS2TJ473 | 47K 1/4 | R302 | ERDS2TJ104 | 100K 1/4 |
| R3 | ERDS2TJ471 | 470 1/4 | R83 | ERDS2TJ104 | 100K 1/4 | R303 | ERDS2TJ563 | 56K 1/4 |
| R4 | ERDS2TJ471 | 470 1/4 | R101 | ERDS2TJ102 | 1K 1/4 | R304 | ERDS2TJ563 | 56K 1/4 |
| R5 | ERDS2TJ471 | 470 1/4 | R102 | ERDS2TJ102 | 1K 1/4 | R305 | ERDS2TJ223 | 22K 1/4 |
| R6 | ERDS2TJ471 | 470 1/4 | R103 | ERDS2TJ102 | 1K 1/4 | R306 | ERDS2TJ223 | 22K 1/4 |
| R7 | ERDS2TJ471 | 470 1/4 | R104 | ERDS2TJ102 | 1K 1/4 | R307 | ERDS2TJ562 | 5.6K 1/4 |
| R8 | ERDS2TJ471 | 270 1/2 | R105 | ERDS2TJ102 | 1K 1/4 | R308 | ERDS2TJ562 | 5.6K 1/4 |
| R9 | ERDS2TJ471 | 270 1/2 | R106 | ERDS2TJ102 | 1K 1/4 | R313 | ERDS2TJ183 | 18K 1/4 |
| R10 | ERDS2TJ103 | 10K 1/4 | R107 | ERDS2TJ102 | 1K 1/4 | R314 | ERDS2TJ183 | 18K 1/4 |
| R11 | ERDS2TJ471 | 470 1/4 | R108 | ERDS2TJ102 | 1K 1/4 | R315 | ERDS2TJ334 | 330K 1/4 |
| R12 | ERDS2TJ332 | 3.3K 1/4 | R109 | ERDS2TJ222 | 2.2K 1/4 | R316 | ERDS2TJ334 | 330K 1/4 |
| R13 | ERDS2TJ103 | 10K 1/4 | R110 | ERDS2TJ222 | 2.2K 1/4 | R317 | ERDS2TJ683 | 68K 1/4 |
| R14 | ERDS2TJ104 | 100K 1/4 | R111 | ERDS2TJ102 | 1K 1/4 | R318 | ERDS2TJ683 | 68K 1/4 |
| R15 | ERDS2TJ103 | 10K 1/4 | R112 | ERDS2TJ102 | 1K 1/4 | R319 | ERDS2TJ272 | 2.7K 1/4 |
| R16 | ERDS2TJ272 | 2.7K 1/4 | R113 | ERDS2TJ104 | 100K 1/4 | R320 | ERDS2TJ272 | 2.7K 1/4 |
| R17 | ERDS2TJ332 | 3.3K 1/4 | R114 | ERDS2TJ103 | 10K 1/4 | R321 | ERDS2TJ563 | 56K 1/4 |
| R18 | ERDS2TJ332 | 3.3K 1/4 | R115 | ERDS2TJ154 | 150K 1/4 | R322 | ERDS2TJ563 | 56K 1/4 |
| R19 | ERDS2TJ339 | 3.9 1/4 | R116 | ERDS2TJ154 | 150K 1/4 | R327 | ERDS2TJ822 | 8.2K 1/4 |
| R20 | ERDS2TJ103 | 10K 1/4 | R117 | ERDS2TJ104 | 100K 1/4 | R328 | ERDS2TJ822 | 8.2K 1/4 |
| R41 | ERDS2TJ102 | 1K 1/4 | R118 | ERDS2TJ104 | 100K 1/4 | R329 | ERDS2TJ154 | 150K 1/4 |
| R42 | ERDS2TJ103 | 10K 1/4 | R123 | ERDS2TJ123 | 12K 1/4 | R330 | ERDS2TJ154 | 150K 1/4 |
| R43 | ERDS2TJ104 | 100K 1/4 | R124 | ERDS2TJ123 | 12K 1/4 | R331 | ERDS2TJ333 | 33K 1/4 |
| R44 | ERDS2TJ104 | 100K 1/4 | R125 | ERDS2TJ223 | 22K 1/4 | R332 | ERDS2TJ333 | 33K 1/4 |
| R45 | ERDS2TJ684 | 680K 1/4 | R126 | ERDS2TJ223 | 22K 1/4 | R333 | ERDS2TJ272 | 2.7K 1/4 |
| R46 | ERDS2TJ471 | 470 1/4 | R127 | ERDS2TJ104 | 100K 1/4 | R334 | ERDS2TJ272 | 2.7K 1/4 |
| R47 | ERDS2TJ471 | 470 1/4 | R128 | ERDS2TJ104 | 100K 1/4 | R335 | ERDS2TJ563 | 56K 1/4 |
| R48 | ERDS2TJ471 | 470 1/4 | R129 | ERDS2TJ103 | 10K 1/4 | R336 | ERDS2TJ563 | 56K 1/4 |
| R49 | ERDS2TJ471 | 470 1/4 | R131 | ERDS2TJ104 | 100K 1/4 | R341 | ERDS2TJ822 | 8.2K 1/4 |
| R50 | ERDS2TJ471 | 470 1/4 | R132 | ERDS2TJ104 | 100K 1/4 | R342 | ERDS2TJ822 | 8.2K 1/4 |
| R51 | ERDS2TJ471 | 470 1/4 | R133 | ERDS2TJ104 | 100K 1/4 | R343 | ERDS2TJ154 | 150K 1/4 |
| R52 | ERDS2TJ471 | 470 1/4 | R134 | ERDS2TJ104 | 100K 1/4 | R344 | ERDS2TJ154 | 150K 1/4 |
| R53 | ERDS2TJ471 | 470 1/4 | R201 | ERDS2TJ123 | 12K 1/4 | R345 | ERDS2TJ333 | 33K 1/4 |
| R54 | ERDS2TJ471 | 470 1/4 | R202 | ERDS2TJ123 | 12K 1/4 | R346 | ERDS2TJ333 | 33K 1/4 |
| R55 | ERDS2TJ471 | 470 1/4 | R203 | ERDS2TJ153 | 15K 1/4 | R347 | ERDS2TJ272 | 2.7K 1/4 |
| R56 | ERDS2TJ471 | 470 1/4 | R204 | ERDS2TJ153 | 15K 1/4 | R348 | ERDS2TJ272 | 2.7K 1/4 |
| R57 | ERDS2TJ471 | 470 1/4 | R205 | ERDS2TJ103 | 10K 1/4 | R349 | ERDS2TJ563 | 56K 1/4 |
| R58 | ERDS2TJ104 | 100K 1/4 | R206 | ERDS2TJ103 | 10K 1/4 | R350 | ERDS2TJ563 | 56K 1/4 |
| R78 | ERDS2TJ103 | 10K 1/4 | R295 | ERDS2TJ104 | 100K 1/4 | R355 | ERDS2TJ822 | 8.2K 1/4 |
| R79 | ERDS2TJ104 | 100K 1/4 | R296 | ERDS2TJ104 | 100K 1/4 | R356 | ERDS2TJ822 | 8.2K 1/4 |
| R80 | ERDS2TJ473 | 47K 1/4 | R297 | ERDS2TJ564 | 560K 1/4 | R357 | ERDS2TJ154 | 150K 1/4 |
| | | R298 | ERDS2TJ564 | 560K 1/4 | R358 | ERDS2TJ154 | 150K 1/4 | |

| Ref. No. | Part No. | Value. | Ref. No. | Part No. | Value. | Ref. No. | Part No. | Value. |
|----------|------------|----------|----------|----------------------|----------|----------|----------------------|----------|
| R359 | ERDS2TJ333 | 33K 1/4 | C14 | Δ ECKD1H223PF | 0.022 50 | C222 | ECFTD683KXL | 0.068 25 |
| R360 | ERDS2TJ333 | 33K 1/4 | C15 | Δ ECKD1H223PF | 0.022 50 | C223 | ECKD1H652KB | 0.056 50 |
| R361 | ERDS2TJ272 | 2.7K 1/4 | C16 | Δ ECKD1H223PF | 0.022 50 | C224 | ECKD1H562KB | 0.056 50 |
| R362 | ERDS2TJ272 | 2.7K 1/4 | C17 | Δ ECKD1H223PF | 0.022 50 | C225 | ECFTD273KXL | 0.027 25 |
| R363 | ERDS2TJ563 | 56K 1/4 | C18 | ECEA1EK4R7 | 4.7 25 | C226 | ECKD1H223KXL | 0.027 25 |
| R364 | ERDS2TJ563 | 56K 1/4 | C19 | Δ ECKD1H223PF | 0.022 50 | C227 | ECKD1H222KB | 0.022 50 |
| R366 | ERDS2TJ394 | 39K 1/4 | C20 | Δ ECKD1H223PF | 0.022 50 | C228 | ECKD1H222KB | 0.022 50 |
| R368 | ERDS2TJ123 | 12K 1/4 | C21 | ECCV1H104JZ | 0.1 50 | C229 | Δ ECFTD103KXL | 0.01 25 |
| R369 | ERDS2TJ822 | 8.2K 1/4 | C42 | ECCD1H220K | 22P 50 | C230 | Δ ECFTD103KXL | 0.01 25 |
| R370 | ERDS2TJ | | | | | | | |

| Ref. No. | Part No. | Value. | Ref. No. | Part No. | Value. | Ref. No. | Part No. | Value. |
|----------------------------------|---------------|----------|----------|---------------|----------|----------|---------------|-----------|
| R359 | ERDS2TJ333 | 33K 1/4 | C14 | △ ECKD1H223PF | 0.022 50 | C222 | ECFTD683KXL | 0.068 25 |
| R360 | ERDS2TJ333 | 33K 1/4 | C15 | △ ECKD1H223PF | 0.022 50 | C223 | ECKD1H562KB | 0.0056 50 |
| R361 | ERDS2TJ272 | 2.7K 1/4 | C16 | △ ECKD1H223PF | 0.022 50 | C224 | ECKD1H562KB | 0.0056 50 |
| R362 | ERDS2TJ272 | 2.7K 1/4 | C17 | △ ECKD1H223PF | 0.022 50 | C225 | ECFTD273KXL | 0.027 25 |
| R363 | ERDS2TJ563 | 56K 1/4 | C18 | ECEA1EK4R7 | 4.7 25 | C226 | ECFTD223KXL | 0.027 25 |
| R364 | ERDS2TJ563 | 56K 1/4 | C19 | ECKD1H223PF | 0.022 50 | C227 | ECKD1H222KB | 0.0022 50 |
| R365 | ERDS2TJ394 | 390K 1/4 | C20 | △ ECKD1H223PF | 0.022 50 | C228 | ECKD1H222KB | 0.0022 50 |
| R366 | ERDS2TJ123 | 12K 1/4 | C21 | ECQV1H104JZ | 0.1 50 | C229 | △ ECFTD103KXL | 0.01 25 |
| R367 | ERDS2TJ822 | 8.2K 1/4 | C22 | ECCD1H220K | 22P 50 | C230 | △ ECFTD103KXL | 0.01 25 |
| R370 | ERDS2TJ822 | 8.2K 1/4 | C23 | △ ECKD1H223PF | 0.022 50 | C231 | ECCD1H681K | 680P 50 |
| R371 | ERDS2TJ154 | 150K 1/4 | C24 | △ ECKD1H223PF | 0.022 50 | C232 | ECCD1H681K | 680P 50 |
| R372 | ERDS2TJ154 | 150K 1/4 | C25 | ECKD1H102PF | 0.001 50 | C233 | ECKD1H472KB | 0.0047 50 |
| R373 | ERDS2TJ273 | 27K 1/4 | C26 | ECKD1H151KB | 150P 50 | C234 | ECKD1H472KB | 0.0047 50 |
| R374 | ERDS2TJ273 | 27K 1/4 | (EG) | | | C261 | ECEA1HK010 | 1 50 |
| R375 | ERDS2TJ152 | 1.5K 1/4 | C27 | ECKD1H151KB | 150P 50 | C262 | ECEA1HK010 | 1 50 |
| R376 | ERDS2TJ152 | 1.5K 1/4 | (EG) | | | C263 | ECCD1H100KC | 10P 50 |
| R377 | ERDS2TJ563 | 56K 1/4 | C28 | ECKD1H151KB | 150P 50 | C264 | ECCD1H100KC | 10P 50 |
| R378 | ERDS2TJ563 | 56K 1/4 | (EG) | | | C265 | ECFTD393KXL | 0.039 25 |
| R383 | ERDS2TJ822 | 8.2K 1/4 | C29 | ECKD1H151KB | 150P 50 | C266 | ECFTD393KXL | 0.039 25 |
| R384 | ERDS2TJ822 | 8.2K 1/4 | (EG) | | | C267 | ECFTD393KXL | 0.039 25 |
| R385 | ERDS2TJ154 | 150K 1/4 | C30 | ECEA1EK4R7 | 4.7 25 | C268 | ECFTD393KXL | 0.039 25 |
| R386 | ERDS2TJ154 | 150K 1/4 | C31 | ECEA1EK4R7 | 4.7 25 | C269 | ECEA1HK010 | 1 50 |
| R387 | ERDS2TJ333 | 33K 1/4 | C32 | ECKD1H101KB | 100P 50 | C270 | ECEA1HK010 | 1 50 |
| R388 | ERDS2TJ333 | 33K 1/4 | C33 | ECKD1H101KB | 100P 50 | C271 | ECFTD333KXL | 0.033 25 |
| R389 | ERDS2TJ821 | 820 1/4 | C34 | ECEA1CKS100 | 10 16 | C272 | ECFTD333KXL | 0.033 25 |
| R390 | ERDS2TJ821 | 820 1/4 | C35 | ECEA1CKS100 | 10 16 | C273 | ECFTD333KXL | 0.033 25 |
| R391 | ERDS2TJ563 | 56K 1/4 | C36 | ECEA1HK3R3 | 3.3 50 | C274 | ECFTD333KXL | 0.033 25 |
| R392 | ERDS2TJ563 | 56K 1/4 | C37 | ECEA1HK3R3 | 3.3 50 | C275 | ECEA1HK010 | 1 50 |
| R397 | ERDS2TJ682 | 6.8K 1/4 | C38 | △ ECKD1H223PF | 0.022 50 | C276 | ECEA1HK010 | 1 50 |
| R398 | ERDS2TJ682 | 6.8K 1/4 | C39 | ECKD1H101KB | 100P 50 | C277 | ECFTD123KXL | 0.012 25 |
| R399 | ERDS2TJ124 | 120K 1/4 | C40 | △ ECKD1H223PF | 0.022 50 | C278 | ECFTD123KXL | 0.012 25 |
| R400 | ERDS2TJ124 | 120K 1/4 | C41 | ECKD1H223PF | 0.022 50 | C279 | ECFTD123KXL | 0.012 25 |
| R401 | ERDS2TJ273 | 27K 1/4 | C42 | ECKD1H151KB | 150P 50 | C280 | ECFTD123KXL | 0.012 25 |
| R402 | ERDS2TJ273 | 27K 1/4 | (EG) | | | C281 | ECEA1HK010 | 1 50 |
| R403 | ERDS2TJ681 | 680 1/4 | C43 | ECKD1H151KB | 150P 50 | C282 | ECEA1HK010 | 1 50 |
| R404 | ERDS2TJ681 | 680 1/4 | (EG) | | | C283 | ECKD1H472KB | 0.0047 50 |
| R405 | ERDS2TJ683 | 68K 1/4 | C44 | ECKD1H121KB | 120P 50 | C284 | ECKD1H472KB | 0.0047 50 |
| R406 | ERDS2TJ683 | 68K 1/4 | C45 | ECKD1H121KB | 120P 50 | C285 | ECKD1H472KB | 0.0047 50 |
| R407 | ERDS2TJ103 | 10K 1/4 | C46 | ECEA1HU470 | 47 50 | C286 | ECKD1H472KB | 0.0047 50 |
| R408 | ERDS2TJ103 | 10K 1/4 | C47 | ECEA1HU470 | 47 50 | C287 | ECEA1HK010 | 1 50 |
| CAPACITORS(VALUE,VOLTAGE) | | | | | | | | |
| 122 | ECKD1H151KB | 150P 50 | C48 | ECKD1H223PF | 0.022 50 | C288 | ECEA1HK010 | 1 50 |
| (EG) | | | C49 | ECKD1H223PF | 0.022 50 | C289 | ECKD1H222KB | 0.0022 50 |
| C1 | △ ECKD1H223PF | 0.022 50 | C50 | ECKD1H223PF | 0.022 50 | C290 | ECKD1H222KB | 0.0022 50 |
| C2 | △ ECKD1H223PF | 0.022 50 | C51 | ECEA1HKR22 | 0.22 50 | C291 | ECEA1HKR22 | 0.22 50 |
| C3 | ECEA1VU221 | 220 35 | C52 | ECEA1HKR22 | 0.22 50 | C292 | ECEA1HKR22 | 0.22 50 |
| C4 | ECEA1VU221 | 220 35 | C53 | ECEA1HKR22 | 0.22 50 | C293 | ECEA1HKR22 | 0.22 50 |
| C5 | ECEA1EK100 | 10 25 | C54 | ECEA1HK010 | 1 50 | C294 | ECEA1HK010 | 1 50 |
| C6 | ECEA1EK100 | 10 25 | C55 | ECEA1HKR22 | 0.22 50 | C295 | ECEA1HK010 | 1 50 |
| C7 | △ ECKD1H223PF | 0.022 50 | C56 | ECEA1HK010 | 1 50 | C296 | ECEA1HK010 | 1 50 |
| C8 | △ ECKD1H223PF | 0.022 50 | C57 | ECEA1HKR22 | 0.22 50 | C297 | ECEA1HKR22 | 0.22 50 |
| C9 | △ ECKD1H223PF | 0.022 50 | C58 | ECEA1HKR22 | 0.22 50 | C298 | ECEA1HKR22 | 0.22 50 |
| C10 | ECEA1HU221 | 220 50 | C59 | ECEA1HKR15 | 0.15 50 | C299 | ECEA1HKR15 | 0.15 50 |
| C11 | ECEA1EL471 | 470 25 | C60 | ECEA1HKR15 | 0.15 50 | C300 | ECEA1HKR15 | 0.15 50 |
| C12 | △ ECKD1H223PF | 0.022 50 | C61 | ECEA1HKR15 | 0.15 50 | C301 | ECEA1HKR15 | 0.15 50 |
| C13 | ECEA1EK100 | 10 25 | C62 | ECEA1HKR15 | 0.15 50 | C302 | ECEA1HKR15 | 0.15 50 |

•ELECTRICAL PARTS LIST

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|----------------------------|--------------|------------------|--------------|------------|-------------------|
| INTEGRATED CIRCUITS | | | | | |
| IC1 | AN78N05 | I.C. REGULATOR | D57 | BR222S | DIODE |
| IC51 | HD614042SH58 | I.C. MICRO COM. | D58 | BR222S | DIODE |
| IC52 | UPC393 | I.C. BUFFER | D59 | BR222S | DIODE |
| IC53 | LC74HC138 | I.C. KEY CON. | D60 | BR222S | DIODE |
| IC54 | M68310P | I.C. LED DRIVE | D61 | BR222S | DIODE |
| IC101 | TC9162N | I.C. INPUT SELE. | D62 | BR222S | DIODE |
| IC102 | NJM4559S | I.C. BUFFER | D63 | ISS178 | DIODE |
| IC201 | M5229P | I.C. EQ. | D64 | ISS178 | DIODE |
| IC202 | LC7522 | I.C. BAND LEVEL | D65 | ISS178 | DIODE |
| IC203 | LC7522 | I.C. BAND LEVEL | D66 | ISS178 | DIODE |
| IC204 | M5229P | I.C. EQ. | D67 | ISS178 | DIODE |
| IC301 | NJM4559S | I.C. B.P.F. | D68 | ISS178 | DIODE |
| IC302 | NJM4559S | I.C. B.P.F. | D69 | ISS178 | DIODE |
| IC303 | LA6324N | I.C. B.P.F. | D70 | ISS178 | DIODE |
| IC304 | LA6324N | I.C. B.P.F. | D71 | ISS178 | DIODE |
| IC305 | NJU4051BD | I.C. MIX | D72 | ISS178 | DIODE |
| IC306 | NJU4051BD | I.C. MIX | D73 | ISS178 | DIODE |
| IC307 | LA6324N | I.C. B.P.F. | D74 | ISS178 | DIODE |
| TRANSISTORS | | | | | |
| Q1 | 2SD2012 | TRANSISTOR | T1 | △ SLTK5K17 | POWER TRANSFORMER |
| Q3 | 2SC3311A-Q | TRANSISTOR | (EX, EH, EB) | | |
| Q4 | DTA114ESTP | TRANSISTOR | (EF, EI, EG) | | |
| Q41 | DTA114ESTP | TRANSISTOR | T1 | △ SLTK5K18 | POWER TRANSFORMER |
| Q42 | DTA114ESTP | TRANSISTOR | (EK, XL) | | |
| Q43 | DTA114ESTP | TRANSISTOR | T1 | △ SLTK5K19 | POWER TRANSFORMER |
| (PE) | | | (XB, XA, PA) | | |

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|----------|----------|---------------|----------|-------------|----------------|
| S68 | SSGK7 | SW | S78 | SSG13 | SW, SPECTRUM |
| S69 | SSGK7 | SW | S79 | SSG13 | SW, EQ OFF |
| S70 | SSGK7 | SW | S80 | SSG13 | SW, S.ANALYSER |
| S71 | SSGK7 | SW | S81 | SSG13 | SW, EQ.ON |
| S72 | SSGK7 | SW | S82 | SSG13 | SW, EQ.LEVEL |
| S73 | SSG13 | SW | S83 | SSG13 | SW, MEMORY |
| S74 | SSG13 | SW | | BATTERY | |
| S75 | SSG13 | SW, TAPE | BT1 | BR2032-1VC | BATTERY |
| S76 | SSG13 | SW, RECORDING | | OTHERS | |
| S77 | SSG13 | SW, SOURCE | X1 | EF0FC4004A3 | OSCILLATOR |

●PACKING PARTS LIST

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|-------------------------|------------|--|----------|-------------|--|
| PACKING MATERIAL | | | | | |
| P1 | SPGK371 | PACKING CASE (EX, EH, EB) (E1, EG, XL) (XB, XA, PA) (PE) | A2 | RJP120ZBS-H | AC PLUG ADAPTOR (XB, XA, PA) (PE) |
| P1 | SPGK372 | PACKING CASE (EF) | A3 | SFDAC05E03 | POWER CORD (EX, EH, EB) (EF, E1, EG) |
| P1 | SPGK373 | PACKING CASE (EK) | A3 | SFDAC05G02 | POWER CORD (EK) |
| P1 | SPGK384 | PACKING CASE (EX, EH, EB) (E1, EG, XL) (XB, XA, PA) (PE) | A3 | SJA168 | POWER CORD (PA, PE) |
| P1 | SPGK384 | PACKING CASE (EX, EH, EB) (E1, EG, XL) (XB, XA, PA) (PE) | A3 | SJA173 | POWER CORD (XL) |
| P1 | SPGK385 | PACKING CASE (EF) | A3 | SJA183 | POWER CORD (XB) |
| P1 | SPGK386 | PACKING CASE (EK) | A3 | SJA185 | POWER CORD (XA) |
| P2 | SPSK91-3 | PAD | A4 | SQFK10204 | INSTRUCTION BOOK (EX, EH, EB) (EF, E1) |
| P3 | SPSK92-3 | PAD | A4 | SQFK10205 | INSTRUCTION BOOK (EG) |
| P4 | SPPK60 | PROTECTION COVER | A4 | SQFK10206 | INSTRUCTION BOOK (EK, XL, XB) (XA) |
| ACCESSORIES | | | | | |
| A1 | SJPK2202-1 | CORD | A4 | SQFK10207 | INSTRUCTION BOOK (PA, PE) |
| | | | A5 | SJP2257T | CORD |