

Service Manual

Sound Processor

 Sound Processor
SH-EH60


System: SC-EH60

**Colour**

(K) Black

Area
 (E)/(EP) ... Europe, Russia
 (GC) Asia, Latin America,
 Middle East, Africa
 and Oceania.

Because of unique interconnecting cables, when a component requires service, send or bring in the entire system.



Specifications

EQ/SFP Section

MANUAL GEQ:

Center frequency; 100 Hz, 315 Hz, 1 kHz,
3.15 kHz, 10 kHz

Level control; ± 3, 6, 9 dB

EQ SPACE mode

3 modes; HALL, CLEAR, HEAVY

Acoustic Image Selector: 36 pattern

Pre-amplifier Section

Input sensitivity/impedance:

VCR; 250 mV/15 kohm

VDP; 250 mV/15 kohm

Output level:

VCR RECOUT; 150 mV/1.5 kohm

DOLBY PRO LOGIC Section

PRO LOGIC mode: SURROUND, 3 STEREO

CENTER mode: NORMAL, WIDE, PHANTOM

DELAY TIME: 20 ms (Fixed)

Spectrum analyzer Section

Display mode: NORMAL, PEAKHOLD, AUROLA

General

Dimensions: 287 (W)/89 (H)/273.5 (D) mm

Weight: 1.1 kg

Note: Specifications are subject to change without notice.
Weight and dimensions are approximate.

System/SC-EH60:

Sound processor: SH-EH60,
Front speakers: *1 SB-EH60,

Tuner/Amplifier: SA-EH60,
Center speaker: *2 SB-PC60,

Compact disc changer: SL-EH60,
Surround speakers: *2 SB-PS60

Cassette deck: RS-EH60,

Notes: *1 ...For (E)/(EP) area : Made in PAES

For (GC) area : Made in MESA

*2 ...Made in MESA

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Technics®

© 1997 Matsushita Electric Industrial Co., Ltd.
All rights reserved. Unauthorized copying
and distribution is a violation of law.


■ Contents

	Page		Page
Location of Controls	2	Printed Circuit Board Diagram	15
Changing the Tone	3, 4	Type Illustration of IC's, Transistors and Diodes	16
Enjoying Stereophonics	5	Wiring Connection Diagram	16
Convenient Functions	5	Terminal Function of IC's	17
Concerning the Display	5	Block Diagram	18
Enjoying sound with DOLBY PRO LOGIC	6 ~ 8	Replacement Parts List (Electrical)	19
Operation Checks and		Resistors and Capacitors	20
Main Component Replacement Procedures	9, 10	Replacement Parts List (Cabinet)	21
To Supply Power Source	11	Cabinet Parts Location	22
Schematic Diagram	12 ~ 14		

NOTE:




Refer to the service manual for Model No. SA-EH60 (ORDER No. AD9703048C8) for information on "Accessories", "Connections", "Installation" and "Packaging".

■ Location of Controls

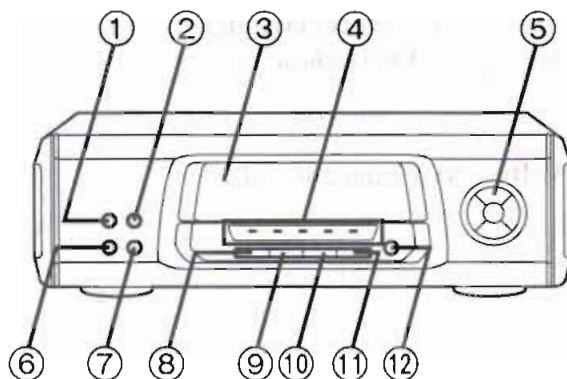

- ① EQ SPACE on/flat button (EQ SPACE ON/FLAT)
- ② Display mode select/demonstration button (DISP MODE/-DEMO)
- ③ Display
- ④ DOLBY PRO LOGIC indicators (SURROUND, 3 STEREO, NORMAL, WIDE, PHANTOM)
- ⑤ Multi control buttons (MULTI CONTROL, ►, ▲, ◀, ▼)
- ⑥ Acoustic image EQ button (ACOUSTIC IMAGE EQ)
- ⑦ EQ SPACE preset/manual select button (PRESET/MANUAL)
- ⑧ DOLBY PRO LOGIC on/off button (DOLBY PRO LOGIC, OFF/ON)
- ⑨ DOLBY PRO LOGIC mode select button (MODE)
- ⑩ DOLBY PRO LOGIC test signal button (TEST)
- ⑪ DOLBY PRO LOGIC center mode button (CENTER MODE)
- ⑫ 3D PRESENCE select button

■ Changing the Tone

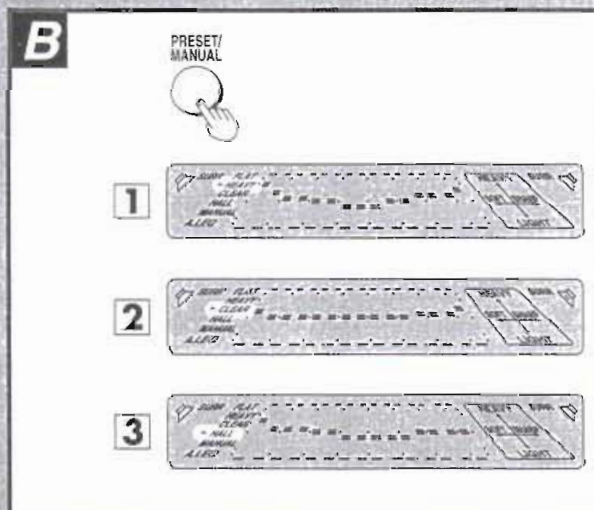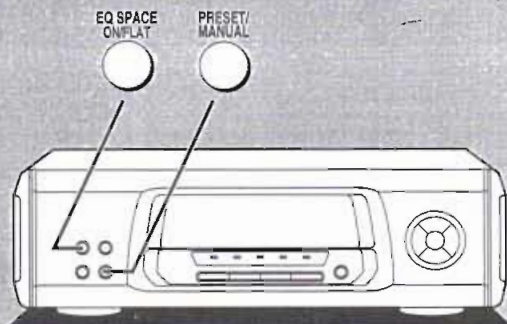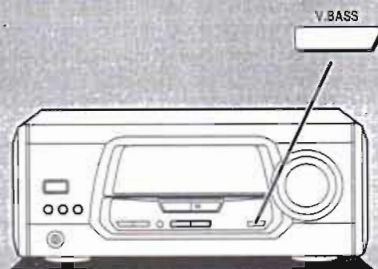

To listen with augmented bass (V. BASS)

Press V. BASS.

To cancel, press V. BASS once again.

Note

You cannot record with the V. BASS effect.

"V. BASS" is only effective on sounds which can be heard through the speakers or headphones.

Using the internal sound quality

Press PRESET/MANUAL to select the desired mode.

Each time you press PRESET/MANUAL, EQ and SPACE modes will be switched as follows.

HEAVY → CLEAR → HALL → MANUAL





- 1 **HEAVY:** Use to add "punch" to rock and other music.
- 2 **CLEAR:** Use to clarify the treble range of jazz, etc.
- 3 **HALL:** Use to impart a deep bass and spread which will make you feel as if you were in a large concert hall.
- 4 **MANUAL:** Refer to the "Finer sound quality changes" section on page 29.

To cancel the EQ SPACE effect

Press EQ SPACE ON/FLAT to select "FLAT".

Notes

- Recordings cannot be made in the HALL, CLEAR, HEAVY or MANUAL modes.
- Recording during use of sound quality operation will cause the "HALL", "CLEAR", "HEAVY" and "MANUAL" indicators to disappear and light again when recording is completed.

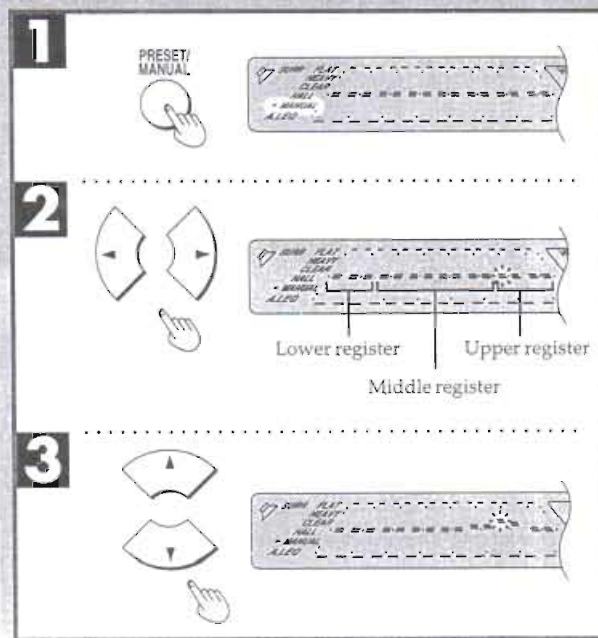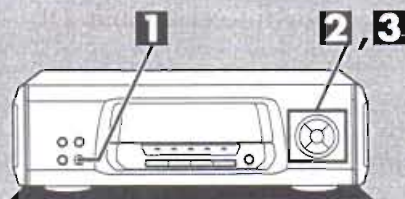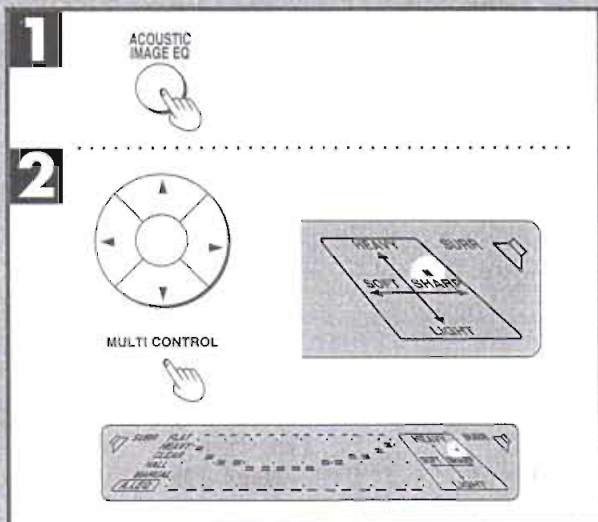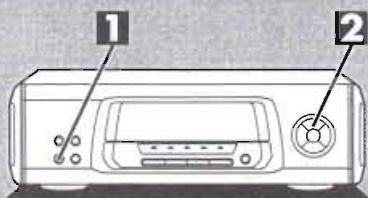

Using the acoustic image EQ

This function allows easy creation of sounds closer to what you imagine.

The figure shows an example where the sound quality has been adjusted to HEAVY level 2 and SHARP level 3.

1 Press ACOUSTIC IMAGE EQ.

2 Press the ▲ ▼ ◀ ▶ buttons to move the cursor to the desired music image.

- HEAVY (▲): When a heavier sound is desired
- LIGHT (▼): When a lighter sound is desired
- SOFT (◀): When a softer sound is desired
- SHARP (▶): When a sharper sound is desired

To cancel the ACOUSTIC IMAGE EQ effect
Press EQ SPACE ON/FLAT to select "FLAT".

Notes

- Sounds can be made to fit a total of 36 images.
- The resulting adjustment is automatically stored in memory. When the ACOUSTIC IMAGE EQ is pressed again, the image last selected is automatically selected.

Finer sound quality changes

Finer sounds can be created by selecting MANUAL.

1 Press PRESET/MANUAL to select MANUAL.

2 Press ◀ ▶ to select the desired register.

- ◀: Upper register
- ▶: Lower register

3 Press ▲ ▼ to adjust the register level.

- ▲: Increasing the register level
- ▼: Decreasing the register level

For your reference:

Upper register: includes pipes, strings, cymbals and triangles

- Increasing the upper register: mellows pipes and strings, adds precision and glitter
- Decreasing the upper register: quiets music, rids music of its "stretch"

Middle register: vocals (voice)

- Increasing the middle register: gives strength and punch to music brings voices forward, brightens sound
- Decreasing the middle register: quiets music, pulls voices back, softens intense sounds

Lower register: includes bass and drums

- Increasing the lower register: stabilizes heavy and low sounds, swells low sounds
- Decreasing the lower register: decreases noise in lower sounds, reduces muffled sounds

Notes

- The resulting adjustment is automatically stored in memory. When the MANUAL mode is selected again, the sound quality last selected is automatically played back.
- The register can be manually adjusted at 5 individual points along the 100 Hz~10 kHz frequency range.

■ Enjoying Stereophonics

This function emphasizes the center position, naturally widening the left and right, for a taste of natural stereophonic feeling regardless of listening position.

Press 3D PRESENCE. 

3D PRESENCE indicator will light.

Each time the button is pressed the display on the sound processor changes as follows.

MODE 1 → MODE 2 → MODE 3 → OFF

To cancel, press 3D PRESENCE to select OFF.

(3D PRESENCE indicator goes out.)

Notes

- The 3D PRESENCE effect cannot be recorded.
 - "3D PRESENCE" is only effective on sounds which can be heard through the speakers.
- When using the headphones, please switch off this function.

■ Convenient Functions

To mute the volume

This feature is convenient when you have a telephone call, etc.

by remote control only

Press MUTING.


"MUTING" will light.

Sound remains muted when you put the stereo on standby.

To cancel, press MUTING once again. ("MUTING" goes out.)

To cancel from the tuner/amplifier, reduce the volume level to the minimum position (— dB) and then reset to the desired volume.

■ Concerning the Display

The sound processor shows the level of each sound range with the three types of display described belows. 


Press DISP MODE/—DEMO momentarily.

The spectrum display will change as follows.


- 1 Normal display**
This display indicates the strength of the sound in each tonal range.
- 2 Peak-hold display**
The peak sound value of each sound range is held on the display for about one second after occurs.
- 3 Aurora display**
The peak sound value of each sound range is displayed in inverted form.

For your reference:

The demonstration function starts when DISP MODE/—DEMO is held down.

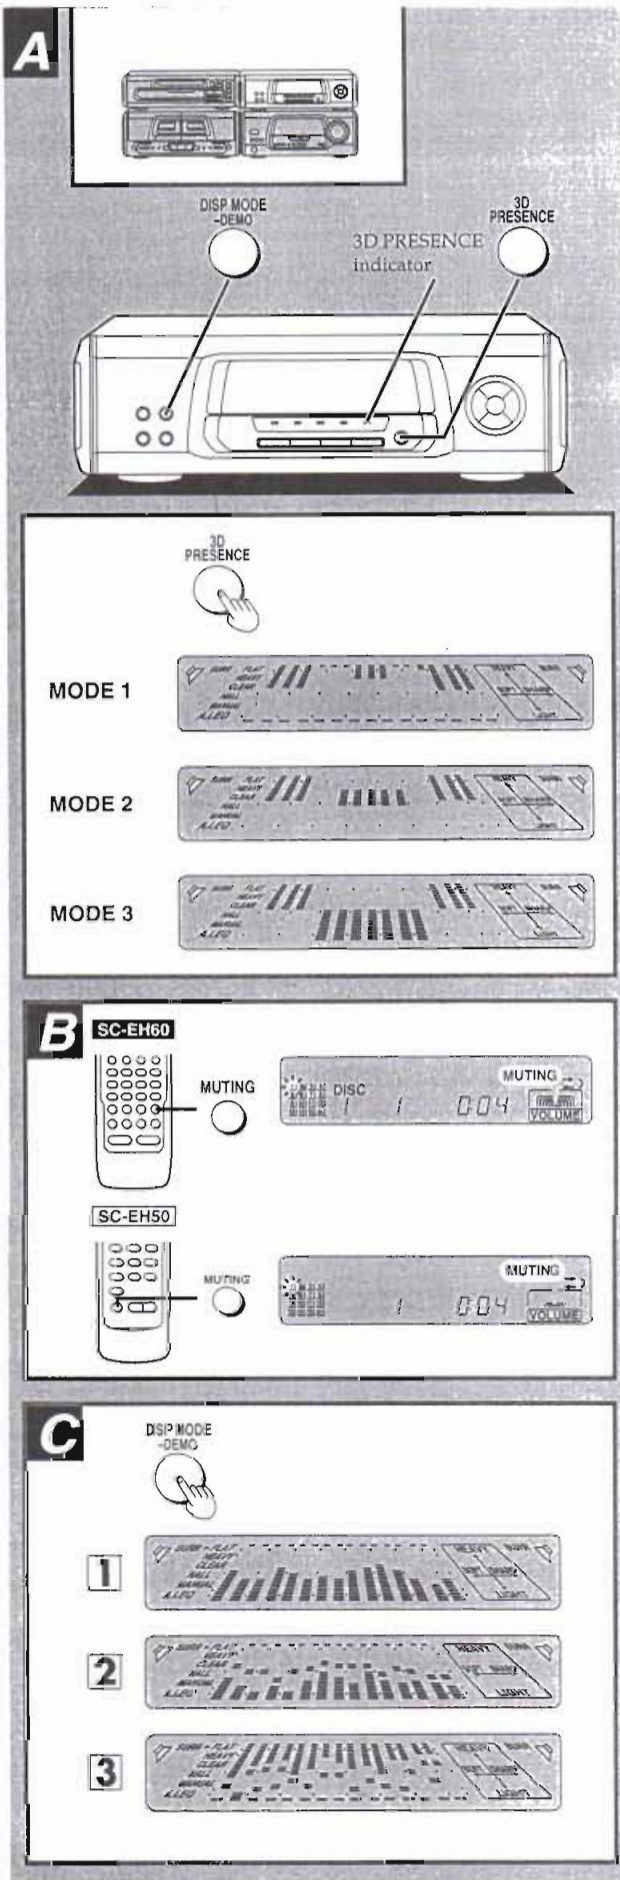

■ Enjoying Sound with DOLBY PRO LOGIC

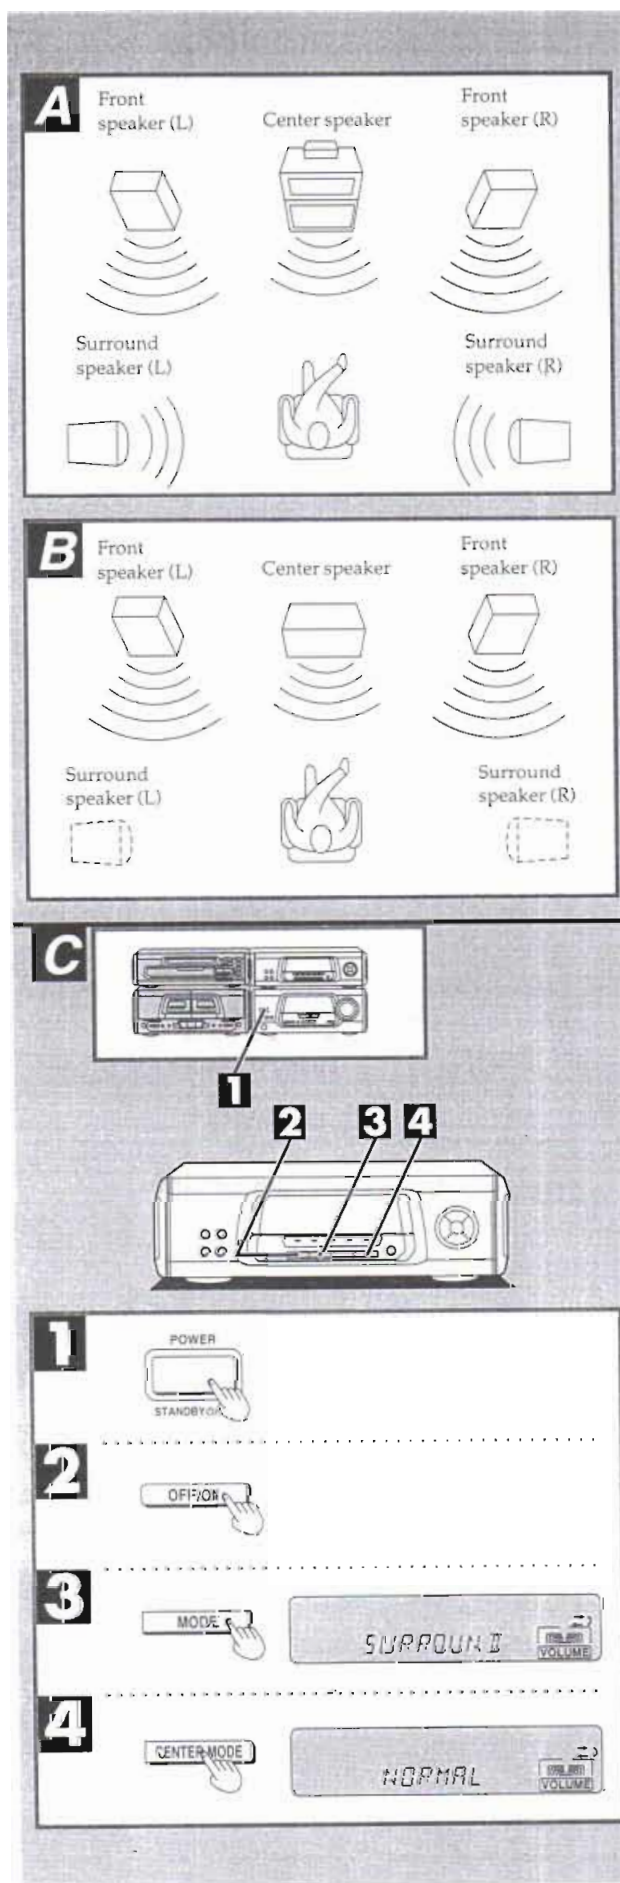

By combining front, center and surround speakers, you can enjoy the SURROUND mode which conveys a feeling of presence or the 3 STEREO mode which conveys a feeling of orientation.

SURROUND **A**

By reproducing the feeling of depth and movement of sound, video software or compact discs recorded with Dolby Surround provide the listener with the sensations of a movie theater.


To enjoy SURROUND, be sure to connect the surround speakers.

3 STEREO **B**

You can enjoy audio/video sources with clear sound, more presence and enhanced orientation. 3 STEREO can be used with sources not recorded in DOLBY SURROUND.

To enjoy 3 STEREO, be sure to connect the center speaker.

Manufactured under license from Dolby Laboratories Licensing Corporation.

DOLBY, the double-D symbol  and "PRO LOGIC" are trademarks of Dolby Laboratories Licensing Corporation.

Setting the center mode **C**

For Dolby Pro Logic systems, center mode setting is necessary to play back bass sounds effectively. Set the center mode in accordance with the size of your center speaker.

- 1 Switch on the power.
- 2 Press DOLBY PRO LOGIC OFF/ON to select ON.
- 3 Press MODE to select "SURROUND" or "3 STEREO".
Each time you press the button, the display will change as follows:
SURROUND → 3 STEREO
- 4 Press CENTER MODE to select "NORMAL" mode.
Each time you press the button, the display will change as follows:
NORMAL → WIDE → PHANTOM

Note

"PHANTOM" will not be displayed when you select "3 STEREO" in step 3.

NORMAL:

When the center speaker is smaller than the front speakers

WIDE:

When the center speaker is the same size or larger than the front speakers

PHANTOM: SURROUND only

When no center speaker is connected

Note

In the PHANTOM mode, the sound which would have been sent to the center speaker will be divided equally between both the left and right front speakers.

Adjusting speaker output level

In order to reproduce the movement of the sound and its clear orientation, it is important to adjust the output level of each speaker. Adjust output to the correct levels while listening to the test signal.

1 Press DOLBY PRO LOGIC OFF/ON to select ON.

2 Press MODE to select "SURROUND" or "3 STEREO".

Each time you press the button, the display will change as follows:

SURROUND → 3 STEREO

3 Press TEST to output a test signal.

The test signal is emitted in the following order:

For SURROUND mode

Front speaker (left) → Center speaker

↑
Surround speakers (left, right) ← Front speaker (right)

Note

The test signal is not emitted from the center speaker when the center mode is on PHANTOM.

For 3 STEREO mode

Front speaker (left) → Center speaker → Front speaker (right)

4 Turn VOLUME to set the volume level normally used for enjoying the source.

5 Press CENTER (-) or (+) or SURROUND (-) or (+) on the remote control to adjust the output level balance.

Adjust the output level of each speaker from the listening position until they are all identical.


Output levels can be varied within a range of ± 12 dB with front speaker output level serving as the zero point.

Notes

- The test signal is output only by the speaker you are now adjusting and does not repeat the sequence until adjustments are complete.
- Remember you cannot adjust the output level of the surround speakers if you selected the 3 STEREO mode in step 2.

To stop the test signal:


Press TEST.

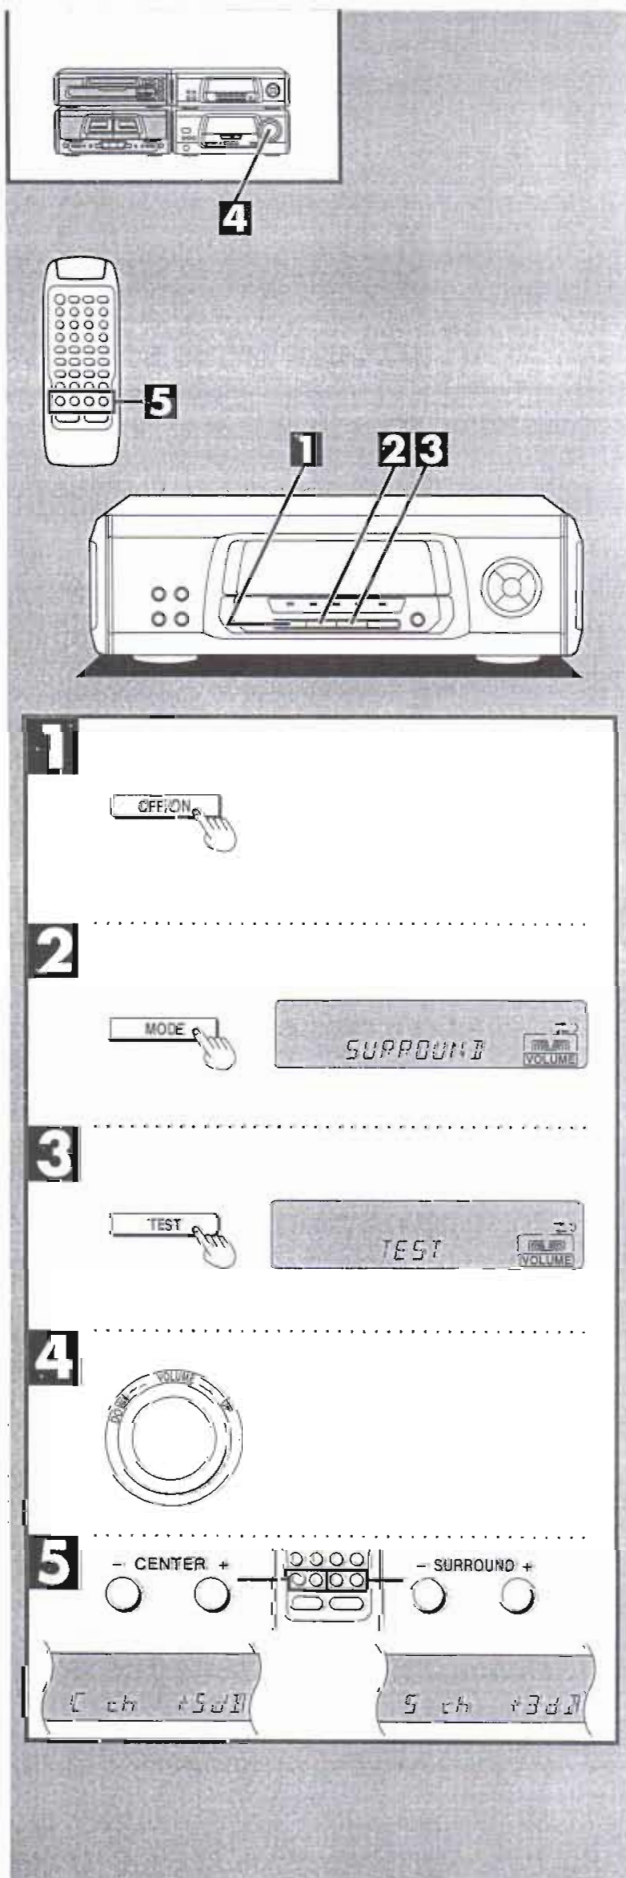


■ Operation Checks and Main Component Replacement Procedures

- NOTE**
1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
 2. For reassembly after operation checks or replacement, reverse the respective procedures. Special reassembly procedures are described only when required.

1. Checking for the IN/OUT terminal P.C.B.

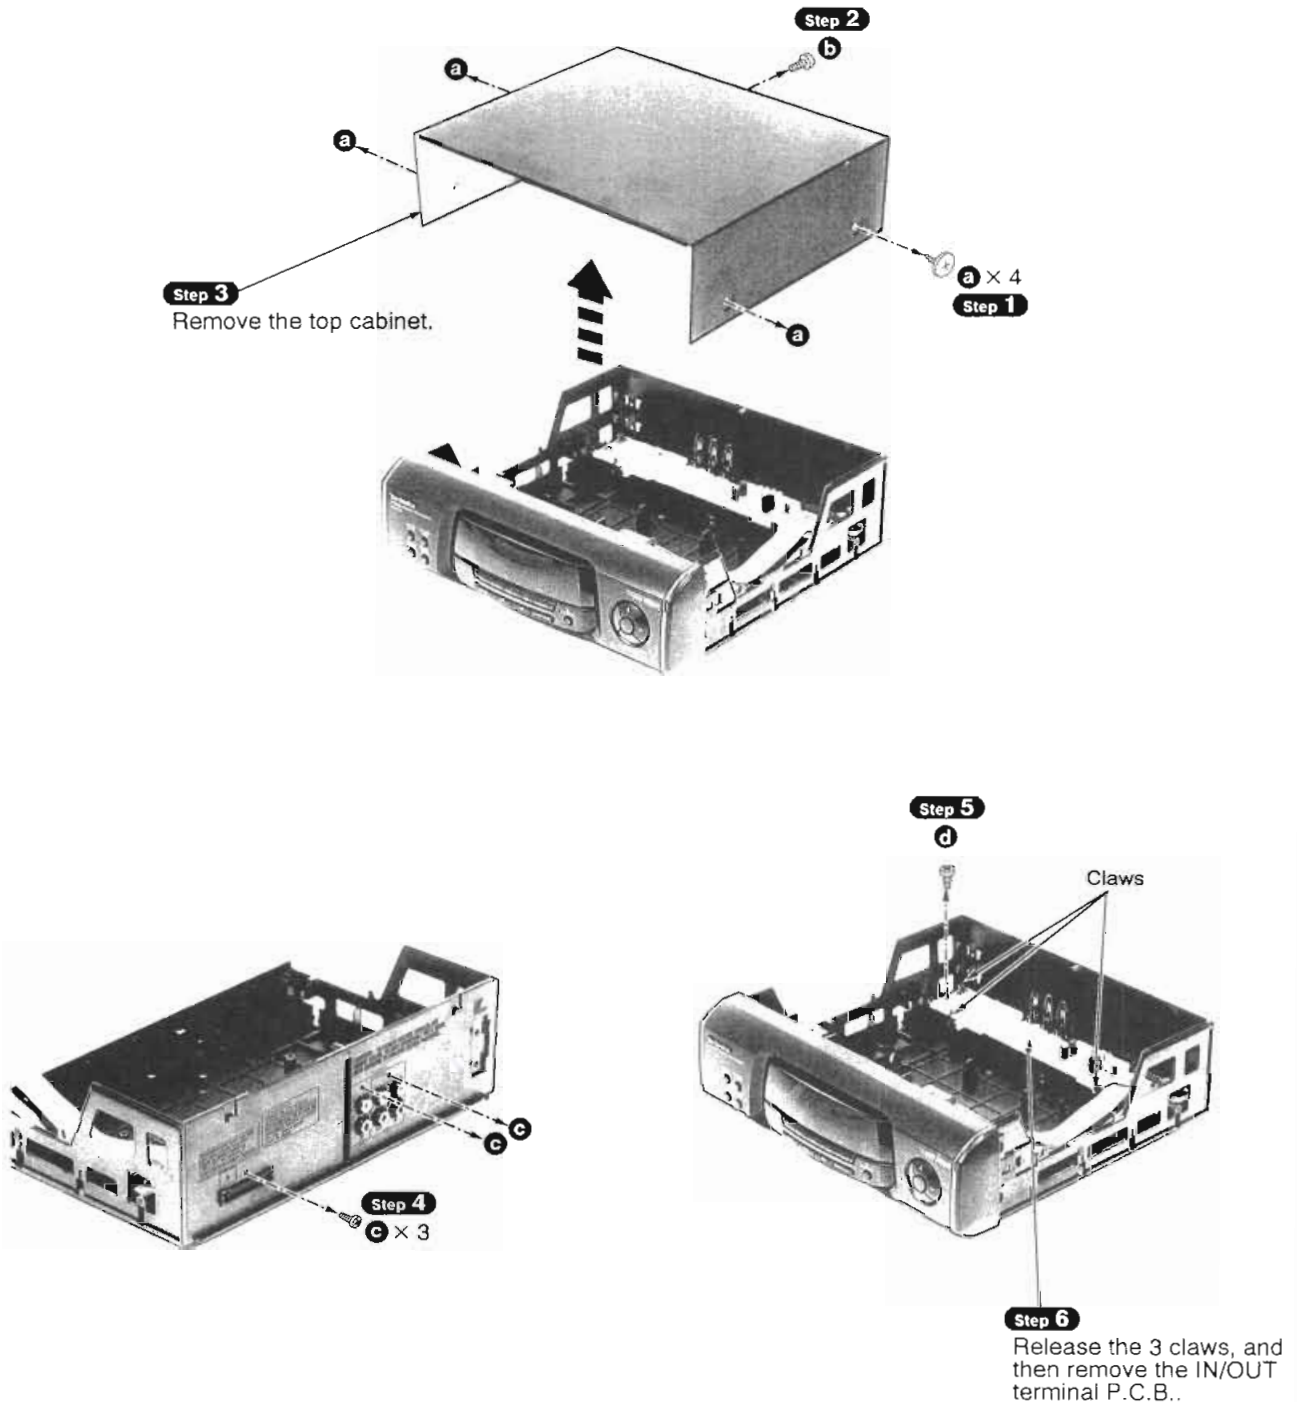


• Check the IN/OUT terminal P.C.B. as shown below.

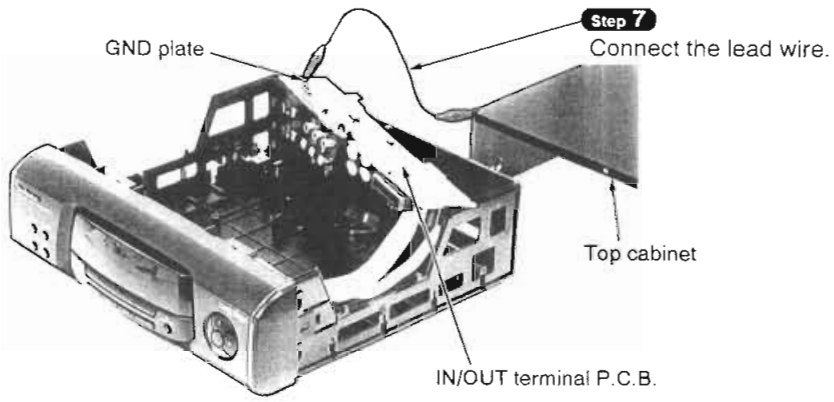


2. Checking for the FL P.C.B.


• Follow the **Step 1** ~ **Step 3** of the item 1 in checking procedure for each P.C.B. on page 9.

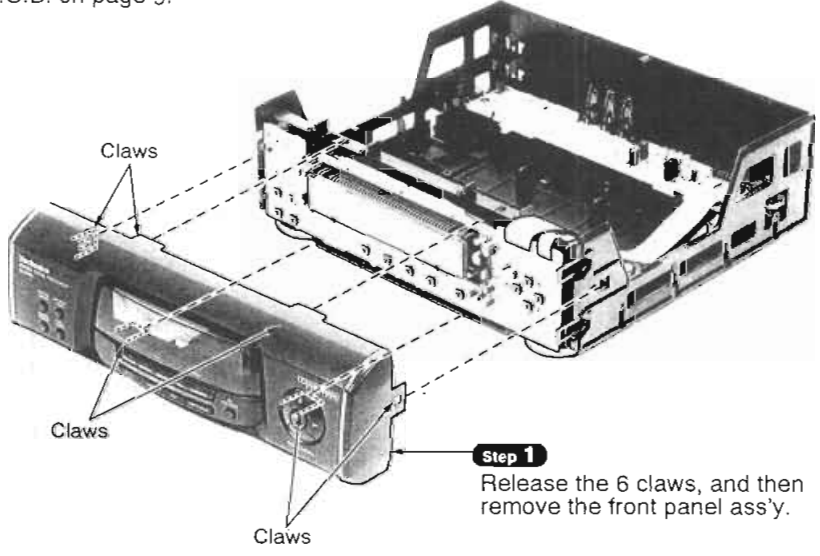

Step 2
Release the 5 claws, and then remove the FL P.C.B..

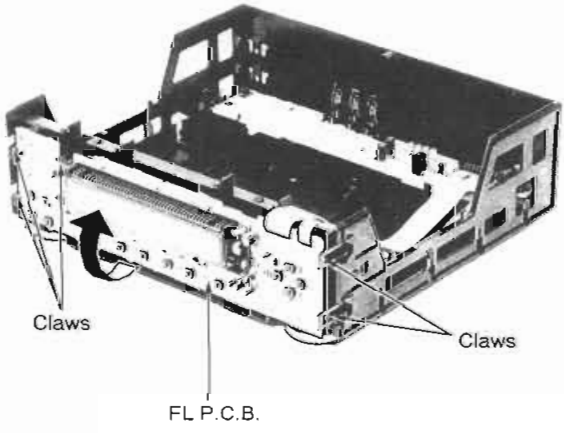

• Check the FL P.C.B. as shown below.

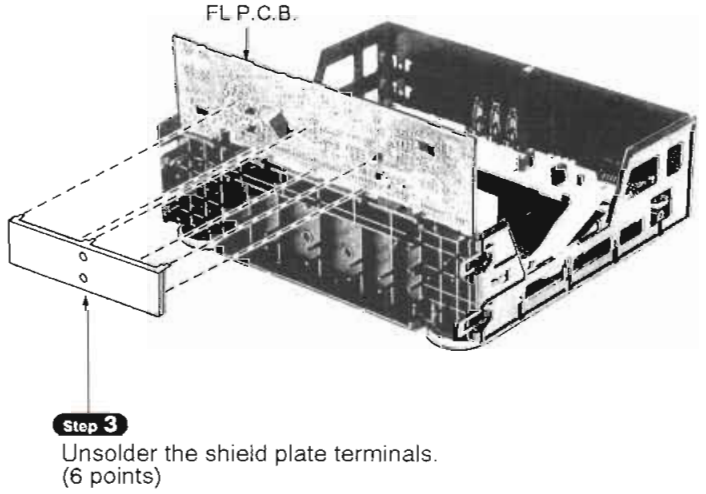

■ To Supply Power Source

This unit SH-EH60 is designed to operate on power supplied from the Tuner/Amplifier SA-EH60. When operating the unit SH-EH60 alone for testing and servicing, without having power supplied from the Tuner/Amplifier SA-EH60, use the following method.



Power Supply to This Unit Alone

1. Short the section between **J124** and **D101**.
2. Short the section **J306**, **J307**, **J305** and **J302** with each other. (Point **A**)
3. Short the section between **J126** and **17 pin** of the connector **JK101**. (Point **B**)
4. Short the section between **J125** and **J101**. (Point **C**)
5. Apply +5 V DC power to the section between **J125** and (+) foil side of **C104**.
6. Connect the DC Power supply as shown below.
 - +12 V terminal of the DC Power Supply connect to Point **C**.
 - GND terminal of the DC Power Supply connect to Point **A**.
 - -12 V terminal of the DC Power Supply connect to Point **B**.


To Check Signal

1. Input the audio signal and confirm in to be outputted from the terminal.

	INPUT	OUTPUT
L-ch	AUDIO IN	AUDIO OUT
R-ch	VCR	VCR

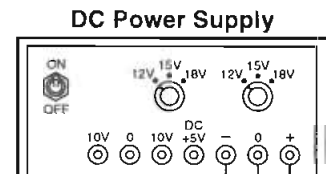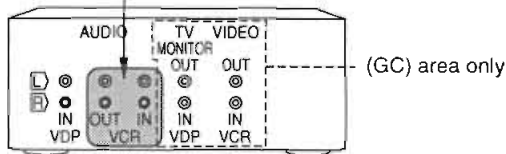

Short Point **B** ←
 Short Point **A** ←
 Short Point **C** ←

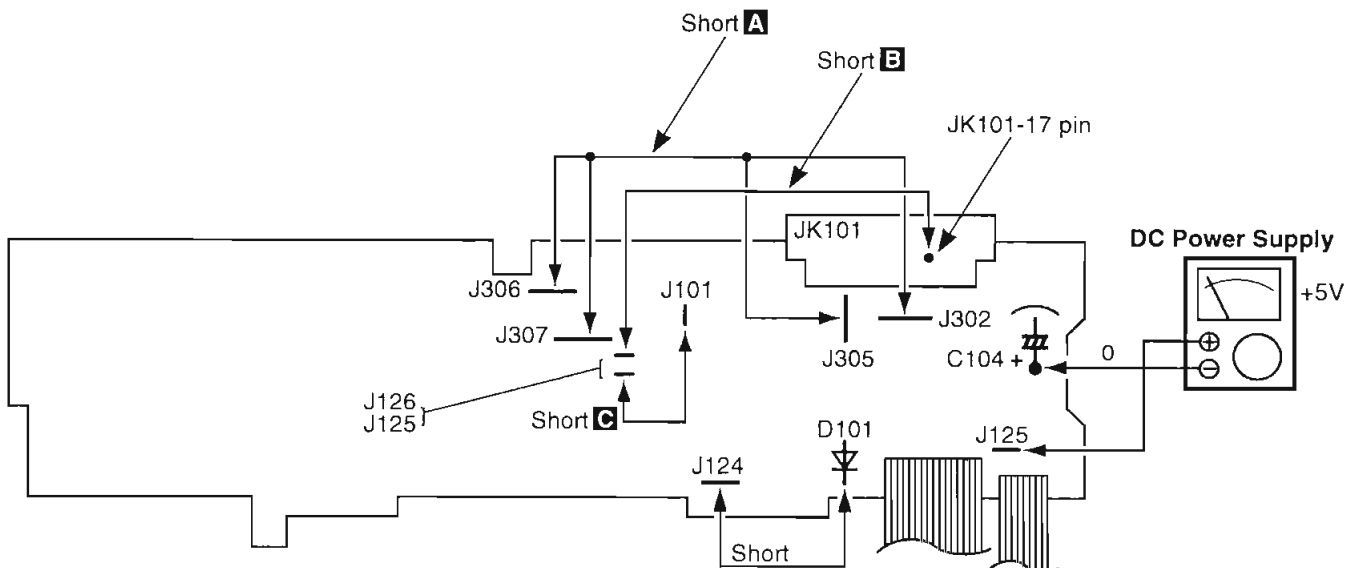

■ Schematic Diagram

	Page
A FL CIRCUIT	13, 14
B IN/OUT TERMINAL CIRCUIT	14

- This schematic diagram may be modified at any time with the development of new technology.

Notes:




- **S301**: EQ SPACE on/off switch (EQ SPACE ON/FLAT)
- **S302**: Acoustic image EQ switch (ACOUSTIC IMAGE EQ)
- **S303**: EQ SPACE preset/manual select switch (PRESET/MANUAL)
- **S304**: Display mode select/demonstration switch (DISP MODE/-DEMO)
- **S305**: DOLBY PRO LOGIC on/off switch (DOLBY PRO LOGIC, OFF/ON)
- **S306**: DOLBY PRO LOGIC mode select switch (MODE)
- **S307**: DOLBY PRO LOGIC test signal switch (TEST)
- **S308**: DOLBY PRO LOGIC center mode select switch (CENTER MODE)
- **S309**: 3D presence select switch (3D PRESENCE)
- **S310 ~ S313**: Multi control switch
(MULTI CONTROL , S310 : ▼ , S311 : ◀ , S312 : ▲ , S313 : ▶)

- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
- Voltage values and waveforms are measured as indicated in the schematic diagram when test points between **AG** and **VG** , and between **DG** and **CT-G** , and between **AG** and **DG** are shorted.
- Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety.
Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.


• Caution!

- IC and LSI are sensitive to static electricity.
Secondary trouble can be prevented by taking care during repair.
Cover the parts boxes made of plastics with aluminum foil.
Ground the soldering iron.
Put a conductive mat on the work table.
Do not touch the legs of IC or LSI with the fingers directly.

• Voltage and signal line


-  : Positive voltage line
-  : Negative voltage line
-  : Source signal line (L-ch)

A FL CIRCUIT (P.C.Board: on page 15)

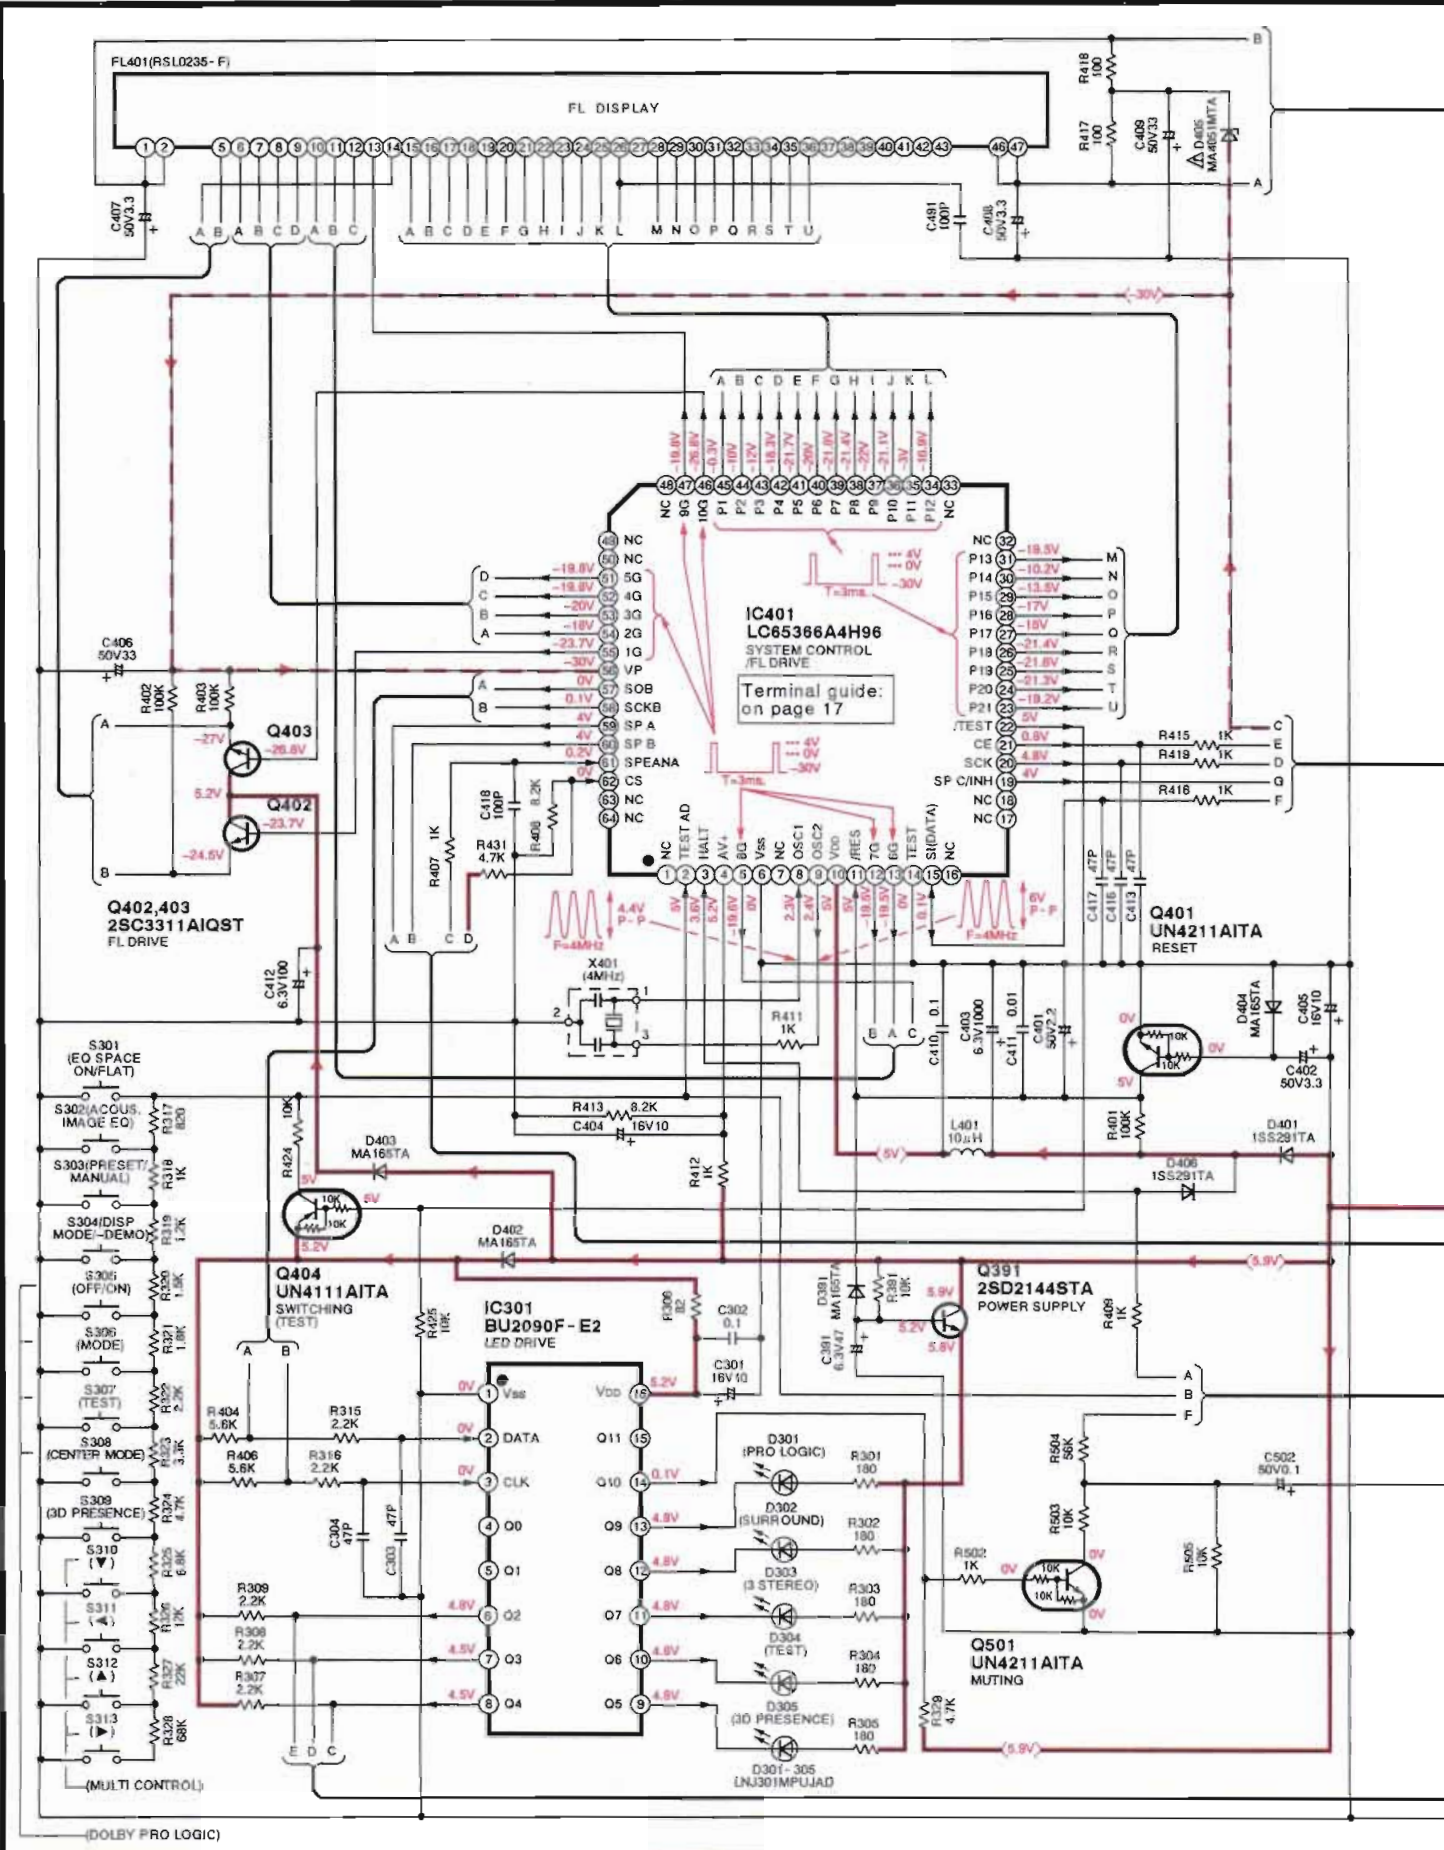

→ : Positive voltage line → : Negative voltage line → : Source signal line (L-ch)

B IN/OUT TERMINAL CIRCUIT (P.C.Board: on page 15)

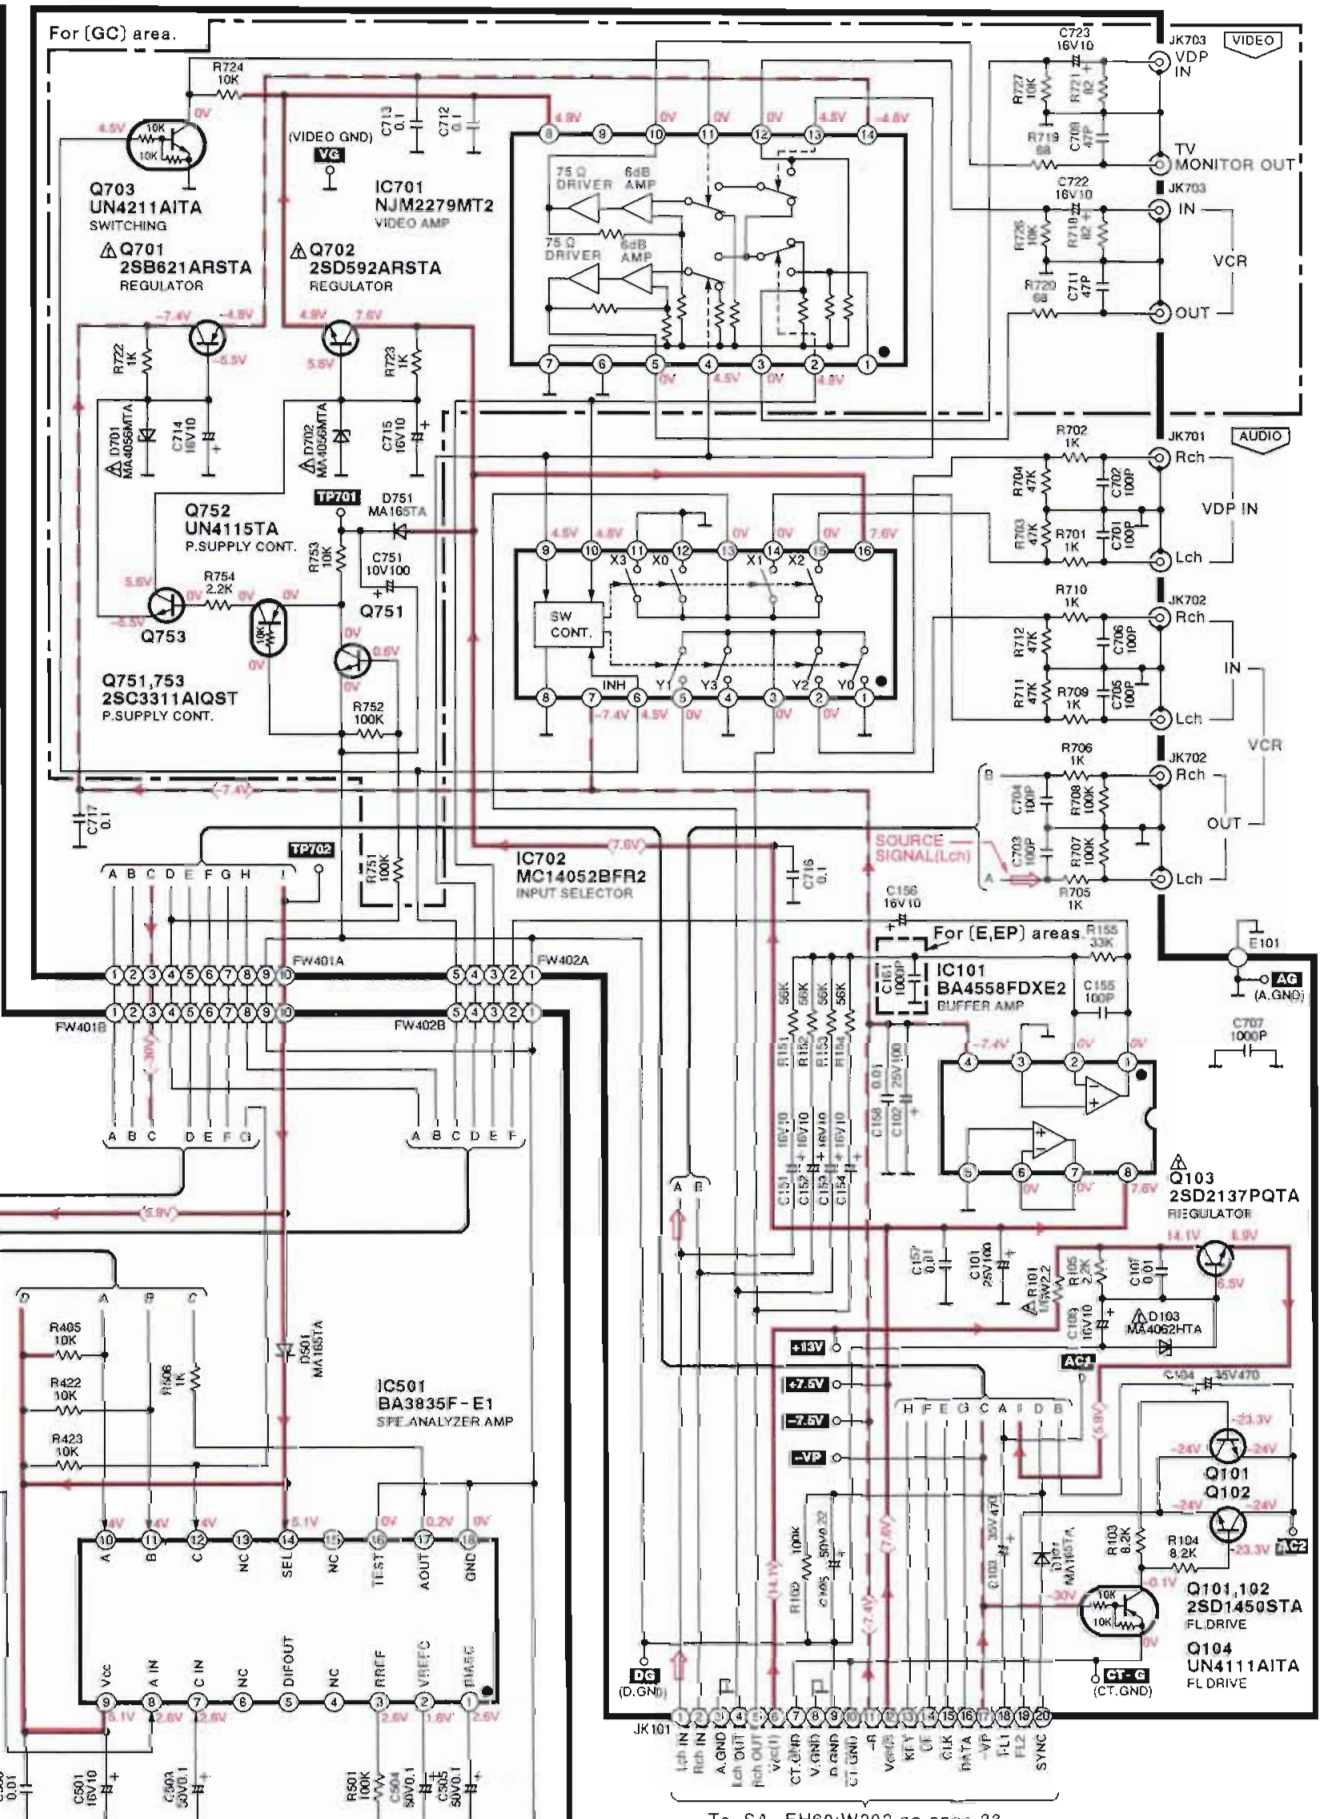


To SA - EH60:W202 on page 33

Printed Circuit Board Diagram


This circuit board diagram may be modified at any time with the development of new technology.

A FL P.C.B.

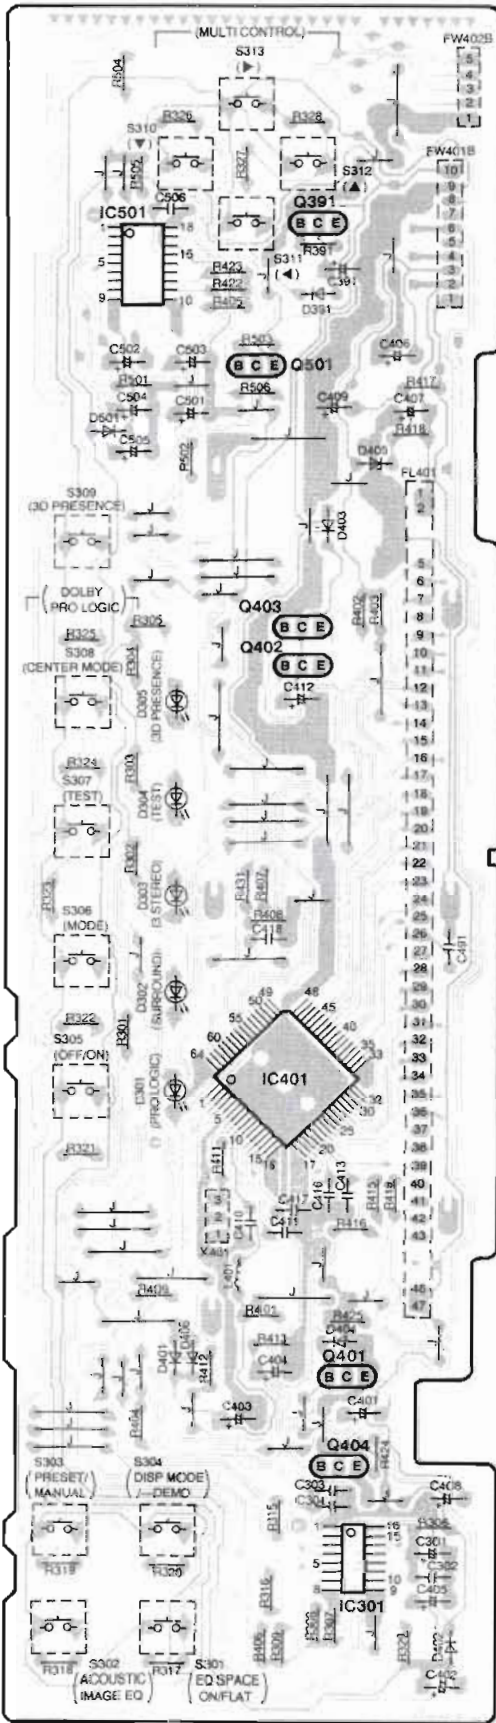


(REP2474B-M...[GC])
(REP2474C-M...[E,EP])

B IN/OUT TERMINAL P.C.B.

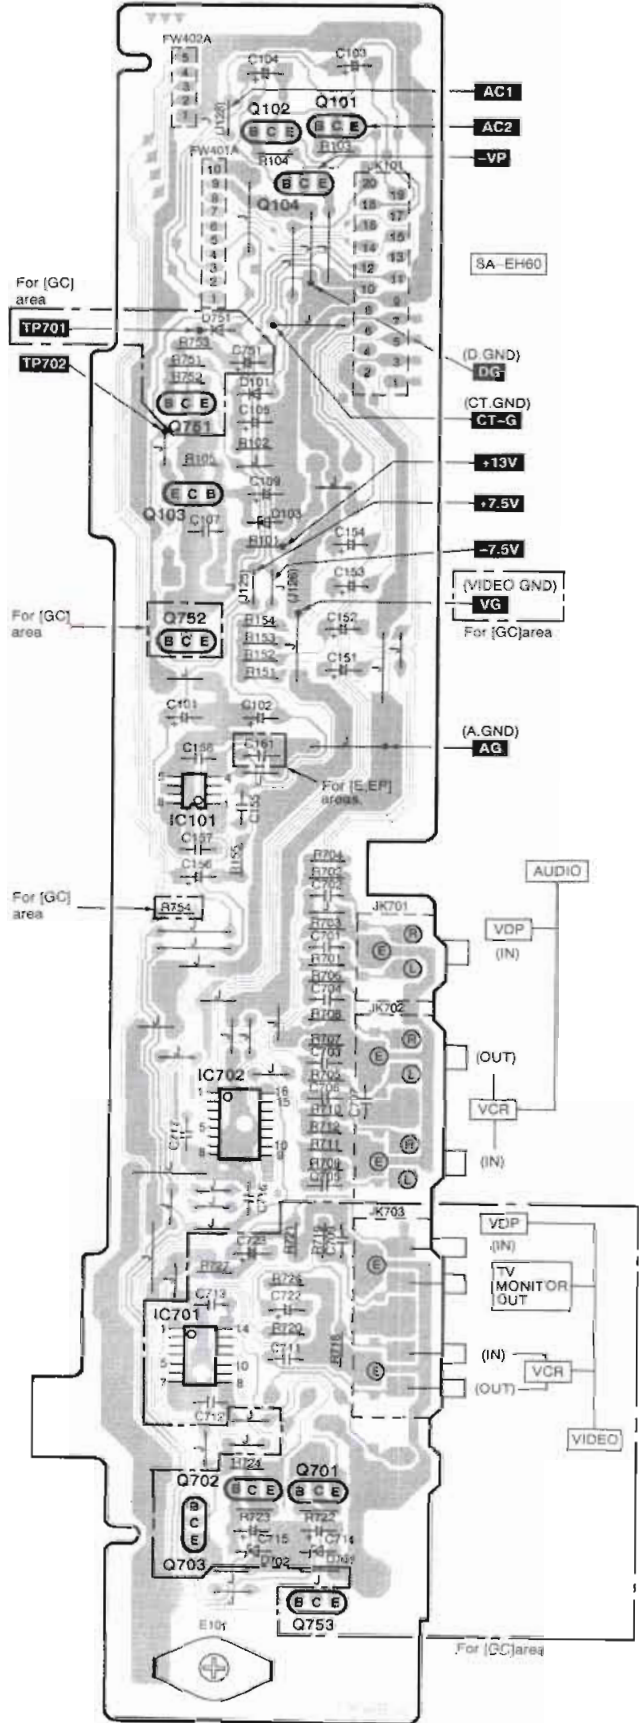


(REP2474B-M...[GC])
(REP2474C-M...[E,EP])

■ Type Illustration of IC's, Transistors and Diodes

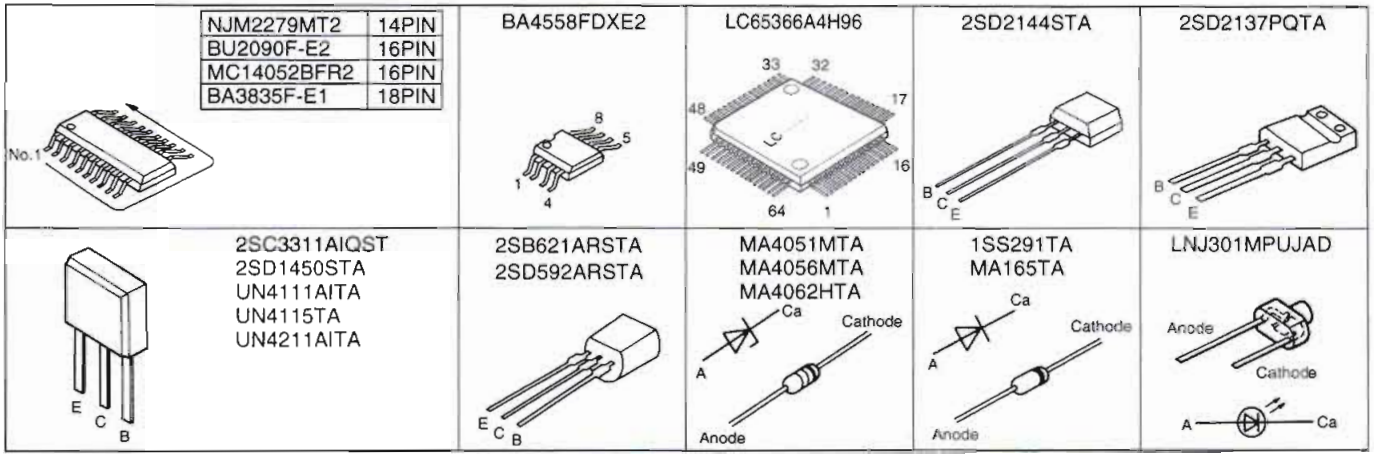

■ Wiring Connection Diagram

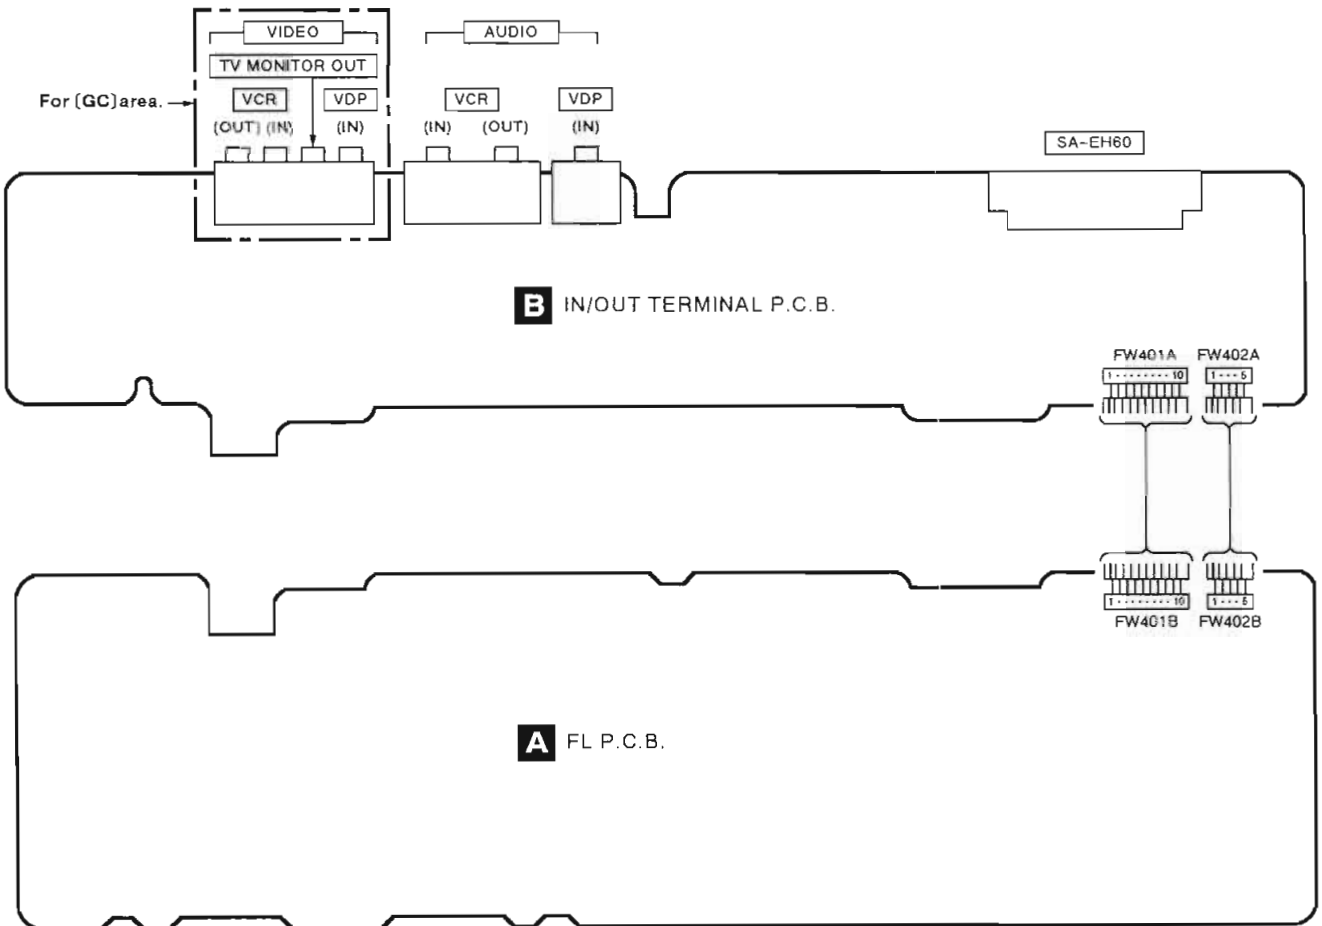

Terminal Function of IC's


● IC401 (LC65366A4H96) : System Control / FL Drive

Pin No.	Terminal Name	I/O	Function
1	NC	—	No used, open
2	TEST AD	I	TEST mode key signal input
3	HALT	I	Power failure detect signal input
4	AV+	—	Power supply for analog circuit (+5 V)
5	8G	O	Grid signal output
6	VSS	—	GND terminal
7	NC	—	No used, open
8	OSC1	I	Oscillator connected terminal (4 MHz)
9	OSC2	O	
10	VDD	—	Power supply
11	/RES	I	Reset signal input
12, 13	7G, 6G	O	Grid signal output
14	TEST	—	No used, conneted to VSS
15	SI	I/O	Communication data signal input from SA-EH60
16-18	NC	—	No used, open
19	SP C/INH	O	Select terminal for Spectrum analyzer IC output
20	SCK	O	Serial communication signal from SA-EH60 (Clock signal input)

Pin No.	Terminal Name	I/O	Function
21	CE	O	Serial communication signal from SA-EH60 (Chip enable signal input)
22	/TEST	O	Test signal terminal
23-31	P21~P13	O	Segment signal output
32, 33	NC	—	No used, open
34-45	P12~P1	O	Segment signal output
46, 47	10G, 9G	O	Grid signal output
48-50	NC	—	No used, open
51-55	5G~1G	O	Grid signal output
56	VP	—	Negative power supply
57	SOB	O	Serial data signal output
58	SCKB	O	Serial clock signal output
59	SP A	O	Select terminal for Spectrum analyzer IC output
60	SP B	O	
61	SPEANA	I	Analog signal input for spectrum analyzer IC
62	CS	I	Chip select signal input terminal
63, 64	NC	—	No used, open

Block Diagram

For (GC) area.

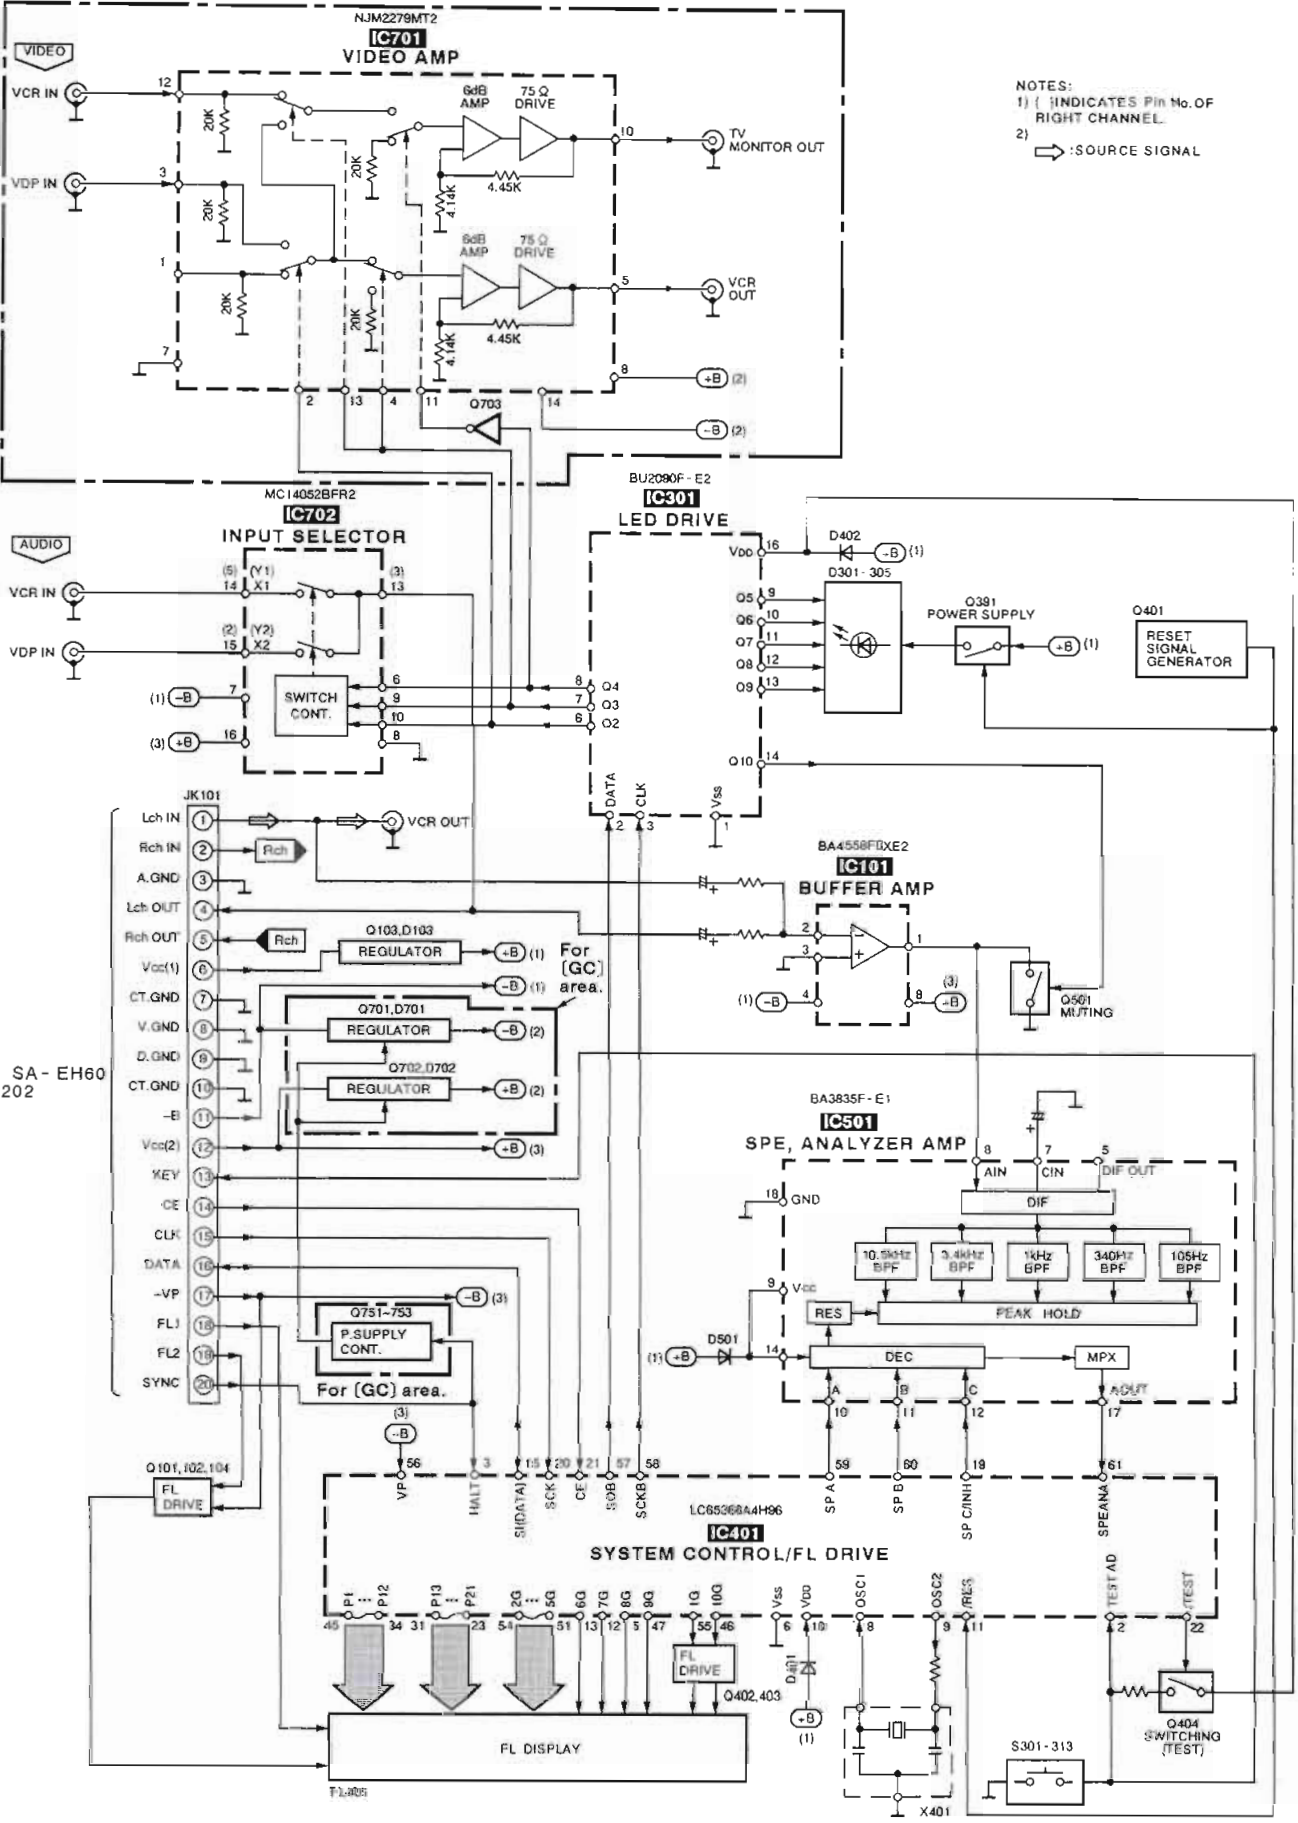

NOTES:
 1) () INDICATES PIN No. OF RIGHT CHANNEL.
 2) → : SOURCE SIGNAL

To SA-EH60

:W202

FL-025

Replacement Parts List (Electrical)

Notes: *Important safety notice:

Components identified by Δ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

*The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)

Parts without these indications can be used for all areas.

*[M] indicates in Remarks columns parts that are supplied by MESA.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUIT(S)		X401	EFOEC4004T4	OSCILLATOR	[M]
IC101	BA4558FDXE2	IC	[M]			DISPLAY TUBE	
IC301	BU2090F-E2	IC	[M]	FL401	RSL0235-F	DISPLAY TUBE	[M]
IC401	LC65366A4H96	IC	[M]			SWITCH(ES)	
IC501	BA3835F-E1	IC	[M]	S301-313	EVQ21405R	SW	[M]
IC701	NJM2279MT2	IC	[M] (GC)			EARTH TERMINAL(S)	
IC702	MC14052BFR2	IC	[M]	E101	SNE1004-2	EARTH TERMINAL	[M]
		TRANSISTOR(S)				JACK(S)	
Q101, 102	2SD1450RTA	TRANSISTOR	[M]	JK101	RJT065K20	SYSTEM	[M]
Q103Δ	2SD2137PQTA	TRANSISTOR	[M]	JK701	SJF3068-7N	VDP IN	[M]
Q104	UN4111	TRANSISTOR	[M]	JK702	SJF3069N	VCR IN/OUT	[M]
Q391	2SD2144S	TRANSISTOR	[M]	JK703	SJF3069-3N	VDP/VCR IN/OUT	[M] (GC)
Q401	UN4211	TRANSISTOR	[M]				
Q402, 403	2SC3311AIRTA	TRANSISTOR	[M]				
Q404	UN4111	TRANSISTOR	[M]				
Q501	UN4211	TRANSISTOR	[M]				
Q701Δ	2SB621ARSTA	TRANSISTOR	[M] (GC)				
Q702Δ	2SD592ARSTA	TRANSISTOR	[M] (GC)				
Q703	UN4211	TRANSISTOR	[M] (GC)				
Q751	2SC3311AIQST	TRANSISTOR	[M] (GC)				
Q752	UN4115TA	TRANSISTOR	[M] (GC)				
Q753	2SC3311AIQST	TRANSISTOR	[M] (GC)				
		DIODE(S)					
D101	MA165	DIODE	[M]				
D103Δ	MA4062-II	DIODE	[M]				
D301-305	LNJ301MPUJAD	DIODE	[M]				
D391	MA165	DIODE	[M]				
D401	1SS291TA	DIODE	[M]				
D402-404	MA165	DIODE	[M]				
D405Δ	MA4051MTA	DIODE	[M]				
D406	1SS291TA	DIODE	[M]				
D501	MA165	DIODE	[M]				
D701, 702Δ	MA4056MTA	DIODE	[M] (GC)				
D751	MA165TA	DIODE	[M] (GC)				
		COIL(S)					
L401	RLQA100JT-Y	COIL	[M]				
		OSCILLATOR(S)					

Resistors and Capacitors

Notes : * Capacity values are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
 * Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM) , 1M=1,000k(OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
		RESISTORS						
R101△	ERQ16NKW2R2E	1/5W 2.2 [M]	R705, 706	ERDS2TJ102	1/4W 1K [M]	C709, 711	ECBT1H470J5	50V 47P [M] (GC)
R102	ERDS2TJ104	1/4W 100K [M]	R707, 708	ERDS2TJ104	1/4W 100K [M]	C712, 713	ECBT1H104ZF5	50V 0.1U [M] (GC)
R103, 104	ERDS2TJ822	1/4W 8.2K [M]	R709, 710	ERDS2TJ102	1/4W 1K [M]	C714, 715	RCE1CKA100BG	16V 10U [M] (GC)
R105	ERDS2TJ222	1/4W 2.2K [M]	R711, 712	ERDS2TJ473	1/4W 47K [M]	C716, 717	ECBT1H104ZF5	50V 0.1U [M]
R151-154	ERDS2TJ563	1/4W 56K [M]	R718	ERDS2TJ820T	1/4W 82 [M] (GC)	C722, 723	RCE1CKA100BG	16V 10U [M] (GC)
R155	ERDS2TJ333	1/4W 33K [M]	R719, 720	ERDS2TJ680T	1/4W 68 [M] (GC)	C751	RCE1AKA101BG	10V 100U [M] (GC)
R301-305	ERDS2TJ181T	1/4W 180 [M]	R721	ERDS2TJ820T	1/4W 82 [M] (GC)			
R306	ERDS2TJ820	1/4W 82 [M]	R722, 723	ERDS2TJ102T	1/4W 1K [M] (GC)			
R307-309	ERDS2TJ222	1/4W 2.2K [M]	R724	ERDS2TJ103T	1/4W 10K [M] (GC)			
R315, 316	ERDS2TJ222	1/4W 2.2K [M]	R726, 727	ERDS2TJ103T	1/4W 10K [M] (GC)			
R317	ERDS2TJ821	1/4W 820 [M]	R751, 752	ERDS2TJ104T	1/4W 100K [M] (GC)			
R318	ERDS2TJ102	1/4W 1K [M]	R753	ERDS2TJ103T	1/4W 10K [M] (GC)			
R319	ERDS2TJ122	1/4W 1.2K [M]	R754	ERDS2TJ222T	1/4W 2.2K [M] (GC)			
R320	ERDS2TJ152	1/4W 1.5K [M]						
R321	ERDS2TJ182	1/4W 1.8K [M]			CAPACITORS			
R322	ERDS2TJ222	1/4W 2.2K [M]	C101, 102	ECA1EM101B	25V 100U [M]			
R323	ERDS2TJ332	1/4W 3.3K [M]	C103, 104	RCE1VM471BV	35V 470U [M]			
R324	ERDS2TJ472	1/4W 4.7K [M]	C105	ECEA1HKA22B	50V 0.22U [M]			
R325	ERDS2TJ682T	1/4W 6.8K [M]	C107	ECBT1E103ZF	25V 0.01U [M]			
R326	ERDS2TJ123	1/4W 12K [M]	C109	RCE1CKA100BG	16V 10U [M]			
R327	ERDS2TJ223	1/4W 22K [M]	C151-154	RCE1CKA100BG	16V 10U [M]			
R328	ERDS2TJ683	1/4W 68K [M]	C155	ECBT1H101KB5	50V 100P [M]			
R329	ERDS2TJ472	1/4W 4.7K [M]	C156	RCE1CKA100BG	16V 10U [M]			
R391	ERDS2TJ103	1/4W 10K [M]	C157, 158	ECBT1E103ZF	25V 0.01U [M]			
R401-403	ERDS2TJ104	1/4W 100K [M]	C161	ECBT1H102KB5	50V 1000P [M] (E, EP)			
R404	ERDS2TJ562	1/4W 5.6K [M]	C301	RCE1CKA100BG	16V 10U [M]			
R405	ERDS2TJ103	1/4W 10K [M]	C302	ECBT1H104ZF5	50V 0.1U [M]			
R406	ERDS2TJ562	1/4W 5.6K [M]	C303, 304	ECBT1H470J5	50V 47P [M]			
R407	ERDS2TJ102	1/4W 1K [M]	C391	RCE0JKA470BG	6.3V 47U [M]			
R408	ERDS2TJ822	1/4W 8.2K [M]	C401	ECEA1HKA2R2B	50V 2.2U [M]			
R409	ERDS2TJ102	1/4W 1K [M]	C402	RCE1HKA3R3BG	50V 3.3U [M]			
R411, 412	ERDS2TJ102	1/4W 1K [M]	C403	RCE0JU102BV	6.3V 1000U [M]			
R413	ERDS2TJ822	1/4W 8.2K [M]	C404, 405	RCE1CKA100BG	16V 10U [M]			
R415, 416	ERDS2TJ102	1/4W 1K [M]	C406	ECEA1HKA330B	50V 33U [M]			
R417, 418	ERDS2TJ101	1/4W 100 [M]	C407, 408	RCE1HKA3R3BG	50V 3.3U [M]			
R419	ERDS2TJ102	1/4W 1K [M]	C409	ECEA1HKA330B	50V 33U [M]			
R422-425	ERDS2TJ103	1/4W 10K [M]	C410	ECBT1H104ZF5	50V 0.1U [M]			
R431	ERDS2TJ472	1/4W 4.7K [M]	C411	ECBT1E103ZF	25V 0.01U [M]			
R501	ERDS2TJ104	1/4W 100K [M]	C412	ECEA0JKS101B	6.3V 100U [M]			
R502	ERDS2TJ102	1/4W 1K [M]	C413	ECBT1H470J5	50V 47P [M]			
R503	ERDS2TJ103	1/4W 10K [M]	C416, 417	ECBT1H470J5	50V 47P [M]			
R504	ERDS2TJ563	1/4W 56K [M]	C418	ECBT1H101KB5	50V 100P [M]			
R505	ERDS2TJ103	1/4W 10K [M]	C491	ECBT1H101KB5	50V 100P [M]			
R506	ERDS2TJ102	1/4W 1K [M]	C501	RCE1CKA100BG	16V 10U [M]			
R701, 702	ERDS2TJ102	1/4W 1K [M]	C502-505	ECEA1HKA0R1B	50V 0.1U [M]			
R703, 704	ERDS2TJ473	1/4W 47K [M]	C506	ECBT1E103ZF	25V 0.01U [M]			
			C701-706	ECBT1H101KB5	50V 100P [M]			
			C707	ECBT1H102KB5	50V 1000P [M]			

■ Cabinet Parts Location

