

# Service Manual

**Technics**  
by Panasonic

**PLAYER UNIT**

**Technics**  
by Panasonic



## **⚠ WARNING**

This service literature is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service literature by anyone else could result in serious injury or death.

MODEL **SL-1200**

## **SPECIFICATIONS**

### **TURNTABLE SECTION**

Type :	Direct drive player system
Turntable Platter :	Aluminium die-cast; 33 cm (13") diameter 310 kg-cm <sup>2</sup> (105.9 lb-in <sup>2</sup> ) inertial moment, 1.75 kg (3.86 lb) weight
Turntable Speeds :	33-1/3 and 45 r.p.m.
Motor :	20 poles (rotor) -15 poles (stator) ultra low-speed DC brushless motor
Power Supply :	AC120V, 60Hz
Power Consumption :	4W
Speed Change Method :	Electronical change
Variable Pitch Control :	Individual adjustment by variable resistor, $\pm 5\%$ adjustment range
Wow and Flutter :	Less than 0.03% WRMS
Rumble :	Better than -65 dB (DIN A), -70 dB (DIN B)
Build-up Time :	Within 1/2 rotation at 33-1/3 r.p.m.
Dimensions :	(W) 45.3 cm $\times$ (D) 35.3 cm $\times$ (H) 18.0 cm (17-13/16" $\times$ 13-57/64" $\times$ 7-3/32")
Weight :	10 kg (22.1 lb) with dust cover
Player Case :	Aluminium die-cast with audio insulated legs

### **TO NEARM SECTION**

Type :	EPA-120 Directly reading stylus pressure, static-balanced type, with pipe arm universal head shell, anti-skating force device.
Effective Length :	220 mm (8-21/32")
Overhang :	14 mm (35/64")
Tracking Error Angle :	Within $\pm 2.0^\circ$
Stylus Pressure :	0-4 g

(Specifications, design and other details are subject to change, without prior notice, at any time in order to improve performance.)


**MATSUSHITA ELECTRIC CORP. OF AMERICA**  
**MATSUSHITA ELECTRIC OF HAWAII, INC.**  
**MATSUSHITA ELECTRIC OF CANADA LTD.**

Pan Am Bldg., 200 Park Ave., New York, N.Y. 10017  
320 Waiakamilo Road, Honolulu, Hawaii 96817  
40 Ronson Drive, Rexdale, Ont.

ORDER NO. SD-381

# SCHEMATIC DIAGRAM


# MODEL SL-1200

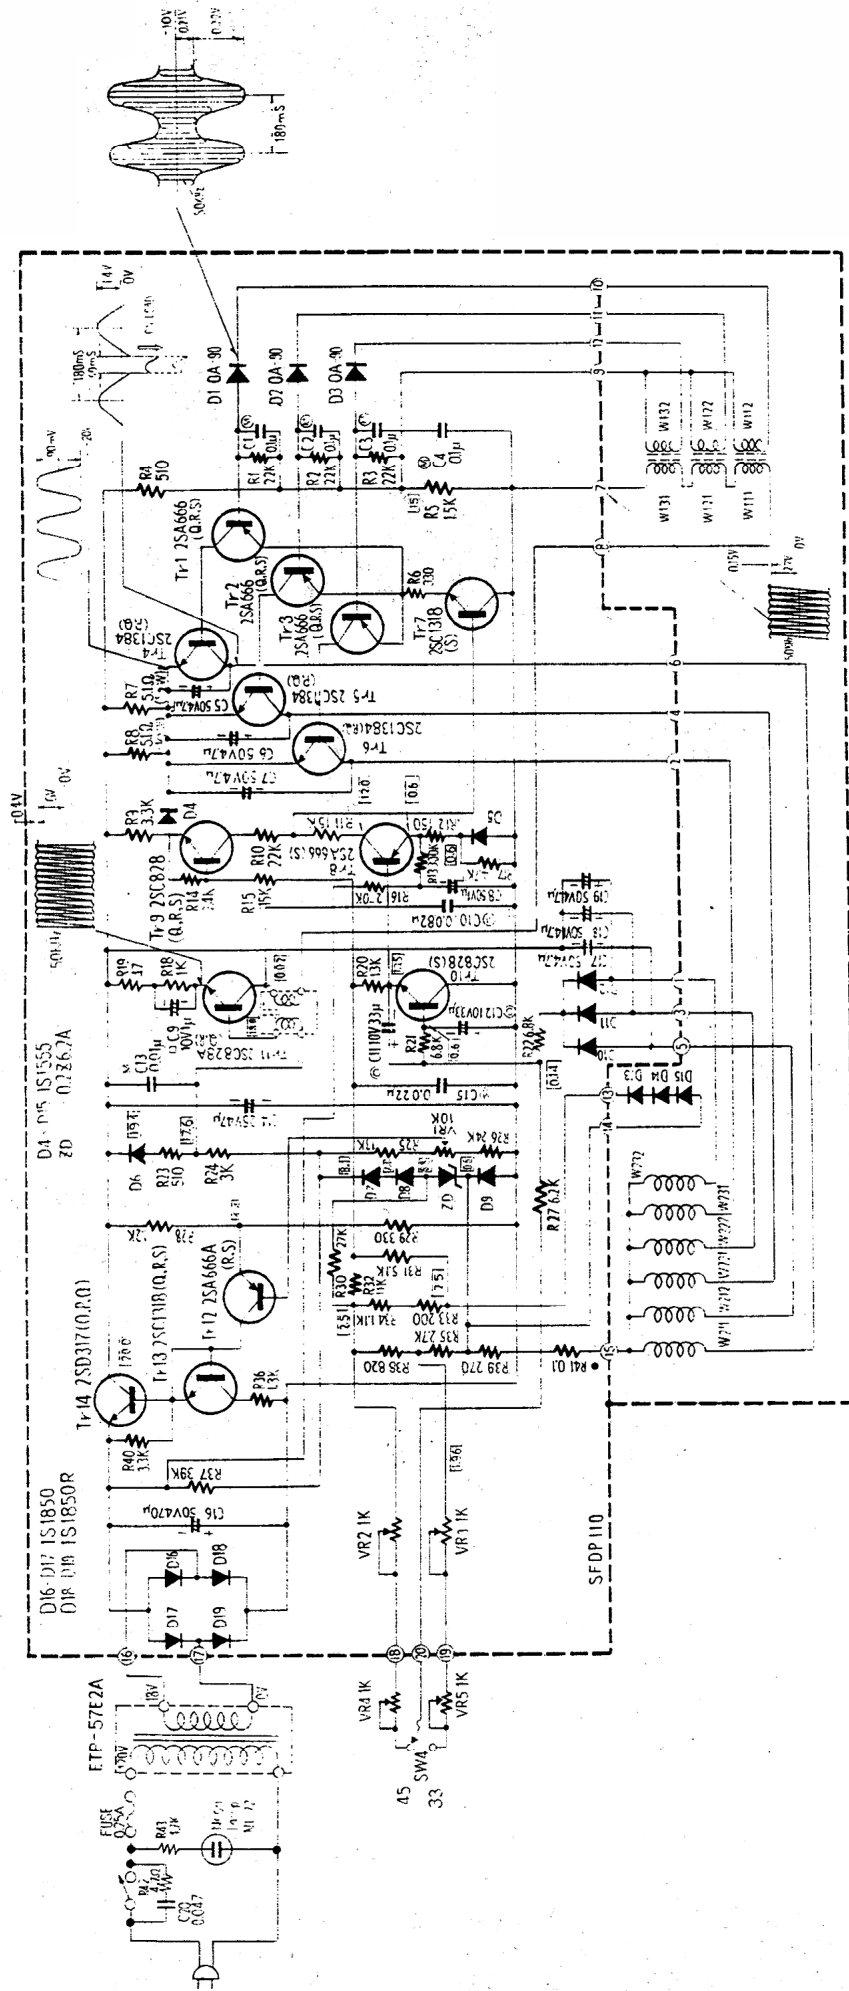

□は33rpm時の電圧値

# CIRCUIT BOARD

# MODEL SL-1200

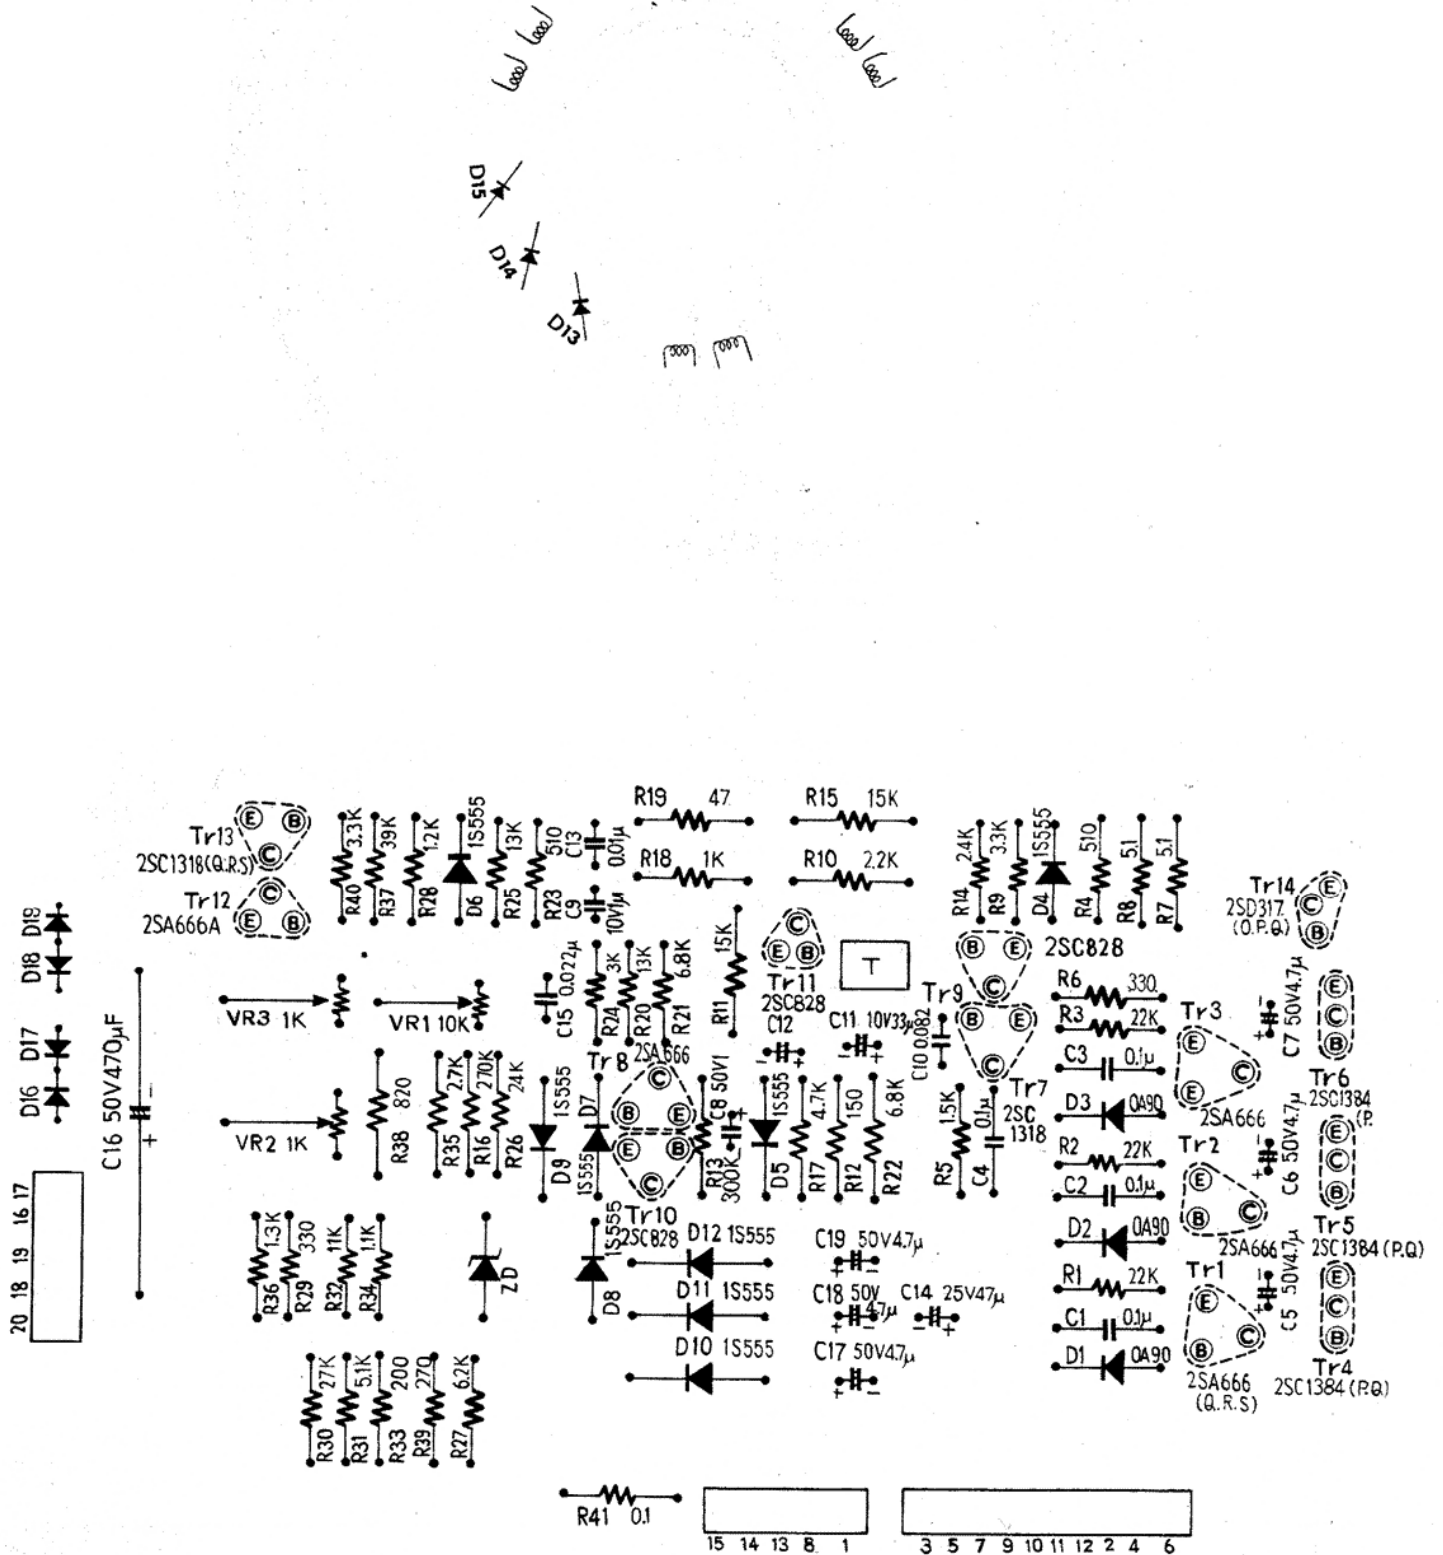


# TROUBLE SHOOTING GUIDE

\* Except when checking voltage, disconnect the power cord before repair without fail.


TROUBLE	CAUSE	REMEDY
<p>Turntable Speed</p> <p>A. Switching on does not cause turntable to rotate.</p>	<p>Remove back cover and, using DC voltmeter, check printed base voltage:</p> <ol style="list-style-type: none"> <li>1. No output of constant-voltage circuit (between Tr13 collector and (7)) is found.               <ol style="list-style-type: none"> <li>(1) No output on secondary of transformer.                   <ul style="list-style-type: none"> <li>• Cord disconnected.</li> <li>• Soldered improperly.</li> <li>• Fuse disconnected.</li> <li>• Power transformer defective.</li> </ul> </li> <li>(2) Output found on secondary of transformer.                   <ul style="list-style-type: none"> <li>• Constant-voltage circuit parts (ZD1, D6 Tr11, Tr12, Tr13) defective.</li> </ul> </li> </ol> </li> <li>2. Output of constant-voltage circuit is not 20V.               <ul style="list-style-type: none"> <li>• VR1 defective.</li> <li>• Diode D7, D8, D9, ZD defective.</li> </ul> </li> <li>3. Output of constant-voltage circuit is 20V               <ul style="list-style-type: none"> <li>• 3-phase switching circuit (Tr1 ~ Tr6), oscillator circuit (Tr14) defective.</li> <li>• Tr10 defective.</li> </ul> </li> <li>4. Power switch is not ON.               <ul style="list-style-type: none"> <li>• Micro switch defective.</li> </ul> </li> <li>5. Speed selector switch defective.               <ul style="list-style-type: none"> <li>• Contact faulty</li> <li>• Soldered improperly.</li> </ul> </li> </ol>	<ul style="list-style-type: none"> <li>• Replace cord.</li> <li>• Solder securely.</li> <li>• Replace fuse.</li> <li>• Replace power transformer.</li> <li>• Replace printed base assembly.</li> <li>• Replace and adjust semi-fixed resistor VR1 on printed base, so that output of constant-voltage circuit (between TR13 collector and (7)) becomes 20V.</li> <li>• Replace printed base assembly.</li> <li>• Replace printed base assembly.</li> <li>• Replace printed base assembly.</li> <li>• Adjust switch mechanism.</li> <li>• Replace micro switch.</li> <li>• Replace speed selector switch.</li> <li>• Solder securely.</li> </ul>
<p>B. Turntable speed too fast</p>	<ul style="list-style-type: none"> <li>• Constant-voltage output is not 20V.</li> <li>• D7, D8, D9, ZD defective.</li> <li>• Speed maladjusted</li> <li>• Diode D10, D11, D12 short.</li> </ul>	<ul style="list-style-type: none"> <li>• Make it become 20V with semifixed resistor VR1.</li> <li>• Replace printed base assembly.</li> <li>• Adjust semi-fixed resistor VR2 or VR3 for rough adjustment.</li> <li>• Replace printed base assembly. (D10, D11, and D12 should be equal in characteristic.)</li> </ul>
<p>C. Turntable speed too slow.</p>	<ul style="list-style-type: none"> <li>• Constant-voltage output is not 20V.</li> <li>• D7, D8, D9, ZD defective.</li> <li>• Speed unadjusted.</li> </ul>	<ul style="list-style-type: none"> <li>• Make it become 20V with semi-fixed resistor VR1.</li> <li>• Replace printed wiring assembly.</li> <li>• Adjust semi-fixed resistor VR2 or VR3 for rough adjustment.</li> </ul>
<p>D. Turntable speed varies too much.</p>	<ul style="list-style-type: none"> <li>• Trouble in 3-phase switching circuit.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace printed base assembly.</li> </ul>
<p>E. Turntable, after stopped by hand, will not turn or starts turning but will stop soon.</p>	<ul style="list-style-type: none"> <li>• 3-phase switching circuit defective.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace printed base assembly.</li> </ul>
<p>F. Operative at only one of two speeds (33 1/3 rpm, 45 rpm)</p>	<ul style="list-style-type: none"> <li>• Selector switch defective.</li> <li>• Lead disconnected or unsoldered.</li> <li>• Contact of VR2, VR3 insufficient.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace selector switch.</li> <li>• Replace lead, or solder securely.</li> <li>• Replace printed base assembly.</li> </ul>
<p>Noise</p> <p>Offensive noise is heard.</p>	<ul style="list-style-type: none"> <li>• Power transformer makes loud noise of vibration.</li> <li>• Broken part of rotor magnet or iron chips attracted by magnet and rubbed by motor case.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace power transformer.</li> <li>• Replace motor.</li> </ul>

# COMPONENT PACKING PROCEDURE

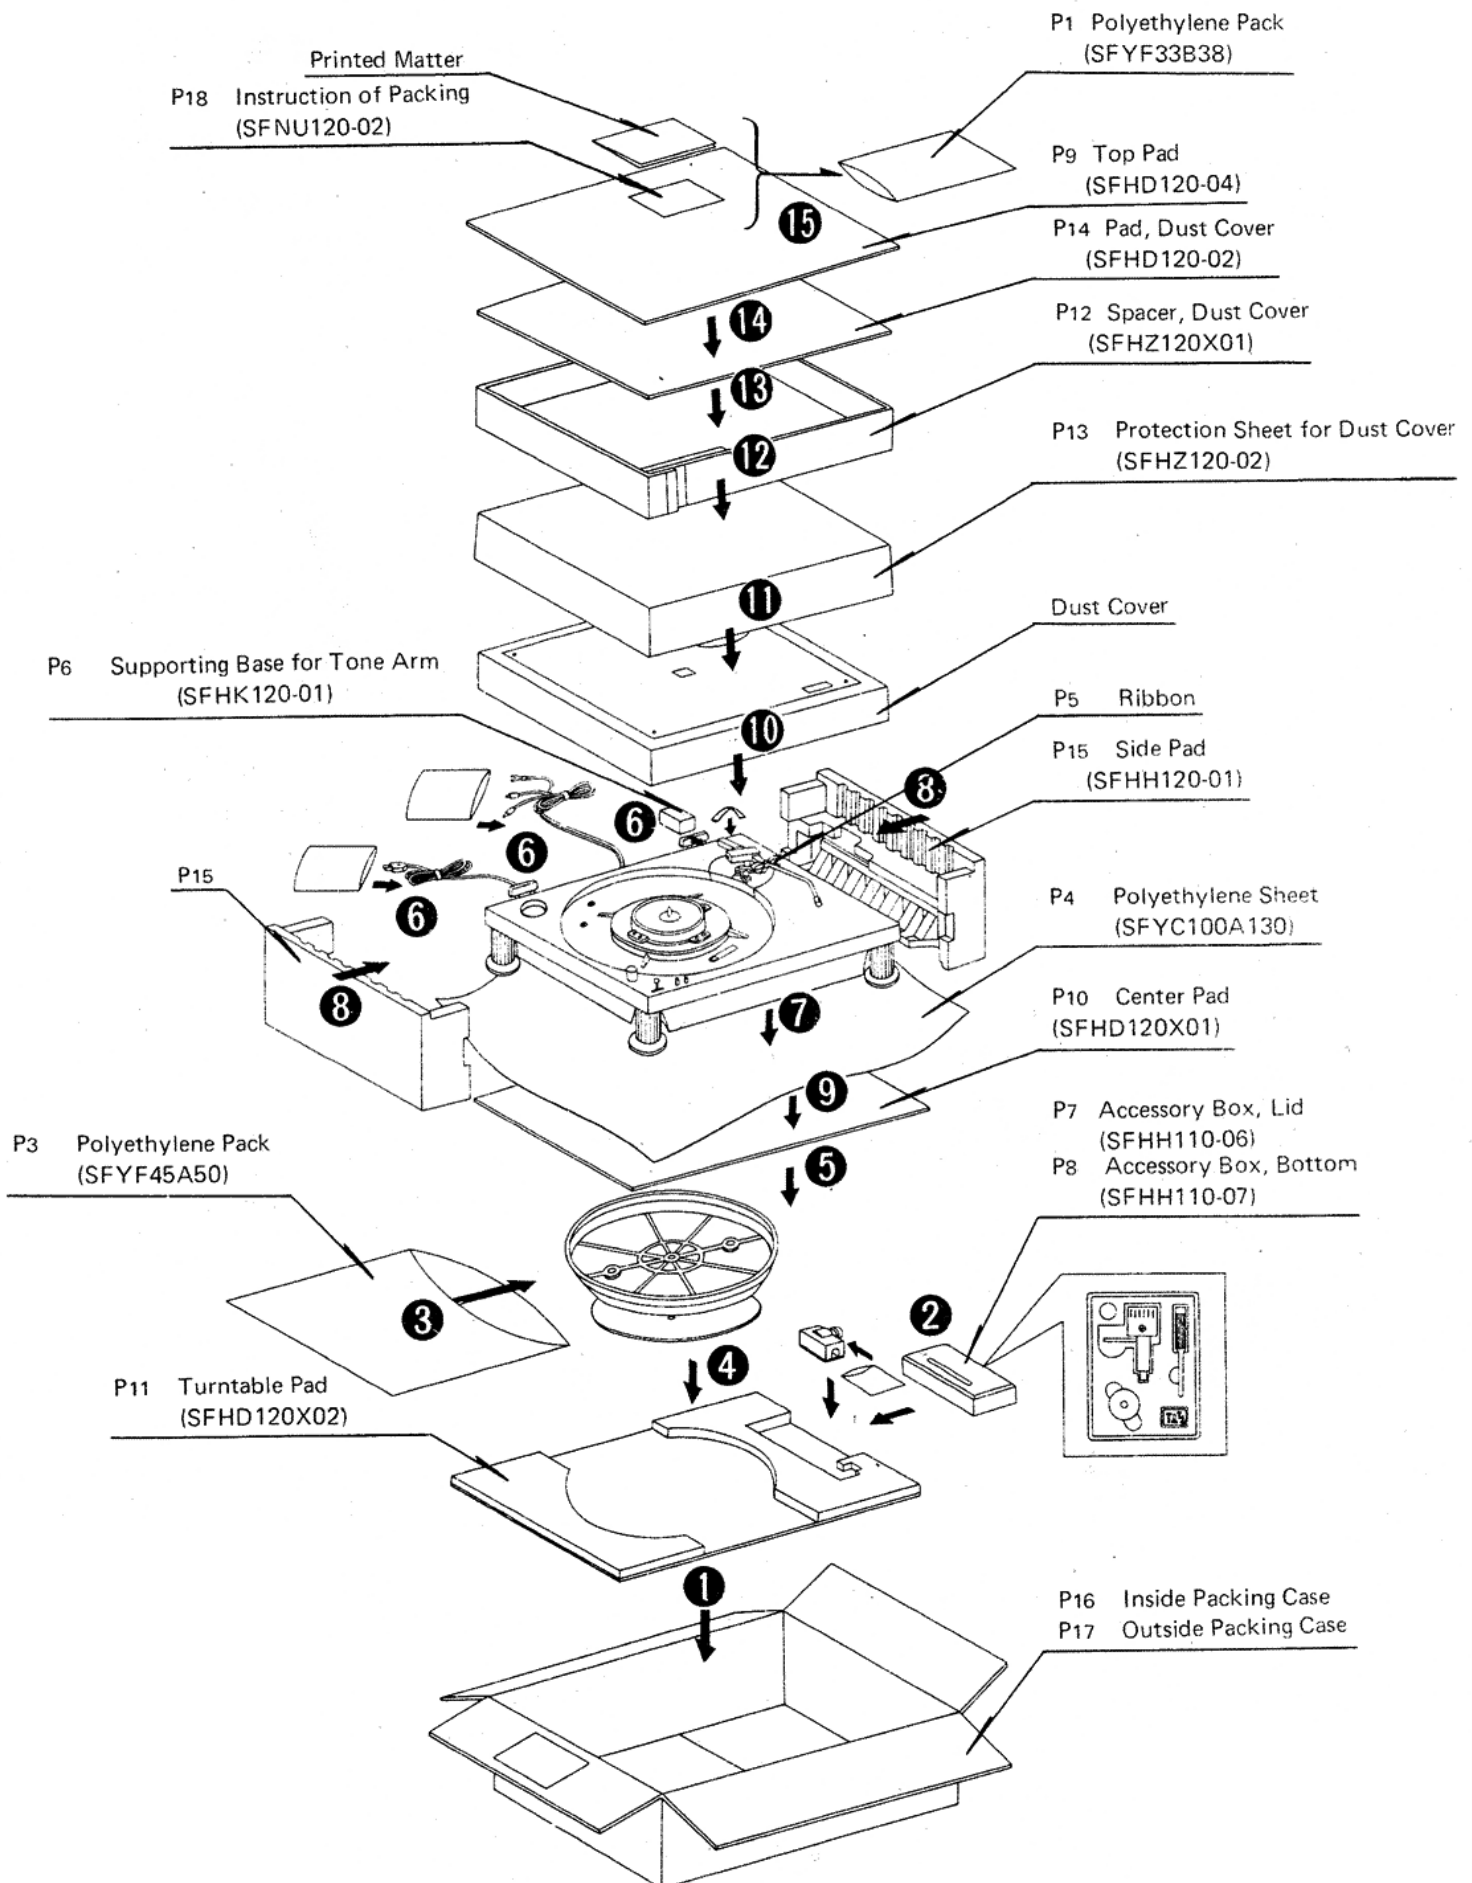

# EXPLODED VIEW OF DIRECT DRIVE PLAYER

Model SL-1200

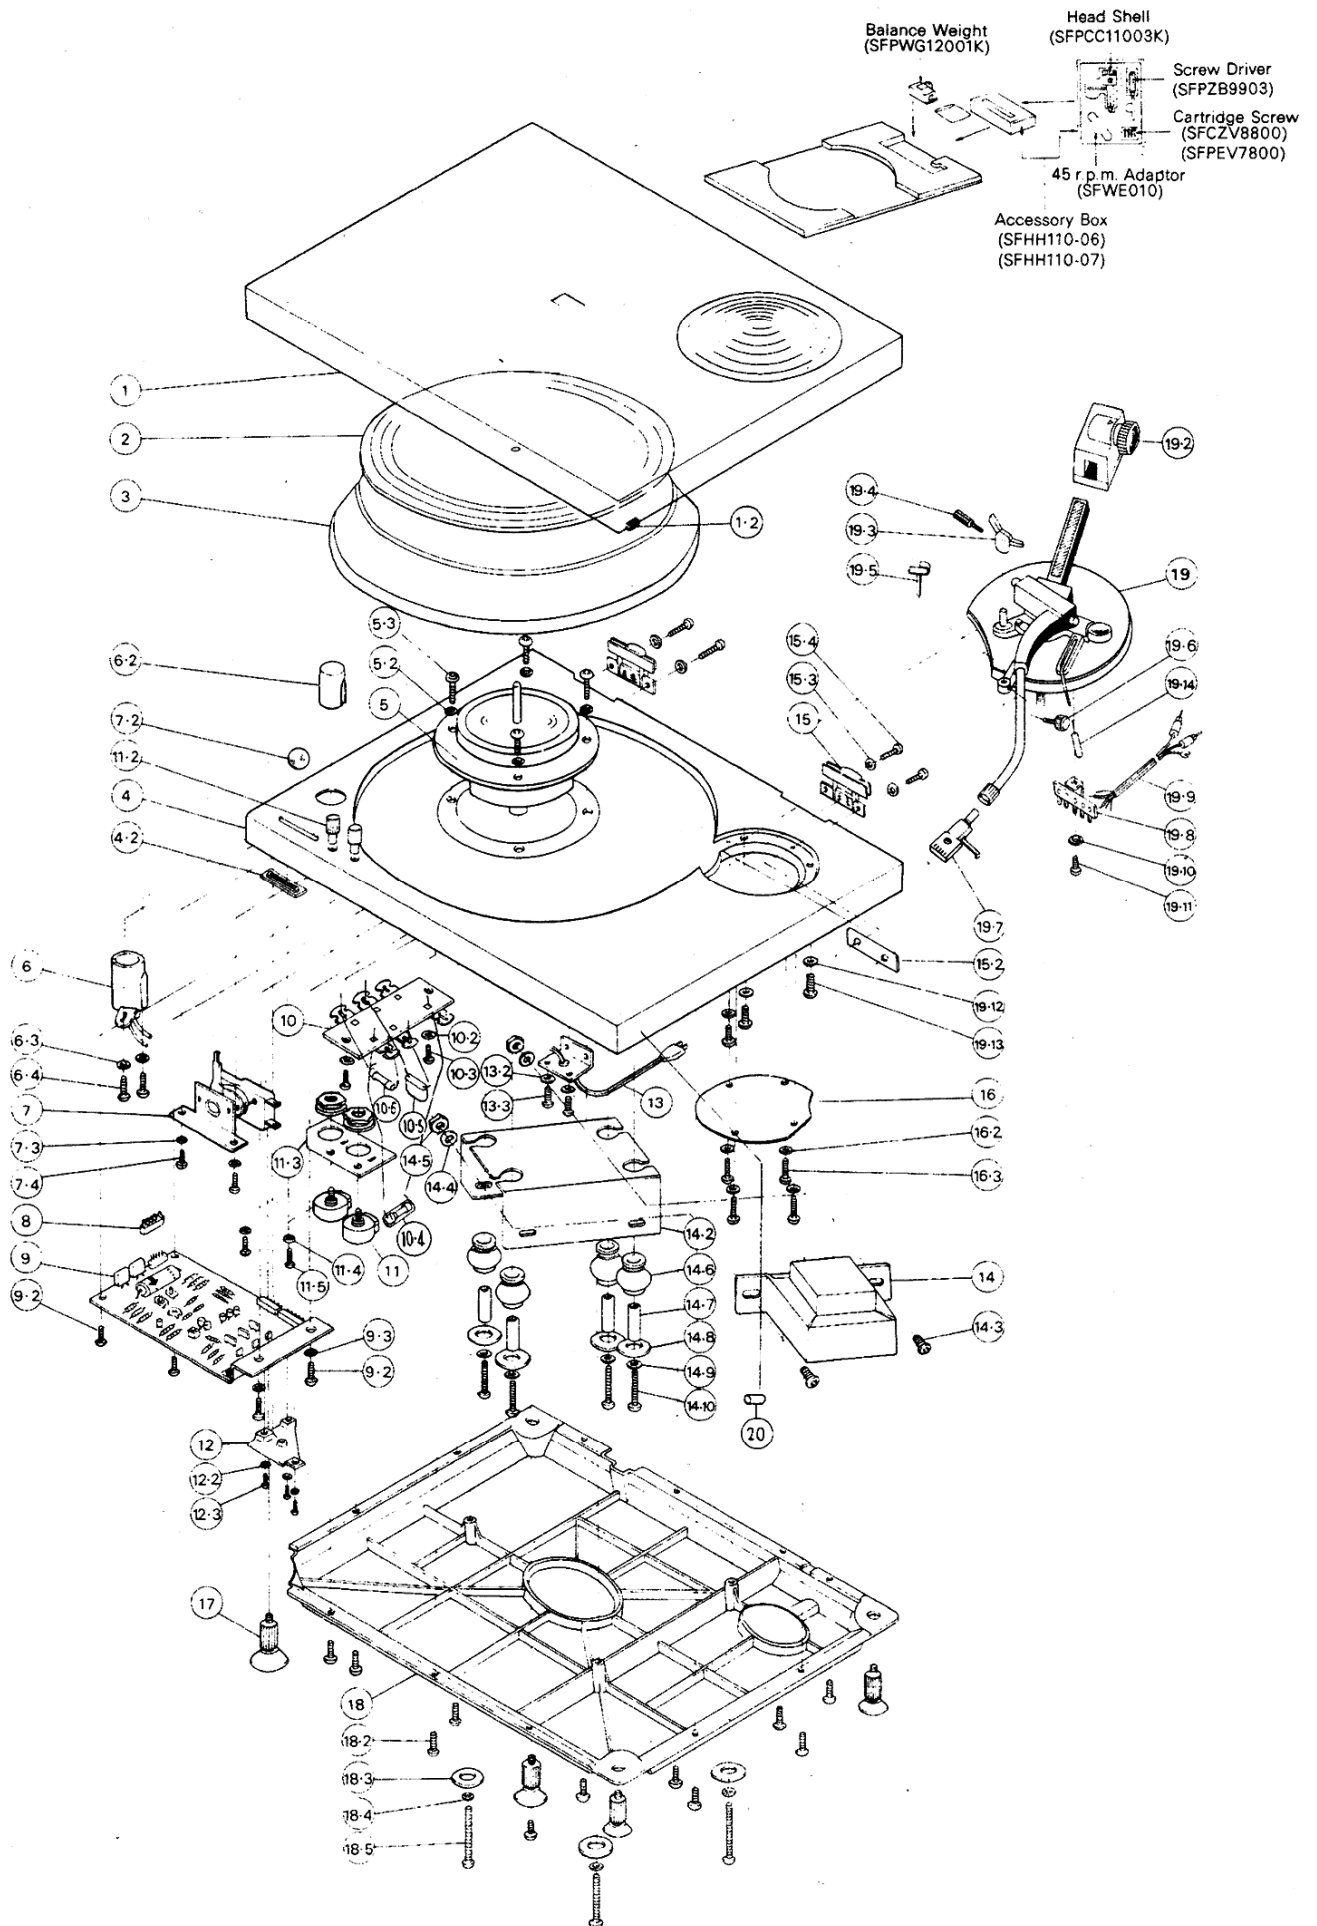

Ref. No.	Part No.	Description	Per Set (Pcs.)	Ref. No.	Part No.	Description	Per Set (Pcs.)
1	SFAD120E01A	Dust Cover Ass'y	1	18-2	XSB3-8FVS	Screw	11
1-2	SFGC040L1	Cushion, Dust Cover	2	18-3	SFXW120-01	Washer	3
2	SFTG120-01	Turntable Mat	1	18-4	XWA3BF	Spring Washer	3
3	SFTE120-01A	Turntable Platter Ass'y	1	18-5	XSN3--50FVS	Screw	3
4	SFAC120M01A	Player Case	1	19	SFPZ120X01A	Tone Arm Base Ass'y	1
4-2	SFGZ120-01	Rubber	1	19-2	SFP-WG12001K	Balance Weight	1
5	MJL-9A-1	Motor Ass'y	1	19-3	SFP-RT12001	Arm Lift	1
5-3	XYN4+C15FUS	Screw (for Motor)	4	19-4	SFP-EV12005	Screw, Arm Lift	1
6	SFUM120-01A	Strobo Illuminator	1	19-5	SFP-RT12002	Arm Rest	1
6-2	SFKZ120-01	Strobo Illuminator Holder	1	19-6	SFP-EV12001	Screw, Arm Rest	1
6-3	XWA3BF	Spring Washer (for Strobo Illuminator)	2	19-7	SFP-CC11003K	Head Shell	1
6-4	XSN3--6FUS	Screw (for Strobo Illuminator)	2	19-8	SFER5B	PU Terminal Strip Ass'y	1
7	ESL-18201U	Main Switch Ass'y	1	19-9	SFDH120-01	PU Cords	1
7-2	SFKT120-02	Knob, Main Switch Ass'y	1	19-10	XWA3BF	Spring Washer	1
7-3	XWA3BF	Spring Washer (for Main Switch Ass'y)	2	19-11	XSN3+5FUS	Screw	1
7-4	XSN3+6FUS	Screw (for Main Switch Ass'y)	2	19-12	XWA4BF	Spring Washer	3
8	SFDJ12805S	Pin Connector	1	19-13	XSN4-8FUS	Screw	3
9	SFDP120M01A	Printed Wiring Base Ass'y	1	19-14	SFP-AB12002	Knob, Arm Lift	1
9-2	XSN3--6FUS	Screw (for Printed Wiring Base Ass'y)	4	20	SFGZ120-02	Attached to Player Case	2
9-3	XWA3BF	Spring Washer (for Printed Wiring Base Ass'y)	2	<b>ACCESSORY PARTS</b>			
10	SFER010-1E	Terminal Strip Ass'y	1		SFNU120E01	Printed Matter	1
10-2	XWA3BF	Spring Washer (for Terminal Strip Ass'y)	2		SQX7006	Warranty Card	1
10-3	XSN3-6FUS	Screw (for Terminal Strip Ass'y)	2		SFWK040L	Washing Cloth	1
10-4	XBAS2B0201	Fuse	1		SFW0010	Special Oil	1
10-5	ECQ6332HZ	Capacitor	1		SFWE010	45r.p.m Adaptor	1
10-6	ERG2PSK472	Resistor	1		SFP-ZB9903	Screw Driver	1
11	EVHB8A253B13	Variable Resistor	2		XSN4-12FUBS	Clamp Screw, Trans.	2
11-2	SFKT120-01	Variable Pitch Control Knob	2		XSN3-6FUBS	Clamp Screw, Rotor	4
11-3	SFUP120-02	Variable Resistor Mounting Plate	1		RQX9028A	Servicenters List	1
11-4	XWA3BF	Spring Washer	2	<b>PACKING MATERIALS</b>			
11-5	XSN3-6FUS	Screw	2	P1	SFYF33B38	Polyethylene Pack, Printed Matter	1
12	SFUP120-03	Supporting Plate	1	P2	SFRPB0006	Polyethylene Pack, Weight, Head Shell Screws, Adaptor	4
12-2	XWA5BF	Spring Washer	3	P3	SFYF45A50	Polyethylene Pack, Turntable	1
12-3	XSN3-6FVS	Screw	3	P4	SFYC100A130	Polyethylene Sheet, Player Unit	1
13	SFUP120M06A STP-1	AC Terminal Strip Ass'y	1	P5	SFYR13C400Y	Ribbon	1
13-2	XWA4BF	Spring Washer	2	P6	SFHK120-01	Supporting Base for Tone Arm	1
13-3	XSN4-6FUS	Screw	2	P7	SFHH110-06	Accessory Box, Lid	1
14	ETP57E14A	Power Transformer	1	P8	SFHH110-07	Accessory Box, Bottom	1
14-2	SFUP120-04	Transformer Mounting Board	1	P9	SFHD120-04	Top Pad	1
14-3	XSN4--8FUS	Screw	2	P10	SFHD120X01	Center Pad	1
14-4	XWA4BF	Spring Washer	2	P11	SFHD120X02	Turntable Pad	1
14-5	XNG4HFUS	Nut	2	P12	SFHZ120X01	Spacer, Dust Cover	1
14-6	SFGC010-1	Cushion Rubber	4	P13	SFHZ120-02	Protection Sheet, Dust Cover	1
14-7	SFXO850-1	Spacer	4	P14	SFHD120-02	Pad, Dust Cover	1
14-8	SFXW750-1	Washer	4	P15	SFHH120-01	Side Pad	2
14-9	XWA3BF	Spring Washer	4	P16	SFHP120E01	Inside Packing Case	1
14-10	XSN3--25FUS	Screw	4	P17	SFHP120E02	Outside Packing Case	1
15	SFAT120-01E	Hinge Ass'y	2	P18	SFNU120-02	Instruction of Packing	1
15-2	SFUP120-01	Hinge Mounting Plate	2				
15-3	XWA3BF	Spring Washer	4				
15-4	XSN3--10FVS	Screw	4				
16	SFUP120-05	PU Shield Board	1				
16-3	XSN3--25FUS	Screw	4				
17	SFUZ120-01A	Audio-insulated Leg Ass'y	4				
18	SFAU120M01A	Bottom Cover Ass'y	1				

**Technics**  
by Panasonic**STEREO****Technics**  
by Panasonic

# Service Manual

**Supplementary-1**

## MODEL SL-1200

- \* This service manual includes only the changes of the SL-1200 service manual (ORDER NO. SD-381)
- \* This manual should be filed with the service manual for model SL-1200 (ORDER NO. SD-381)

**CHANGES****REPLACEMENT PARTS LIST**

● Addition

○ Deletion

Ref.No.	Change of Part No.		Description	Per Set (Pcs.)	Remarks
	Old Part No.	New Part No.			
19	SFPZ120X01A	EPA120B	Tone arm assembly	1	
19-1	○	SFPKD12001A	Arm base assembly	1	
19-7	SFP-CC11003K	SFPCC13001K	Head shell	1	



# Service Manual

Direct Drive Player System

SL-1200


 Supplement-2

## Supplying Individual Circuit Board Assembly Parts (SFDP120-01A)

Previously, circuit board repair was accomplished by replacing the circuit board assembly as a unit. To reduce repair cost, however, we have now decided to supply individual circuit board parts for repair work.

The listed below are the new repair parts that will be supplied.

A troubleshooting chart is also included to help you diagnose and correct problems.

Notes: When servicing model SL-1200, this service manual and SL-1200 (ORDER NO. SD-381) service manual should be used together.

### ■ REPLACEMENT PARTS LIST

Ref. No.	Part No.	Part Name & Description	Per Set (Pcs.)	Remarks
<b>TRANSISTORS</b>				
TR1,2,3,8,12	<b>2SA666AI-R</b>	Transistors	5	
TR4,5,6	<b>2SC1384A-R</b>	Transistors	3	
TR7,13	2SC1318-R	Transistors	2	
TR9,10,11	<b>2SC1328-T</b>	Transistors	3	
TR14	<b>2SD389A-Q</b>	Transistor	1	
<b>DIODES</b>				
D1,2,3	OA90	Diodes	3	
D4,5,6,7,8,9,10 11,12,13,14,15	SVD1S1555	Diodes	12	
D16,17	<b>RVD10DC2R</b>	Diodes	1	
D18,19	<b>RVD10DC2</b>	Diodes	1	
ZD	SVDRD6.2E	6.2V Zenner, Voltage Stabilizer	1	
<b>TRANSFORMER</b>				
T	ELH10S123	Oscillator	1	
<b>RESISTORS</b>				
R1,2,3	<b>ERD25TJ223</b>	Carbon, 22k $\Omega$ , 1/4W, $\pm 5\%$	3	
R4,35	<b>ERD25TJ272</b>	Carbon, 2.7k $\Omega$ , 1/4W, $\pm 5\%$	2	
R5	<b>ERD25TJ822</b>	Carbon, 8.2k $\Omega$ , 1/4W, $\pm 5\%$	1	
R6,29	ERD14FJ331	Carbon, 330 $\Omega$ , 1/4W, $\pm 5\%$	2	
R7,8	<b>ERD50TJ5R1</b>	Carbon, 5.1 $\Omega$ , 1/2W, $\pm 5\%$	2*	
R9,40	<b>ERD25TJ332</b>	Carbon, 3.3k $\Omega$ , 1/4W, $\pm 5\%$	2	
R10	<b>ERD25TJ222</b>	Carbon, 2.2k $\Omega$ , 1/4W, $\pm 5\%$	1	
R11,15	<b>ERD25TJ153</b>	Carbon, 15k $\Omega$ , 1/4W, $\pm 5\%$	2	
R12	ERD14FJ151	Carbon, 150 $\Omega$ , 1/4W, $\pm 5\%$	1	

**Technics**  
by Panasonic


Panasonic Company  
Division of Matsushita Electric  
Corporation of America  
One Panasonic Way, Secaucus,  
New Jersey 07094

Matsushita Electric of Hawaii, Inc.  
320 Waiakamilo Road, Honolulu,  
Hawaii 96817


Matsushita Electric of Canada  
40 Ronson Drive, Rexdale,  
Ontario, Canada M9W 1B5

Ref. No.	Part No.	Part Name & Description	Per Set (Pcs.)	Remarks
R13	<b>ERD25TJ304</b>	Carbon, 300k $\Omega$ , 1/4W, $\pm 5\%$	1	
R14	<b>ERD25TJ242</b>	Carbon, 2.4k $\Omega$ , 1/4W, $\pm 5\%$	1	
R16	<b>ERD25TJ274</b>	Carbon, 270k $\Omega$ , 1/4W, $\pm 5\%$	1	
R17	<b>ERD25TJ472</b>	Carbon, 4.7k $\Omega$ , 1/4W, $\pm 5\%$	1	
R18	<b>ERD25TJ751</b>	Carbon, 750 $\Omega$ , 1/4W, $\pm 5\%$	1	
R19	ERD14FJ470	Carbon, 47 $\Omega$ , 1/4W, $\pm 5\%$	1	
R20,25	<b>ERD25TJ133</b>	Carbon, 13k $\Omega$ , 1/4W, $\pm 5\%$	2	
R21,22	<b>ERD25TJ682</b>	Carbon, 6.8k $\Omega$ , 1/4W, $\pm 5\%$	2	
R23	ERD14FJ561	Carbon, 560 $\Omega$ , 1/4W, $\pm 5\%$	1	
R24	<b>ERD25TJ302</b>	Carbon, 3k $\Omega$ , 1/4W, $\pm 5\%$	1	
R26	<b>ERD25TJ243</b>	Carbon, 24k $\Omega$ , 1/4W, $\pm 5\%$	1	
R27	<b>ERD25TJ622</b>	Carbon, 6.2k $\Omega$ , 1/4W, $\pm 5\%$	1	
R28	<b>ERD25TJ122</b>	Carbon, 1.2k $\Omega$ , 1/4W, $\pm 5\%$	1	
R30	<b>ERD25TJ273</b>	Carbon, 27k $\Omega$ , 1/4W, $\pm 5\%$	1	
R31	<b>ERD25TJ512</b>	Carbon, 5.1k $\Omega$ , 1/4W, $\pm 5\%$	1	
R32	<b>ERD25TJ113</b>	Carbon, 11k $\Omega$ , 1/4W, $\pm 5\%$	1	
R33	ERD14FJ201	Carbon, 200 $\Omega$ , 1/4W, $\pm 5\%$	1	
R34	<b>ERD25TJ112</b>	Carbon, 1.1k $\Omega$ , 1/4W, $\pm 5\%$	1	
R36	<b>ERD25TJ132</b>	Carbon, 1.3k $\Omega$ , 1/4W, $\pm 5\%$	1	
R37	<b>ERD25TJ393</b>	Carbon, 39k $\Omega$ , 1/4W, $\pm 5\%$	1	
R38	<b>ERD25TJ821</b>	Carbon, 820 $\Omega$ , 1/4W, $\pm 5\%$	1	
R39	<b>ERD25TJ271</b>	Carbon, 270 $\Omega$ , 1/4W, $\pm 5\%$	1	
R41	ERW12PKR10	Wire, 0.1 $\Omega$ , 1/4W, $\pm 5\%$	1	
<b>VARIABLE RESISTORS</b>				
VR1	<b>EVLS3AA00B14</b>	10k $\Omega$ (B)	1	
VR2,3	<b>EVLS3AA00B23</b>	2k $\Omega$ (B)	2	
<b>CAPACITORS</b>				
C1,2,3,4	ECQM1H104KZ	Polyester, 0.1 $\mu$ F, 50V, $\pm 10\%$	4	
C5,6,7,17,18,19	<b>ECEA50Z4R7</b>	Electrolytic, 4.7 $\mu$ F, 50V	6	
C8	<b>ECEA50Z1</b>	Electrolytic, 1 $\mu$ F, 50V	1	
C9	<b>ECEA50Z2R2</b>	Electrolytic, 2.2 $\mu$ F, 50V	1	
C10	ECQM1H822KZ	Polyester, 0.0082 $\mu$ F, 50V, $\pm 10\%$	1	
C11	<b>ECEA10V33T</b>	Electrolytic, 33 $\mu$ F, 10V	1	
C12	<b>ECEA25V3R3T</b>	Electrolytic, 3.3 $\mu$ F, 25V	1	
C13	ECQM1H103KZ	Polyester, 0.01 $\mu$ F, 50V, $\pm 10\%$	1	
C14	<b>ECEA35V47V</b>	Electrolytic, 47 $\mu$ F, 35V	1	
C15	ECQM1H223KZ	Polyester, 0.0022 $\mu$ F, 50V, $\pm 10\%$	1	
C16	<b>ECEB50V470</b>	Electrolytic, 470 $\mu$ F, 50V	1	

# Schematic Diagram


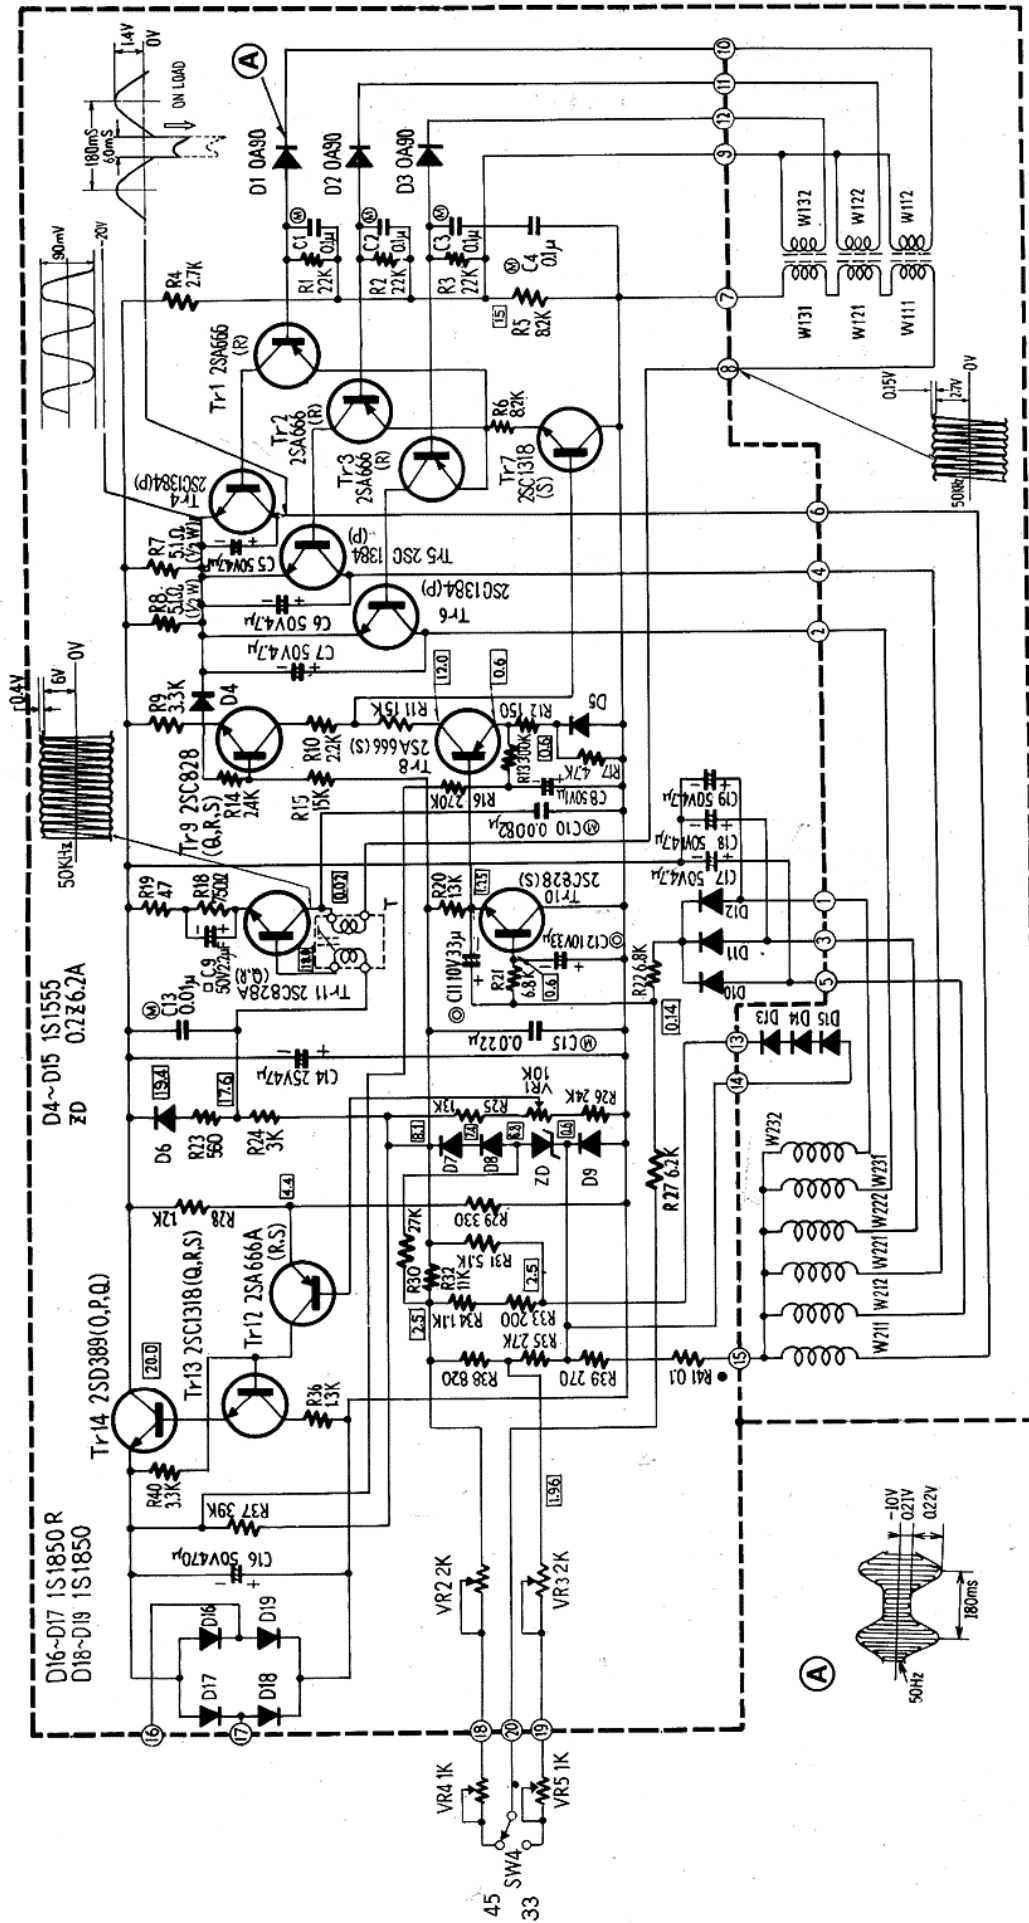


# Printed Circuit Board

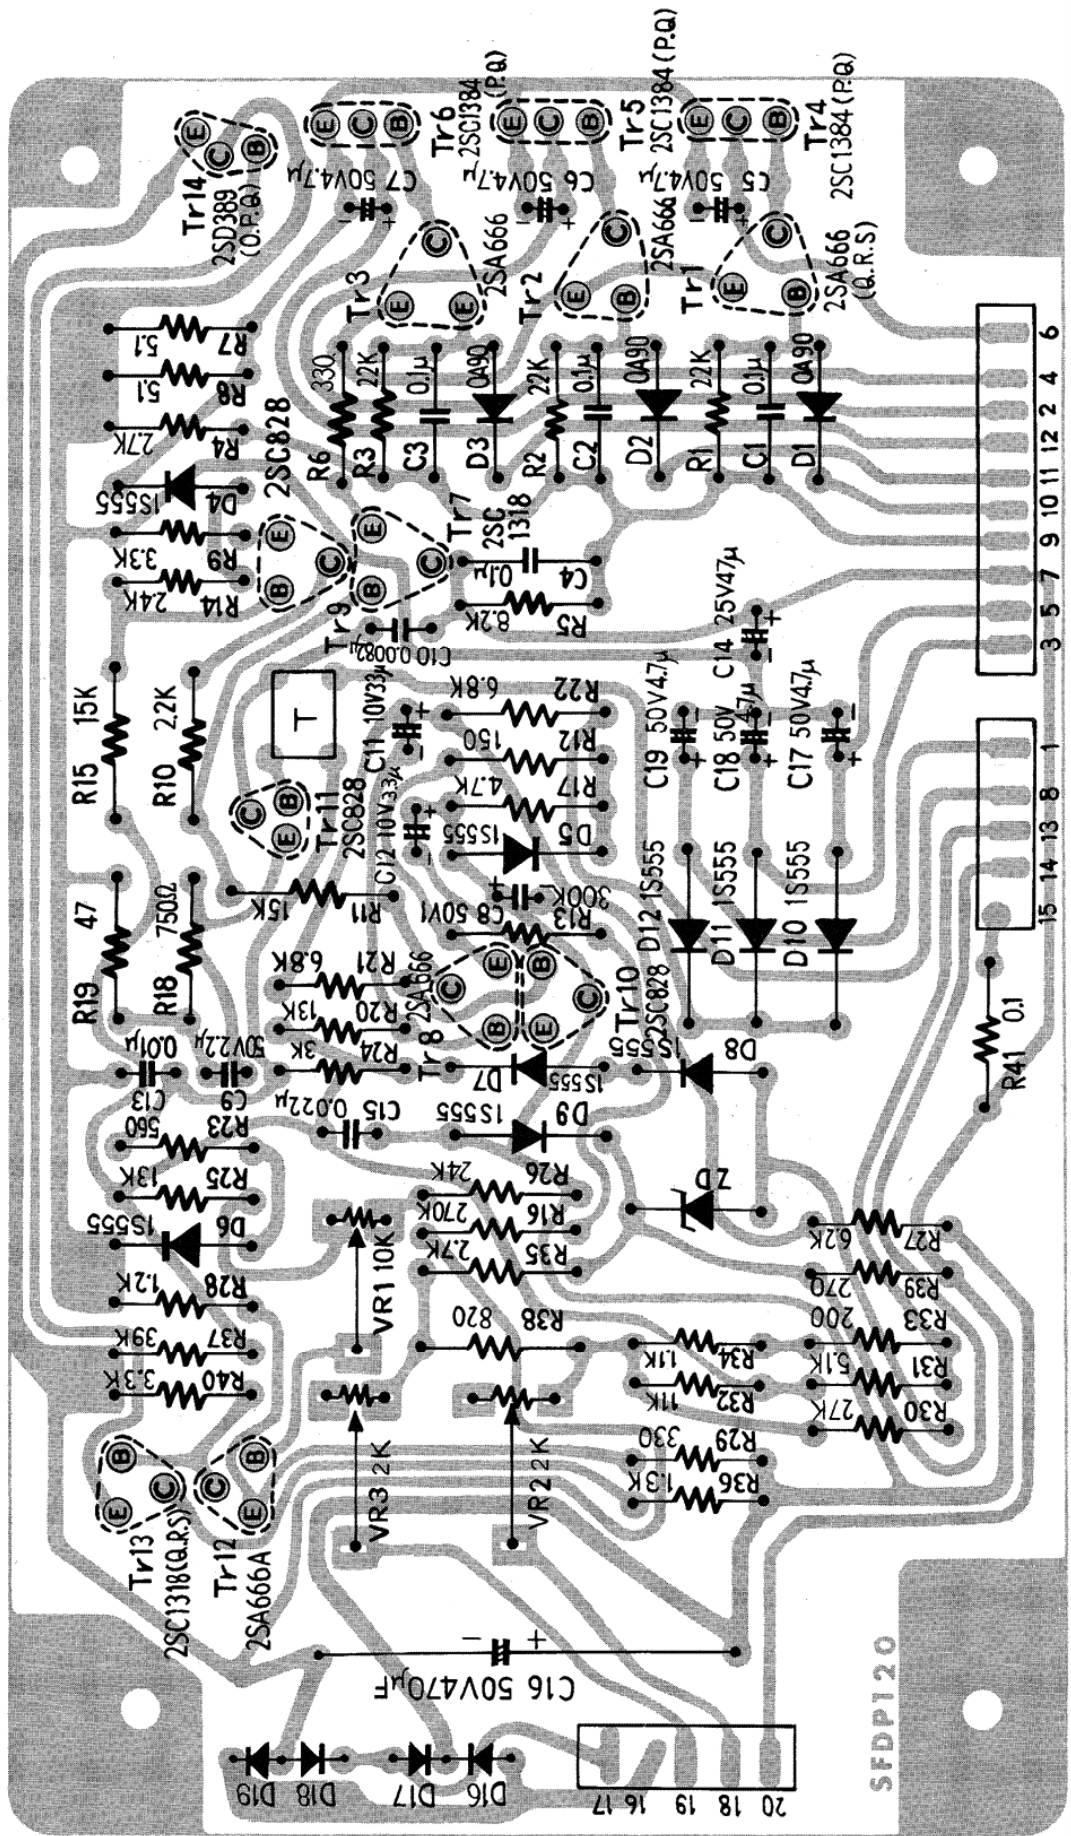

SFDPI20

# SERVICE CHECK POINTS

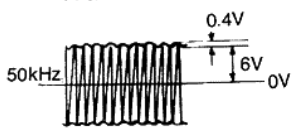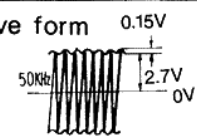SYMPTOMS		INFERABLE CAUSE	CHECK POINT	PROPER VOLTAGE & WAVE FORM etc.	INFERABLE FAULT
TURN TABLE ROTATES ABNORMALLY	Not rotate (33, 45 rpm)	Power circuit	Collector voltage of TR13	Voltage about 26V	Fuse, P.T, VR1 D16,17,18 C14 TR11,12,13, D7,8,9
		Speed selector SW	SW4 Contact Between 33 and COM 45 and COM	Contact	SW4
		Oscillation circuit	Collector wave from of TR11	Wave form 	T TR11
		Control circuit	Base voltage of TR7	Voltage about 9V	TR7, 8, 9
		Switching circuit	Emitter voltage of TR7	Voltage about 12V	TR7
		Motor	PCB A'ssy Between ⑦ and ⑧	Wave form 	Motor
Not rotate (33 rpm)	Speed selector SW and speed adjustment VR	Contact	Contact	Contact	SW4
		VR5	Ohm 1k Ω	Ohm 1k Ω	VR5
		VR3	Ohm 2k Ω	Ohm 2k Ω	VR3
Not rotate (45 rpm)	Speed selector SW and speed adjustment VR	Contact	Contact	Contact	SW4
		VR4	Ohm 1k Ω	Ohm 1k Ω	VR4
		VR2	Ohm 2k Ω	Ohm 2k Ω	VR2

SYMPTOMS		INFERABLE CAUSE	CHECK POINT	PROPER VOLTAGE & WAVE FORM etc.	INFERABLE FAULT
TURN TABLE ROTATES ABNORMALLY	Abnormal speed (Too fast)	Constant voltage circuit	Anode voltage of D7	Voltage about 8V	D7, 8
		Speed detection circuit	Base voltage of TR10	Voltage about 0.6V	VR10
TURN TABLE DOES NOT ROTATE	Abnormal speed (Little fast and slow)	Power circuit	Anode voltage of D7	Voltage about 8V	D7, 8
		Control circuit	VR10	Ohm 10k $\Omega$	VR10
	Rotate turntable by hand but there is dead point of rotation	Switching circuit	Collector wave form of TR4, 5, 6	<p>Wave form</p>	TR4, TR1, D1 TR5, TR2, D2 TR6, TR3, D3
		Motor	PCB A'ssy number ⑩ ⑪ ⑫	<p>Wave form</p>	Motor