

Service Manual

COMPACT
disc
DIGITAL AUDIO

DIGITAL

Compact Disc Player SL-P477A

Color

(K) ... Black Type
(S) ... Silver Type



Area

Country Code	Area	Color
(E)	Continental Europe.	(K) (S)
(EB)	Great Britain.	(K) (S)
(EG)	F.R. Germany & Italy.	(K) (S)

■ SPECIFICATIONS

■ Audio

No. of channels	2 (left and right, stereo)
Frequency response	2-20,000 Hz ± 0.5 dB
Output voltage	2 V (at 0 dB)
Dynamic range	96 dB
S/N ratio	100 dB
Total harmonic distortion	0.003% (1 kHz, 0 dB)
Harmonic distortion	0.003% (1 kHz, 0 dB)
Wow and flutter	Below measurable limit
DA converter	MASH* (4 DAC)
Output impedance	Approx. 600Ω
Load impedance	More than 10 kΩ
Headphone output level	15 mW max. 32Ω (adjustable)

*MASH

- MASH (Multi-Stage Noise Shaping) is an effective over-sampling D/A conversion technique which realizes a high S/N ratio and needs no highly complex manufacturing processes such as a laser trimming.
- MASH is a trademark of NTT (Nippon Telegraph and Telephone Corporation).

■ Pickup

Wavelength 780 nm

■ Infrared remote control transmitter

Dimensions (W×H×D) 60×18×165 mm

Batteries UM-4 "AAA" batteries or IEC R03 or equivalent (1.5 V×2)
100 g (including batteries)

Weight

■ General

Power supply

For Great Britain: AC 50/60 Hz, 240V

For others: AC 50/60 Hz, 220V

Power consumption

10 W

Dimensions (W×H×D)

430×92×288 mm

Weight

3.6 kg

Specifications subject to change without notice.

Weight and dimensions shown are approximate.

■ CONTENTS

	Page
PLACEMENT	2
CLEANING OF LENS	2
ACCESSORIES	2
PRECAUTION OF LASER DIODE	3
LOCATION OF CONTROLS	4, 5
CONNECTIONS	6
DISASSEMBLY INSTRUCTIONS	7 ~ 10
MEASUREMENTS AND ADJUSTMENTS	11, 12
TERMINAL FUNCTIONS OF IC'S	13 ~ 16
INTERNAL CONNECTION OF FL	17
BLOCK DIAGRAM	18, 19
SCHEMATIC DIAGRAM	20 ~ 27

	Page
TERMINAL GUIDE OF IC'S, TRANSISTORS & DIODES	28
PRINTED CIRCUIT BOARDS	29 ~ 32
WIRING CONNECTION DIAGRAM	33
REPLACEMENT PARTS LIST	34 ~ 38
EXPLODED VIEWS	39 ~ 41
RESISTORS & CAPACITORS	42, 43
PACKING	44
TROUBLESHOOTING GUIDE	45 ~ 47

* TECHNICAL INFORMATION

* This technical information is located on pp 49 ~ 56 of the SL-PJ46A Service Manual (Order No. AD8902036C2).

Therefore, refer to that Service Manual.


Technics

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan

■ PLACEMENT

Before placement

Two transport security devices are secured to prevent the optical pickup from damage during transport. Be sure to release them before use.

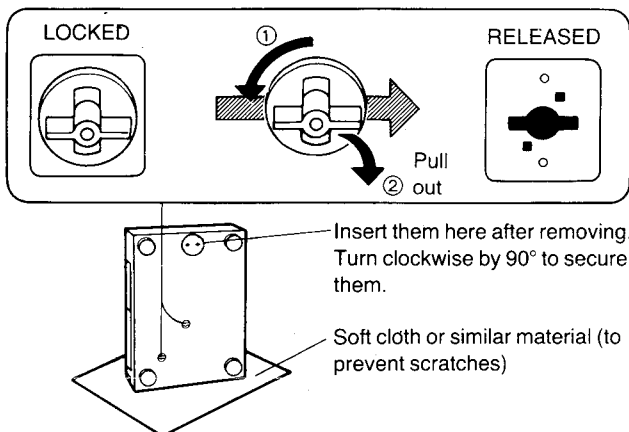

Note:


When transporting the unit, be sure to remove the compact disc from inside the unit. And replace the transport security devices again following the reverse order not to damage the optical pickup.

■ CLEANING OF LENS

If the lens is stained causing sound skip or operation failure, open the top cover by pressing the open button, and clean the lens.

● **To remove dust or dirt**

Blow the lens with the blower provided in the cleaning kit to remove dust or dirt.

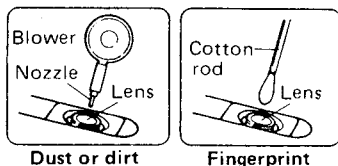

● **To remove fingerprint**

If the blower is not enough, moisten the cotton rod with the lens cleaner solution and wipe the lens with it from center of the lens to outside.

■ ACCESSORIES

- AC power supply cord 1
 [SJA187 (E, EG)]
 [SJA193 (EB)]
- Remote control transmitter 1
 [EUR64796 (K)]
 [EUR64797 (S)]


Notes of placement

- **This unit is a precision instrument. Be sure to place it on a flat surface.**
- **Avoid places such as the following:**
 - Near any equipment or device that generates strong magnetism.
 - On any heat-generating equipment or device, or in any place where the temperature is high (35°C or higher).
 - Extremely cold places (5°C or below).
 - Near a tuner or TV (It may cause noise in the broadcast, or disturbance of the TV picture.)
- **When carrying or storing the unit, handle it with care so it is not subjected to any strong bumps.**
 Always remove the disc before storing the unit for any period of time.
- **To avoid problems due to vibration.**
 - Do not place a book or similar object under this unit.
 - Do not route the connection cables (of this or other units) across the operation panel, across the top, or under the unit.

Cautions:

- Do not directly apply the cleaner solution to the lens. Do not apply too much solution to the cotton rod or otherwise the solution will flow into the player.
- Wipe the lens carefully. Do not give too much stress to the lens or otherwise it may scratch the lens or cause optical pickup trouble.
- If the solution should be too much applied, wipe the lens with a dry cotton rod.

Lens cleaning kit (Part No. : SZZP1038C)

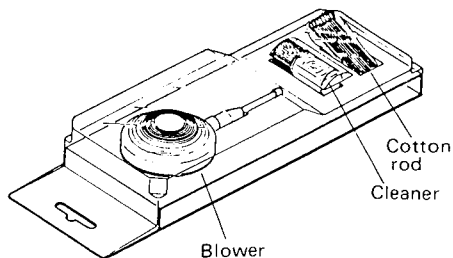

- Stereo connection cable 1
 (SJP2249-3)
- Batteries 2
 (UM-4NE/2S)

■ PRECAUTION OF LASER DIODE

CAUTION: This product utilizes a laser diode with the unit turned "on", invisible laser radiation is emitted from the pick up lens.
Wave length: 780nm
Maximum output radiation power from pick up: 100µW/VDE

Laser radiation from the pick up lens is safety level, but be sure the followings:

1. Do not disassemble the optical pick up unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pickup unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pick up lens for a long time.


ACHTUNG: Dieses produkt enthält eine laserdioden. Im eingeschalteten zustand wird unsichtbare laserstrahlung von der lasereinheit abgestrahlt.

Wellenlänge: 780nm
Maximale strahlungsleistung der lasereinheit: 100µW/VDE

Die strahlung an der lasereinheit ist ungefährlich, wenn folgende punkte beachtet werden:

1. Die lasereinheit nicht zerlegen, da die strahlung an der freigelegten laserdioden gefährlich ist.
2. Den werksseitig justierten einstellregler der lasereinheit nicht verstellen.
3. Nicht mit optischen instrumenten in die fokussierlinse blicken.
4. Nicht über längere zeit in die fokussierlinse blicken.

ADVARSEL: I dette a apparat anvendes laser.


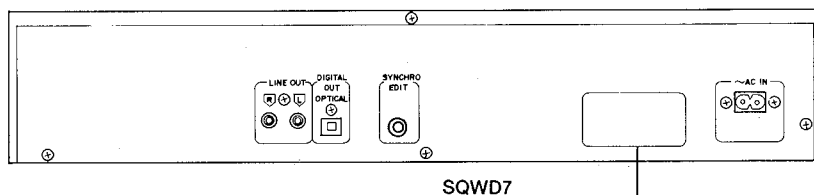


SQWD7




Obs:
Apparaten innehåller laser
Komponent av höger laserklass
än klass 1.

RQLS0022

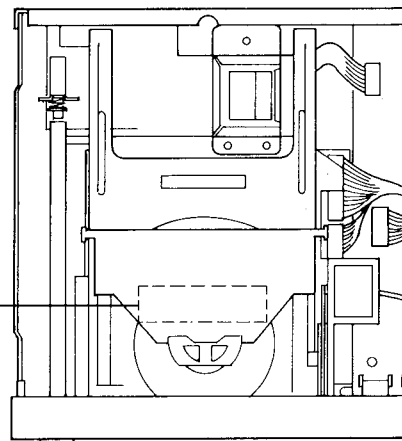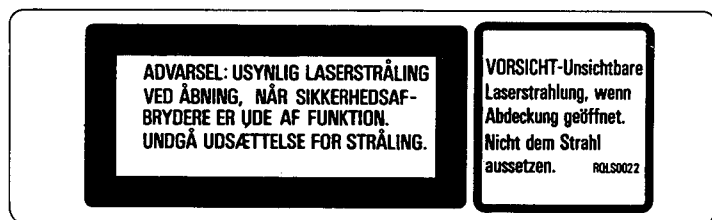

■ LOCATION OF CONTROLS

The functions indicated by the black numbers (with white background, ④ etc.) can also be activated using the remote control transmitter.

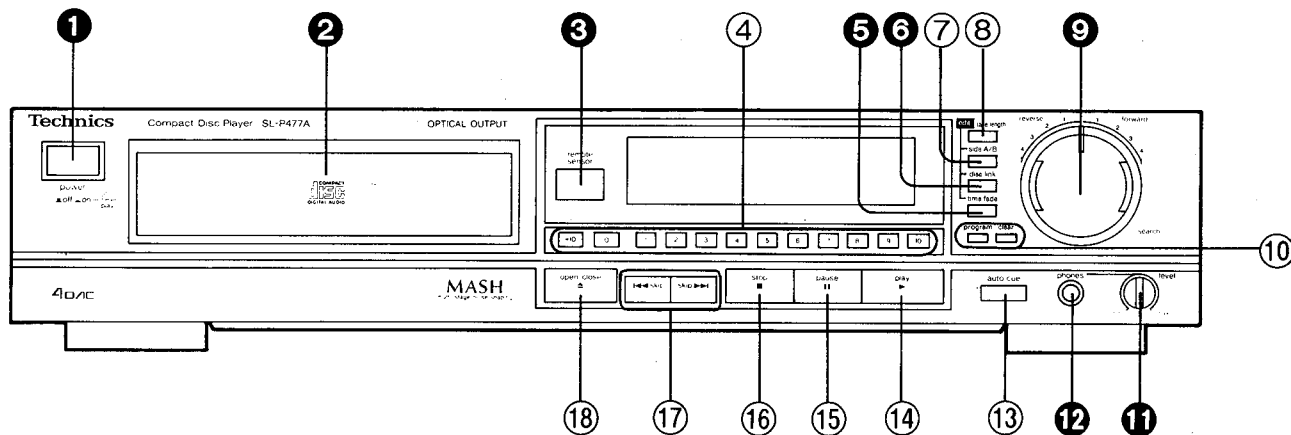

Control section

① Power switch (power **■** off **▲** on)

If a disc has already been loaded, play will begin when the power is turned ON.

② Disc holder

③ Remote control signal sensor (remote sensor)

④ Numeric buttons (+10, 0, 1~10)

⑤ Time fade button (time fade)

Pressing this button in the pause or stop mode causes the fade-out function to work at the specified time. Pressing this button in the edit mode causes the fade-out function to work at the end of the tape when the track added exceeds the remaining time of the tape.

⑥ Disc link button (disc link)

This button can be used for edit recording from several discs.

⑦ Tape-side select button (side A/B)

When recording compact discs to tape, this button can be used to check the number of tracks and amount of tape left over for side A or B.

⑧ Edit tape length button (edit tape length)

When compact discs are to be recorded to tape, this button can be used to calculate the number of tracks that can be recorded on each side of the tape, depending on the length of the cassette tape used, so that as little tape as possible is wasted.

⑨ Search dial (search)

This dial can be used to locate specific places on the disc during play at high speed, either forward or reverse.

⑩ Buttons for program function

● Programmed-play button (program)

Pressing this button initiates the programmed play mode. You can then enter specific tracks using the numeric buttons.

● Clear button (clear)

This button can be used to clear tracks from the programmed sequence one at a time.

⑪ Headphones volume control (level)

Avoid listening to music at high volume levels for extended periods of time.

⑫ Headphones jack (phones)

⑬ Auto cue button (auto cue)

Pressing this button enables the unit to stop at the beginning of every track and switch to the play standby mode.

⑭ Play button (▶ play)

⑮ Pause button (⏸ pause)


⑯ Stop button (■ stop)

This button can be used to stop disc play, as well as to cancel the various play modes.

⑰ Skip buttons (⏮ skip/skip ⏭)

These buttons can be used to skip by track in the forward or reverse direction.


⑱ Disc holder open/close button (▲ open/close)

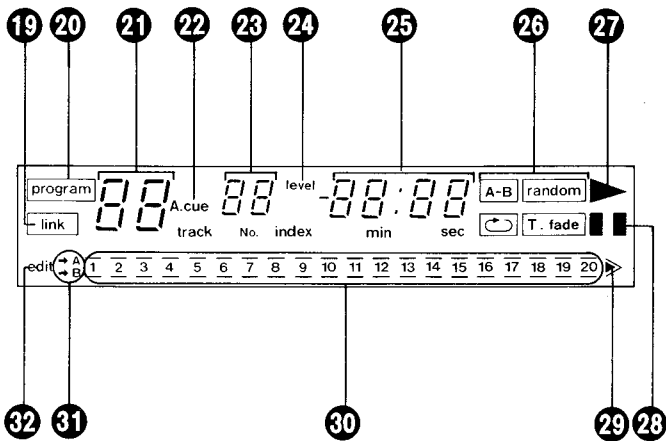

Indicators section

- 19** Disc link indicator (**link**)
- 20** Programmed-play indicator (**program**)
- 21** Track number display (**track**)
- 22** Auto cue indicator (**A. cue**)
- 23** Index/program number display (**index/No.**)
- 24** Level indicator (**level**)
This indicator lights when the output level is attenuated by the remote control.
- 25** Time display (**min/sec**)
- 26** Operation indicators
The following indicators light during their respective operations.

A-B :	A-B repeat play (remote control operation)
random :	Random play (remote control operation)
:	Repeat play (remote control operation)
T. fade :	Time fade (fade-out)
- 27** Play indicator (**▶**)
- 28** Pause indicator (**||**)
- 29** "Over" mark (**▶**)
This indicator lights if the total number of tracks on the disc is 21 or more.
- 30** Track number indicator (**1-20**)
- 31** Tape side indicator (**A/B**)
- 32** Compact disc edit indicator (**edit**)

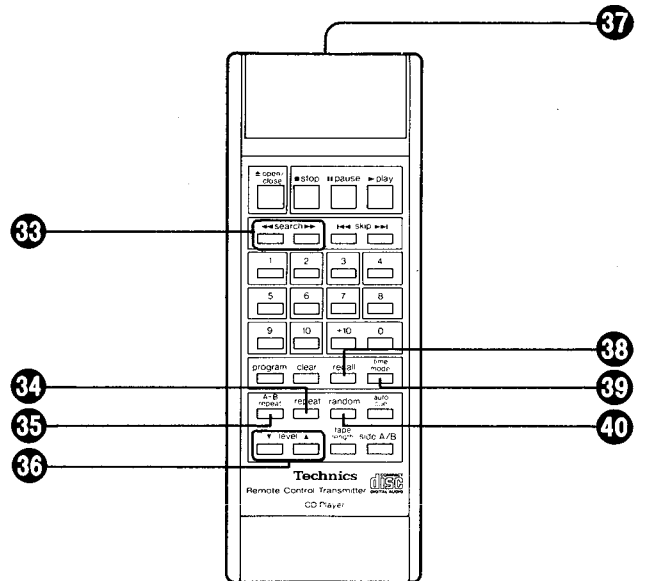

Unnumbered buttons on the remote control transmitter function identically to their corresponding parts on the unit.

Remote control transmitter

- 33** Search buttons (**◀◀ search ▶▶**)
These buttons can be used to move rapidly forward or backward on the disc during play. The search speed is slow when the button is pressed at first and becomes faster if the button is pressed and held continuously.
- 34** Repeat button (**repeat**)
- 35** A-B repeat button (**A-B repeat**)
This button can be used to play the portion of a disc between two points (A and B) chosen by you.
- 36** Level buttons (**▼ level ▲**)
These buttons can be used to control output level (from 0 dB to -12 dB).
- 37** Remote control signal transmission window
- 38** Recall button (**recall**)
This button can be used to display the contents of the programmed track sequence for confirmation.
- 39** Time mode select button (**time mode**)
- 40** Random play button (**random**)
This button can be used to play the tracks on a disc in a random sequence.

■ CONNECTIONS

Turn power off on all components before making connections.


●Optical output terminal (DIGITAL OUT/OPTICAL)

This terminal can be used for connection with other equipment that has a digital input terminal, such as an amplifier, by using an optical cable (optional). A dust-protection cap is inserted in this terminal. Remove this cap only when a connection is to be made to this terminal.

Note:

When the unit is working with digital output, the following functions do not work;

- Output level adjustment (P. 7)
- Time fade function (P. 14)
- Fade-out function (P. 16)

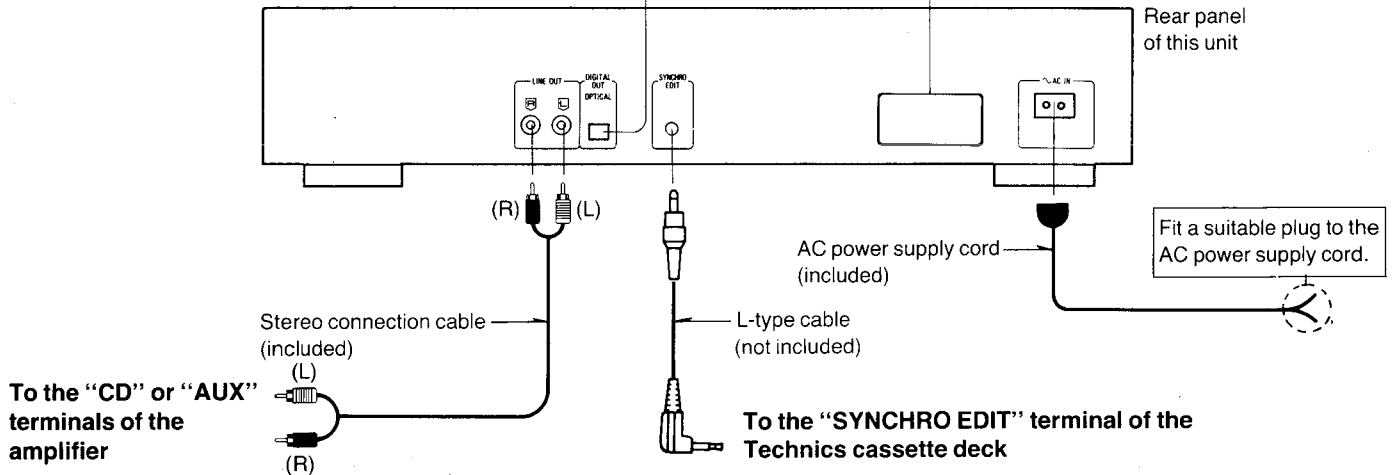

Note:

Be sure to connect the stereo connection cable with the amplifier when using the synchro edit function (P.15–P.18) even if the optical cable has been connected.





DISASSEMBLY INSTRUCTIONS

Warning: This product uses a laser diodes. Refer to caution statements on page 3.

ACHTUNG: • Die lasereinheit nicht zerlegen.


- Die lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

* This CD player is equipped with FPC boards, so handle them with care during disassembly and reassembly.

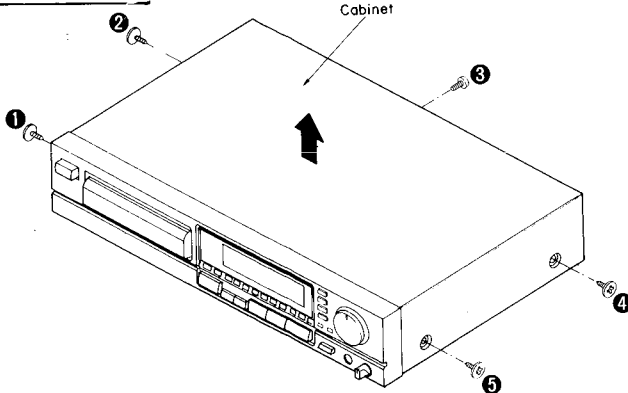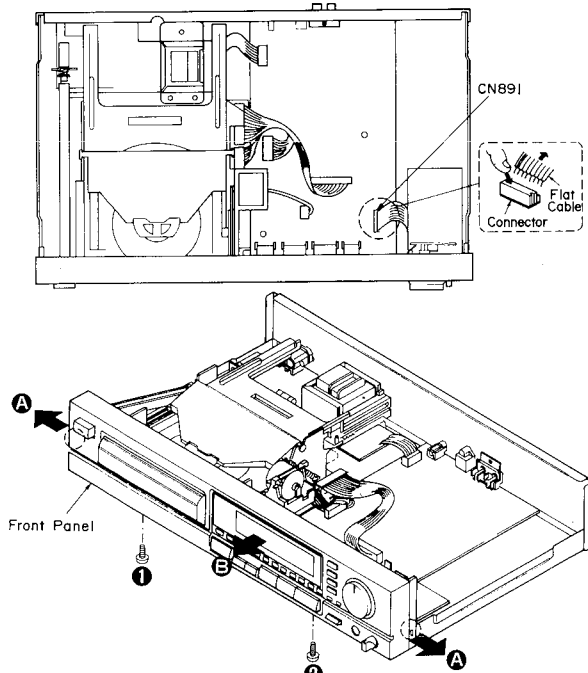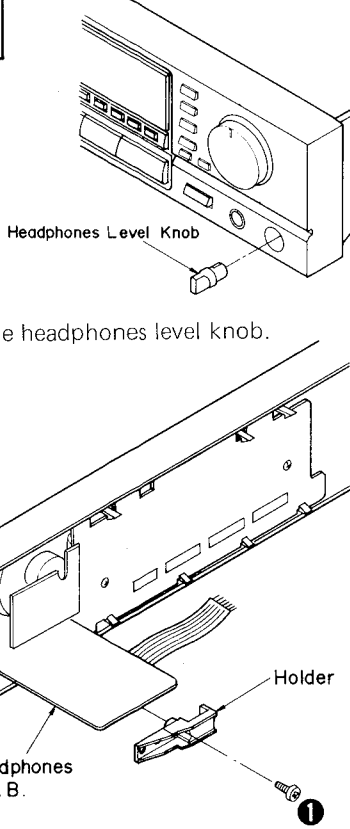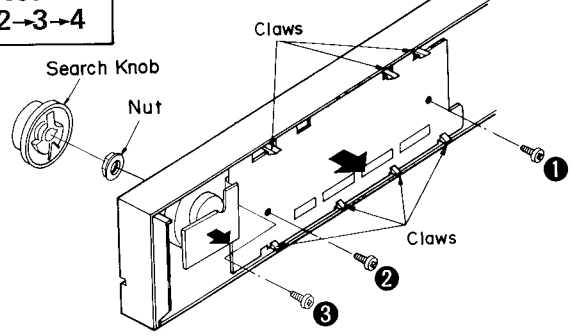Ref. No. 1	Removal of the cabinet	Ref. No. 2	Removal of the front panel
Procedure 1	 <p>• Remove the 5 screws (❶ ~ ❺).</p>	Procedure 1 → 2	<p>1. Remove the 1 flat cable (CN891).</p>  <p>2. Remove the 2 screws (❶ , ❷).</p> <p>3. Slightly pull out the front panel in the direction of the arrow (A).</p> <p>4. Remove the front panel in the direction of the arrow (B).</p>
Ref. No. 3	Removal of the headphones P.C.B.	Ref. No. 4	Removal of the operation P.C.B. and search P.C.B.
Procedure 1→2→3	 <p>1. Pull out the headphones level knob.</p> <p>2. Remove the 1 screw (❶).</p> <p>3. Remove the holder.</p>	Procedure 1→2→3→4	 <p>1. Remove the 3 screws (❶ ~ ❸).</p> <p>2. Release the 7 claws.</p> <p>3. Pull out the search knob.</p> <p>4. Remove the 1 nut.</p> <p>5. Remove the operation P.C.B. and search P.C.B. in the direction of the arrow.</p>

Ref. No. 5 **Removal of the main P.C.B.**

Procedure
1→2→3→4→5

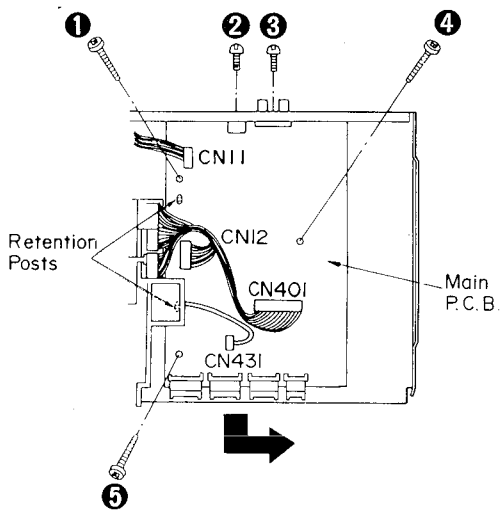


1. Remove the 5 screws (1 ~ 5).
2. Remove the 3 connectors (CN12, CN401, CN431).
3. Remove the 1 flat cable (CN11).
4. Lift the main P.C.B. off the retention posts on the chassis.
5. Remove the main P.C.B. in the direction of the arrow.

How to check the main P.C.B.

When checking the soldered surface of the main P.C.B. and replacing the parts, do as shown below.



1. Don't remove the connectors (CN12, CN401, CN431) and flat cable (CN11).
2. Connect the main P.C.B. ground terminal (LINE OUT terminal) to the chassis with a lead wire.
3. Connect the operation P.C.B. ground terminal to the chassis with a lead wire.

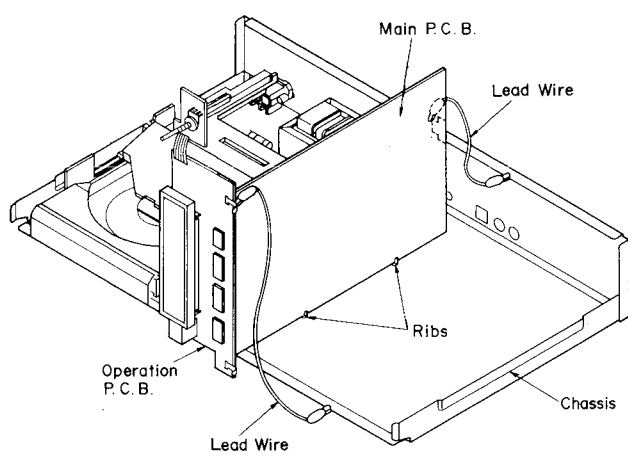


Ref. No. 6 **Removal of the disc lid and holder**

Procedure
1→6

1. Remove the spring.
2. Move the disc lid in the direction of the arrow (A) and pull out this in the direction of the arrow (B).



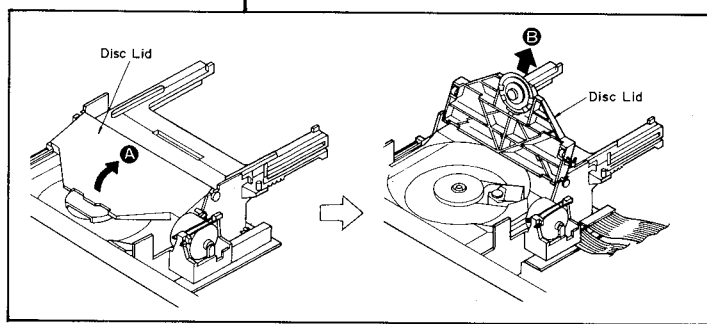
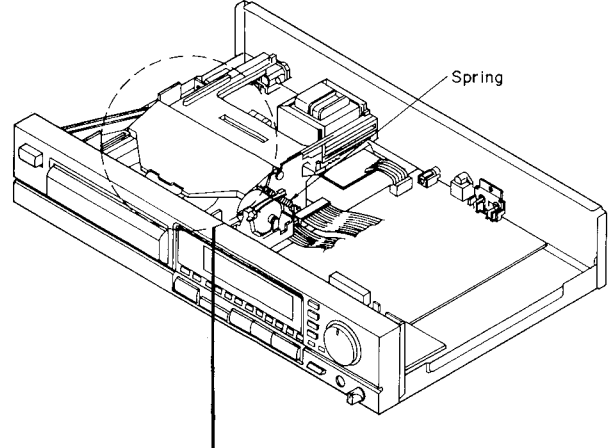






3. Pull out the holder in the direction of the arrow (C).

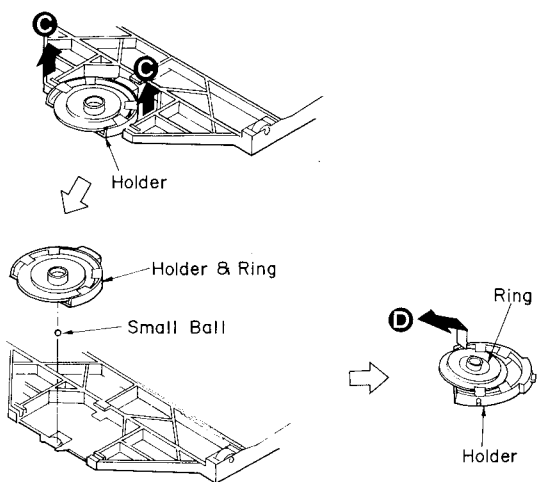

Caution: Be sure to handle the small ball carefully.

4. Remove the ring in the direction of the arrow (D).

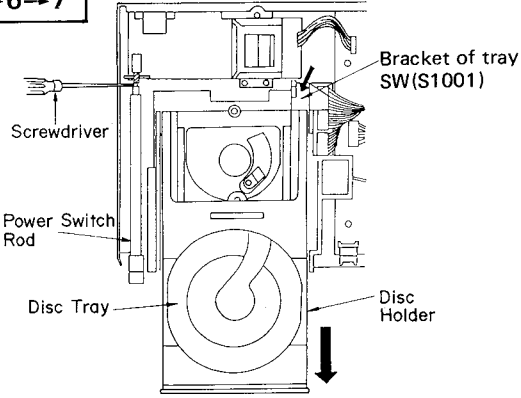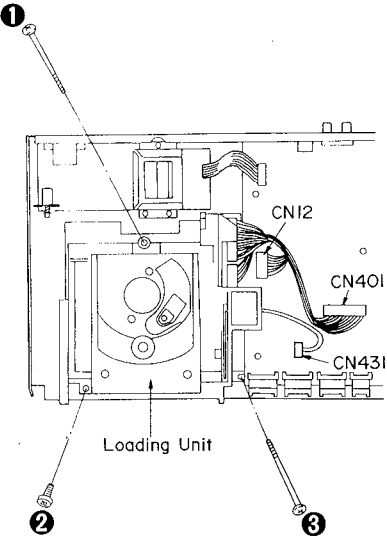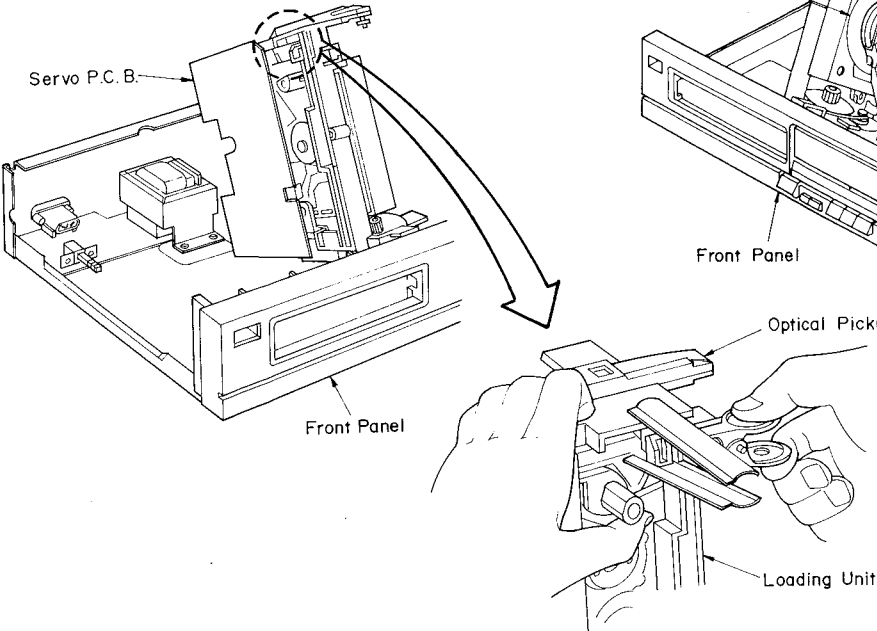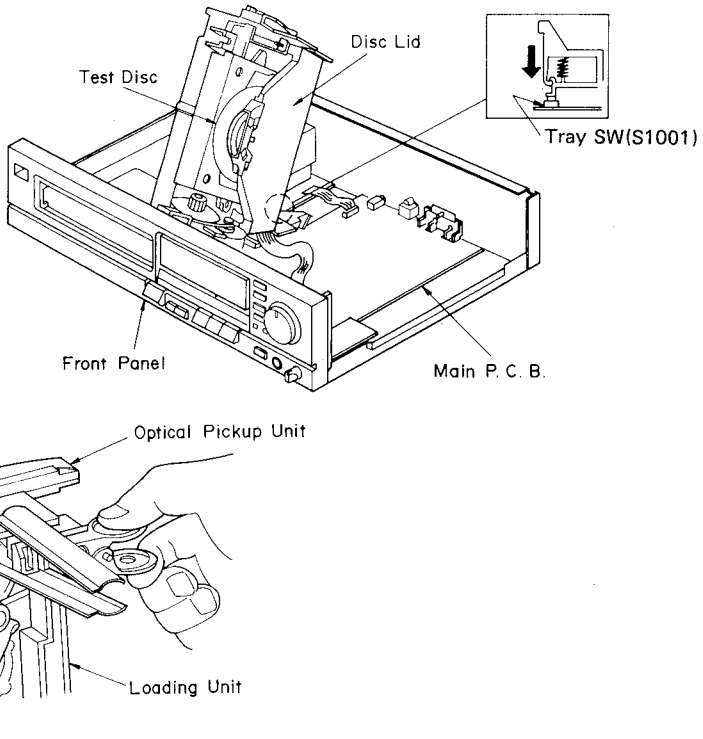
<p>Ref. No. 7</p>	<p>Removal of the power switch rod and disc holder</p>	<p>Ref. No. 8</p>	<p>Removal of the loading unit</p>
<p>Procedure 1→2→6→7</p>	 <p>■ Power switch rod</p> <ol style="list-style-type: none"> 1. Set the power switch in the "OFF" position. 2. Remove the power switch rod by using a screwdriver. <p>■ Disc holder</p> <ol style="list-style-type: none"> 1. Pull the disc holder slowly in the direction of the arrow until the disc tray comes up. 2. Pull the disc holder until it stops. 3. Push the bracket of tray SW (S1001) in the direction of the arrow. 4. Pull out the disc holder further to remove it. 	<p>Procedure 1→2→6→7→8</p>	 <ol style="list-style-type: none"> 1. Remove the 3 screws (① ~ ③). 2. Remove the 3 connectors (CN12, CN401, CN431).
<p>Ref. No. 9</p>	<p>Checking of the servo P.C.B.</p>	<p>(To play a disc)</p> <ol style="list-style-type: none"> 1. Place the test disc. 2. Reinstall the disc lid to the loading unit. 3. Turn "ON" the power switch of the player. 4. Push the bracket of tray SW (S1001) in the direction of the arrow and release it. <p>Note: If the test disc fails to rotate, press the tray switch again.</p>	
<p>Procedure 1→2→6→7→8→9</p>	<p>•When checking the soldered surface of the servo P.C.B. and replacing the parts, do as shown below.</p> <p>Note: Insert the loading unit into the tabs of the front panel. (Fixed loading unit) Secure the optical pickup assembly with a clip. (Otherwise the clamber will interfere with the disc, restricting turntable rotation.)</p> 		
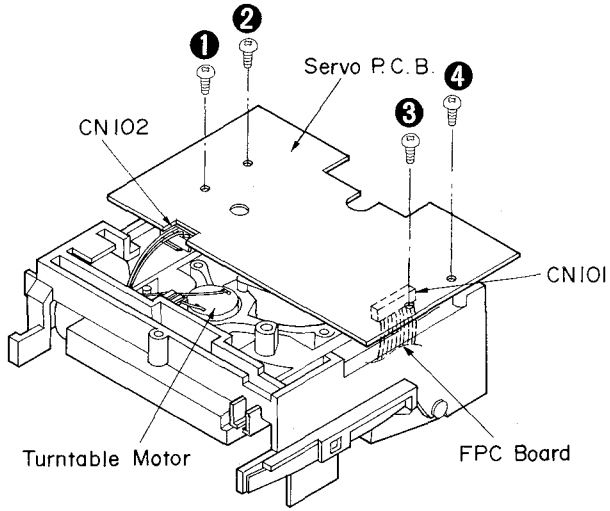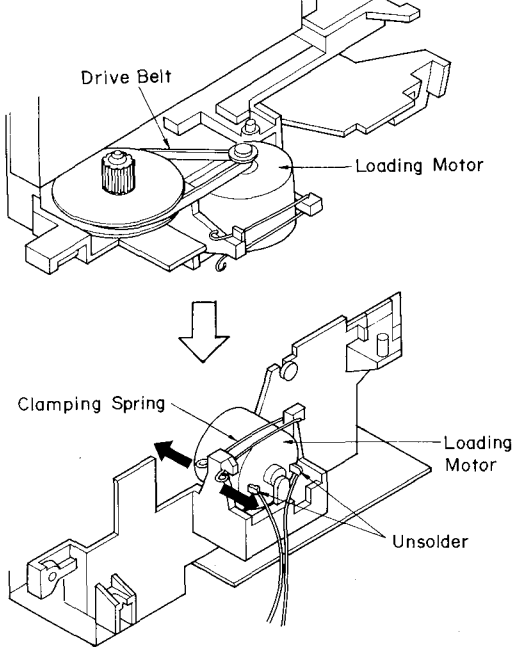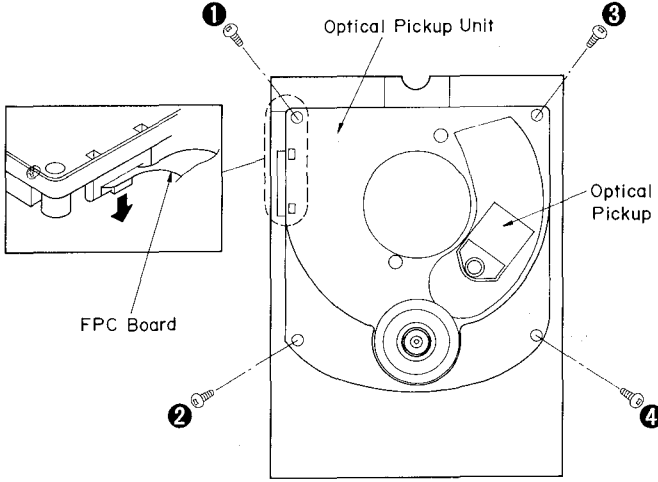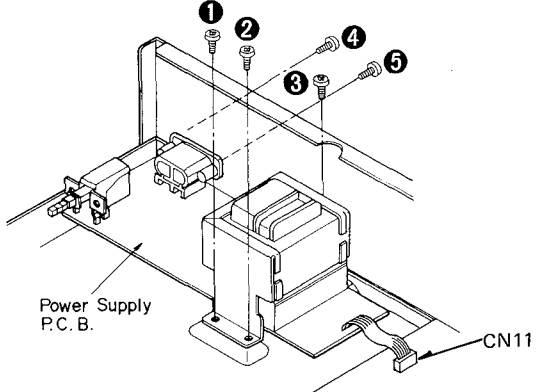
<p>Ref. No. 10</p>	<p>Removal of the servo P.C.B.</p>		
<p>Procedure 1→2→6 →7→8→10</p>	<p>1. Remove the 4 screws (❶ ~ ❷). 2. Remove the FPC board (CN101) from the optical pickup. 3. Remove the 1 connector (CN102) of the turntable motor.</p> <p>Caution : To prevent the breakdown of the laser diode, antistatic shorting pin is inserted into the FPC board.</p>		
<p>Ref. No. 11</p>	<p>Removal of the loading motor</p>	<p>Ref. No. 12</p>	<p>Removal of the optical pickup unit</p>
<p>Procedure 1→2→6 →7→11</p>	<p>1. Remove the drive belt. 2. Release the clamping spring. 3. Unsolder the 2 terminals of the lead wire of the loading motor.</p>	<p>Procedure 1→2-6→7 →8→10→12</p>	<p>1. Remove the 4 screws (❶ ~ ❷). 2. Remove the FPC board from the optical pickup.</p>
			
	<p>Ref. No. 13</p>		<p>Removal of the power supply P.C.B.</p>
<p>Procedure 1→2→6→7 →13</p>	<p>1. Remove the 5 screws (❶ ~ ❷). 2. Remove the 1 connector (CN11).</p>		
			

MEASUREMENTS AND ADJUSTMENTS

Caution:


1. It is very dangerous to look at or touch the laser beam. (Laser radiation is invisible.)
With the unit turned "on", laser radiation is emitted from the pickup lens.
Avoid exposure to the laser beam, especially when performing adjustments.
2. During laser power or focus offset adjustment, never connect the other probe to the unit.
(Otherwise the unit's power supply will sustain damage.)

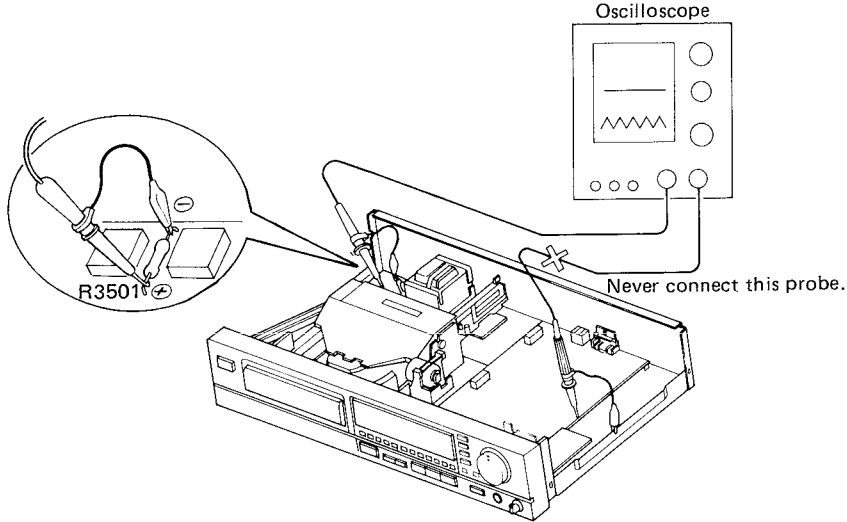

PREPARATION


1. Remove the cabinet (see Ref No. 1 of the disassembly instructions).
2. Remove the disc-holder (see Ref No. 7 of the same).
3. Place the test disc on the turntable.
4. Turn "ON" the power switch at the player.
5. Push the bracket of tray SW (S1001) in the direction of the arrow and release it.

Note: If the test disc fails to rotate, press the tray switch again.

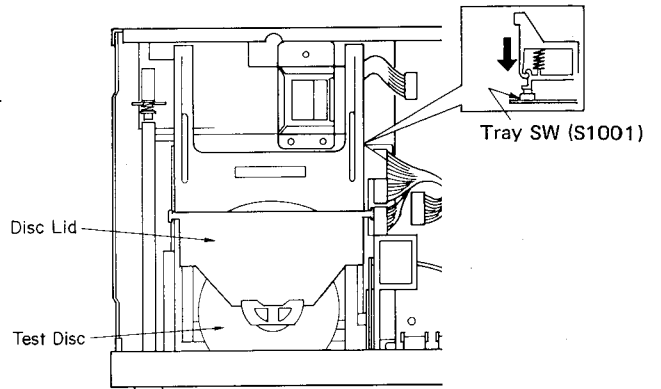


ADJUSTMENT POINTS

• Servo P.C.B.

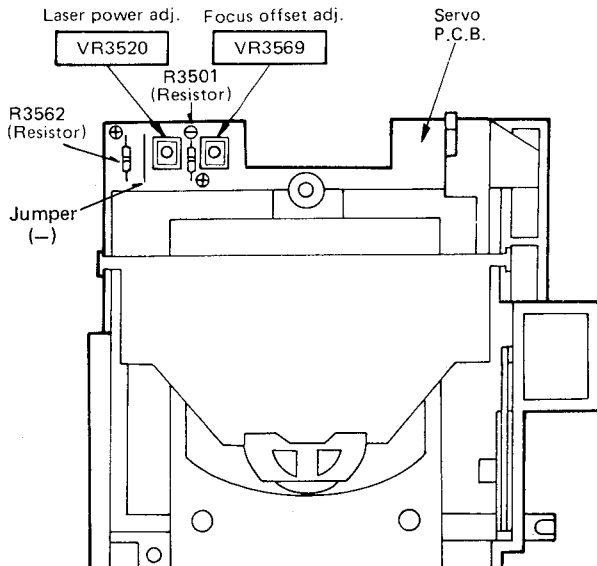

• Main P.C.B.

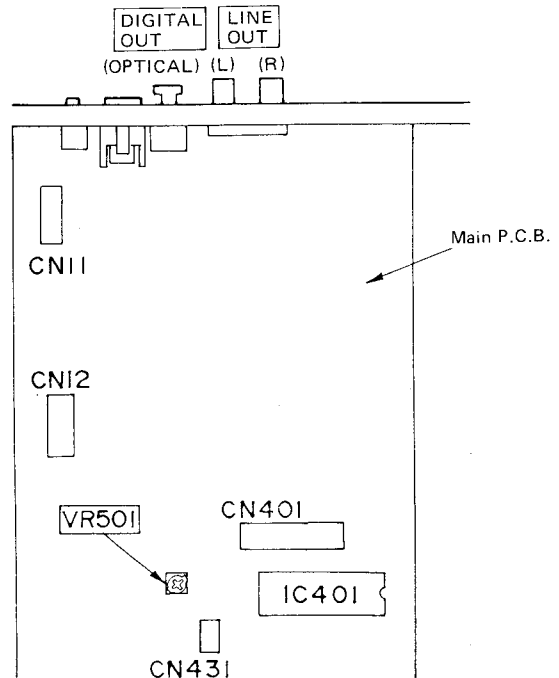

Measuring Instruments

- * Playability test disc (SZZP1054C).
- * Normal disc.


* Dual-beam oscilloscope with bandwidth of 30MHz or better (with EXT trigger and 1:1 probe).

(1) LASER POWER ADJUSTMENT

1. Connect the oscilloscope's CH1 probe across (+) and (-) of **R3501** (Resistor) on the servo P.C.B.
2. Switch the player power ON, and play track No. 1 on the test disc (SZZP1054C).
3. Adjust **VR3520** so that the voltage is $-50 \pm 2\text{mV}$.

Oscilloscope setting:

[VOLT 20mV INPUT DC]
 [SWEEP 0.2msec.]

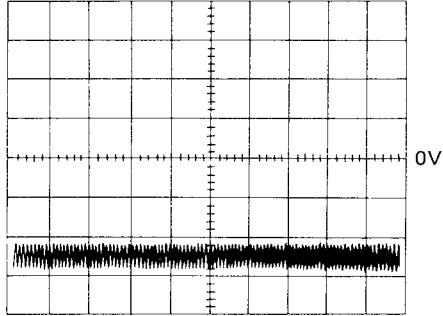


(2) FOCUS OFFSET ADJUSTMENT

1. Connect the oscilloscope's CH1 probe across **R3562** (Resistor)(+) and **Jumper**(-) on the servo P.C.B.
2. Switch the player power ON, and play track No.1 on the test disc (SZZP1054C).
3. Adjust **VR3569** until the signal amplitude become in the center of **400mV**.

Oscilloscope setting:

[VOLT 200 mV INPUT DC]
 [SWEEP 5msec.]

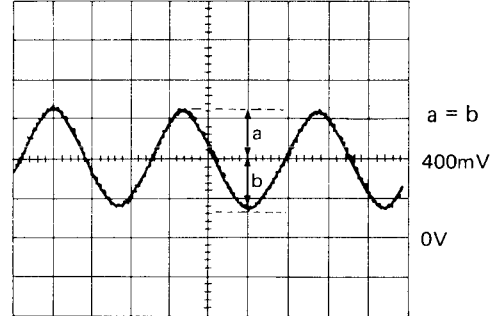




(3) PLL ADJUSTMENT

1. Connect CH1 of the oscilloscope to the **LINE OUT terminal** (either of Lch or Rch) and **ground**.

Oscilloscope setting: VOLT 1V
 SWEEP 1msec.
 INPUT DC

2. Switch the player power ON, and play track No. 6 (wedge 0.7mm) on the test disc (SZZP1054C).
3. Check the waveform displayed on the oscilloscope and adjust **VR501** in the following steps.

- Step 1.** Turn **VR501** clockwise slowly and observe the point at which the waveform on the oscilloscope begins to be disturbed.
- Step 2.** Turn **VR501** counterclockwise slowly and observe the point at which the waveform on the oscilloscope begins to be disturbed.
- Step 3.** Set **VR501** in the middle between the points observed in the above steps "1" and "2".

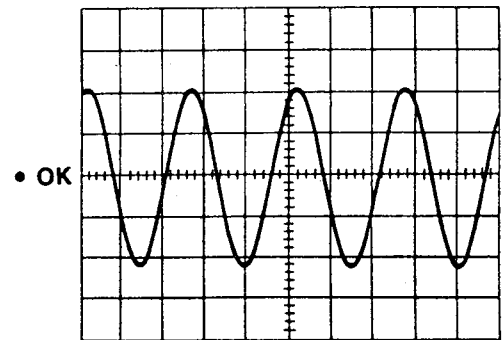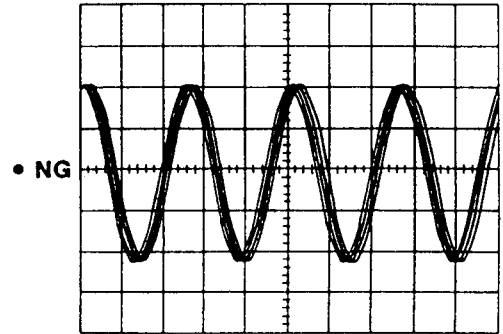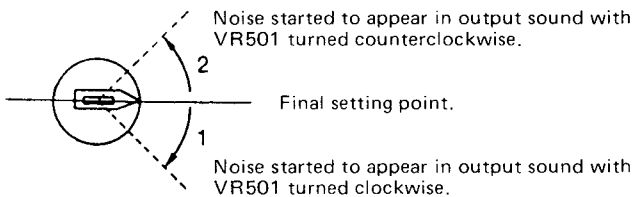

(4) CHECK OF PLAY OPERATION AFTER ADJUSTMENT

*** Checking Skip Search**

1. Play an ordinary musical program disc.
2. Press the skip button to check for normal skip search operation (in both the forward and reverse directions).

*** Checking Manual Search**

1. Play an ordinary musical program disc.
2. Press the manual search button to check for smooth manual search operations at either low or high speed (in both the forward and reverse directions).

*** Playability check by test disc**

1. Play the 0.7 mm black dot and the 0.7 mm wedge on the defect test disc (SZZP1054C) and verify that no sound skip or noise occurs.

■ TERMINAL FUNCTIONS OF IC'S

● IC6501 (TDA8808T): Photo diode signal processor

Pin No.	Mark	I/O Division	Function
1	GCHF	I	Gain control input of HF amplifier. Current output from HF amplitude detector
2	Vp	I	Positive supply voltage
3	HFout	O	HF amplifier and equalizer voltage output
4	DET	I	HF detector voltage input
5	Sc	I	Starting up capacitor input
6	Si/ \overline{RD}	I/O	On/off control (start input); ready signal output (starting up procedure successful)
7	Beq	I	Equalizer reference current input
8	Bgc	I	DC and LF gain control reference current input
9	FOC START	I	Focus normalizing circuit starting current
10	PLLH	O	PLL on hold output
11	\overline{TL}	O	Track loss output
12	\overline{DODS}	I	Drop out detector suppression input
13	Vext	I	Negative supply connection for FE and FElag output stage; also substrate connection
14	LPF	O	Low pass filter for Iret, used in track loss (\overline{TL}) detector and LF gain control

Pin No.	Mark	I/O Division	Function
15	FE	O	Current output of normalized, switched focus error signal
16	FElag	O	Current output of switched focus error signal, intended for lag network
17	LO	O	Laser amplifier current output
18	LM	I	Laser monitor diode input
19	GCLF	I	Gain control input for AC and LF amplifiers. Current output from LF amplitude detector
20	Re2	O	Summation of amplified currents from D3 and D4
21	Re1	O	Summation of amplified currents from D1 and D2
22, 23	D1, D2	I	Current inputs to DC and LF photo diode amplifier
24, 25	D3, D4	I	Current inputs to DC and LF photo diode amplifier
26	HFin	I	Current input to HF amplifier
27	GND	I	Ground connection of device
28	DEC	I	Decoupling input (internal bypass)

● IC6503 (TDA8809T): Radial error signal processor

Pin No.	Mark	I/O Division	Function
1	Vp	I	Positive supply voltage
2	Cosc1	I	Frequency setting capacitors for oscillator
3	Cosc2		
4	Rwob		
5	Rosc	I	Biassing resistor for oscillator frequency and internal amplitude
6	$\overline{DIV4}$	I	Divide-by-4 input
7	REdig	O	Digital output of sign (Re2 – Re1)
8	B3	I	Input control bits for off-, catch-, play-status and DAC output current
9	B2		
10	B1		
11	B0		
12	Vext(+)	I	Positive external voltage input
13	Vext(-)	I	Negative external voltage input (also substrate connection)
14	GND	I	GND terminal
15	RADout	O	Current output of amplified (Re2 – Re1) input currents
16	REin	I	Radial error input
17	RElag	O	Voltage output of integrated (Re2 – Re1) input currents

Pin No.	Mark	I/O Division	Function
18	Lag	I	Connection of integrator capacitor for (Re1 – Re2) input currents
19	Lead	O	Lead output
20	Vref	I	Internal reference voltage output
21	AGC	I	Gain control input for radial error signal
22	RDAC	O	Biassing resistor for current output for track jumping (3½ bits)
23	offset in	I	Offset control input for radial offset
24	offset off	O	Offset control output for radial offset
25	CLPF	I	Low-pass filter for Re1 and Re2, used for radial offset control
26	CHPF	I	High-pass filter for Re1 and Re2, used for radial offset control
27	Re1	I	Input for amplified currents from photo-diodes D1 and D2
28	Re2	I	Input for amplified currents from photo diodes D3 and D4

● IC301 (MN6625): Digital signal processor

Pin No.	Mark	I/O Division	Function	Pin No.	Mark	I/O Division	Function
1	BYTCK	O	Serial data byte clock (Not used, open)	25	MCLK	I	Data clock for MDATA
2	FCLK	O	Crystal frame clock (Not used, open)	26	MDATA	I	Mode control data
3	DEMPH	O	De-emphasis ON signal (de-emphasis ON at "H")	27	DMUTE	I	Data mute command
4	SRDATA	O	Serial data output (MSB first)	28	$\overline{\text{TRON}}$	I	Tracking servo ON signal (tracking servo ON at "L")
5	SCLK	O	Serial bit clock output	29	STAT	O	Status command for CRC etc. . .
6	LRCK	O	LR discrimination clock (88.2kHz)	30	SUBC	O	Sub-code serial output data (Not used, open)
7	WDCK	O	Serial data output word clock (Not used, open)	31	SBCK	I	Clock for sub-code serial output (Not used, open)
8	LDG	O	L channel deglitch signal (Not used, open)	32	SMCK	O	System clock (4.2336MHz)
9	RDG	O	R channel deglitch signal (Not used, open)	33	VDD	I	Power supply (connected to +4.9V)
10	IPFLAG	O	Interpolation flag (interpolation at "H") (Not used, open)	34	MEMP	I	Deemphasis command
11	FLAG	O	Error flag terminal (Not used, open)	35	FG	I	Turntable motor FG signal input (Not used, open)
12	XCK	O	Clock (16.9344MHz) output (Not used, open)	36	PC	O	Turntable motor ON command (ON at "L")
13	TEST	I	Test mode selection (Not used, connected to +4.9V)	37	EC	O	Turntable motor drive signal
14	TX	O	Digital signal output	38	RESY	O	Resynchronizing signal (Not used, open)
15	SLEEP	I	Mode selector ("L": normal, "H": SLEEP mode) (Not used, connected to GND)	39	DO	I	Drop-out detection signal (Drop-out at "H")
16	CSEL	I	Test terminal ("L": normal) (Not used, connected to GND)	40	SRF	I	Sliced RF signal
17	X1	I	Clock input (16.9344 MHz)	41	EFM	I	Modulation data
18	X2	O	Clock output (16.9344MHz) (Not used, open)	42	PCK	I	PLL extract clock (4.2336MHz)
19	VSS	I	GND terminal	43	FPC	O	PLL frequency comparison signal
20	BLKCK	O	Sub-code Q data block clock (75Hz)	44 } 51	D7 } D0	I/O	16K RAM data input/output
21	$\overline{\text{CLDCK}}$	O	Sub-code frame clock (7.35kHz)	52	RAM OE	O	Read out enable
22	$\overline{\text{SUBQ}}$	O	Sub-code Q data	53	RAM WE	O	Write enable
23	$\overline{\text{RST}}$	I	Reset command	54 } 64	RAM A0 } RAM A10	O	16K RAM address signal (RAMA0: LSB, RAMA10: MSB)
24	MLD	I	Load command for mode control data				

● IC401 (MN187124): System control & FL drive

Pin No.	Mark	I/O Division	Function	Pin No.	Mark	I/O Division	Function
1 } 7	SEG6 } SEG0	O	FL segment signal	28	P10	I	Track loss input
8	VPP	I	FL drive power supply (connected to -31.4V)	29	RST	I	Reset command
9	VDD	I	Power supply (Connected to 4.9V)	30	P05	I	Sub-code frame clock (7.35 kHz)
10	OSC2	I	Clock terminal	31	P04	I	Sub-code Q data
11	OSC1	I	Clock input	32	P03	I	Disc holder open/close det. signal input
12	VSS	-	GND terminal	33	SBT0	I	Sub-code Q data block clock (75 Hz)
13	XI	I	Digital input of sign (Re2 - Re1)	34	SB0	O	Drop out detector/Tracking servo ON signal output
14	XO	-	Net used, open	35	P00	I	Status command for CRC etc.
15	P27	O	Synchro rec control terminal	36	SYNC	-	Not used, open
16	P26	O	Loading motor control signal	37	CM	-	GND terminal
17	P25	O	Muting control signal	38	P47	O	Divide-by 4 output
18	P24	I/O	On/off control (start input); ready signal output (starting up procedure successful)	39	P46	O	Deemphasis command
19 } 22	P23 } P20	O	Output control bits for off-, catch-, play- status and DAC output current	40	P45	I	PLL on hold input
23	IRQ1	I	Remote control signal	41 } 45	P44 } P41	I	Key return signal and key scan signal.
24	IRQ0	I	Digital input of sign (Re2 - Re1)	46 } 61	DGT0 } DGT15	O	FL digit signal and key scan signal
25	P13	O	Mode control data	62	P61	O	Synchro rec control signal
26	P12	O	Data clock for MDATA	63 64	SEG8 SEG7	O	FL segment signal
27	P11	O	Load command for mode control data				

• IC501 (AN8371S): Data slice and PLL

Pin No.	Mark	I/O Division	Function
1	VEE	I	Power supply (connected to $-5.2V$)
2	SRF	O	Sliced RF signal
3	EFM	O	Modulation data
4	D.GND	I	GND terminal (digital system)
5	PCK	O	PLL extract clock (4.2336MHz)
6	VCC	I	Power supply (connected to $+4.9V$)
7	VA	I	VCO free run frequency adjusting current input (Not used, open)
8, 9	VC1, 2	I	Capacitor connection for VCO oscillator frequency
10	VR	I	Resistor connection for VCO oscillator frequency
11	PD	I	Capacitor connection for PLL DO protection
12	PL1	I	PLL loop filter connection

Pin No.	Mark	I/O Division	Function
13	PL2	I	PLL loop filter connection
14	FPC	I	PLL frequency comparison signal
15	RF	I	Data
16	ARF	O	RF signal output with AGC output
17	AGC	I	ARF signal input for AGF drop-out detection input
18	AC	I	Loop filter for AGC connected
19	DO	O	Drop-out detection signal
20	A.GND	I	GND terminal (analog system)
21	DSL	I	RF signal input for data slicing
22	SLC	I	Slicing level control signal input (Not used, connected to GND)
23	FC1	I	Filter capacitor for data slicer connected
24	FC2	I	Filter capacitor for data slicer connected


• IC801 (MN6474): Digital filter and D/A converter

Pin No.	Mark	I/O Division	Function
1	MLD	I	Command load input (load: L)
2	RSTB	I	Reset command
3	IE	I	Not used, connected to GND
4	TP1	—	TEST terminal
5	TP2	—	
6	TEST1	I	TEST terminal 1 (connected to GND)
7	TEST2	I	TEST terminal 2 (connected to GND)
8	NC	—	Not connected
9	NC	—	Not connected
10	AVDD4	I	Power supply (connected to $+4.7V$)
11	OUTL (-)	O	Lch data output, (-) terminal
12	AVSS4	I	GND terminal
13	AVSS3	I	GND terminal
14	OUTL (+)	O	Lch data output, (+) terminal
15	AVDD3	I	Power supply (connected to $+4.7V$)
16	NC	—	Not connected
17	AVDD2	I	Power supply (connected to $+4.7V$)
18	OUTR (+)	O	Rch data output, (+) terminal
19	AVSS2	I	GND terminal (analog system)
20	AVSS1	I	GND terminal (analog system)
21	OUTR (-)	O	Rch data output, (-) terminal

Pin No.	Mark	I/O Division	Function
22	AVDD1	I	Power supply (connected to $+4.7V$)
23	DVDD1	I	Power supply (connected to $+4.8V$)
24	DVSS1	I	GND terminal (digital system)
25	X2	O	Clock output
26	X1	I	Clock input
27	NC	—	Not connected
28	DVDD2	I	Power supply (connected to $+4.8V$)
29	DVSS2	I	GND terminal (digital system)
30	NSUB	I	Sub-strate terminal (Not used, connected to $+4.8V$)
31	ZFLGB	O	Zero input detector terminal (Not used, open)
32	192fs	O	192 fs (8.4672MHz) (Not used, open)
33	LRPOL	I	LR clock selector (Not used, connected to $+4.8V$)
34	LRCLK	I	LR discrimination signal input
35	BCLK	I	Serial bit clock input
36	SRDATA	I	Serial data input (MSB first)
37	DVSS 3	I	GND terminal (digital system)
38	DVDD	I	Power supply (connected to $+4.8V$)
39	384 fs	O	384 fs (16.9344MHz) output
40	PD	I	Power down terminal (Not used, connected to GND)
41	MDATA	I	Mode control data
42	MCLK	I	Data clock for MDATA

INTERNAL CONNECTION OF FL

Grid assignment

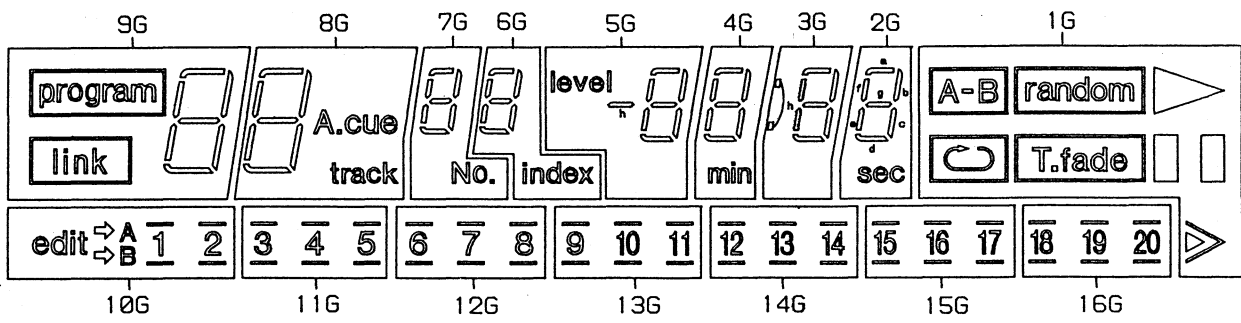


Anode connection

	16G	15G	14G	13G	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
a	18	15	12	9	6	3	edit	a	a	a	a	a	a	a	a	▶
b	18	15	12	9	6	3	↘ (down)	b	b	b	b	b	b	b	b	
c	18	15	12	9	6	3	↗ (up)	c	c	c	c	c	c	c	c	random
d	19	16	13	10	7	4	1	d	d	d	d	d	d	d	d	T.fade
e	19	16	13	10	7	4	1	e	e	e	e	e	e	e	e	⏪
f	19	16	13	10	7	4	1	f	f	f	f	f	f	f	f	A-
g	20	17	14	11	8	5	2	g	g	g	g	g	g	g	g	B
h	20	17	14	11	8	5	2	program	track	No.	index	—	min	sec	▶	
i	20	17	14	11	8	5	2	link	A.cue	-	-	level	-	-	-	>

Pin connection



42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	
F	F	N	a	b	c	d	N	N	N	e	f	g	h	i	16	15	14	13	N	N	N	N	12	11	10	9	8	7	6	5	4	N	N	N	N	3	2	1	N	F	F	1

BLOCK DIAGRAM

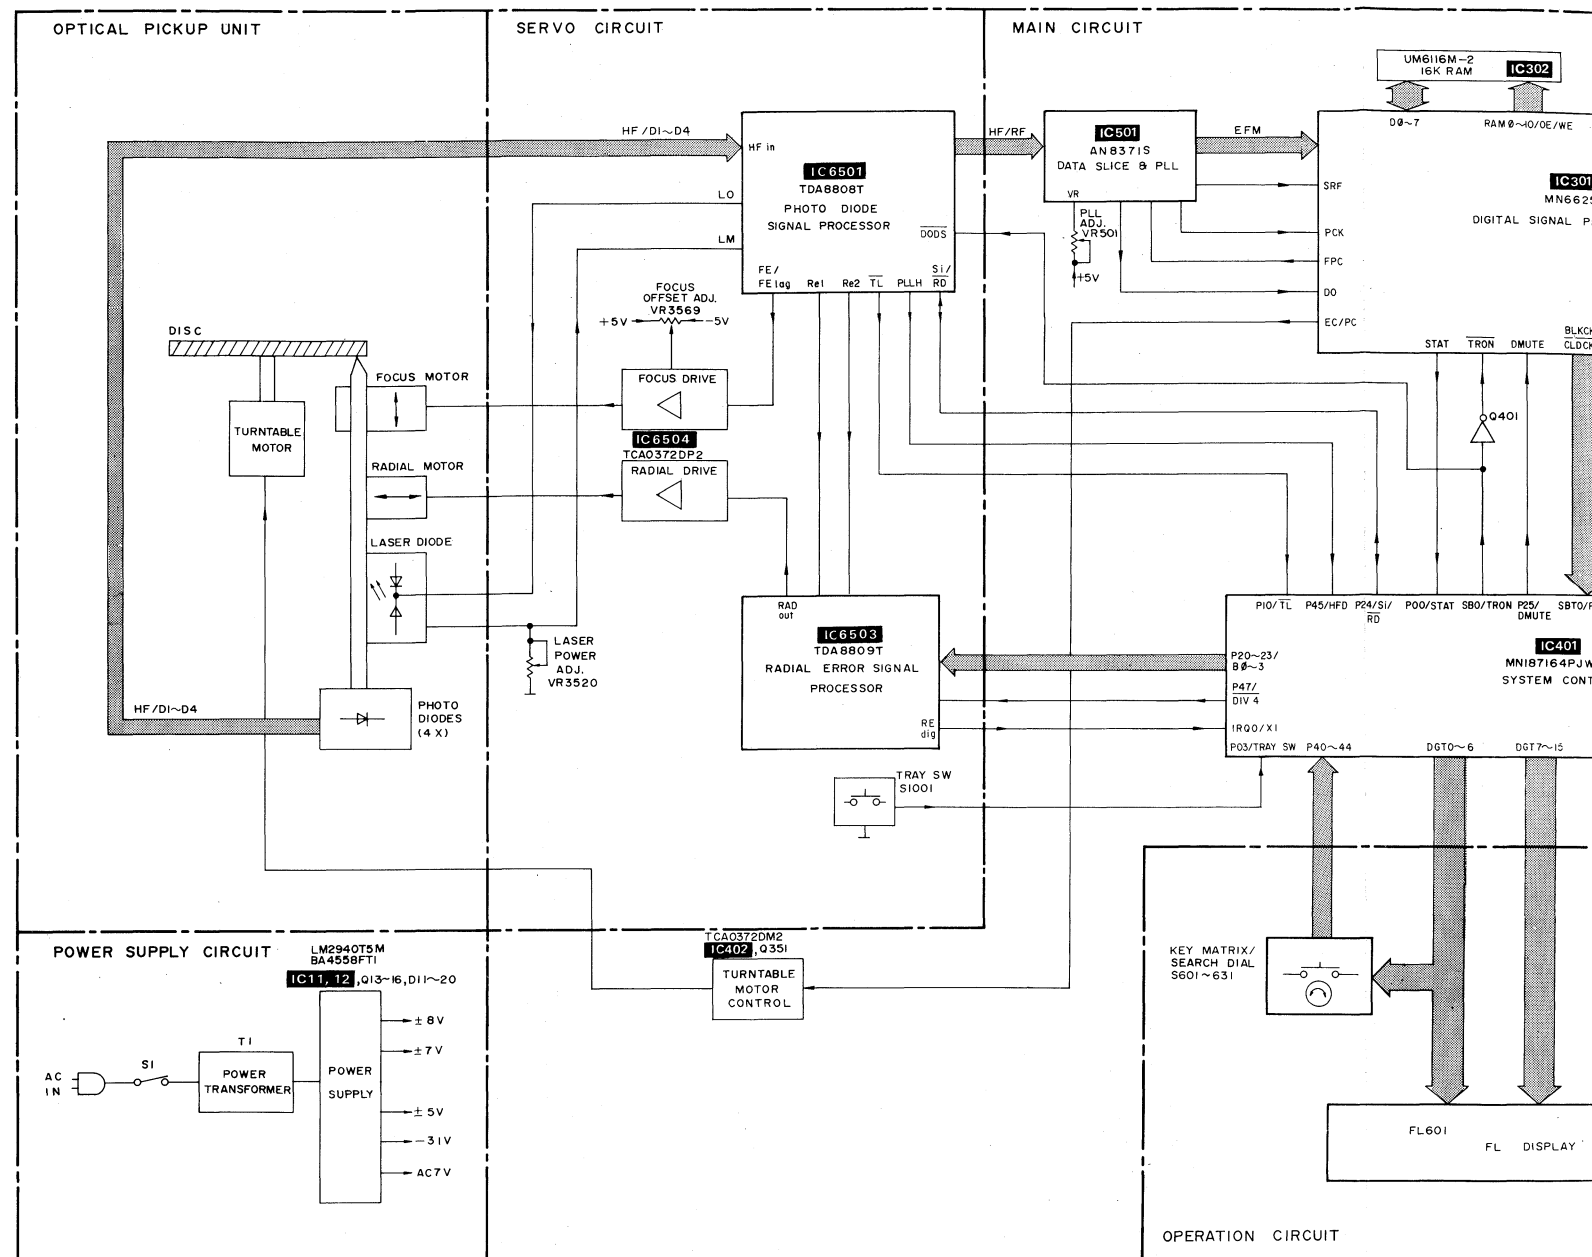

- RAD out : Current output of integrated (Re2 - Re1) input currents.
- B0 ~ B3: Control bits for radial circuit.
- DODS : Drop out detector suppression.
- D1 ~ D4 : Photodiode currents.
- FE : Focus error signal.
- FE lag : Focus error signal for LAG network.
- HF : HF output for DEMOD.
- HFD : HF detector output for DEMOD.
- (PLLH)
- HFin : HF current input.
- LM : Laser monitor diode input.
- LO : Laser amplifier current output.
- Re1 : Radial error signal 1 (summation of amplified currents D3 and D4).
- Re2 : Radial error signal 2 (summation of amplified currents D1 and D2).
- RE dig (IROO/XI) : Radial error digital.
- RE lag : Radial error signal for LAG network.
- Si/RD : On/off control for laser supply and focus circuit.
- TL : Track loss signal.
- Div4 : Radial error digital divided by four.
- HF/RF : Data.
- DO : Drop-out detection signal (Active High).
- SRF : Sliced RF signal.
- EFM : Modulation data.
- PCK : PLL extract clock (4.2336MHz).
- FPC : PLL frequency comparison signal.
- STAT : Status command for CRC etc.
- DMUTE : Data mute command.
- MDATA : Mode control data.
- MLD : Load command for mode control data (Active Low).
- P40~44 : Mode control data.
- DGT0~15 : Digital signal processor outputs.
- SEG0~8 : Digital signal processor outputs.
- MCLK : Digital signal processor outputs.
- SUBQ : Digital signal processor outputs.
- CLDCK : Digital signal processor outputs.
- BLKCK : Digital signal processor outputs.
- RST (RSTB) : Digital signal processor outputs.
- TRON : Digital signal processor outputs.
- EC : Digital signal processor outputs.
- PC : Digital signal processor outputs.
- SMCK (OSC1/OSC2) : Digital signal processor outputs.
- OE : Digital signal processor outputs.
- WE : Digital signal processor outputs.

■ BLOCK DIAGRAM

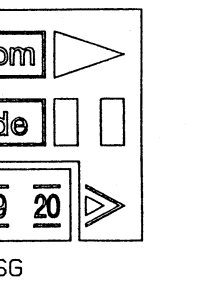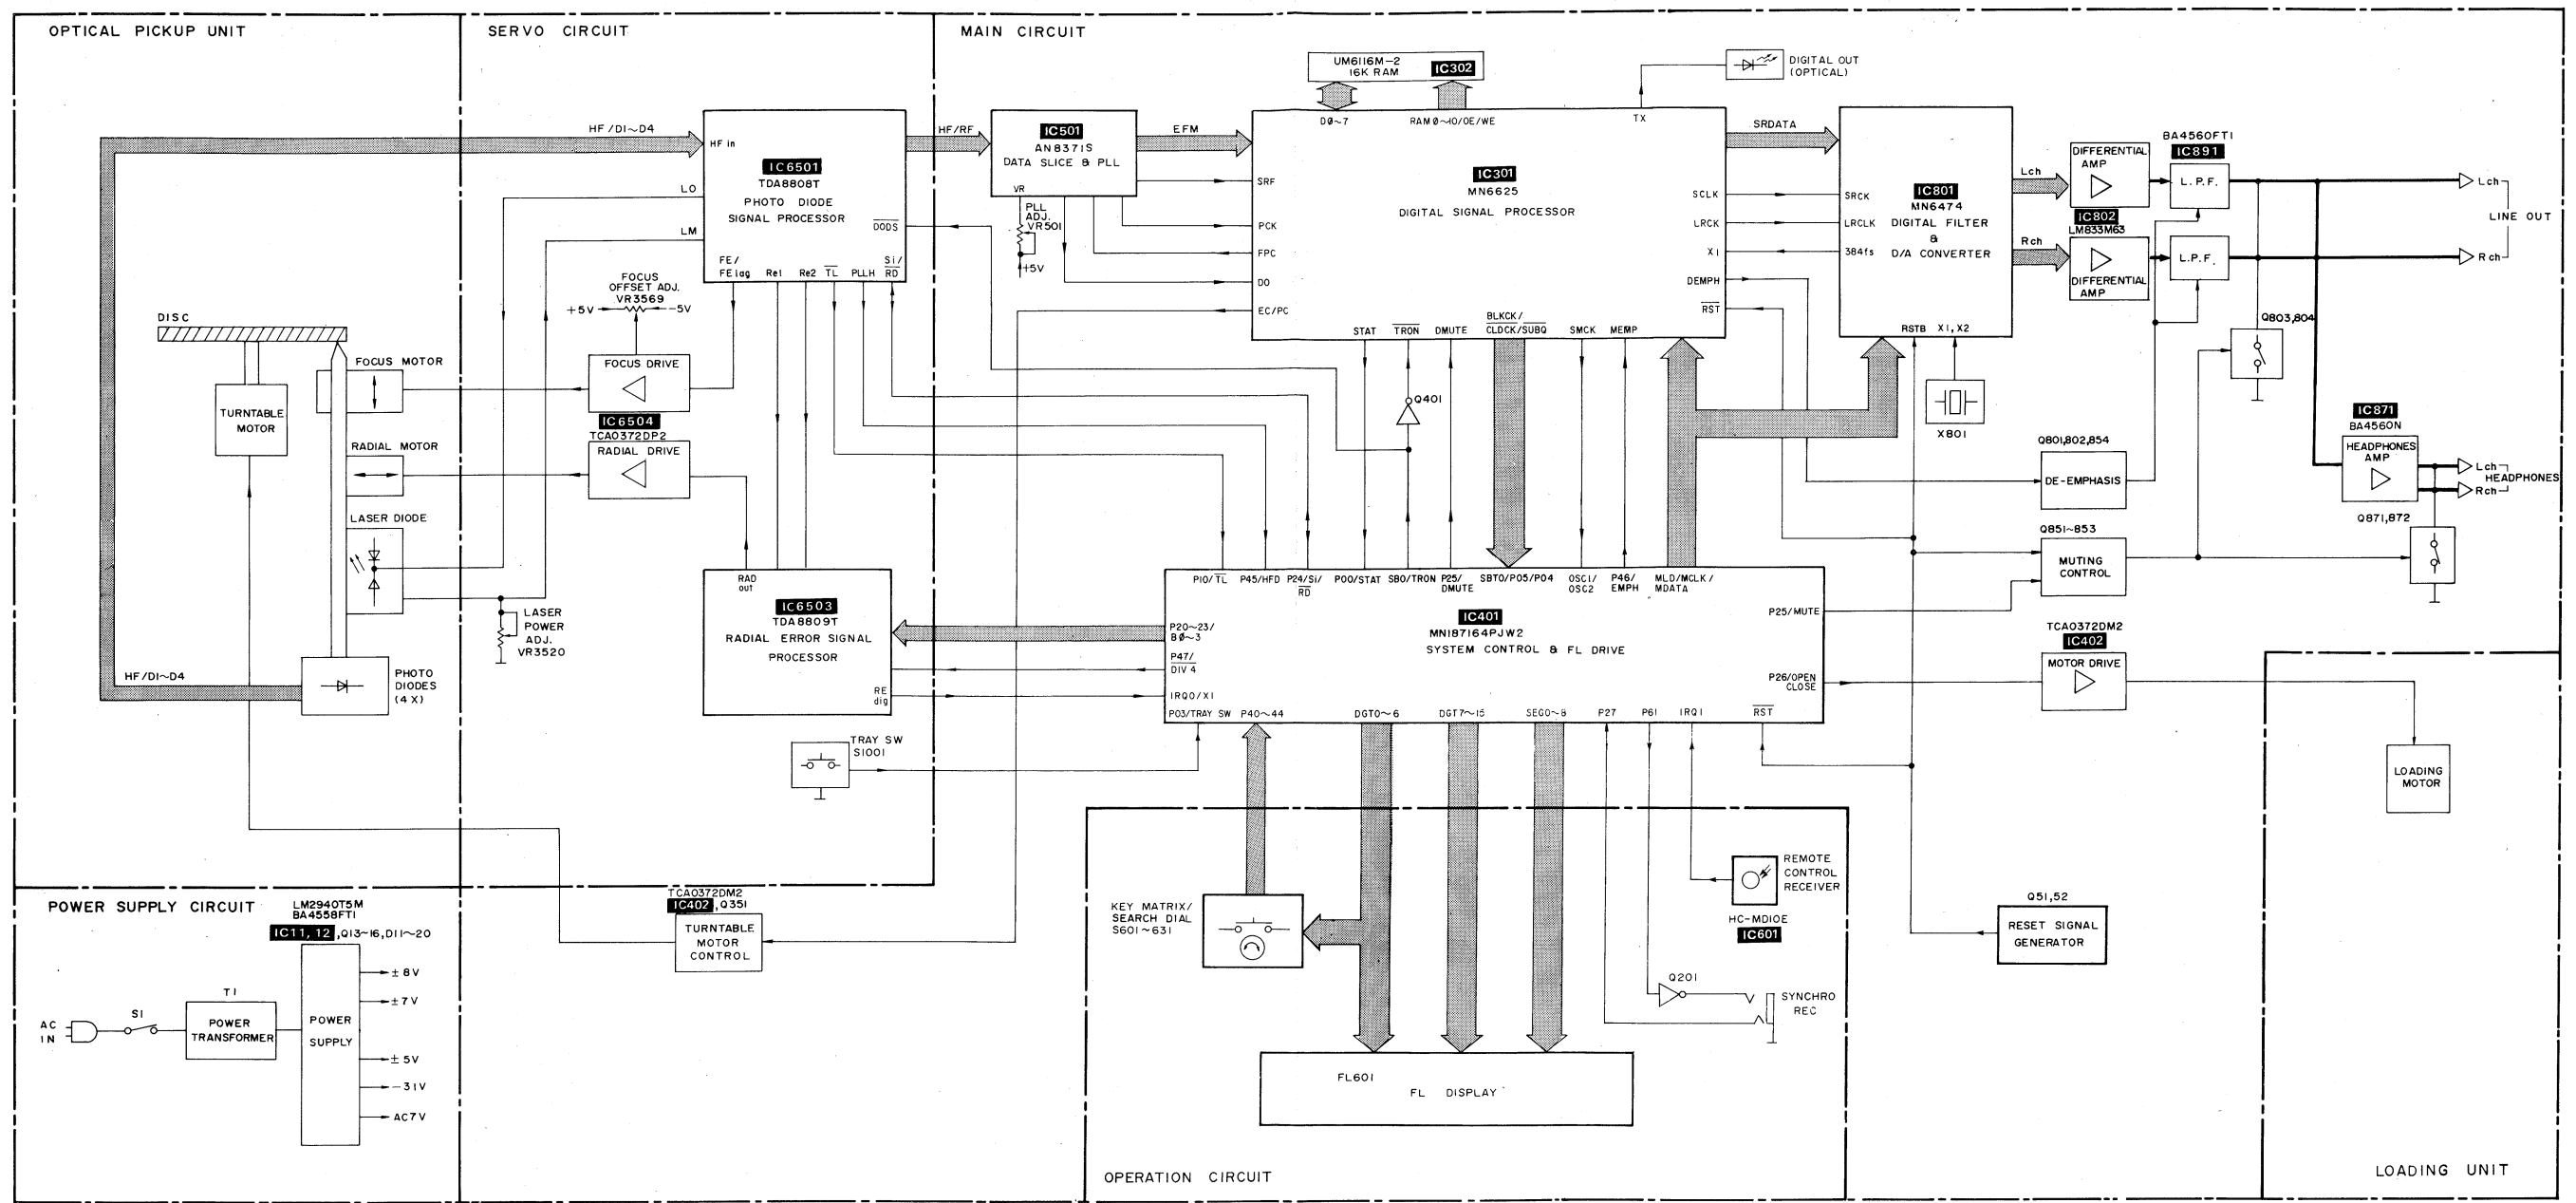

3G	2G	1G
a	a	▶
b	b	
c	c	random
d	d	T.fade
e	e	▶
f	f	A-
g	g	B
sec		▶

6	5	4	3	2	1
3G	2G	1G	N	F	F
G	G	P	1	1	1

- RAD out : Current output of integrated (Re2 - Re1) input currents.
- B0 ~ B3: : Control bits for radial circuit.
- D0DS : Drop out detector suppression.
- D1 ~ D4 : Photodiode currents.
- FE : Focus error signal.
- FE lag : Focus error signal for LAG network.
- HF : HF output for DEMOD.
- HFD : HF detector output for DEMOD.
- (PLLH)
- HFin : HF current input.
- LM : Laser monitor diode input.
- LO : Laser amplifier current output.
- Re1 : Radial error signal 1 (summation of amplified currents D3 and D4).
- Re2 : Radial error signal 2 (summation of amplified currents D1 and D2).

- RE dig (IRQO/XI) : Radial error digital.
- RE lag : Radial error signal for LAG network.
- Si/RD : On/off control for laser supply and focus circuit.
- TL : Track loss signal.
- Div4 : Radial error digital divided by four.
- HF/RF : Data.
- D0 : Drop-out detection signal (Active High).
- SRF : Sliced RF signal.
- EFM : Modulation data.
- PCK : PLL extract clock (4.2336MHz).
- FPC : PLL frequency comparison signal.
- STAT : Status command for CRC etc.
- DMUTE : Data mute command.
- MDATA : Mode control data.
- MLD : Load command for mode control data (Active Low).

- P40~44 : Key return signal.
- DGT0~15 : Key scan signal and FL digit signal.
- SEGO~8 : FL segment signal.
- MCLK : Data clock for MDATA.
- SUBQ : Sub-code Q data.
- CLDCK : Data frame clock (7.35KHz).
- BLKCK : Sub-code Q data block clock (75 Hz).
- RST (RSTB) : Reset command (Active Low).
- TRON : Tracking servo ON command (Active Low).
- EC : Turntable motor drive signal.
- PC : Turntable motor ON command (Active Low).
- SMCK : System clock (4.2336MHz).
- (OSC1/OSC2)
- OE : Read out enable.
- WE : Write enable.

- LRCK (LRCLK) : L/R data discrimination clock (88.2KHz)
- SRDATA : Serial data output (MSB first)
- SCLK (SRCK) : Serial bit clock (2.82MHz).
- MEMPH (EMPH) : Deemphasis command (Active High)
- P27/P61 : Synchro rec control
- IRQ1 : Remote control signal
- 384fs (X1) : 384fs (16.9344MHz) signal
- DEMPH : De-emphasis ON signal
- TX : Digital signal output
- D0~7 : 16K RAM data
- RAM0~10 : 16K RAM address signal
- P25 (MUTE) : Muting control signal
- P26 : Loading motor control signal (OPEN/CLOSE)

Note)
 ● → Audio signal.

SCHEMATIC DIAGRAM

(Parts list on pages 34 ~ 36, 42, 43.)

(This schematic diagram may be modified at any time with development of new technology.)

Notes:

- S1 : Power switch in "on" position.
- S601 ~ 612 : Numeric (+10, 0 ~ 10) switches.
 - S601: 0, S602: 1, S603: 2,
 - S604: 3, S605: 4, S606: 5,
 - S607: +10, S608: 10, S609: 9,
 - S610: 8, S611: 7, S612: 6
- S613 : Play (▶) PLAY) switch.
- S614 : Skip (◀) switch.
- S615 : Search (◀◀) switch.
- S616 : Program (PROGRAM) switch.
- S617 : Link (LINK) switch.
- S618 : Auto cue (A CUE) switch.
- S619 : Stop (■) STOP) switch.
- S620 : Skip (▶) switch.
- S621 : Search (▶▶) switch.
- S622 : Recall (RECALL) switch.
- S623 : Tape side select (SIDE A/B) switch.
- S624 : Random (RANDOM) switch.
- S625 : Time. Fade (T. FADE) switch.
- S626 : Disc holder open/close (▲ OPEN/CLOSE) switch.
- S627 : Pause (■) PAUSE) switch.
- S628 : Repeat (REPEAT) switch.
- S629 : Clear (CLEAR) switch.
- S630 : Edit (EDIT) switch.
- S631 : Time mode select (TIME MODE) switch.
- S1001 : Tray (OPEN/CLOSE) switch.

• The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis. And accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.

*The parenthesized are the values of voltage generated during playing (Test disc 1kHz, L+R, 0dB), others are voltage values in stop mode.

• Important safety notice:
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.


• ———— / ———— >---: Positive voltage lines and negative voltage lines.

⊞⊞⊞⊞ : Audio signal lines.

Caution!

IC and LSI are sensitive to static electricity. Secondary trouble can be prevented by taking care during repair.

- Cover the parts boxes made of plastics with aluminum foil.
- Ground the soldering iron.
- Put a conductive mat on the work table.
- Do not touch the pins of IC or LSI with fingers directly.

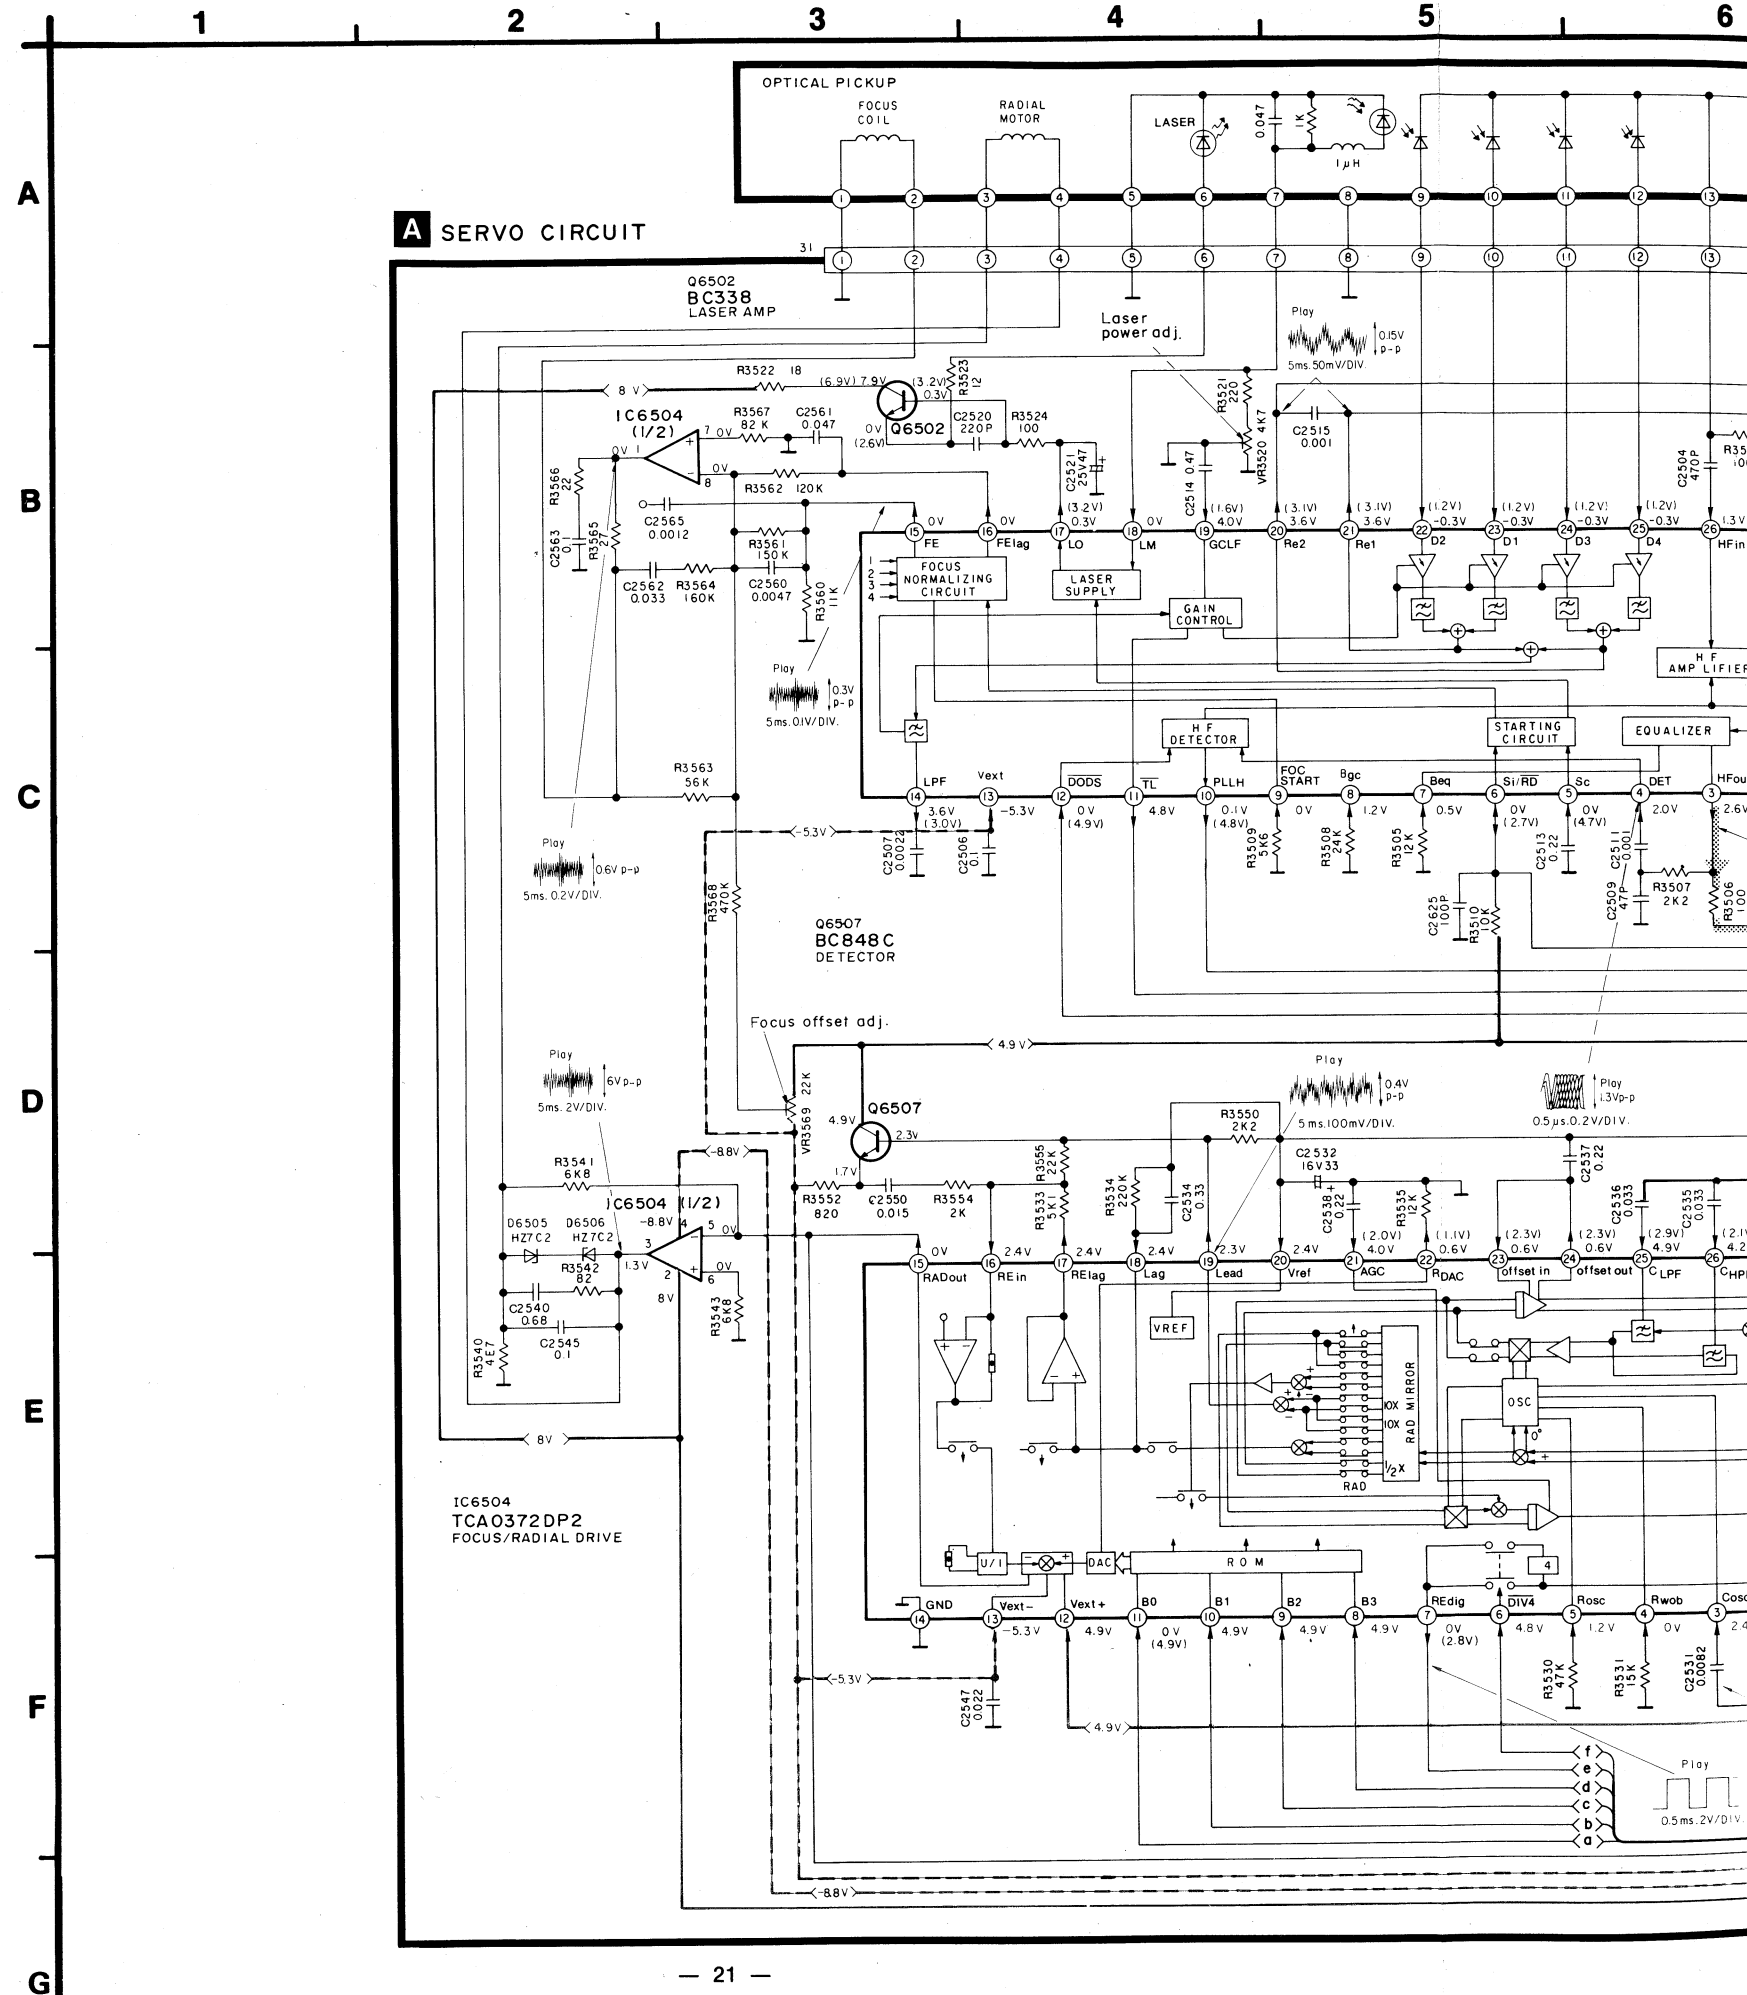

A

B

C


D

E


F

G


A SERVO CIRCUIT

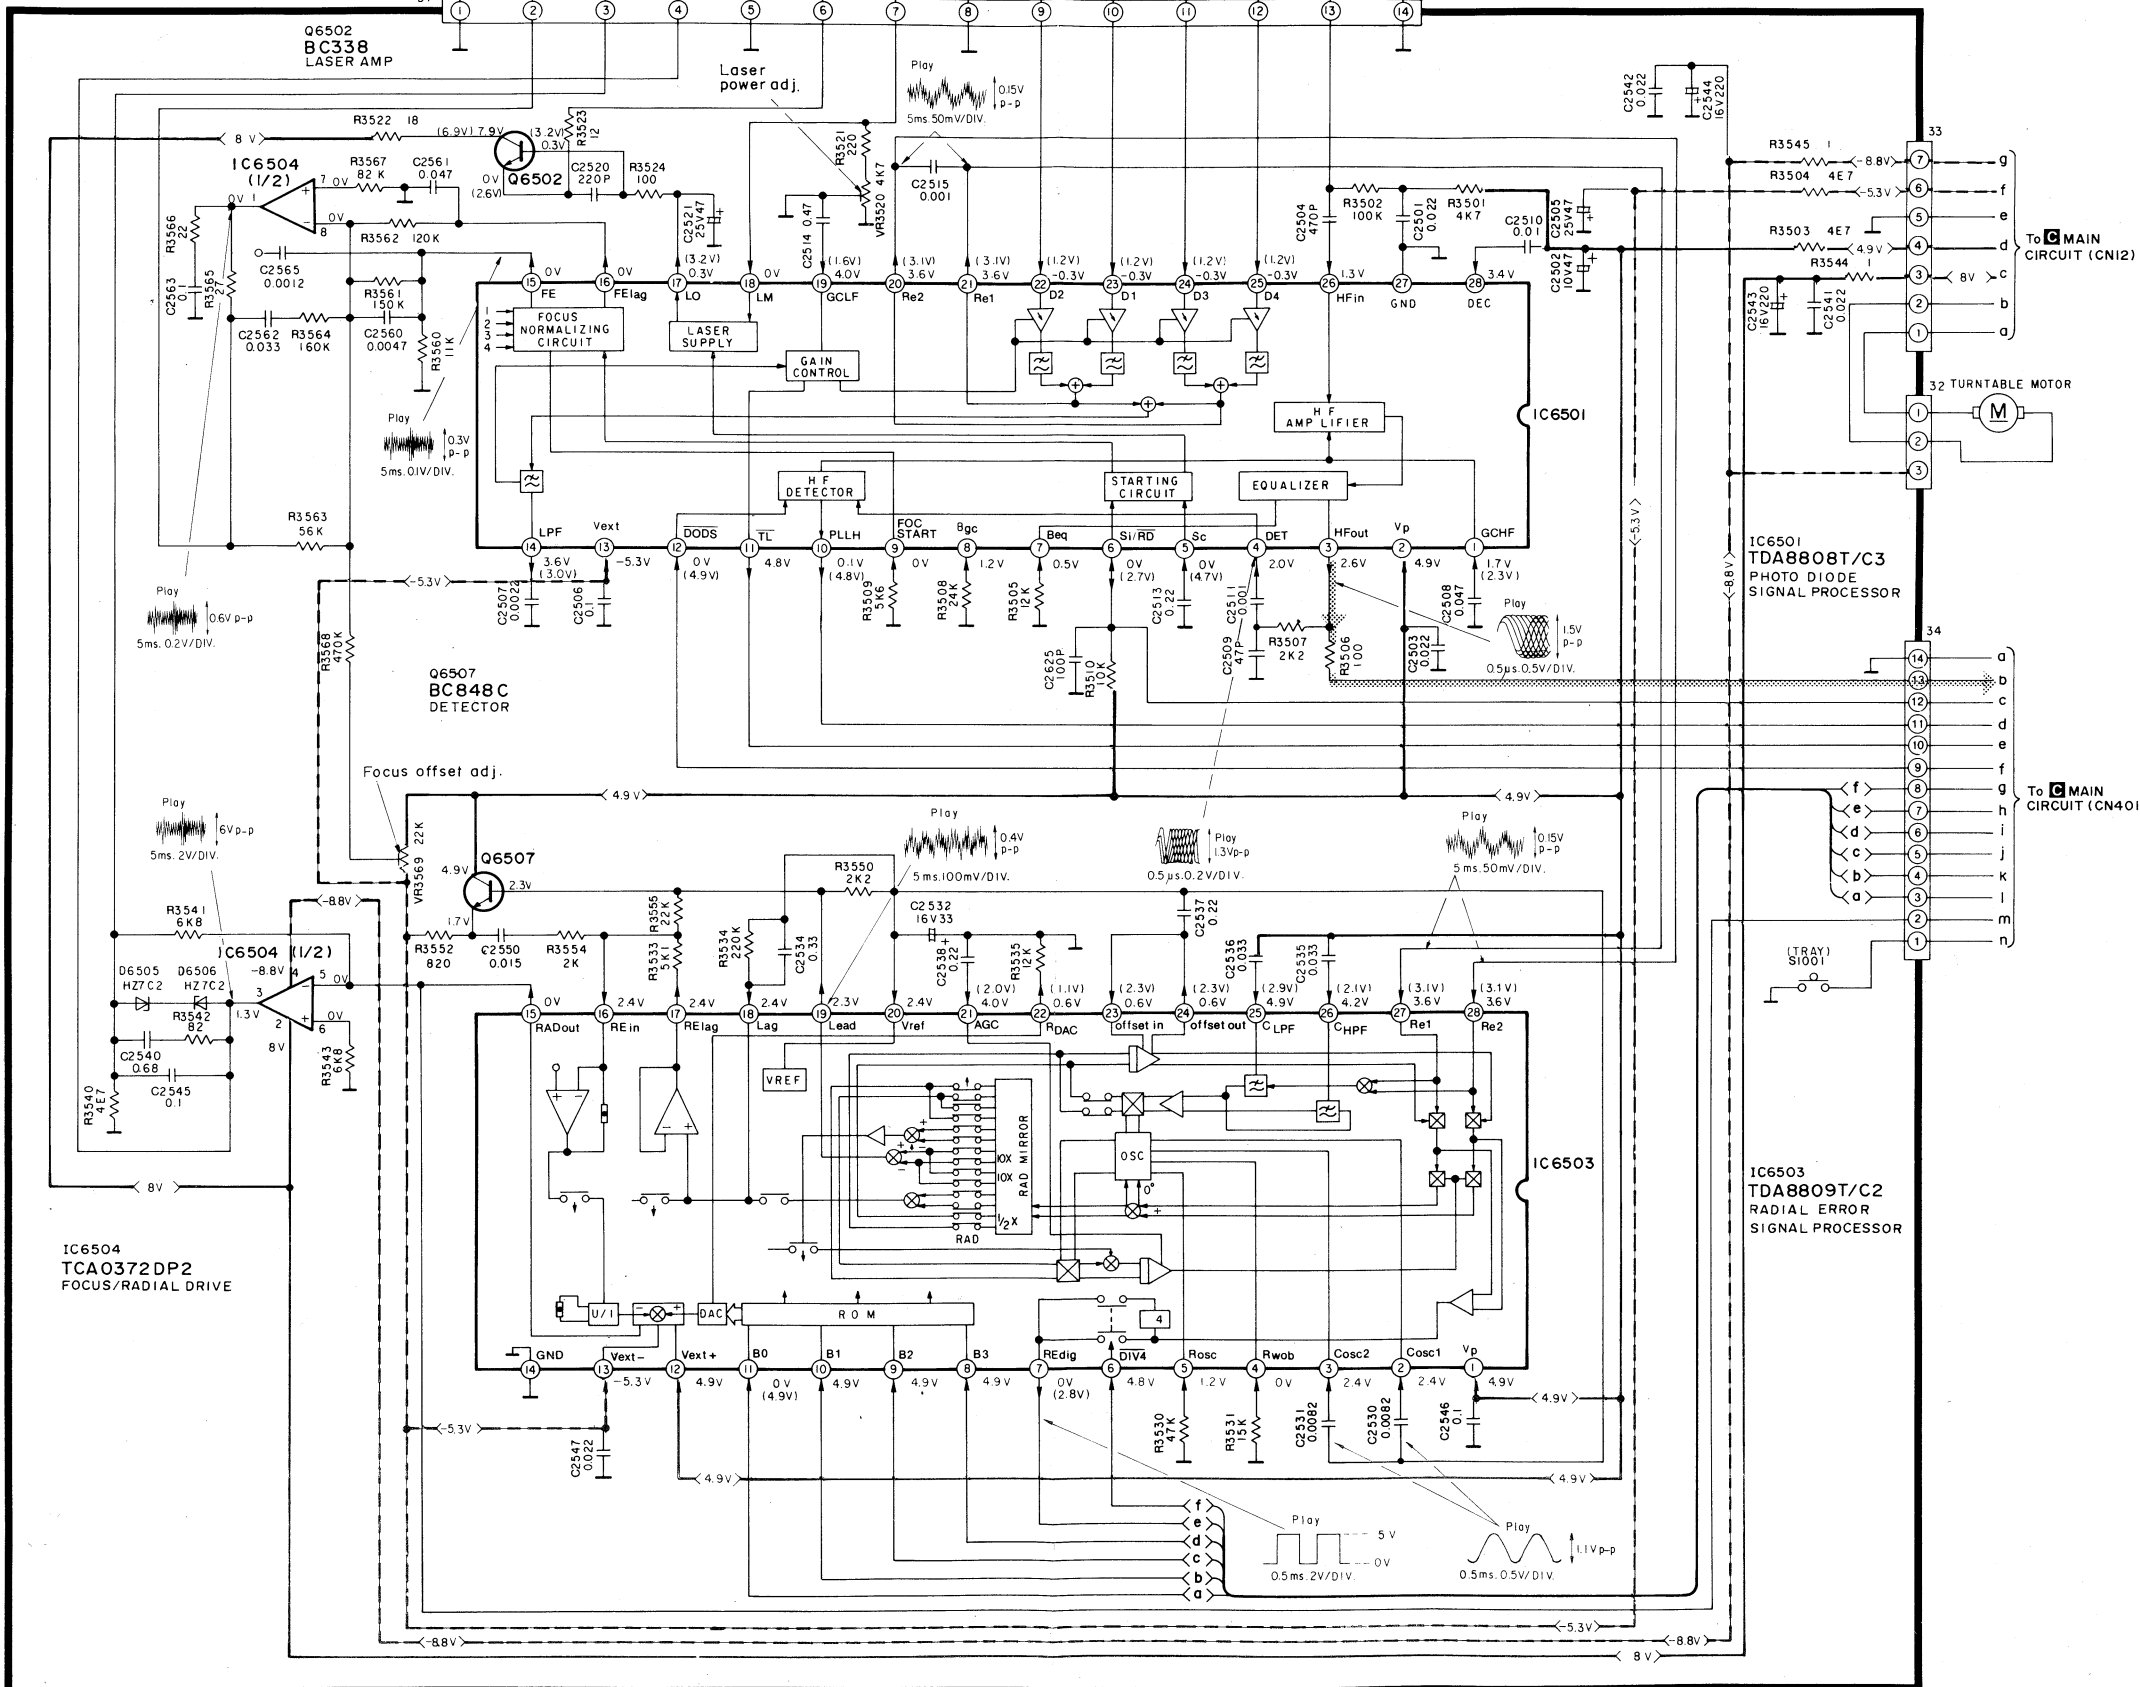

B OPERATION CIRCUIT

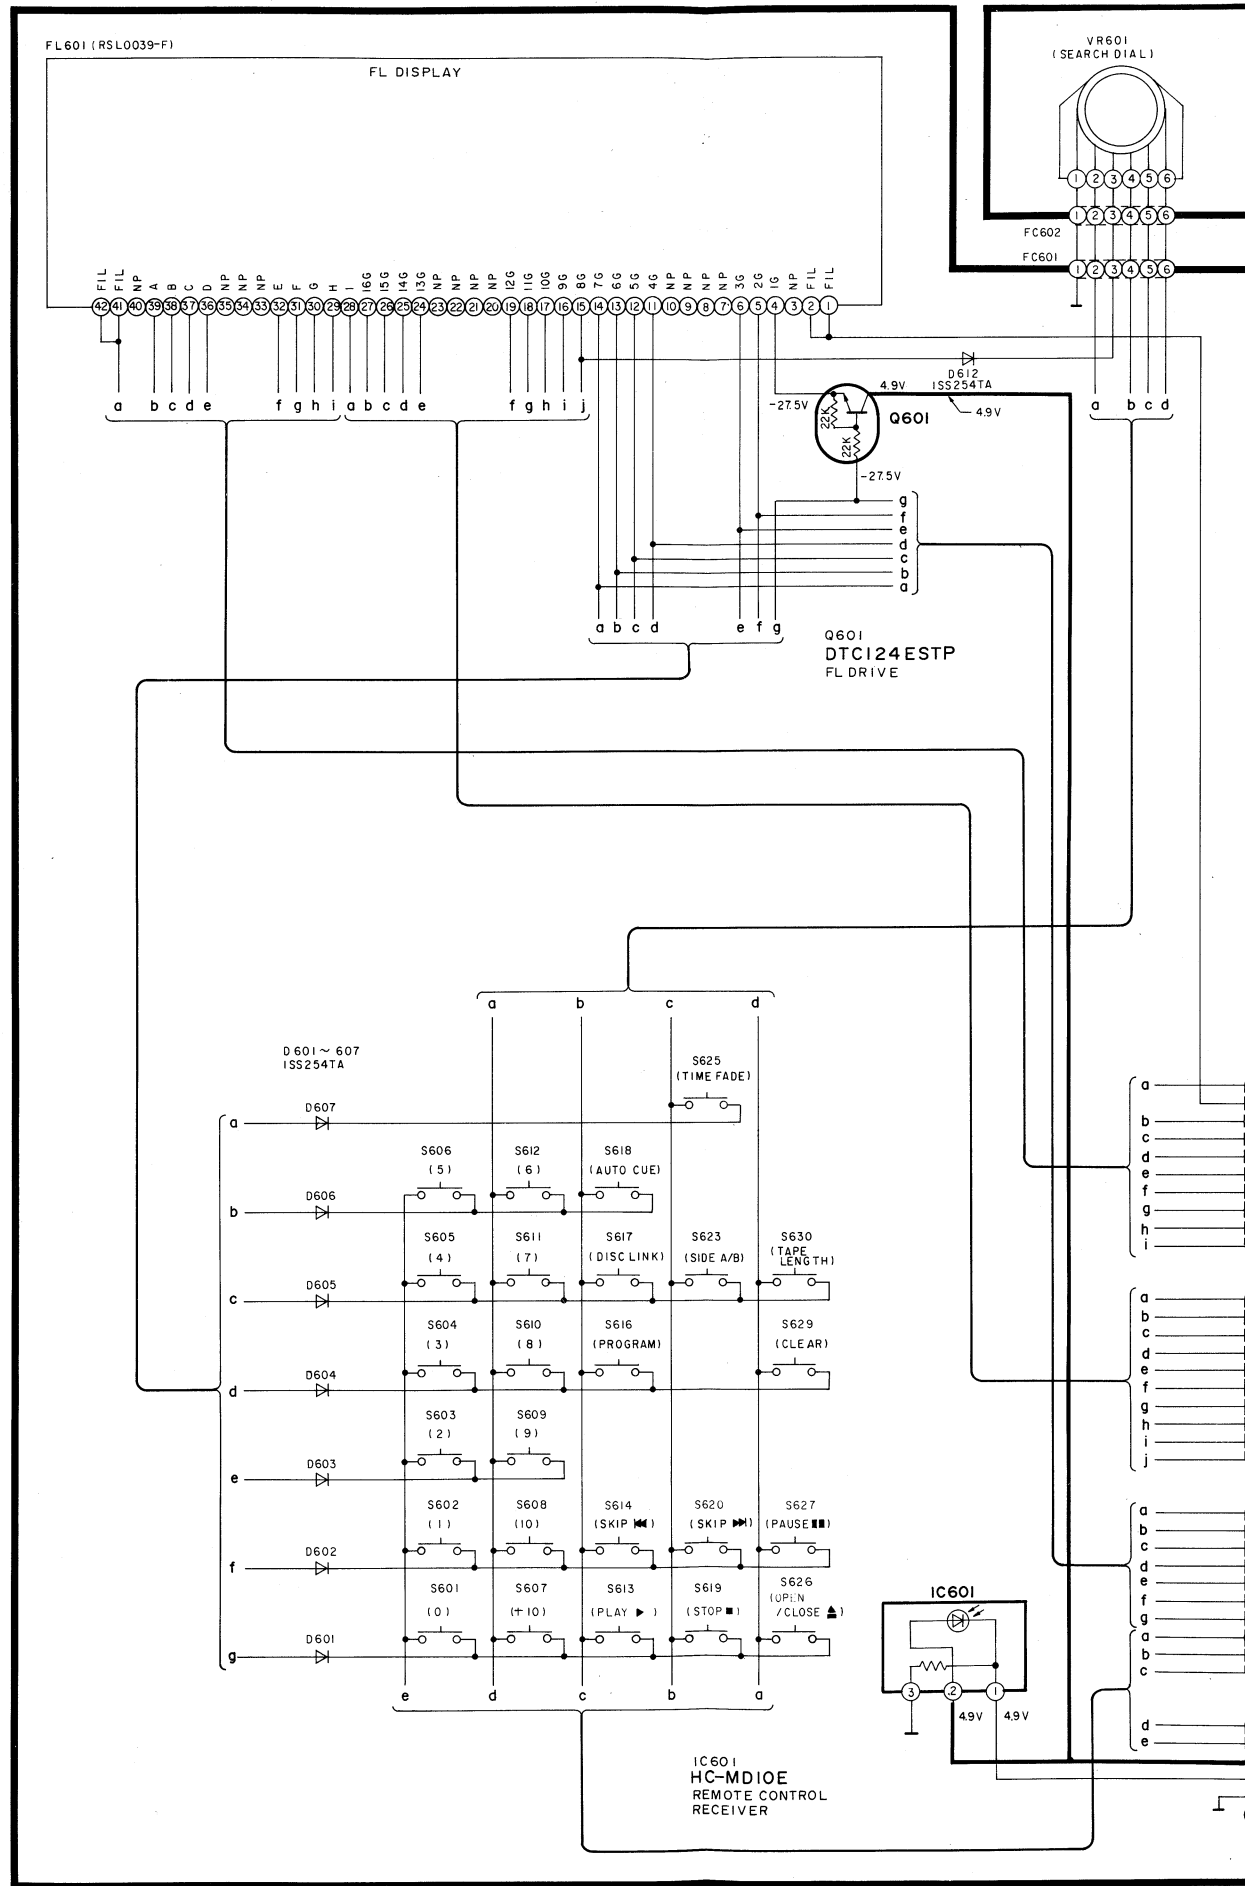

C SEARCH CIRCUIT

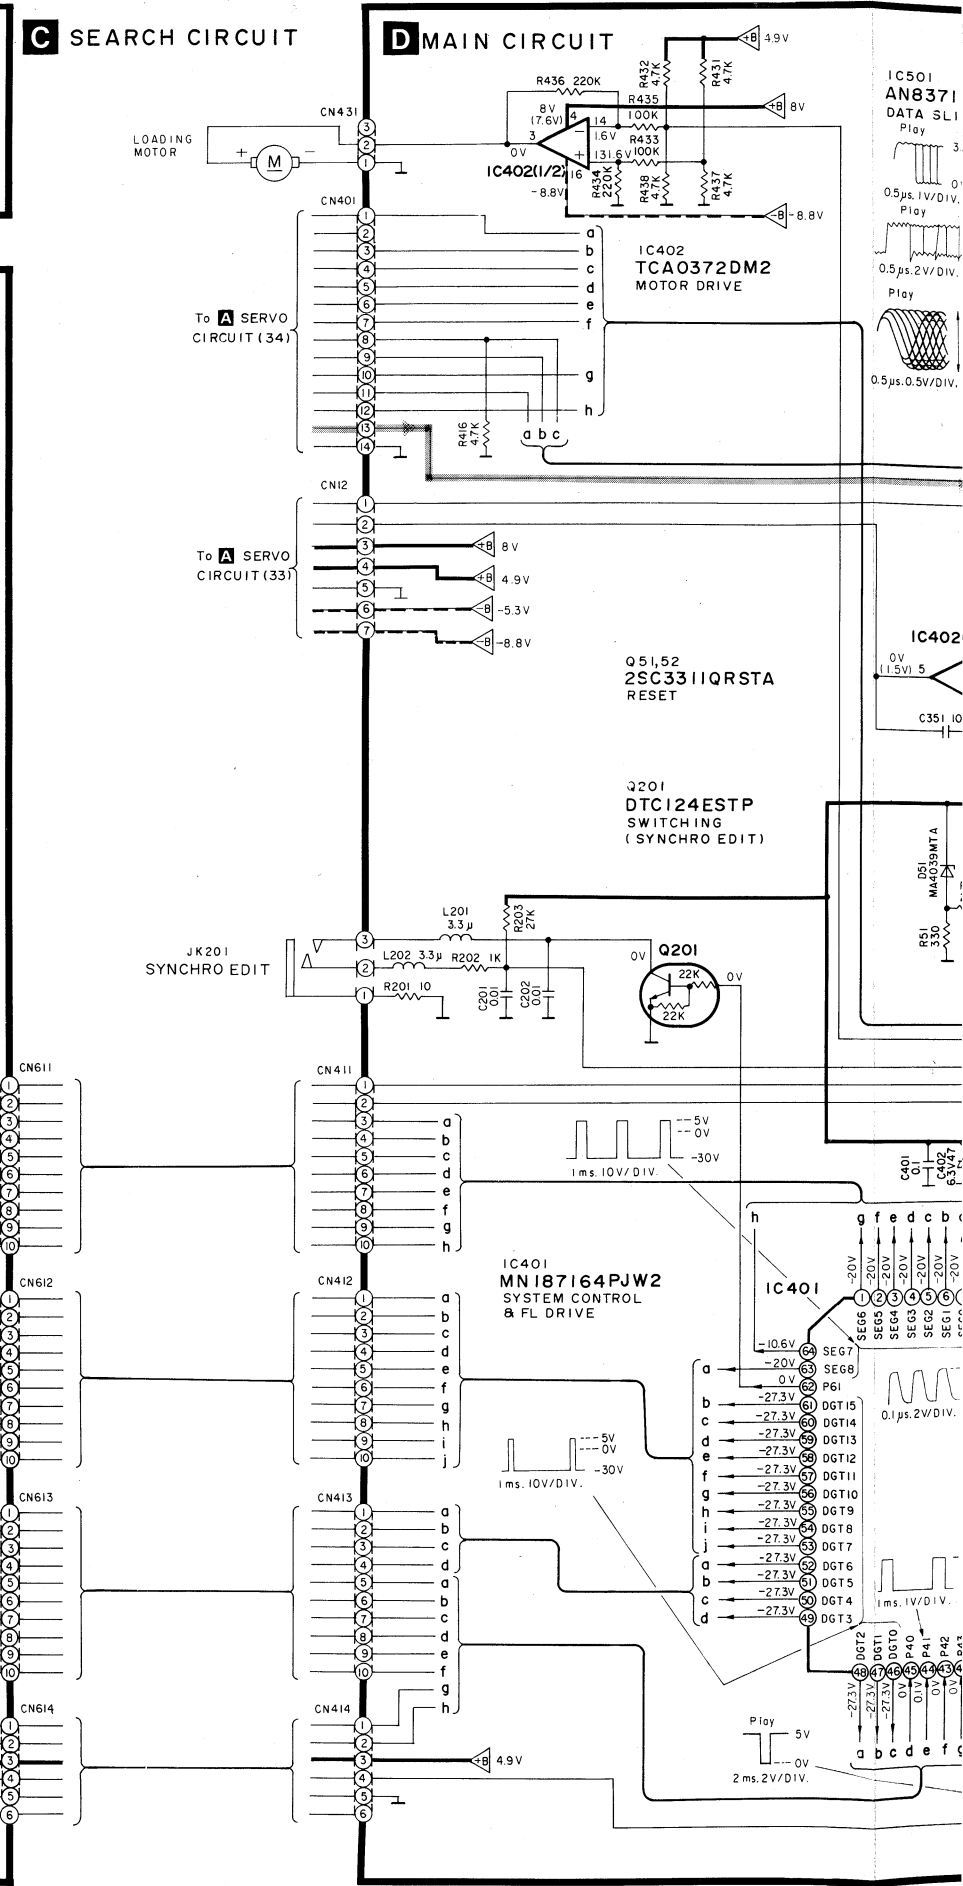



C SEARCH CIRCUIT

D MAIN CIRCUIT

E POWER SUPPLY

F HEADPHONE

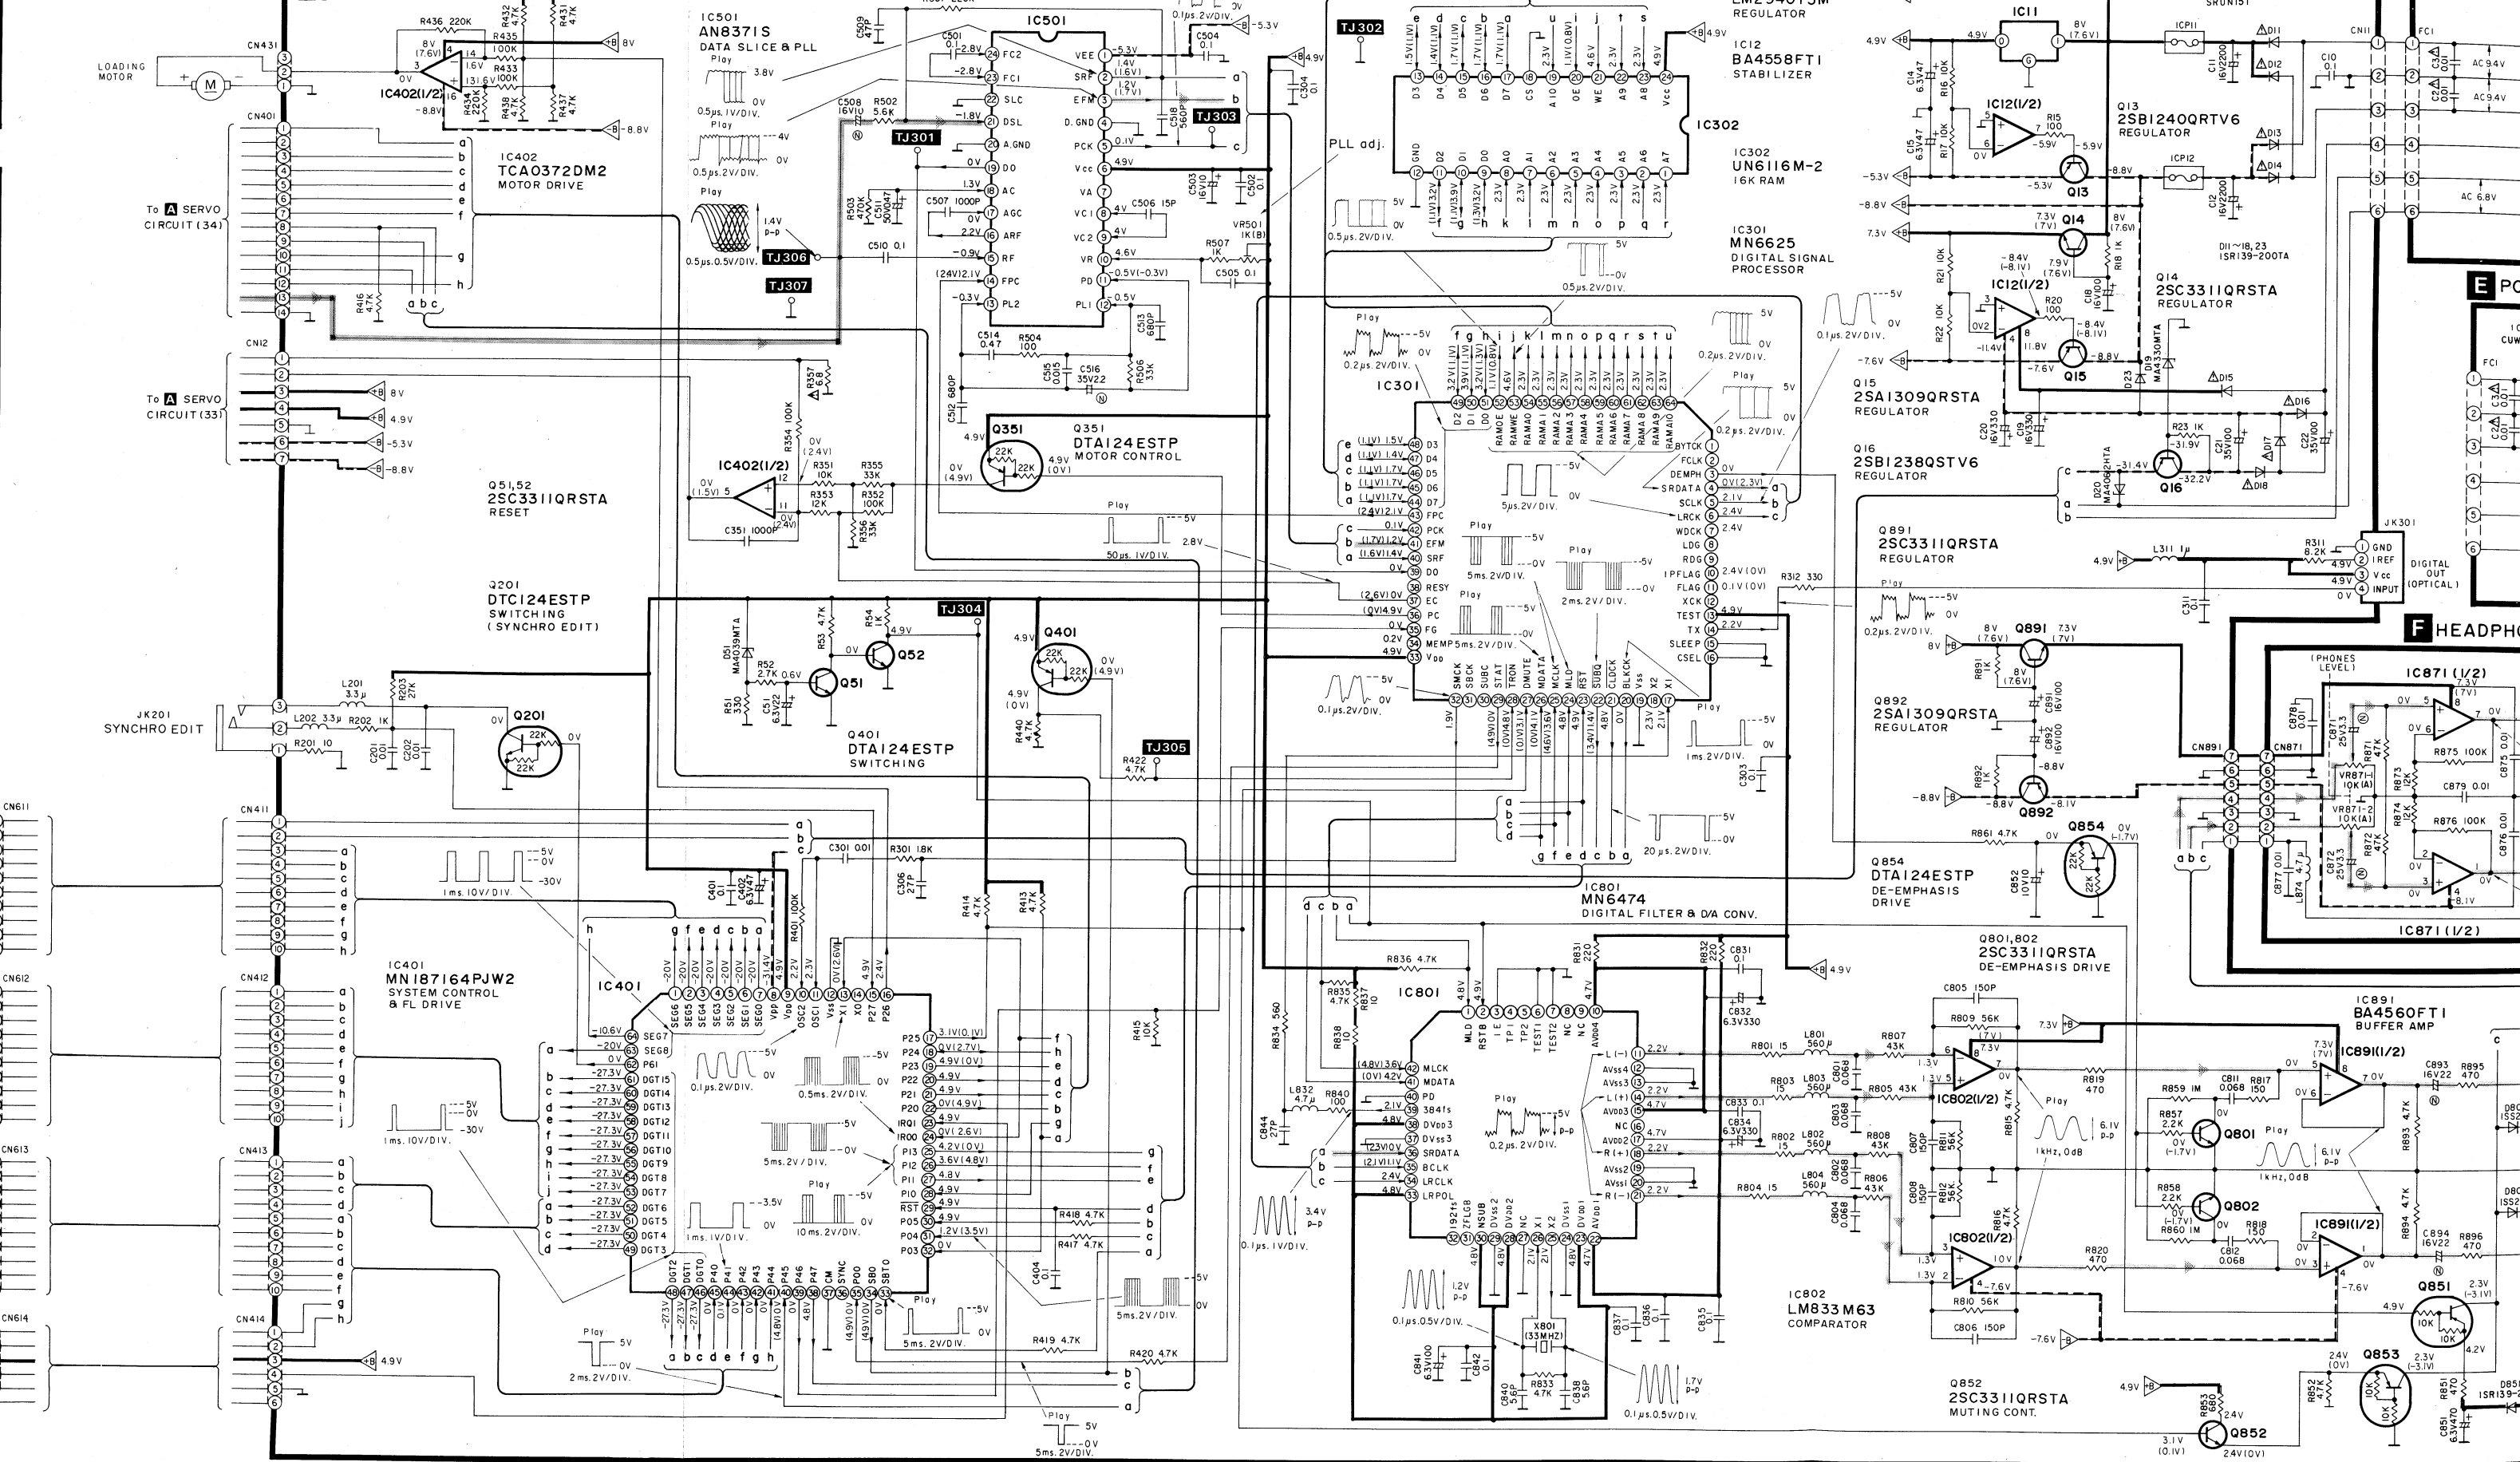

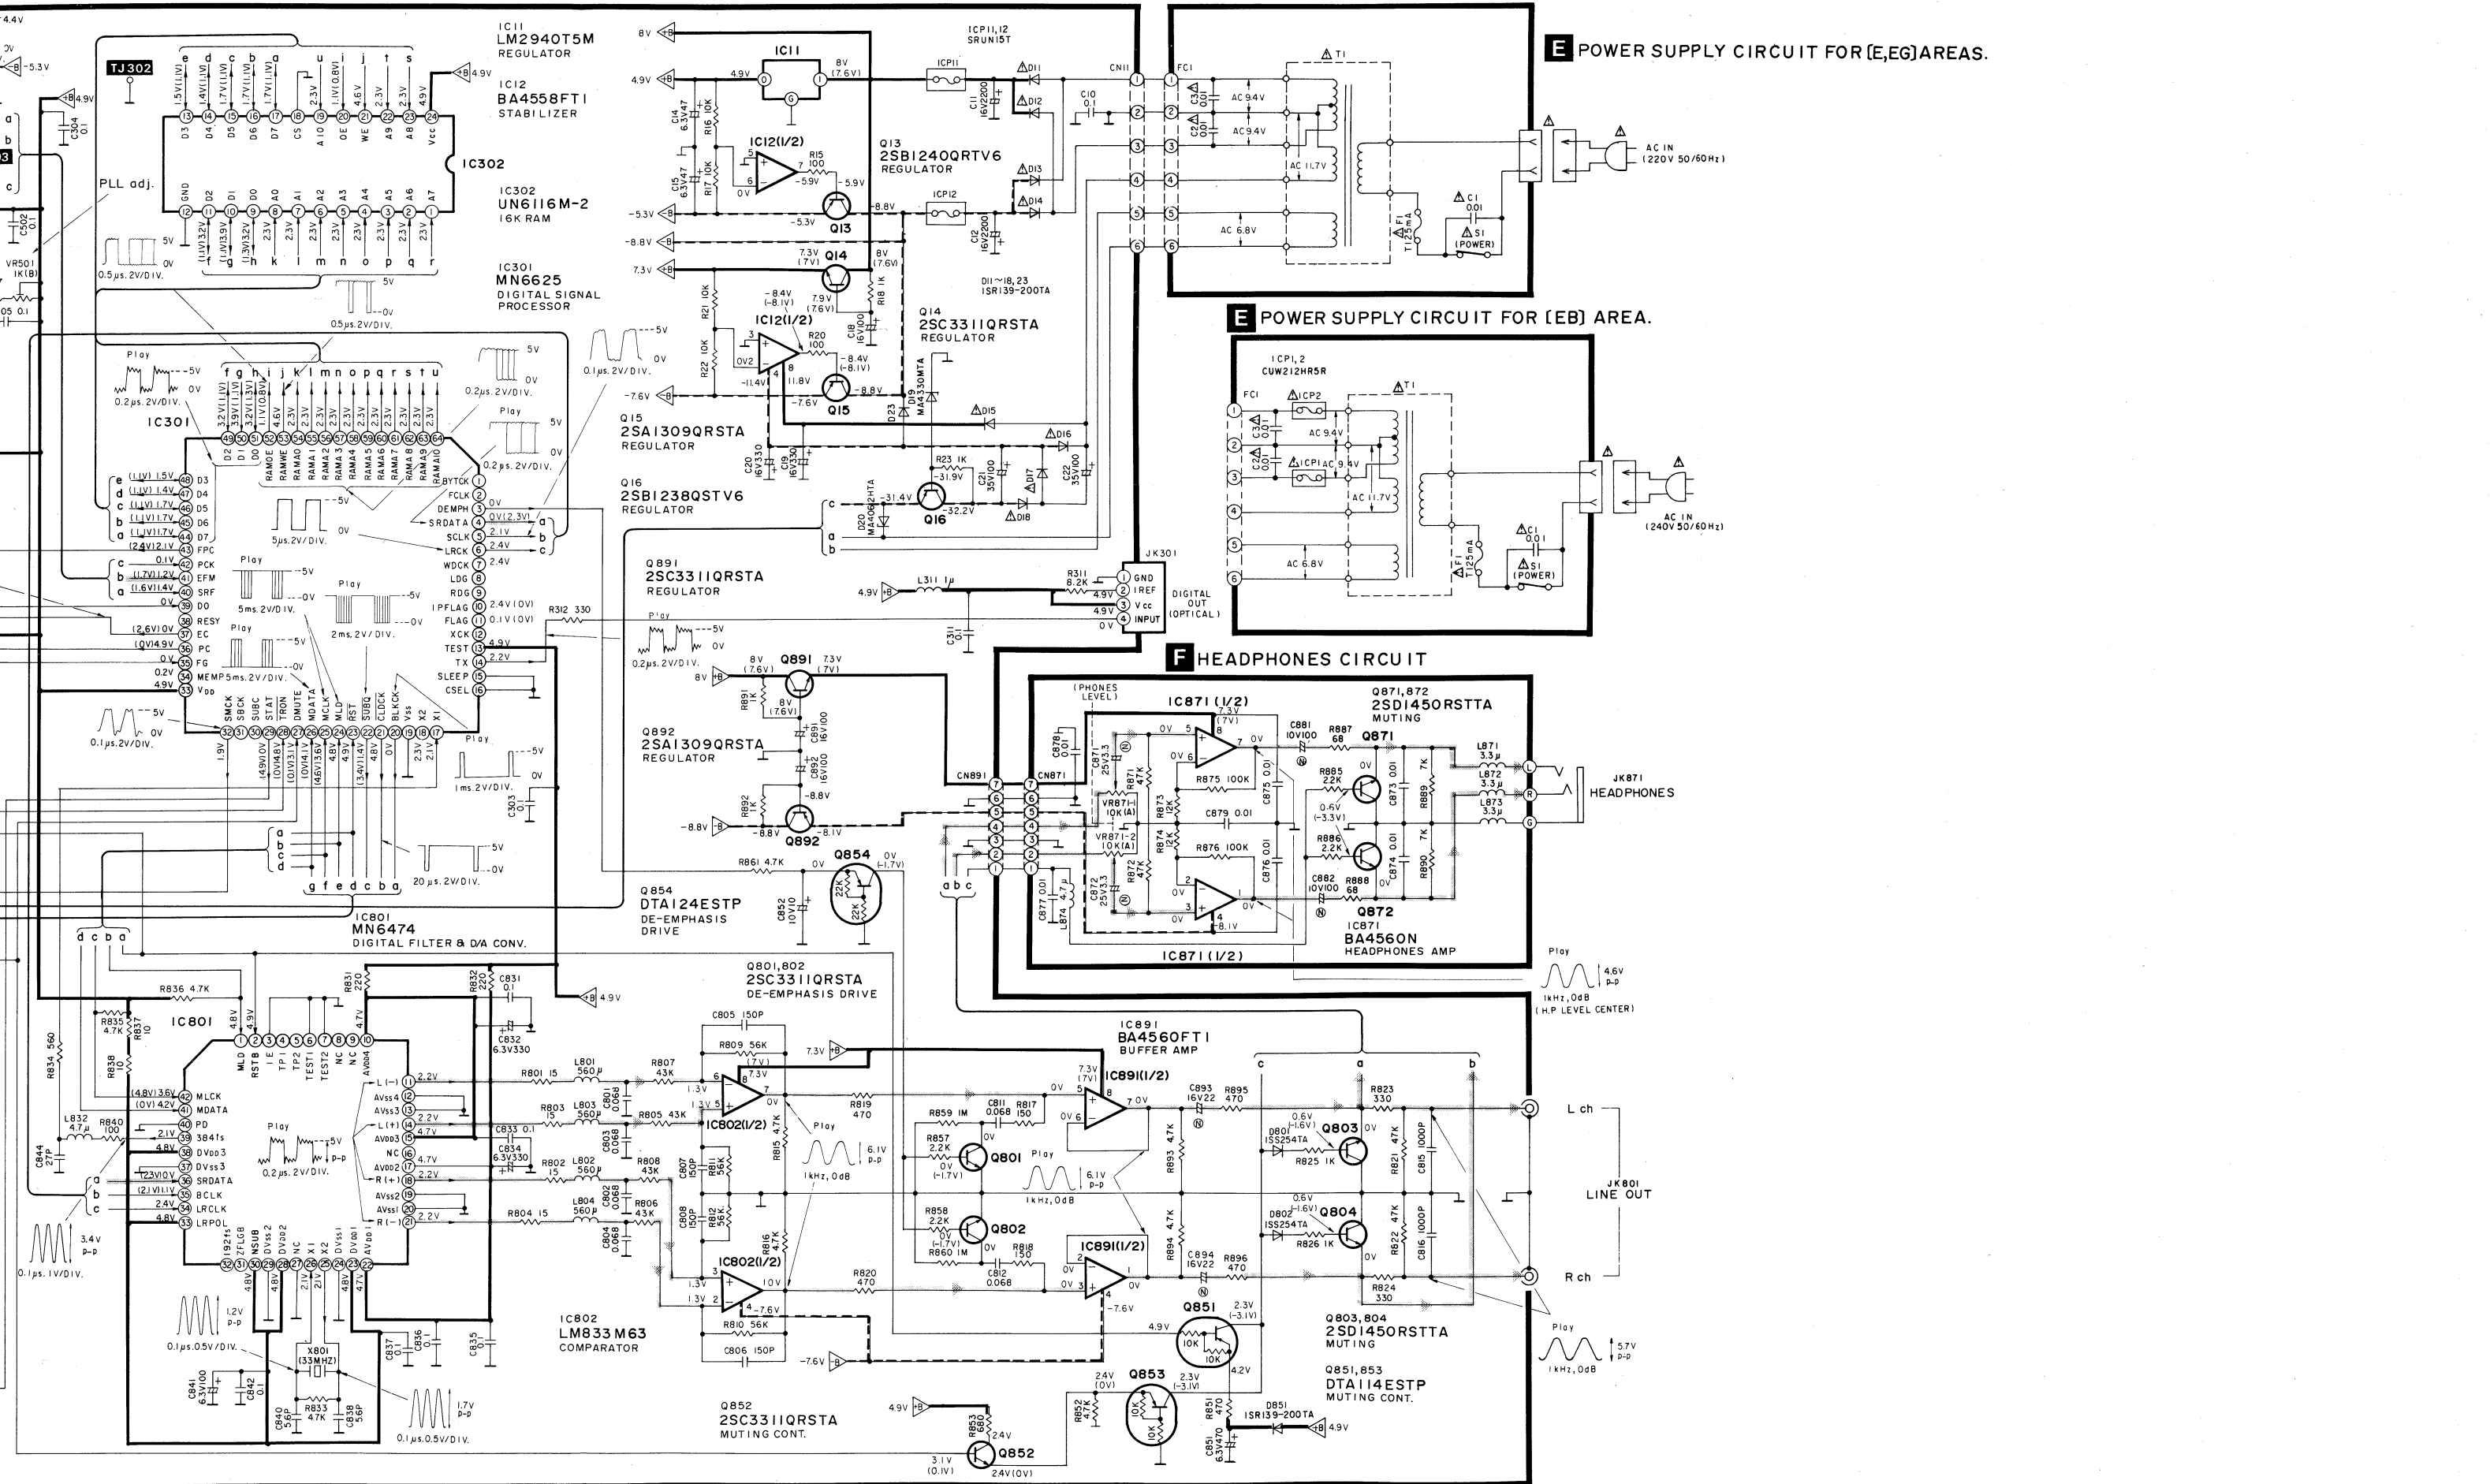

E POWER SUPPLY CIRCUIT FOR [E,EG] AREAS.

E POWER SUPPLY CIRCUIT FOR [EB] AREA.

F HEADPHONES CIRCUIT





JK801 LINE OUT

■ TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES

	BA4560N 8 Pin		LM2940T5M
	LM833M63		UM6116M-2
	BA4558FT1		4822 209 73234 (TDA8808T)
	BA4560FT1		4822 209 73235 (TDA8809T)
	AN8371S		
	SRUN15T		
	4822 209 72587 (TCA0372)		
	TCA0372DM2		
	MN6474		4822 130 44121 (BC338)
	MN6625		
	MN187164PJW2		
	DTA124ESTP		2SA1309QRSTA,
			2SD1450RSTTA,
			2SC3311QRSTA
	DTC124ESTP		1SS254TA,
	2SB1238QSTV6,		1SR139-200TA
	2SB1240QRTV6		
	MA4330MTA,		5322 130 42136 (BC848C)
	MA4062HTA,		
	MA4039MTA		


■ PRINTED CIRCUIT BOARDS

A
B
C
D
E
F

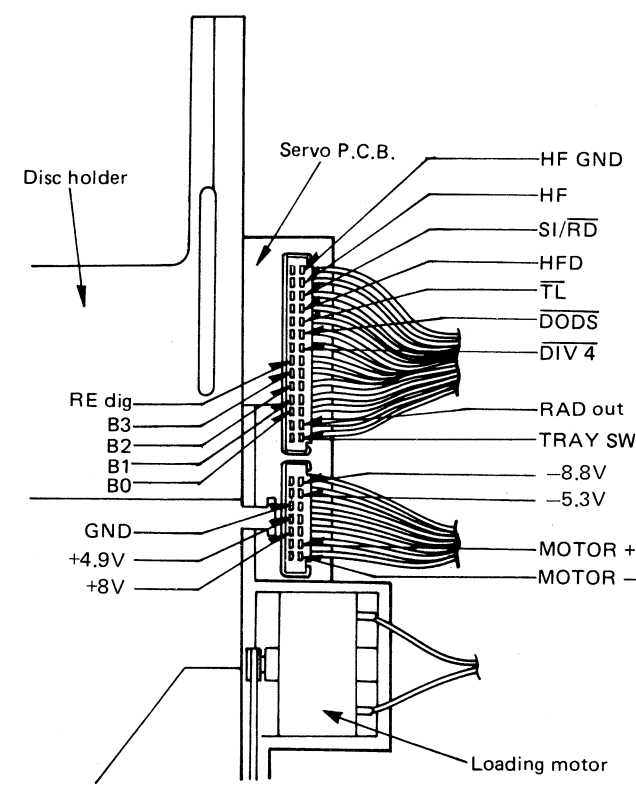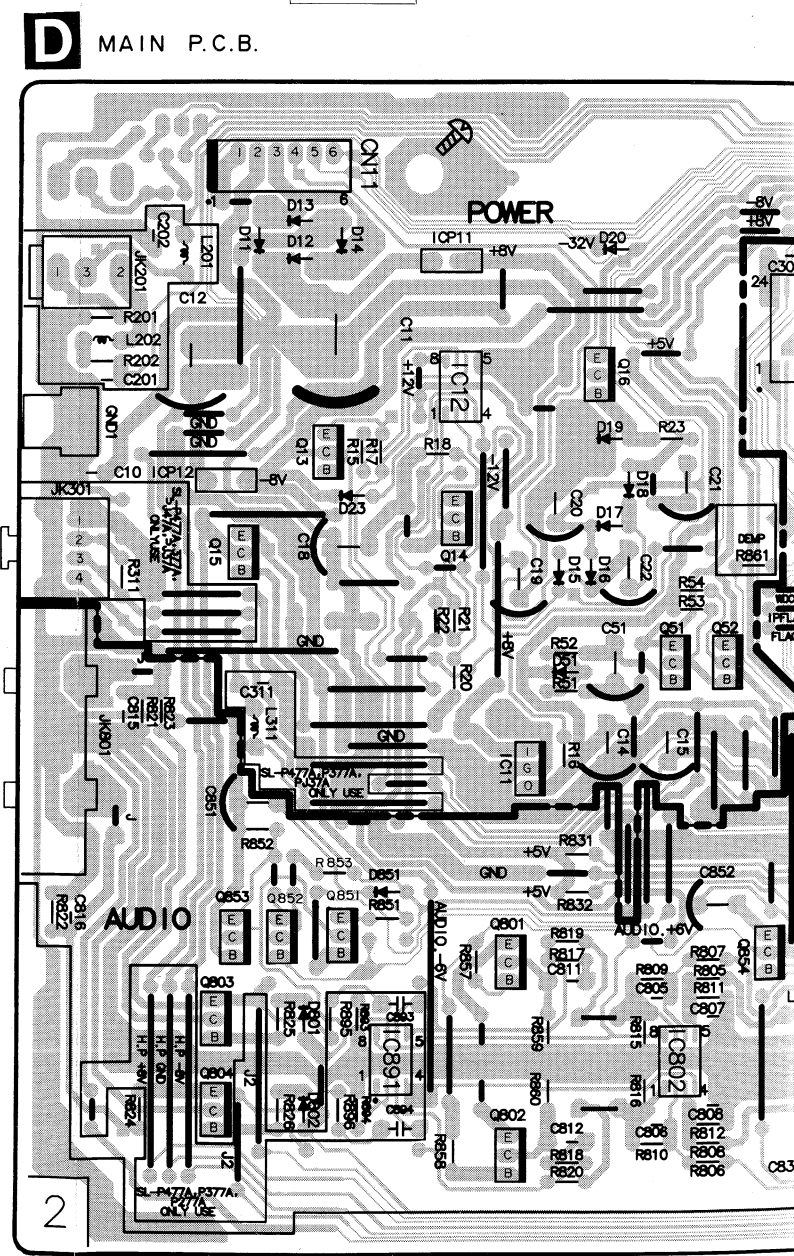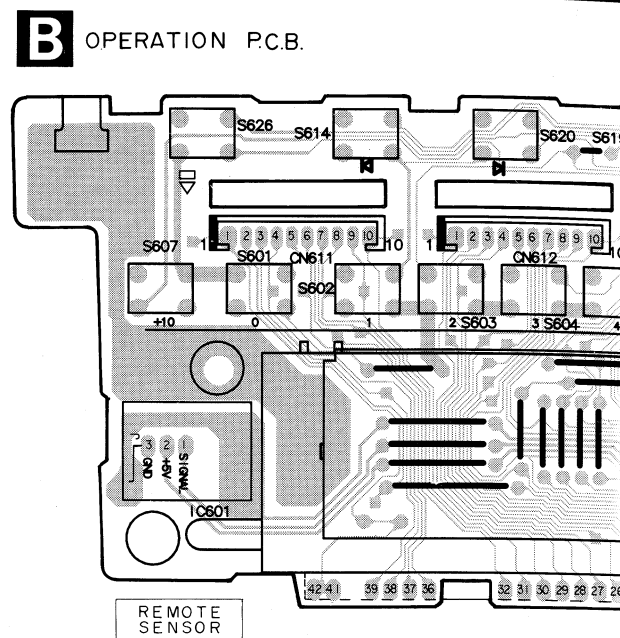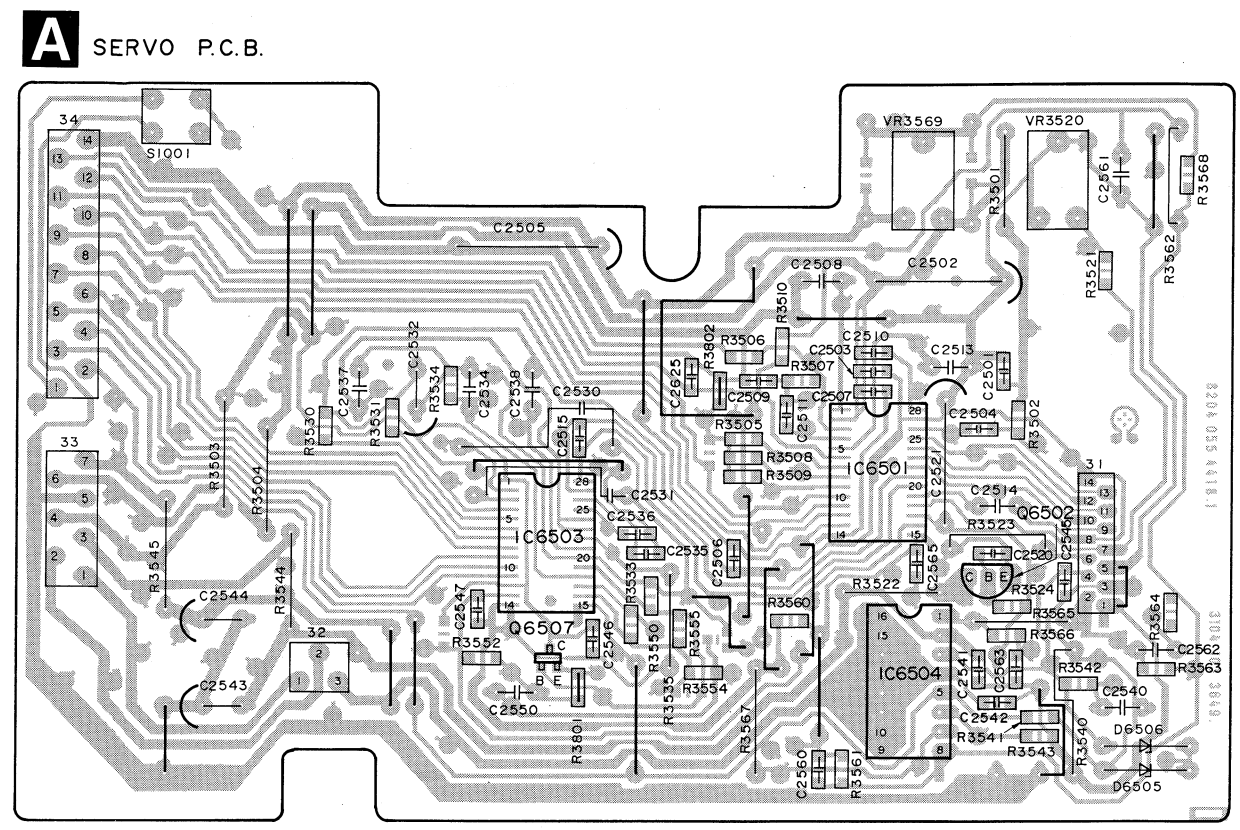


Note: Use connector pins to check servo circuit voltages and waveforms.

B OPERATION P.C.B.

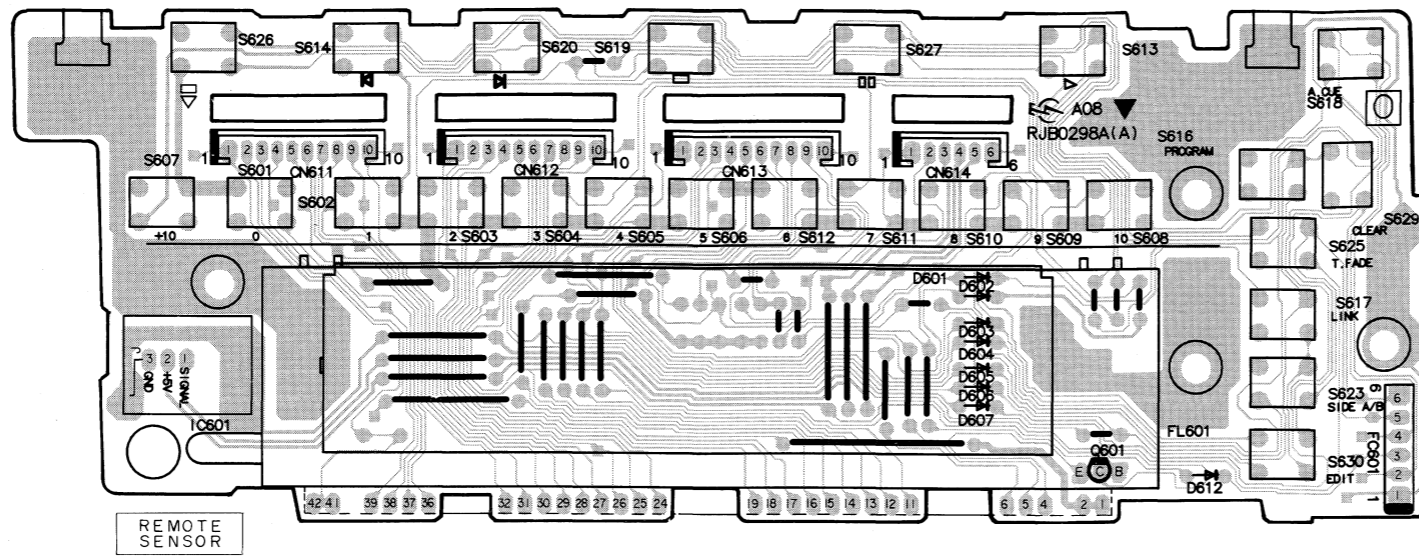

D MAIN P.C.B.

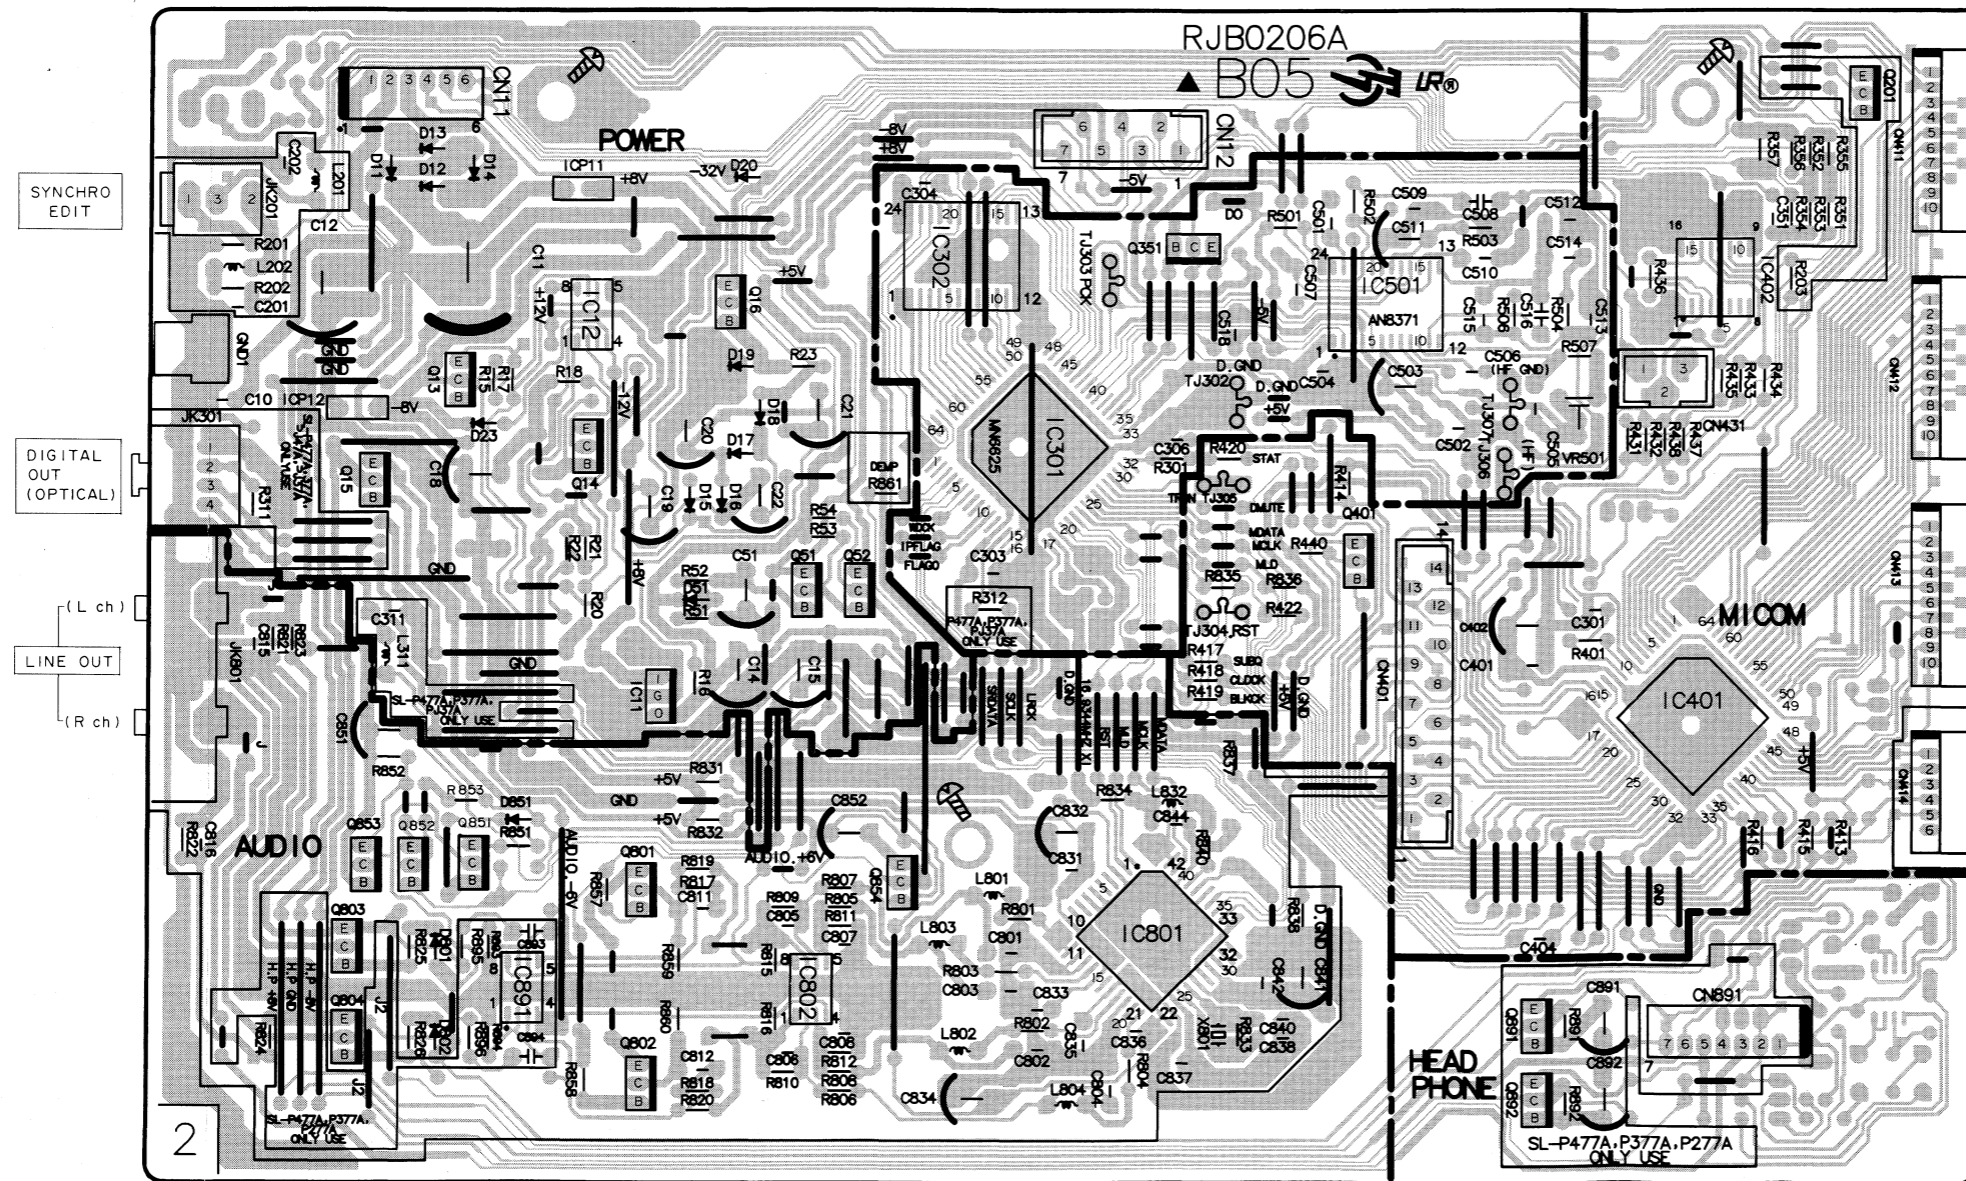

GND

RD

D

VS

V4

AD out

AY SW

3.8V

5.3V

OTOR +

OTOR -

motor

t

SYNCHRO EDIT

DIGITAL OUT (OPTICAL)


(L ch)

LINE OUT


(R ch)


2

E POWER SUPPLY P.C.B. For (E, EG) AREAS.

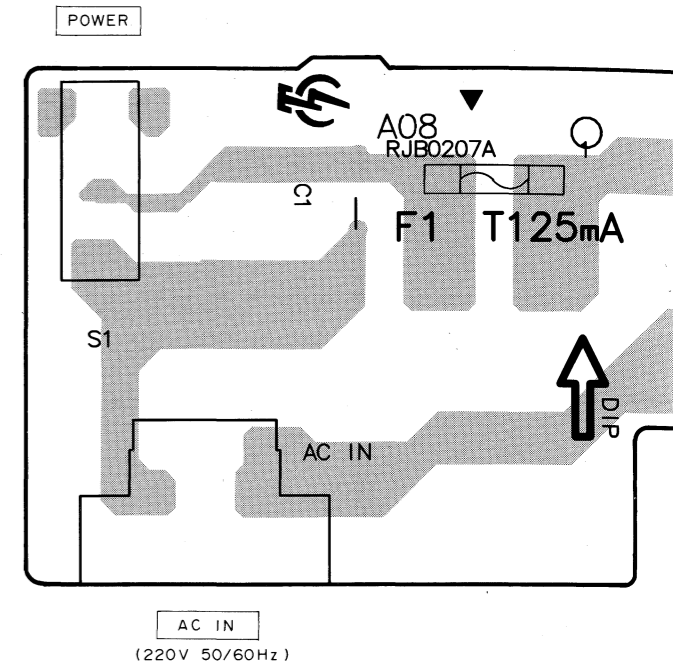


E POWER SUPPLY P.C.B. For (EB) AREA.


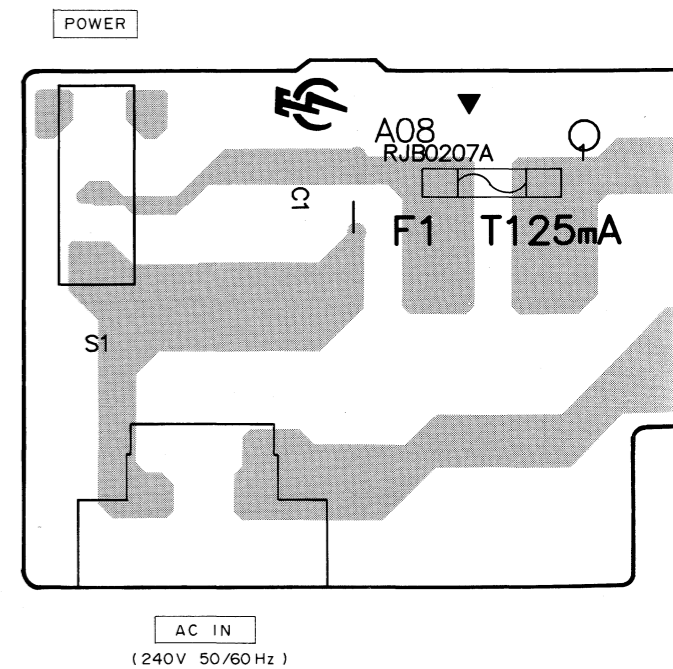


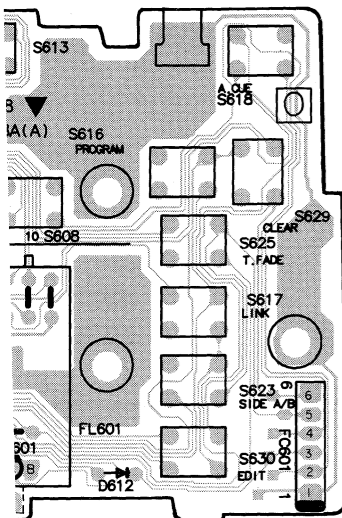


E POWER SUPPLY P.C.B. For (E,EG) AREAS.

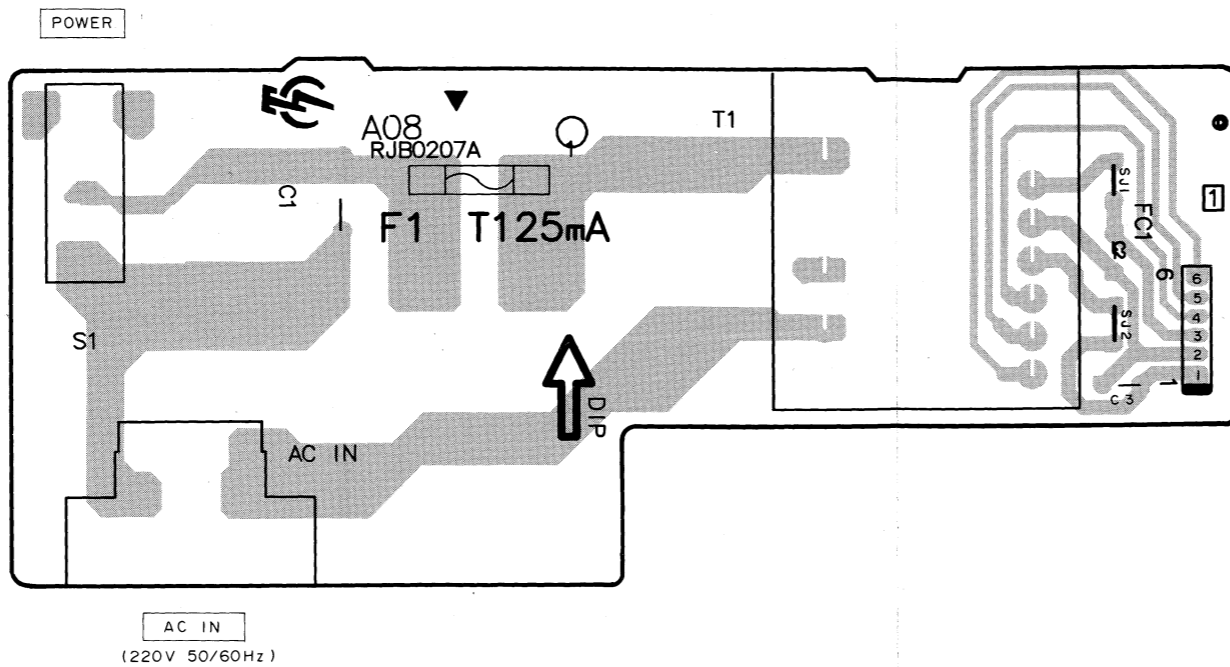


F HEADPHONES P.C.B.

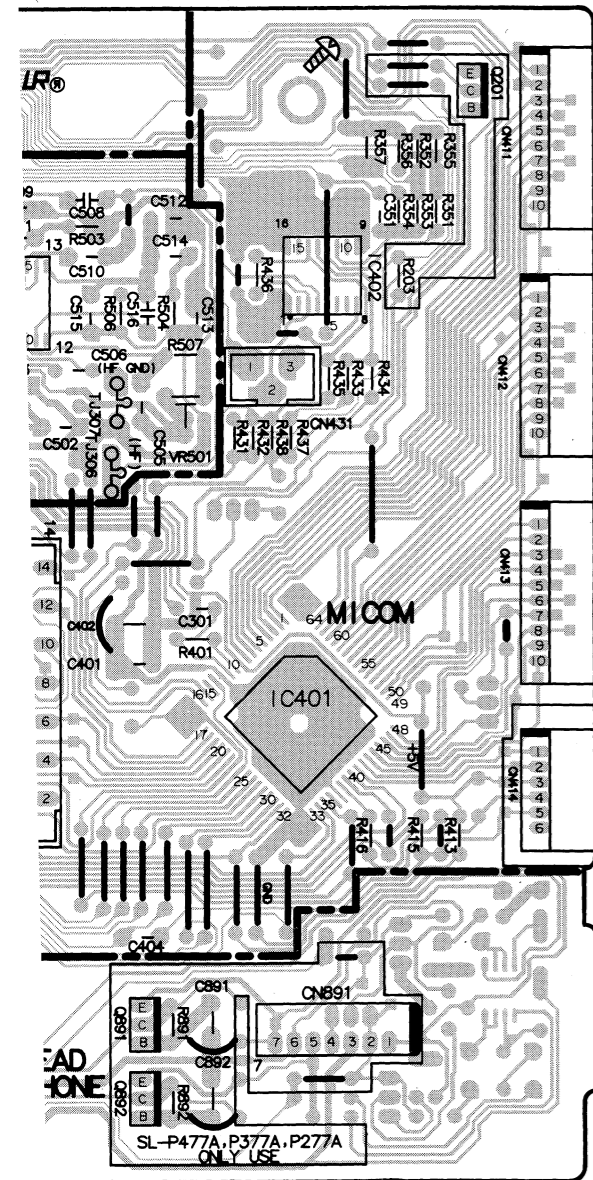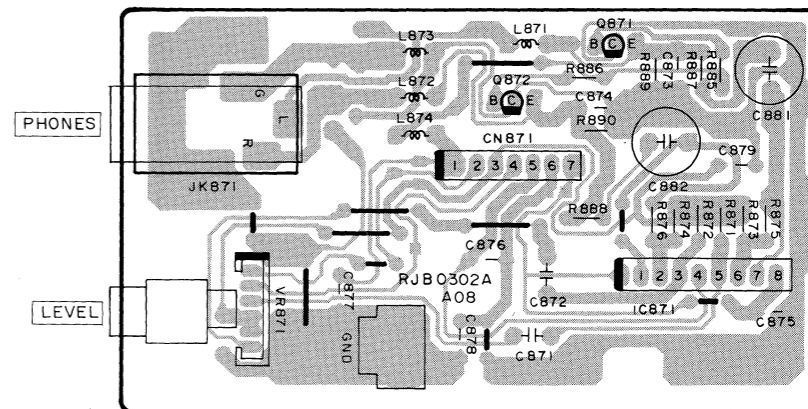


E POWER SUPPLY P.C.B. For (EB) AREA.

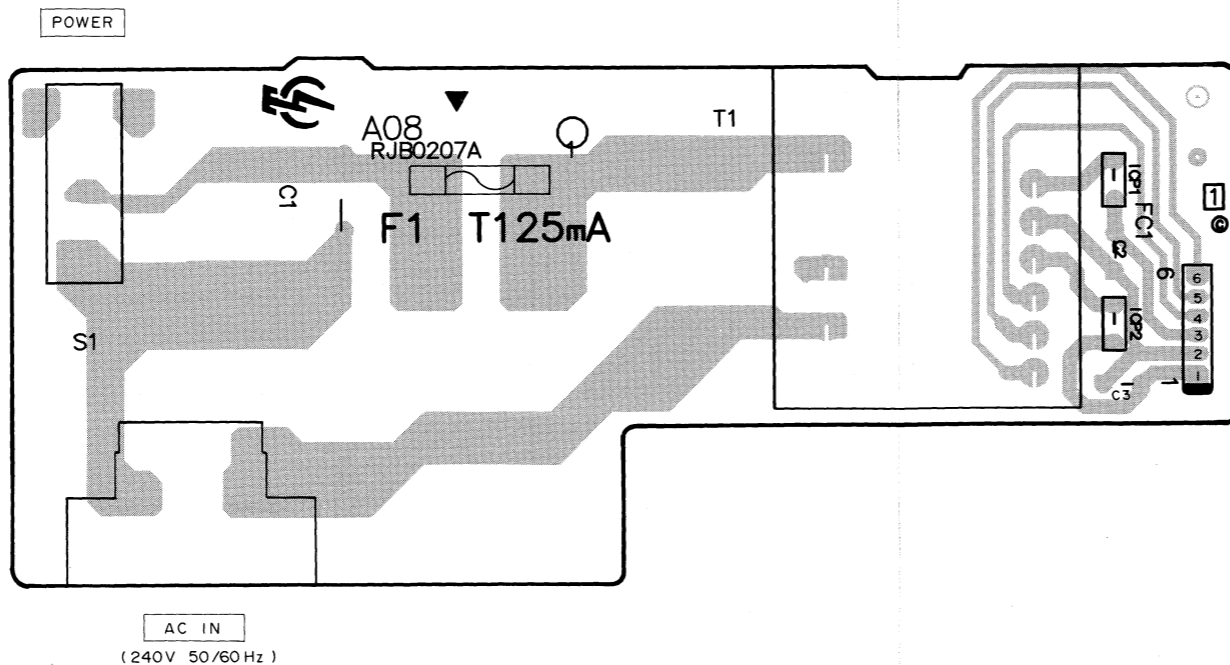

C SEARCH P.C.B.

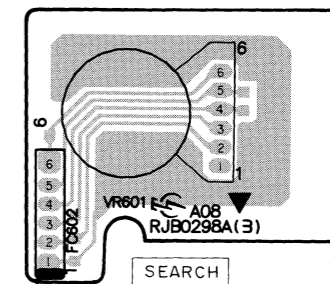

WIRING CONNECTION DIAGRAM

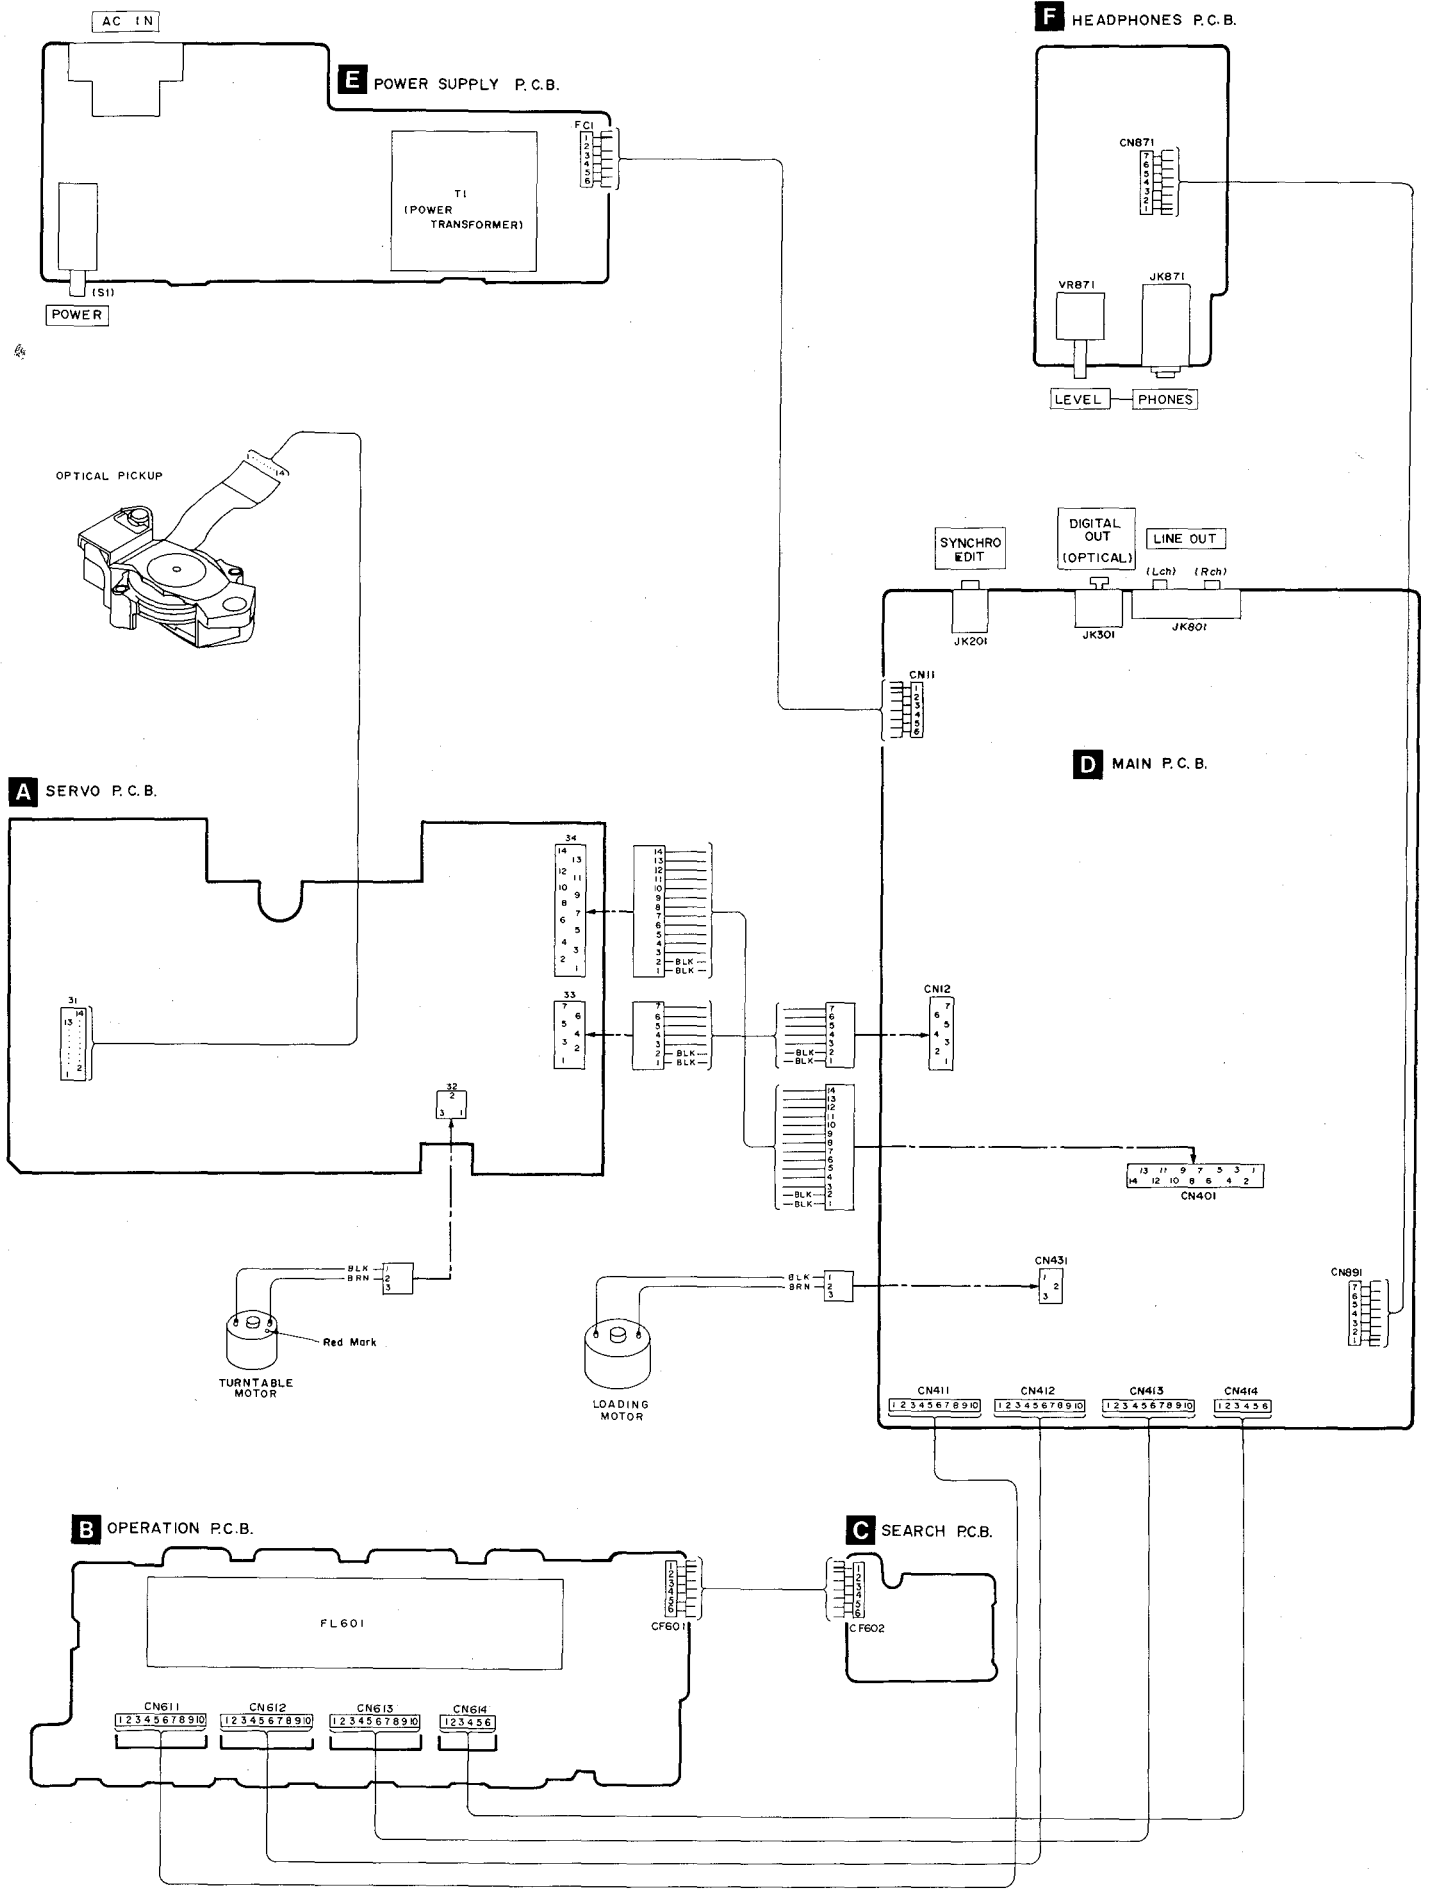

■ REPLACEMENT PARTS LIST

Notes : * Important safety notice:

Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.

* The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.) Parts without these indications can be used for all areas.

* Remote Control Ass'y: Supply period for three years from termination of production.

* \square Indicates in Remarks columns parts that are supplied by MBV.

* Warning : This product uses a laser diode. Refer to caution statements on page 3.

* ACHTUNG : Die lasereinheit nicht zerlegen.

Die lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUIT (S)		Q892	2SA1309QRSTA	TRANSISTOR	
						DIODE (S)	
IC11	LM2940T5M	IC, REGULATOR		D11	1SR139-200TA	DIODE	Δ
IC12	BA4558FT1	IC, STABILIZER		D12	1SR139-200TA	DIODE	Δ
IC301	MN6625	IC, DIGITAL SIGNAL PROCESSOR		D13	1SR139-200TA	DIODE	Δ
IC302	UM6116M-2	IC, 16K RAM		D14	1SR139-200TA	DIODE	Δ
IC401	MN187164PJW2	IC, SYSTEM CONTROL&FL DRIVE		D15	1SR139-200TA	DIODE	Δ
IC402	TCA0372DM2	IC, MOTOR DRIVE		D16	1SR139-200TA	DIODE	Δ
IC501	AN8371S	IC, DATA SLICE & PLL		D17	1SR139-200TA	DIODE	Δ
IC601	HC-MD10E	IC, REMOTE CONTROL RECEIVER		D18	1SR139-200TA	DIODE	Δ
IC801	MN6474	IC, DIGITAL FILTER&D/A CONV.		D19	MA4330MTA	DIODE	
IC802	LM833M63	IC, DIFFERENTIAL AMP		D20	MA4062HTA	DIODE	
IC871	BA4560N	IC, HEADPHONES AMP		D23	1SR139-200TA	DIODE	
IC891	BA4560FT1	IC, L. P. F		D51	MA4039MTA	DIODE	
ICP1	CW212HR5R	IC, PROTECTOR	(E, EG) Δ	D601	1SS254TA	DIODE	
ICP1	SRUN38T	IC, PROTECTOR	(EB) Δ	D602	1SS254TA	DIODE	
ICP2	CW212HR5R	IC, PROTECTOR	(E, EG) Δ	D603	1SS254TA	DIODE	
ICP2	SRUN38T	IC, PROTECTOR	(EB) Δ	D604	1SS254TA	DIODE	
ICP11	SRUN15T	IC, PROTECTOR		D605	1SS254TA	DIODE	
ICP12	SRUN15T	IC, PROTECTOR		D606	1SS254TA	DIODE	
		TRANSISTOR (S)		D607	1SS254TA	DIODE	
				D612	1SS254TA	DIODE	
Q13	2SB1240QRTV6	TRANSISTOR		D801	1SS254TA	DIODE	
Q14	2SC3311QRSTA	TRANSISTOR		D802	1SS254TA	DIODE	
Q15	2SA1309QRSTA	TRANSISTOR		D851	1SR139-200TA	DIODE	
Q16	2SB1238QSTV6	TRANSISTOR				VARIABLE RESISTOR (S)	
Q51	2SC3311QRSTA	TRANSISTOR					
Q52	2SC3311QRSTA	TRANSISTOR		VR501	EVNDXAA00B13	V. R, PLL ADJ.	
Q201	DTC124ESTP	TRANSISTOR		VR601	EVQVNVN00004E	V. R, SEARCH DIAL	
Q351	DTA124EST	TRANSISTOR		VR871	EVJCB0F02A14	V. R, HEADPHONES LEVEL	
Q401	DTA124EST	TRANSISTOR				COIL (S)	
Q601	DTC124ESTP	TRANSISTOR					
Q801	2SC3311QRSTA	TRANSISTOR		L201	ELEV3R3KA	COIL	
Q802	2SC3311QRSTA	TRANSISTOR		L202	ELEV3R3KA	COIL	
Q803	2SD1450RSTTA	TRANSISTOR		L311	ELEPK1R0KA	COIL	
Q804	2SD1450RSTTA	TRANSISTOR		L801	ELEV561KA	COIL	
Q851	DTA114ESTP	TRANSISTOR		L802	ELEV561KA	COIL	
Q852	2SC3311QRSTA	TRANSISTOR		L803	ELEV561KA	COIL	
Q853	DTA114ESTP	TRANSISTOR		L804	ELEV561KA	COIL	
Q854	DTA124EST	TRANSISTOR		L804	ELEV561KA	COIL	
Q871	2SD1450RSTTA	TRANSISTOR		L832	ELEPK4R7KA	COIL	
Q872	2SD1450RSTTA	TRANSISTOR		L871	ELEV3R3KA	COIL	
Q891	2SC3311QRSTA	TRANSISTOR					

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
L872	ELEV3R3KA	COIL		CN11	SJT30643-V	CONNECTOR(6P)	
L873	ELEV3R3KA	COIL		CN12	RJT001H007	CONNECTOR(7P)	[MB]
L874	ELEPK4R7KA	COIL		CN401	RJT001H014	CONNECTOR(14P)	[MB]
		TRANSFORMER(S)		CN411	RJU003K010M1	SOCKET(10P)	
T1	ETP4&JJG61CN	POWER TRANSFORMER	(E, EG)△ [MB]	CN412	RJU003K010M1	SOCKET(10P)	
T1	ETP4&JJG71BN	POWER TRANSFORMER	(EB)△ [MB]	CN413	RJU003K010M1	SOCKET(10P)	
		OSCILLATOR		CN414	RJU003K006M1	SOCKET(6P)	
X801	SVQ49U338S	OSCILLATOR		CN431	RJT001H003	CONNECTOR(3P)	[MB]
		DISPLAY TUBE		CN611	RJT003K010M	SOCKET(10P)	
FL601	RSL0039-F	DISPLAY TUBE		CN612	RJT003K010M	SOCKET(10P)	
		FUSE		CN613	RJT003K010M	SOCKET(10P)	
F1	XBA2C012TBO	FUSE	△	CN614	RJT003K006M	SOCKET(6P)	
		SWITCH(ES)		CN891	SJT30743-V	CONNECTOR(7P)	
S1	ESB8249V	SW, POWER	△			EARTH CONTACT	
S601	EVQQB005R	SW, NUMERIC 0		GND1	SUSD144	EARTH CONTACT	
S602	EVQQB005R	SW, NUMERIC 1				JACK(S)	
S603	EVQQB005R	SW, NUMERIC 2		JK201	RJJ33T01	SYNCHRO REC	
S604	EVQQB005R	SW, NUMERIC 3		JK301	PLT102L	OPTICAL OUT	
S605	EVQQB005R	SW, NUMERIC 4		JK801	RJH3201N	LINE OUT	
S606	EVQQB005R	SW, NUMERIC 5		JK871	QJA0455ZC	HEADPHONES	
S607	EVQQB005R	SW, NUMERIC +10				CABLE(S)	
S608	EVQQB005R	SW, NUMERIC 10		FC1	RWJ1806100KQ	PARALLEL WIRE(6P)	
S609	EVQQB005R	SW, NUMERIC 9		FC601	RWJ0906040KK	PARALLEL WIRE(6P)	
S610	EVQQB005R	SW, NUMERIC 8		FC871	RWJ1807100KQ	PARALLEL WIRE(7P)	
S611	EVQQB005R	SW, NUMERIC 7				<SERVO P. C. B. >	
S612	EVQQB005R	SW, NUMERIC 6				INTEGRATED CIRCUITS	
S613	EVQQB005R	SW, PLAY		IC6501	482220973234	I. C, PHOTO DIODE S. P.	[MB]
S614	EVQQB005R	SW, SKIP (R)		IC6503	482220973235	I. C, RADIAL ERROR S. P.	[MB]
S616	EVQQB005R	SW, PROGRAM		IC6504	482220972587	I. C, FOCUS/RADIAL DRIVE	[MB]
S617	EVQQB005R	SW, LINK				TRANSISTORS	
S618	EVQQB005R	SW, AUTO CUE		Q6502	482213044121	TRANSISTOR	[MB]
S619	EVQQB005R	SW, STOP		Q6507	532213042136	TRANSISTOR	[MB]
S620	EVQQB005R	SW, SKIP (F)				DIODES	
S623	EVQQB005R	SW, SIDE A/B		D6505	482213081101	DIODE	[MB]
S625	EVQQB005R	SW, T. FADE		D6506	482213081101	DIODE	[MB]
S626	EVQQB005R	SW, OPEN/CLOSE				VARIABLE RESISTORS	
S627	EVQQB005R	SW, PAUSE		VR3520	482210110685	V. R, LASER POWER ADJ.	[MB]
S629	EVQQB005R	SW, CLEAR		VR3569	482210020522	V. R, FOCUS OFFSET ADJ.	[MB]
S630	EVQQB005R	SW, EDIT				CONNECTOR(S) AND SOCKET(S)	

Ref. No.	Part No.	Part Name & Description	Remarks				
		SWITCH					
S1001	482227612523	SW. TRAY	[MB]				


Notes : * Important safety notice:
 Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 * The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
 Parts without these indications can be used for all areas.
 * Remote Control Ass'y:
 Supply period for three years from termination of production.
 * [MB] Indicates in Remarks columns parts that are supplied by MBV.
 * "(K)" mark parts are used for black type only.
 * "(S)" mark parts are used for silver type only.
 Parts other than "(K)" and "(S)" marked are used for all color types.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS				SCREWS	
1	RKM0098-S	TOP CASE	(S) [MB]	N1	SNE2129	SCREW	(S)
1	RKM0098-K	TOP CASE	(K) [MB]	N1	SNE2129-1	SCREW	(K)
2	SJS9236	AC INLET	Δ	N2	XTBS3+8JFZ1	SCREW	
3	SJT390	FUSE HOLDER	Δ	N3	XTBS26+10J	SCREW	
4	REX0007	CONNECTOR ASS'Y(7P)	[MB]	N4	XTB3+16JFZ	SCREW	
5	REX0008	CONNECTOR ASS'Y(14P)	[MB]	N5	XTB3+35JFZ	SCREW	
6	RGK0197-S	TRAY ORNAMENT	(S)	N6	XTB3+8JFZ	SCREW	
6	RGK0197-K	TRAY ORNAMENT	(K)			PACKING MATERIAL	
7	RGRO067B-D	REAR PANEL	(E, EG) [MB]				
7	RFKHP477AEBK	REAR PANEL ASS'Y	(EB) [MB]	P1	RPG0486	PACKING CASE	(S) [MB]
8	RGU0030-S	POWER BUTTON	(S)	P1	RPG0348	PACKING CASE	(K) [MB]
8	RGU0030	POWER BUTTON	(K)	P2	RPN0239A	CUSHION (A)	[MB]
9	RKAD040B	FOOT	[MB]	P3	RPN0239B	CUSHION (B)	[MB]
10	RMK0077	CHASSIS	[MB]	P4	RMR0024	LOCK SHAFT	[MB]
11	RMM0051	POWER SW ROD	[MB]	P5	XZB60X60A01	PROTECTION BAG (UNIT)	
12	RMR0020	SPACER (A)	[MB]	P6	XZB23X35C03	PROTECTION BAG (F. B.)	
13	RMR0021	SPACER (B)	[MB]	P7	XZB26X17C03	PROTECTION BAG (CORD)	
14	RMR0022	SPACER (C)	[MB]			ACCESSORIES	
15	SUSD144	EARTH CONTACT		A1	RQT0280-B	INSTRUCTION MANUAL	(EB) [MB]
16	SUWD139-1	VFD HOLDER	[MB]	A1	RQT0281-D	INSTRUCTION MANUAL	(EG) [MB]
17	RMC0063	HEADPHONES EARTH	[MB]	A1	RFKSP477AE-K	INSTRUCTION MANUAL ASS'Y	(E) [MB]
18	RGW0048-S	BUTTON, H. P. VOLUME	(S)	A2	RQA0013	GUARANTEE CARD	
18	RGW0048	BUTTON, H. P. VOLUME	(K)	A3	RQCB0169	SERVICE SHOP LIST	
19	RMR0234	H. P. P. C. B. FIXER	[MB]	A4	SJA193	POWER CORD	(EB) Δ
20	RFKGP477AE-S	FRONT PANEL ASS'Y	(S) [MB]	A4	SJA187	POWER CORD	(E, EG) Δ
20	RFKGP477AE-K	FRONT PANEL ASS'Y	(K) [MB]	A5	SJP2249-3	PIN CORD	
20-1	RKWO078	WINDOW	[MB]	A6	RQCA0059	CAUTION (LOCK SHAFT)	[MB]
21	RGU0277-S	MAIN KNOB	(S)	A7	EUR64796	REMOTE CONTROL UNIT	(K) [MB]
21	RGU0277-K	MAIN KNOB	(K)	A7	EUR64797	REMOTE CONTROL UNIT	(S) [MB]
22	RGU0278-S	TEN KEY KNOB	(S)	A8	UR64EC804	BATTERY COVER	(K)
22	RGU0278-K	TEN KEY KNOB	(K)	A8	UR64EC804A	BATTERY COVER	(S)
23	RGU0280-S	EDIT KNOB	(S)			LOADING UNIT PARTS	
23	RGU0280-K	EDIT KNOB	(K)	101	482244450603	TRAY	[MB]
24	SHE185-2	P. C. B. SUPPORTER		102	482232550176	GROMMET, CABLE	[MB]
25	SBND120MA0A	SHUTTLE BUTTON	(S)	103	482232550177	GROMMET, CABLE	[MB]
25	SBND120ZCOA	SHUTTLE BUTTON	(K)	104	482246692251	PLATE	[MB]
26	SHRD202	SPRING HOLDER		106	482235810115	BELT, DRIVING	[MB]
27	SHR9451	PLASTIC BEARING		107	482252232359	WHEEL, GEAR	[MB]
28	SNE4021	NUT					
29	SUSD162	RETURN SPRING					
30	CSTW-2	RETAINING RING					




Ref. No.	Part No.	Part Name & Description	Remarks
108	482253251518	RING, RUBBER	[MB]
109	482240261081	GUIDE	[MB]
111	482240261132	GUIDE	[MB]
112	482252890638	ROLLER	[MB]
113	482249251902	SPRING, COMPRES.	[MB]
114	482246661587	FOAM	[MB]
116	482240261107	LEVER	[MB]
117	482249263659	SPRING, BLADE	[MB]
118	482244460568	LID	[MB]
119	482249232883	SPRING, TENSION	[MB]
121	482252890639	ROLLER	[MB]
122	482246692257	PLATE	[MB]
123	482240261207	HOLDER	[MB]
124	482252040177	BALL	[MB]
126	482253080503	RING, PRESSURE	[MB]
127	482269130209	OPTICAL PICKUP UNIT	[MB]
128	482240261196	SUPPORT	[MB]
129	482249263746	SPRING, CLAMPING	[MB]
131	482236120998	MOTOR	[MB]
132	482240250244	BRACKET	[MB]
133	482249251935	SPRING, COMPRES.	[MB]
134	482246450715	CHASSIS	[MB]

EXPLODED VIEWS

Cabinet and chassis parts

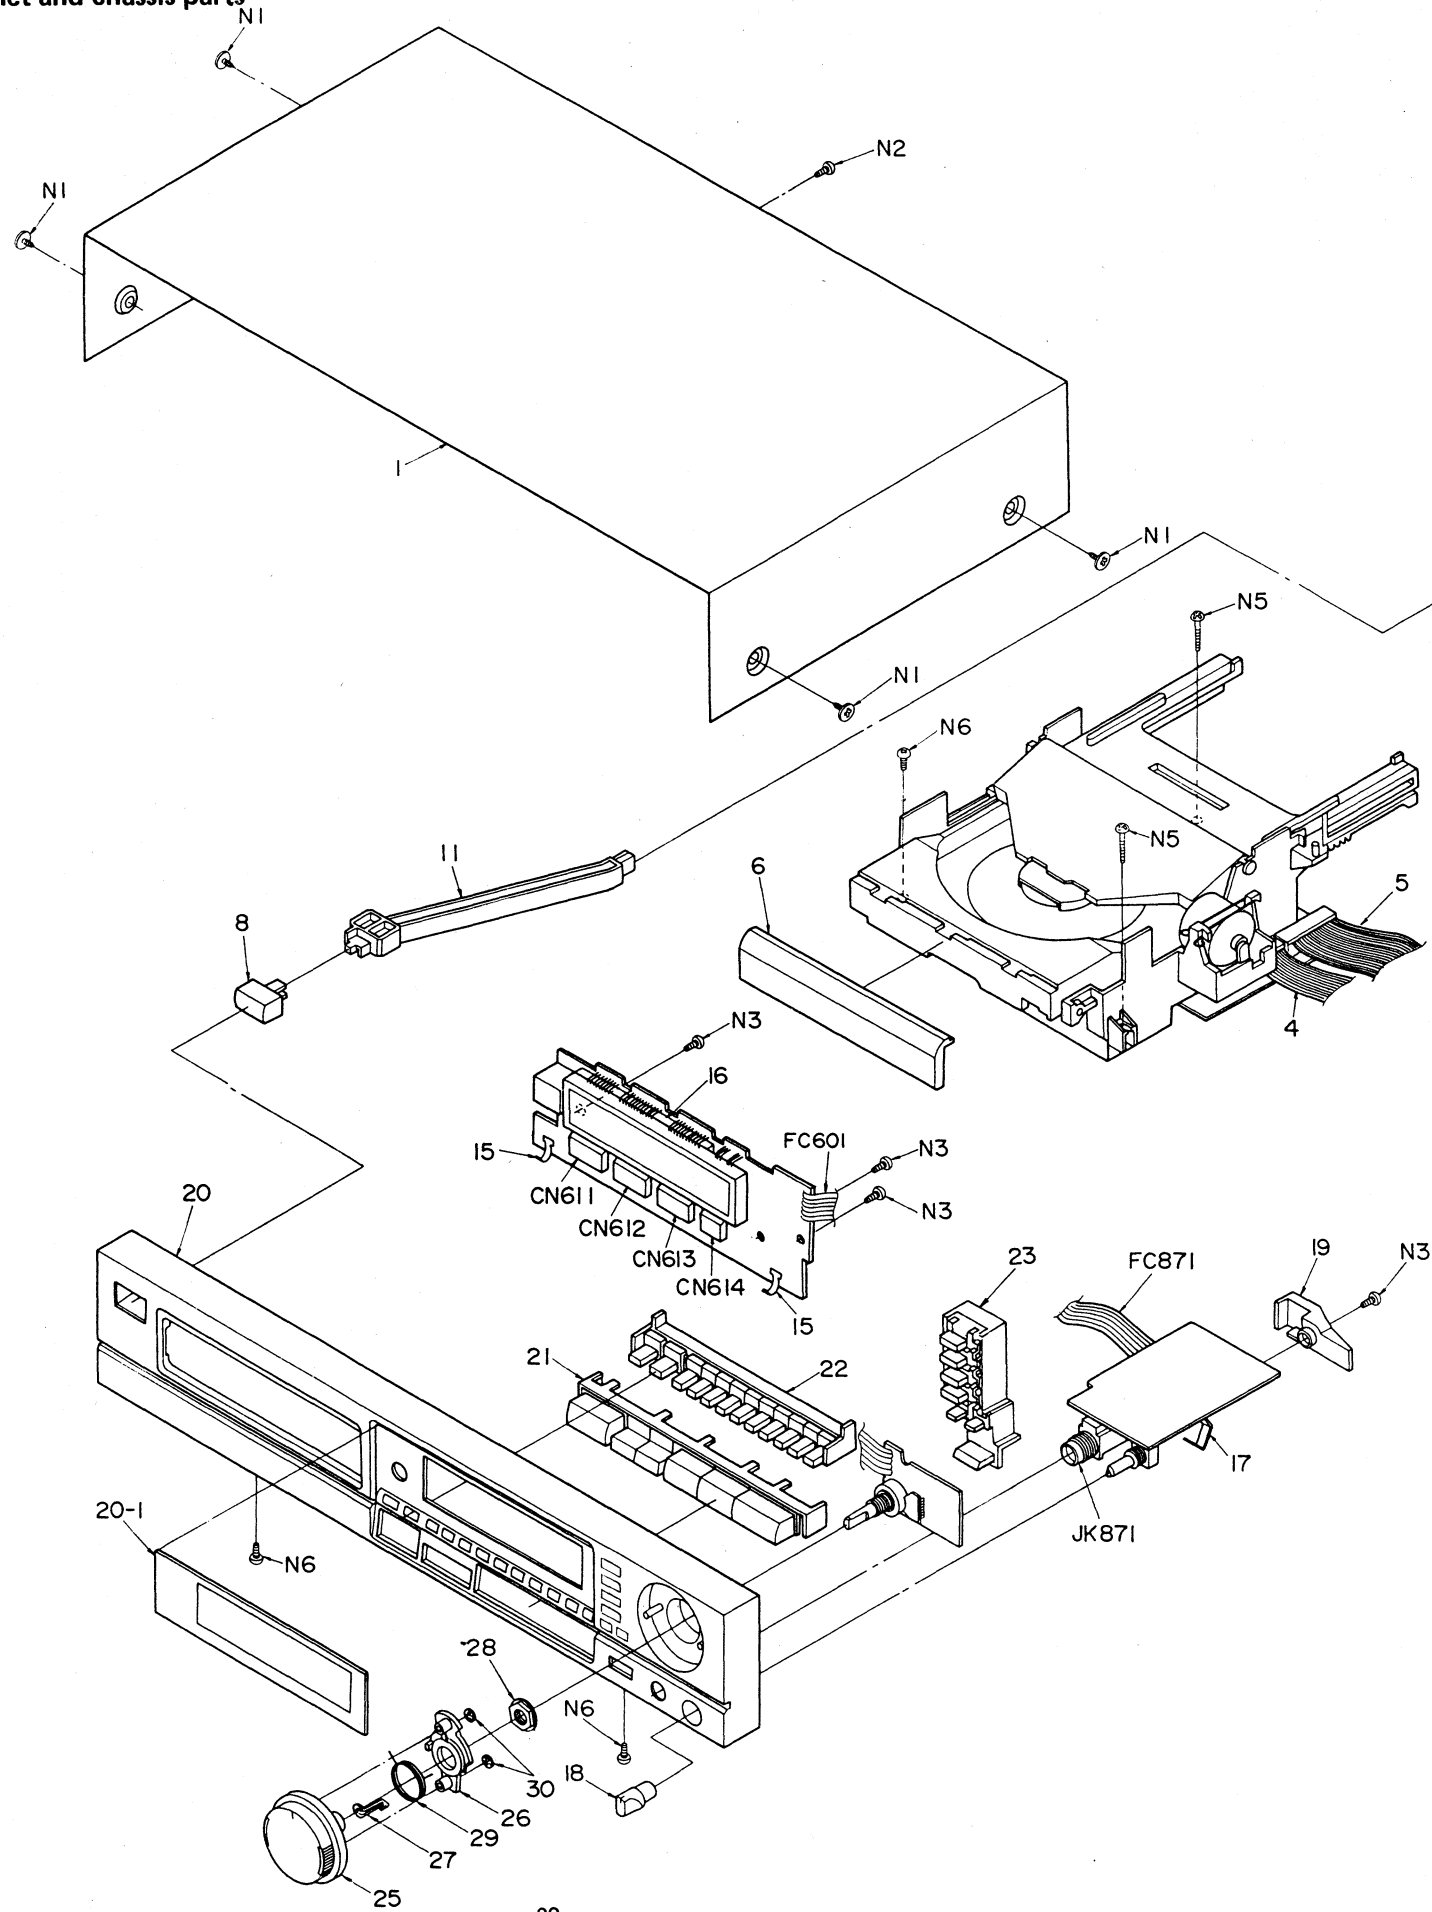


Loading unit pa

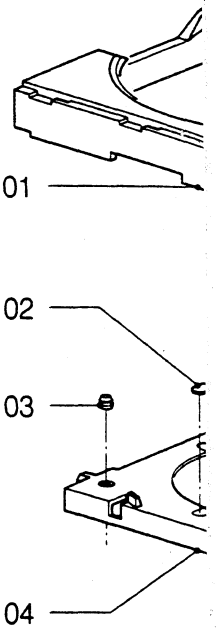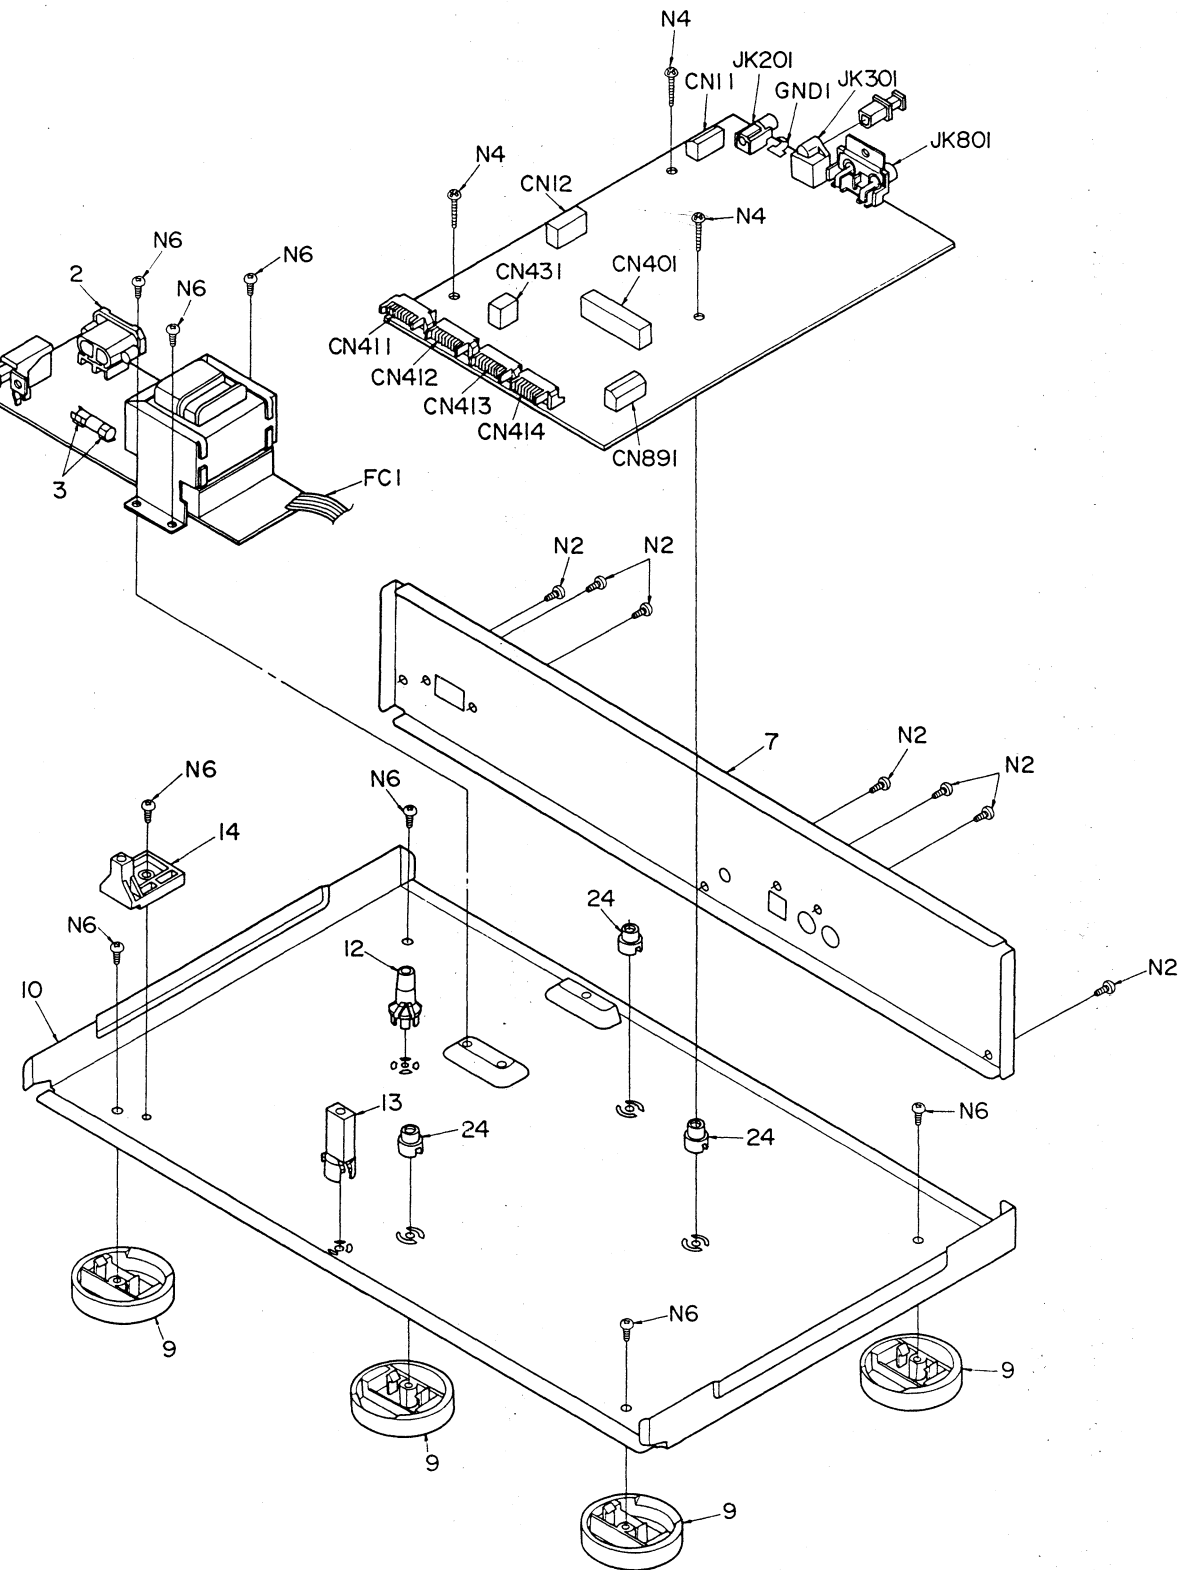


Grounding for el

- Human body ground
Use the anti-static wrist strap to prevent static electricity from your body.
 - Work table grounding
Put a conductive mat on the work table area where the optical sheet is located.
- Caution:**
The static electricity on the work table through the wrist strap or conductive clothes touch the optical sheet.

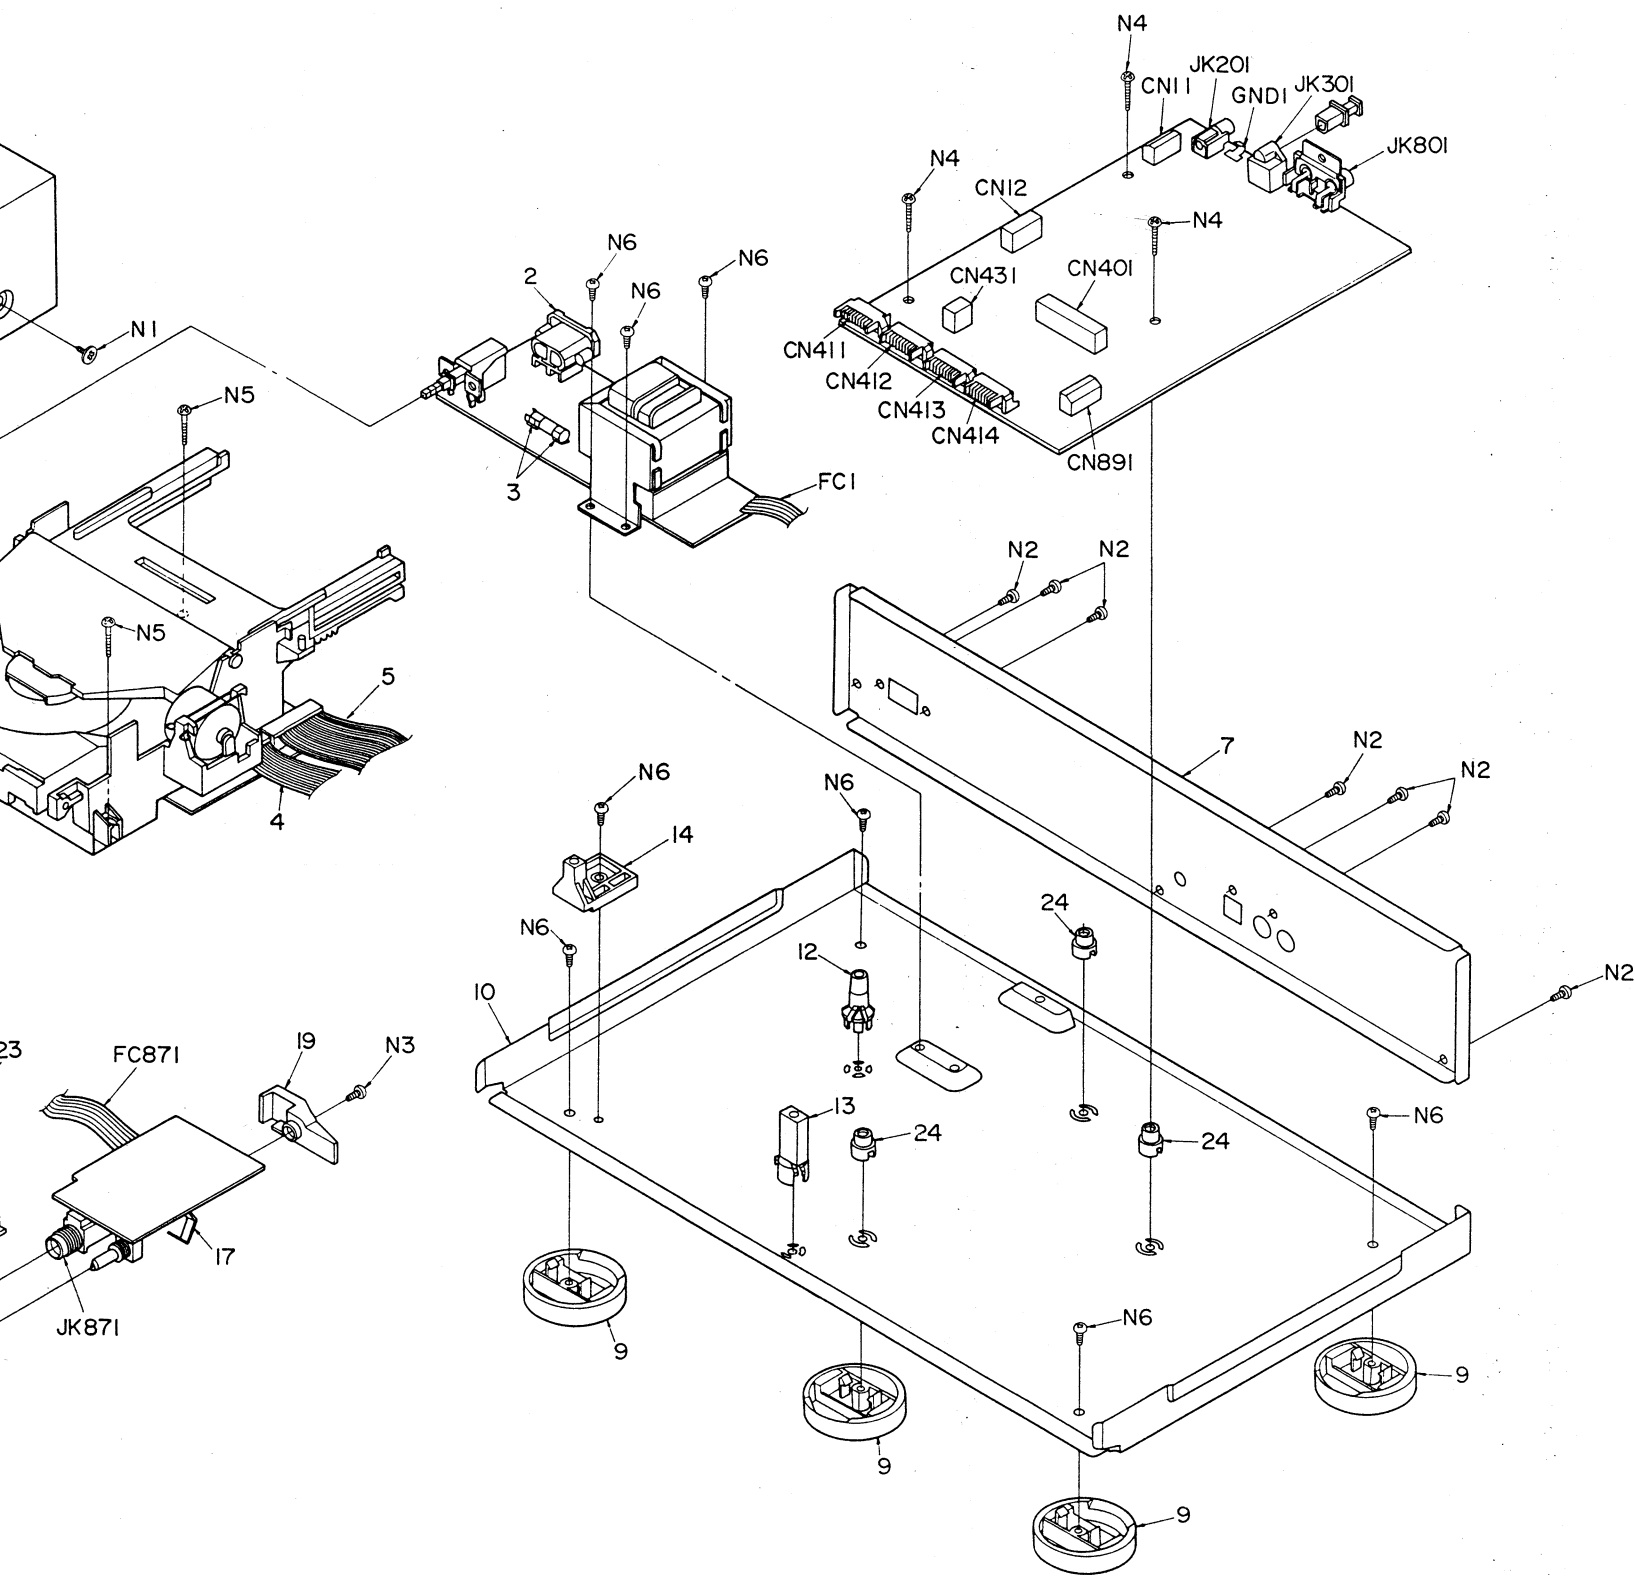


• Loading unit part

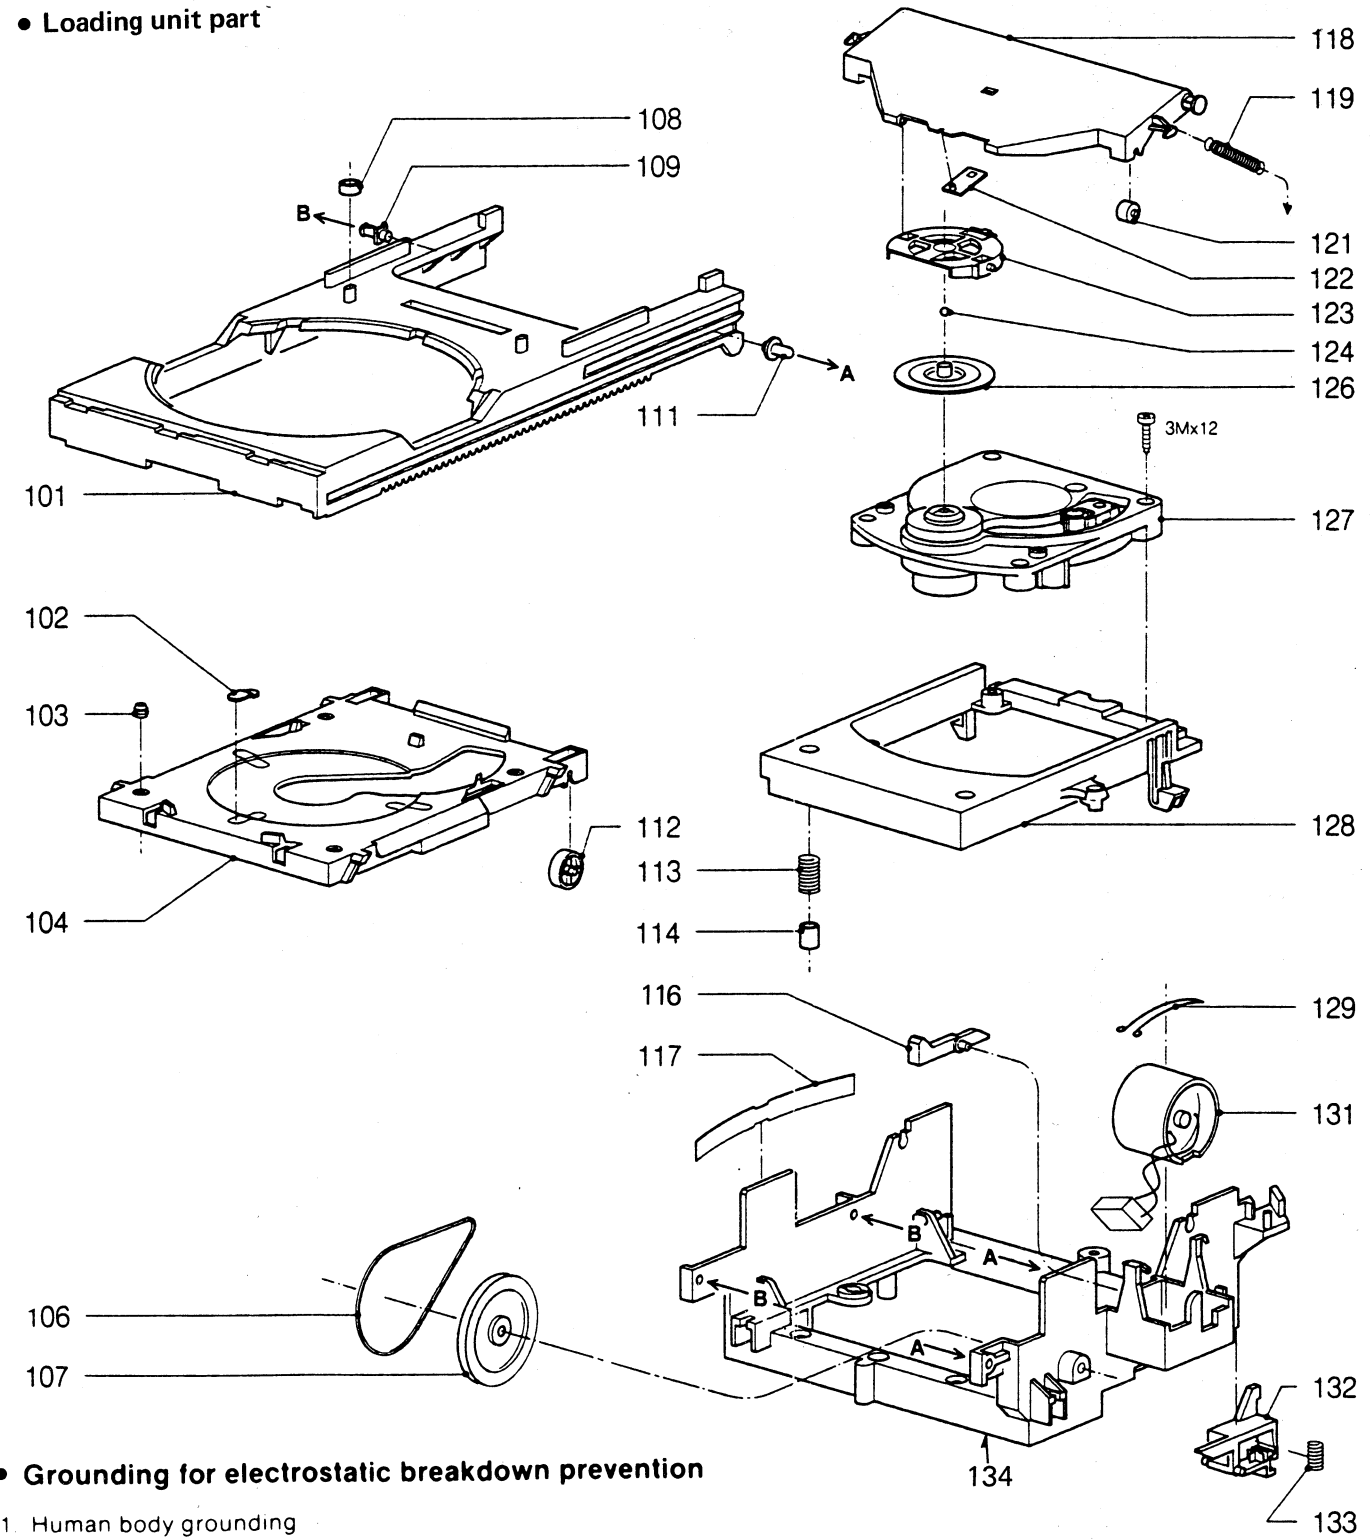

• Grounding for electrostatic breakdown prevention

- 1 Human body grounding
Use the anti-static wrist strap to discharge the static electricity from your body.
- 2 Work table grounding
Put a conductive material (sheet) or steel sheet on the area where the optical pickup is placed, and ground the sheet.

Caution:
The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the optical pickup

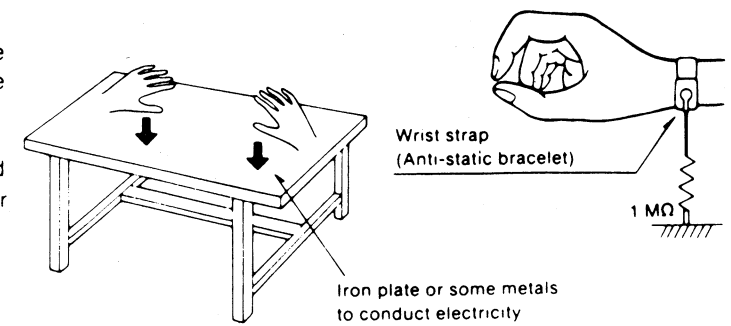

RESISTORS AND CAPACITORS

PACKING

Notes : * Important safety notice: Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts. * [MB] Indicates in Remarks columns parts that are supplied by MBV. * Capacity value are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F) * Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM) , 1M=1,000k(OHM)



Table with 9 columns: Ref. No., Part No., Values & Remarks. It lists various resistors (R15-R874) and capacitors (C1-C507) with their specifications and remarks.

Table with 6 columns: Ref. No., Part No., Values & Remarks. It lists various resistors (C508-C894) and capacitors (R3501-R3802) with their specifications and remarks.

PACKING

any of these
Values & Remarks
4W 100K
4W 100K
4W 2.2K
4W 2.2K
4W 68
4W 68
4W 4.7K
4W 4.7K
4W 1K
4W 1K
4W 4.7K
4W 4.7K
4W 470
4W 470
CAPACITORS
1V 0.01U Δ
1V 0.01U Δ
1V 0.01U Δ
1V 0.1U
1V 2200U
1V 2200U
1V 47U
1V 47U
1V 100U
1V 330U
1V 330U
1V 100U
1V 100U
1V 22U
1V 0.01U
1V 0.01U
1V 0.01U
1V 0.1U
1V 0.1U
1V 27P
1V 0.1U
1V 1000P
1V 0.1U
1V 47U
1V 0.1U
1V 0.1U
1V 10U
1V 0.1U
1V 0.1U
1V 15P
1V 1000P


Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
C508	ECEA1CKN100B	16V 10U				C2505	482212422027	25 47 [MB]
C509	ECBT1H470J5	50V 47P			<SERVO P. C. B. >	C2506	482212233104	63 100NF [MB]
C510	ECQM1H104KF3	50V 0.1U			RESISTORS	C2507	482212231644	63 0.0022 [MB]
C511	ECEA1HKAR47B	50V 0.47U				C2508	532212142491	100 0.047 [MB]
C512	ECBT1H681KB5	50V 680P	R3501	482211652426	1/2 4K7 [MB]	C2509	482212231772	50 47P [MB]
C513	ECBT1H681KB5	50V 680P	R3502	482211190214	1/8 100K [MB]	C2510	482212232442	50 0.01 [MB]
C514	ECQV1H474JZ3	50V 0.47U	R3503	482211130499	1/3 4E7 [MB]	C2511	482212231746	50 0.001 [MB]
C515	ECQM1H153KF3	50V 0.015U	R3504	482211130499	1/3 4E7 [MB]	C2513	482212142245	63 0.22 [MB]
C516	ECEA1VKN2R2B	35V 2.2U	R3505	482211190253	1/8 12K [MB]	C2514	482212151252	100 0.47 [MB]
C518	ECBT1H561KB5	50V 560P	R3506	532211190091	1/8 100 [MB]	C2515	482212231746	50 0.001 [MB]
C801	ECQV1H683JZ3	50V 0.68U	R3507	482211190248	1/8 2K2 [MB]	C2520	482212231965	63 220P [MB]
C802	ECQV1H683JZ3	50V 0.68U	R3508	482211190512	1/8 24K [MB]	C2521	482212422027	2.5 47 [MB]
C803	ECQV1H683JZ3	50V 0.68U	R3509	482211190572	1/8 5K6 [MB]	C2530	482212151321	63 0.0082 [MB]
C804	ECQV1H683JZ3	50V 0.68U	R3510	482211190249	1/8 10K [MB]	C2531	482212151321	63 0.0082 [MB]
C805	ECBT1H151KBY	50V 150P	R3521	482211190178	1/8 220 [MB]	C2532	482212440272	16 33 [MB]
C806	ECBT1H151KBY	50V 150P	R3522	482211130515	1/3 18 [MB]	C2534	532212142661	63 0.33 [MB]
C807	ECBT1H151KBY	50V 150P	R3523	482211130511	1/3 12 [MB]	C2535	532212231848	63 0.033 [MB]
C808	ECBT1H151KBY	50V 150P	R3524	532211190091	1/8 100 [MB]	C2536	532212231848	63 0.033 [MB]
C811	ECQV1H683JZ3	50V 0.68U	R3530	482211190543	1/8 47K [MB]	C2537	482212142245	63 0.22 [MB]
C812	ECQV1H683JZ3	50V 0.68U	R3531	482211190344	1/8 15K [MB]	C2538	482212142245	63 0.22 [MB]
C815	ECBT1H102KB5	50V 1000P	R3533	532211190268	1/8 5K1 [MB]	C2540	482212441583	50 0.68 [MB]
C816	ECBT1H102KB5	50V 1000P	R3534	482211190197	1/8 220K [MB]	C2541	482212233147	50 0.022 [MB]
C817	ECFR1E104ZF5	25V 0.1U	R3535	482211653081	3/5 12K [MB]	C2542	482212233147	50 0.022 [MB]
C831	ECFR1E104ZF5	25V 0.1U	R3540	482211652858	3/5 4E7 [MB]	C2543	482212440196	16 220 [MB]
C832	ECEA0JU331B	6.3V 330U	R3541	482211190544	1/8 6K8 [MB]	C2544	482212440196	16 220 [MB]
C833	ECFR1E104ZF5	25V 0.1U	R3542	482211190124	1/8 82 [MB]	C2545	482212233104	63 0.1 [MB]
C834	ECEA0JU331B	6.3V 330U	R3543	482211190544	1/8 6K8 [MB]	C2546	482212233104	63 0.1 [MB]
C835	ECFR1E104ZF5	25V 0.1U	R3544	482211130483	1/3 1 [MB]	C2547	482212233147	50 0.022 [MB]
C836	ECFR1E104ZF5	25V 0.1U	R3545	482211130483	1/3 1 [MB]	C2550	482212151049	63 0.015 [MB]
C837	ECFR1E104ZF5	25V 0.1U	R3550	482211190248	1/8 2K2 [MB]	C2560	482212231784	50 0.0047 [MB]
C838	ECBT1H5R6K5	50V 5.6P	R3552	482211190171	1/8 820 [MB]	C2561	482212151252	100 0.047 [MB]
C840	ECBT1H5R6K5	50V 5.6P	R3554	482211690421	1/8 2K [MB]	C2562	532212142661	63 0.033 [MB]
C841	ECEA0JK101B	6.3V 100U	R3555	482211190251	1/8 22K [MB]	C2563	482212233104	63 100NF [MB]
C842	ECFR1E104ZF5	25V 0.1U	R3560	482211191494	1/8 11K [MB]	C2565	482212232808	50 0.0012 [MB]
C844	ECBT1H270J5	50V 27P	R3561	482211690417	1/8 150K [MB]	C2625	482212231765	50 100P [MB]
C851	ECEA0JU471B	6.3V 470U	R3562	482211652845	3/5 120K [MB]			
C852	ECEA1AK100B	10V 10U	R3563	482211190573	1/8 56K [MB]			
C871	ECEA1EKN3R3B	25V 3.3U	R3564	482211191495	1/8 160K [MB]			
C872	ECEA1EKN3R3B	25V 3.3U	R3565	482211652354	1/2 27 [MB]			
C873	ECQM1H103KF3	50V 0.01U	R3566	482211190186	1/8 22 [MB]			
C874	ECQM1H103KF3	50V 0.01U	R3567	482211652478	1/2 82K [MB]			
C875	ECBT1C103NS5	16V 0.01U	R3568	482211190161	1/8 470K [MB]			
C876	ECBT1C103NS5	16V 0.01U	R3801	482211190163	OE [MB]			
C877	ECBT1C103NS5	16V 0.01U	R3802	482211190163	OE [MB]			
C878	ECBT1C103NS5	16V 0.01U						
C879	ECBT1C103NS5	16V 0.01U						
C881	ECEA1AN101XB	10V 100U			CAPACITORS			
C882	ECEA1AN101XB	10V 100U						
C891	ECEA1CK101	16V 100U	C2501	482212233147	50 0.022 [MB]			
C892	ECEA1CK101	16V 100U	C2502	482212422027	10 47 [MB]			
C893	ECEA1CKN220B	16V 22U	C2503	482212233147	50 0.022 [MB]			
C894	ECEA1CKN220B	16V 22U	C2504	482212231727	63 470P [MB]			

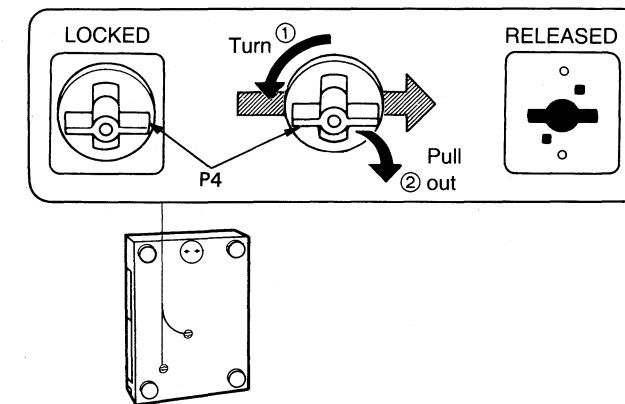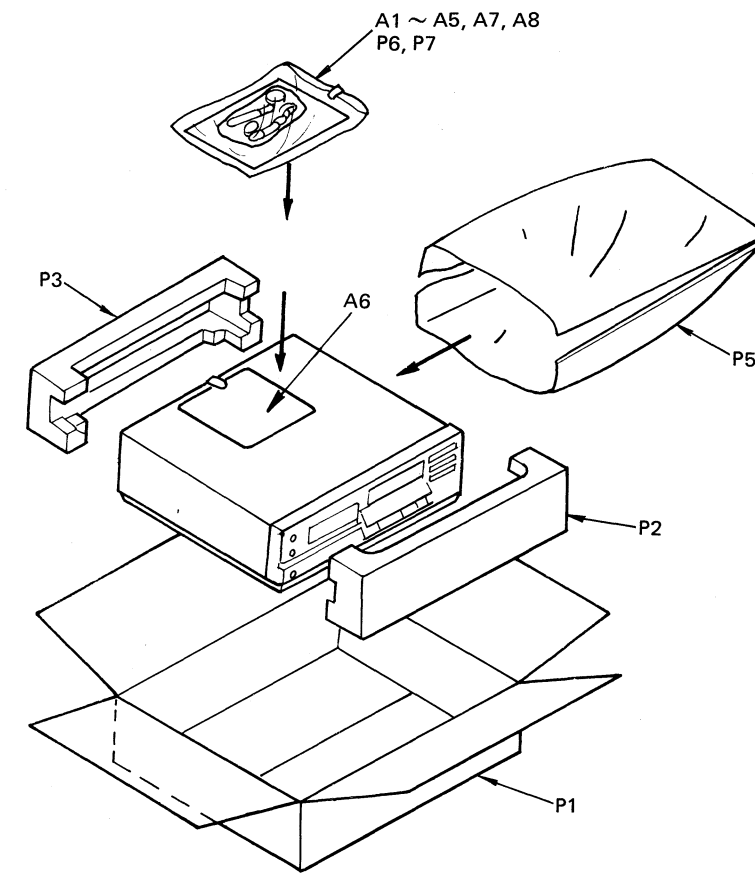


■ TROUBLESHOOTING GUIDE

SL-P477A Operation Sequence Check Sheet

Play Operation Sequence

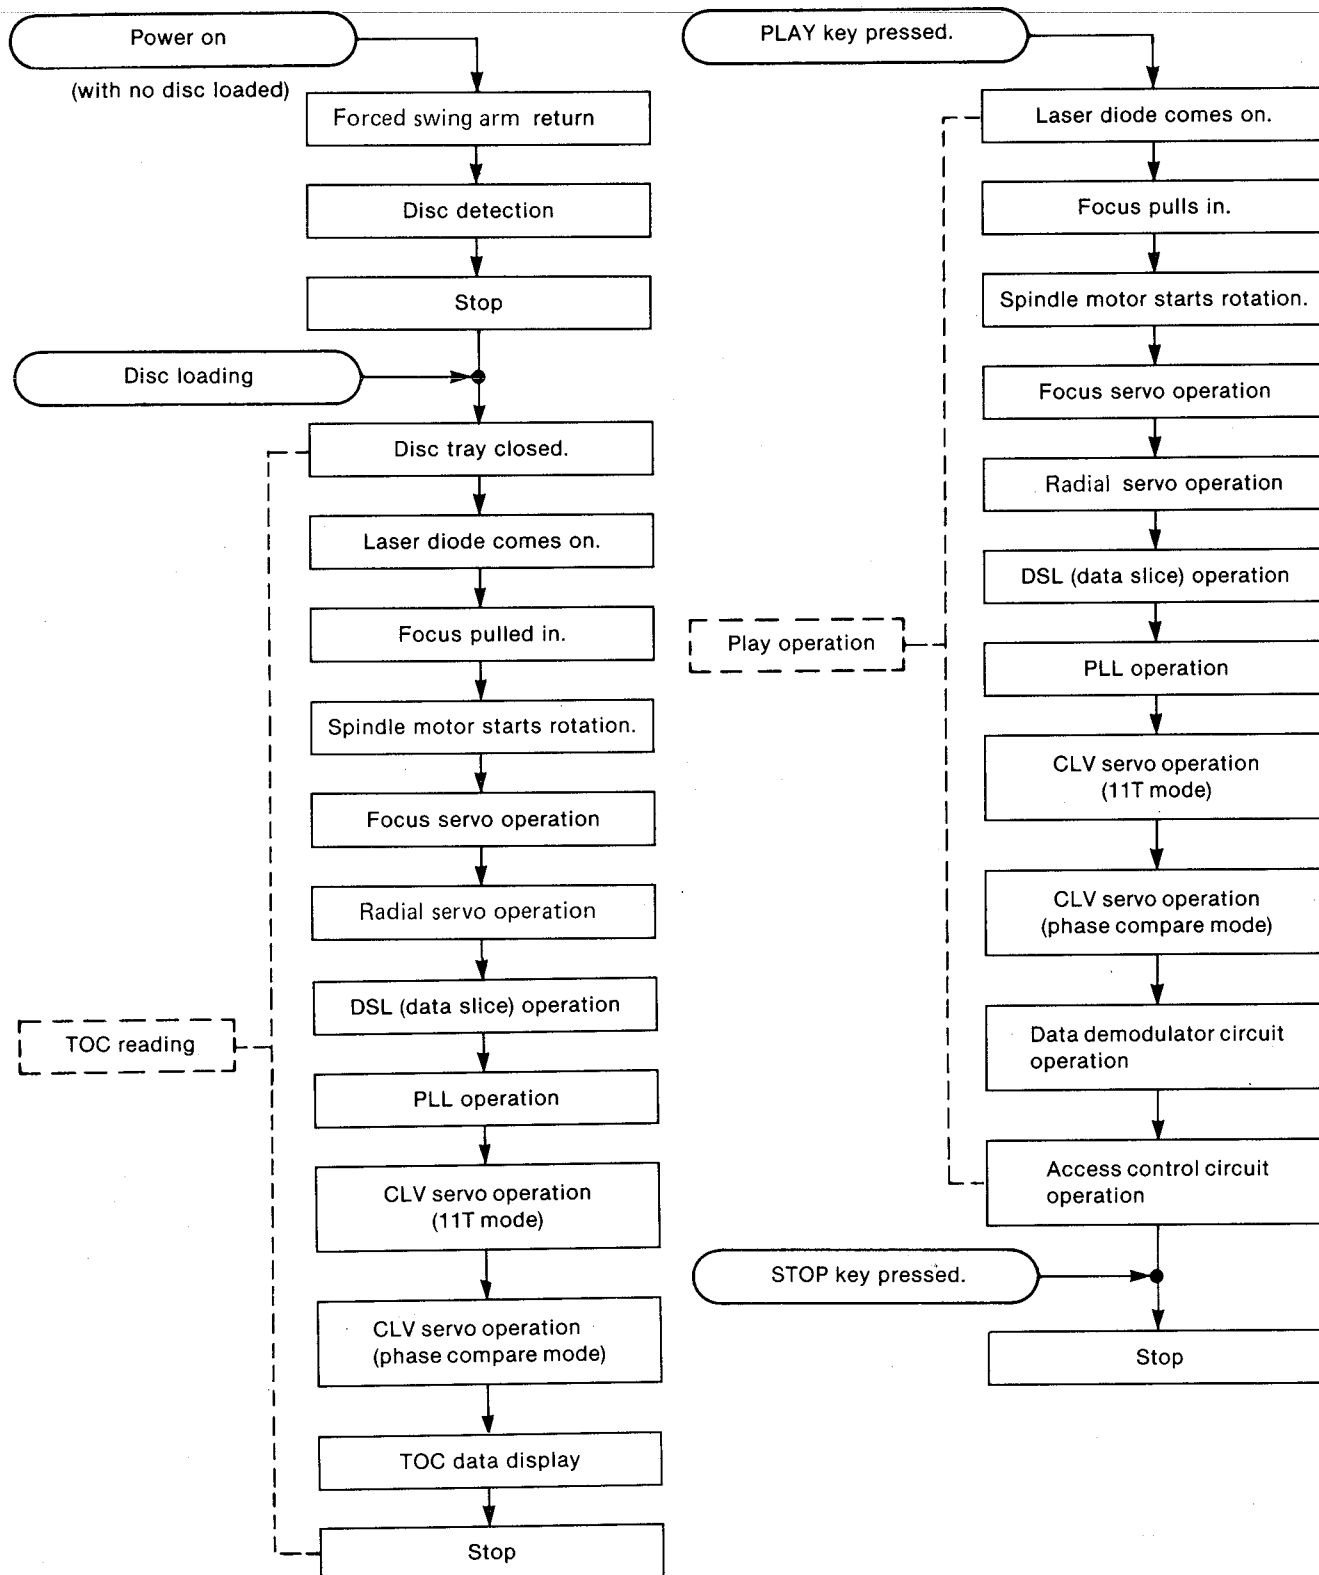

(Operation Sequence Just After Power On)

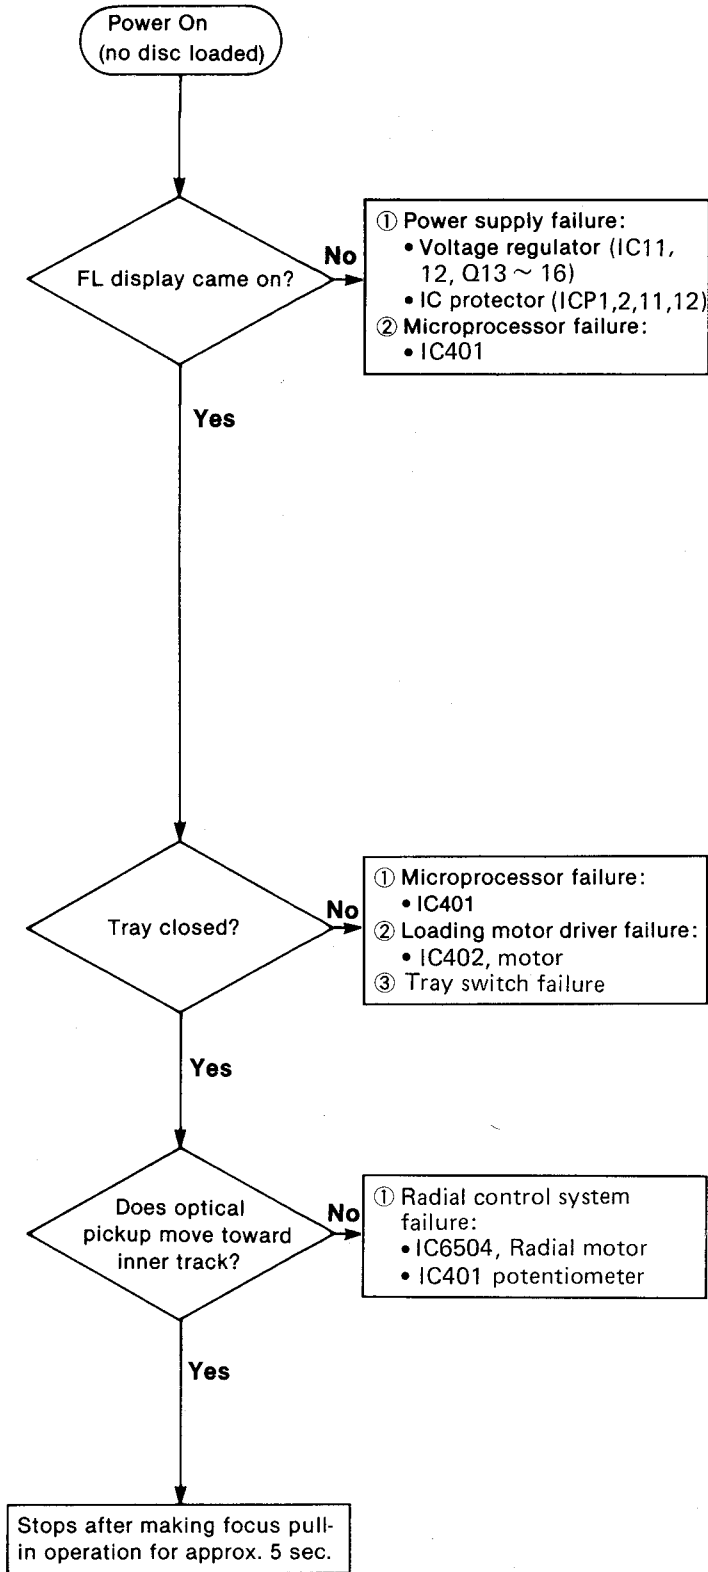

(TOC Read Operation-PLAY Operation)

