


Service Manual

Compact Disc Changer SL-PD987

COMPACT
disc
DIGITAL AUDIO

DIGITAL

MASH*
multi-stage noise shaping

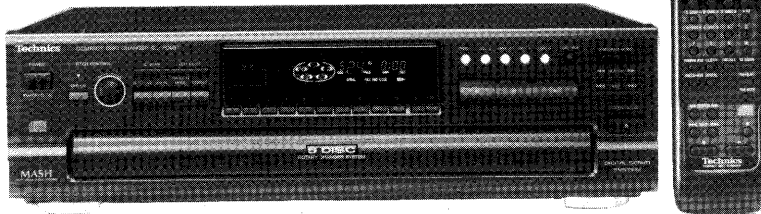

Colour

(K) ... Black Type

Area

| Suffix for Model No. | Area | Colour |
|----------------------|--------------------|--------|
| (PP) | U.S.A. and Canada. | (K) |

- ※
- Technics (or Panasonic) developed the world's first MASH type DAC and ADC. MASH technology was invented by NTT (LSI Labs).
 - MASH is a trademark of NTT.

RAE0113Z MECHANISM SERIES

■ SPECIFICATIONS

■ AUDIO

| | |
|---------------------------|----------------------------|
| No. of channels | 2 (left and right, stereo) |
| Frequency response | 2-20,000 Hz, ±1 dB |
| Output voltage | 2 V (at 0 dB) |
| Dynamic range | 92 dB |
| S/N | 100 dB |
| Total harmonic distortion | 0.007 % (1 kHz, 0 dB) |
| Wow and flutter | Below measurable limit |
| DA converter | MASH (1 bit) |
| Output impedance | Approx. 1 kΩ |
| Load impedance | More than 10 kΩ |

■ PICKUP

Wavelength 780 nm

■ GENERAL

| | |
|-------------------------------|--|
| Power consumption | 12 W |
| Power supply | AC 120 V, 60 Hz |
| Dimensions (W × H × D) | 430 × 125 × 377 mm (16-15/16" × 4-15/16" × 14-27/32") |
| Weight | 4.6 kg (10.1 lb.) |

Note:

Design and specifications are subject to change without notice.
Weight and dimensions are approximate.

■ CONTENTS

| | Page |
|---|--------|
| PRECAUTION OF LASER DIODE | 2 |
| SAFETY PRECAUTION | 2 |
| ACCESSORIES | 2 |
| CAUTIONS CONCERNING THE MOVING OF THIS UNIT | 3 |
| CONNECTIONS | 3 |
| FRONT PANEL CONTROLS | 4 |
| BASIC OPERATIONS | 5, 6 |
| PITCH CONTROL FUNCTION | 7 |
| AUTO CUE FUNCTION | 7 |
| REMOTE CONTROL OPERATION | 8, 9 |
| SELF-DIAGNOSTIC | 10 |
| HANDLING PRECAUTIONS FOR TRAVERSE DECK | 11 |
| REPLACEMENT OF THE FOOT | 11 |
| DISASSEMBLY INSTRUCTIONS | 12~19 |
| INSTALLATION OF SERVO P.C.B. | 19, 20 |
| HOW TO CHECK THE MAIN AND SERVO P.C.B. | 21, 22 |
| OPERATING THE UNIT WITHOUT THE FRONT PANEL ASS'Y (OPERATION P.C.B. AND KEYS) | 23 |

| | Page |
|--|----------------|
| AUTOMATIC ADJUSTMENT RESULTS DISPLAY FUNCTION (SELF-CHECK FUNCTION) | 24 |
| DIGITAL SERVO SYSTEM | 25 |
| MEASUREMENTS AND ADJUSTMENTS | 26, 27 |
| TROUBLESHOOTING GUIDE | 28, 29 |
| BLOCK DIAGRAM | 30~33 |
| SCHEMATIC DIAGRAM | 34~40 |
| TERMINAL GUIDE | 41~44 |
| PRINTED CIRCUIT BOARDS | 45~48 |
| WIRING CONNECTION DIAGRAM | 49 |
| REPLACEMENT PARTS LIST | 50, 54, 55, 57 |
| CABINET PARTS LOCATION | 51, 52 |
| LOADING MECHANISM PARTS | 53 |
| RESISTORS AND CAPACITORS | 56, 57 |
| PACKAGING | 57 |

Technics®

© 1995 Matsushita Electric Industrial Co., Ltd.
All rights reserved. Unauthorized copying and
distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

■ PRECAUTION OF LASER DIODE

CAUTION: This unit utilizes a class 1 laser. Invisible laser radiation is emitted from the optical pickup lens when the unit is turned on:

1. Do not look directly into the pickup lens.
2. Do not use optical instruments to look at the pickup lens.
3. Do not adjust the preset variable resistor on the optical pickup.
4. Do not disassemble the optical pickup unit.
5. If the optical pickup is replaced, use the manufactures specified replacement pickup only.
6. Use of control or adjustments or performance of procedures other than those specified herin may result in hazardous radiation exposure.


■ SAFETY PRECAUTION (This "safety precaution" is applied only in U.S.A.)

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields, etc.
5. Before returning the serviced equipment to the customer, be sure to make the following insulation resistance test to prevent the customer from being exposed to a shock hazard.

• INSULATION RESISTANCE TEST

1. Unplug the power cord and short the two prongs of the plug with a jumper wire.
2. Turn on the power switch.
3. Measure the resistance value with ohmmeter between the jumpered AC plug and each exposed metal cabinet part, such as screwheads antenna, control shafts, handle brackets, etc. Equipment with antenna terminals should read between $3M\Omega$ and $5.2M\Omega$ to all exposed parts. (Fig. A) Equipment without antenna terminals should read approximately infinity to all exposed parts. (Fig. B)


Note: Some exposed parts may be isolated from the chassis by design. These will read infinity.

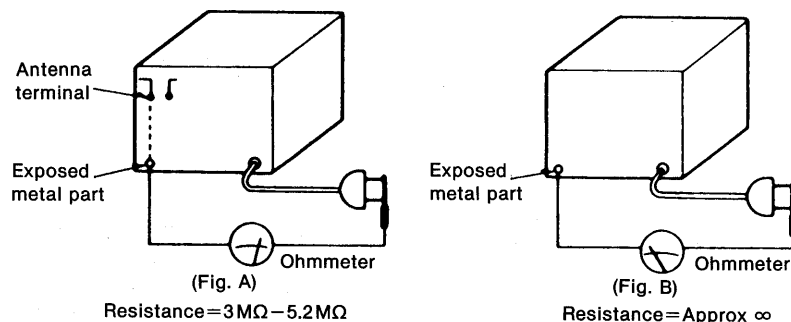


4. If the measurement is outside the specified limits, there is a possibilty of a shock hazard. The equipment should be repaired and rechecked before it is returned to the customer.

■ ACCESSORIES


AC power supply cord... 1 pc.
(SJA172)

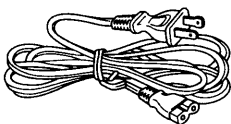


Stereo connection
Cable..... 1 pc.
(SJP2249-3)



Remote control
transmitter..... 1 pc.
(RAK-SL122WH)

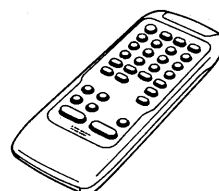


Batteries for remote
control transmitter..... 2 pcs.
(UM-4, "AAA", R03)



Note: These are available on sale route.

CAUTIONS CONCERNING THE MOVING OF THIS UNIT

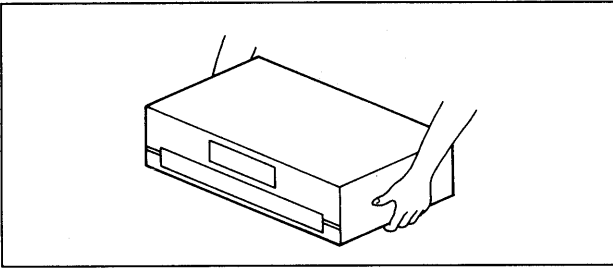

CAUTION

Before moving the changer to another location, be sure to carry out the "Preparations for moving the unit" described below.

Failure to do so will expose the compact discs and the changer to the risk of severe damage.

Preparations for moving the unit

All of the discs must be removed so that the trays are completely empty.


Use the following procedure.

- ① Press **POWER** to switch off the unit.
- ② Press **POWER** to switch on the unit.

(If there is a disc in the play section, it will be returned to the disc tray at this time.)


- ③ Press **OPEN/CLOSE** to open the loading drawer.
- ④ Press **DISC SKIP** to rotate the disc trays and remove the discs from all disc trays.
- ⑤ Press **OPEN/CLOSE** to close the loading drawer.
- ⑥ Press **POWER** to switch off the unit.

If you have pressed a wrong button by mistake, return to step ①.

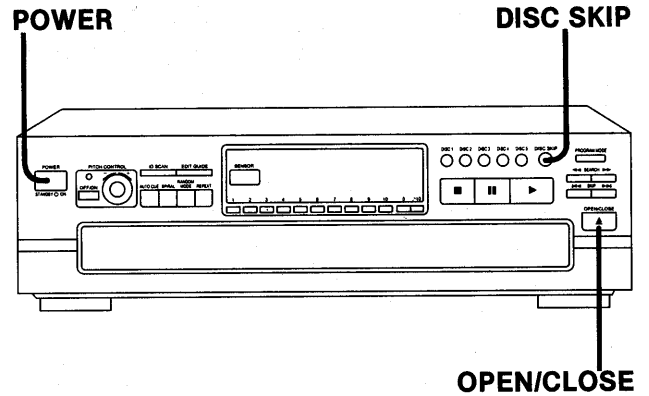


CONNECTIONS

Before connecting the changer to your audio system, make sure that the power of the changer and all other system components are turned off.

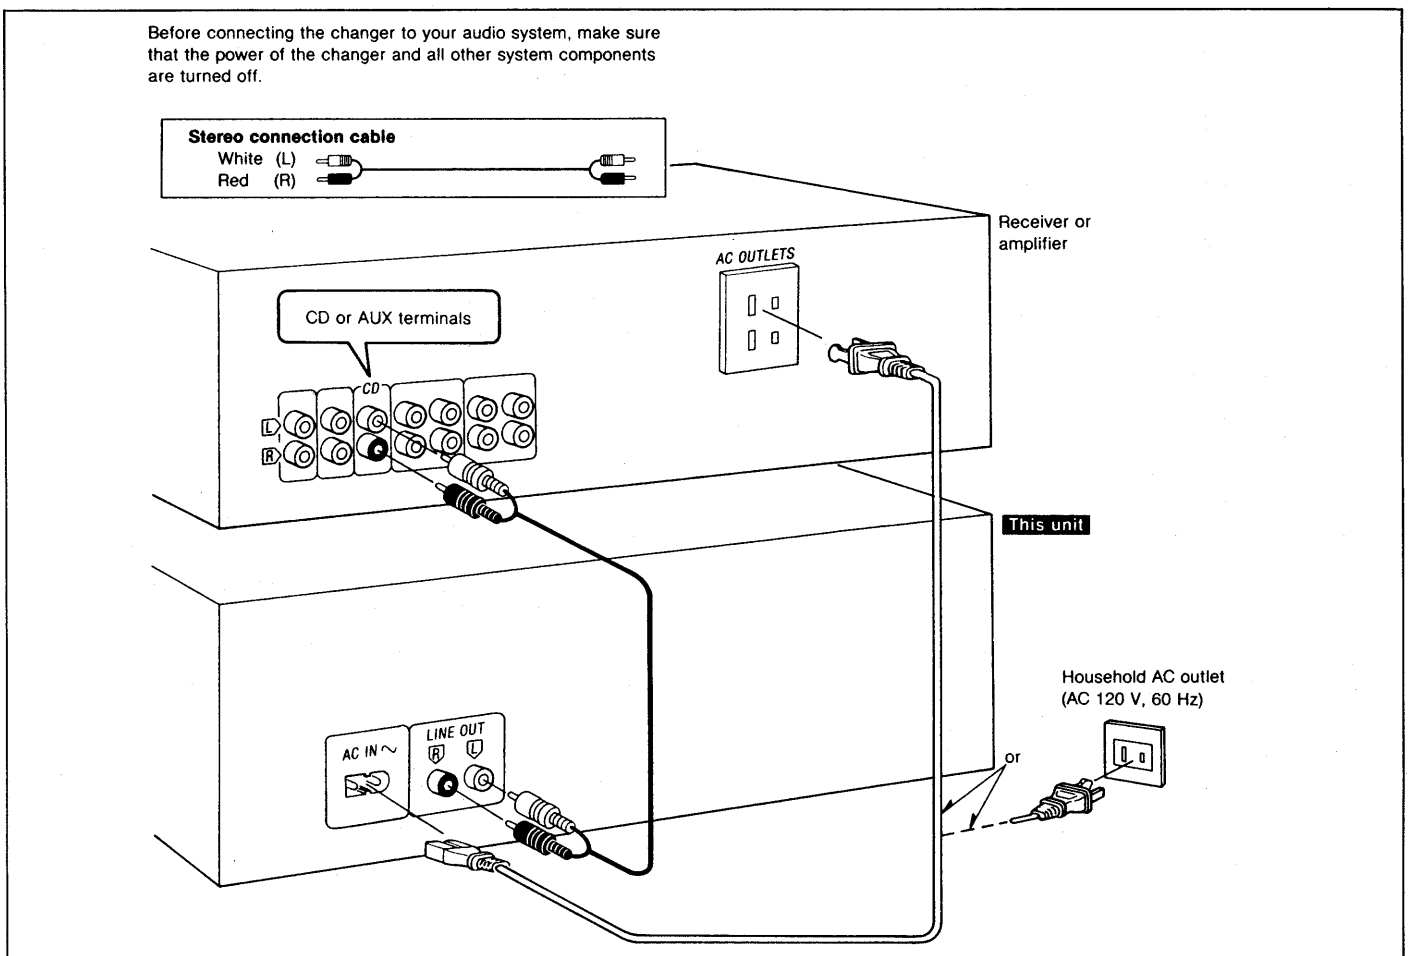

FRONT PANEL CONTROLS

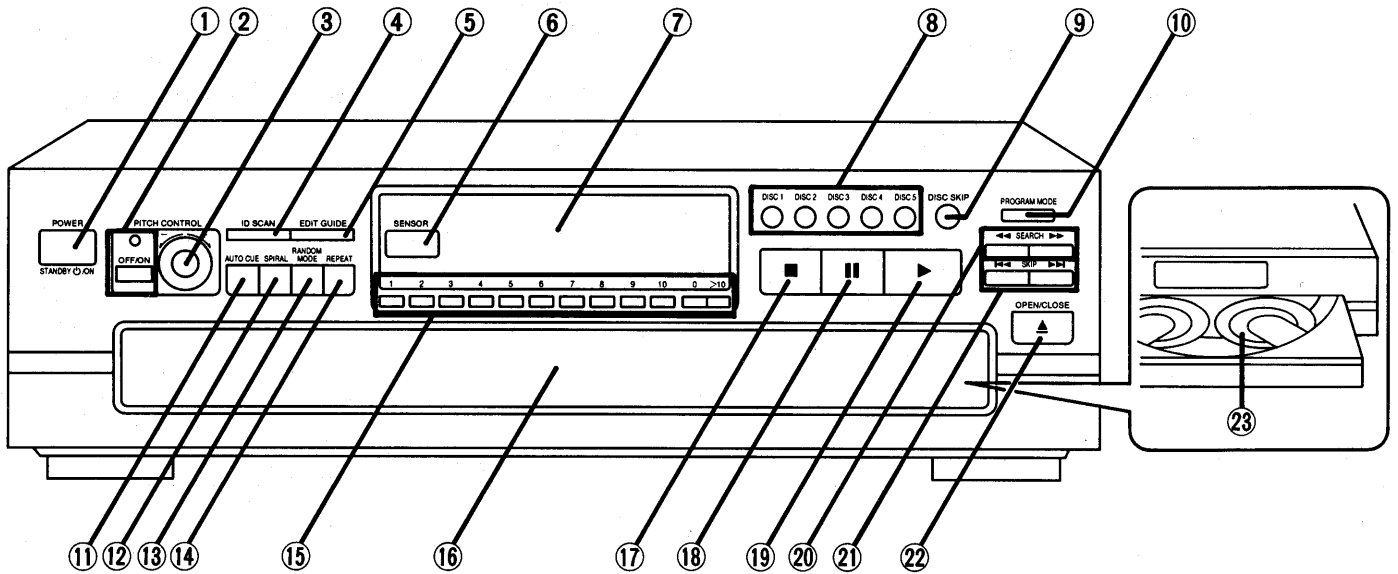


| No. | Name |
|-----|---|
| ① | Power "STANDBY ⏻ /ON" switch (POWER, STANDBY ⏻ /ON) Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power. |
| ② | Pitch control button/indicator (PITCH CONTROL, OFF/ON) |
| ③ | Pitch control knob (PITCH CONTROL, -, +) |
| ④ | ID scan button (ID SCAN) |
| ⑤ | Edit guide button (EDIT GUIDE) |
| ⑥ | Remote control signal sensor (SENSOR) |
| ⑦ | Display |
| ⑧ | Disc buttons (DISC 1-5) |
| ⑨ | Disc skip button (DISC SKIP) |
| ⑩ | Program mode button (PROGRAM MODE) |
| ⑪ | Auto cue button (AUTO CUE) |

| No. | Name |
|-----|--|
| ⑫ | Spiral button (SPIRAL) |
| ⑬ | Random mode button (RANDOM MODE) |
| ⑭ | Repeat button (REPEAT) |
| ⑮ | Numeric buttons (1-10, 0, >10) |
| ⑯ | Loading drawer |
| ⑰ | Stop button (■) |
| ⑱ | Pause button (⏸) |
| ⑲ | Play button (▶) |
| ⑳ | Search buttons (◀◀ SEARCH ▶▶) |
| ㉑ | Skip buttons (◀◀ SKIP ▶▶) |
| ㉒ | Loading drawer open/close button (▲ OPEN/CLOSE) |
| ㉓ | Disc trays (1-5) |


BASIC OPERATIONS

Sequential play


All of the discs will be played, beginning from track 1 on the selected disc.

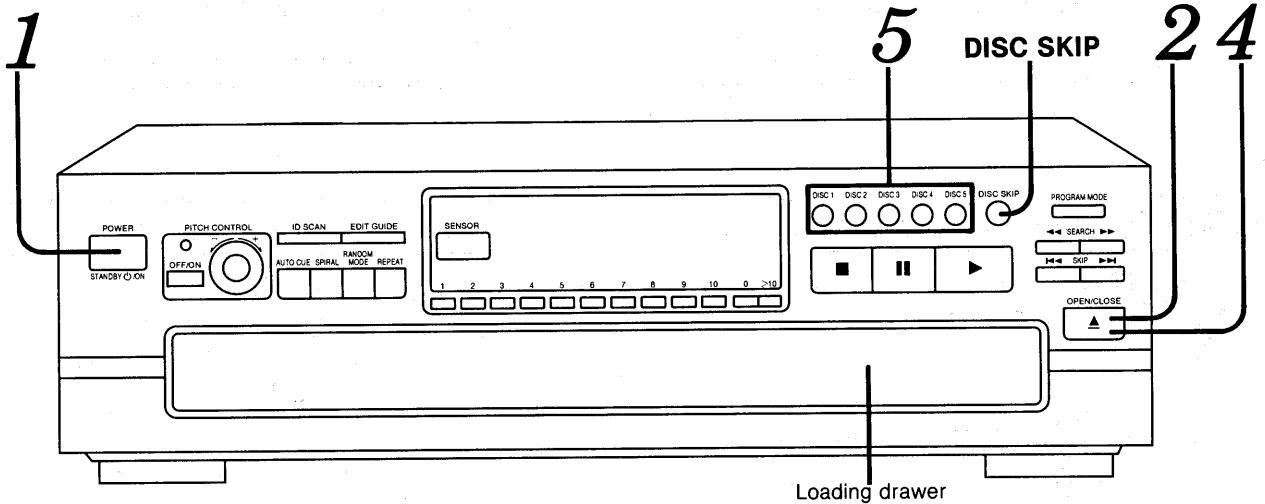


The explanation below is an example of operation in the case where all five disc trays in the changer are holding CDs.

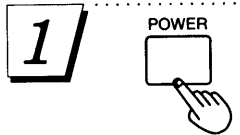


1 Press POWER.
The unit will switch on.

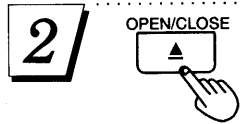


2 Press OPEN/CLOSE to open the loading drawer.
Indicates that the loading drawer is open.



Numbers of the trays in which discs are loaded.



3 Load the disc(s) on the disc tray(s).
The discs can be loaded two at a time by pressing DISC SKIP to rotate the carousel.

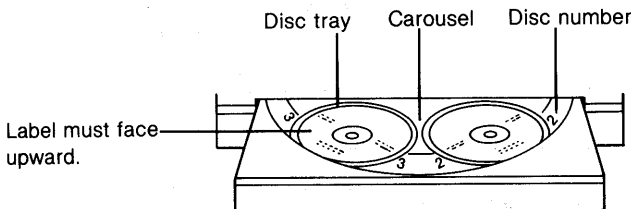


Note

Do not load 3" (8 cm) and 5" (12 cm) discs on the same disc tray.

CAUTION

Do not touch the loading drawer and carousel while they are in motion, and do not attempt to rotate the carousel by hand; doing so could result in incorrect operation of the unit and/or damage to the discs.

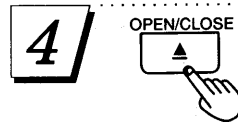


4 Press OPEN/CLOSE again to close the loading drawer.


Note

Do not attempt to close the drawer by hand.

Current play position (The numeral illuminates with a red color.)




Illuminates when a disc is in the disc tray. If there is no disc in the disc tray, the indication disappears when the disc tray comes to the play position.

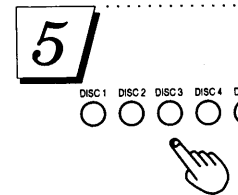



5 Press the desired disc button (1-5).

Play will begin from the selected disc. If a disc is not on the selected disc tray, the changer plays the disc at the next number.

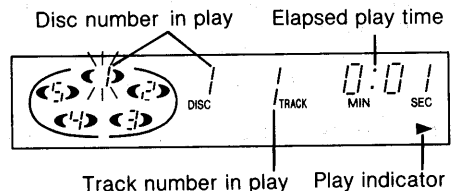


The illumination of a disc button indicates that there is a disc in the corresponding tray. During play, the illumination color will change to green.

The changer plays all the tracks on all the discs in order and stops automatically when the last track on the last disc finishes playing. The first disc will then be at the playing position.

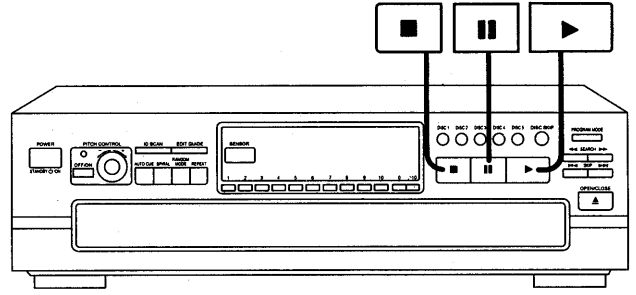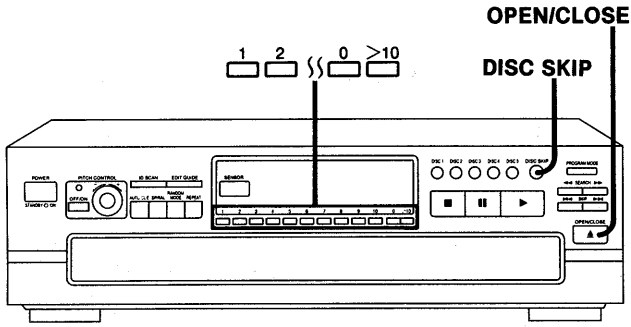

To directly access a desired track

Press the numeric button(s) to select the track.

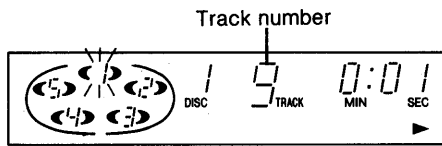

To select a track between 1 and 10:

Press the corresponding number on the numeric button.

To select a two-digit track number over 10:
First press >10, and then press the numbers for the two digits.


For example; number 20:

Press >10, then 2, and then 0.

To exchange discs during play

While playing a disc, it is possible to change the other discs without interrupting play.

① Press **OPEN/CLOSE** to open the loading drawer.

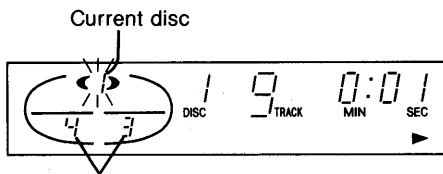

Discs which can be changed.

② Press **DISC SKIP** to rotate the disc trays and exchange the discs.

The carousel will move by one disc tray. Pressing again moves the carousel in the opposite direction by two disc trays.

③ Press **OPEN/CLOSE** to close the loading drawer.


Note

If you play a disc with the loading drawer open, discs other than the current disc cannot be played.

To temporarily stop play




Press **||**.

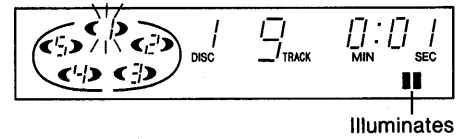

Illuminates


Press **▶** to resume play.

To stop play



Press **■**.

The display will show the total number of tracks and the total playing time of the current disc.

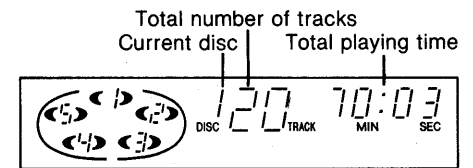

The total playing time displayed includes the silent sections between tracks. For this reason, it may be a few seconds longer than the playing time indicated on the disc.


Press **▶** to re-start play.

CAUTION

Do not move this changer with a compact disc inside the unit. If a disc comes off the disc tray, it might be scratched or the changer might become incapable of playing. (Refer to "Cautions concerning the moving of this unit" on the back cover.)

PITCH CONTROL FUNCTION


The playback pitch can be changed as desired within a range of $\pm 12.5\%$. (The tempo and the pitch of the sound will change simultaneously.)

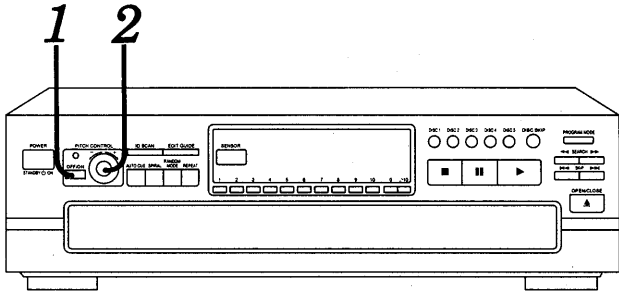

1/ Press OFF/ON.
The pitch control indicator on this unit will illuminate.

2/ Turn the knob in the “-” or “+” direction.
-: Pitch decreases
+: Pitch increases

The pitch will change while the knob is being held, and the changed values will show on the display.

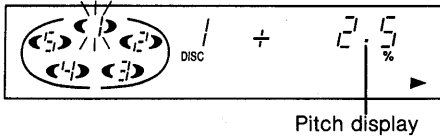

If the knob is released, the pitch will stop changing, and after approximately 2 seconds the pitch display will change back to the time display.

Pitch changing steps:

The +5.9% position is a half tone-sharp (#).
The -5.6% position is a half tone-flat (b).

To fine-tune the pitch

Turn the knob and then immediately turn it back to the original position. In this case, the pitch will change by 0.1% only.

To play in 0% standard pitch

Press OFF/ON so that the pitch control indicator will switch off. Even after the pitch control indicator has been switched off, the pitch setting will remain in memory.


For your reference:

- The pitch can be adjusted by turning the knob even if the pitch control indicator is switched off. The playback sound will not change if this is done. To play back at the setting pitch, press OFF/ON to make the pitch control indicator illuminate.
- While changing the pitch, the time display will show the playback position only. This will not match the actual playback time.
- The pitch value and the on/off setting of the pitch control will remain stored in the memory even after the unit is switched off. However, if the power cord is unplugged or the power supply is otherwise interrupted for an extended length of time, the memory will be erased.

AUTO CUE FUNCTION

The auto cue function allows the unit to wait in a standby condition at the beginning of each track so as to start play right when you are ready.

When each track finishes playing, the unit skips to the beginning of the next track and switches to the play standby mode.

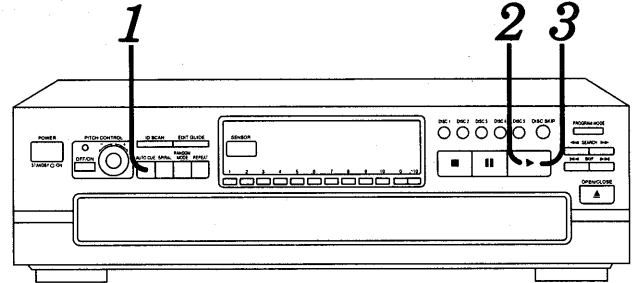

1/ Press AUTO CUE.
The “A.CUE” indicator will illuminate.

2/ Press ►.
The changer switches to the play standby mode at the beginning of the track.
The “A.CUE” indicator will flash.

3/ Press ► again to start play.
Press ► at the beginning of each track.

To cancel auto cue mode

AUTO CUE Press AUTO CUE.
The “A.CUE” indicator will go out.

Note


The auto cue function may not cause the unit to wait exactly at the beginning of a track if the track begins with a very soft passage or if there is a lot of background noise.

REMOTE CONTROL OPERATION


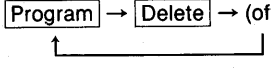
| <i>Basic operation</i> | | |
|------------------------|------------------------------------|---|
| | To turn OFF/ON the main unit | POWER |
| | To open/close the loading drawer | OPEN/CLOSE |
| | To rotate the carousel | DISC SKIP |
| | To select the desired disc number | → 1 DISC 1 2 DISC 2 3 DISC 3 4 DISC 4 5 DISC 5 |
| | To select the desired track number | 1 DISC 1 2 DISC 2 3 DISC 3 >10 4 DISC 4 5 DISC 5 6 7 8 9 10 To select a track between 1 and 10: Press the corresponding number on the keypad. To select a two-digit track number over 10: First press >10, and then press the numbers for the two digits. |
| | To start play | |
| | To stop play temporarily | Press to resume play. |
| To stop play | | |



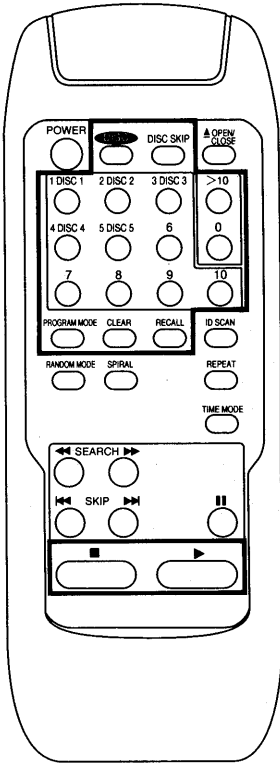



| <i>Random/spiral play</i> | | |
|---------------------------|------------------------------------|---|
| | To start one disc/full random play | RANDOM MODE Each time the button is pressed, the random mode will change in the following order: One disc random → Full random → (off) |
| | To start spiral play | SPIRAL To cancel spiral mode, press this button again. |
| | To stop random/spiral play | Random/spiral mode is also canceled at the same time. |












Program/delete play




To start program/delete play

- ① **PROGRAM MODE**
 Select program or delete mode. Each time the button is pressed, the program/delete mode will change in the following order:
Program → **Delete** → (off)



- ② **DISC**
 →    Select the disc number.
 

- ③     Select the track number.
  
   


Repeat steps ② and ③ until you have completed the desired entry.

- ④  Start play.


To check the entered contents

RECALL
 The selections entered are displayed one by one each time this button is pressed.


To clear a single item of the entered contents

CLEAR
 Only the selection which is currently displayed is cleared.


To clear all entered contents

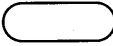(In the stop mode)


To cancel program/delete mode

(In the stop mode)
PROGRAM MODE
 Press twice in program mode. Press once in delete mode.

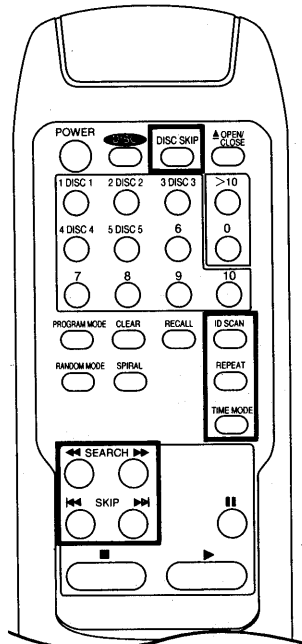

Other functions





To skip discs

DISC SKIP



To skip tracks

SKIP
 


To search for a desired place

(In the play or pause mode)
SEARCH
 

To start ID scan

ID SCAN
 To cancel ID scan, press this button again.

To repeat play

REPEAT
 To cancel repeat mode, press this button again.

To select time mode

TIME MODE


SELF-DIAGNOSTIC DISPLAY FUNCTION

Self-diagnostic display

This unit is equipped with a self-diagnostic display function which, if a problem occurs, will display an error code corresponding to the problem.

Use this function when performing maintenance on the unit.

| Display procedure | Display location |
|---|------------------|
| <p>Entering the Self-Diagnostic Mode</p> <ol style="list-style-type: none"> With no CD loaded in the tray, turn on the unit. Unplug the power cord of the unit, and then plug it back in while pressing the STOP (■), PLAY (▶) and DISC 4 buttons together. This will bring up the FL display. Release the above three buttons. | |
| <p>To Display Self-Diagnostic Results</p> <ol style="list-style-type: none"> When the FL display lights up, the unit automatically repeats an approximately 50-second cycle of the following operations. | |
| | |
| <ol style="list-style-type: none"> Self-diagnostic fault results appear on the FL display for approximately one second as "H15" at location ①, "H16" at ② and "F18" at ③, during the above cycle. If there are no faults as a result of self-diagnostic, "TRACK 00:00" appears on the FL display. | |
| <p>To Return to Normal Display</p> <ul style="list-style-type: none"> Press the power button to turn off the unit, and then turn it on again. | |
| <p>To Display Self-Diagnostic Results Again</p> <ul style="list-style-type: none"> Follow steps 1 through 3 of "Entering Self-Diagnostic Mode" above. | |
| <p>To Clear the Display of Self-Diagnostic Results</p> <ul style="list-style-type: none"> Turn off the unit to clear the contents of the stored fault results. | |

Self-diagnostic display location

Interpretation of error codes

| Error code | Problem condition | Correction procedure |
|------------|---|---|
| H15 | CD tray does not open or close when CD tray open/close (▲) button is pressed. | Faulty loading motor and motor drive IC (IC501), or faulty contact or short-circuit on open/close detect switch, S551. (Check and replace) |
| H16 | When the CD tray open/close (▲) button is pressed, the CD tray closes momentarily but then opens again, or opens momentarily and then closes again. | |
| F18 | Faulty rotary turret rotation detection. Example: The turret continues to turn at the initial position without stopping. | Check the optical sensor (D501) and replace if necessary. |


■ HANDLING PRECAUTIONS FOR TRAVERSE DECK

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by static electricity of clothes or human body.

So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).

• Handling of traverse deck (optical pickup)

1. Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.
2. To prevent the breakdown of the laser diode, an antistatic shorting pin is inserted into the flexible board (FFC).
When removing or connecting the short pin, finish the job in as short time as possible.
3. Take care not to apply excessive stress to the flexible board (FFC).
4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.


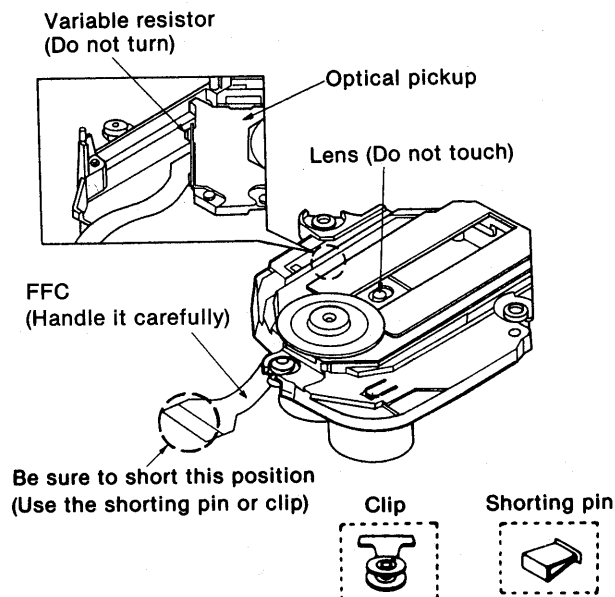


• Grounding for electrostatic breakdown prevention

1. Human body grounding
Use the anti-static wrist strap to discharge the static electricity from your body.
2. Work table grounding
Put a conductive material (sheet) or steel sheet on the area where the optical pickup is placed, and ground the sheet.


Caution:

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

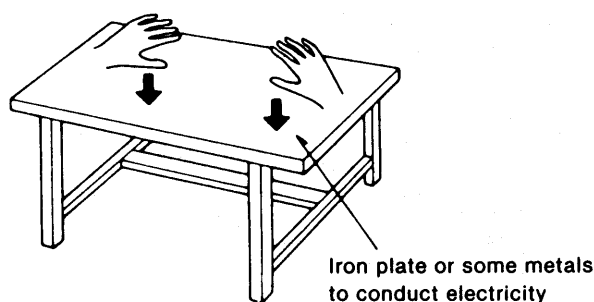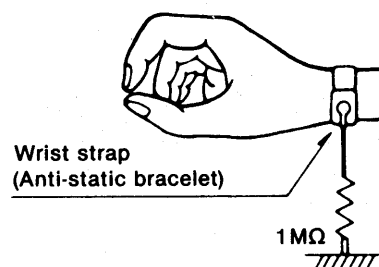

■ REPLACEMENT OF THE FOOT

1. Remove the 4 heat melted posts on the Bottom board ass'y with a pair of nippers or similar tool.
2. To replace the foot (RKA0053-A) on the Bottom board ass'y melt the 4 posts with a soldering iron or install it with a screw (XTB3+6J).






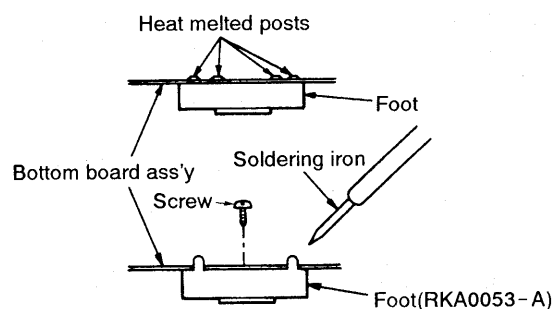








DISASSEMBLY INSTRUCTIONS









“ATTENTION SERVICER”








Some chassis components may have sharp edges. Be careful when disassembling and servicing.





Warning: This product uses a laser diode. Refer to caution statements on page 2.

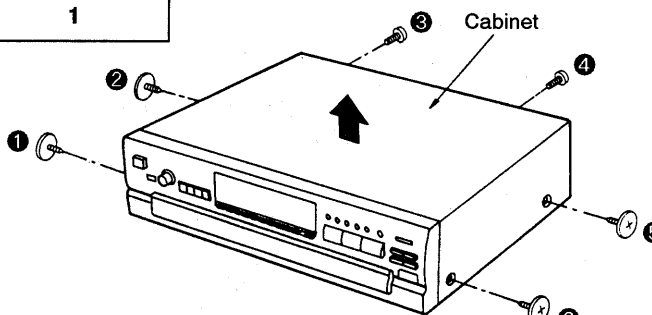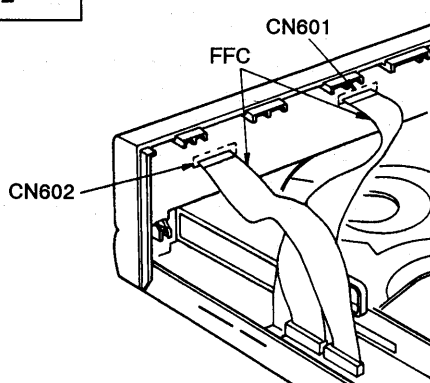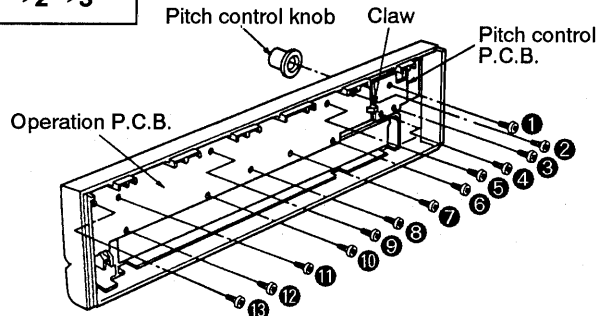
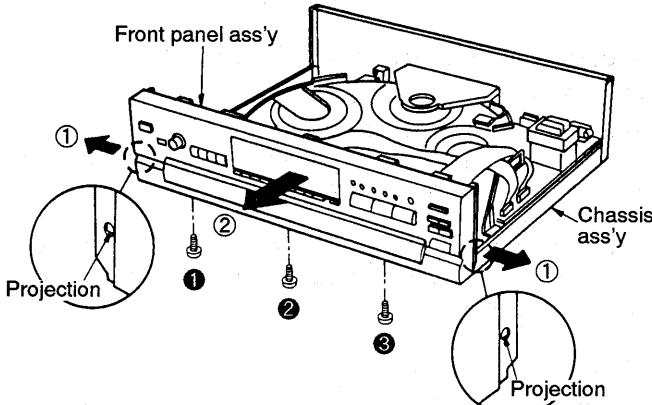
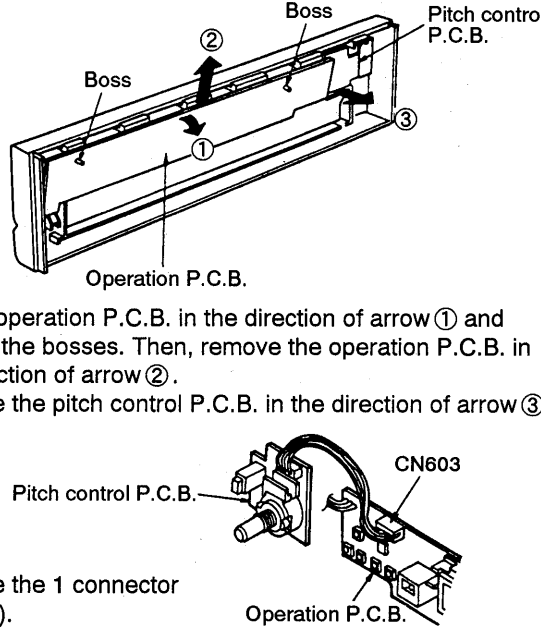
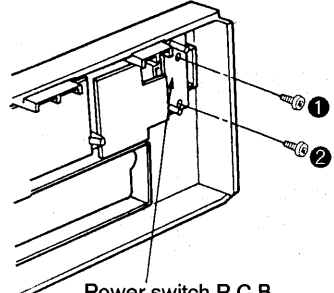
| | | | |
|-----------------------------------|--|-----------------------------------|---|
| <p>Ref.No. 1</p> | <p>Removal of the cabinet</p> | <p>Ref.No. 2</p> | <p>Removal of the front panel ass'y</p> |
| <p>Procedure 1</p> |  <p>1. Remove the 6 screws(①~⑥). 2. Remove the cabinet in the direction of arrow.</p> | <p>Procedure 1→2</p> |  <p>1. Pull out the FFC from connectors(CN601, CN602).</p> |
| <p>Ref.No. 3</p> | <p>Removal of the operation P.C.B. and pitch control P.C.B.</p> | | |
| <p>Procedure 1→2→3</p> |  <p>1. Remove the pitch control knob. 2. Remove the 13 screws(①~⑬). 3. Release the 1 claw.</p> | |  <p>2. Remove the 3 screws(①~③). 3. Pull the front panel ass'y in both direction of arrow ① to unlock it from the projections of the chassis ass'y. 4. Remove the front panel ass'y in the direction of arrow ②.</p> |
| <p>Ref.No. 4</p> | <p>Removal of the power switch P.C.B.</p> | <p>Ref.No. 4</p> | <p>Removal of the power switch P.C.B.</p> |
| <p>Procedure 1→2→4</p> |  <p>4. Tilt the operation P.C.B. in the direction of arrow ① and release the bosses. Then, remove the operation P.C.B. in the direction of arrow ②. 5. Remove the pitch control P.C.B. in the direction of arrow ③.</p> <p>6. Remove the 1 connector (CN603).</p> | <p>Procedure 1→2→4</p> |  <p>Remove the 2 screws(①, ②).</p> |

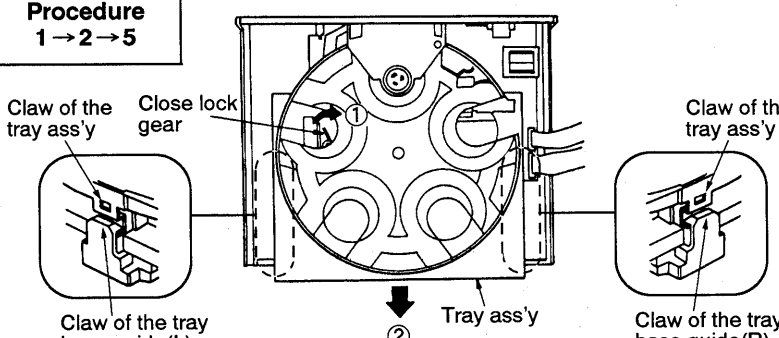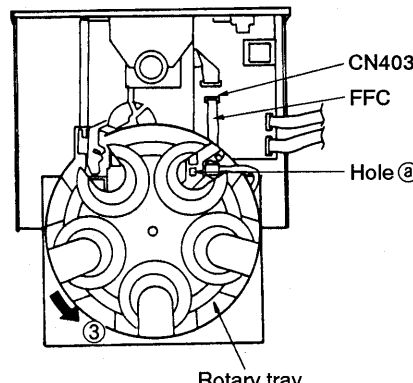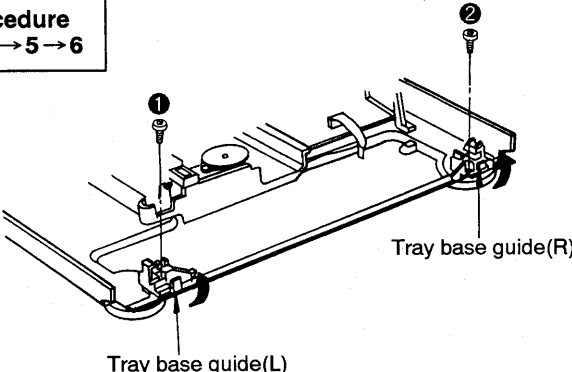
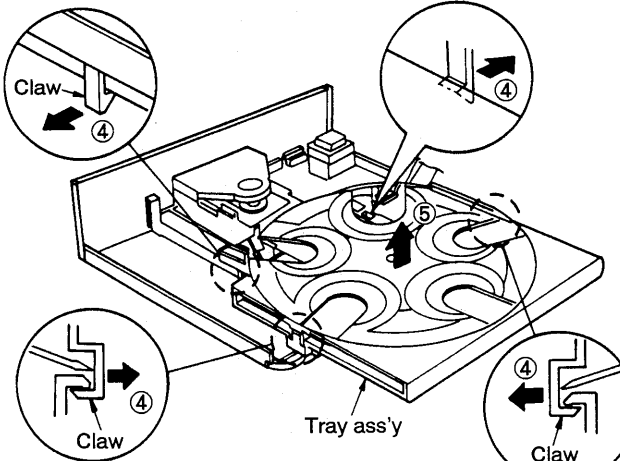
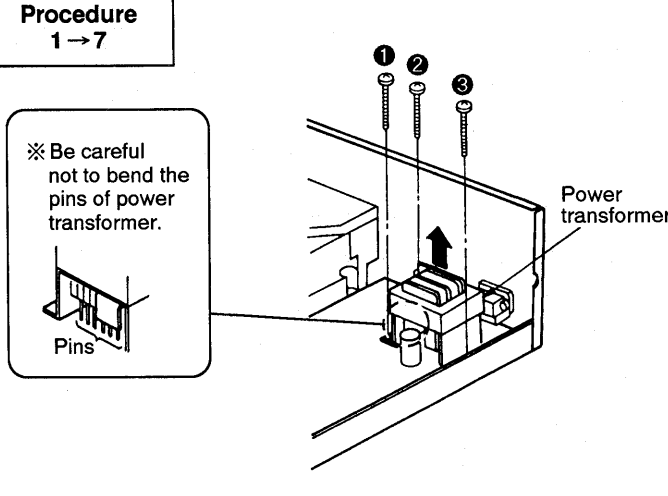
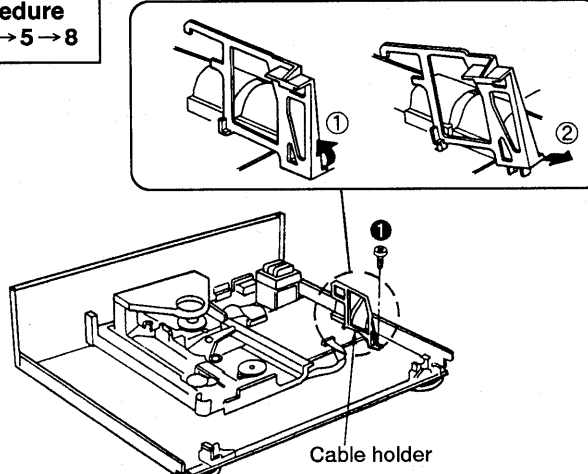
| | | |
|--|--|--|
| <p>Ref.No. 5</p> | <p>Removal of the tray ass'y</p> | |
| <p>Procedure 1→2→5</p> |  |  |
| <p>1. Keep the close lock gear pressed in the direction of arrow ①, and move the tray ass'y in the direction of arrow ②.</p> <p>2. Fit the claw of the tray ass'y in the claw of the tray base guide(L).</p> <p>3. Fit the claw of the tray ass'y in the claw of the tray base guide(R).</p> | | <p>4. Pull out the FFC from connector(CN403).</p> <p>5. Rotate the rotary tray to the position that can be confirmed the hole (a) in the direction of arrow ③.</p> |
| <p>Ref.No. 6</p> | <p>Removal of the tray base guide(L) and tray base guide(R)</p> | |
| <p>Procedure 1→2→5→6</p> |  |  |
| <p>1. Remove the 2 screws (①, ②).</p> <p>2. Remove the tray base guide(L) and tray base guide(R) in the direction of arrow.</p> | | <p>5. Push and release the 4 claws in the direction of arrow ④, and then remove the tray ass'y in the direction of arrow ⑤.</p> |
| <p>Ref.No. 7</p> | <p>Removal of the power transformer</p> | <p>Ref.No. 8</p> |
| <p>Procedure 1→7</p> |  | <p>Procedure 1→2→5→8</p> |
| <p>1. Remove the 3 screws (①~③).</p> <p>2. Remove the power transformer in the direction of arrow.</p> | |  |
| <p>1. Remove the 1 screw (①).</p> <p>2. Lift the cable holder in the direction of arrow ①, and then remove it in the direction of arrow ②.</p> | | <p>1. Remove the 1 screw (①).</p> <p>2. Lift the cable holder in the direction of arrow ①, and then remove it in the direction of arrow ②.</p> |

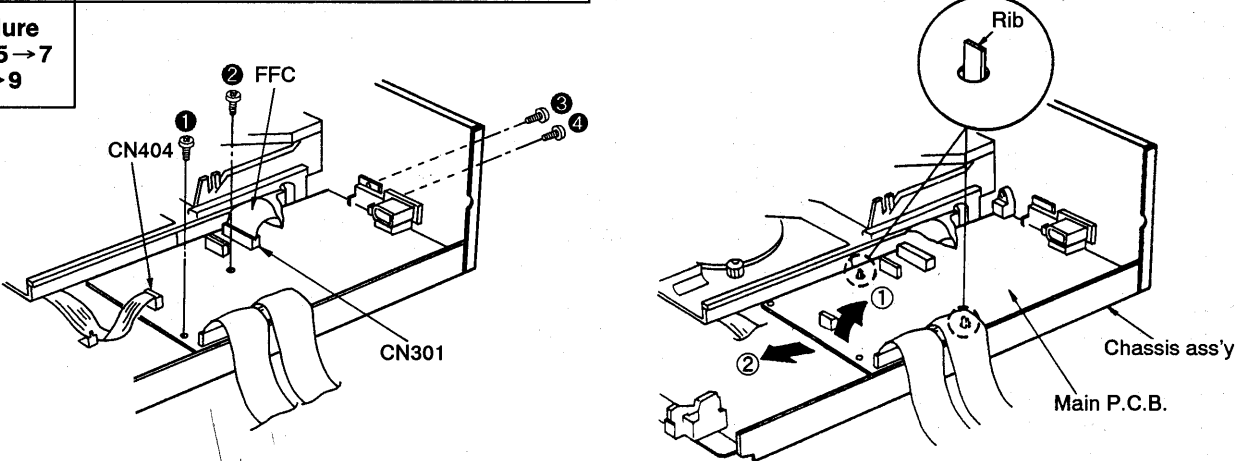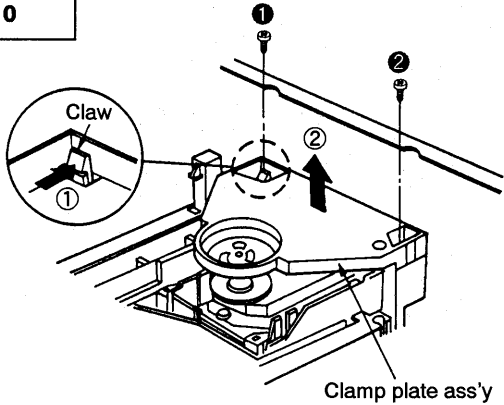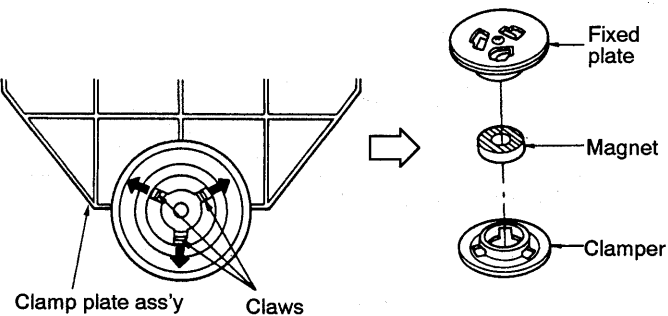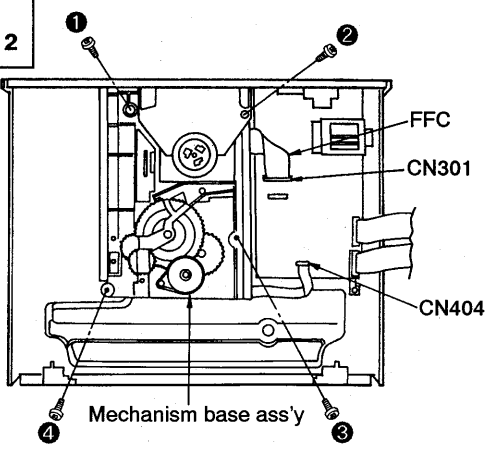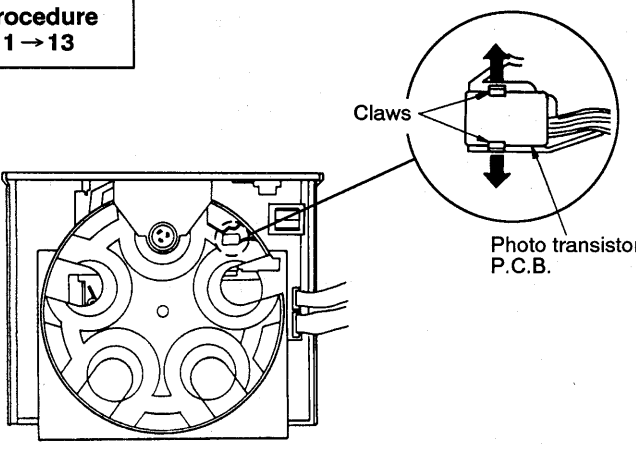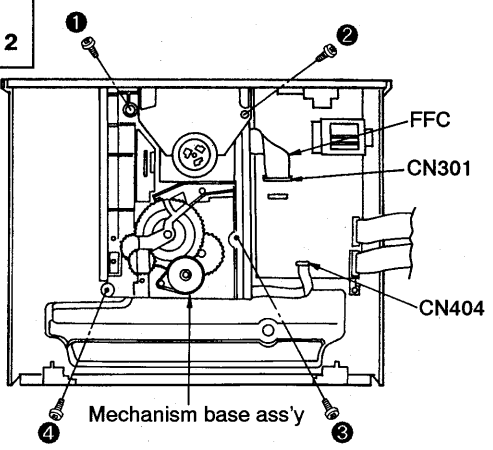
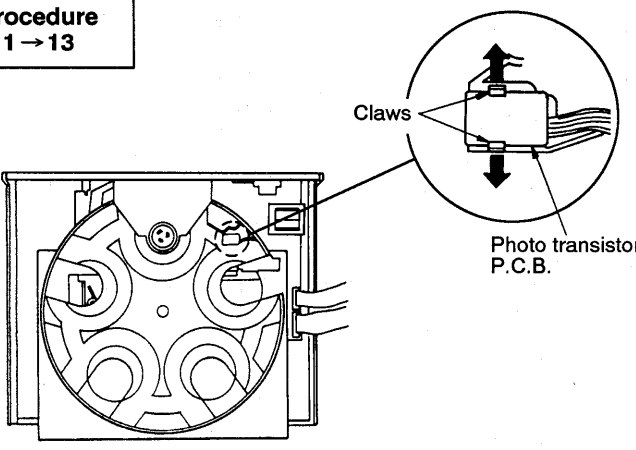
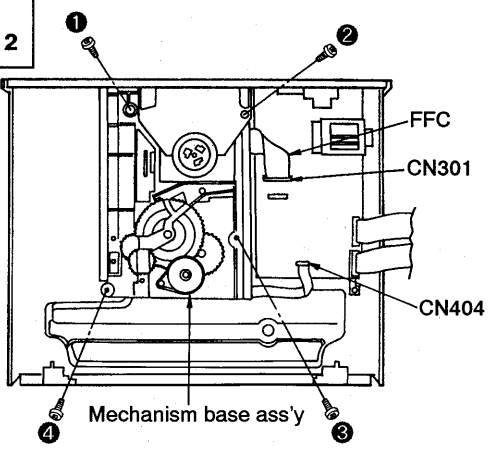
| | | | | | |
|--|--|---|-------------------------------------|--|--|
| <p>Ref.No. 9</p> | <p>Removal of the main P.C.B. and D/A CONV. P.C.B.</p> |  <p>1. Pull out the FFC from connector(CN301). 2. Remove 1 connector(CN404). 3. Remove the 4 screws(①~④).</p> <p>4. Lift up the main P.C.B. in the direction of arrow ①, and release the 2 ribs on the chassis ass'y. Then, remove the main P.C.B. in the direction of arrow ②.</p> | | | |
| <p>Procedure 1→2→5→7 →8→9</p> |  <p>1. Remove the 2 screws(①, ②). 2. Push the claw in the direction of arrow ①, and then remove the clamp plate ass'y in the direction of arrow ②.</p> | | <p>Ref.No. 11</p> | <p>Removal of the fixed plate, magnet and clamper</p> | |
| <p>Procedure 1→10</p> |  <p>• Release the 3 claws in the direction of arrow.</p> | | <p>Procedure 1→10→11</p> |  <p>1. Pull out the FFC from connector(CN301). 2. Remove 1 connector(CN404). 3. Remove the 4 screws(①~④).</p> | |
| <p>Procedure 1→2→5→7 →8→9</p> |  <p>• Release the 2 claws in the direction of arrow.</p> | | <p>Procedure 1→10→11</p> |  <p>1. Pull out the FFC from connector(CN301). 2. Remove 1 connector(CN404). 3. Remove the 4 screws(①~④).</p> | |
| <p>Procedure 1→10</p> |  <p>• Release the 2 claws in the direction of arrow.</p> | | <p>Procedure 1→13</p> |  <p>1. Pull out the FFC from connector(CN301). 2. Remove 1 connector(CN404). 3. Remove the 4 screws(①~④).</p> | |

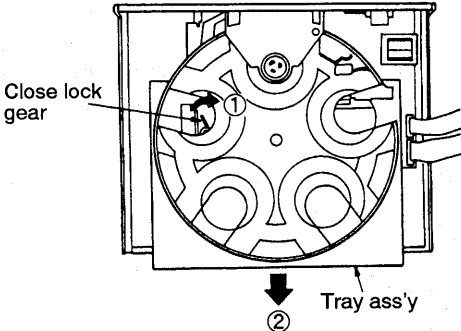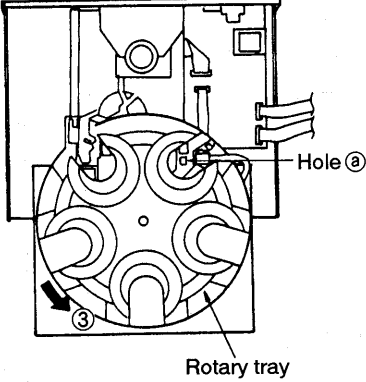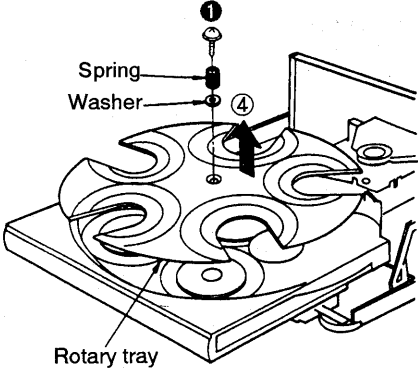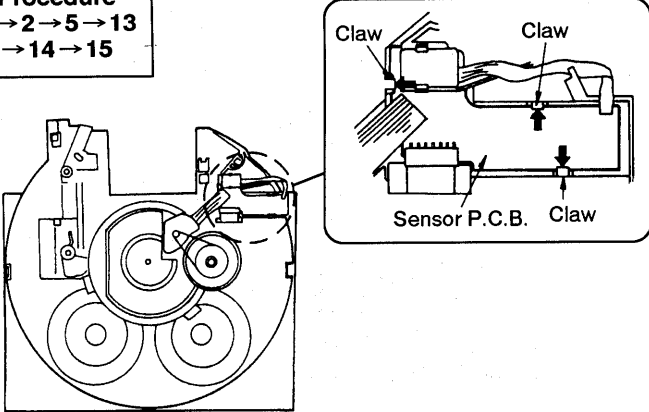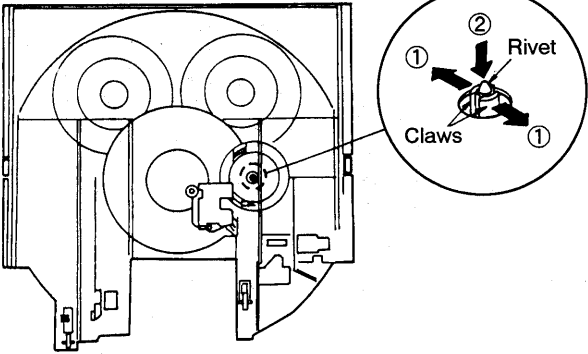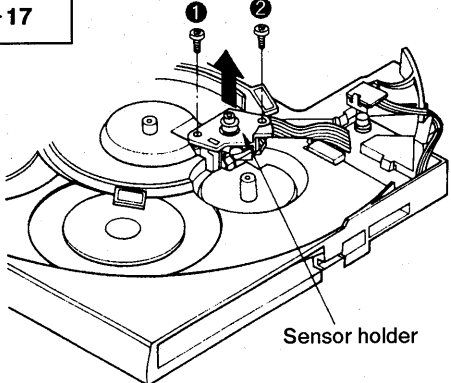
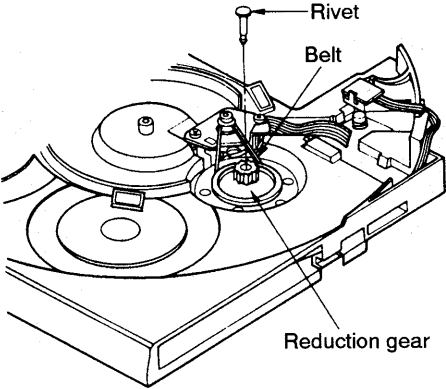
| | | |
|--|---|--|
| <p>Ref.No. 14</p> | <p>Removal of the rotary tray</p> | |
| <p>Procedure 1 → 2 → 14</p> | <div style="display: flex; justify-content: space-around;">    </div> <ol style="list-style-type: none"> 1. Keep the close lock gear pressed in the direction of arrow ①, and move the tray ass'y in the direction of arrow ②. 2. Rotate the rotary tray to the position that can be confirmed the hole ② in the direction of arrow ③. 3. Remove the 1 screw (①). 4. Remove the spring and washer. 5. Remove the rotary tray in the direction of arrow ④. | |
| <p>Ref.No. 15</p> | <p>Removal of the sensor P.C.B.</p> | <p>Ref.No. 16</p> <p>Removal of reduction gear</p> |
| <p>Procedure 1 → 2 → 5 → 13 → 14 → 15</p> | <div style="display: flex;">   </div> <ul style="list-style-type: none"> • Release the 3 claws in the direction of arrow, and remove the sensor P.C.B. <ol style="list-style-type: none"> 1. Release the 2 claws in the direction of arrow ①, and then push the rivet in the direction of arrow ②. | |
| <p>Ref.No. 17</p> | <p>Removal of motor holder and tray motor ass'y</p> | |
| <p>Procedure 1 → 2 → 5 → 14 → 16 → 17</p> | <div style="display: flex;">   </div> <ol style="list-style-type: none"> 1. Remove the 2 screws (①, ②). 2. Remove the motor holder and sensor holder in the direction of arrow. 2. Pull out the rivet. 3. Remove the belt. 3. Remove the reduction gear. | |




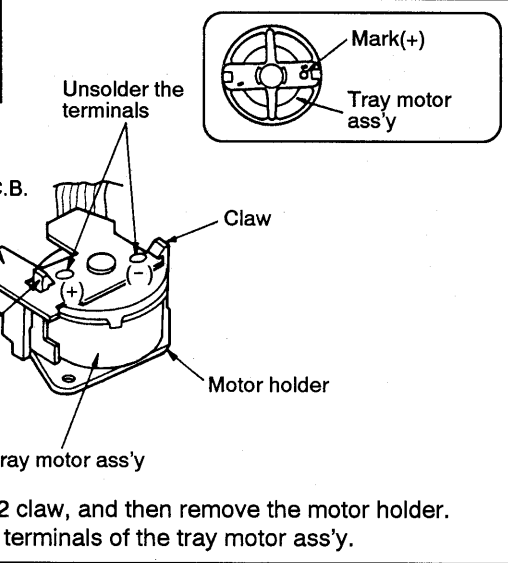
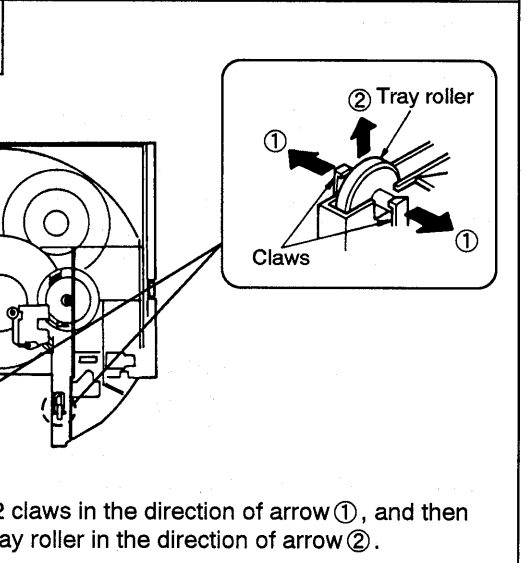
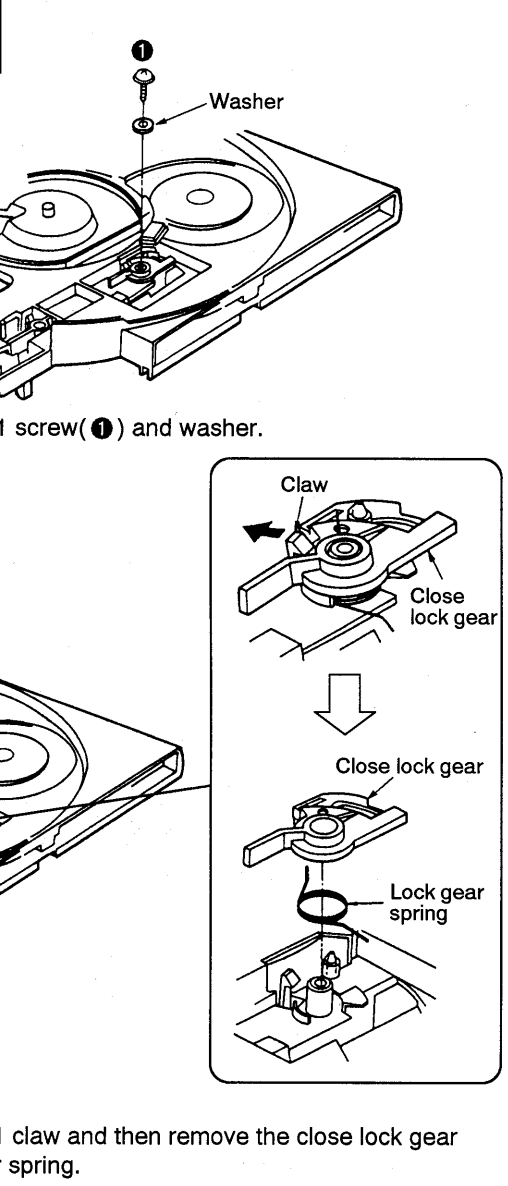
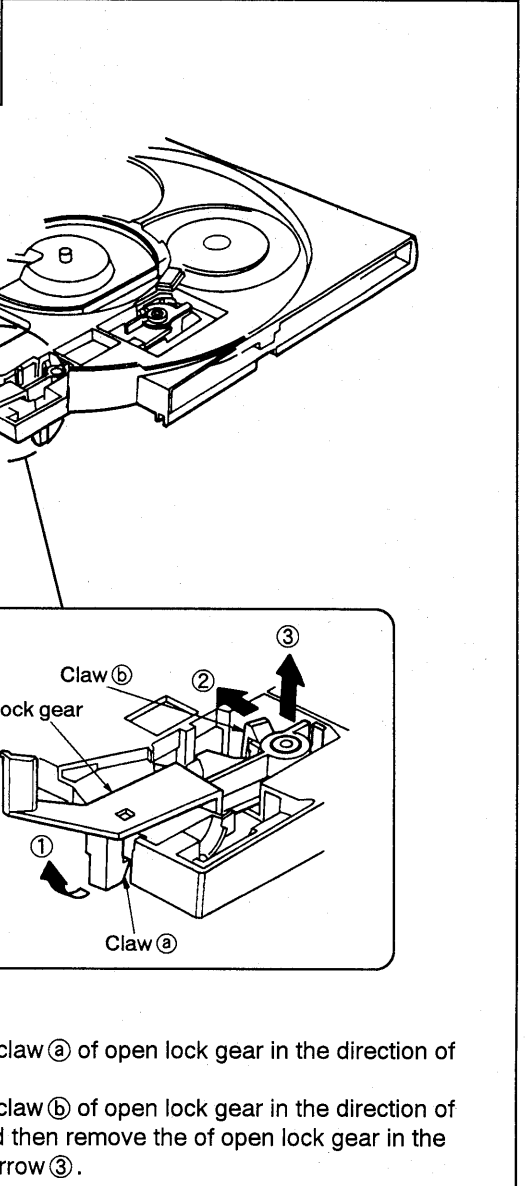
| | | | |
|--|---|---|--|
| <p>Ref.No. 18</p> | <p>Removal of the tray motor P.C.B.</p> | <p>Ref.No. 19</p> | <p>Removal of the tray roller</p> |
| <p>Procedure 1 → 2 → 5 → 14 → 16 → 17</p> |  <p>1. Release the 2 claw, and then remove the motor holder. 2. Unsolder the terminals of the tray motor ass'y.</p> | <p>Procedure 1 → 2 → 14 → 19</p> |  <p>• Release the 2 claws in the direction of arrow ①, and then remove the tray roller in the direction of arrow ②.</p> |
| <p>Ref.No. 20</p> | <p>Removal of the close lock gear</p> | <p>Ref.No. 21</p> | <p>Removal of the open lock gear</p> |
| <p>Procedure 1 → 2 → 14 → 20</p> |  <p>1. Remove the 1 screw(❶) and washer.</p> <p>2. Release the 1 claw and then remove the close lock gear and lock gear spring.</p> | <p>Procedure 1 → 2 → 5 → 14 → 21</p> |  <p>1. Release the claw ① of open lock gear in the direction of arrow ①. 2. Release the claw ② of open lock gear in the direction of arrow ②, and then remove the of open lock gear in the direction of arrow ③.</p> |
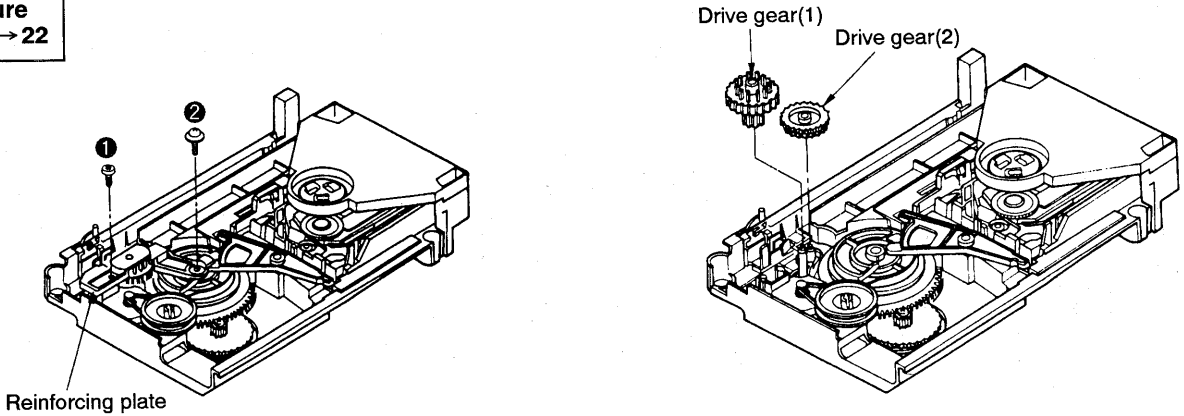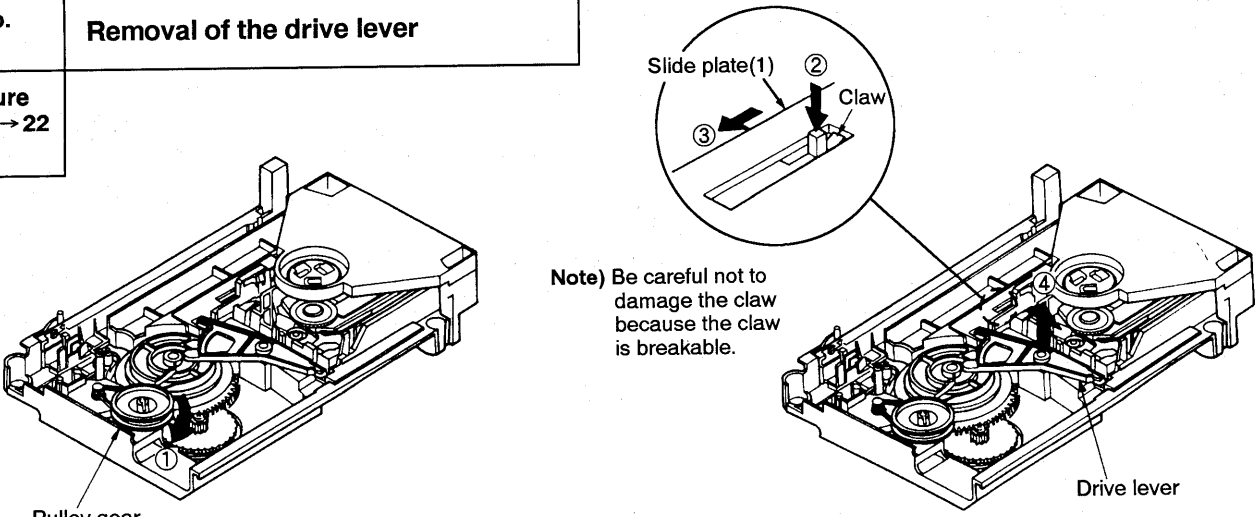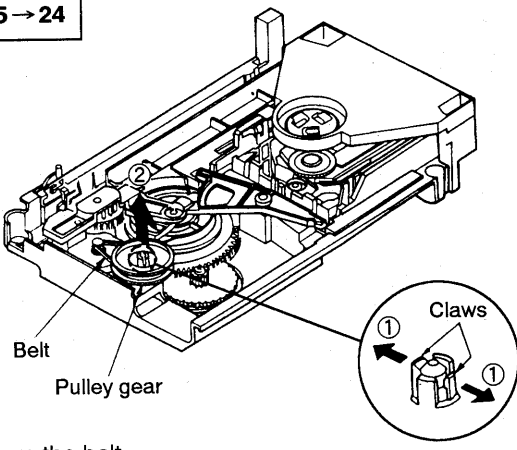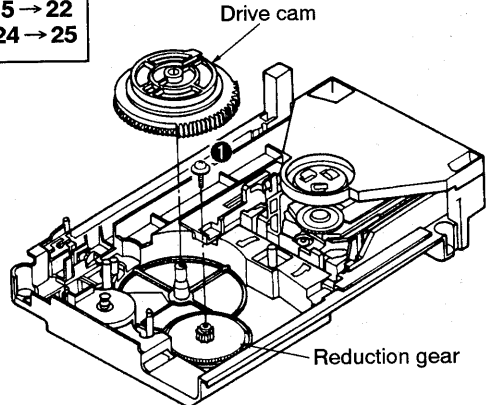
| | | | |
|---|---|------------------------------|--|
| <p>Ref.No. 22</p> | <p>Removal of the reinforcing plate, drive gear(1) and drive gear(2)</p> | | |
| <p>Procedure 1 → 2 → 5 → 22</p> |  <p>1. Remove the 2 screws(❶, ❷). 2. Remove the reinforcing plate.</p> <p>3. Remove the drive gear(1) and drive gear(2).</p> | | |
| <p>Ref.No. 23</p> | <p>Removal of the drive lever</p> | | |
| <p>Procedure 1 → 2 → 5 → 22 → 23</p> |  <p>1. Rotate the pulley gear to full position in the direction of arrow ❶ .</p> <p>2. Push the claw in the direction of arrow ❷ , and then move the slide plate(1) in the direction of arrow ❸ . 3. Remove the drive lever in the direction of arrow ❹ .</p> <p>Note) Be careful not to damage the claw because the claw is breakable.</p> | | |
| <p>Ref.No. 24</p> | <p>Removal of the pulley gear</p> | <p>Ref.No. 25</p> | <p>Removal of the drive cam and reduction gear</p> |
| <p>Procedure 1 → 2 → 5 → 24</p> |  <p>1. Remove the belt. 2. Release the 2 claws in the direction of arrow ❶ , and then remove the pulley gear in the direction of arrow ❷ .</p> | | <p>Procedure 1 → 2 → 5 → 22 → 23 → 24 → 25</p>  <p>1. Remove the drive cam. 2. Remove 1 screw(❶). 3. Remove the reduction gear.</p> |
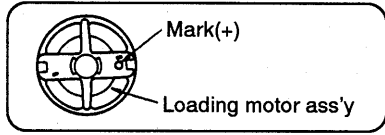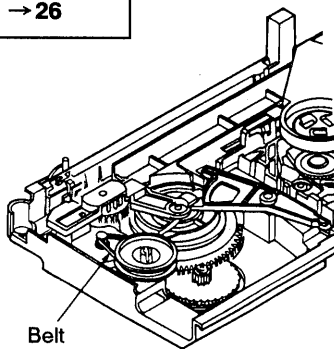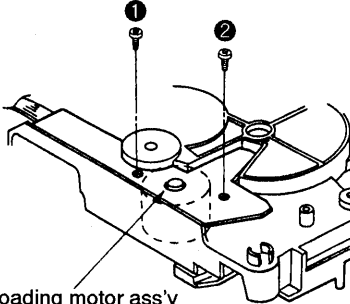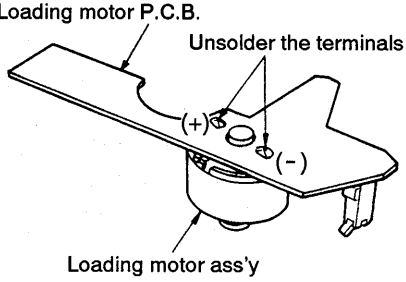
| | | | |
|---|---|--|--|
| <p>Ref.No. 26</p> | <p>Removal of the loading motor ass'y and loading motor P.C.B.</p> | |  |
| <p>Procedure 1 → 2 → 5 → 12 → 26</p> |  <p>Belt</p> |  <p>1 2</p> <p>Loading motor ass'y and loading motor P.C.B.</p> |  <p>Loading motor P.C.B.</p> <p>Unsold the terminals</p> <p>(+)</p> <p>(-)</p> <p>Loading motor ass'y</p> |
| <p>1. Remove the belt.</p> <p>2. Remove the 2 screws (①, ②).</p> <p>3. Remove the loading motor ass'y and loading motor P.C.B.</p> <p>4. Unsolder the terminals of the loading motor ass'y.</p> | | | |
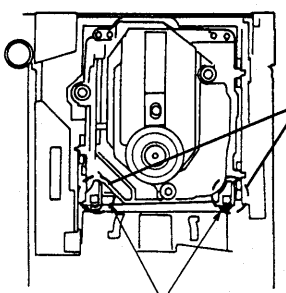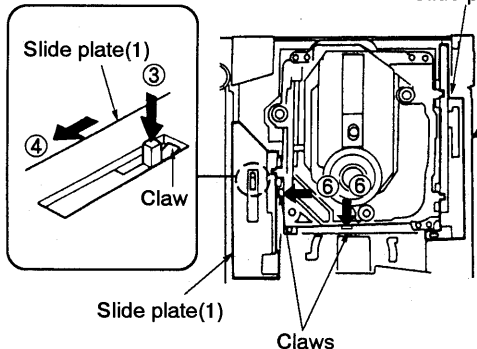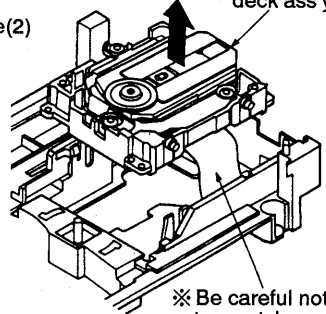
| | | | |
|--|--|---|--|
| <p>Ref.No. 27</p> | <p>Removal of the traverse deck ass'y</p> | | |
| <p>Procedure 1 → 2 → 5 → 27</p> |  <p>Tray holders</p> <p>①</p> <p>②</p> <p>⊖ Screwdriver</p> <p>Claw</p> |  <p>Slide plate(1)</p> <p>③</p> <p>④</p> <p>Claw</p> <p>Slide plate(1)</p> <p>Claws</p> <p>Slide plate(2)</p> <p>⑤</p> |  <p>⑦</p> <p>Traverse deck ass'y</p> <p>※ Be careful not to scratch or bend the FFC.</p> |
| <p>1. While pushing the claw of tray holders in the direction ① using the ⊖ screwdriver, remove the tray holder in the direction of arrow ②.</p> <p>2. Push the claw in the direction of arrow ③, and then move the slide plate(1) in the direction of arrow ④.</p> <p>3. Move the slide plate(2) in the direction of arrow ⑤.</p> <p>4. Release the 2 claws in the direction of arrow ⑥, and then remove the traverse deck ass'y in the direction of arrow ⑦.</p> | | | |

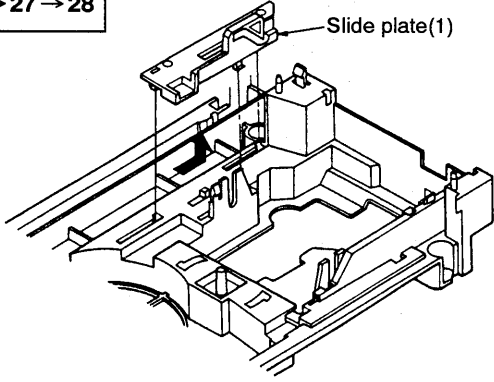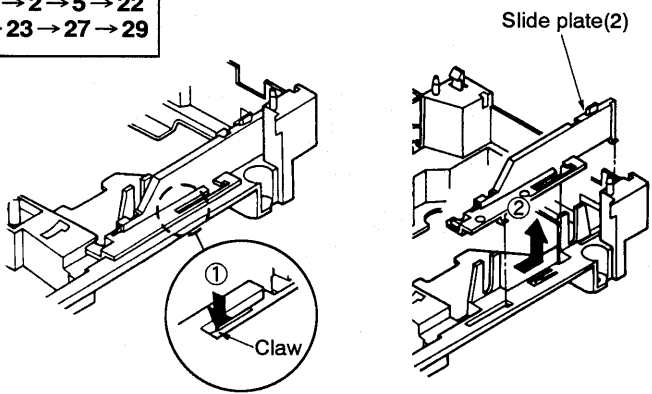
| | | | |
|---|---|---|--|
| <p>Ref.No. 28</p> | <p>Removal of the slide plate(1)</p> | <p>Ref.No. 29</p> | <p>Removal of the slide plate(2)</p> |
| <p>Procedure 1 → 2 → 5 → 22 → 23 → 27 → 28</p> |  <p>Slide plate(1)</p> | <p>Procedure 1 → 2 → 5 → 22 → 23 → 27 → 29</p> |  <p>Slide plate(2)</p> <p>①</p> <p>Claw</p> <p>②</p> |
| <p>• Remove the slide plate(1) in the direction of arrow.</p> <p>• Push the claw in the direction of arrow ①, and then remove the slide plate(2) in the direction of arrow ②.</p> | | | |
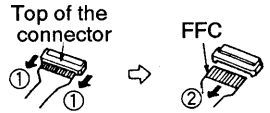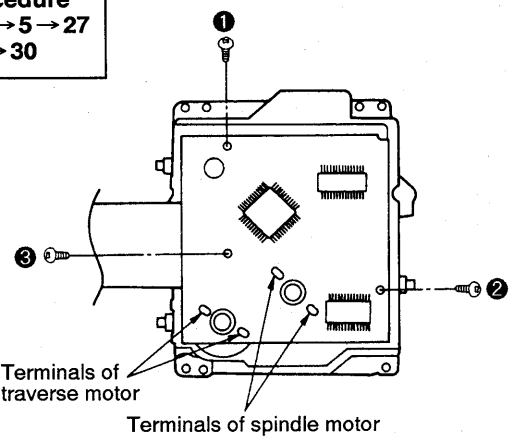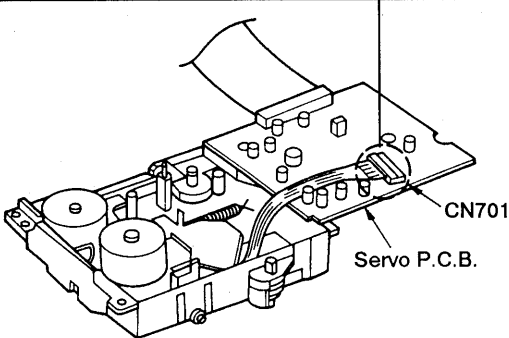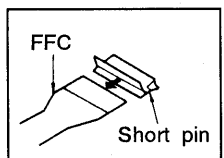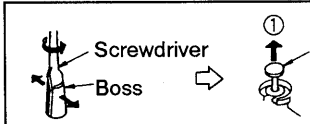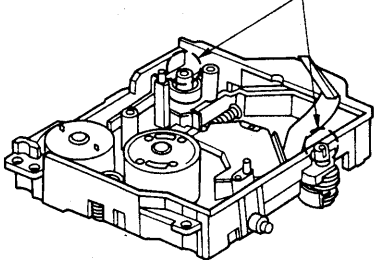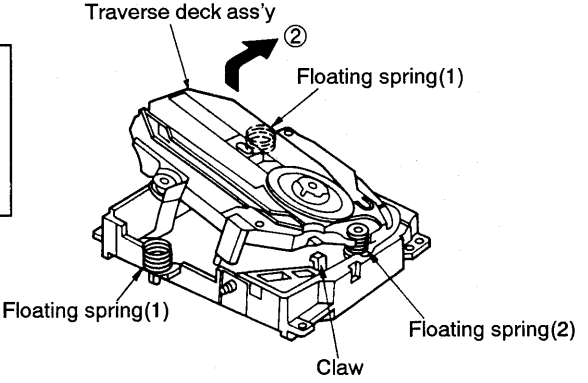
| | | |
|--|---|---|
| <p>Ref.No. 30</p> | <p>Removal of the servo P.C.B.</p> | <p>1. Push the top of the connector in the direction of arrow ①. 2. Remove the FFC in the direction of arrow ②.</p>  |
| <p>Procedure 1 → 2 → 5 → 27 → 30</p> |  <p>1. Remove the 3 screws (① ~ ③). 2. Unsolder the 2 terminals of spindle motor. 3. Unsolder the 2 terminals of traverse motor.</p> |  <p>4. Remove the FFC from connector(CN701). Caution: Insert a short pin into the traverse unit FFC. (Refer to "handling precautions for traverse deck" on page 11.)</p>  |
| <p>Ref.No. 31</p> | <p>Removal of the traverse deck ass'y</p> |  <p>1. Widen the bosses by using a regular screwdriver or similar object. 2. Pull out the pins.</p> |
| <p>Procedure 1 → 2 → 5 → 27 → 30 → 31</p> |  <p>1. Remove the 2 pins in the direction of arrow ①.</p> |  <p>2. Release the claw, and then remove the traverse deck ass'y in the direction of arrow ②. Caution: Be careful not to lose the 3 springs because those will also be removed on removal of the traverse deck ass'y.</p> |


■ INSTALLATION OF SERVO P.C.B.

- When installing servo P.C.B., move the optical pickup to the more external side than the mark (▲).
(When the optical pickup is not moved, the switch(S701) on the servo P.C.B. may be broken.)
- Connect the FFC to the connector(CN701).
- Install the servo P.C.B. to the traverse unit with 3 screws (① ~ ③).
- Solder the 2 terminals of the traverse motor and the 2 terminals of the spindle motor.

- Note:**
- Insert the FFC into the connector and lock securely.
 - After installing the motor with screws, solder each motor terminal.

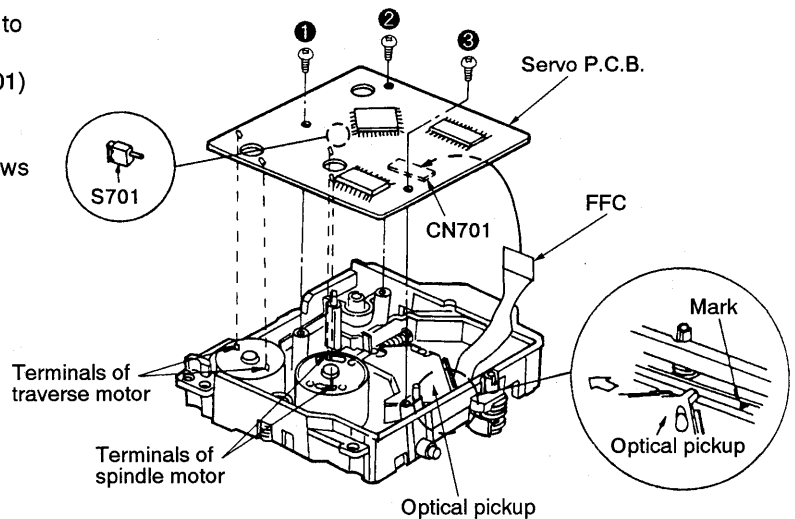


Installation of the traverse deck ass'y

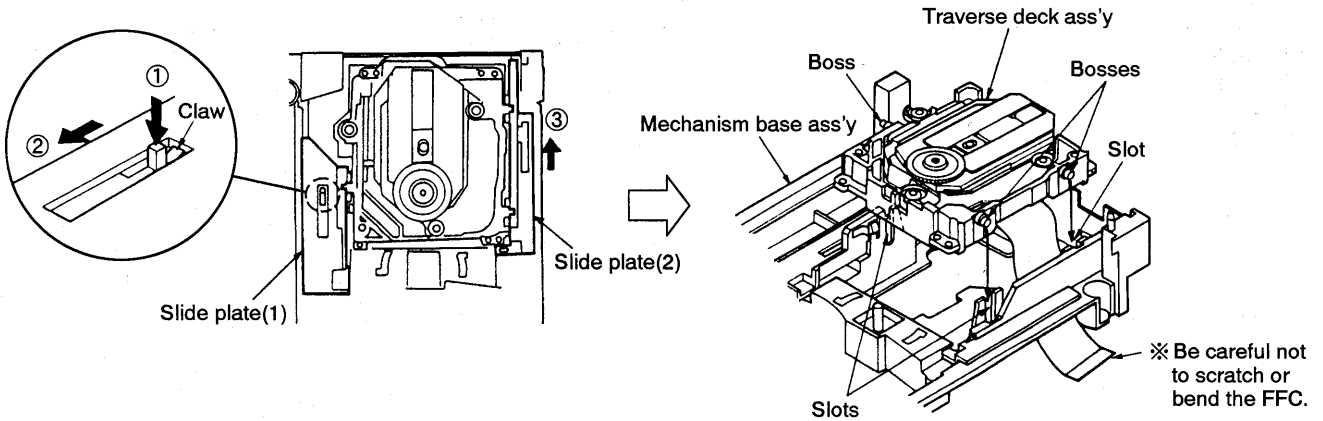

1. Push the claw in the direction of arrow ①, and then move the slide plate(1) in the direction of arrow ②.
2. Move the slide plate(2) in the direction of arrow ③.


3. Align the 3 bosses of traverse deck ass'y with the slots of mechanism base ass'y.

Installation of the drive lever

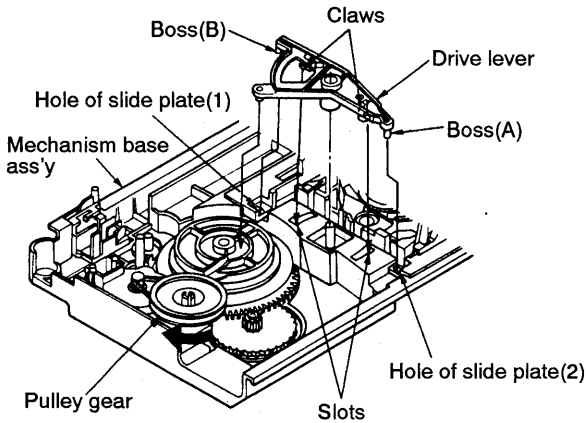


1. Rotate the pulley gear to full position in the direction of arrow.
2. Align the boss(A) with the hole of slide plate(2).
3. Align the boss(B) with the hole of slide plate(1).
4. Align the claws of drive lever with the slots of loading mechanism ass'y.

Positioning of the drive cam

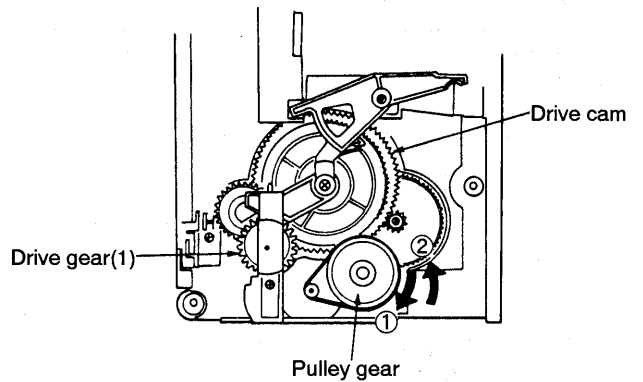

1. Rotate the pulley gear to full position in the direction of arrow ①.
2. Then, rotate the pulley gear in the direction of arrow ②.
3. When the drive gear(1) stops rotating, turn off that pulley gear is rotating.

Installation of the tray ass'y

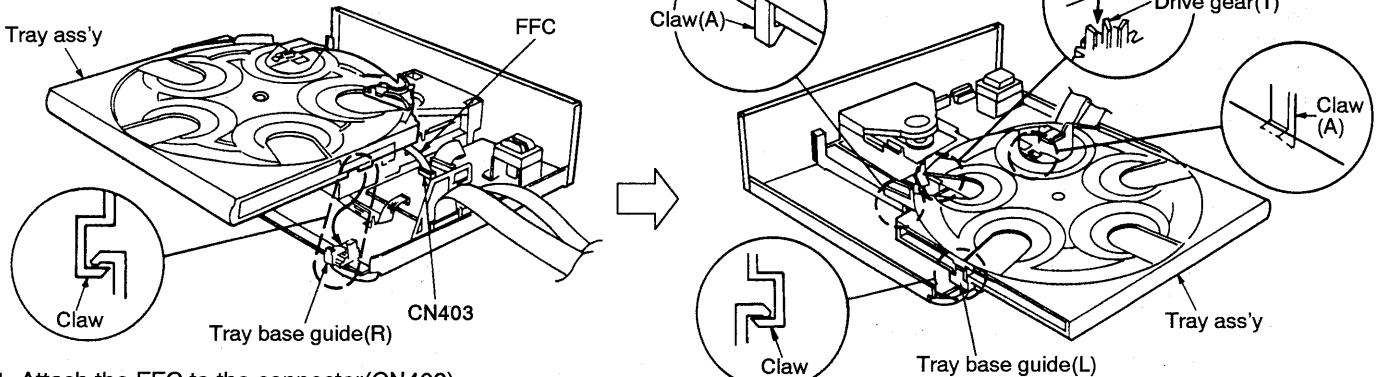



1. Attach the FFC to the connector(CN403).
2. Fit the claws on the right side of the tray ass'y underneath the claws on the tray base guide(R).
3. Fit the claws on the right side of the tray ass'y underneath the claws on the tray base guide(L).

4. Fit the limiter claw on the tray ass'y between the teeth of the drive gear(1).
5. Catch the 2 claws(A) with the mechanism base ass'y.
6. After installing the tray ass'y, check that it moves smoothly.

HOW TO CHECK THE MAIN AND SERVO P.C.B.


1. Remove the cabinet. (See Ref.No.1 of the disassembly instructions.)
2. Remove the front panel ass'y. (See Ref.No.2 of the disassembly instructions.)
3. Remove the tray ass'y. (See Ref.No.5 of the disassembly instructions.)
4. Remove the cable holder. (See Ref.No.8 of the disassembly instructions.)
5. Remove the clamp plate ass'y. (See Ref.No.10 of the disassembly instructions.)
6. Remove the fixed plate, magnet and clumper. (See Ref.No.11 of the disassembly instructions.)

● Check the main P.C.B.

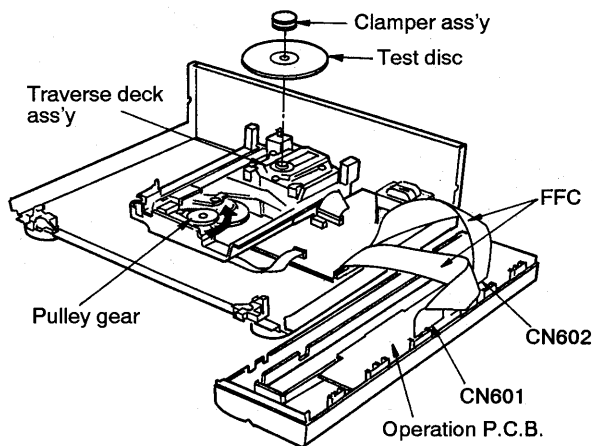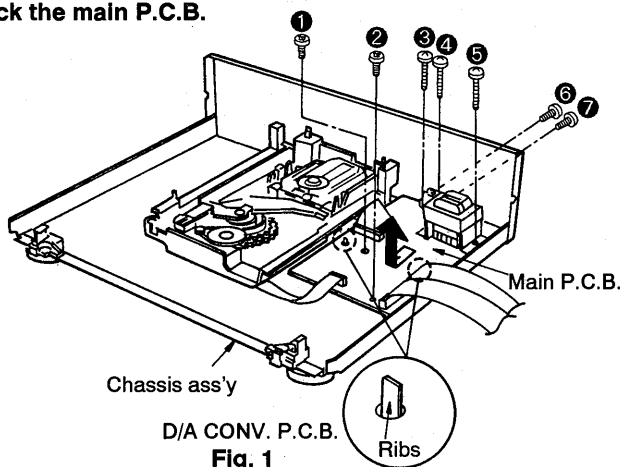


7. Remove the 7 screws (① ~ ⑦).
8. Lift up the main P.C.B. to release the 2 ribs of chassis ass'y, and then remove the main P.C.B. in the direction of arrow.

9. Rotate the pulley gear in the direction of arrow until traverse deck ass'y comes up.
10. Place the test disc and secure it by using the clumper ass'y.
11. Connect the 2 FFC (CN601, CN602) as shown in Fig. 2.
12. Set up the main P.C.B.
13. Connect the main P.C.B. ground terminal (line out terminal) to the chassis ass'y with a lead wire.
14. When checking the soldered surface of the main P.C.B., do as shown in Fig. 3.

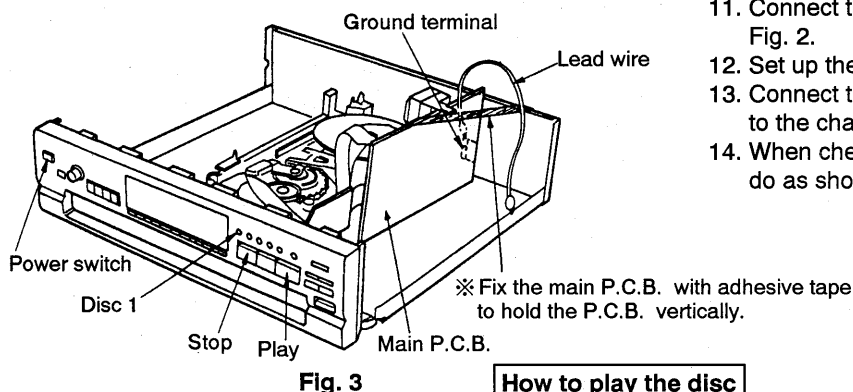

How to play the disc

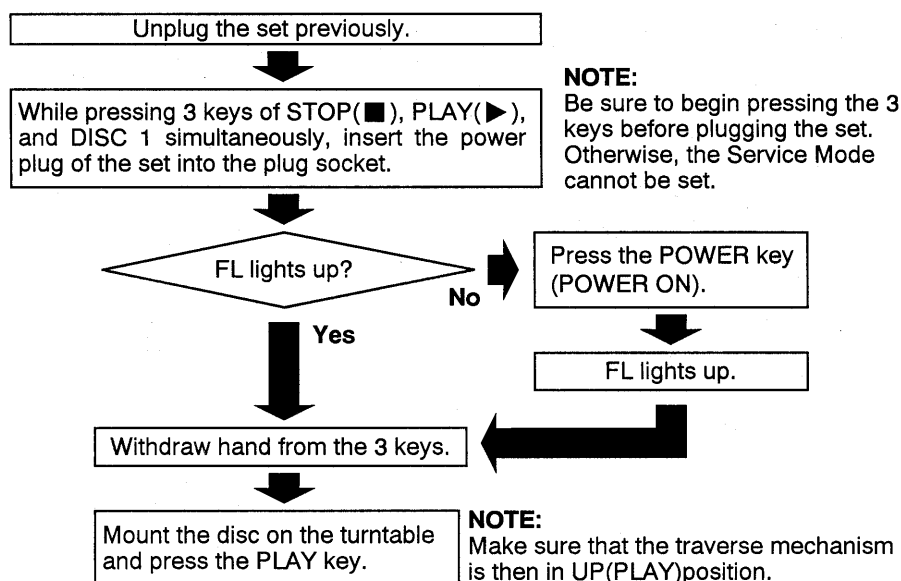

Service Mode setting

When checking the main/servo P.C.B. of this set, remove the rotary tray previously. After the rotary tray is removed, the microcomputer is kept from issuing PLAY command even when the PLAY key is pressed. Stated above is the procedure of setting the Service Mode for keeping the microcomputer in the PLAY mode even after removal of the rotary tray.

● Check the servo P.C.B.

7. Remove the mechanism base ass'y. (See Ref.No.12 of the disassembly instructions.)
8. Remove the traverse deck ass'y. (See Ref.No.27 of the disassembly instructions.)

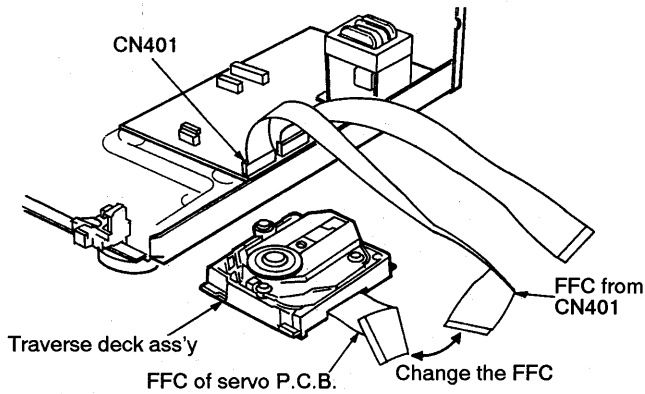


Fig. 4

9. Replace the FFC of servo P.C.B. to the FFC (CN401) of main P.C.B.

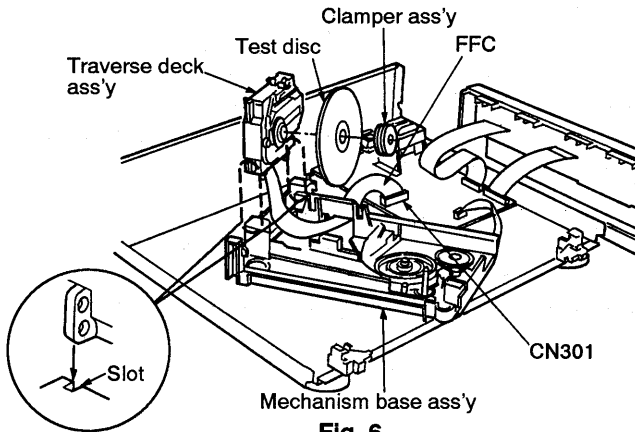


Fig. 6

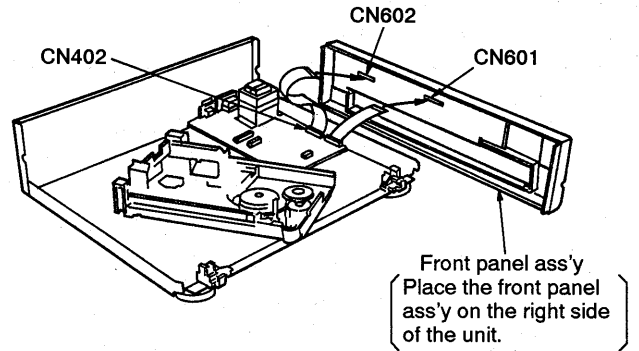


Fig. 5

10. Connect the FFC as shown in above.
(Between CN401 and CN601)
(Between CN402 and CN602)

11. Insert the traverse deck in the slot of mechanism base ass'y.
12. Connect the FFC of servo P.C.B. to the connector (CN301) of main P.C.B.
13. Set the test disc on the traverse deck ass'y, and then fix the traverse deck ass'y with clamper ass'y.
14. When checking the soldered surface of servo P.C.B., do as shown in Fig. 7.

Notes:

- After completing the check, restore the replaced FFC to their original positions.

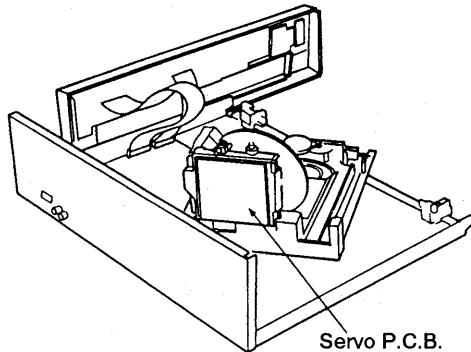
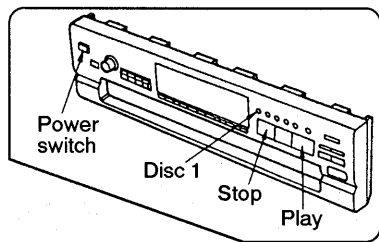


Fig. 7


How to play the disc

Unplug the set previously.

While pressing 3 keys of STOP(■), PLAY(▶), and DISC 1 simultaneously, insert the power plug of the set into the plug socket.

NOTE:

Be sure to begin pressing the 3 keys before plugging the set. Otherwise, the Service Mode cannot be set.

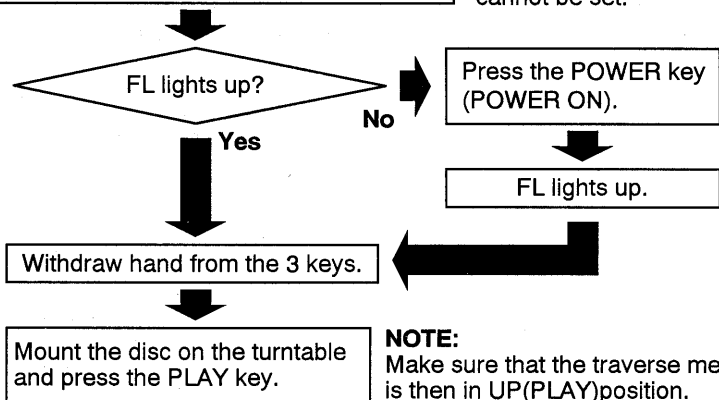

NOTE:

Make sure that the traverse mechanism is then in UP(PLAY)position.

Service Mode setting

When checking the main/servo P.C.B. of this set, remove the rotary tray previously. After the rotary tray is removed, the microcomputer is kept from issuing PLAY command even when the PLAY key is pressed. Stated above is the procedure of setting the Service Mode for keeping the microcomputer in the PLAY mode even after removal of the rotary tray.

■ OPERATING THE UNIT WITHOUT THE FRONT PANEL ASS'Y (OPERATION P.C.B. AND KEYS)

A Turning off the back-up power to the microprocessor(IC 401)

1. Unplug the AC cord.
2. Short the ends of the C401 jumpers at 10 Ω (5W) resistance for at least 1 second.

B Turning the power on again


1. Plug the AC cord back in.
2. Short the between the following jumpers simultaneously:
 - The D401 cathode and R401 from IC401 (equivalent to pressing the STOP button).
 - The D401 cathode and R403 from IC401 (equivalent to pressing the PLAY button).
 - The D402 cathode and R401 from IC401 (equivalent to pressing the DISC 1 button).
3. Keeping the above shorts in place, short between the D404 cathode and R405 from IC401 for 1 second to turn on the power to the main unit.
4. Remove the shorts placed in step 2.

C Using the machine

- To play, short between the D401 cathode and R403 from IC401 (equivalent to pressing the PLAY button).
- To pause, short between the D401 cathode and R402 from IC401 (equivalent to pressing the PAUSE button).
- To stop, short between the D401 cathode and R401 from IC401 (equivalent to pressing the STOP button).
- To move forward, short between the D402 cathode and R402 from IC401 (equivalent to pressing the F.SKIP button).
- To move backward, short between the D402 cathode and R403 from IC401 (equivalent to pressing the R.SKIP button).
- To search in the forward direction, short between the D403 cathode and R402 from IC401 (equivalent to pressing the F.SEARCH button).
- To search in the backward direction, short between the D403 cathode and R403 from IC401 (equivalent to pressing the R.SEARCH button).


D Finishing off

1. Unplug the AC cord.
2. Short the ends of the C401 jumpers at 10 Ω (5W) resistance.

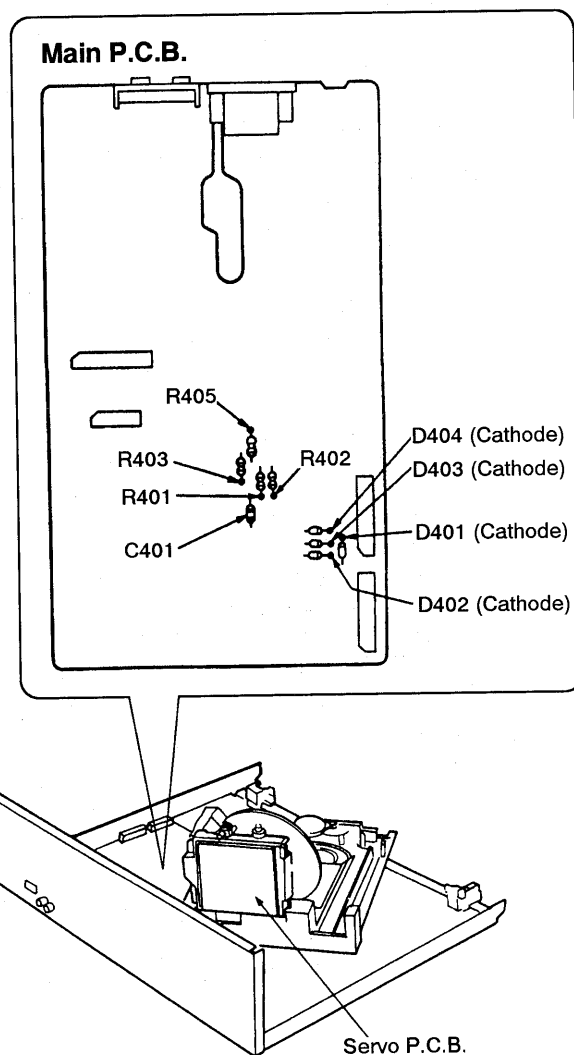

■ Installation of the FFC

- When connecting the FFC, connect as shown right.
- Connect as follows:
 - Short FFC ; between Connector **S** and SHORT
 - Long FFC ; between Connector **L** and LONG
- Connect the FFC (Long/Short) with blue line upward to the operation P.C.B. connectors .
- Connect the FFC (Long/Short) with blue line outward to the main P.C.B. connectors.

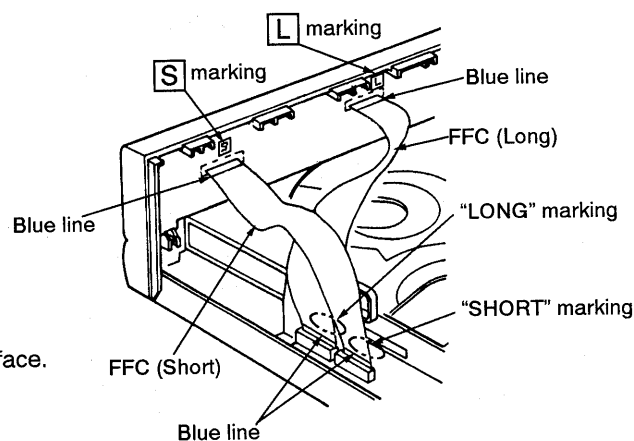

NOTE:

The pin numbers of each connector are marked on the P.C.B. surface.

AUTOMATIC ADJUSTMENT RESULTS DISPLAY FUNCTION (SELF-CHECK FUNCTION)

The unit contains a function which displays the result of the automatically adjustment of the servo circuits (tracking, focus servo, etc.) as an error code on the FL display.

The error code display serves as a repair guide showing the automatically adjustment circuit is at fault. The procedures for displaying the error codes are given below.

• Procedures to display the error code

(1) Procedure to display the error code before disassembly (finished unit)

- When the [POWER] key is pressed while holding down the [STOP (■)], [PAUSE (■ ■)] and [PLAY (▶)] keys simultaneously, the FL display illuminates, release the power turns on.
- When the FL display illuminates, release the [STOP (■)], [PAUSE (■ ■)] and [PLAY (▶)] keys.
- Press the [OPEN/CLOSE (▲)] key to open the disc tray and load the test disc (SZZP1054C).
- Press the [PLAY (▶)] key to start the play operation.
- After the time display appears, press the [STOP (■)] key to display the error code. (e.g. E-0)
- The error code display can be used as a repair guide showing which servo circuit is at fault. (See Error Code Based Troubleshooting.)

(2) Procedure to display the error code when disassembled

- Prepare the unit as described in "How to Check the Main and Servo P.C.B." on pages 21, 22.
- Press the [POWER] key while holding down the [STOP (■)], [PLAY (▶)] and [DISC 1] keys simultaneously.
- When the FL display illuminates, release the [STOP (■)], [PLAY (▶)] and [DISC 1] keys.
- Load the test disc (SZZP1054C) on the turntable and secure it with the clamber ass'y.
- Perform steps 4 and 5 in section (1) above.


• Error code based troubleshooting

※ The unit is satisfactory if the error code is E-0 of E-2.

※ Before testing, check that the test disc is free of scratches and dirt and optical pickup is clean.


| FL error code display | Symptom | Probable cause | Signal to check | | Normal voltage and waveform values | |
|---|---|--|-----------------|-------------|------------------------------------|-------------|
| | | | Signal name | Location | PLAY | STOP |
| E-1 | Focus and tracking offset adjustments not completed in specified time period. | ① Clocks X1 and X2, power supply V _{DD} , and reset/RST, all on IC702 ② MDATA, MCLK, MLD, and SENSE signals to/from mechanism controller | MDATA | IC702 ⑧ pin | | 4.8V |
| | | | MCLK | IC702 ⑦ pin | | 4.8V |
| | | | MLD | IC702 ⑨ pin | | 0V |
| | | | SENSE | IC702 ⑩ pin | 0V | 0V |
| | | | /RST | IC702 ⑱ pin | 4.9V | 4.9V |
| | | | X1 | IC702 ⑳ pin | | |
| X2 | IC702 ㉑ pin | | | | | |
| E-3 E-5 E-7 E-9 E-B E-D E-F | Disc play unstable | ① Scratches or contaminants on disc surface ② Focus and tracking servo circuits (check waveforms, voltages, and part values.) ③ Spindle driver circuit ④ Optical pickup | FE | IC702 ㉒ pin | | 2.4V |
| | | | TE | IC702 ㉓ pin | | 2.4V |
| | | | FOD | IC702 ㉔ pin | 2.4V | 2.4V |
| | | | TRD | IC702 ㉕ pin | 2.4V | 2.4V |
| | | | KICK | IC702 ㉖ pin | 2.4V | 2.4V |
| | | | /FLOCK | IC702 ⑪ pin | 0V | 4.9V |
| | | | /RF DET | IC702 ㉗ pin | 0V | 4.8V |
| | | | RF | TJ701 | | 1.5V |
| | | | STAT | IC702 ⑰ pin | 3.5V | 0V |
| E-4 E-6 E-C E-E | Best "Eye" (PD Balance) adjustment not completed in specified time period. | ① Scratches or contaminants on disc surface ② Focus and Tracking servo circuit (check waveforms, voltages, and part values.) ③ Optical pickup | FBAL | IC702 ㉘ pin | 2.5 ± 1.25V | 2.5 ± 1.25V |
| | | | RF | TJ701 | | 1.5V |
| | | | FE | IC702 ㉒ pin | | 0V |
| | | | /TLOCK | IC702 ⑫ pin | 0V | 0V |
| | | | OFT | IC702 ㉙ pin | 0V | 0V |
| E-8 E-A | Focus or Tracking gain adjustment not completed in specified time period. | ① Scratches or contaminants on disc surface ② Focus and Tracking servo circuit (check waveforms, voltages, and part values.) ③ Optical pickup | FE | IC702 ㉒ pin | | 2.4V |
| | | | TE | IC702 ㉓ pin | | 2.4V |
| | | | /TLOCK | IC702 ⑫ pin | 0V | 0V |
| | | | OFT | IC702 ㉙ pin | 0V | 0V |

DIGITAL SERVO SYSTEM

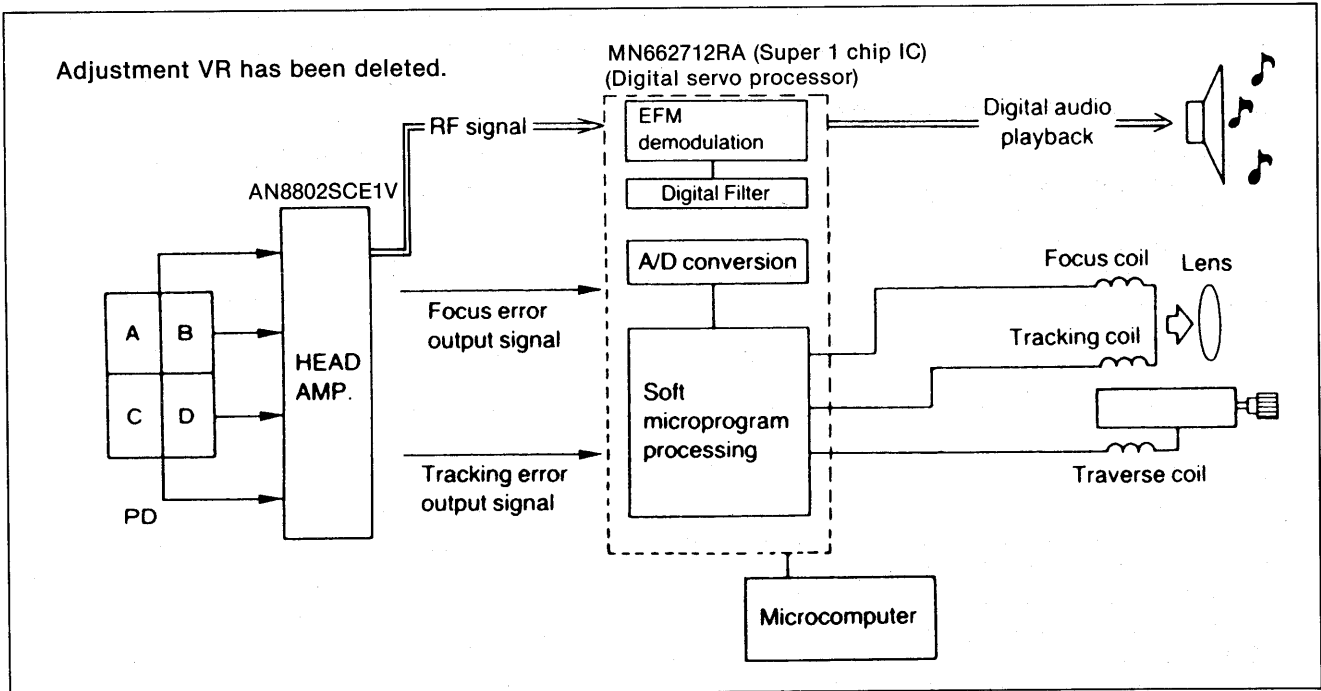

The following flow chart shows the sequence of automatic adjustments.

Flow chart automatic adjustment sequence

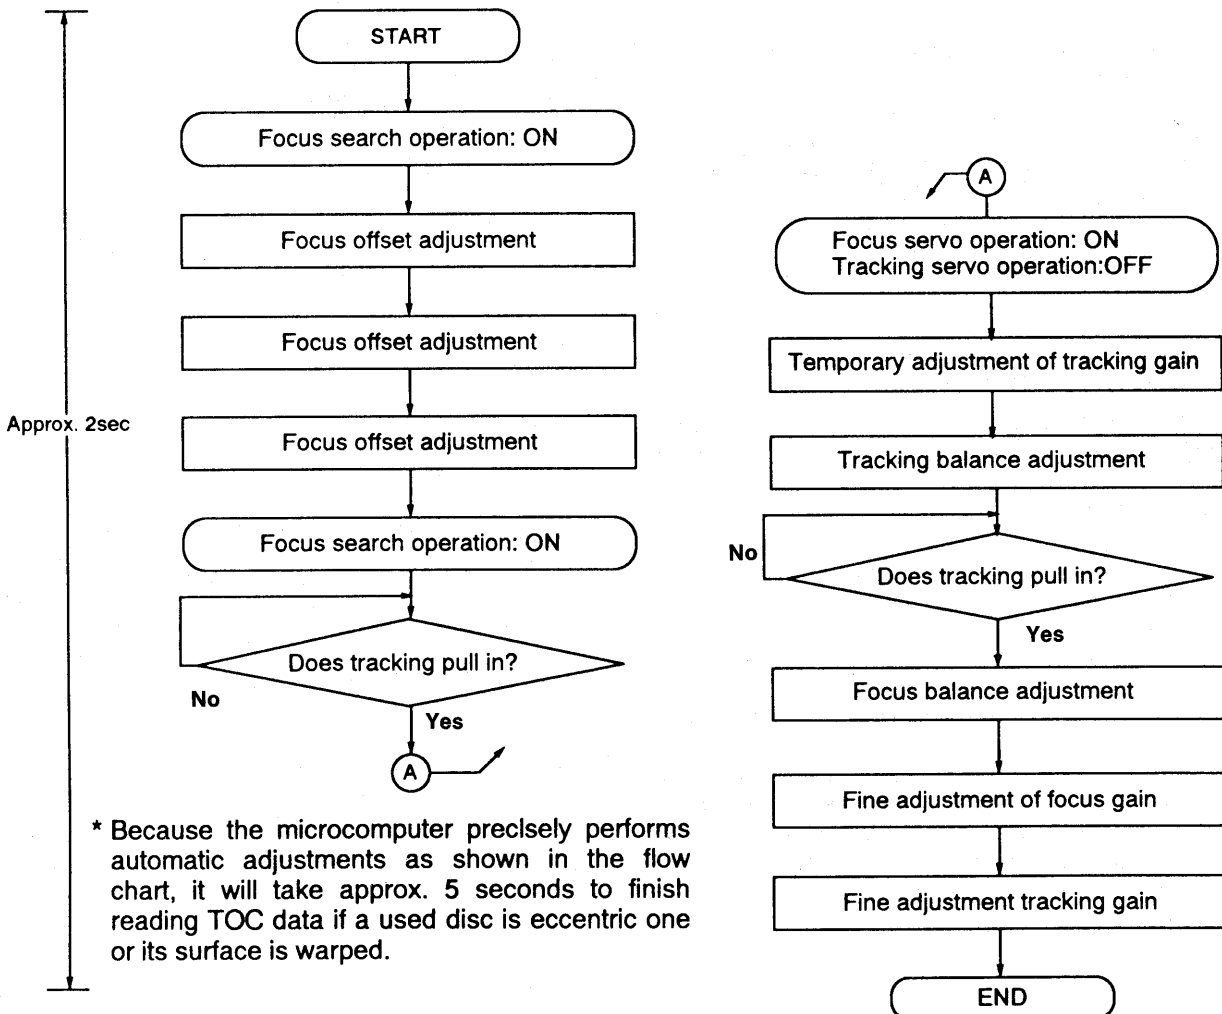

MEASUREMENTS AND ADJUSTMENTS

Warning: This product uses a laser diode. Refer to caution statements on page 2.

Measuring Instruments and Special Tools

- * Test discs
 1. Playability test disc (SZZP1054C)
 2. Uneven test disc (SZZP1056C)
- * Musical program disc (ordinary)
- * Dual-beam oscilloscope with bandwidth of 30MHz or better (with EXT. trigger and 1:1 probe).
- * Allen wrench (M2.0) (SZZP1101C)
- * Lock paint (RZZ0L01)

PREPARATION

1. Remove the cabinet and front panel ass'y (refer to "disassembly instructions" Ref. No. 1, 2).
2. Set the power switch to ON and press the open/close key to close the loading drawer.
3. Press the play key and when the traverse deck reaches it's height position, set the power switch to OFF.
4. Remove the tray ass'y (refer to "disassembly instructions" Ref. No. 5).
5. Remove the clamp plate, fixed plate, magnet and clamber (refer to "disassembly instructions" Ref. No. 10, 11).
6. Place the test disc and secure it by using clamber ass'y. (Refer to Fig. 1)
(refer to "disassembly instructions" Ref. No. 11).
7. Set the unit in the test mode as follows:
(hold the **play**, **stop** and **disc 1** keys (3 keys) on and set the power switch to ON.)
8. Press the **play** key and play the test disc.
9. Follow the adjustment procedure.


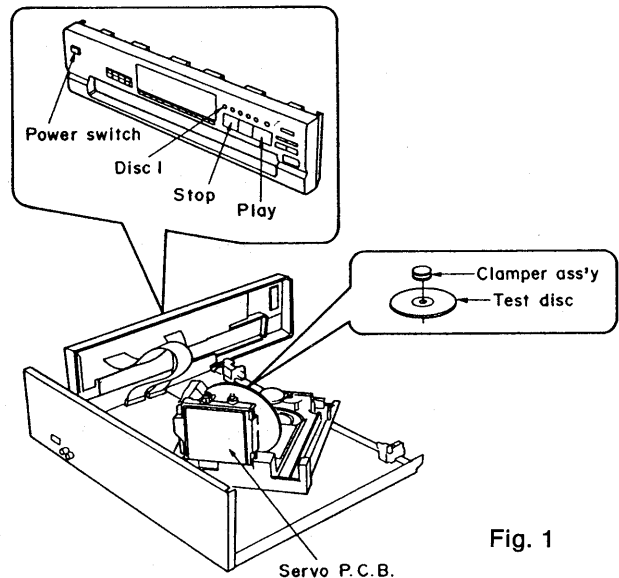


Fig. 1

(1) MECHANICAL ADJUSTMENT

1. Connect the oscilloscope's CH. 1 probe across **TJ701** (RF) and **TJ702** (VREF) on the servo P.C.B. (Refer to Fig. 3 on page 27)
Oscilloscope setting: VOLT 200mV
 SWEEP..... 0.5 μ s.
 Input coupling..... AC
2. Switch the player power **ON**, and play track 19 on the test disc (SZZP1056C).
(Playing any other track will prevent the HEX screws from being accessed.)
3. Leave the player in play mode and place it as shown Fig. 3.
4. Alternately adjust the two HEX screws with the 2.0mm allen wrench (SZZP1101C) until the vertical fluctuation of RF signal is minimized and the eye pattern is most stretched. (Refer to Fig. 2)
5. After completing the adjustment, lock the HEX screws with lock paint (RZZ0L01).

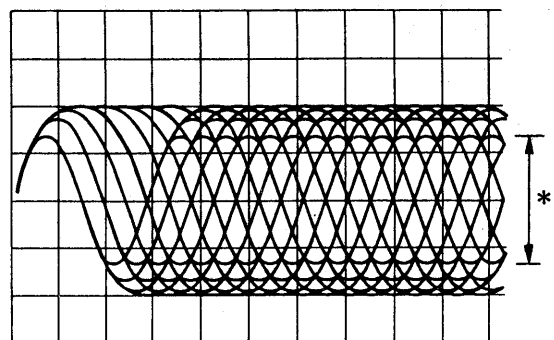

*Most stretched eye pattern.

Fig. 2

(2) CHECK OF PLAY OPERATION AFTER ADJUSTMENT*** Checking Skip Search**

1. Play an ordinary musical program disc.
2. Press the skip button to check for normal skip search operation (in both the forward and reverse directions).

*** Checking Manual Search**

1. Play an ordinary musical program disc.
2. Press the manual search button to check for smooth manual search operations at either low or high speed (in both the forward and reverse directions).

*** Checking Playability**

1. Play the 0.7mm black dot and the 0.7mm wedge on the playability test disc (SZZP1054C) and verify that no sound skip or noise occurs.
2. Play the middle tracks of the uneven test disc (SZZP1056C) and verify that no sound skip or noise occurs.



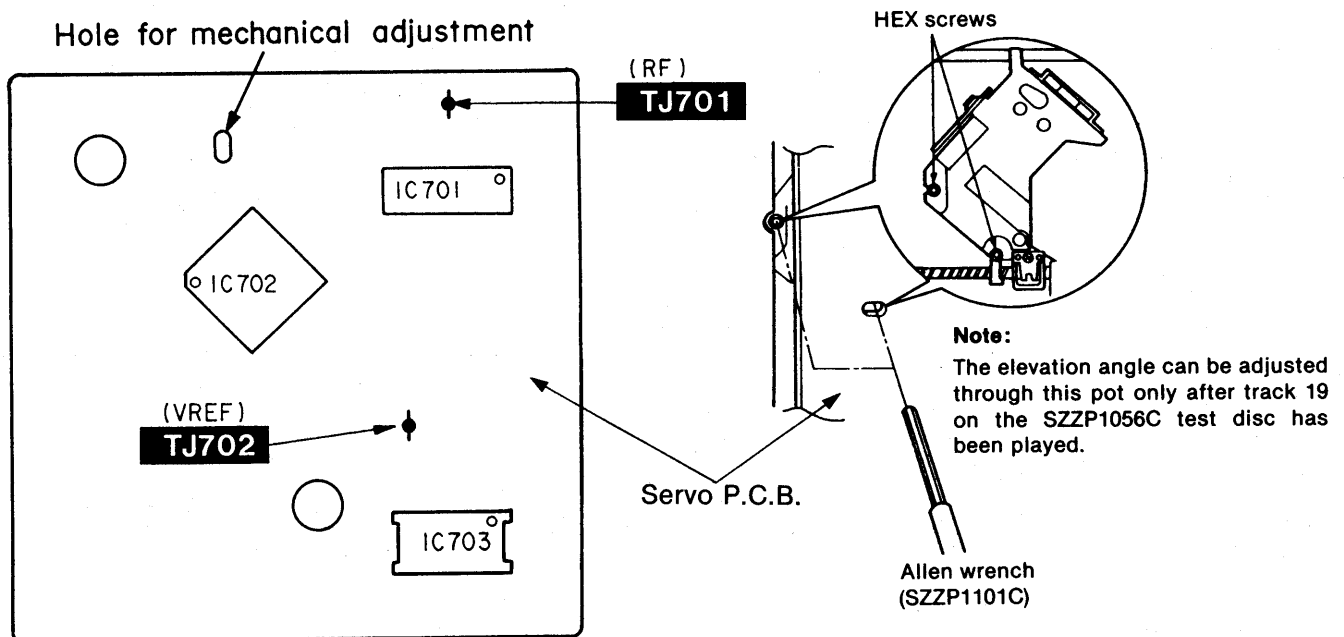



Fig. 3

TROUBLESHOOTING GUIDE

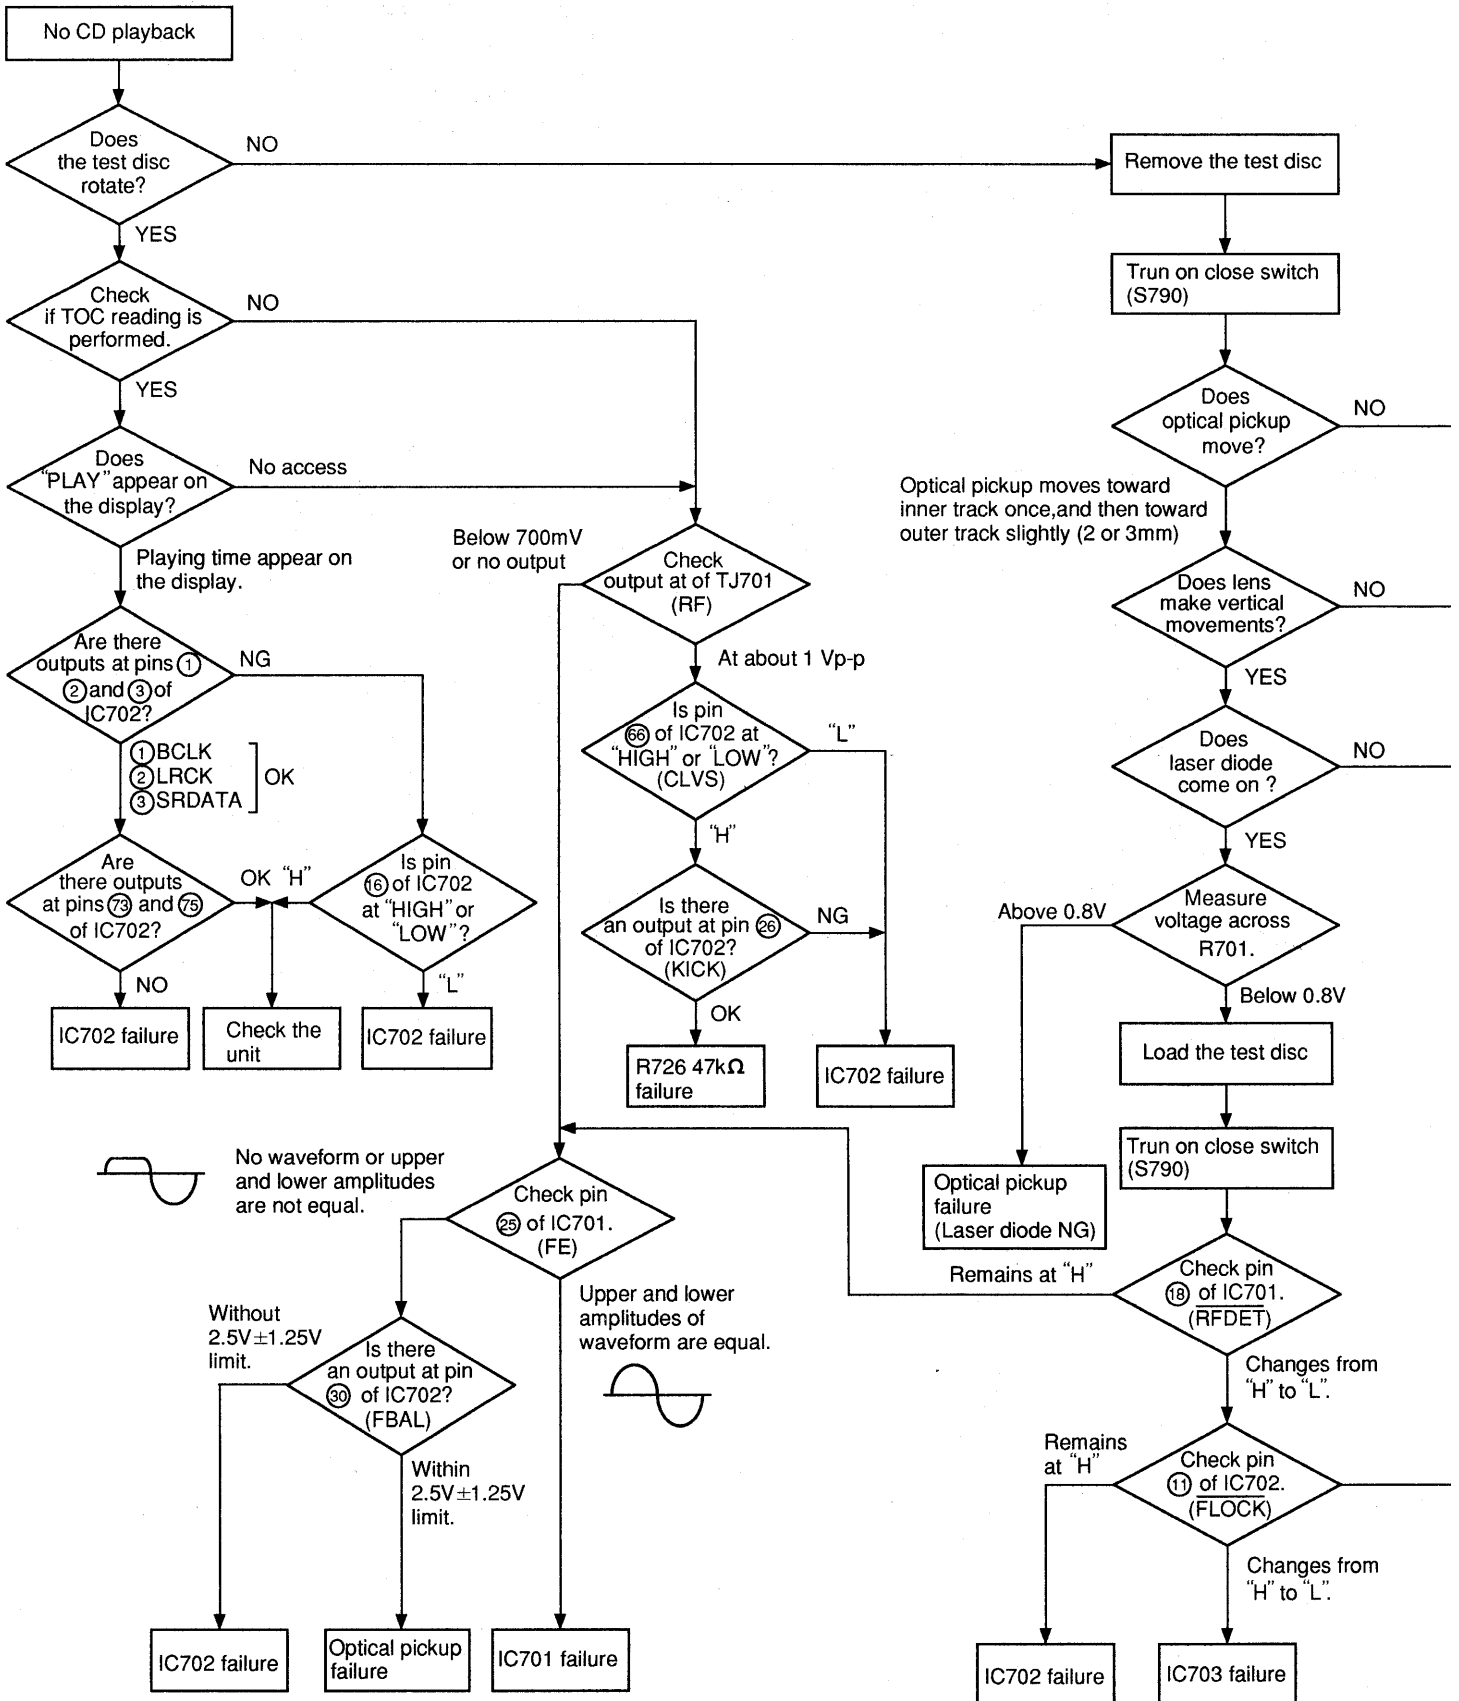

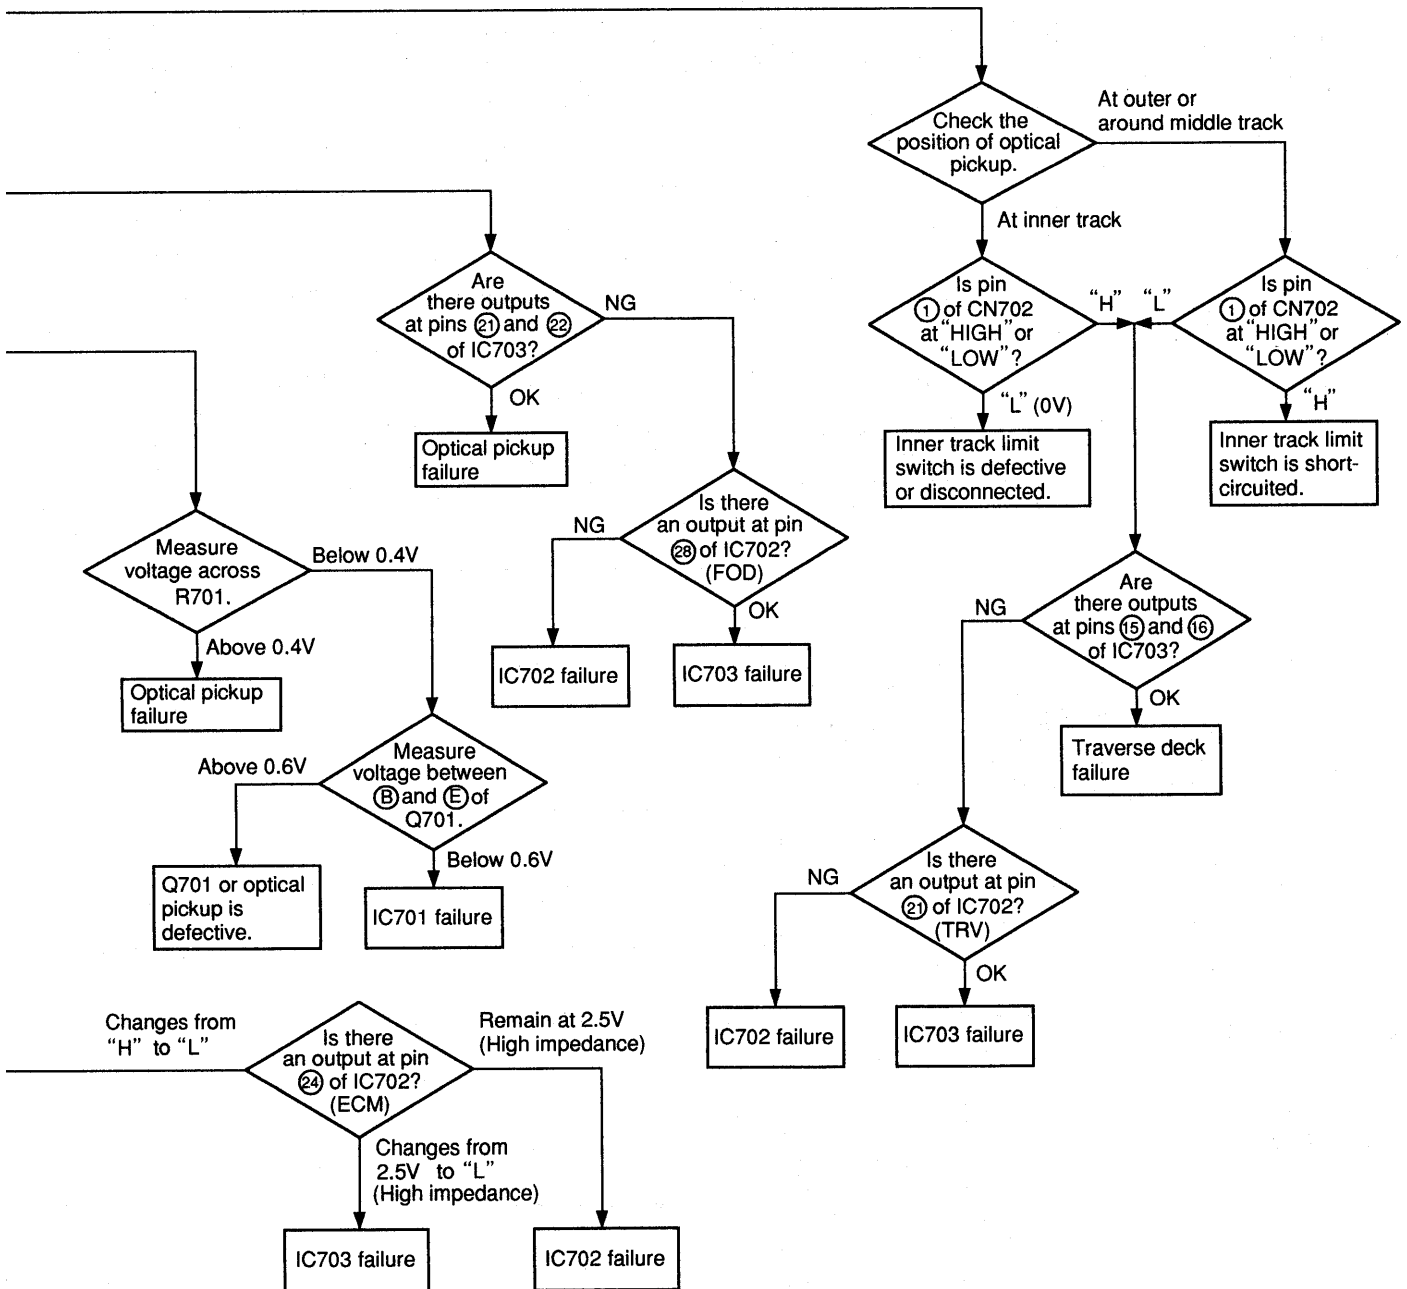


BLOCK DIAGRAM

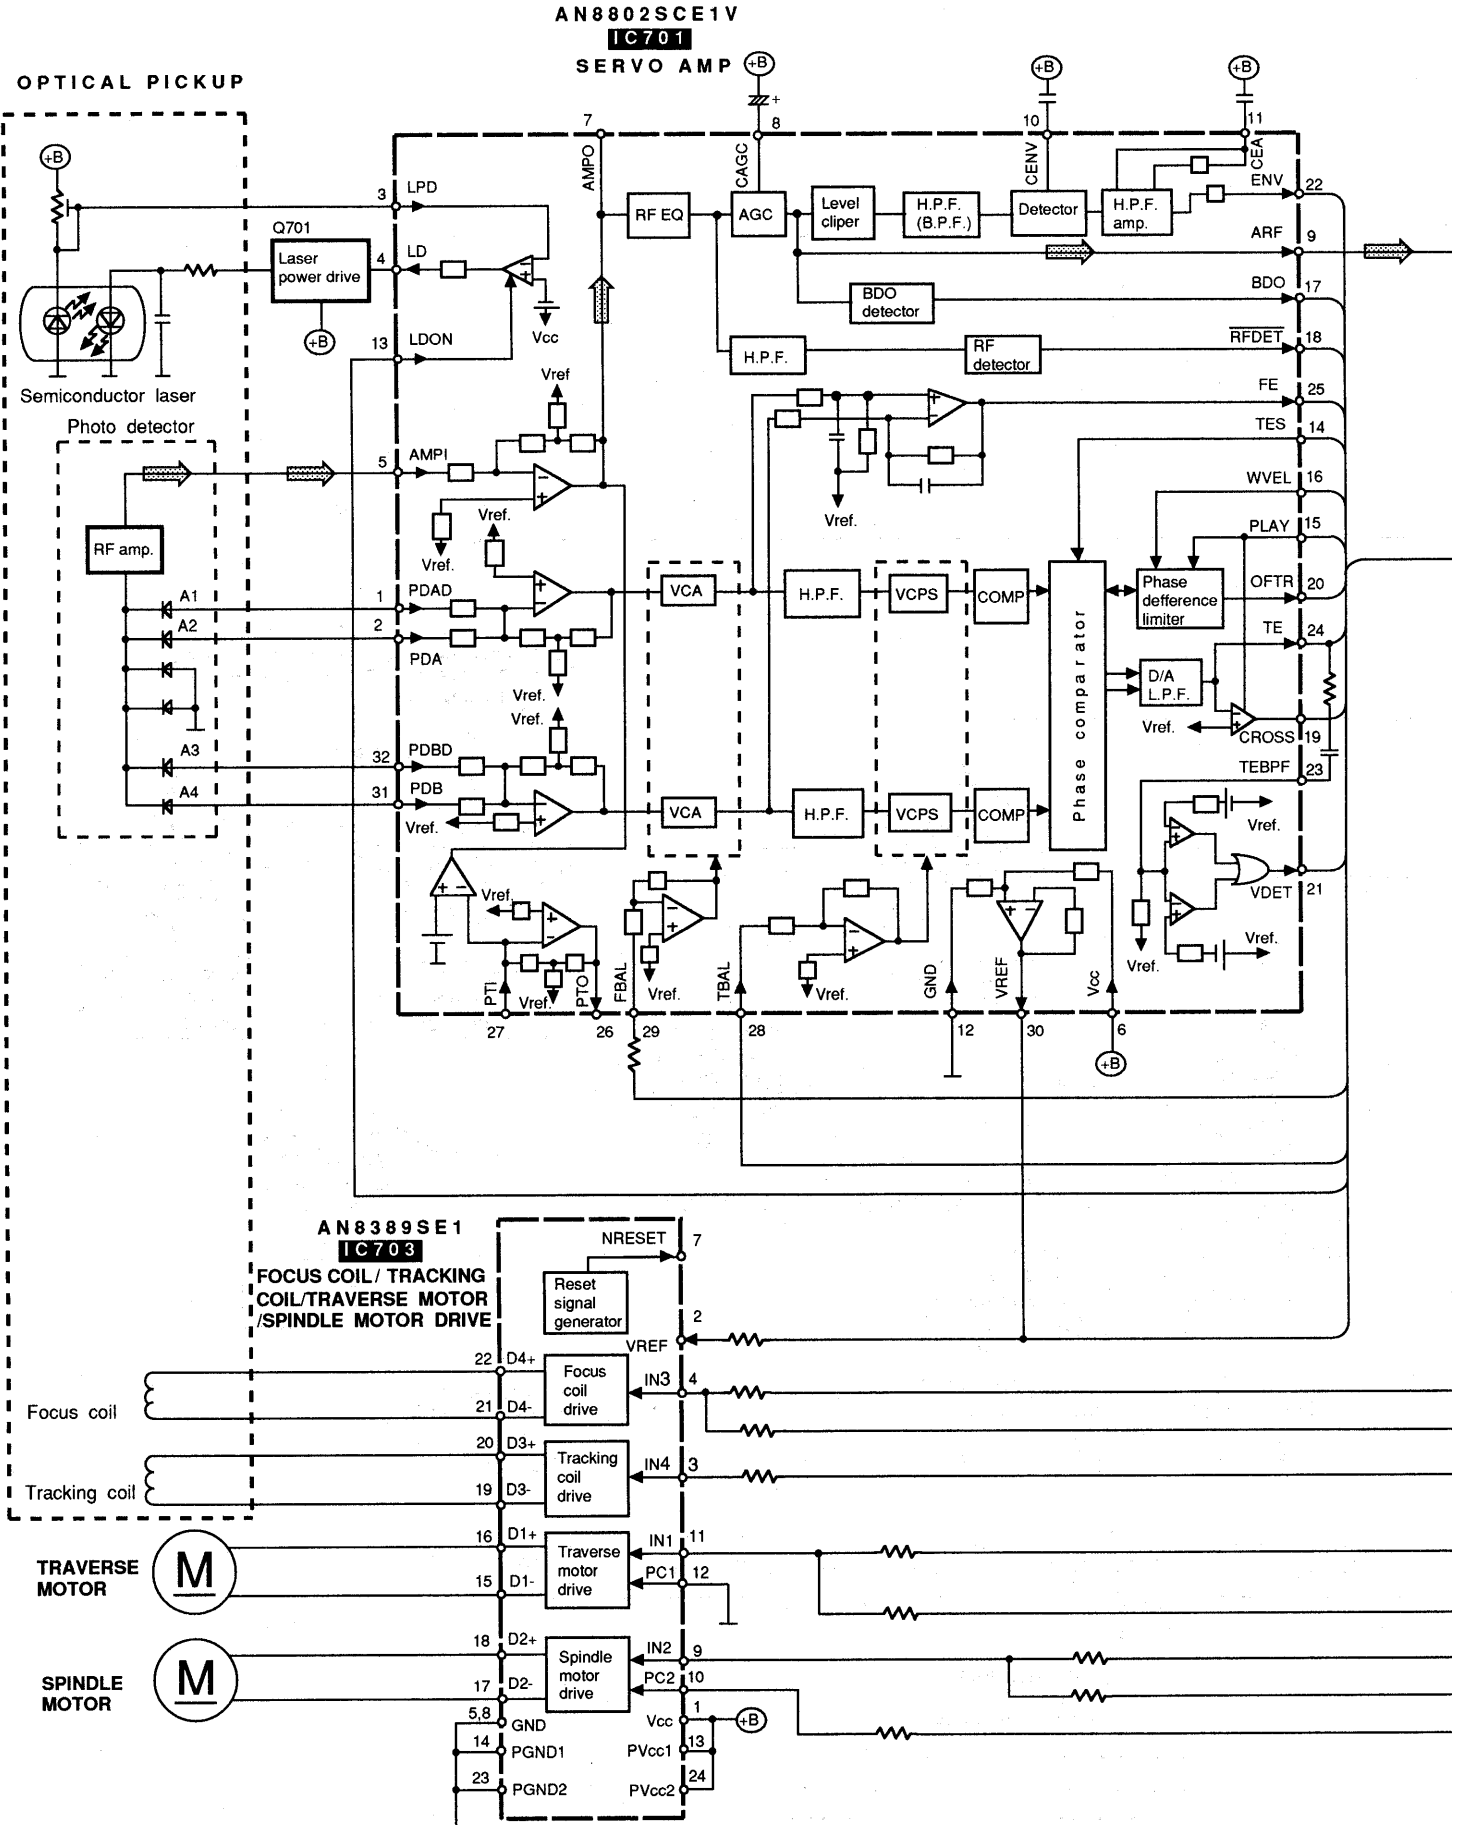



MN662712RA


IC702

SERVO PROCESSOR / DIGITAL SIGNAL PROCESSOR /
DIGITAL FILTER / D/A CONVERTER

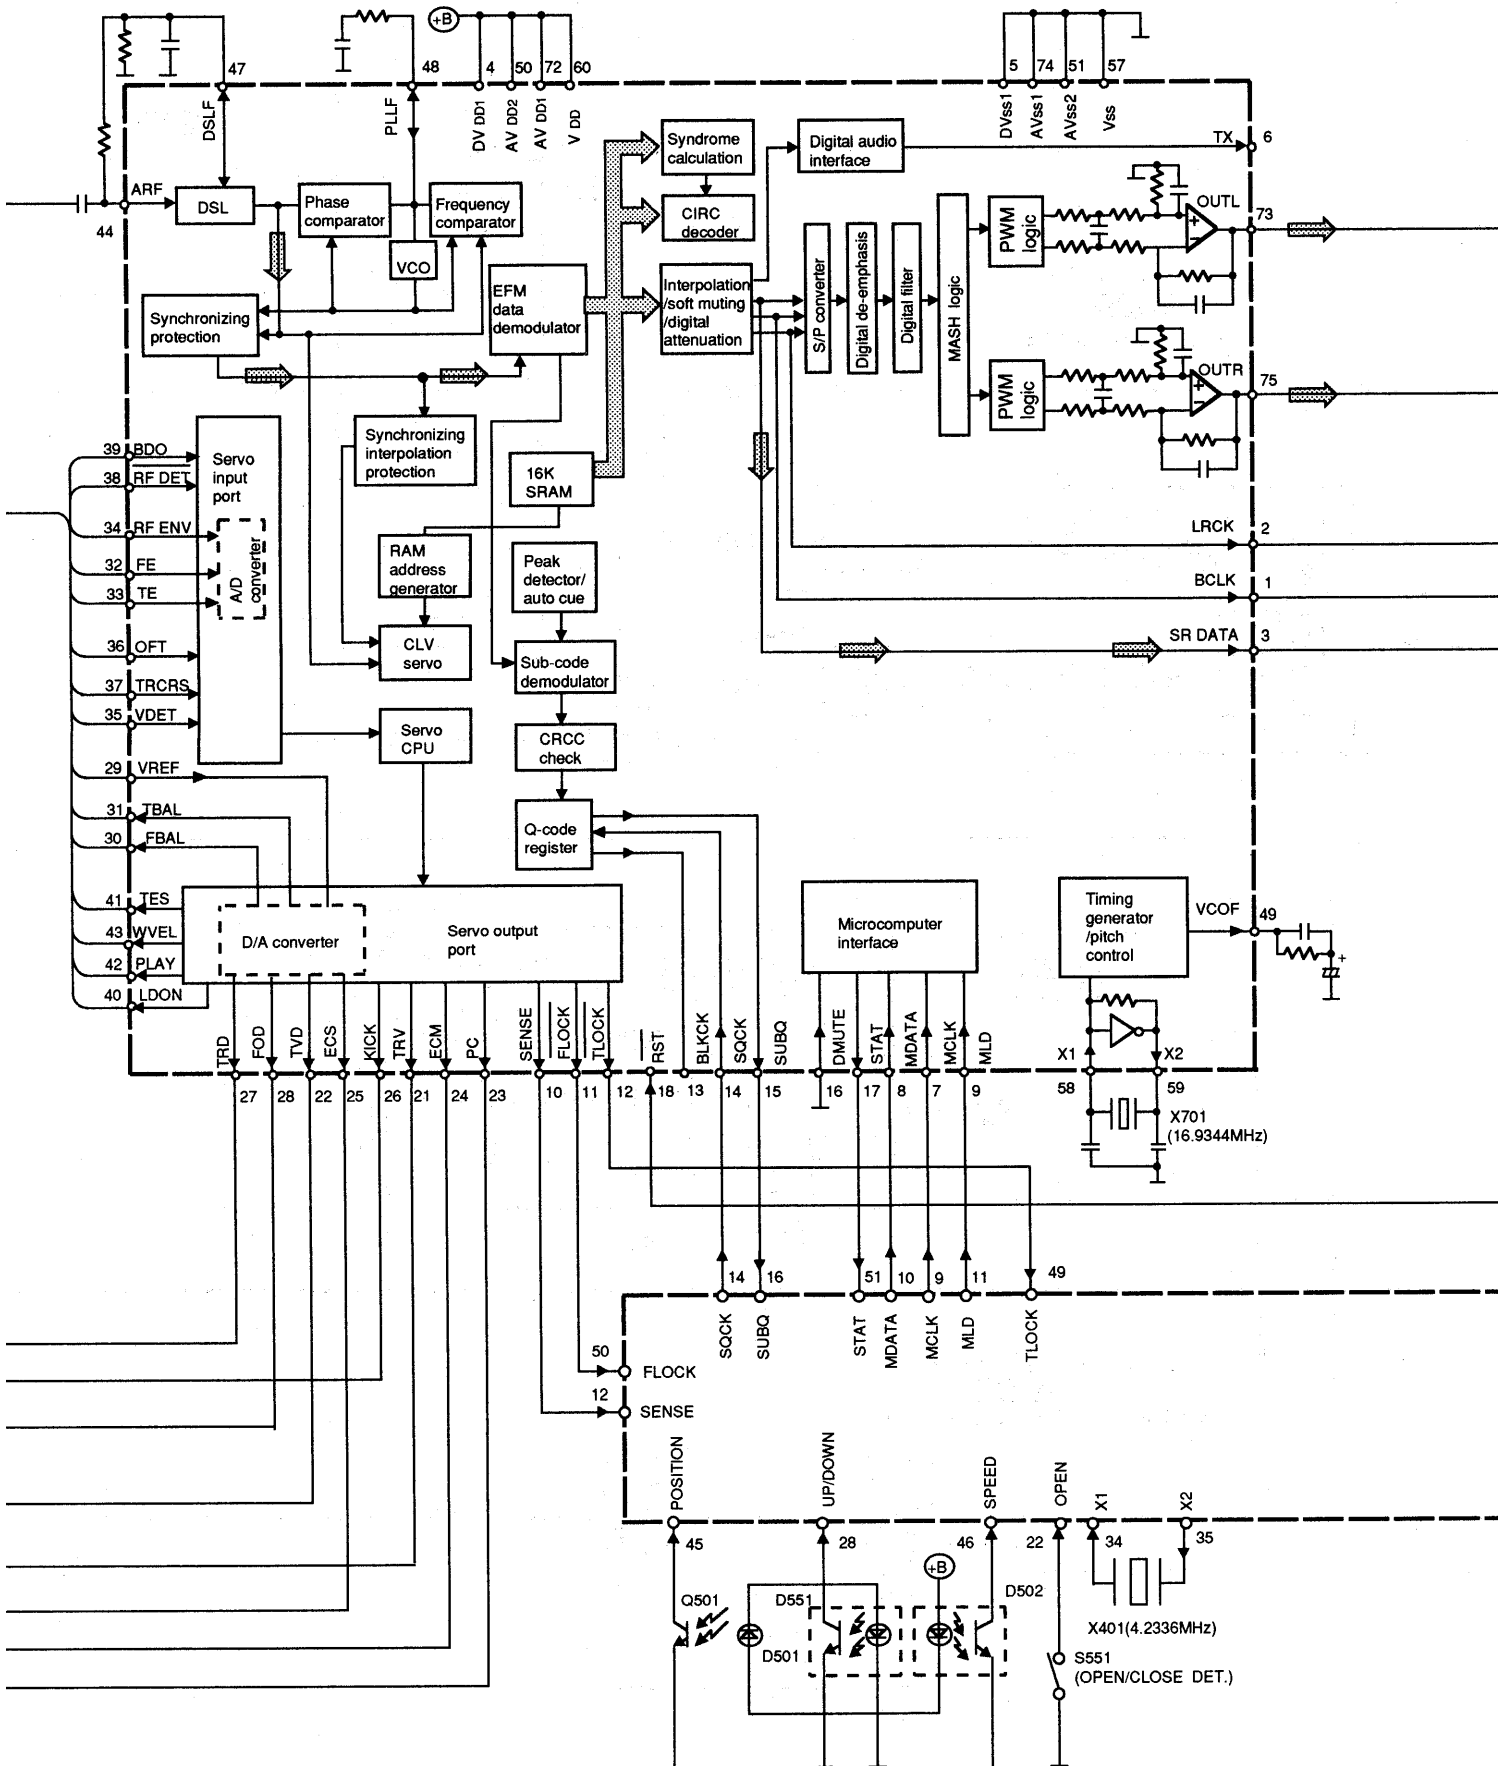

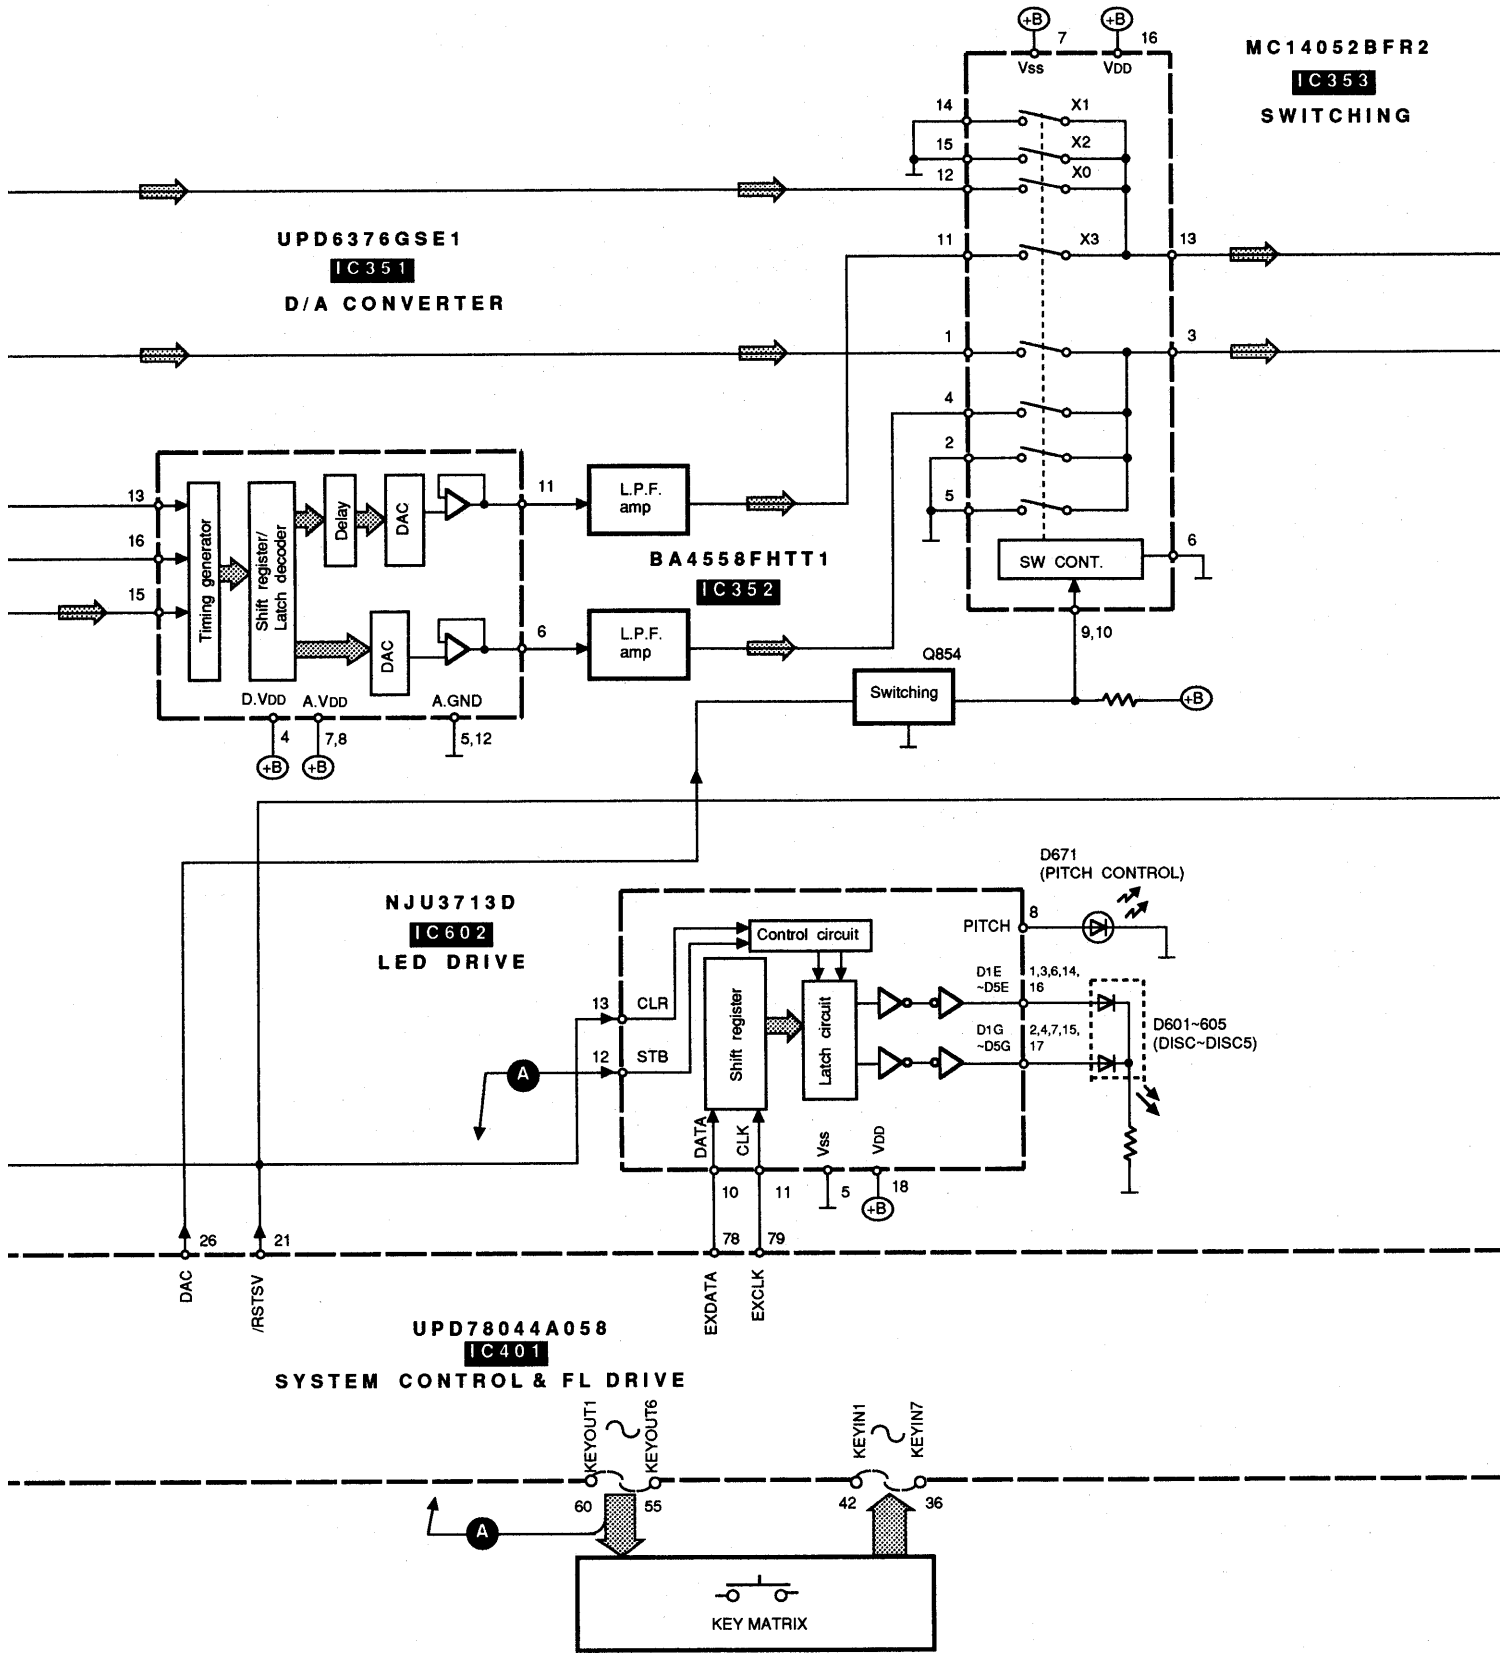

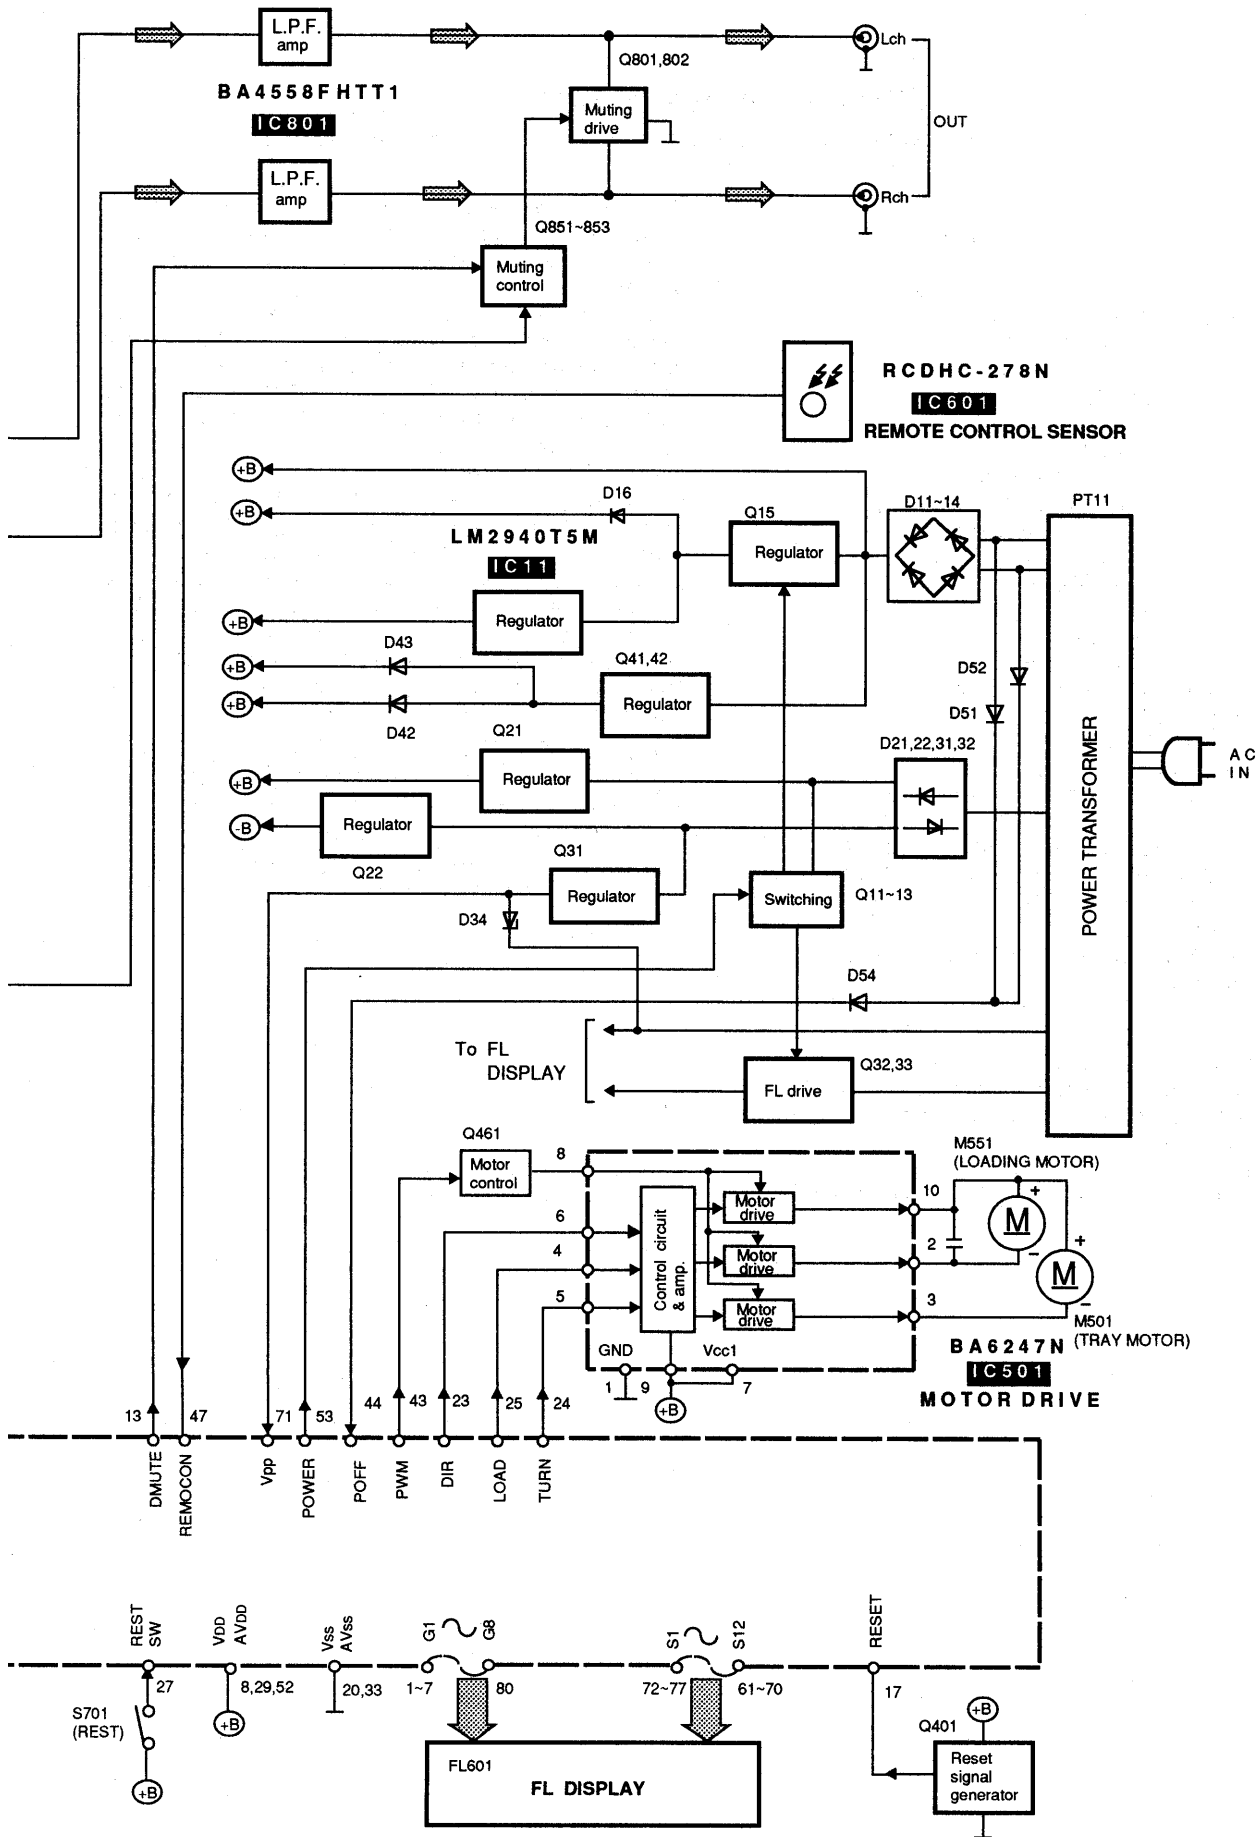

Note:  Audio signal

■ SCHEMATIC DIAGRAM (Parts list on pages 54~57.)

(This schematic diagram may be modified at any time with development of new technology.)

Note:

- S551 : Open/close det. switch.
- S601 : Auto cue (AUTO CUE) switch.
- S602 : Spiral (SPIRAL) switch.
- S603 : Random mode (RANDOM MODE) switch.
- S604 : Repeat (REPEAT) switch.
- S605 : ID scan (ID SCAN) switch.
- S606 : Edit guide (EDIT GUIDE) switch.
- S607 : Stop (■) switch.
- S608 : Pause (■) switch.
- S609 : Play (▶) switch.
- S610~S614: Disc (DISC 1~5) switches.
[S610: 1, S611: 2, S612: 3, S613: 4, S614: 5]
- S615 : Disc skip (DISC SKIP) switch.
- S616 : Program mode (PROGRAM MODE) switch.
- S617, 618 : Search (SEARCH) switches.
[S617: ◀◀, S618: ▶▶]
- S619, 620 : Skip (SKIP) switches.
[S619: ◀◀, S620: ▶▶]
- S621 : Loading drawer open/close
(▲ OPEN/CLOSE) switch.
- S631 : Power "STANDBY ϕ /ON" (POWER,
STANDBY ϕ ON) switch.
- S651~S662: Numeric (1~10, 0, > 10) switches.
[S651: (1), S652: (2), S653: (3), S654: (4),
S655: (5), S656: (6), S657: (7), S658: (8),
S659: (9), S660: (10), S661: (> 10), S662: (0)]
- S671 : Pitch control (PITCH CONTROL, OFF/ON)
switch.
- S672 : Pitch control (PITCH CONTROL, -, +)
switch.

- The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis.

Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.

- *The parenthesized are the values of voltage generated during playing (Test disc 1kHz, L+R, 0dB), others are voltage values in stop mode.

- Important safety notice:

Components identified by Δ mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used as occasion calls. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- The supply part number is described alone in the replacement parts.

| Part No. | Production Part No. | Supply Part No. |
|----------|---------------------|-----------------|
| IC11 | LM2940T5M | LM2940T5 |

- ——— / - - - - : Positive voltage lines and negative voltage lines.
- ⤴ : audio signal lines.

Caution!



IC and LSI are sensitive to static electricity.

Secondary trouble can be prevented by taking care during repair.

- Cover the parts boxes made of plastics with aluminum foil.
- Ground the soldering iron.
- Put a conductive mat on the work table.
- Do not touch the pins of IC or LSI with fingers directly.

A SERVO CIRCUIT (P.C. Board: on page 45)

Δ OPTICAL PICKUP

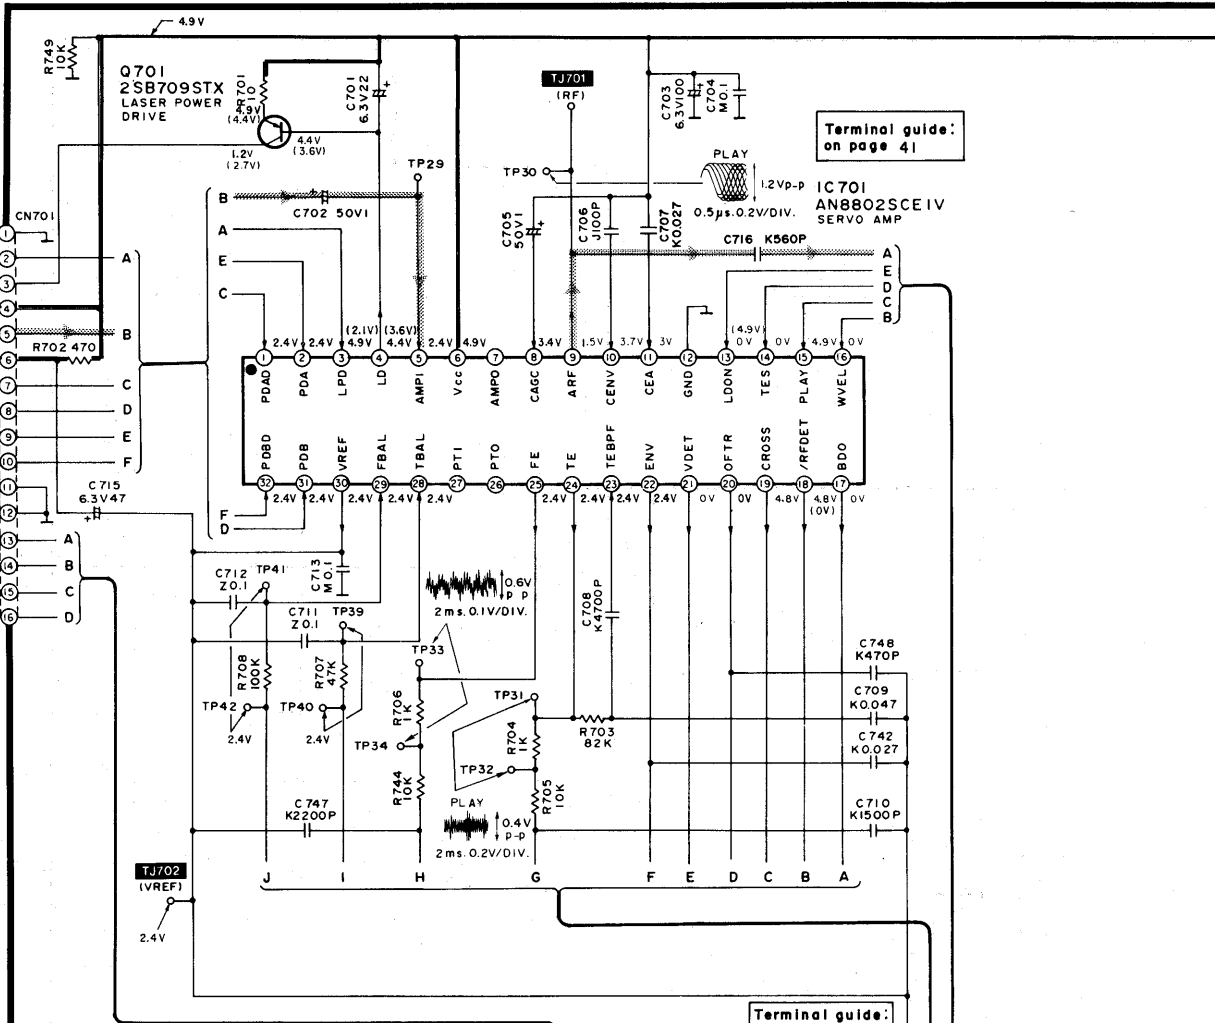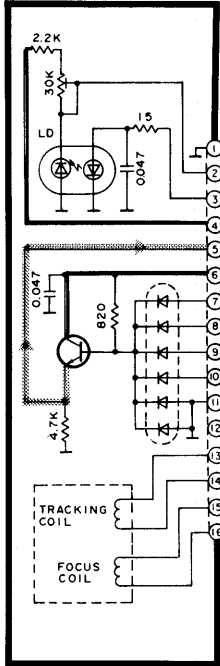


Terminal guide: on page 41

Terminal guide: on page 41


M702 SPINDLE MOTOR

M701 TRAVERSE MOTOR

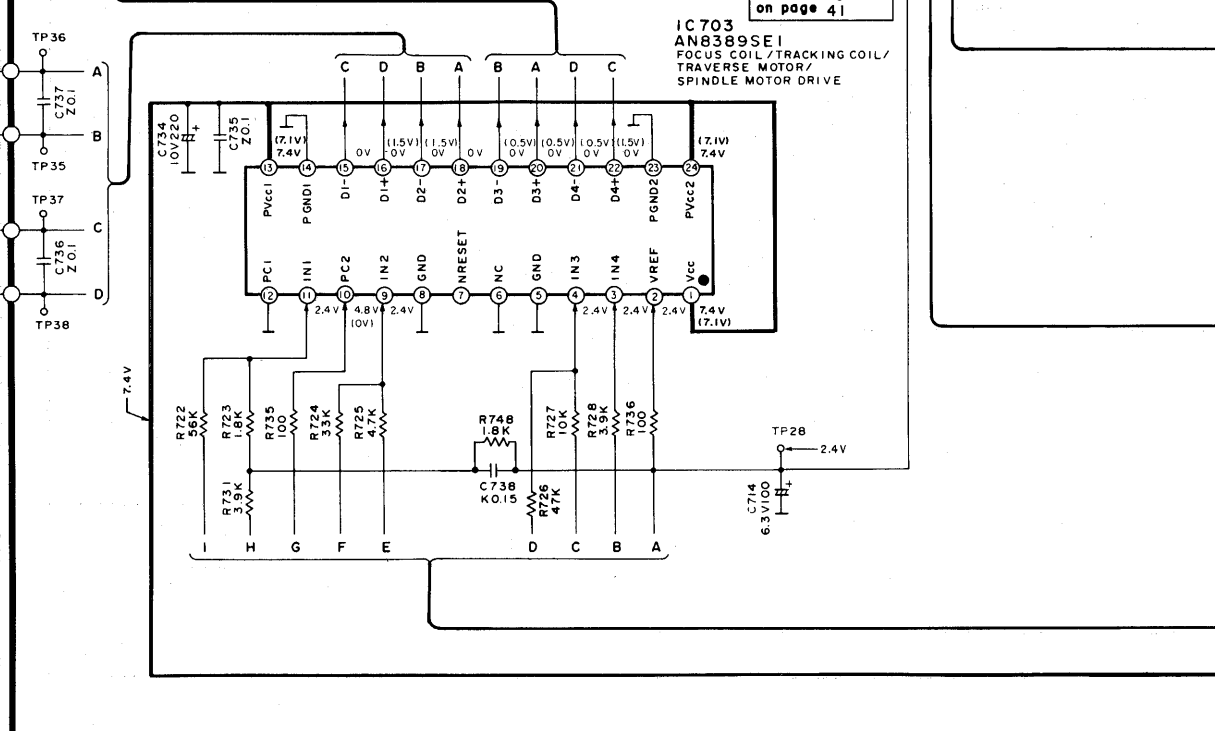


Terminal guide:
on pages 42, 43

IC 702
MN662712RA
SERVO PROCESSOR/DIGITAL
SIGNAL PROCESSOR/DIGITAL
FILTER/D/A CONVERTER

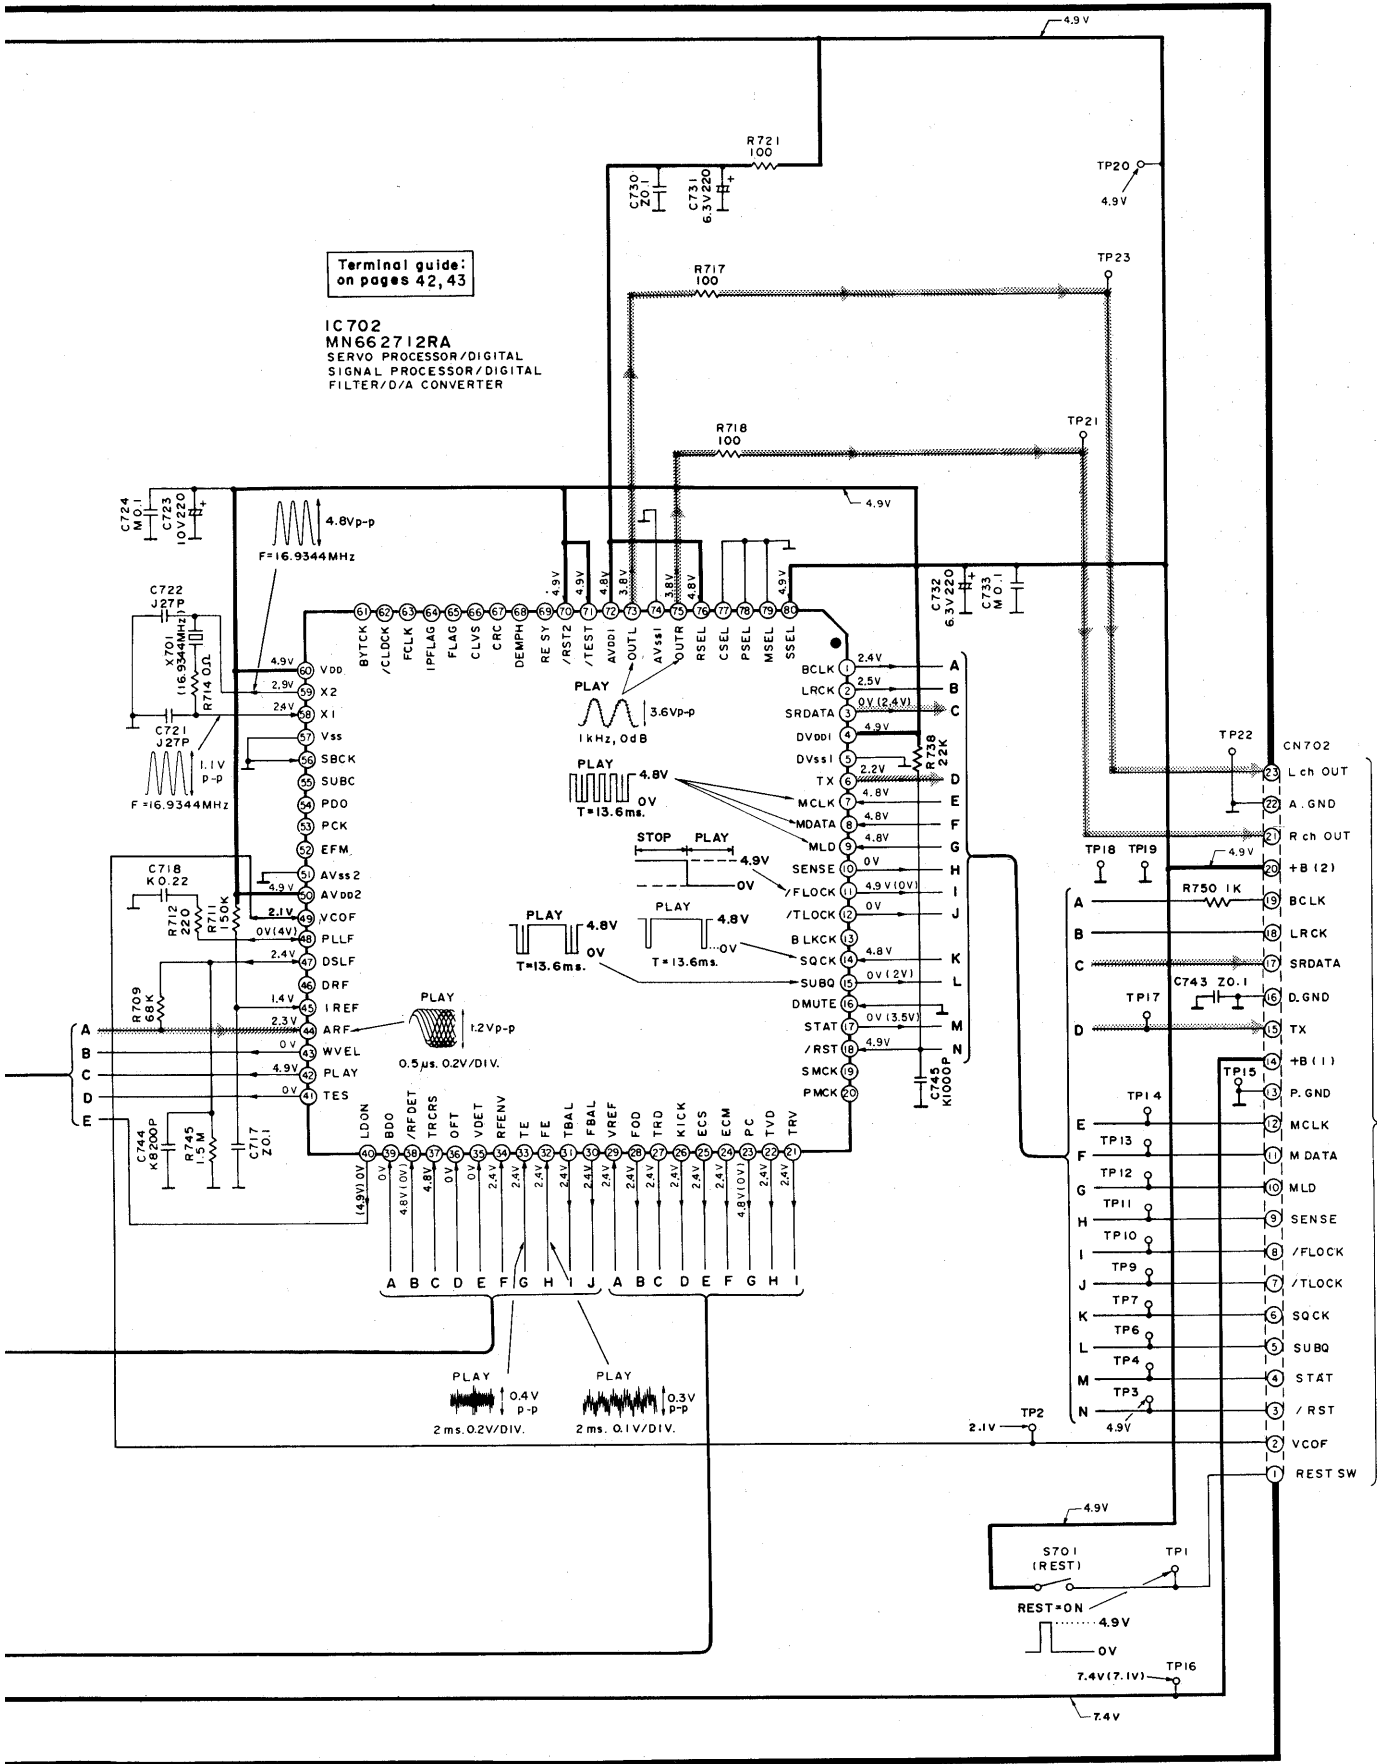


To MAIN
CIRCUIT
(CN301)
On page 38


B PITCH CONTROL CIRCUIT
(P.C. Board: on page 47)

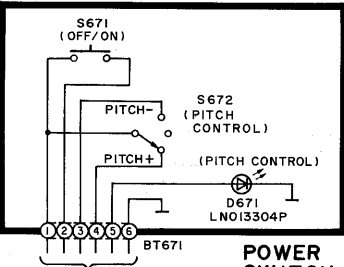


D POWER SWITCH CIRCUIT
(P.C. Board: on page 47)




C TRAY MOTOR CIRCUIT
(P.C. Board: on page 47)

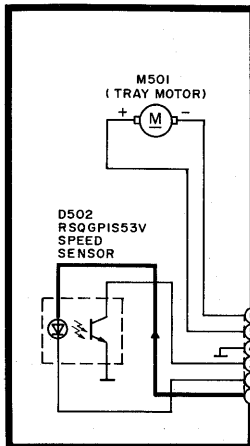

G LOADING MOTOR CIRCUIT
(P.C. Board: on page 47)

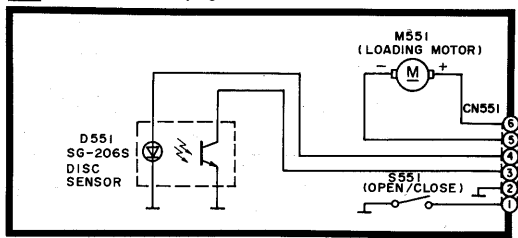



F SENSOR CIRCUIT (P.C. Board: on page 47)

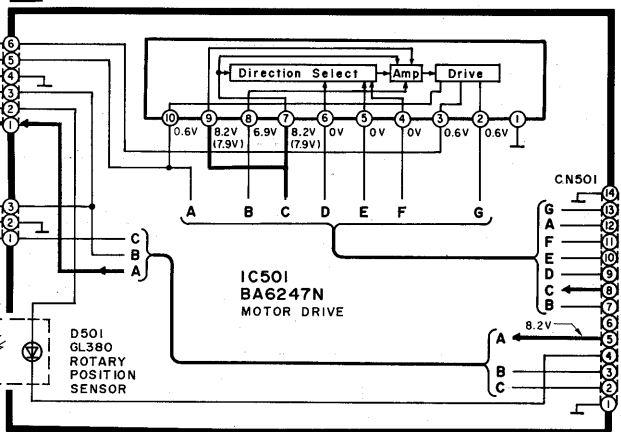



E PHOTO TRANSISTOR CIRCUIT
(P.C. Board: on page 47)




H OPERATION CIRCUIT (P.C. Board: on pages 45, 46)

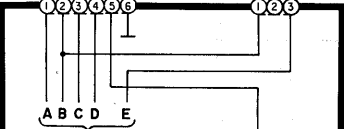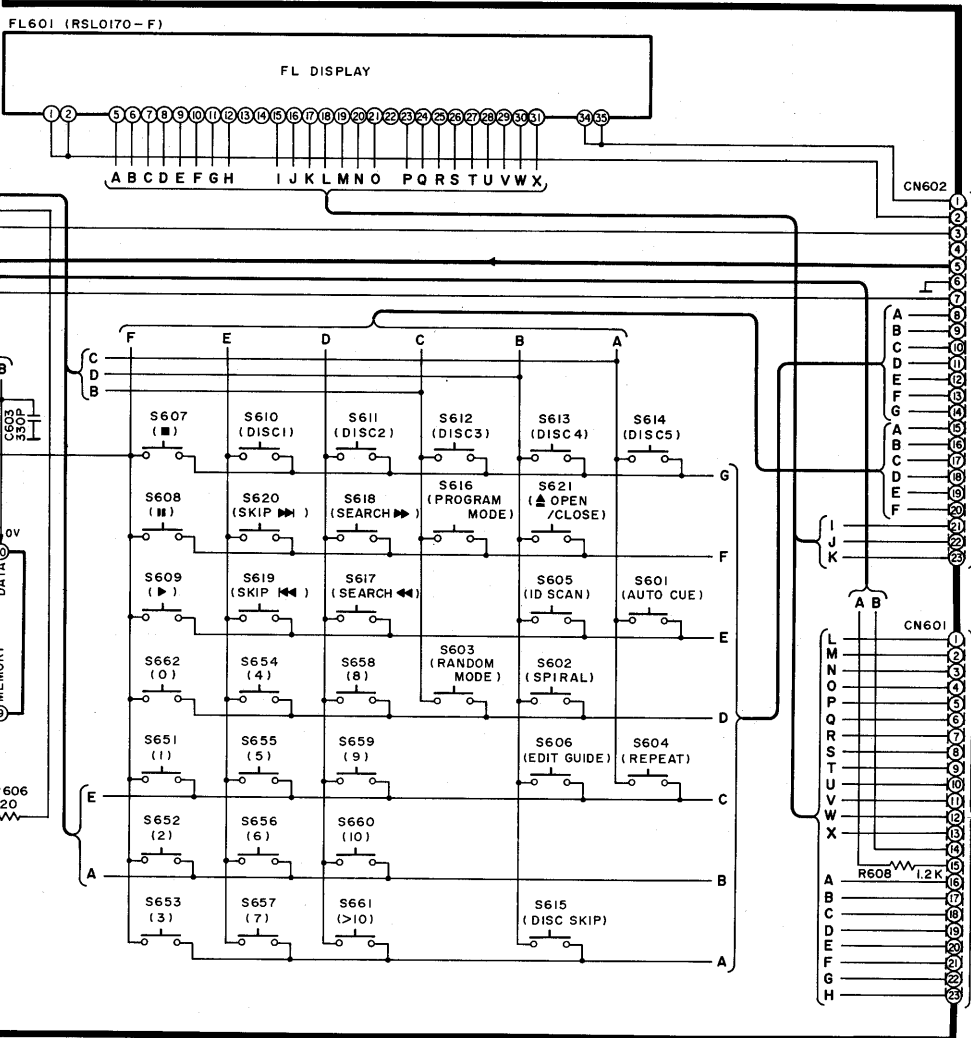


IC601 RCDHC-278N
REMOTE CONTROL SENSOR

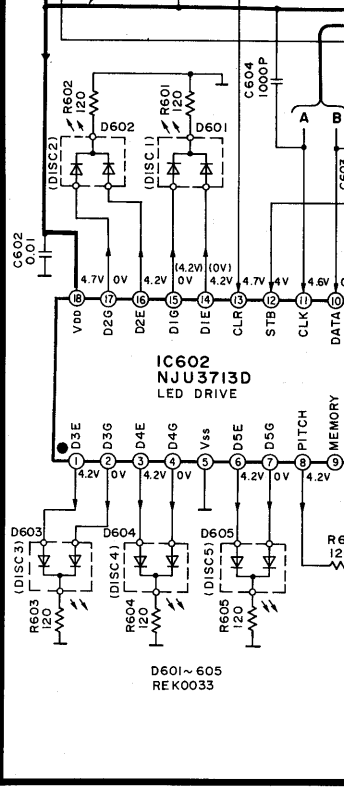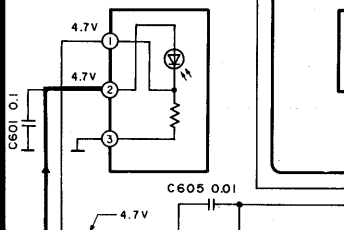


I MAIN CIRCUIT
(P.C.Board: on pages 45, 46)

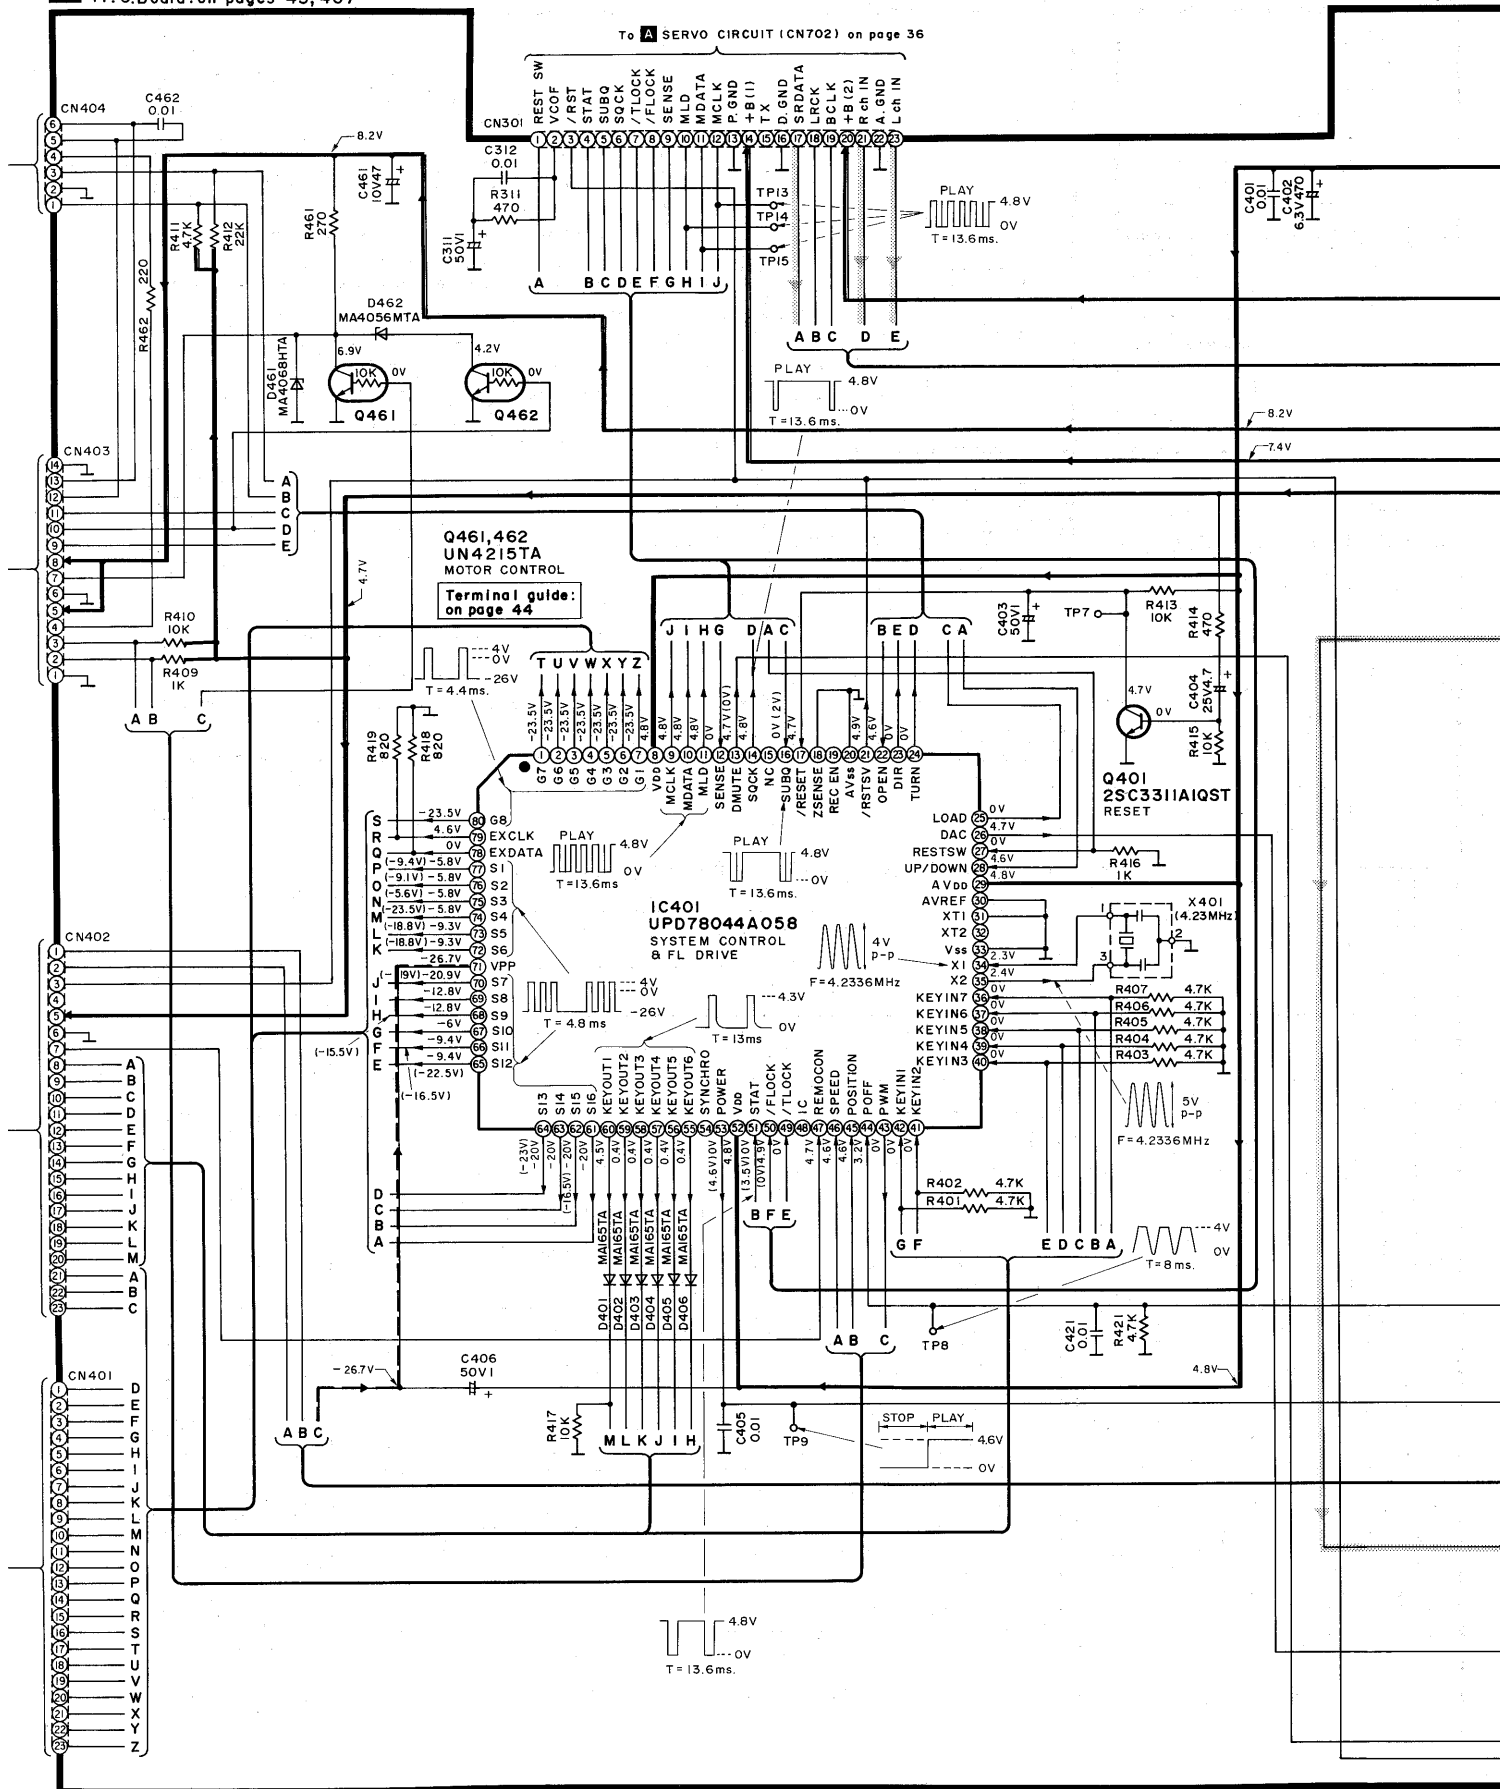

MAIN CIRCUIT
(P.C.Board: on pages 45, 46)

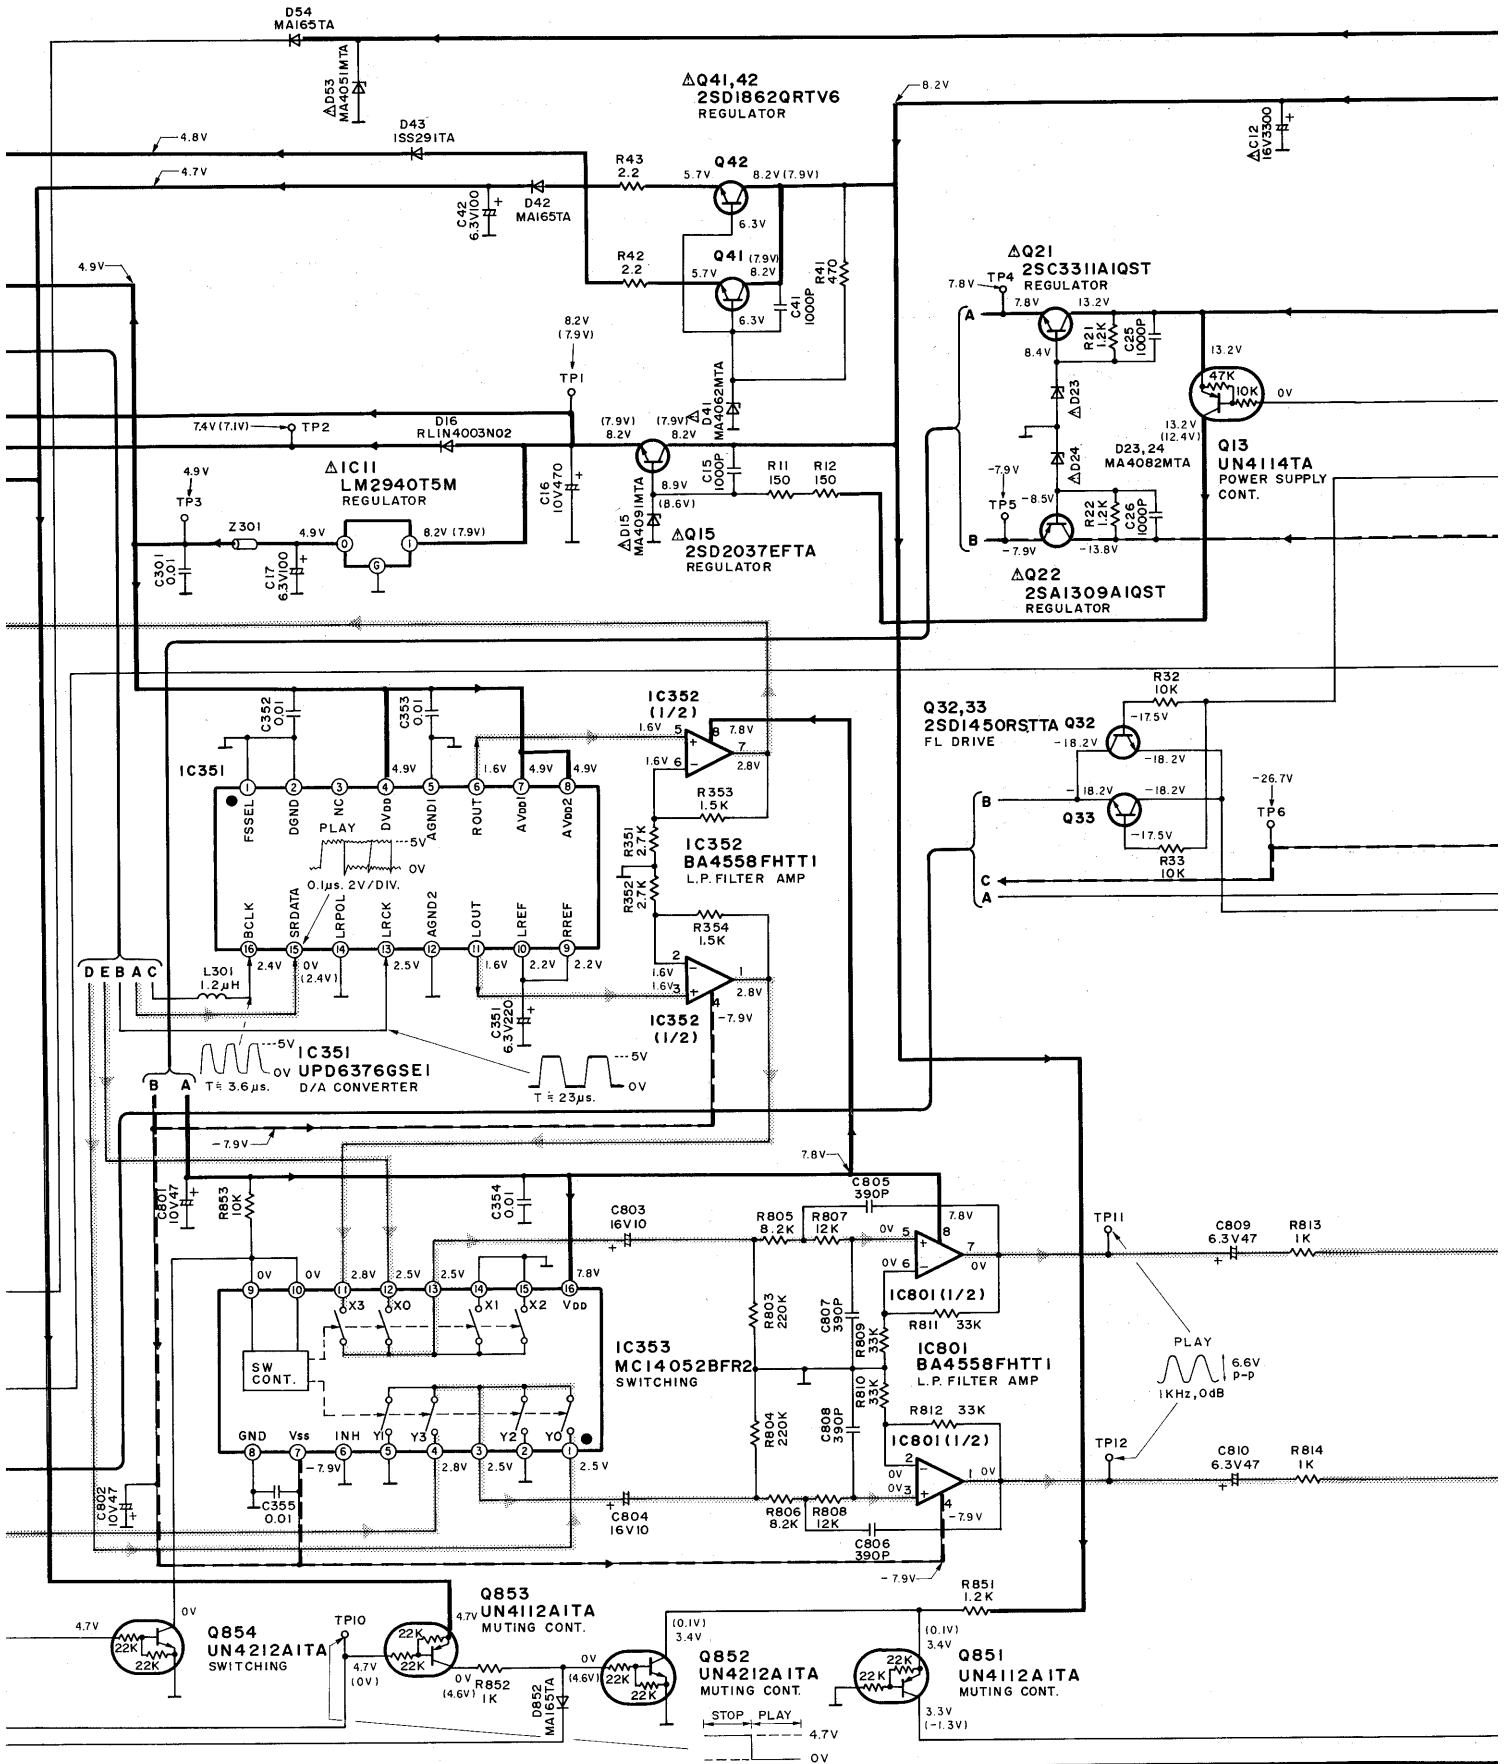

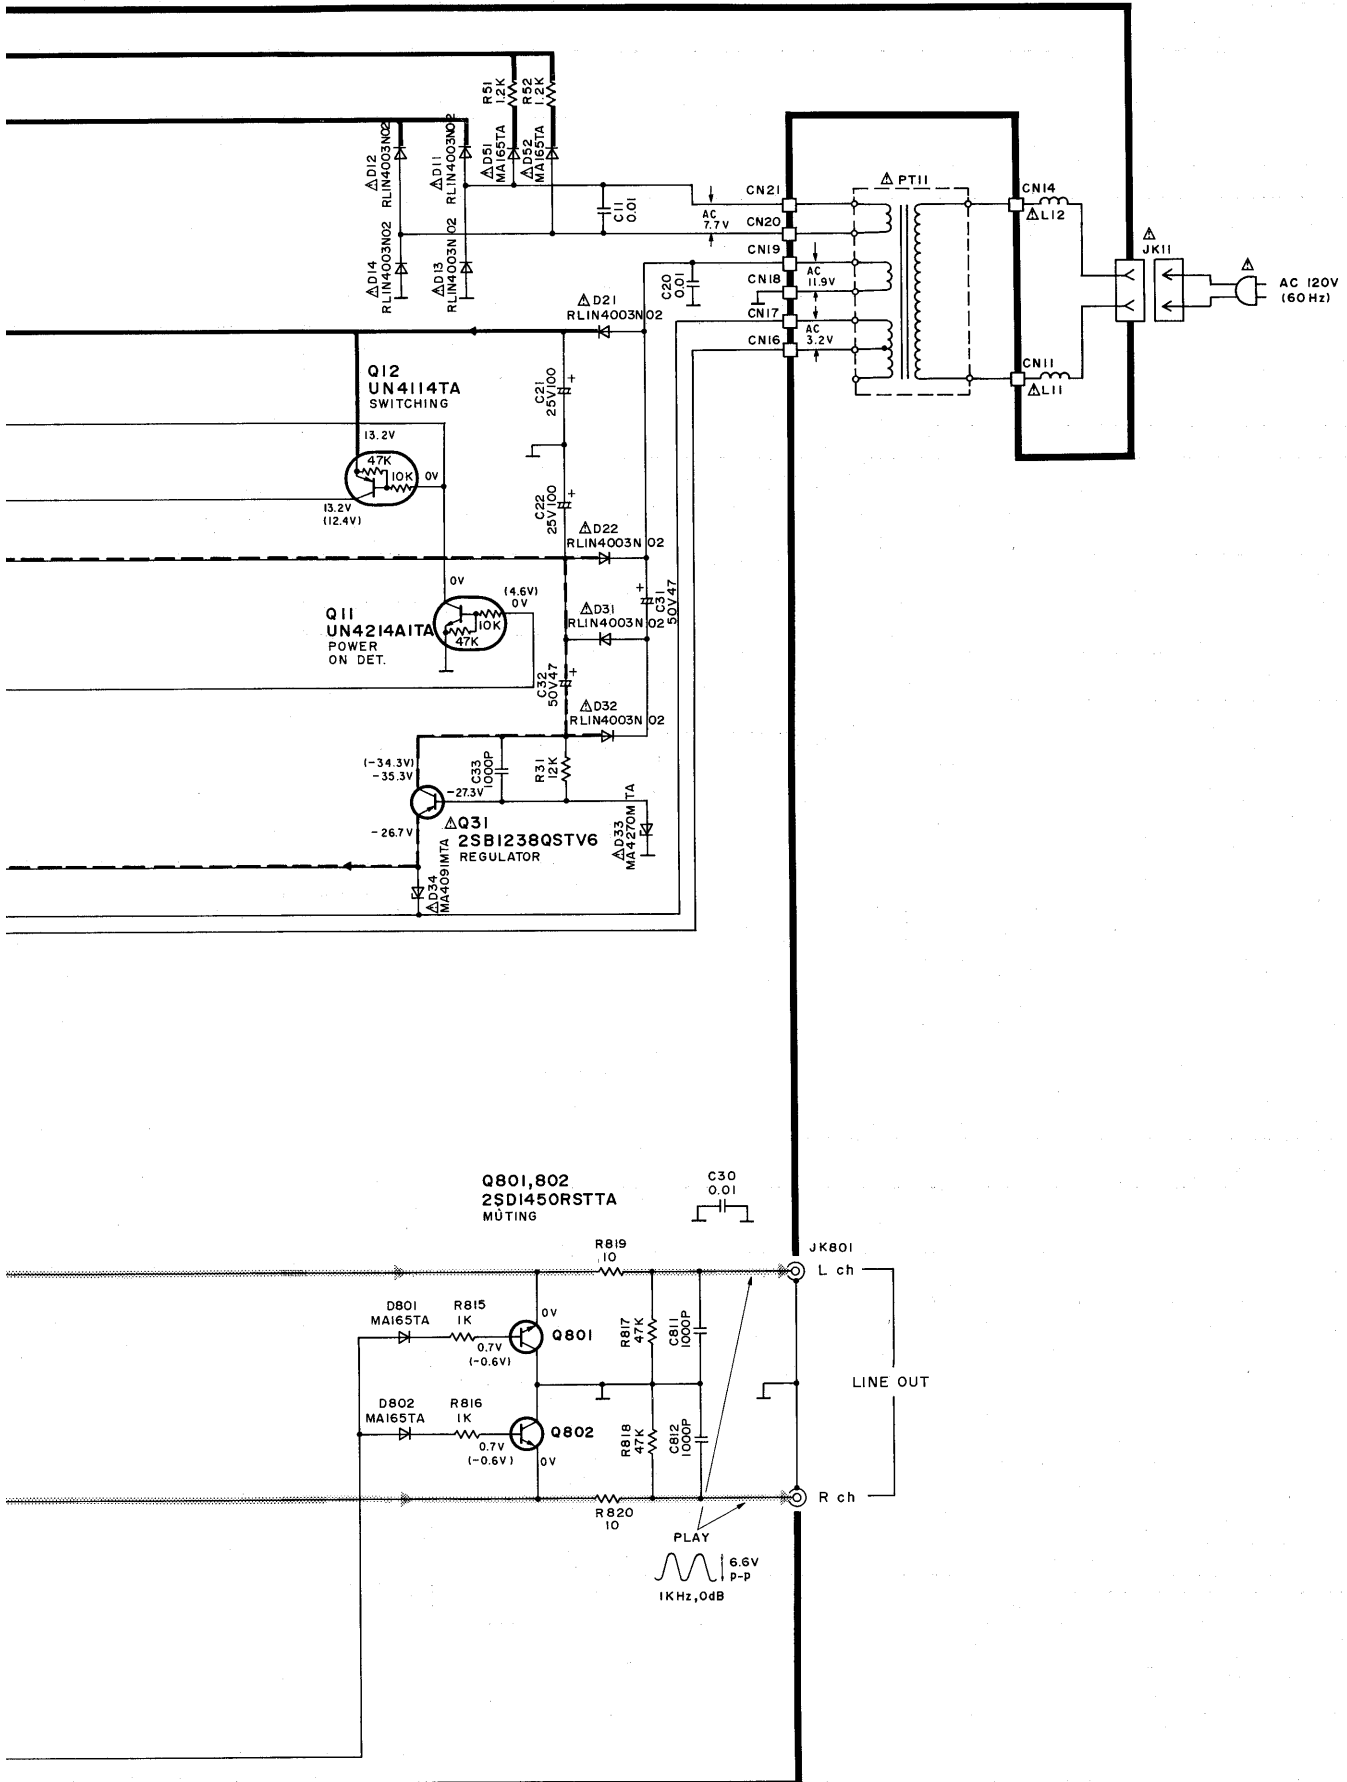

■ TERMINAL GUIDE

• IC701 (AN8802SCE1V): Servo amp

| Pin No. | Mark | I/O Division | Function |
|---------|-----------------|--------------|--|
| 1 | PDAD | I | Photo detector Bch input without delay |
| 2 | PDA | I | Photo detector Ach input without delay |
| 3 | LPD | I | Laser PD signal |
| 4 | LD | O | Laser power auto control output |
| 5 | AMPI | I | RF amp terminal |
| 6 | V _{cc} | I | Power supply terminal |
| 7 | AMPO | O | RF amp signal |
| 8 | CAGC | I | AGC detection capacitor input |
| 9 | ARF | O | RF signal |
| 10 | CENV | I | RF detect capacitor connection terminal |
| 11 | CEA | I | HPF-AMP capacitor connection terminal |
| 12 | GND | — | GND terminal |
| 13 | LDON | I | LD APC ON/OFF ("H": ON, "L": OFF) |
| 14 | TES | I | Tracking error shunt input ("H": shunt) |
| 15 | PLAY | I | Play signal ("H": ON, "L": OFF) |
| 16 | WVEL | I | Double velocity ("H": double, "L": single) |

| Pin No. | Mark | I/O Division | Function |
|---------|--------|--------------|--|
| 17 | BDO | O | Dropout detection control |
| 18 | /RFDET | O | RF det. signal ("L": det.) |
| 19 | CROSS | O | Tracking error zero cross output |
| 20 | OFTR | O | Off track detection ("H": det.) |
| 21 | VDET | O | Oscillation det. signal ("H": det.) |
| 22 | ENV | O | Envelope output terminal |
| 23 | TEBPF | I | Oscillation detect input terminal (Not used, open) |
| 24 | TE | O | Tracking error signal |
| 25 | FE | O | Focusing error signal |
| 26 | PTO | O | Potention amp output |
| 27 | PTI | I | Potention amp input |
| 28 | TBAL | I | Tracking balance adj. input |
| 29 | FBAL | I | Focus balance adj. input |
| 30 | VREF | O | Reference voltage output |
| 31 | PDB | I | Photo detector Ach input with delay |
| 32 | PDBD | I | Photo detector Bch input with delay |

• IC703 (AN8389SE1): Focus coil/tracking coil/traverse motor/spindle motor drive

| Pin No. | Mark | I/O Division | Function |
|---------|-----------------|--------------|--|
| 1 | V _{cc} | I | Power supply terminal |
| 2 | VREF | I | Reference voltage input |
| 3 | IN4 | I | Motor driver (4) input |
| 4 | IN3 | I | Motor driver (3) input |
| 5 | GND | — | GND terminal |
| 6 | NC | — | Not used, connected to GND |
| 7 | NRESET | O | Reset terminal |
| 8 | GND | — | GND terminal |
| 9 | IN2 | I | Motor driver (2) input |
| 10 | PC2 | I | PC2 (power cut) input |
| 11 | IN1 | I | Motor driver (1) input |
| 12 | PC1 | I | PC1 (power cut) input (Not used, open) |

| Pin No. | Mark | I/O Division | Function |
|---------|--------------------|--------------|--------------------------------------|
| 13 | PV _{cc} 1 | I | Driver power supply (1) |
| 14 | PGND1 | — | Driver GND terminal (1) |
| 15 | D1- | O | Motor driver (1) output terminal (-) |
| 16 | D1+ | O | Motor driver (1) output terminal (+) |
| 17 | D2- | O | Motor driver (2) output terminal (-) |
| 18 | D2+ | O | Motor driver (2) output terminal (+) |
| 19 | D3- | O | Motor driver (3) output terminal (-) |
| 20 | D3+ | O | Motor driver (3) output terminal (+) |
| 21 | D4- | O | Motor driver (4) output terminal (-) |
| 22 | D4+ | O | Motor driver (4) output terminal (+) |
| 23 | PGND2 | — | Driver GND terminal (2) |
| 24 | PV _{cc} 2 | I | Driver power supply (2) |

• IC702 (MN662712RA): Servo processor/digital signal processor/digital filter/D/A converter

| Pin No. | Mark | I/O Division | Function |
|---------|-------------------|--------------|--|
| 1 | BCLK | O | Serial bit clock terminal |
| 2 | LRCK | O | L/R discriminating signal |
| 3 | SRDATA | O | Serial data (Not used, open) |
| 4 | DV _{DD1} | I | Power supply (digital circuit) terminal |
| 5 | DV _{SS1} | — | GND (digital circuit) terminal |
| 6 | TX | O | Digital audio interface signal |
| 7 | MCLK | I | Command clock signal |
| 8 | MDATA | I | Command data signal |
| 9 | MLD | I | Command load signal ("L": LOAD) |
| 10 | SENSE | O | Sense signal (OFT, FESL, NACEND, NAJEND, POSAD, SFG) |
| 11 | /FLOCK | O | Optical servo condition (focus) ("L": lead-in) |
| 12 | /TLOCK | O | Optical servo condition (tracking) ("L": lead-in) |
| 13 | BLKCK | O | Sub-code block clock (f=75Hz) (Not used, open) |
| 14 | SQCK | I | Sub-code Q register clock |
| 15 | SUBQ | O | Sub-code Q data |
| 16 | DMUTE | I | Muting input ("H": MUTE) (Not used, connected to GND) |
| 17 | STAT | O | Status signal (CRC, CUE, CLVS, TTSTOP, FCLV, SQCK) |
| 18 | /RST | I | Reset signal ("L": reset) |
| 19 | SMCK | O | System clock (f=4.2336MHz) (Not used, open) |
| 20 | PMCK | O | Frequency division clock signal (Not used, open) $(f = \frac{1}{1.92} \times ck = 88.2kHz)$ |
| 21 | TRV | O | Traverse servo control |

| Pin No. | Mark | I/O Division | Function |
|---------|--------|--------------|---|
| 22 | TVD | O | Traverse drive signal |
| 23 | PC | O | Turntable motor drive signal ("L": ON) |
| 24 | ECM | O | Turntable motor drive signal (Forced mode) |
| 25 | ECS | O | Turntable motor drive signal (Servo error signal) |
| 26 | KICK | O | Kick pulse output |
| 27 | TRD | O | Tracking drive signal output |
| 28 | FOD | O | Focus drive signal output |
| 29 | VREF | I | D/A drive output (TVD, ECS, TRD, FOD, FBAL, TBAL) normal voltage input terminal |
| 30 | FBAL | O | Focus balance adj. output (Not used, open) |
| 31 | TBAL | O | Tracking balance adj. output |
| 32 | FE | I | Focus error signal (analog input) |
| 33 | TE | I | Tracking error signal (analog input) |
| 34 | RFENV | I | RF envelope signal |
| 35 | VDET | I | Oscillation det. signal ("H": det.) |
| 36 | OFT | I | Off track signal ("H": Off track) |
| 37 | TRCRS | I | Track cross signal input |
| 38 | /RFDET | I | RF detection signal ("L": detection) |
| 39 | BDO | I | Dropout detection signal ("H": dropout) |
| 40 | LDON | O | Laser power control ("H": ON) |
| 41 | TES | O | Tracking error shunt output ("H": dropout) |
| 42 | PLAY | O | Play signal ("H": play) |

| Pin No. | Mark | I/O Division | Function |
|---------|-------------------|--------------|--|
| 43 | WVEL | O | Double velocity status signal ("H": double) |
| 44 | ARF | I | RF signal input |
| 45 | IREF | I | Reference current input |
| 46 | DRF | I | DSL bias terminal (Not used, open) |
| 47 | DSL F | I/O | DSL loop filter terminal |
| 48 | PLL F | I/O | PLL loop filter terminal |
| 49 | VCO F | I/O | VCO loop filter terminal (Not used, open) |
| 50 | AV _{DD2} | I | Power supply (analog circuit) terminal (2) |
| 51 | AV _{SS2} | — | GND (analog circuit) terminal |
| 52 | EFM | O | EFM signal (Not used, open) |
| 53 | PCK | O | PLL extract clock (f=4.3218MHz) |
| 54 | PDO | O | Phase compared signal of EFM and PCK (Not used, open) |
| 55 | SUBC | O | Sub-code serial output data (Not used, open) |
| 56 | SBCK | I | Sub-code serial input clock (Not used, connected to GND) |
| 57 | V _{SS} | — | GND terminal |
| 58 | X1 | I | Crystal oscillator terminal (f=16.9344 MHz) |
| 59 | X2 | O | |
| 60 | V _{DD} | I | Power supply terminal |
| 61 | BYTCK | O | Byte clock signal (Not used, open) |
| 62 | /CLDCK | O | Sub-code frame clock signal (f CLDCK=7.35kHz: Normal) (Not used, open) |




| Pin No. | Mark | I/O Division | Function |
|---------|-------------------|--------------|--|
| 63 | FCLK | O | Crystal frame clock (Not used, open) |
| 64 | IPFLAG | O | Interpolation flag terminal |
| 65 | FLAG | O | Flag terminal |
| 66 | CLVS | O | Turntable servo phase synch signal ("H": CLV, "L": Rough servo) (Not used, open) |
| 67 | CRC | O | Sub-code CRC check terminal ("H": OK, "L": NG) |
| 68 | DEMPH | O | De-emphasis ON signal ("H": ON) (Not used, open) |
| 69 | RESY | O | Re-synchronizing signal of frame sync. (Not used, open) |
| 70 | /RST2 | I | Reset terminal after "MASH" circuit |
| 71 | /TEST | I | Test terminal (Normal: "H") |
| 72 | AV _{DD1} | I | Power supply (analog circuit) terminal (1) |
| 73 | OUTL | O | Lch audio signal |
| 74 | AV _{SS1} | — | GND (analog circuit) terminal (1) |
| 75 | OUTR | O | Rch audio signal |
| 76 | RSEL | I | Polarity direction control terminal of RF signal |
| 77 | CSEL | I | Frequency control terminal of crystal oscillator (Not used, connected to GND) |
| 78 | PSEL | I | Test terminal (Normal: "L") |
| 79 | MSEL | I | "SMCK" terminal frequency select ("L": SMCK=4.2336 MHz) |
| 80 | SSEL | I | "SUBQ" terminal mode select ("H": Q code buffer) |


• IC401 (UPD78044A058): System control & FL drive

| Pin No. | Mark | I/O Division | Function |
|-------------|---------------|--------------|-------------------------------------|
| 1 } 7 | G7 } G1 | O | Grid signal of FL display |
| 8 | VDD | I | Power supply terminal |
| 9 | MCLK | O | Command clock signal |
| 10 | MDATA | O | Command data signal |
| 11 | MLD | O | Command load signal ("L" LOAD) |
| 12 | SENSE | I | Sense signal |
| 13 | DMUTE | O | Muting control signal |
| 14 | SQCK | O | Sub-code Q register clock |
| 15 | NC | — | Not connected |
| 16 | SUBQ | I | Sub-code Q data |
| 17 | /RESET | I | Reset signal input |
| 18 | ZSENSE | — | Not used, connected to GND |
| 19 | REC. EN | I | Synchro. rec. control terminal |
| 20 | AVSS | — | GND terminal |
| 21 | /RSTSV | O | Reset signal output |
| 22 | OPEN | I | Open detect terminal |
| 23 | DIR | O | Motor control signal |
| 24 | TRUN | O | |
| 25 | LOAD | O | Motor control signal |
| 26 | DAC | — | Not used, open |
| 27 | RESTSW | I | Rest position de |
| 28 | UP/DOWN | I | Traverse deck up/down det. terminal |
| 29 | AVDD | I | Power supply terminal |
| 30 | AVREF | I | Power supply terminal |
| 31 | XT1 | — | Not used, connected to GND |


| Pin No. | Mark | I/O Division | Function |
|---------------|---------------------------|--------------|--|
| 32 | XT2 | — | Not used, open |
| 33 | VSS | — | GND terminal |
| 34 | X1 | I | Crystal Osc terminal (F: 4.2336MHz) |
| 35 | X2 | O | |
| 36 } 42 | KEYIN 7 } KEYIN 1 | I | Key return signal |
| 43 | PWM | O | Motor control signal |
| 44 | POFF | I | Power det. terminal |
| 45 | POSITION | I | Rotary tray position det. terminal |
| 46 | SPEED | I | Loading motor speed sensor signal |
| 47 | REMOCON | I | Remote control signal input |
| 48 | IC | — | Not used, connected to GND |
| 49 | /TLOCK | I | Optical servo condition (tracking) input |
| 50 | /FLOCK | I | Optical servo condition (focus) input |
| 51 | STAT | I | Status signal (CRC, CUE, CLVS, TTSTOP, FCLV, SQCK) |
| 52 | VDD | I | Power supply terminal |
| 53 | POWER | O | Power ON/OFF output terminal |
| 54 | SYNCHRO | — | Not used, open |
| 55 } 60 | KEYOUT 6 } KEYOUT 1 | O | Key scan signal |
| 61 } 70 | S16 } S7 | O | Segment signal of FL display |
| 71 | VPP | I | Power supply terminal |
| 72 } 77 | S6 } S1 | O | Segment signal of FL display |
| 78 | EXDATA | O | Not used, open |
| 79 | EXCLK | O | Not used, open |
| 80 | G8 | O | Grid signal of FL display |

PRINTED CIRCUIT BOARDS (This printed circuit board diagram may be modified at any time with the development of new technology.)

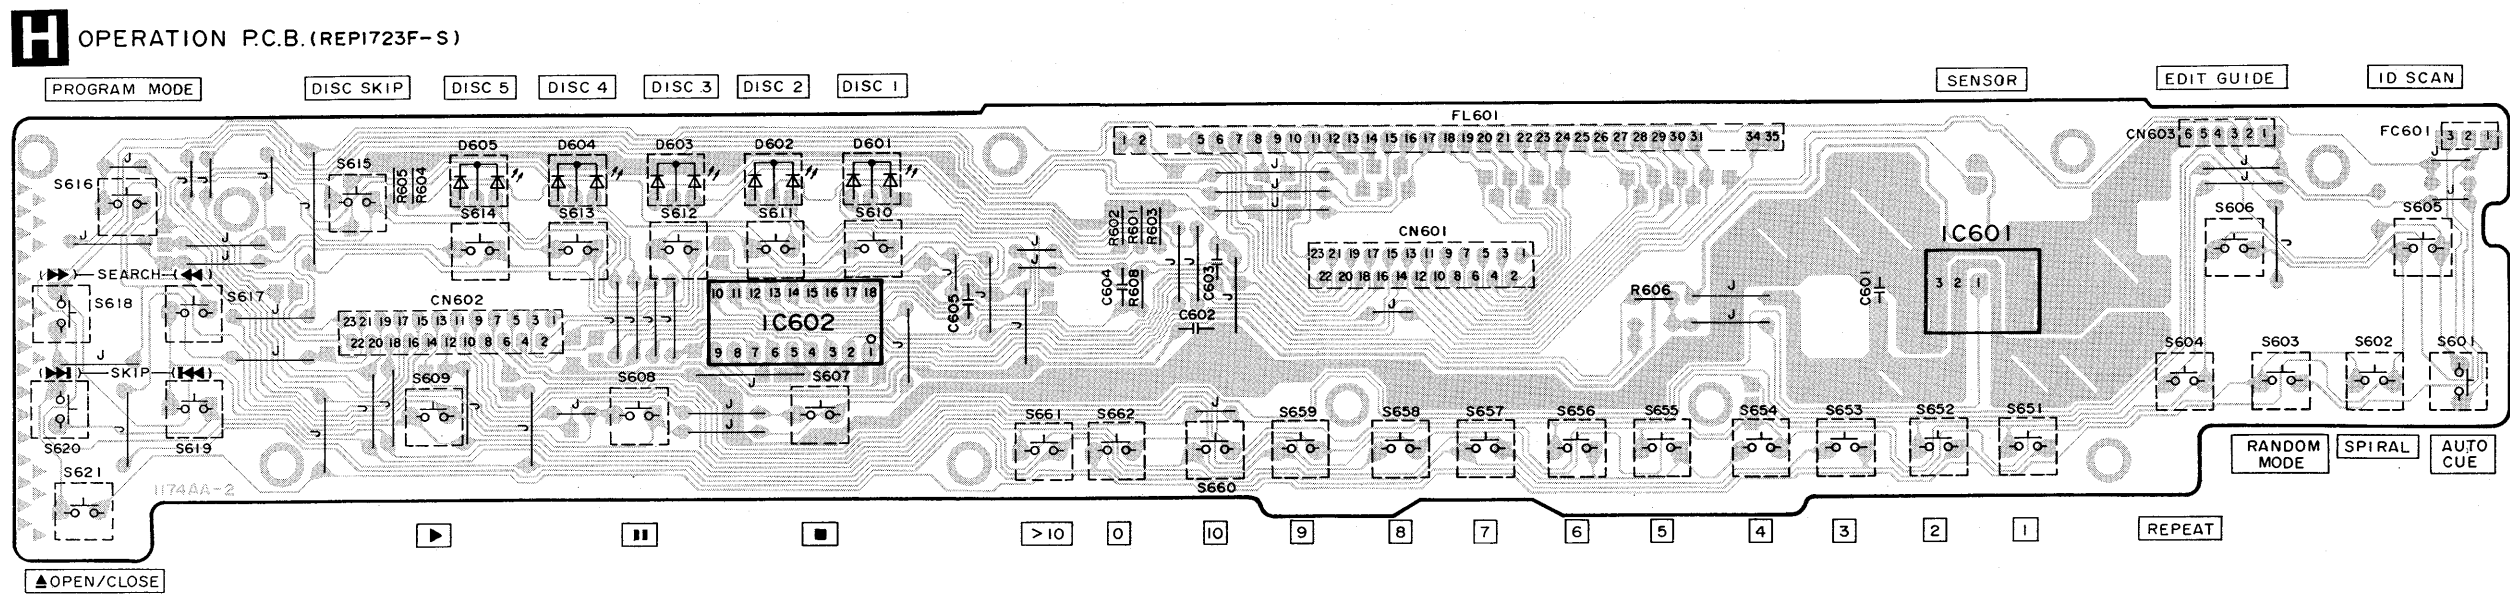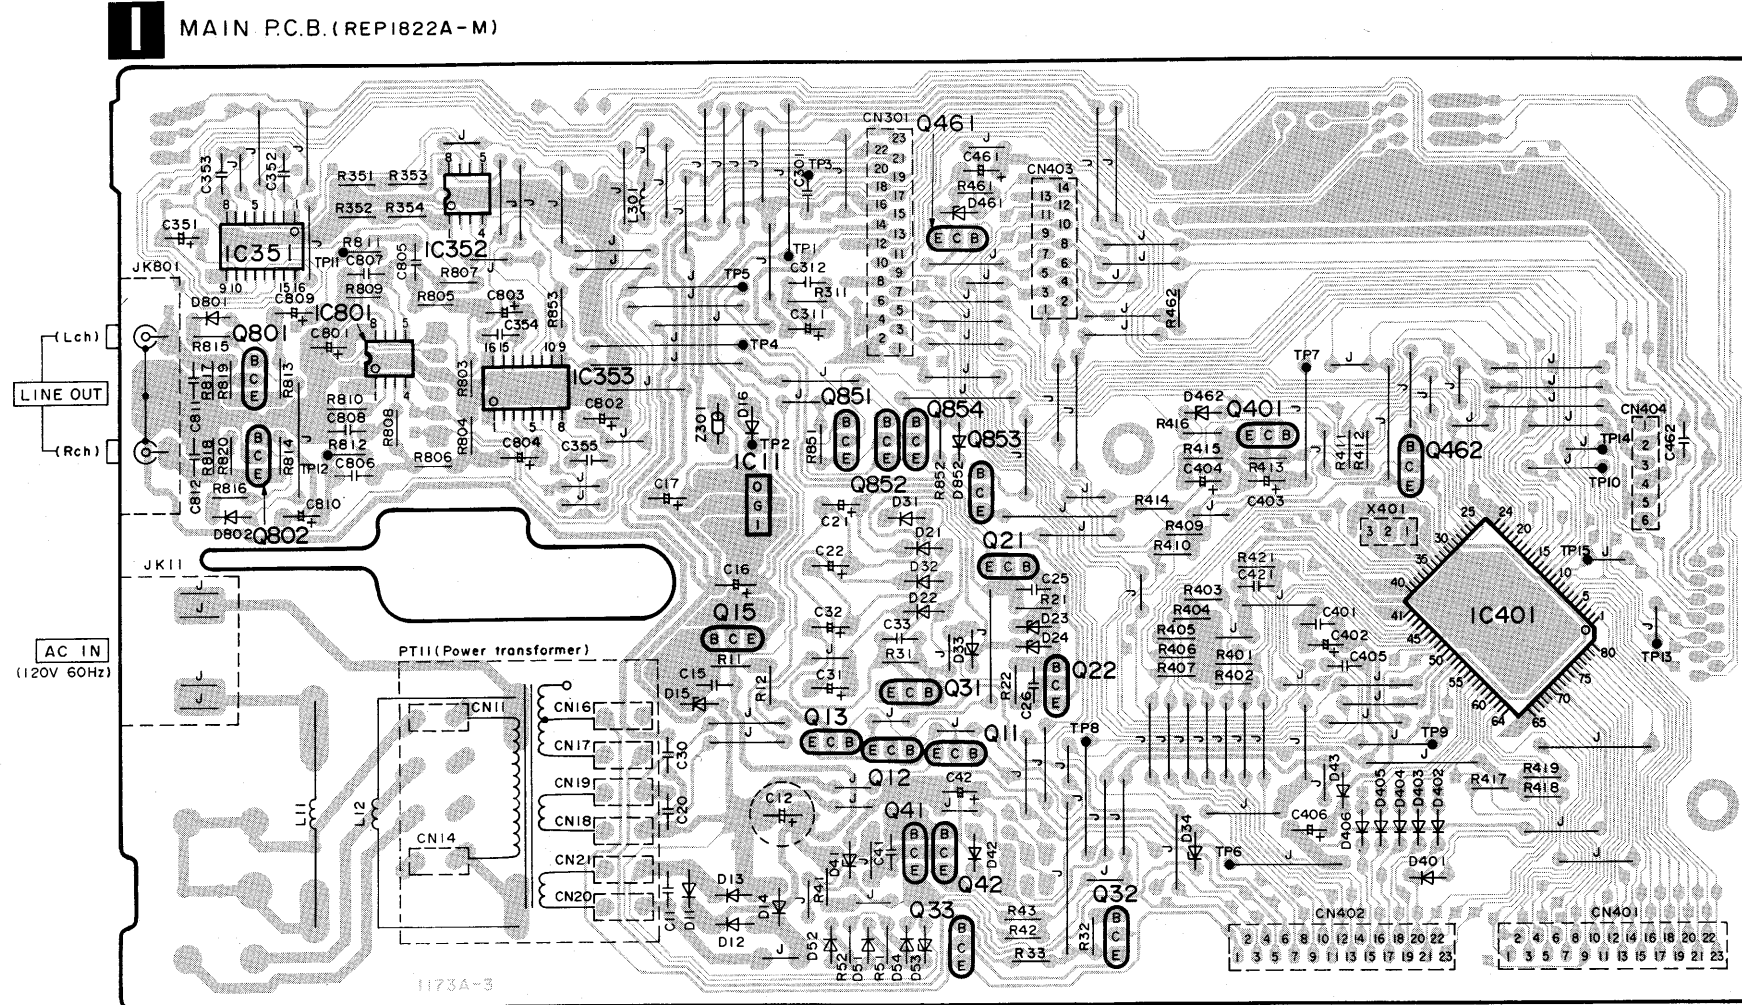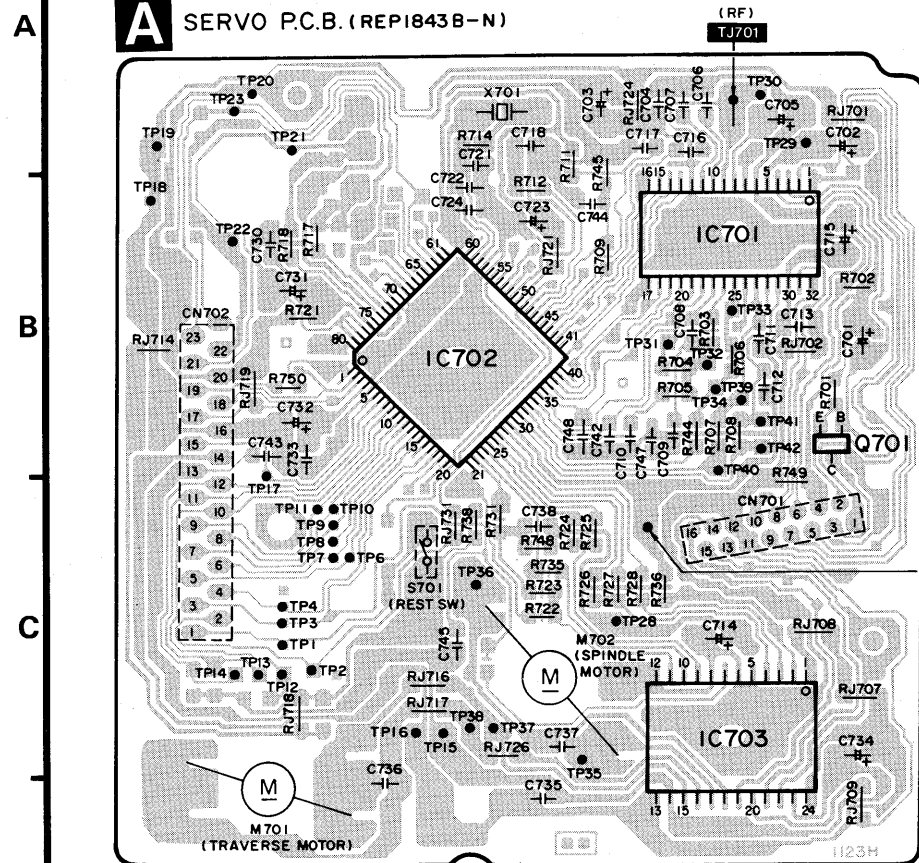


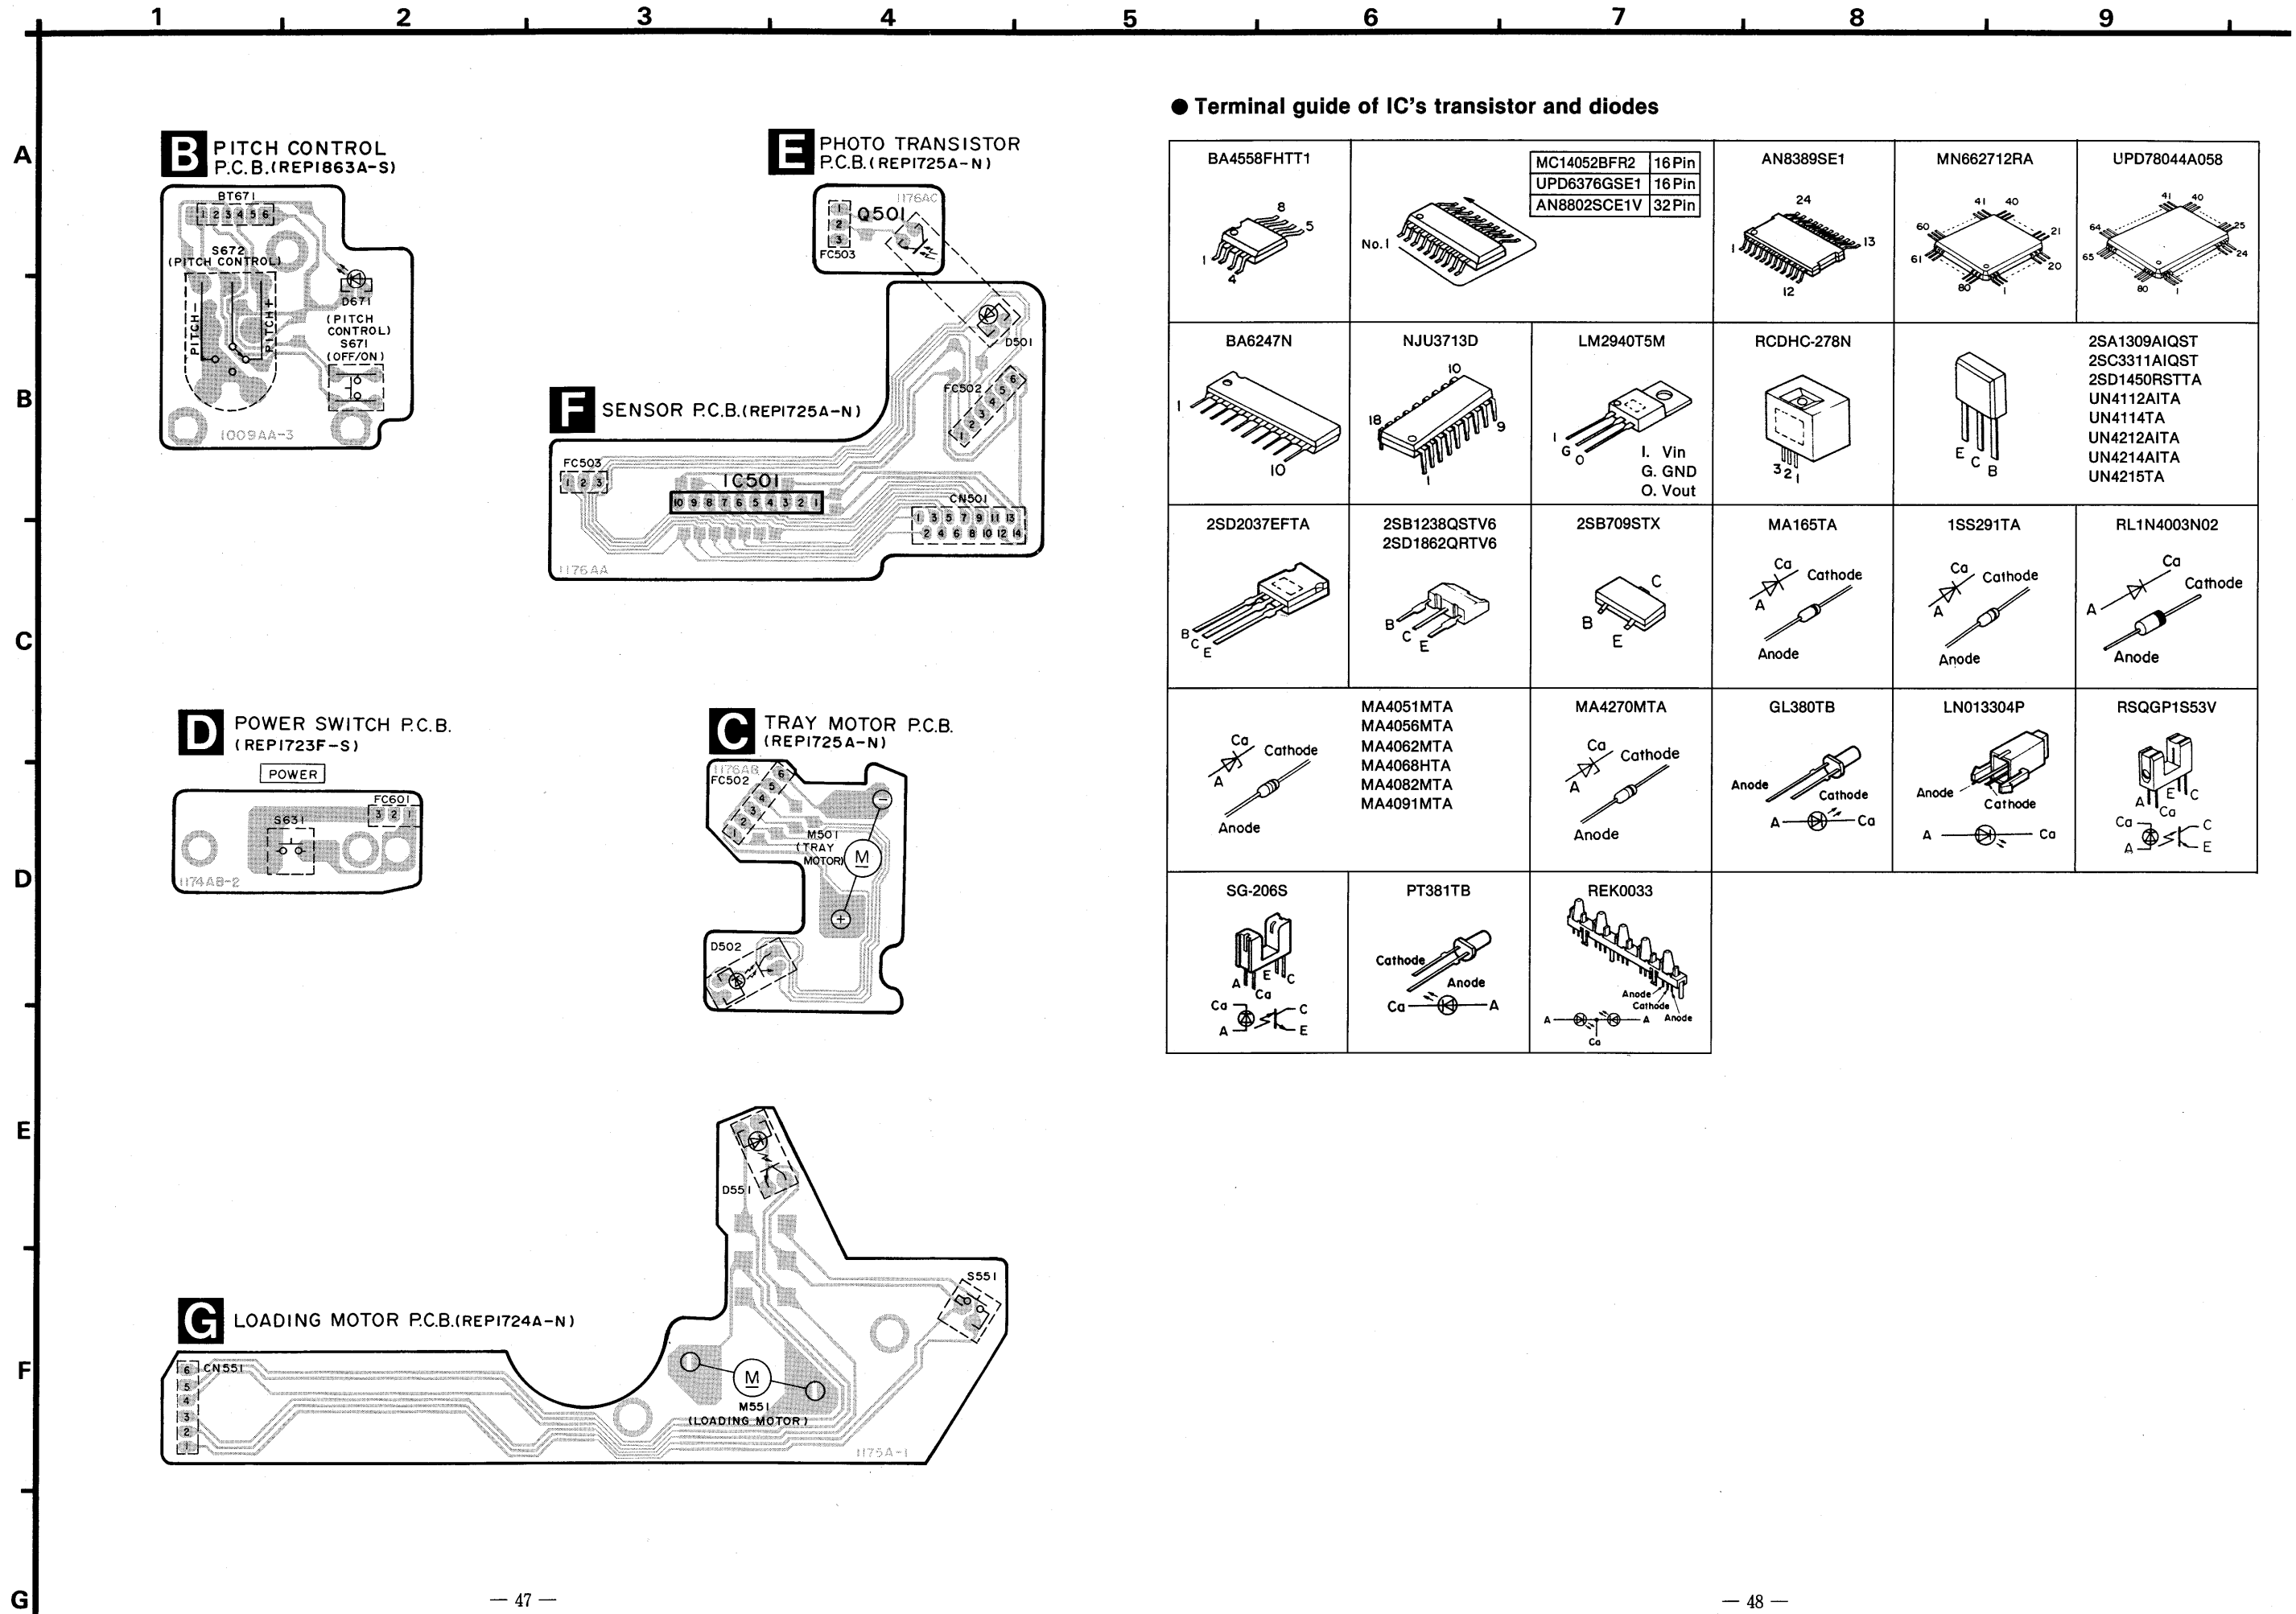


B PITCH CONTROL P.C.B.(REPI863A-S)

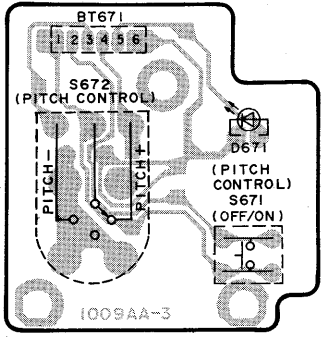


E PHOTO TRANSISTOR P.C.B.(REPI725A-N)

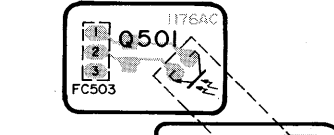


F SENSOR P.C.B.(REPI725A-N)

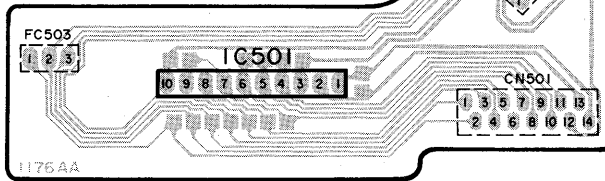


D POWER SWITCH P.C.B. (REPI723F-S)

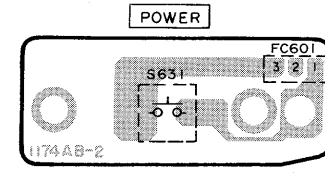

C TRAY MOTOR P.C.B. (REPI725A-N)

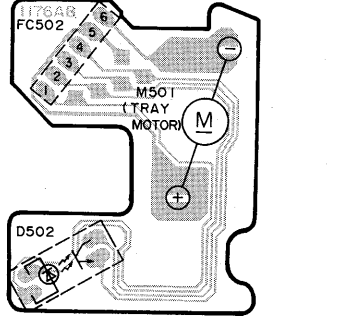


G LOADING MOTOR P.C.B.(REPI724A-N)

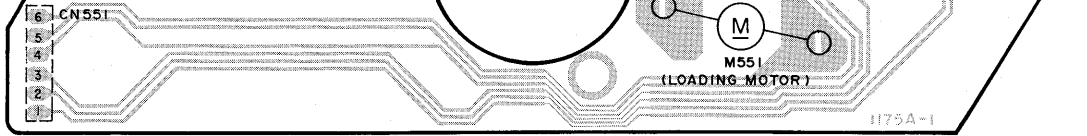

● Terminal guide of IC's transistor and diodes

| | | | | | | | | | | |
|--|---|---|-------------------|--|--------|-------------|--------|------------------|-------------------|---------------------|
| <p>BA4558FHTT1</p> | <table border="1"> <tr> <td>MC14052BFR2</td> <td>16 Pin</td> </tr> <tr> <td>UPD6376GSE1</td> <td>16 Pin</td> </tr> <tr> <td>AN8802SCE1V</td> <td>32 Pin</td> </tr> </table> | MC14052BFR2 | 16 Pin | UPD6376GSE1 | 16 Pin | AN8802SCE1V | 32 Pin | <p>AN8389SE1</p> | <p>MN662712RA</p> | <p>UPD78044A058</p> |
| MC14052BFR2 | 16 Pin | | | | | | | | | |
| UPD6376GSE1 | 16 Pin | | | | | | | | | |
| AN8802SCE1V | 32 Pin | | | | | | | | | |
| <p>BA6247N</p> | <p>NJU3713D</p> | <p>LM2940T5M</p> <p>I. Vin G. GND O. Vout</p> | <p>RCDHC-278N</p> | <p>2SA1309AIQST 2SC3311AIQST 2SD1450RSTTA UN4112AITA UN4114TA UN4212AITA UN4214AITA UN4215TA</p> | | | | | | |
| <p>2SD2037EFTA</p> | <p>2SB1238QSTV6 2SD1862QRTV6</p> | <p>2SB709STX</p> | <p>MA165TA</p> | <p>1SS291TA</p> | | | | | | |
| <p>MA4051MTA MA4056MTA MA4062MTA MA4068HTA MA4082MTA MA4091MTA</p> | <p>MA4270MTA</p> | <p>GL380TB</p> | <p>LN013304P</p> | <p>RSQGP1S53V</p> | | | | | | |
| <p>SG-206S</p> | <p>PT381TB</p> | <p>REK0033</p> | | | | | | | | |

WIRING CONNECTION DIAGRAM

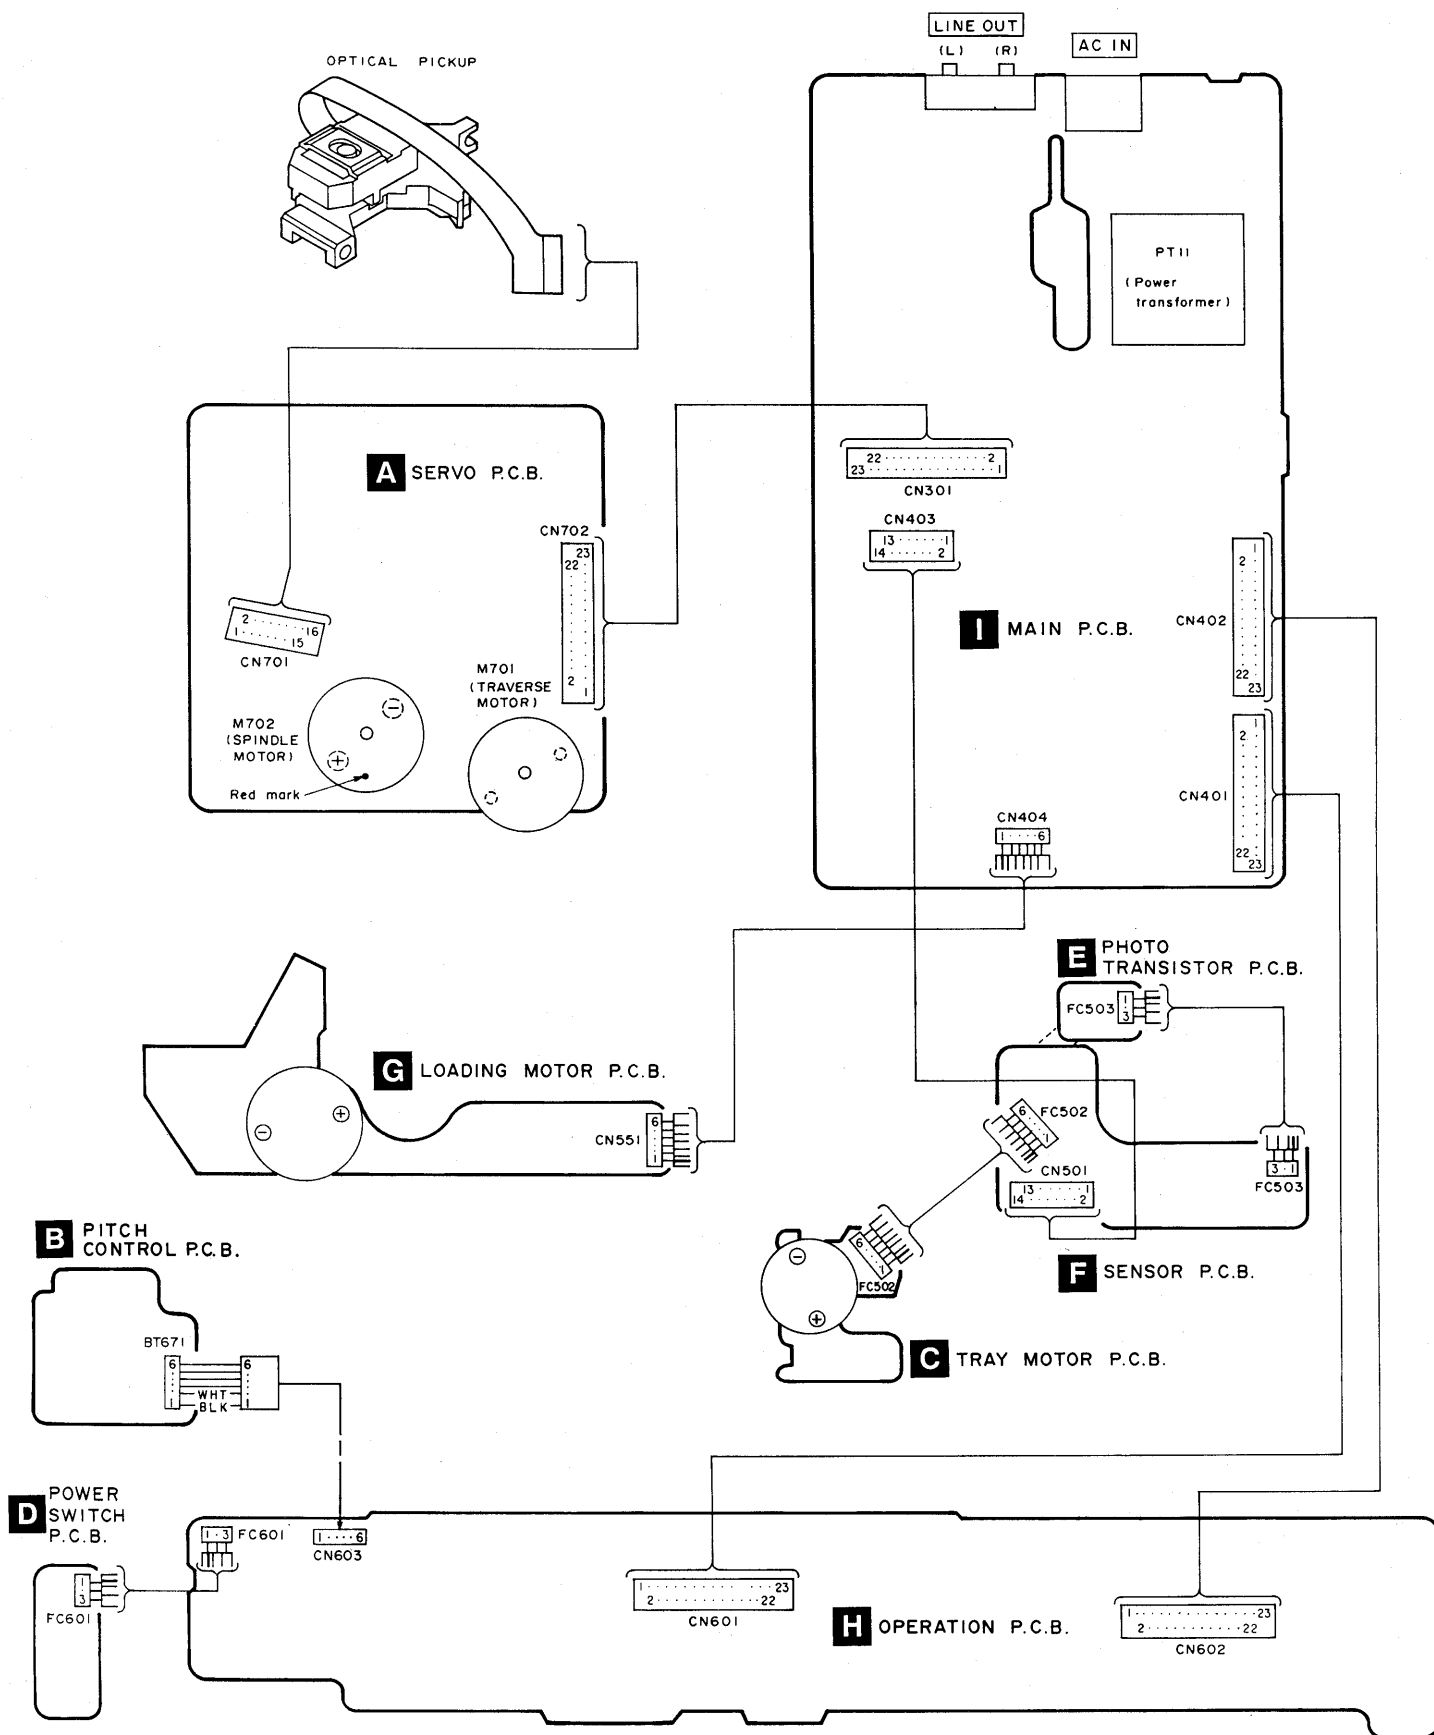

REPLACEMENT PARTS LIST


| Ref. No. | Part No. | Part Name & Description | Remarks | Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|----------|--------------|---------------------------|---------|
| | | CABINET AND CHASSIS | | 40 | RGU1015-K | POWER BUTTON | |
| | | | | 41 | RGU1017-K | SUB BUTTON | |
| 1 | RKM0193-K | CABINET | | 42 | RMG0200 | STOPPER TUBE | |
| 2 | SNE2129-3 | SCREW | | 43 | XTBS26+8J | SCREW | |
| 3 | XTBS3+8JFZ1 | SCREW | | 44 | XTB3+10JFZ | SCREW | |
| 4 | RDG0267 | REDUCTION GEAR | | 45 | XTB3+20J | SCREW | |
| 5 | RDG0268 | CLOSE LOCK GEAR | | 46 | XTB3+8JFZ | SCREW | |
| 6 | RDG0269 | OPEN LOCK GEAR | | 47 | RGL0098 | PANEL LIGHT | |
| 7 | RDV0031 | BELT | | 48 | RGU0878-K | PITCH CONTROL BUTTON | |
| 8 | RFKPLPD667PA | TRAY MOTOR(M501) ASS'Y | | 49 | RGU1044-Q | DISC BUTTON | |
| 9 | RMN0254 | LED HOLDER(D501, Q501) | | 50 | RGW0043 | PITCH CONTROL KNOB | |
| 10 | RMN0255 | SENSOR HOLDER | | 51 | RMCO245 | EARTH PLATE | |
| 11 | RMN0263 | MOTOR HOLDER | | | | LOADING MECHANISM | |
| 12 | REZ0648 | FFC(24P) | | 101 | RDG0270 | REDUCTION GEAR | |
| 13 | RFKNLPD1000E | TRAY ASS'Y | | 102 | RDG0271 | DRIVE GEAR(1) | |
| 13-1 | RMF0182 | TRAY FELT | | 103 | RDG0272 | DRIVE GEAR(2) | |
| 13-2 | RMG0200 | SILENT RUBBER | | 104 | RDK0025 | DRIVE CAM | |
| 13-3 | RMRO546-W | TRAY ROLLER | | 105 | RDPO050 | PULLEY GEAR | |
| 14 | RGTO019-1 | ROTARY TRAY | | 106 | RFKPLPD667PB | LOADING MOTOR(M551) ASS'Y | |
| 15 | RHM81001-1 | WASHER | | 107 | RHD26019 | SCREW | |
| 16 | RMB0365 | SPRING | | 108 | RMG0268-K | BELT | |
| 17 | RME0152 | LOCK GEAR SPRING | | 109 | RML0334 | DRIVE LEVER | |
| 18 | RMS0123-1 | RIVET | | 110 | RMNO117 | SLIDE PLATE(1) | |
| 19 | XTB3+10G | SCREW | | 111 | RMNO118 | SLIDE PLATE(2) | |
| 20 | XTWS3+10T | SCREW | | 112 | RMRO746-W | REINFORCING PLATE | |
| 21 | XWE3D13 | WASHER | | 113 | RFKNLPD667PB | MECHANISM BASE ASS'Y | |
| 22 | REZ0623 | FLAT CABLE(6P) | | 114 | RXQ0346 | SLIDER ASS'Y | |
| 23 | REZ0635 | FFC(23P) | | 115 | XTB3+10JFZ | SCREW | |
| 24 | REZ0636 | FFC(23P) | | 116 | RAE0113Z | TRAVERSE DECK ASS'Y | |
| 25 | REZ0637 | FFC(23P) | | 116-1 | SHGD112 | FLOATING RUBBER(1) | |
| 26 | RGRO184A1G | REAR PANEL | | 116-2 | SHGD113-1 | FLOATING RUBBER(2) | |
| 27 | RFKJLPD667PK | CHASSIS ASS'Y | | 116-3 | SNSD38 | SCREW | |
| 27-1 | RKA0053-A | FOOT | | 117 | RME0109 | FLOATING SPRING(1) | |
| 28 | RMRO749-W | CABLE HOLDER | | 118 | RME0142 | FLOATING SPRING(2) | |
| 29 | RMRO742-K | TRAY BASE GUIDE(L) | | 119 | RMRO698-K | TRAVERSE CHASSIS | |
| 30 | RMRO743-K | TRAY BASE GUIDE(R) | | 120 | RMS0123-1 | TRAVERSE FIXED PIN(1) | |
| 31 | RMRO765-W1 | TRANSFORMER BASE | | 121 | RMS0350 | TRAVERSE FIXED PIN(2) | |
| 32 | RHM245ZA | MAGNET | | 122 | XTV2+6G | SCREW | |
| 33 | RMRO334 | FIXED PLATE | | 123 | RMX0094 | TRAY HOLDER | |
| 34 | RMRO744-W | CLAMP PLATE | | 124 | XTN2+6G | SCREW | |
| 35 | RMRO761-W | CLAMPER | | | | | |
| 36 | RMNO185-1 | FL HOLDER | | | | | |
| 37 | RFKGLPD987PP | FRONT PANEL ASS'Y | | | | | |
| 37-1 | RGK0611C-K | FRONT ORNAMENT PLATE | | | | | |
| 38 | RGU1043-K | MAIN BUTTON | | | | | |
| 39 | RGU1019-K | 10 KEY BUTTON | | | | | |

LOADING MECHANISM PARTS


Note: When changing mechanism parts, apply the specified grease to the areas marked "x x" as shown in the drawing.

| Ref. No. | Part No. |
|----------|-----------|
| ① | RFKXPG671 |

A
B
C
D
E
F
G

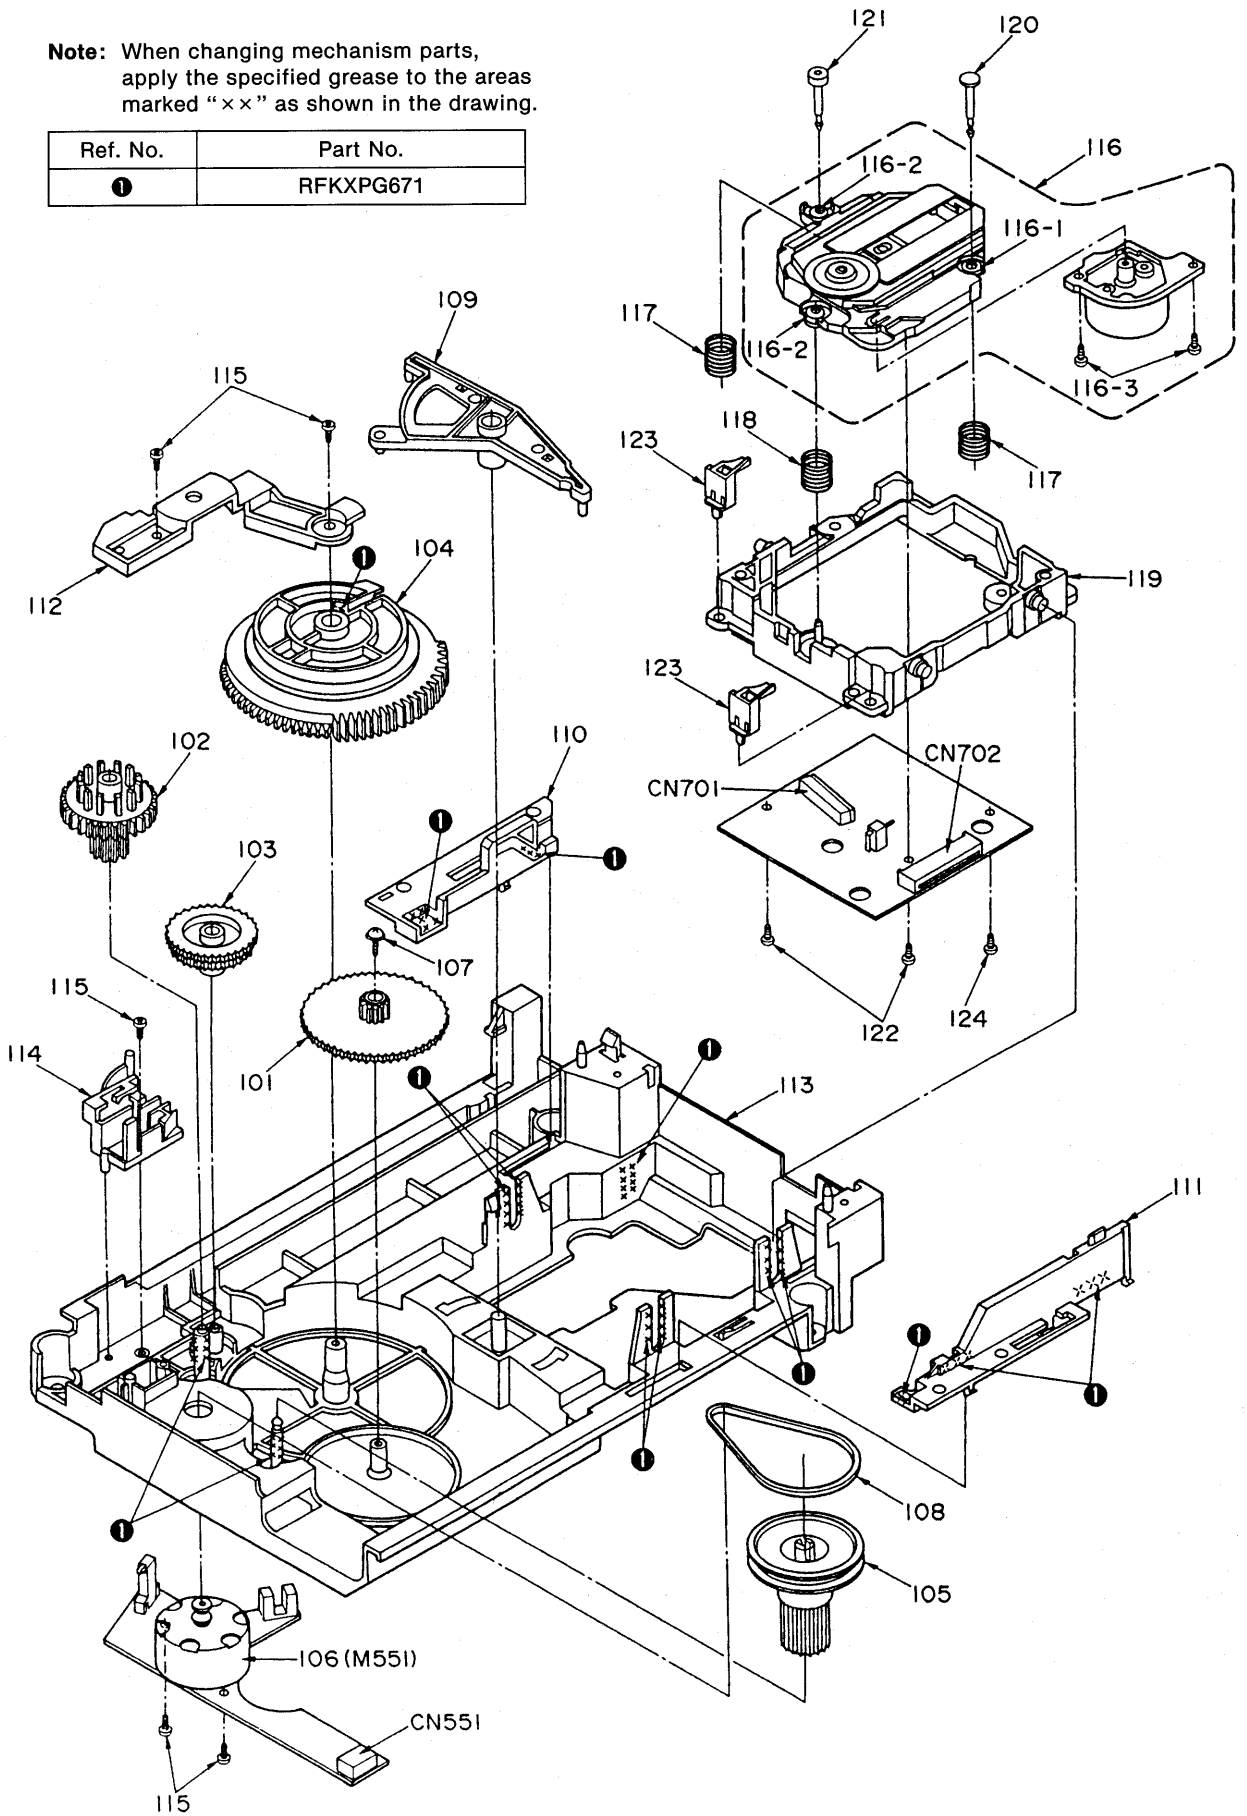

■ CABINET PARTS LOCATION

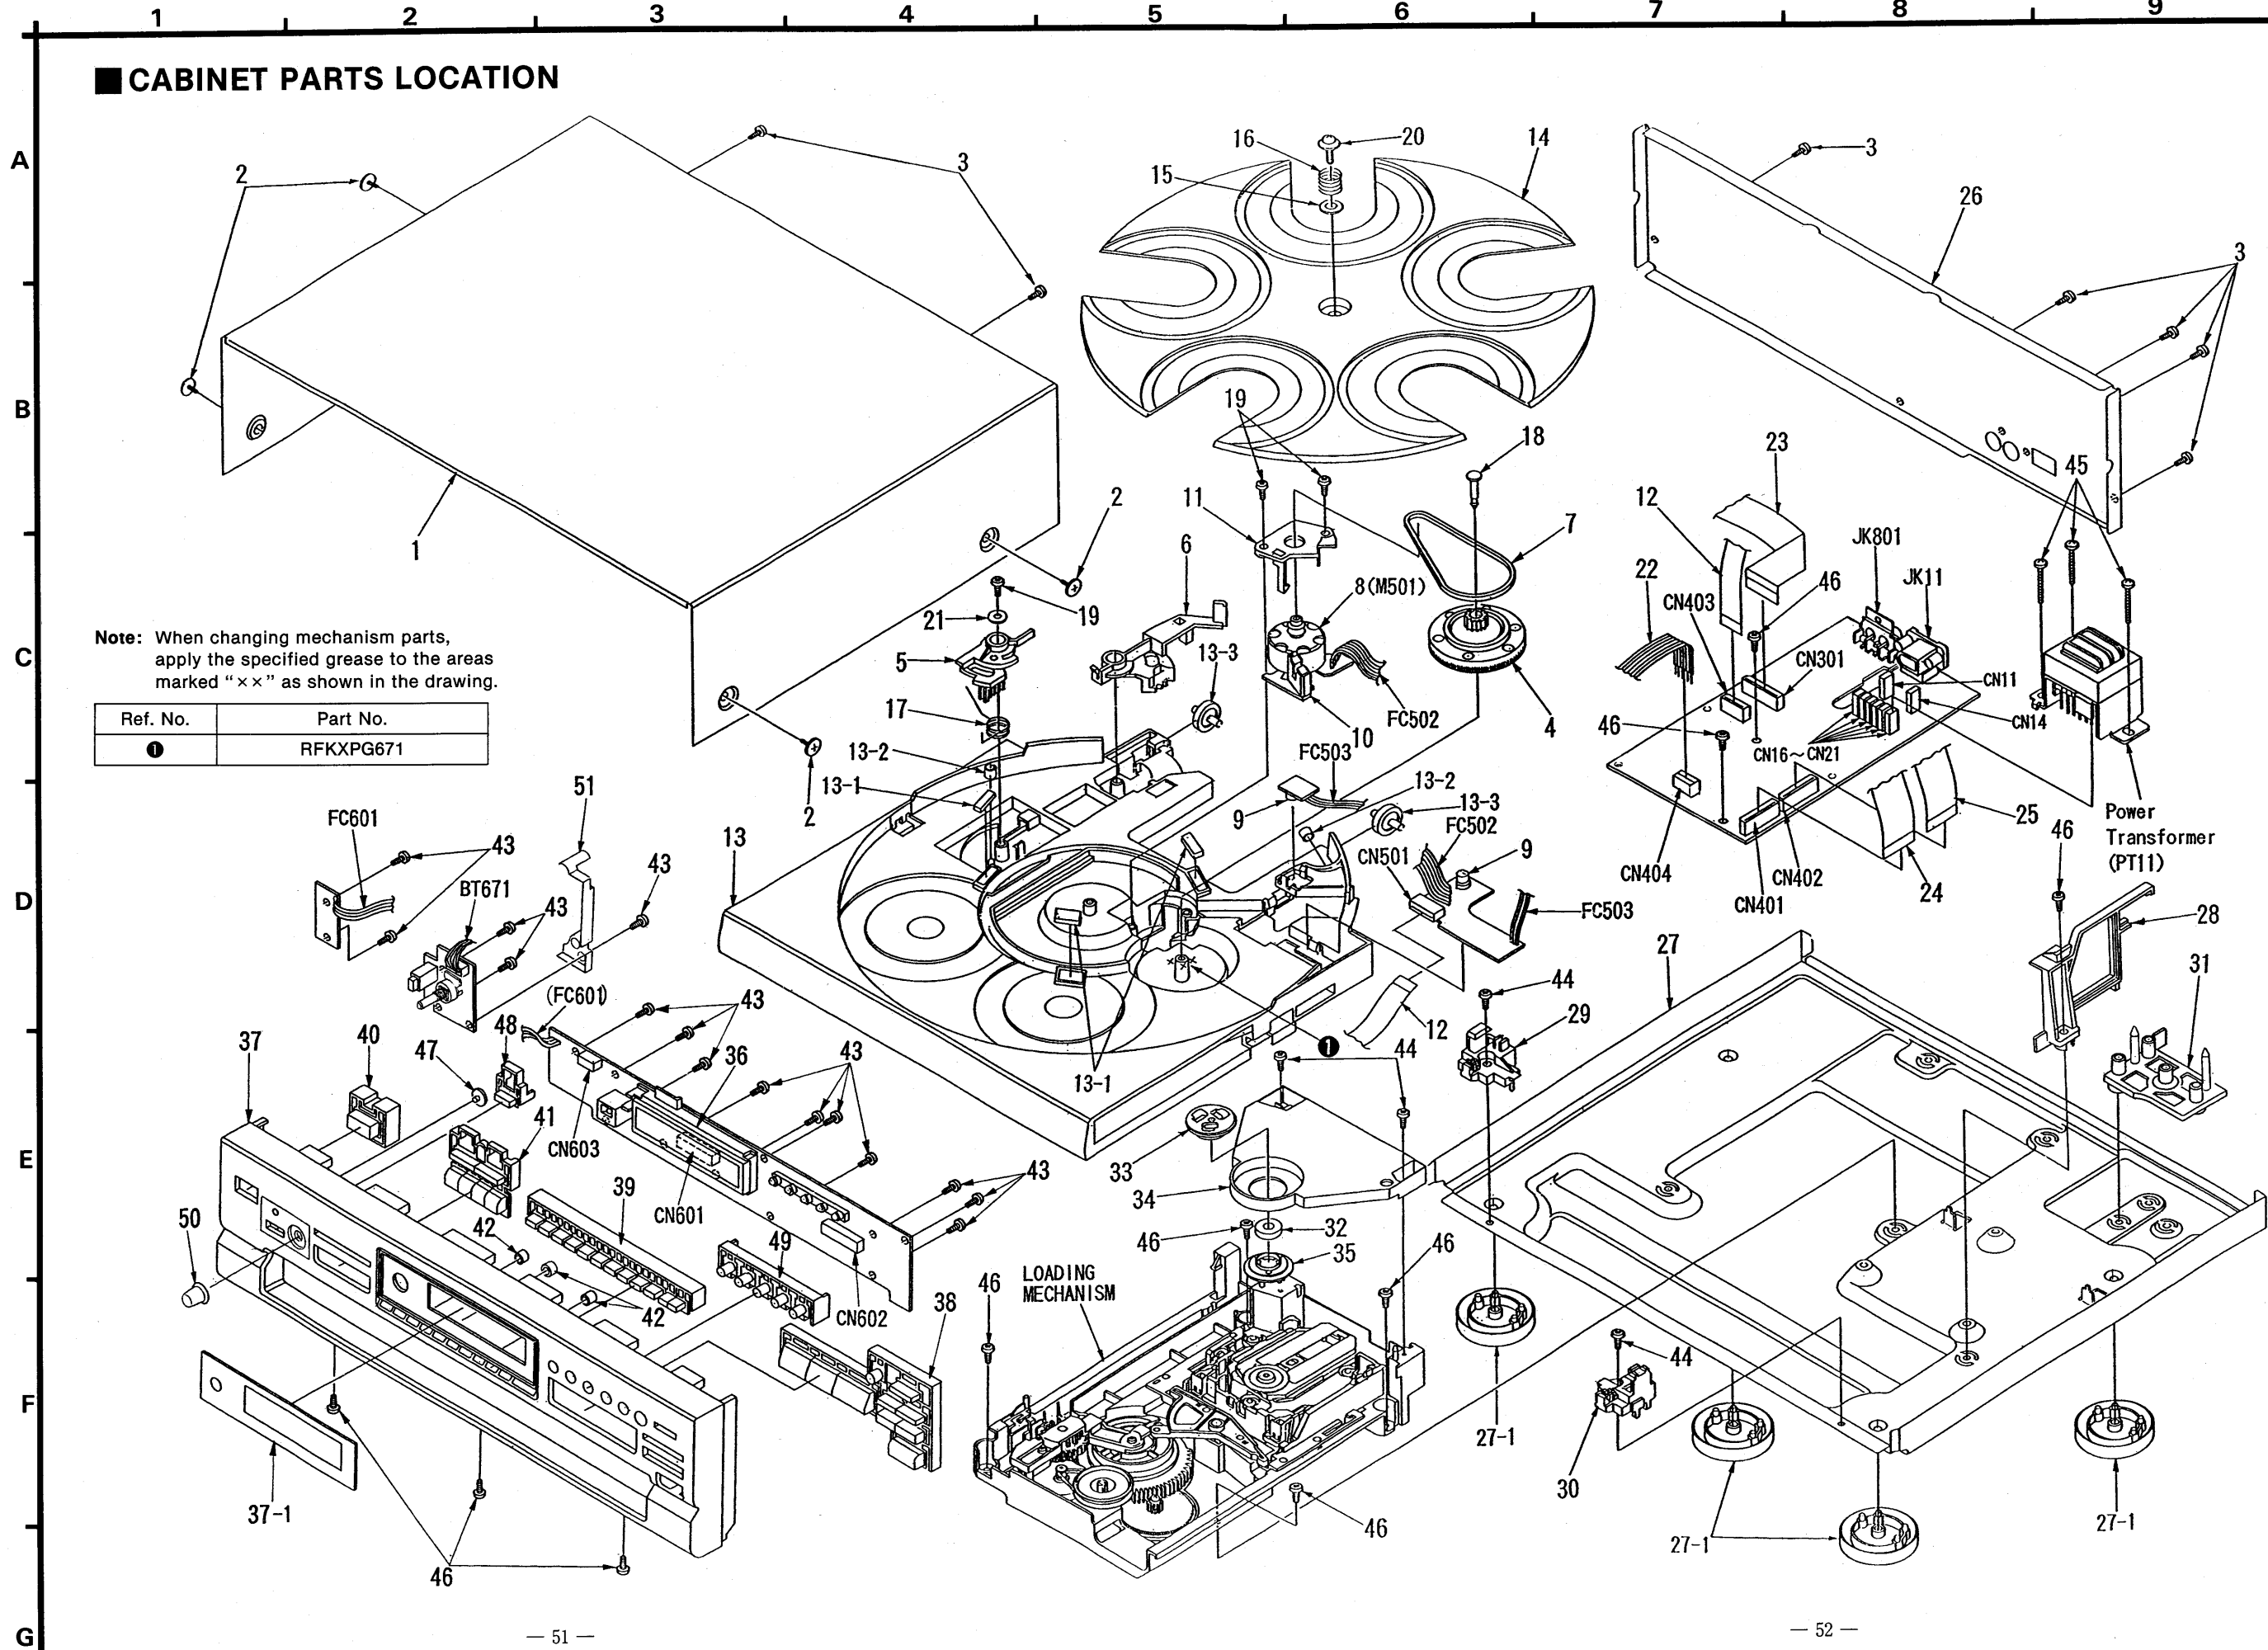

Note: When changing mechanism parts, apply the specified grease to the areas marked "x" as shown in the drawing.

| Ref. No. | Part No. |
|----------|-----------|
| ● | RFKXPG671 |

REPLACEMENT PARTS LIST

Notes: *Important safety notice:

 Components identified by Δ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

*Warning: This product uses a laser diode. Refer to caution statements on page 2.

| Ref. No. | Part No. | Part Name & Description | Remarks | Ref. No. | Part No. | Part Name & Description | Remarks |
|-----------|--------------|-------------------------|----------|-----------|--------------|--------------------------|----------|
| | | INTEGRATED CIRCUIT (S) | | D54 | MA165 | DIODE | |
| | | | | D401-406 | MA165 | DIODE | |
| | | | | D461 | MA4068HTA | DIODE | |
| IC11 | LM2940T5 | REGULATOR | Δ | D462 | MA4056MTA | DIODE | |
| IC351 | UPD6376GSE1 | D/A CONVERTER | | D501 | GL380TB | L. E. D. | |
| IC352 | BA4558FHTT1 | L. P. F. AMP. | | D502 | RSQGP1S53V | DIODE | |
| IC353 | MC14052BFR2 | SWITCHING | | D551 | SG-206S | DIODE | |
| IC401 | UPD78044A058 | SYSTEM CONTROL&FL DRIVE | | D601-605 | REK0033 | L. E. D. BLOCK | |
| IC501 | BAG247N | MOTOR DRIVE | | D671 | LN013304P | L. E. D. | |
| IC601 | RCDHC-278N | REMOTE CONTROL SENSOR | | D801, 802 | MA165 | DIODE | |
| IC602 | NJU3713D | LED DRIVE | | D852 | MA165 | DIODE | |
| IC801 | BA4558FHTT1 | L. P. F. AMP. | | | | COIL (S) | |
| | | TRANSISTOR(S) | | L11, 12 | RLQX400MT-D | COIL | Δ |
| Q11 | UN4214TA | TRANSISTOR | | L301 | ELEXT1R2KA9 | COIL | |
| Q12, 13 | UN4114TA | TRANSISTOR | | | | TRANSFORMER(S) | |
| Q15 | 2SD2037EFTA | TRANSISTOR | Δ | | | | |
| Q21 | 2SC3311AIQST | TRANSISTOR | Δ | PT11 | RTP1K4C019-X | POWER TRANSFORMER | Δ |
| Q22 | 2SA1309AIQST | TRANSISTOR | Δ | | | COMPONENT COMBINATION(S) | |
| Q31 | 2SB1238QSTV6 | TRANSISTOR | Δ | | | | |
| Q32, 33 | 2SD1450RTA | TRANSISTOR | | Z301 | BL02RN2R65T2 | COMBINATION PART | |
| Q41, 42 | 2SD1862QRTV6 | TRANSISTOR | Δ | | | OSCILLATOR(S) | |
| Q401 | 2SC3311AIQST | TRANSISTOR | | X401 | RSXY4M23M01T | OSCILLATOR (4. 2336MHz) | |
| Q461, 462 | UN4215 | TRANSISTOR | | | | DISPLAY TUBE (S) | |
| Q501 | PT381TB | TRANSISTOR | | FL601 | RSL0170-F | DISPLAY TUBE | |
| Q801, 802 | 2SD1450RTA | TRANSISTOR | | | | SWITCH(ES) | |
| Q851 | UN4112AITA | TRANSISTOR | | S551 | RSHIA005 | OPEN/CLOSE DETECTOR | |
| Q852 | UN4212TA | TRANSISTOR | | S601 | EVQ21405R | AUTO CUE | |
| Q853 | UN4112AITA | TRANSISTOR | | S602 | EVQ21405R | SPIRAL | |
| Q854 | UN4212TA | TRANSISTOR | | S603 | EVQ21405R | RANDOM MODE | |
| | | DIODE(S) | | S604 | EVQ21405R | REPEAT | |
| D11-14 | RL1N4003N02 | DIODE | Δ | S605 | EVQ21405R | ID SCAN | |
| D15 | MA4091-M | DIODE | Δ | S606 | EVQ21405R | EDIT GUIDE | |
| D16 | RL1N4003N02 | DIODE | | S607 | EVQ21405R | STOP | |
| D21, 22 | RL1N4003N02 | DIODE | Δ | S608 | EVQ21405R | PAUSE | |
| D23, 24 | MA4082MTA | DIODE | Δ | S609 | EVQ21405R | PLAY | |
| D31, 32 | RL1N4003N02 | DIODE | Δ | S610 | EVQ21405R | DISC 1 | |
| D33 | MA4270 | DIODE | Δ | S611 | EVQ21405R | DISC 2 | |
| D34 | MA4091-M | DIODE | Δ | | | | |
| D41 | MA4062MTA | DIODE | Δ | | | | |
| D42 | MA165 | DIODE | | | | | |
| D43 | 1SS291TA | DIODE | | | | | |
| D51, 52 | MA165 | DIODE | Δ | | | | |
| D53 | MA4051MTA | DIODE | Δ | | | | |

| Ref. No. | Part No. | Part Name & Description | Remarks | Ref. No. | Part No. | Part Name & Description | Remarks |
|------------|-------------|-------------------------|---------|----------|--------------|----------------------------|---------|
| S612 | EVQ21405R | DISC 3 | | | | <SERVO P. C. B. > | |
| S613 | EVQ21405R | DISC 4 | | | | INTEGRATED CIRCUIT(S) | |
| S614 | EVQ21405R | DISC 5 | | | | | |
| S615 | EVQ21405R | DISC SKIP | | IC701 | AN8802SCE1V | SERVO AMP | |
| S616 | EVQ21405R | PROGRAM MODE | | IC702 | MN662712RA | SERVO PROCESSOR | |
| S617 | EVQ21405R | R. SEARCH | | IC703 | AN8389SE1 | MOTOR DRIVE | |
| S618 | EVQ21405R | F. SEARCH | | | | TRANSISTOR(S) | |
| S619 | EVQ21405R | R. SKIP | | | | | |
| S620 | EVQ21405R | F. SKIP | | | | | |
| S621 | EVQ21405R | OPEN/CLOSE | | Q701 | 2SB709S | TRANSISTOR | |
| S631 | EVQ21405R | POWER | | | | OSCILLATOR(S) | |
| S651 | EVQ21405R | NUMERIC 1 | | | | | |
| S652 | EVQ21405R | NUMERIC 2 | | | | | |
| S653 | EVQ21405R | NUMERIC 3 | | X701 | RSXZ16M9M02T | OSCILLATOR (16. 9344MHz) | |
| S654 | EVQ21405R | NUMERIC 4 | | | | SWITCH(ES) | |
| S655 | EVQ21405R | NUMERIC 5 | | | | | |
| S656 | EVQ21405R | NUMERIC 6 | | S701 | RSM0006-P | REST DETECTOR | |
| S657 | EVQ21405R | NUMERIC 7 | | | | CONNECTOR(S) AND SOCKET(S) | |
| S658 | EVQ21405R | NUMERIC 8 | | | | | |
| S659 | EVQ21405R | NUMERIC 9 | | | | | |
| S660 | EVQ21405R | NUMERIC 10 | | | | | |
| S661 | EVQ21405R | NUMERIC >10 | | CN701 | RJU035T016-1 | SOCKET (16P) | |
| S662 | EVQ21405R | NUMERIC 0 | | CN702 | RJS1A6723-1Q | CONNECTOR (23P) | |
| S671 | EVQB005R | PITCH CONTROL OFF/ON | | | | | |
| S672 | RSR2A003-A | PITCH CONTROL -/+ | | | | | |
| | | CONNECTOR(S) | | | | | |
| | | | | | | | |
| CN11 | RJS1A1101T1 | CONNECTOR (1P) | | | | | |
| CN14 | RJS1A1101T1 | CONNECTOR (1P) | | | | | |
| CN16-21 | RJS1A1101T1 | CONNECTOR (1P) | | | | | |
| CN301 | RJS1A6823 | CONNECTOR (23P) | | | | | |
| CN401, 402 | RJS1A6823 | CONNECTOR (23P) | | | | | |
| CN403 | RJS1A6814 | CONNECTOR (14P) | | | | | |
| CN404 | RJS1A6606 | CONNECTOR (6P) | | | | | |
| CN501 | RJS1A6714 | CONNECTOR (14P) | | | | | |
| CN551 | RJS2A1506 | CONNECTOR (6P) | | | | | |
| CN601, 602 | RJS1A6223-1 | CONNECTOR (23P) | | | | | |
| CN603 | RJP6G20ZA | CONNECTOR (6P) | | | | | |
| BT671 | REX0493 | CONNECTOR (6P) | | | | | |
| | | JACK(S) | | | | | |
| | | | | | | | |
| JK11 | SJSD16 | AC INLET | △ | | | | |
| JK801 | RJH3201N | LINE OUT | | | | | |
| | | FLAT CABLE(S) | | | | | |
| | | | | | | | |
| FC502 | REZ0612 | FLAT CABLE (6P) | | | | | |
| FC503 | REZ0613 | FLAT CABLE (3P) | | | | | |
| FC601 | REZ0610 | FLAT CABLE (3P) | | | | | |

RESISTORS AND CAPACITORS

Notes : * Capacity values are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
* Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM), 1M=1,000k (OHM)

| Ref. No. | Part No. | Values & Remarks | Ref. No. | Part No. | Values & Remarks | Ref. No. | Part No. | Values & Remarks |
|-----------|--------------|--------------------|-----------|--------------|-------------------|-----------|--------------|------------------|
| | | RESISTORS | C25, 26 | ECBT1H102KB5 | 50V 1000P | R724 | ERJ6GEYJ333V | 1/10W 33K |
| | | | C30 | ECBT1E103ZF | 25V 0.01U | R725 | ERJ6GEYJ472V | 1/10W 4.7K |
| | | | C31, 32 | RCE1HM470BV | 50V 47U | R726 | ERJ6GEYJ473V | 1/10W 47K |
| R11, 12 | ERDS2TJ151 | 1/4W 150 | C33 | ECBT1H102KB5 | 50V 1000P | R727 | ERJ6GEYJ103V | 1/10W 10K |
| R21, 22 | ERDS2TJ122 | 1/4W 1.2K | C41 | ECBT1H102KB5 | 50V 1000P | R728 | ERJ6GEYJ392V | 1/10W 3.9K |
| R31 | ERDS2TJ123 | 1/4W 12K | C42 | RCE0JKA101BV | 6.3V 100U | R731 | ERJ6GEYJ392V | 1/10W 3.9K |
| R32, 33 | ERDS2TJ103 | 1/4W 10K | C301 | ECBT1C103NS5 | 16V 0.01U | R735, 736 | ERJ6GEYJ101V | 1/10W 100 |
| R41 | ERDS2TJ471 | 1/4W 470 | C311 | ECEA1HKA010B | 50V 1U | R738 | ERJ6GEYJ223V | 1/10W 22K |
| R42, 43 | ERDS2TJ2R2T | 1/4W 2.2 | C312 | ECBT1C103NS5 | 16V 0.01U | R744 | ERJ6GEYJ103V | 1/10W 10K |
| R51, 52 | ERDS2TJ122 | 1/4W 1.2K | C351 | RCE0JKA221BV | 6.3V 220U | R745 | ERJ6GEYJ155V | 1/10W 1.5M |
| R311 | ERDS2TJ471 | 1/4W 470 | C352-355 | ECBT1C103NS5 | 16V 0.01U | R748 | ERJ6GEYJ182V | 1/10W 1.8K |
| R351, 352 | ERDS2TJ272T | 1/4W 2.7K | C401 | ECBT1C103NS5 | 16V 0.01U | R749 | ERJ8GEYJ103V | 1/8W 10K |
| R353, 354 | ERDS2TJ152 | 1/4W 1.5K | C402 | RCE0JM471BV | 6.3V 470U | R750 | ERJ6GEYJ102A | 1/10W 1K |
| R401-407 | ERDS2TJ472 | 1/4W 4.7K | C403 | ECEA1HKA010B | 50V 1U | | | CHIP JUMPERS |
| R409 | ERDS2TJ102 | 1/4W 1K | C404 | ECEA1EKA4R7B | 25V 4.7U | | | |
| R410 | ERDS2TJ103 | 1/4W 10K | C405 | ECBT1C103NS5 | 16V 0.01U | R714 | ERJ6GEYOR00A | CHIP JUMPER |
| R411 | ERDS2TJ472 | 1/4W 4.7K | C406 | ECEA1HKA010B | 50V 1U | J701, 702 | ERJ8GEYOR00A | CHIP JUMPER |
| R412 | ERDS2TJ223 | 1/4W 22K | C421 | ECBT1C103NS5 | 16V 0.01U | J707-709 | ERJ8GEYOR00A | CHIP JUMPER |
| R413 | ERDS2TJ103 | 1/4W 10K | C461 | RCE1AKA470BG | 10V 47U | J714 | ERJ8GEYOR00A | CHIP JUMPER |
| R414 | ERDS2TJ471 | 1/4W 470 | C462 | ECBT1C103NS5 | 16V 0.01U | J716-719 | ERJ8GEYOR00A | CHIP JUMPER |
| R415 | ERDS2TJ103 | 1/4W 10K | C601 | ECFR1E104ZF5 | 25V 0.1U | J721 | ERJ6GEYOR00A | CHIP JUMPER |
| R416 | ERDS2TJ102 | 1/4W 1K | C602 | ECBT1C103NS5 | 16V 0.01U | J724 | ERJ6GEYOR00A | CHIP JUMPER |
| R417 | ERDS2TJ103 | 1/4W 10K | C603 | ECBT1H331KB5 | 50V 330P | J726 | ERJ6GEYOR00A | CHIP JUMPER |
| R418, 419 | ERDS2TJ821 | 1/4W 820 | C604 | ECBT1H102KB5 | 50V 1000P | J731 | ERJ6GEYOR00A | CHIP JUMPER |
| R421 | ERDS2TJ472 | 1/4W 4.7K | C605 | ECBT1C103NS5 | 16V 0.01U | | | CAPACITORS |
| R461 | ERDS2TJ271 | 1/4W 270 | C801, 802 | RCE1AKA470BG | 10V 47U | | | |
| R462 | ERDS2TJ221 | 1/4W 220 | C803, 804 | RCE1CKA100BG | 16V 10U | | | |
| R601-606 | ERDS2EJ121 | 1/4W 120 | C805-808 | ECCR1H391J5 | 50V 390P | C701 | ECEA0JKA220 | 6.3V 22U |
| R608 | ERDS2TJ122 | 1/4W 1.2K | C809, 810 | RCE0JKA470BG | 6.3V 47U | C702 | ECEA1HKA0101 | 50V 1U |
| R803, 804 | ERDS2TJ224T | 1/4W 220K | C811, 812 | ECBT1H102KB5 | 50V 1000P | C703 | ECEA0JKA1011 | 6.3V 100U |
| R805, 806 | ERDS2TJ822 | 1/4W 8.2K | | | <SERVO P. C. B. > | C704 | ECU21E104MBN | 25V 0.1U |
| R807, 808 | ERDS2TJ123 | 1/4W 12K | | | RESISTORS | C705 | ECEA1HKA0101 | 50V 1U |
| R809-812 | ERDS2TJ333 | 1/4W 33K | | | | C706 | ECUE1H101JCN | 50V 100P |
| R813-816 | ERDS2TJ102 | 1/4W 1K | R701 | ERJ6GEYJ100 | 1/10W 10 | C707 | ECUV1E273KBN | 25V 0.027U |
| R817, 818 | ERDS2TJ473 | 1/4W 47K | R702 | ERJ6GEYJ471V | 1/10W 470 | C708 | ECUE1H472KBN | 50V 4700P |
| R819, 820 | ERDS2TJ100 | 1/4W 10 | R703 | ERJ6GEYJ823 | 1/10W 82K | C709 | ECUE1C473KBN | 16V 0.047U |
| R851 | ERDS2TJ122 | 1/4W 1.2K | R704 | ERJ6GEYJ102A | 1/10W 1K | C710 | ECUE1H152KBN | 50V 1500P |
| R852 | ERDS2TJ102 | 1/4W 1K | R705 | ERJ6GEYJ103V | 1/10W 10K | C711, 712 | ECUW1E104ZFN | 25V 0.1U |
| R853 | ERDS2TJ103 | 1/4W 10K | R706 | ERJ6GEYJ102A | 1/10W 1K | C713 | ECUV1C104MBM | 16V 0.1U |
| | | CAPACITORS | R707 | ERJ6GEYJ473V | 1/10W 47K | C714 | ECEA0JKA1011 | 6.3V 100U |
| | | | R708 | ERJ6GEYJ104V | 1/10W 100K | C715 | ECEA0JKA4701 | 6.3V 47U |
| C11 | ECBT1E103ZF | 25V 0.01U | R709 | ERJ6GEYJ683V | 1/10W 68K | C716 | ECUE1H561KBN | 50V 560P |
| C12 | ECA1CM332B | 16V 3300U Δ | R711 | ERJ6GEYJ154V | 1/10W 150K | C717 | ECUW1E104ZFN | 25V 0.1U |
| C15 | ECBT1H102KB5 | 50V 1000P | R712 | ERJ6GEYJ221V | 1/10W 220 | C718 | ECUV1C224KBM | 16V 0.22U |
| C16 | RCE1AM471BV | 10V 470U | R717, 718 | ERJ6GEYJ101V | 1/10W 100 | C721, 722 | ECUE1H270JCN | 50V 27P |
| C17 | RCE0JKA101BV | 6.3V 100U | R721 | ERJ6GEYJ101V | 1/10W 100 | C723 | ECEA1AKA2211 | 10V 220U |
| C20 | ECBT1E103ZF | 25V 0.01U | R722 | ERJ6GEYJ563V | 1/10W 56K | C724 | ECUV1C104MBM | 16V 0.1U |
| C21, 22 | RCE1EM101BV | 25V 100U | R723 | ERJ6GEYJ182V | 1/10W 1.8K | C730 | ECUW1E104ZFN | 25V 0.1U |



| Ref. No. | Part No. | Values & Remarks | Ref. No. | Part No. | Values & Remarks | Ref. No. | Part No. | Values & Remarks |
|-----------|--------------|------------------|----------|--------------|------------------|----------|--------------|------------------|
| C731, 732 | ECEA0JK221I | 6. 3V 220U | C738 | ECUV1C154KBN | 16V 0. 15U | C745 | ECUE1H102KBN | 50V 1000P |
| C733 | ECUZ1E104MBN | 25V 0. 1U | C742 | ECUV1E273KBN | 25V 0. 027U | C747 | ECUE1H222KBN | 50V 2200P |
| C734 | ECEA1AKA221I | 10V 220U | C743 | ECUW1E104ZFN | 25V 0. 1U | C748 | ECUV1H471KBM | 50V 470P |
| C735-737 | ECUW1E104ZFN | 25V 0. 1U | C744 | ECUE1E822KBN | 25V 8200P | | | |

REPLACEMENT PARTS LIST

Notes: *Important safety notice:
 Components identified by Δ mark have special characteristics important for safety.
 Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.
 When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.
 *Remote Control Ass'y: Supply period for three years from termination of production.
 *The "(SF)" mark denotes the standard part.

| Ref. No. | Part No. | Part Name & Description | Remarks | Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|----------------------------|---------------------|----------|-----------|-----------------------------|---------|
| | | PACKING MATERIAL | | A8 | SQX9131 | SERVICENTER LIST FOR CANADA | |
| | | | | | | <GREASE OR JIG/TOOL> | |
| | | | | | | TEST DISC | |
| P1 | RPG2366 | PACKING CASE | | SA1 | SZZP1054C | PLAYABILITY TEST DISC | |
| P2 | RPND781 | CUSHION | | SA2 | SZZP1056C | UNEVEN TEST DISC | |
| P3 | SPP730 | PROTECTION BAG (UNIT) | | | | ALLEN WRENCH | |
| P4 | RPF0139 | PROTECTION BAG (F. B.) | | SA3 | SZZP1101C | ALLEN WRENCH (M2. 0) | |
| P5 | RPQ0535 | PAD | | | | LOCK PAINT | |
| | | ACCESSORIES | | SA4 | RZZ0L01 | LOCK PAINT | |
| A1 | RFKSLPD987PP | INSTRUCTION MANUAL ASS'Y | | | | GREASE | |
| A2 | RQAD085 | WARRANTY CARD | | SA5 | RFKXPG671 | MOLYCOAT GREASE PG671 | |
| A3 | RQCBO391 | SERVICENTER LIST | | | | | |
| A4 | SJA172 | AC POWER SUPPLY CORD | Δ (SF) | | | | |
| A5 | SJP2249-3 | STEREO CONNECTION CABLE | | | | | |
| A6 | RAK-SL122WH | REMOTE CONTROL TRANSMITTER | | | | | |
| A6-1 | RKK0057-K | BATTERY COVER | FOR R/C TRANSMITTER | | | | |
| A7 | RQAD049 | WARRANTY CARD FOR CANADA | | | | | |

PACKAGING

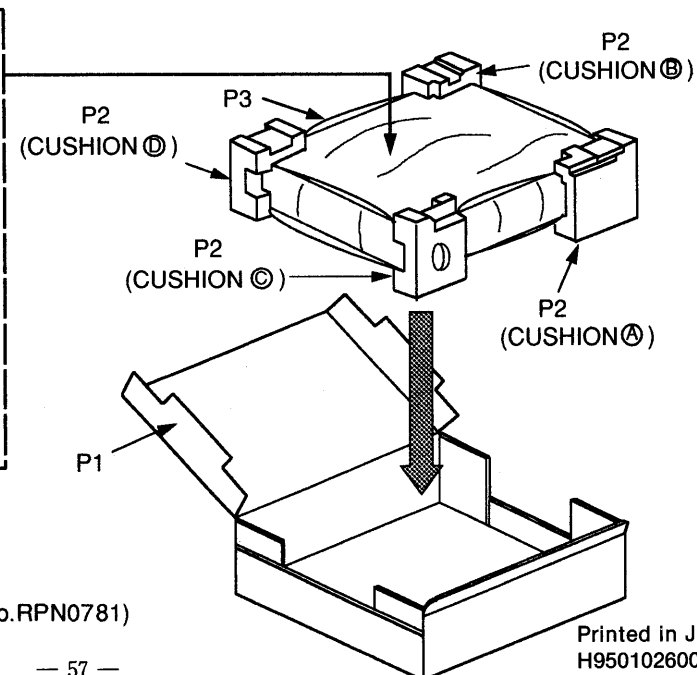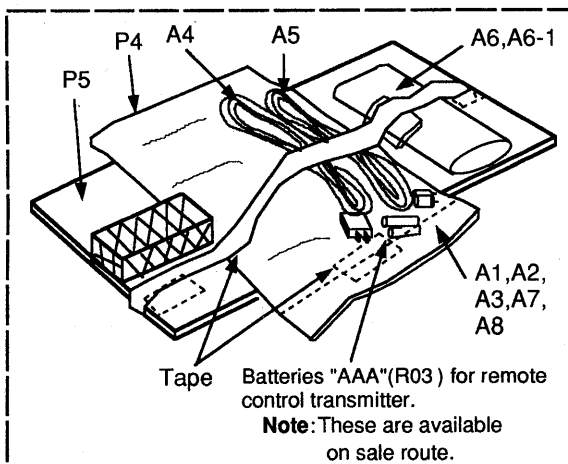

(CUSHION ⓐ, ⓑ, ⓒ, ⓓ : Part No. RPN0781)