

Service Manual

QUARTZ Turntable System

SL-Q202

[E], [EK], [XL], [EG], [EB],
[EF], [XA], [XM], [EH], [Ei], [EC]

SL-Q202(K)

[E], [EG], [EB], [XA], [EH]



* The colors of this model include silver and black.
* The black type model is provided with (K) in the Service Manual.

Areas

- * [E] is available in Switzerland and Scandinavia.
- * [EK] is available in United Kingdom.
- * [XL] is available in Australia.
- * [EG] is available in F.R. Germany.
- * [EB] is available in Belgium.
- * [EF] is available in France.
- * [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.
- * [XM] is available in Central South America.
- * [EH] is available in Holland.
- * [Ei] is available in Italy.
- * [EC] is available in Czechoslovakia.

English

Specifications

Specifications are subject to change without notice for further improvement.
Weight and dimensions shown are approximate.

■ General

Power supply: ~110-120/220-240V, 50 or 60 Hz

Power consumption: 7 W

Dimensions: 43×10.6×37.5 cm
(16-15/16"×4-7/32"×14-3/4")

(W×H×D)

43×37×42 cm
(16-15/16"×14-9/16"×16-17/32")
(Maximum height when top is
open all the way.)

Weight: 6.5 kg (14.3 lb.)

*This rating refers to turntable assembly alone, excluding effects of record, cartridge or tonearm, but including platter. Measured by obtaining signal from built-in frequency generator of motor assembly.

Rumble: -56 dB (IEC 98A Unweighted)
-78 dB (IEC 98A Weighted)

■ Turntable section

Type: Quartz direct drive
Automatic turntable
Auto return
Auto stop

Drive method: Direct drive

Motor: Brushless DC motor

Drive control method: Quartz-phase-locked control

Turntable platter: Aluminum die-cast
Diameter 31.2 cm (12-9/32" inches)

Turntable speeds: 33-1/3 rpm and 45 rpm

Wow and flutter: 0.012% WRMS*
0.025% WRMS (JIS C5521)
±0.035% peak (IEC 98A Weighted)

■ Tonearm section

Type: Universal tonearm
"S" shaped tubular arm
Static balanced type

Effective length: 230 mm (9-1/16")

Overhang: 15 mm (19/32")

Tracking error angle: Within 2°32' at the outer groove
of 30 cm (12") record

Within 0°32' at the inner groove
of 30 cm (12") record

Friction: Less than 7 mg (lateral, vertical)

Effective mass: 11 g (without cartridge)

Stylus pressure adjustment range: 0-2.5 g

Applicable cartridge weight range: (See page 12)

Headshell weight: 7.5 g

Phono cable capacitance: 135 pF

Technics

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

■ Cartridge section

Type:	Moving magnet
Frequency response:	10 Hz~35 kHz 20 Hz~10 kHz ± 1 dB
Output voltage:	2.5 mV at 1 kHz 5 cm/s. zero to peak lateral velocity (7 mV at 1 kHz 10 cm/s. zero to peak 45° velocity [DIN 45 500])

Channel separation:	22 dB at 1 kHz
Channel balance:	Within 1.8 dB at 1 kHz
Compliance (dynamic):	10×10^{-6} cm/dyne at 100 Hz
Stylus pressure:	1.75 ± 0.25 g (17.5 ± 2.5 mN)
Load impedance:	47 k Ω to 100 k Ω
Weight:	5 g (cartridge only)
Replacement stylus:	EPS-25CS Equivalent replacement stylus EPS-25ES (Elliptical stylus).

Deutsch

TECHNISCHE DATEN

Änderungen der technischen Daten vorbehalten.

Die angegebenen Gewichts- und Abmessungsdaten sind circa Werte.

■ Allgemeine Daten

Stromversorgung:	~110–120/220–240 V, 50/60 Hz Wechselstrom
Leistungsaufnahme:	7 W
Abmessungen (B×H×T):	43×10,6×37,5 cm 43×37×42 cm Maximale Höhe bei vollständig geöffnetem Gehäuseoberteil. 6,5 kg
Gewicht:	6,5 kg

■ Plattenspieler

Typ:	Quarz-Direktantrieb Automatischer Plattenspieler Rückführautomatik Stopautomatik
Antrieb:	Direktantrieb
Motor:	Kollektorloser Gleichstrommotor
Antriebsregel-Methode:	Quarz-Steuerung (QPL)
Plattenteller:	Aluminium-Spritzguß Durchmesser 31,2 cm
Plattenteller-Drehzahlen:	33-1/3 und 45 U/min
Gleichlaufschwankungen:	0,012% WRMS* 0,025% WRMS (JIS C5521) $\pm 0,035\%$ Spitze (IEC 98A bewertet)

*Diese Nennleistung bezieht sich auf das Laufwerk-Bauteil allein, ausschließlich Einflüsse von Schallplatte, Tonabnehmer oder Tonarm, aber einschließlich Plattenteller. Gemessen anhand von Signalen vom eingebauten Frequenzgenerator des Motorbauteils.

Rumpel-Geräuschspannungsabstand:	-56 dB (IEC 98A unbewertet)
Rumpel-Fremdspannungsabstand:	-78 dB (IEC 98A bewertet)

■ Tonarm

Typ:	Universal-Tonarm S-förmiger Rohrtonarm Statisch ausbalanciert
Effektive Länge:	230 mm
Überhang:	15 mm
Spurfehlwinkel:	2°32' bei der Einlaufrille einer 30 cm-Platte 0°32' bei der Auslaufrille einer 30 cm-Platte
Lagerreibung:	Weniger als 7 mg (horizontal, vertikal)
Effektive Masse:	11 g (ohne Tonabnehmer)
Auflagekraft-Einstellbereich:	0—2,5 g
Zulässiger Tonabnehmer-Gewichtsbereich:	(Vgl. Seite 12)
Tonarmkopf-Gewicht:	7,5 g
Phonokabl-Kapazität:	135 pF

■ Tonabnehmer

Typ:	Magnetischer Tonabnehmer
Frequenzgang:	10 Hz bis 35 kHz 20 Hz bis 10 kHz ± 1 dB
Ausgangsspannung:	2,5 mV bei 1 kHz 5 cm/s. Null-zu-Spitze, lateral [7 mV bei 1 kHz 10 cm/s. Null-zu-Spitze, 45° (DIN 45 500)] 22 dB bei 1 kHz Innerhalb 1,8 dB bei 1 kHz
Kanaltrennung:	22 dB bei 1 kHz
Kanalabweichung:	Innerhalb 1,8 dB bei 1 kHz
Nachgiebigkeit (dynamisch):	10×10^{-6} cm/dyn bei 100 Hz
Auflagekraft:	$1,75 \pm 0,25$ g ($17,5 \pm 2,5$ mN)
Impedanz:	47 k Ω bis 100 k Ω
Gewicht:	5 g (ohne Tonarmkopf)
Ersatznadel:	EPS-25CS (Gleichwertige Ersatznadel EPS-25ES.)

Français

CARACTERISTIQUES

Les spécifications sont susceptibles d'être modifiées sans préavis.
Le poids et les dimensions donnés sont approximatifs.

■ Généralités

Alimentation:	Alternatif 110-120/220-240V, 50 ou 60 Hz
Consommation:	7 W
Dimensions: (L×H×P)	43×10,6×37,5 cm 43×37×42 mm Hauteur maximum lorsque le dessus (couvercle protégé- poussière) est ouvert.
Poids:	6,5 kg

■ Platine de lecture

Type:	Entraînement direct à quartz Platine automatique Retour automatique Arrêt automatique
Système d'entraîne- ment:	Entraînement direct
Moteur:	Moteur C.C. sans balai
Groupe de réglage:	Réglage d'accrochage de phase par quartz
Plateau de lecture:	En aluminium moulé sous pression Diamètre 31,2 cm
Vitesses de rotation:	33-1/3 et 45 t/p.m
Pleurage et scintille- ment:	0,012% de valeur efficace* 0,025% de valeur efficace (JIS C5521) ±0,035% de crête (IEC 98A Pondéré)

*Ce régime nominal se rapporte à l'ensemble du tourne-
disque seul, excluant les effets du disque, de la cellule
pick-up ou du bras de lecture, mais comprenant le
plateau. Mesuré par l'obtention d'un signal provenant du
générateur de fréquences incorporé de l'ensemble du
moteur.

Ronflement:	-56 dB (IEC 98A Non pondéré) -78 dB (IEC 98A Pondéré)
--------------------	--

■ Bras de lecture

Type:	Bras de lecture universel Bras tubulaire en forme de "S" De type à équilibrage statique
Longueur effective:	230 mm
Porte-à-faux:	15 mm
Angle d'erreur de piste:	En deçà de 2°32' au sillon extérieur d'un disque de 30 cm En deçà de 0°32' au sillon intérieur d'un disque de 30 cm Moins de 7 mg (latéral et vertical)
Frottement:	
Masse réelle:	11 g (sans la cellule pick-up)
Plage de réglage de la pression d'appui:	0-2.5 g
Gamme du poids des cellules pick-up utilisables:	(Voir page 12.)
Poids de la coque porte-cellule:	7,5 g
Capacitance propre du câble pick-up:	135 pF

■ Cellule pick-up

Type:	Aimant mobile
Réponse en fréquence:	10 Hz à 35 kHz 20 Hz à 10 kHz ±1 dB
Tension de sortie:	2,5 mV à 1 kHz; 5 cm/s., zéro à vitesse latérale de crête (7 mV à 1 kHz 10 cm/s., zéro à vitesse 45° de crête [DIN 45 500])
Séparation de canal:	22 dB à 1kHz
Équilibrage des canaux:	En deçà de 1,8 dB à 1 kHz
Elasticité (dynamique):	10×10 ⁻⁶ cm/dyne à 100 Hz
Pression de la pointe de lecture:	1,75±0,25 gramme (17,5±2,5 mN)
Impédance de charge:	47 kΩ to 100 kΩ
Poids:	5 g (cellule seule)
Pointe de lecture de remplacement:	EPS-25CS Pointe de lecture de remplacement équivalente EPS-25ES.

Español

ESPECIFICACIONES

Las especificaciones quedan sujetas a cambios sin aviso previo.
El peso y las dimensiones indicados son aproximados.

■ En general

Alimentación de corriente:	~110-120/220-240 V, 50 ó 60 Hz
Consumo de corriente:	7 W
Dimensiones: (Ancho×Alto×Prof.)	43×10,6×37,5 cm 43×37×42 cm Altura máxima cuando la parte de arriba (tapa contra el polvo) está abierta.
Peso:	6,5 kg

■ Sección del plato giratorio

Tipo:	Accionamiento directo por cuarzo Plato giratorio automático Retorno automático Parada automática
Método de acciona- miento:	Accionamiento directo
Motor:	Motor de corriente continua sin escobillas
Método de control de accionamiento:	Control enclavado de fase de cuarzo

Platillo del plato giratorio:	Aluminio fundido Diámetro 31, 2 cm
Velocidades del plato giratorio:	33-1/3 y 45 rpm
Ululaciones y trémolo:	0,012% WRMS* 0,025% WRMS (JIS C5521) ±0,035% cresta (IEC 98A Ponderado)

*Estas características se refieren únicamente al conjunto del plato giratorio, con exclusión de los efectos provenientes del disco, cartucho o del brazo sonoro, incluyendo, empero, el platillo. La medida fue tomada por medio de la señal obtenida del generador de frecuencia incorporado del conjunto del motor.

Ruido de rodadura:	-56 dB (IEC 98A No ponderado) -78 dB (IEC 98A Ponderado)
---------------------------	---

■ Sección del brazo sonoro

Tipo:	Brazo sonoro universal Brazo tubular en forma de "S" Tipo equilibrado estático
Longitud efectiva:	230 mm
Proyección:	15 mm
Angulo de error de seguimiento:	Inferior a 2°32' en el surco exterior de un disco de 30 cm Inferior a 0°32' en el surco interior de un disco de 30 cm
Fricción:	Menos de 7 mg (en sentido lateral y vertical)
Masa efectiva:	11 g (sin cartucho)

Radio de ajuste de la presión de la aguja:	0 a 2,5 g
Radio de peso de cartucho utilizable:	(Véase en la página 12)
Peso de la cápsula de la cabeza:	7,5 g
Capacitancia de cable de fono:	135pF

■ Sección del cartucho




Tipo:	Imán móvil
Respuesta de frecuencia:	de 10 Hz a 35 kHz de 20 Hz a 10 kHz ± 1 dB
Voltaje de salida:	2,5 mV a 1 kHz Con velocidad lateral de cero a cresta de 5 cm/s [7 mV a 1 kHz Velocidad de 45° de cero a cresta de 10 cm/s (DIN 45 500)]
Separación de canales:	22 dB a 1 kHz
Equilibrio de canales:	Sin exceder 1,8 dB a 1 kHz
Elasticidad (dinámica):	10 × 10 ⁻⁶ cm/dina a 100 Hz
Presión de la aguja:	1,75 ± 0,25 g (17,5 ± 2,5 mN)
Impedancia de carga:	47 kΩ a 100 kΩ
Peso:	5 g (cartucho sólo)
Aguja de recambio:	EPS-25CS Aguja de recambio equivalente: EPS-25ES.

■ CONTENTS

	Page
LOCATION OF CONTROLS	5
DISASSEMBLY INSTRUCTIONS	6 ~ 8
REPLACEMENT OF HALL ELEMENT	8
MEASUREMENTS AND ADJUSTMENT (English)	9
MESSUNGEN UND JUSTIERUNGEN (Deutsch)	10
MESURAGES ET RÉGLAGES (Français)	10, 11
MEDICIONES Y AJUSTES (Español)	11
CARTRIDGE INSTALLATION	12
ABOUT CARTRIDGE WEIGHT	12

	Page
CIRCUIT BOARD AND WIRING	
CONNECTION DIAGRAM	13, 14
SCHEMATIC DIAGRAM	15 ~ 17
BLOCK DIAGRAM	18
TROUBLE SHOOTING GUIDE	19 ~ 21
REPLACEMENT PARTS LIST	
Electrical Parts	21, 22
Cabinet, Chassis and Packing Parts	23, 25, 27
EXPLODED VIEWS	23 ~ 27
PACKINGS	28

LOCATION OF CONTROLS

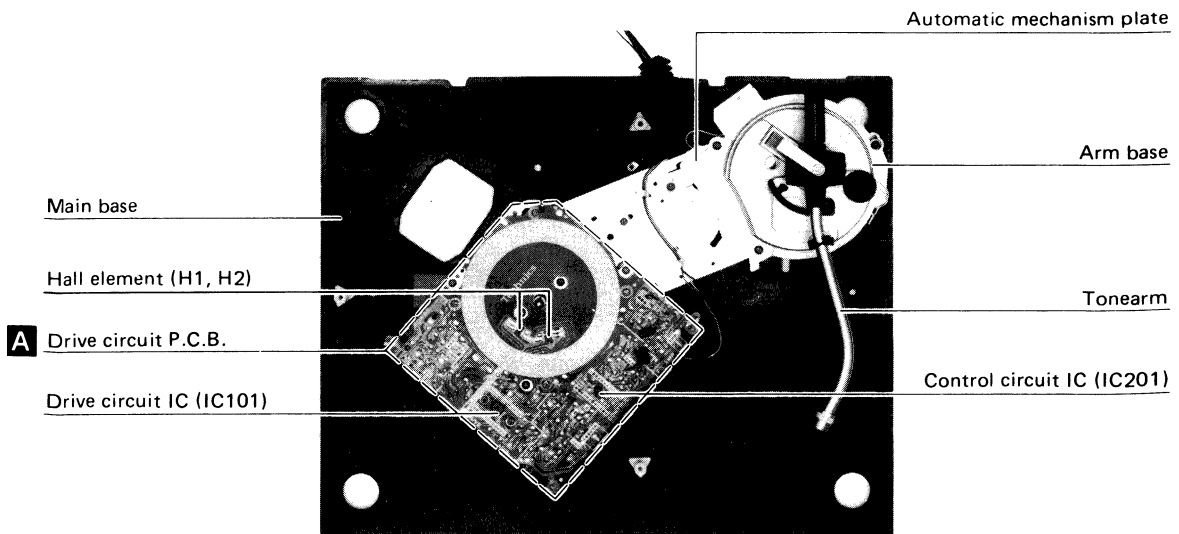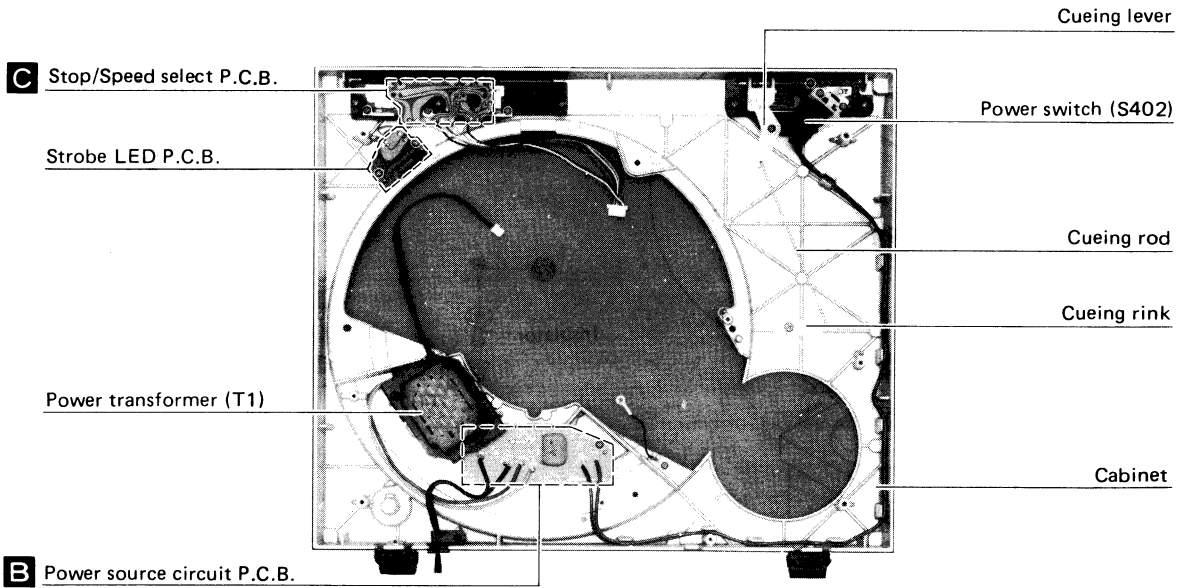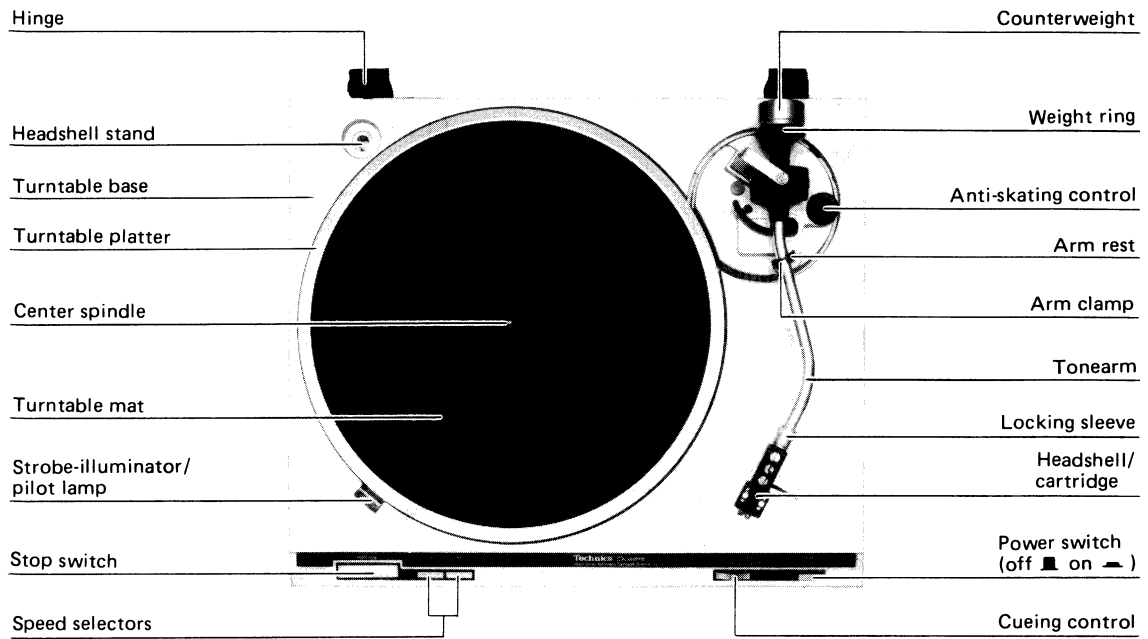

DISASSEMBLY INSTRUCTIONS

How to remove the main base and cabinet

1. Fix the tonearm on the rest.
2. Remove the headshell and counter weight.
3. Remove the turntable.
4. Remove the panel cover setscrews ① ~ ③ and earth lead setscrew ④. (See Fig. 1)
5. Remove the connectors ⑤ and ⑥ of the drive circuit P.C.B. (See Fig. 1)
6. Close the dust cover, and turn over the unit, taking care not to scratch it.
7. Remove the insulator setscrews ⑦ ~ ⑩ and phono cord clamber setscrew ⑪. (See Fig. 2)
8. Turn the unit up, holding the main base and cabinet.
9. Remove the dust cover.
10. Remove the tonearm from the rest, shift the tonearm inward, and lift the cabinet. Then, the main base and cabinet can be disassembled. (See Fig. 3)
11. When assembling the main base and cabinet, make sure that the cueing lever of the arm base is engaged with the cueing ring of the cabinet. (See Fig. 4)

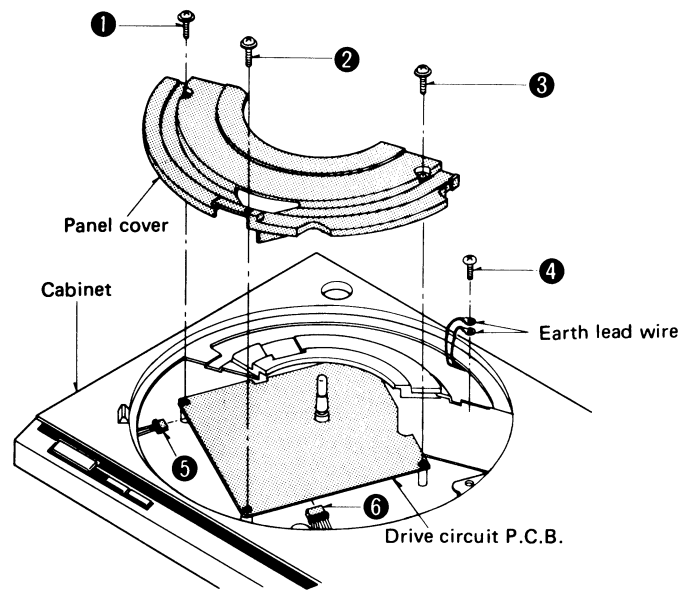


Fig. 1

* The insulator spring (black) at this position is different from other three springs.

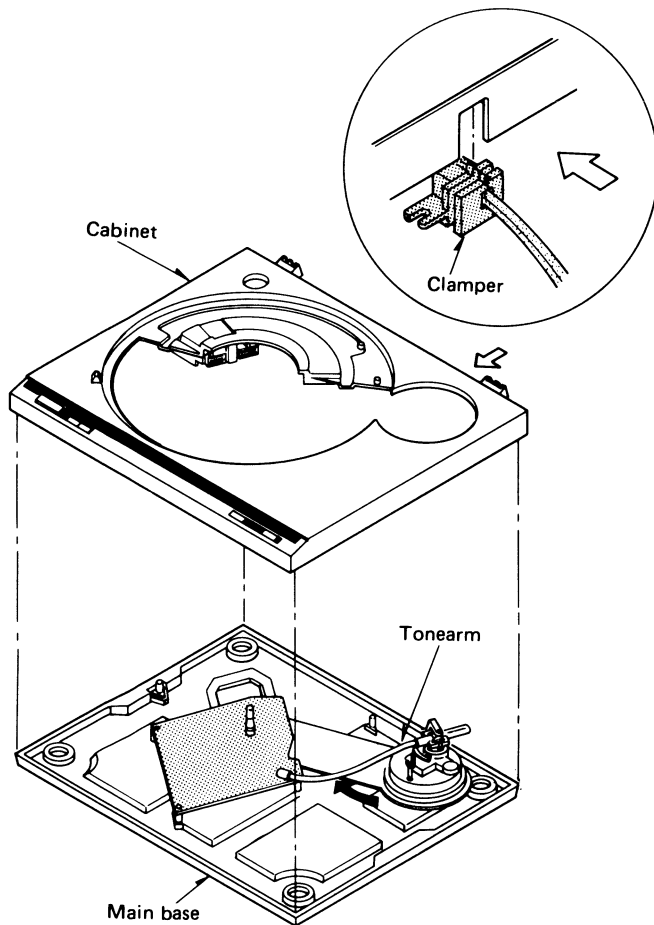


Fig. 3

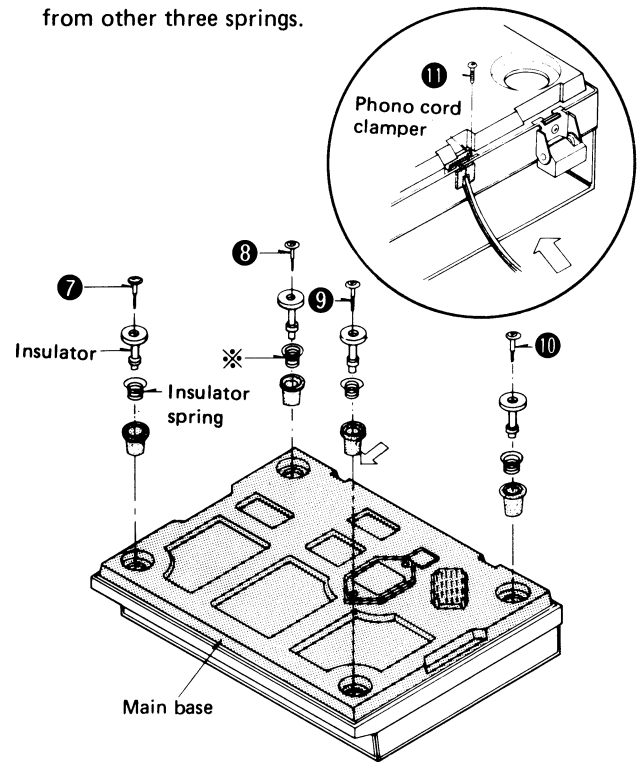


Fig. 2

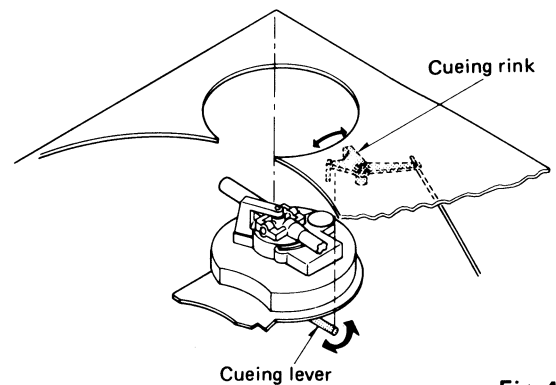


Fig. 4

● How to remove the drive circuit P.C.B. and stator frame

1. Remove the main base and cabinet. (Refer to "How to remove the main base and cabinet".)
2. Remove the drive circuit P.C.B. setscrews 12 ~ 15. (See Fig. 5)
3. Remove the stator frame setscrews 16 ~ 20. Remove the regulator transistor (Q3) setscrew 21 and connector 22. Then, the drive circuit P.C.B. can be separated from the stator frame. (See Fig. 5)
4. When removing the drive circuit P.C.B. and stator frame together, remove the connector 22 and setscrews 16 ~ 20. (See Fig. 5)

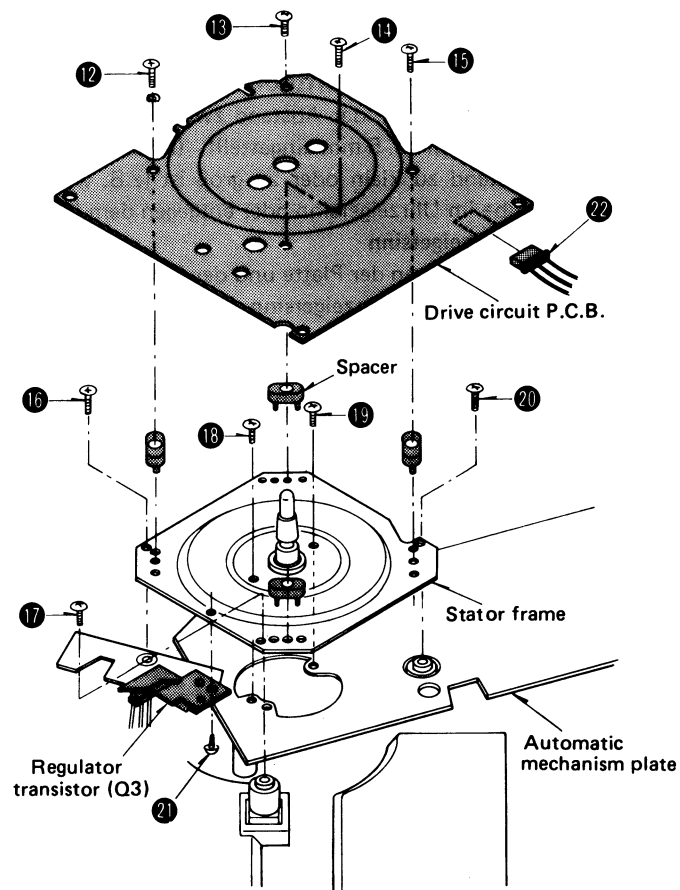


Fig. 5

● How to remove the arm base and tonearm

1. Separate the main base from the cabinet. (Refer to "How to remove the main base and cabinet".)
2. Remove the arm base setscrews 23 ~ 25. Then, the arm base can be removed. (See Fig. 6)
3. When removing the tonearm, turn over the arm base and remove the PU fixing plate setscrew 26 and canceller spring. (See Fig. 7)
4. Remove the phono output P.C.B. setscrew 27 and unsolder the 5 lead wires from the tonearm. (See Fig. 7)

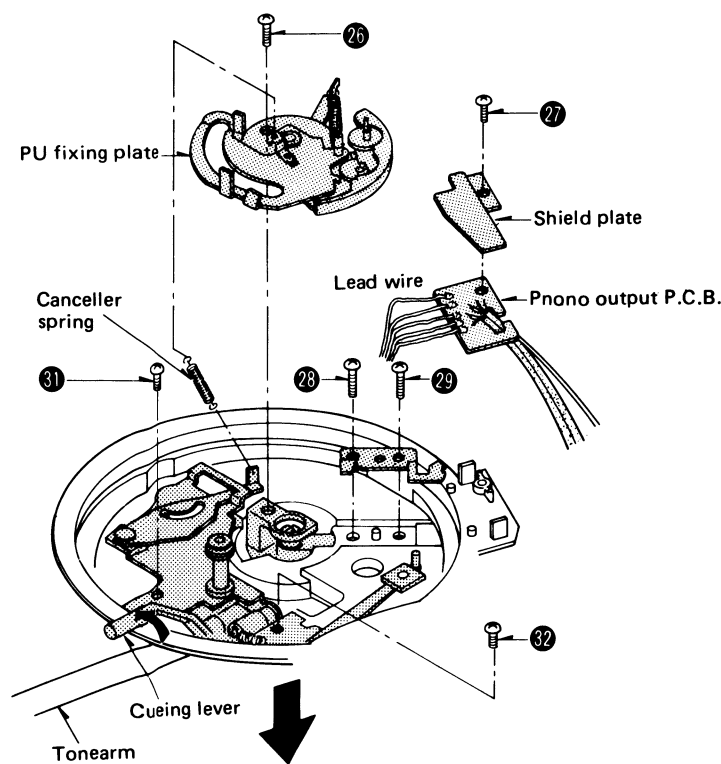


Fig. 7

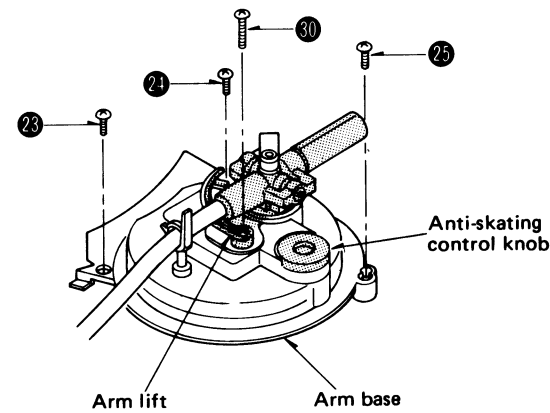


Fig. 6

5. Remove the tonearm setscrews 28 and 29. Then, the tonearm can be removed in the direction of the arrow. (See Fig. 7)
 6. When removing this lift base plate, remove the arm lift setscrew 30 before turning over the arm base, and then remove the arm lift. (See Fig. 6)
- Note:** Remove the spring under the arm lift at the same time.
7. Remove the anti-skating control knob. (See Fig. 6)
 8. Turn over the arm base and remove the PU fixing plate.
 9. Remove the lift base plate setscrews 31 and 32. Then, the lift base plate can be removed.
 10. Before mounting the arm base, make sure that the automatic mechanism is in the initial stage, and then shift the cueing lever of the arm base down in the direction of the arrow in order to make cueing-up. (See Fig. 7)

● How to remove the automatic mechanism plate

1. Separate the main base from the cabinet. (Refer to "How to remove the main base and cabinet".)
2. Remove the drive circuit P.C.B. and the stator frame. (Refer to "How to remove the drive circuit P.C.B. and stator frame".)
3. Remove the arm base. (Refer to "How to remove the arm base and tonearm".)
4. Remove the mechanism plate setscrews 33 ~ 36. Then, the mechanism plate can be removed. (See Fig. 8)


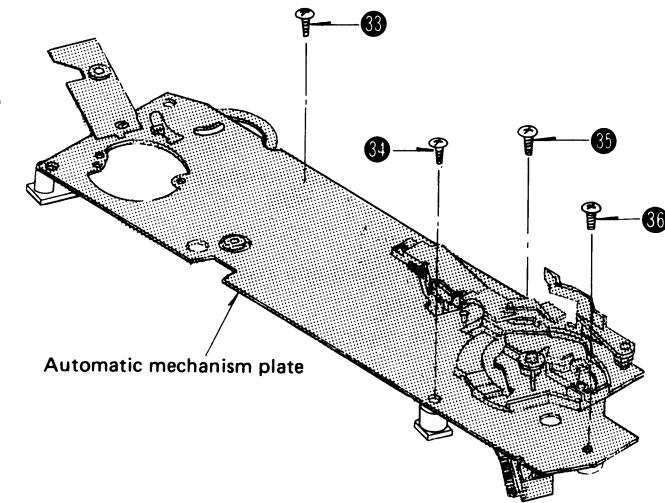


Fig. 8

● How to replace the electric parts

1. Remove the panel cover. (Refer to "How to remove the main base and cabinet".)
 2. Remove the drive circuit P.C.B. setscrews 37 ~ 40 and connectors 41 ~ 43. Remove the drive circuit P.C.B. by lifting it as shown by the arrow. Then, the electric parts can be replaced. (See Fig. 9)
- To replace the regulator transistor (Q3), the stator frame must be removed beforehand.

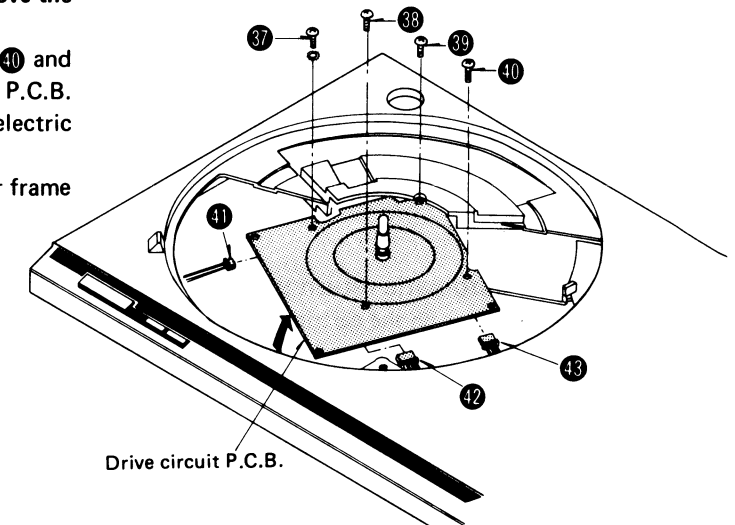

■ REPLACEMENT OF HALL ELEMENT

When replacing the Hall element, note that the Hall element surface must be faced to the magnet of the turntable. The legs are allowed to be reverse in position provided that the surface is up. (See Fig. 10)

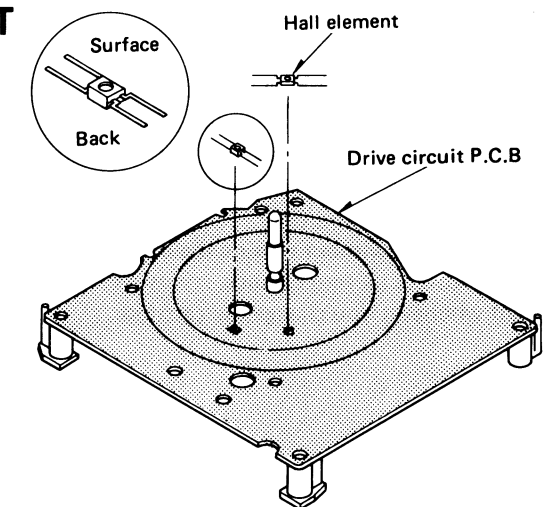


Fig. 10

MEASUREMENTS AND ADJUSTMENTS English

• Arm-lift height adjustment

The arm-lift height (distance between the stylus tip and record surface when the cueing control is set to the "▼" position) has been adjusted at the factory to approximately 5 mm (3/16"). (Fig. 11)

If the clearance is too narrow or too wide (because of different cartridge dimensions, for example), turn the adjustment screw clockwise or counterclockwise.

(See Fig. 12)

Clockwise rotation

—distance between the record and stylus tip is decreased.

Counterclockwise rotation

—distance between the record and stylus tip is increased.

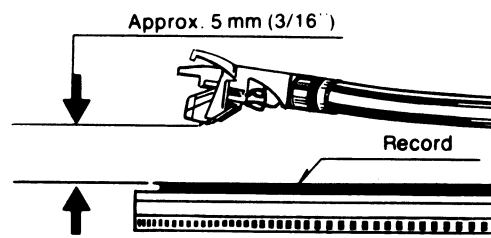


Fig. 11 (Abb. 11)

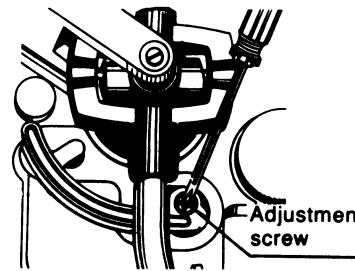


Fig. 12 (Abb. 12)

• Adjustment of automatic return position (Fig. 13)

1. Put the stylus protector on the cartridge.
2. Take off the rubber cap covering the adjustment screw section and move the tonearm toward the center of the record.

Then, the auto-return position adjustment screw will appear.

If the tonearm tends to return to the arm rest before the play has finished,

—turn counterclockwise.

If the tonearm fails to return after the final groove,

—turn clockwise.

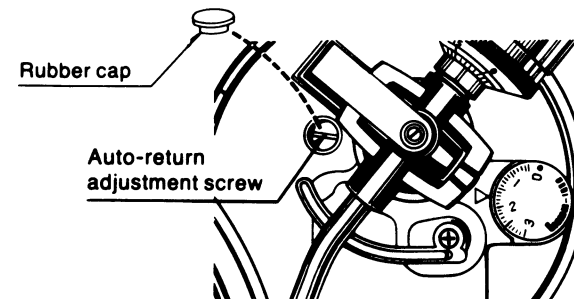


Fig. 13 (Abb. 13)

• Overhang adjustment (Fig. 14)

15 mm is the correct overhang for this tonearm.

Loosen the screws and move the cartridge forward or backward until the distance between the stylus tip and the plug becomes 52 mm (2-3/64").

Tighten the screws without moving the cartridge.

Adjust the horizontal zero balance, stylus pressure and arm-lift height whenever you change the cartridge.

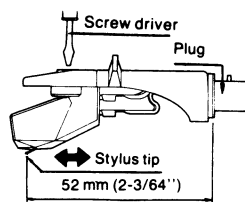


Fig. 14 (Abb. 14)

MESSUNGEN UND JUSTIERUNGEN Deutsch

• Justierung der Tonarmlifhöhe

Die Tonarmlifhöhe, d.h. der Abstand zwischen Nadelspitze und Schallplattenoberfläche bei Liftsteuerungs-Position "▼", wurde werkseitig auf ca. 5 mm eingestellt. (Abb. 11)

Falls der Abstand zu klein oder zu groß ist (z.B. wegen der unterschiedlichen Tonabnehmer-Abmessungen, drehen Sie die Justierschraube im Uhrzeigersinn oder entgegen dem Uhrzeigersinn. (Abb. 12)

Drehung im Uhrzeigersinn

—Der Abstand zwischen der Platte und der Nadelspitze wird kleiner.

Drehung entgegen dem Uhrzeigersinn

—Der Abstand zwischen der Platte und der Nadelspitze wird größer.

• Justierung des Abschaltpunktes der Automatik (Abb. 13)

(Die Gummikappe abnehmen)

1. Setzen Sie den Nadelschutz auf den Tonabnehmer auf.
2. Führen Sie den Tonarm gegen die Plattenmitte.

Die Justierschraube für den Abschaltpunkt der Automatik wird dann sichtbar.

Falls der Tonarm zu früh zurückkehrt.

—Entgegen dem Uhrzeigersinn drehen.

Falls der Tonarm nach Erreichen der Auslaufrille nicht zurückkehrt.

—Im Uhrzeigersinn drehen.

• Justierung des Überhangs (Abb. 14)

Der korrekte Überhang für dieses Gerät beträgt 15 mm.

Lösen Sie die Befestigungsschrauben und versetzen Sie den Tonabnehmer vorwärts oder rückwärts, bis der Abstand zwischen dem Stecker und der Nadelspitze 52 mm beträgt.

Ziehen Sie die Befestigungsschrauben an, ohne dabei den Tonabnehmer zu verschieben.

Justieren Sie die horizontale "0"-Balance, die Auflagekraft und die Tonarmlifhöhe nach jedem Auswechseln des Tonabnehmers.

MESURAGES ET RÉGLAGES Français

• Mise au point de la hauteur de l'élévateur du bras

La hauteur de l'élévateur du bras (distance entre l'extrémité de la pointe de lecture et la surface du disque, lorsque la commande de pose et de relevage est à la position "▼") a été réglée en usine sur approximativement 5 mm. (Fig. 11)

Si l'intervalle est trop étroit ou trop large, (à cause, par exemple, des différentes dimensions de cellules pick-up), tourner la vis de réglage dans le sens des aiguilles d'une montre ou dans le sens inverse. (Fig. 12)

Rotation dans le sens des aiguilles d'une montre.

—La distance entre la surface du disque et l'extrémité de la pointe de lecture diminue.

Rotation dans le sens contraire des aiguilles d'une montre.

—La distance entre la surface du disque et l'extrémité de la pointe de lecture augmente.

• Mise au point de la position de retour automatique (Fig. 13)

(Retirer le capuchon en caoutchouc.)

1. Placer le capot protecteur de la pointe de lecture sur la cellule pick-up.
2. Déplacer le bras de lecture vers le centre de disque.

Alors, la vis de réglage du retour automatique apparaîtra.

Si le bras de lecture tend à revenir vers le support du bras avant que l'audition ne soit terminée.

—Tourner dans le sens contraire des aiguilles d'une montre.

Si le bras de lecture ne peut revenir en arrière après le dernier sillon.

—Tourner dans le sens des aiguilles d'une montre.

● **Réglage du surplomb (Fig. 14)**

Le surplomb approprié pour ce bras de lecture est de 15 mm.
 Desserrer les vis et déplacer la cellule vers l'avant ou vers l'arrière jusqu'à ce que la distance entre l'extrémité de la pointe de lecture et la fiche soit de 52 mm.
 Serrer les vis sans faire bouger la cellule.
 Mettre au point l'équilibrage zéro horizontal, la force verticale d'appui de la pointe de lecture et la hauteur du bras élévateur chaque fois que vous changez de cellule.

■ **MEDICIONES Y AJUSTES** **Español**

● **Ajuste de la altura de elevación del brazo**

La altura de elevación del brazo (o sea, la distancia entre la punta de la aguja y la superficie del disco cuando el control de colocación está en la posición "▼") ha sido regulada en la fábrica aproximadamente a 5 mm. (Fig. 11)
 En caso que el espacio libre fuese demasiado estrecho o demasiado abundante (debido, por ejemplo, a la diferencia en dimensiones de los cartuchos), girar el tornillo de ajuste hacia la derecha o hacia la izquierda. (Fig. 12)

Rotación hacia la derecha

—reduce la distancia entre el disco y la punta de la aguja.

Rotación hacia la izquierda

—aumenta la distancia entre el disco y la punta de la aguja.

● **Ajuste de la posición para retorno automático (Fig. 13)**

(Quitar la tapita de goma.)

- Colocar la protección de la aguja en el cartucho.
- Mover el brazo sonoro hacia el centro del disco.
 Con ello, aparecerá el tornillo de ajuste del retorno automático.

Cuando el brazo sonoro tienda a volver a su apoyo antes de terminar la ejecución:

—Girar hacia la izquierda.

En caso que el brazo sonoro no vuelva después de haber tocado el último surco del disco:

—Girar hacia la derecha.

● **Ajuste de la proyección (Fig. 14)**

La proyección correcta para este cartucho es de 15 mm.
 Aflojar los tornillos y mover el cartucho para adelante y para atrás hasta que la distancia entre la punta de la aguja y la clavija sea de 52 mm.
 Apretar los tornillos sin mover el cartucho.
 Regular el equilibrio horizontal a cero, la presión de la aguja y la altura de elevación del brazo toda vez que se cambia el cartucho.

■ **CARTRIDGE INSTALLATION**

When installing a cartridge, follow the instructions that came with the cartridge.

- Connect the lead wires to the cartridge terminals.
 The terminals of most cartridges are color coded.
 Connect each lead wire to the terminal of the same color.
 White (L+) Left channel +
 Blue (L-) Left channel -
 Red (R+) Right channel +
 Green (R-) Right channel -
- Mount the cartridge in the headshell using the screws provided with the cartridge. (Fig. 15)

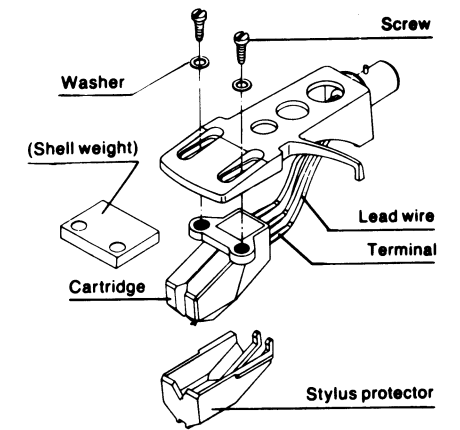




Fig. 15

■ **ABOUT CARTRIDGE WEIGHT**


(See chart below)

Cartridges weighing between 3.5 and 7.5 g can be used on this tonearm (with the headshell and accessory shell weight supplied).


Supplied headshell in combination with other parts.	Allowable cartridge weight. (Included the cartridge mounting screws)	
	4 g	5 6 7 8 9 10 11
A)  Headshell only (7.5 g)	5 g — 7.5 g	
B)  + Shell weight	3.5 g — 5 g	

■ CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM

■ Ground (Earth) lines

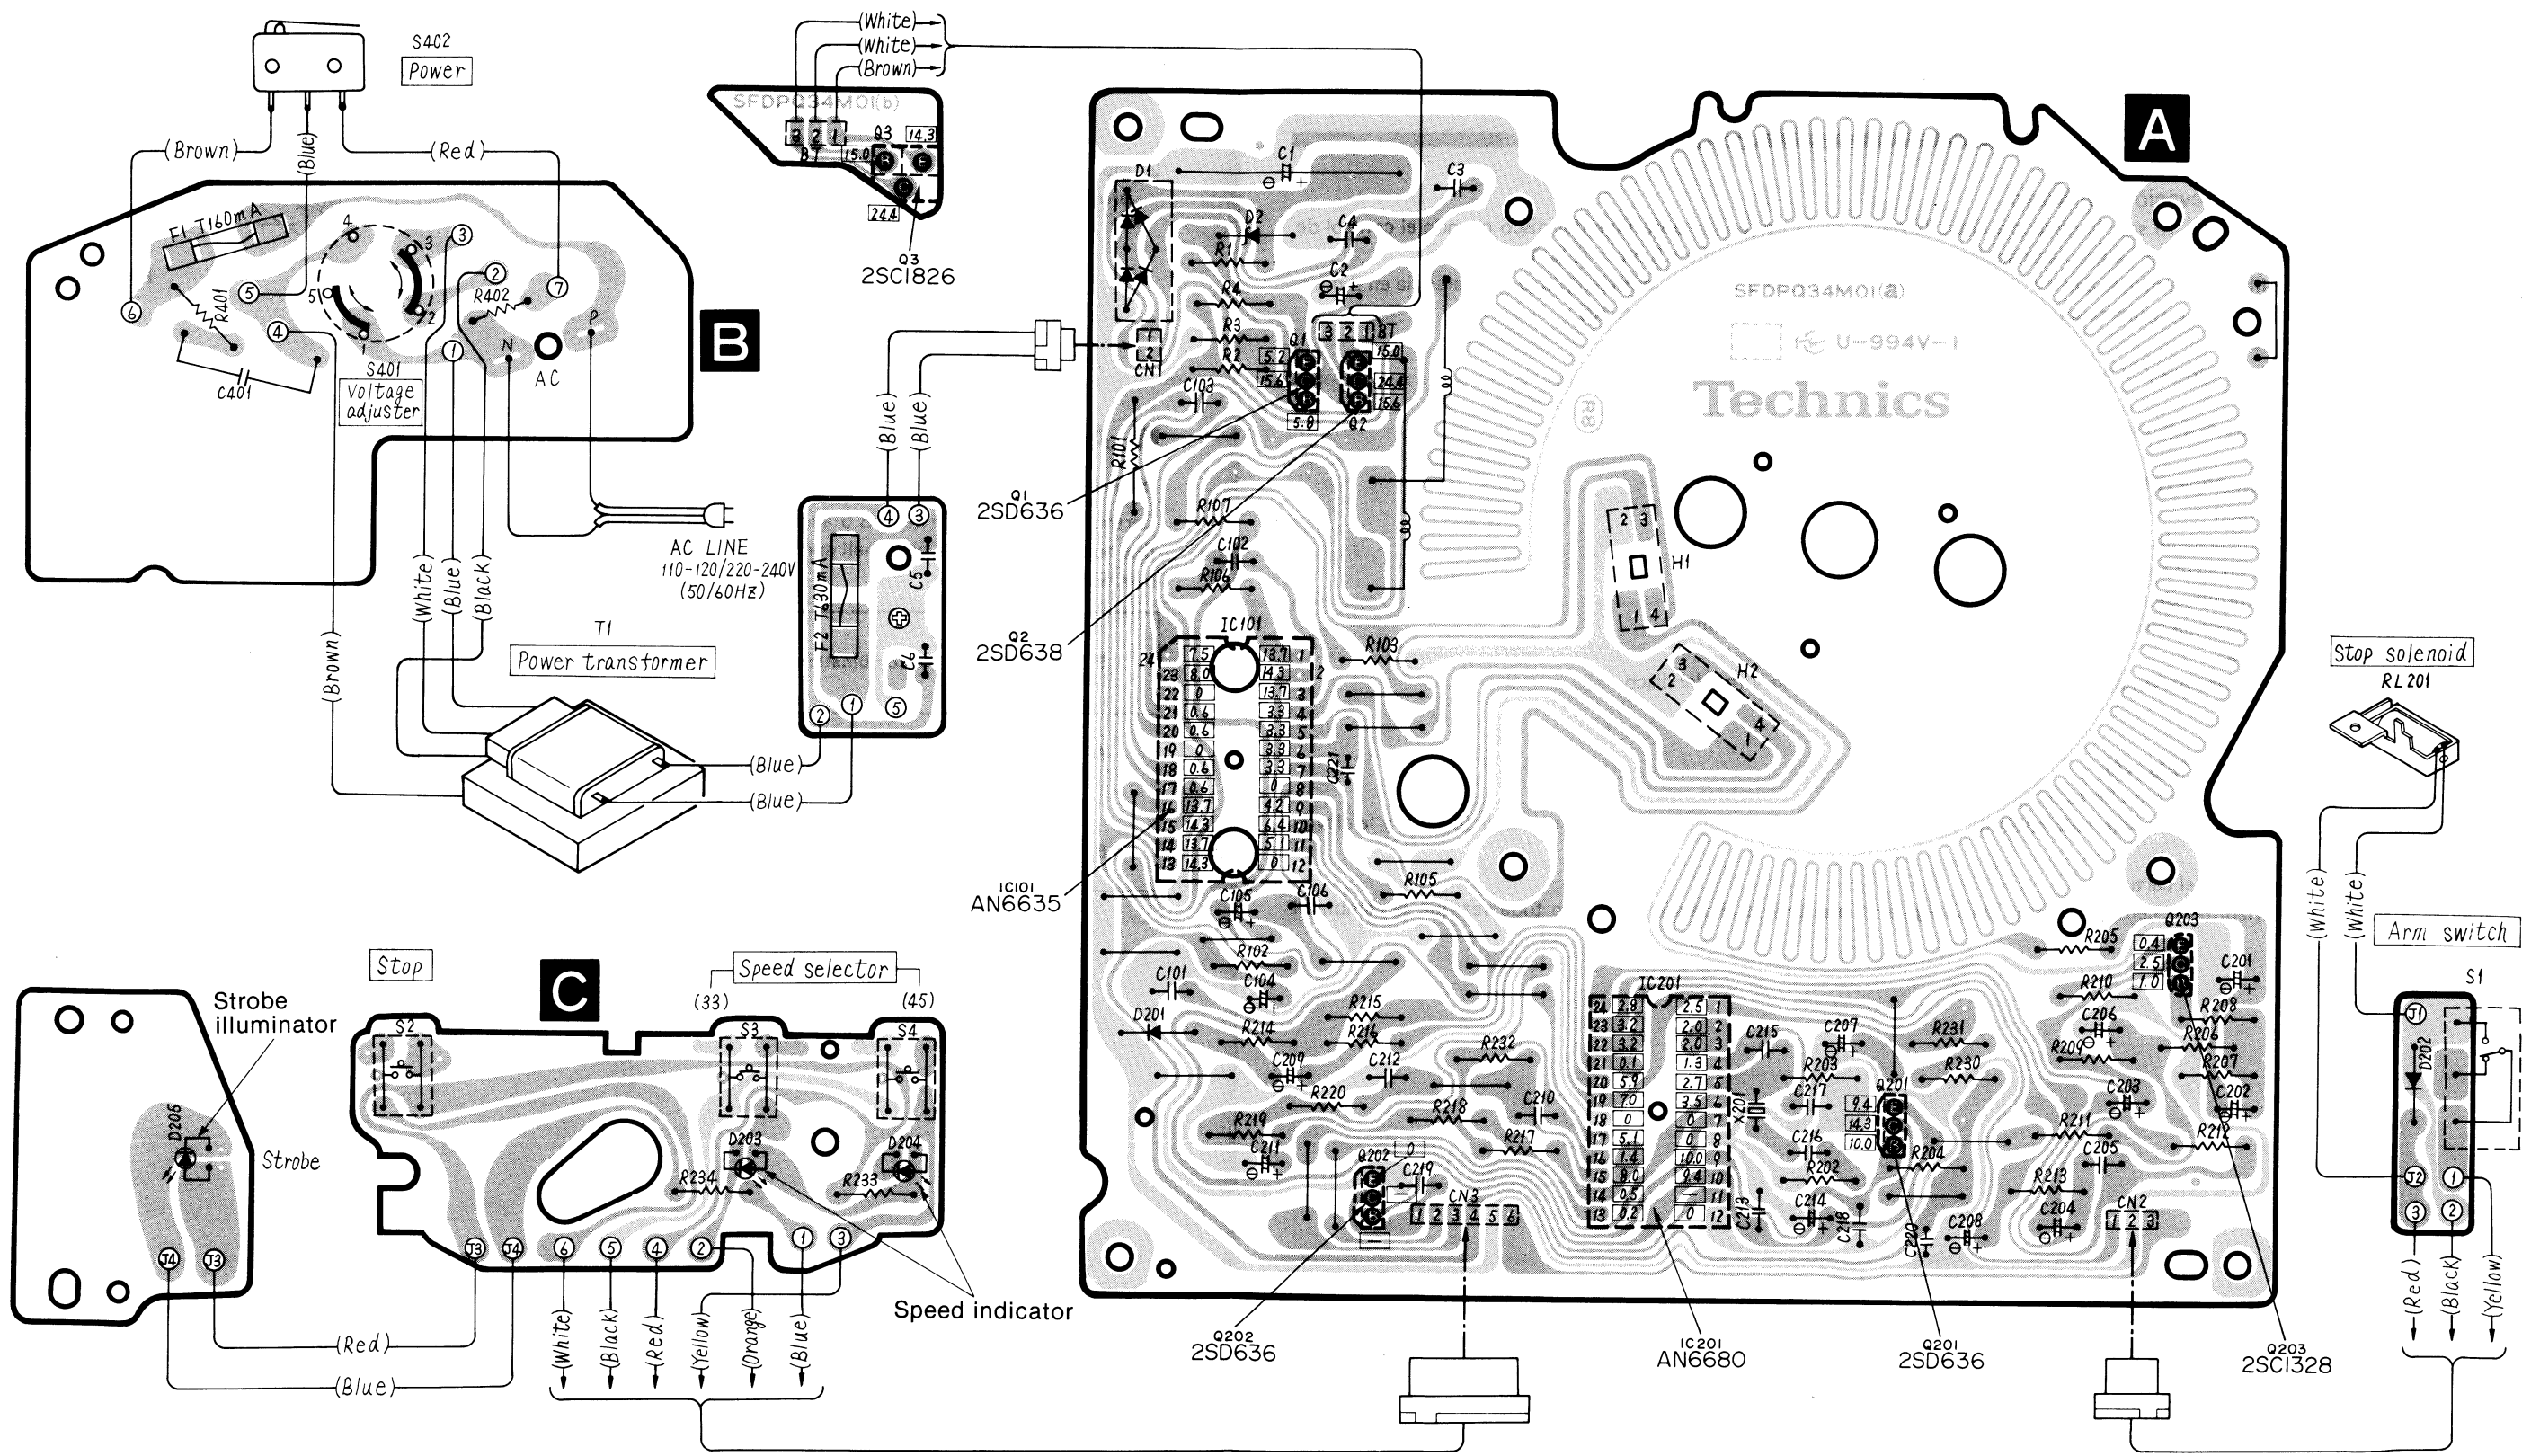


SCHEMATIC DIAGRAM (This schematic diagram may be modified at any time with the development of new technology.)

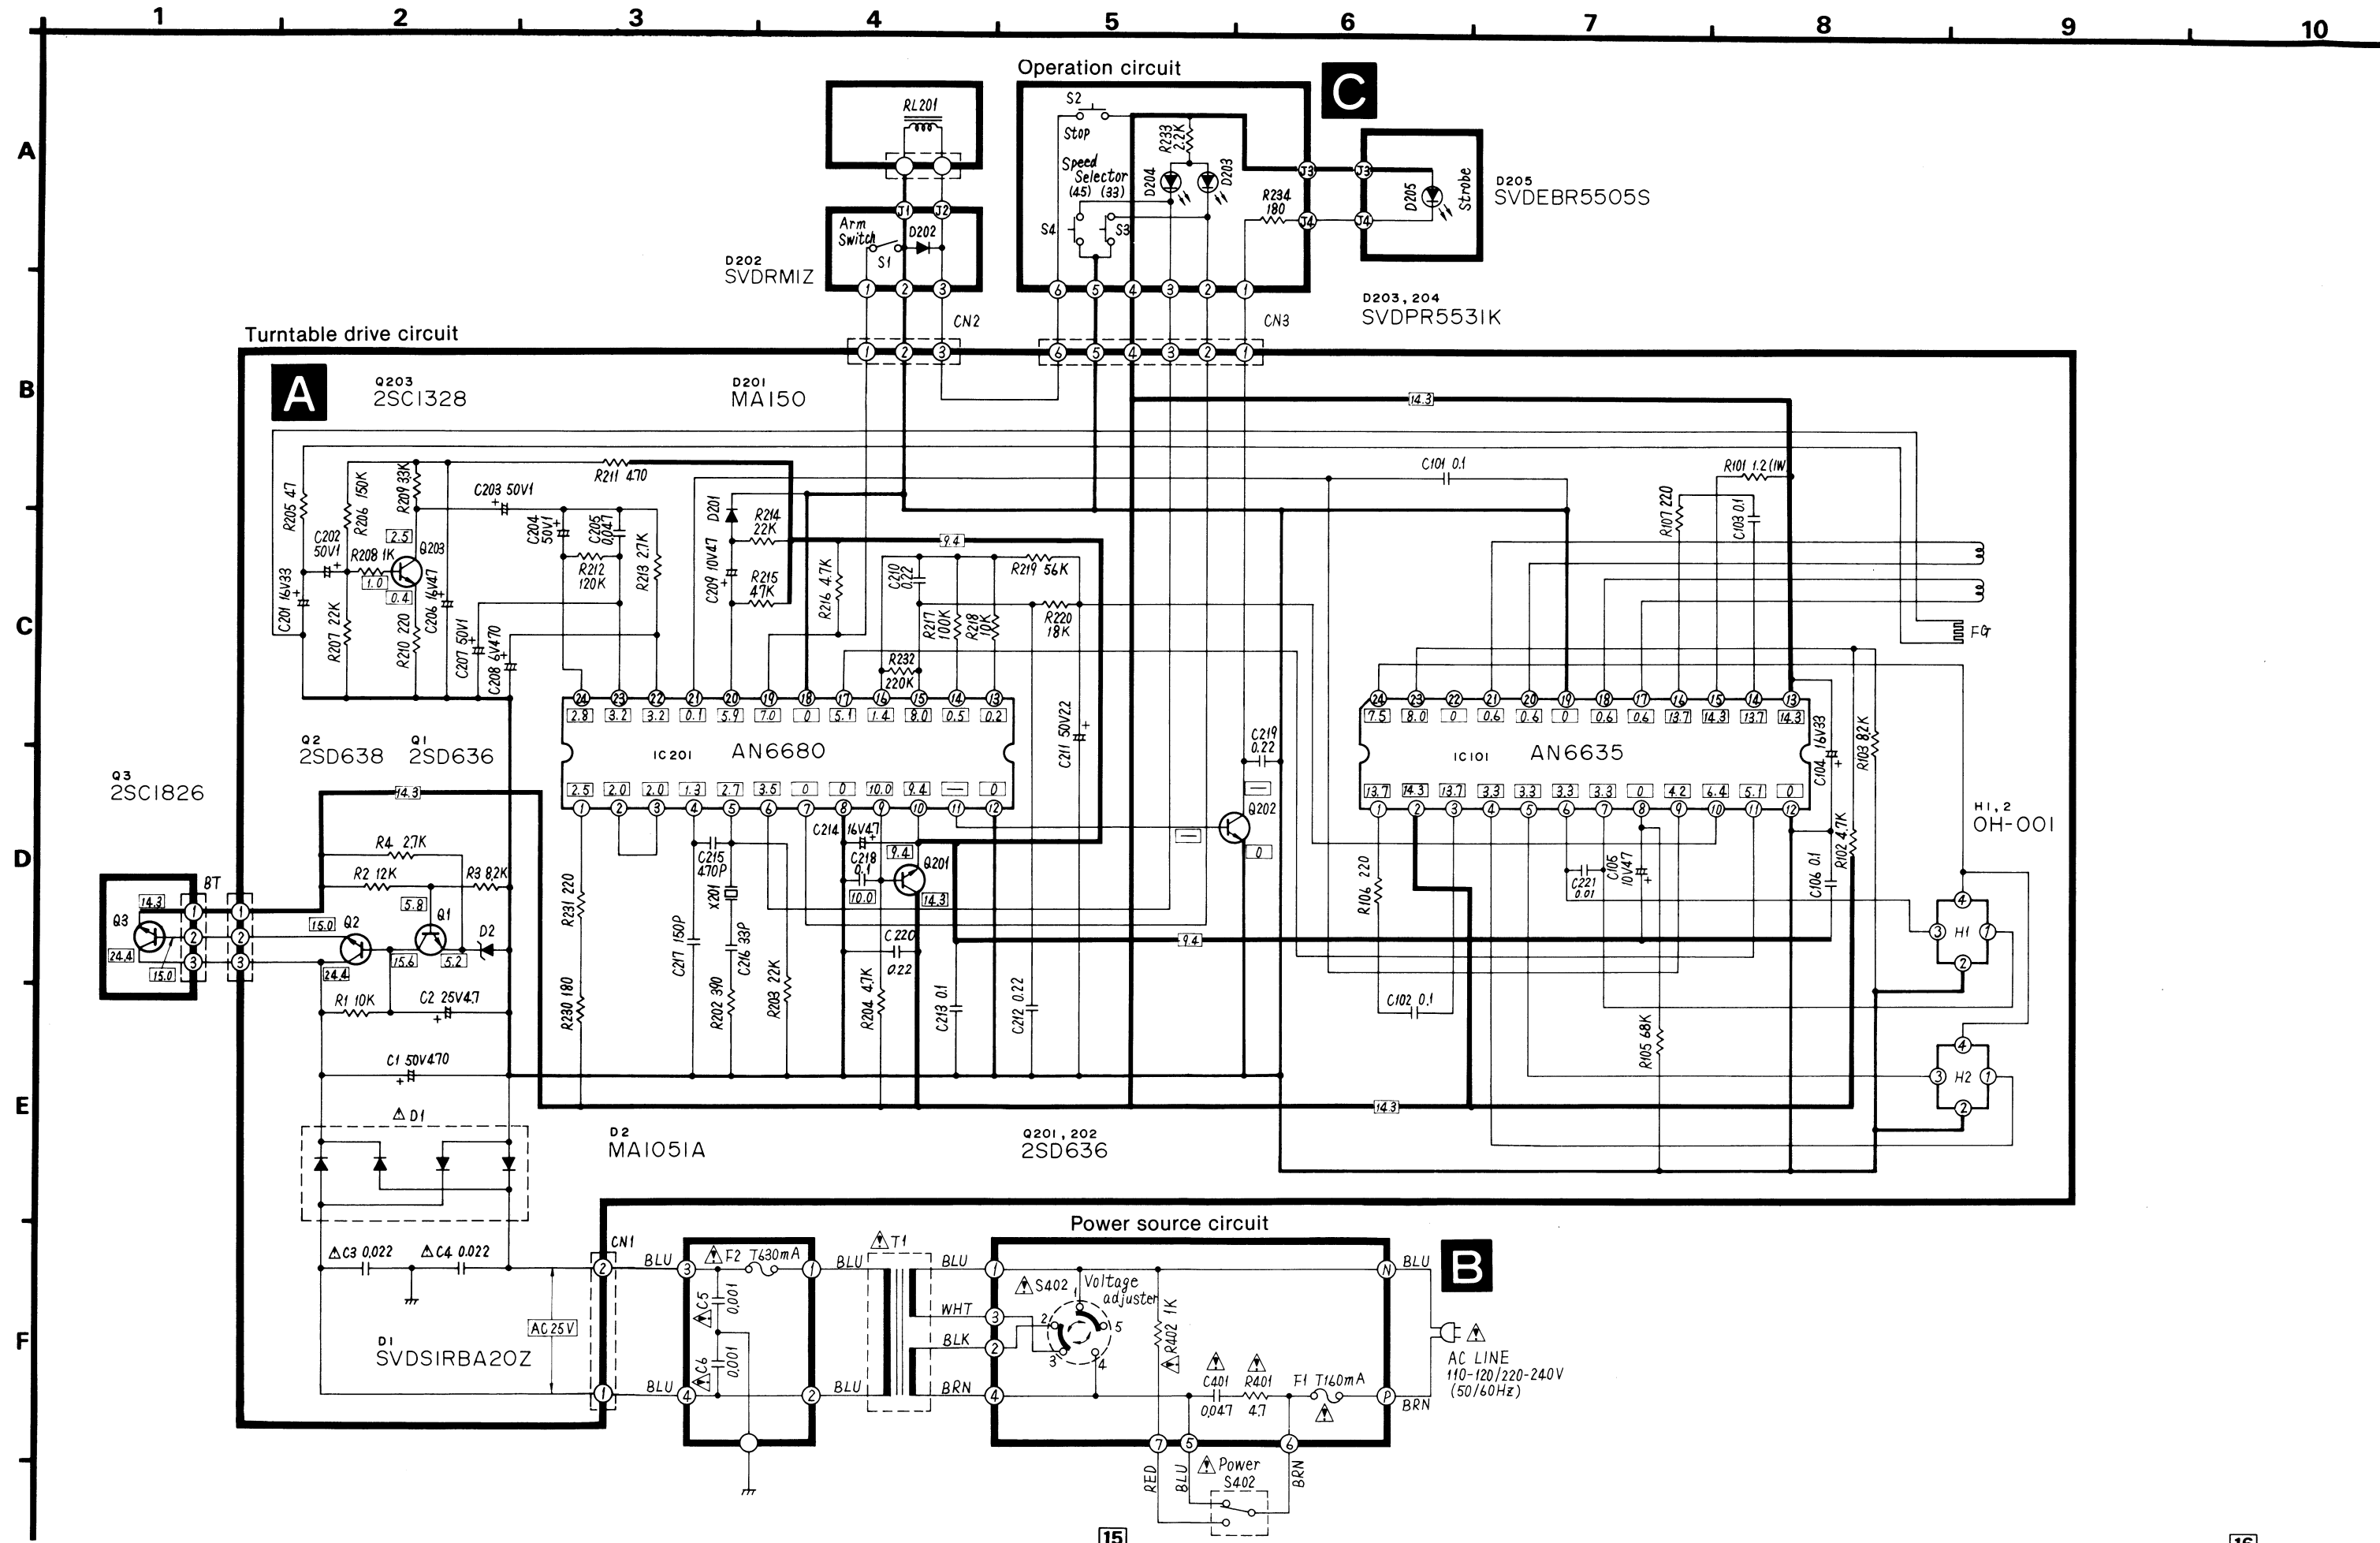

- Notes:
1. S1
 2. S2
 3. S3
 4. S4
 5. S4
 6. The me the Th ing co
 7. Im Co
 8. Wh
- Re Th IC1
- | No. | ① | ② | ③ | ④ | ⑤ | ⑥ | ⑦ | ⑧ |
|-----|---|---|---|---|---|---|---|---|
| IC2 | ① | ② | ③ | ④ | ⑤ | ⑥ | ⑦ | ⑧ |


the development of new technology.)

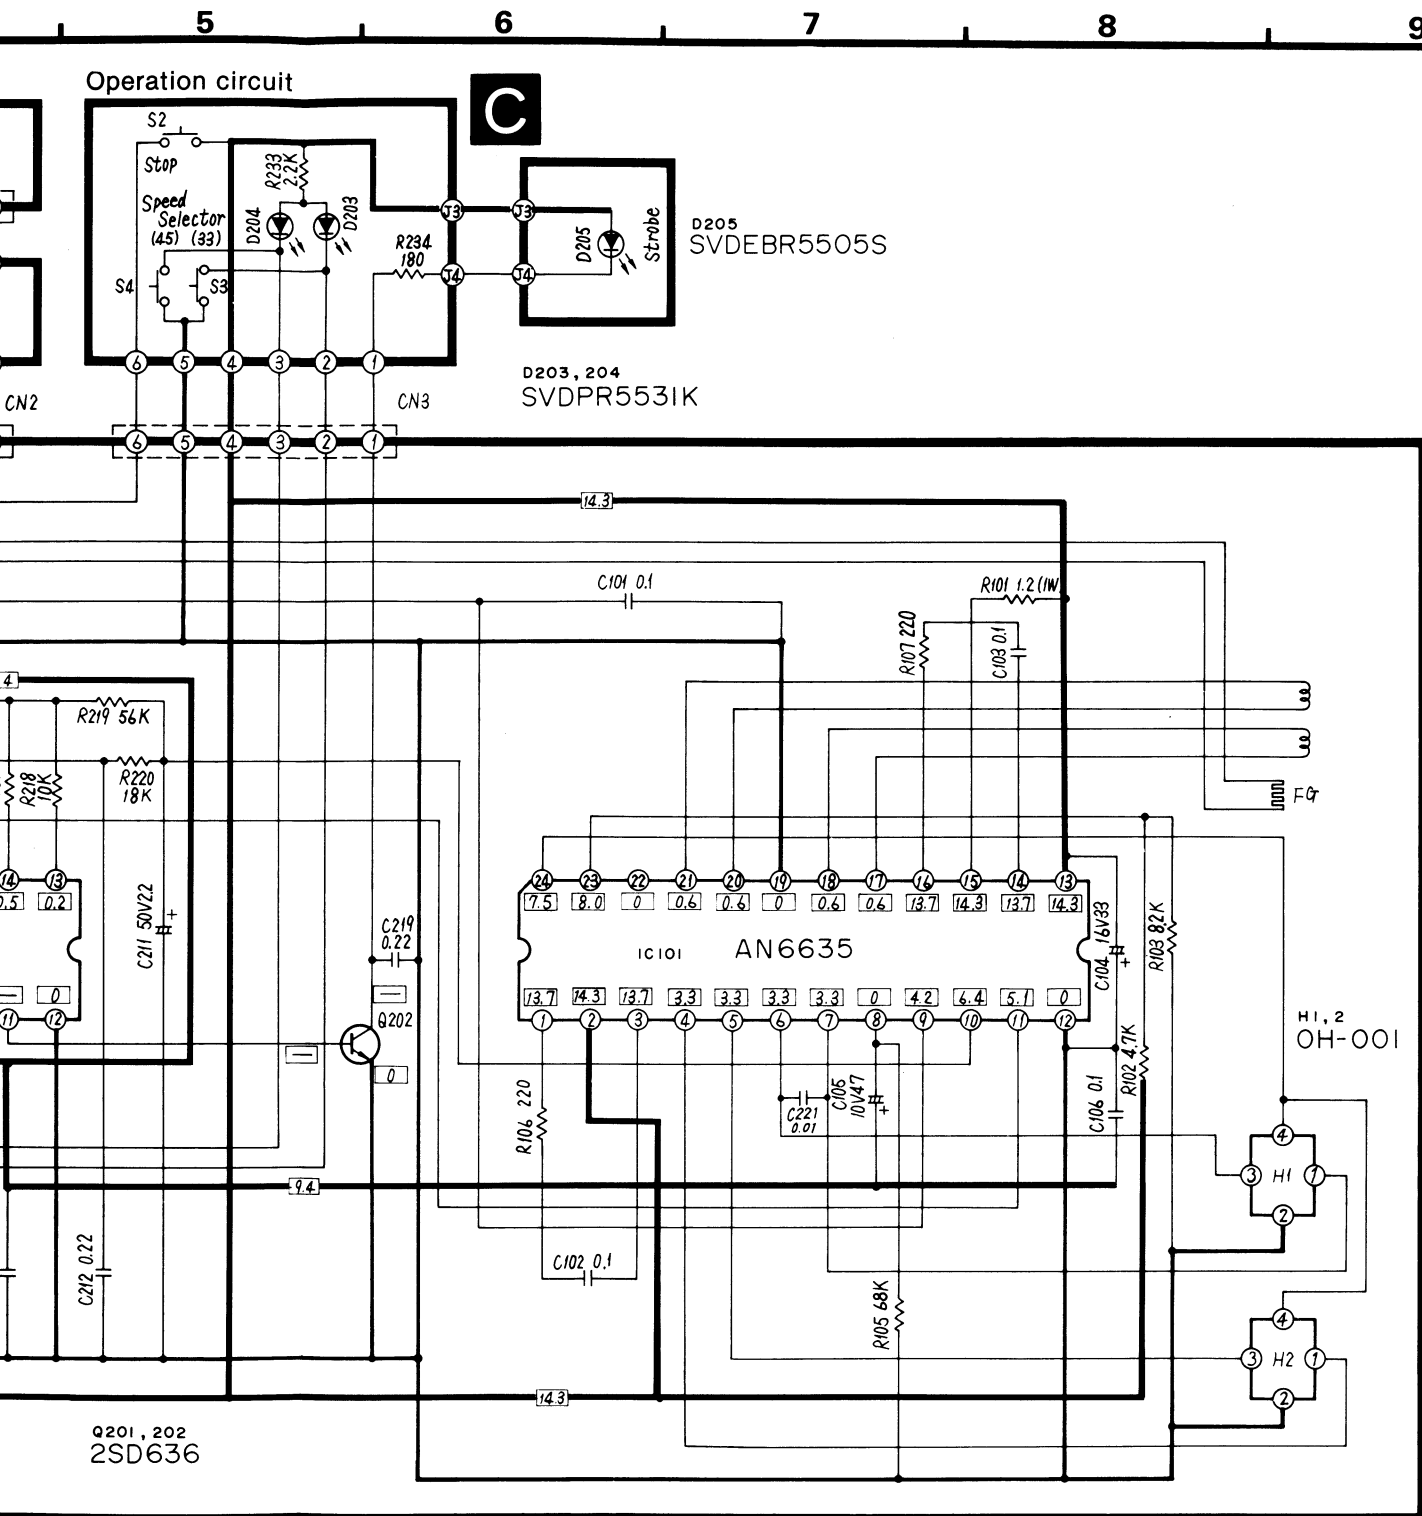

Notes:

1. S1 : Arm switch in "on" position.
2. S2 : Stop switch in "off" position. (not push condition)
3. S3, 4 : Speed selector switch in "off" position. (not push condition)
S3 33-1/3 r.p.m. S4 45 r.p.m.
4. S401 : Voltage adjuster switch in "220 - 240V" position. 110 - 120 → 220 - 240V
5. S402 : Power switch in "on" position.
6. The value in is the reference voltage at stop of turntable, measured by DC electronic circuit tester (high-impedance) on the basis of chassis. (S1 "on")
Therefore, the measured value may include some error depending on the internal impedance of DC circuit tester and other conditions.
7. + ⊕ voltage line.
8. Important safety Notice:
Components identified by mark have special characteristics important safety.
When replacing any of these components, use only manufacturer's specified parts.

Terminal guide of transistors and IC's

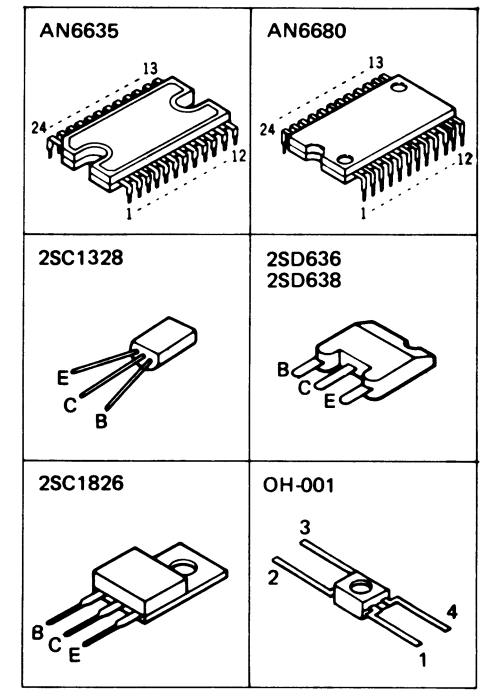

Reference voltage and waveform at each IC terminal (pin)


This indicated voltage values and waveform are measured by oscilloscope at 33 r.p.m. rotation.

IC101 (AN6635)


No.	Stop	Start	No.	Stop	Start	No.	Stop	Start
①	13.7V	13.7V	⑨	0.1V	4.2V	⑰		
②	14.3V	14.3V	⑩	6.4V	5.2V	⑱	0.6V	
③	13.7V	13.7V	⑪	5.1V	5.1V	⑳		
④	3.3V	3.3V	⑫	0V	0V	㉑		
⑤	3.3V	3.3V	⑬	14.3V	14.3V	⑲	0V	0V
⑥	3.3V	3.3V	⑭	13.7V	13.7V	㉒	0V	0V
⑦	3.3V	3.3V	⑮	14.3V	14.3V	㉓	8.0V	7.9V
⑧	0V	0V	⑯	13.7V	13.7V	㉔	7.5V	7.5V

IC201 (AN6680)

No.	Stop	Start	No.	Stop	Start	No.	Stop	Start
①	2.5V	2.5V	⑩	9.4V	9.4V	⑰	5.1V	5.1V
②		Same as at left	⑪		Same as at left	⑱	0V	0V
③			⑫			0V	0V	⑳
④		Same as at left	⑬	0.2V		㉑	0.1V	4.2V
⑤						Same as at left	⑭	
⑥	3.5V (45r.p.m. . . 0V)	3.5V (45r.p.m. . . 0V)		⑮	8.0V			
⑦	0V (45r.p.m. . . 4.0V)	0V (45r.p.m. . . 4.0V)	⑯	1.4V	5.2V	㉔		2.8V
⑧	0V	0V						
⑨	10.0V	10.0V						

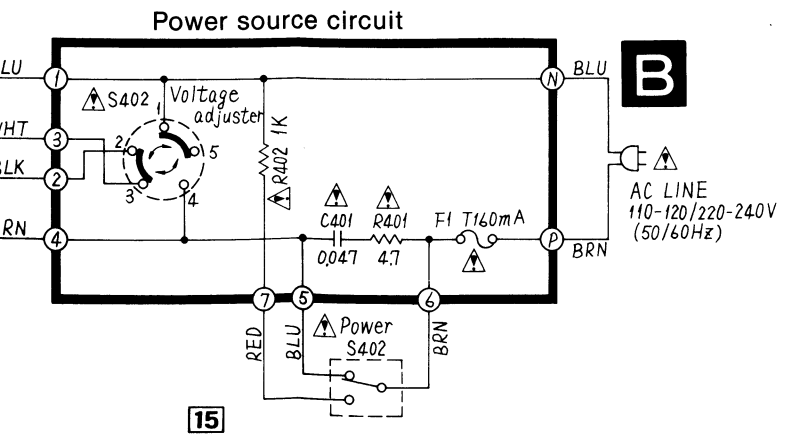

■ BLOCK DIAGRAM

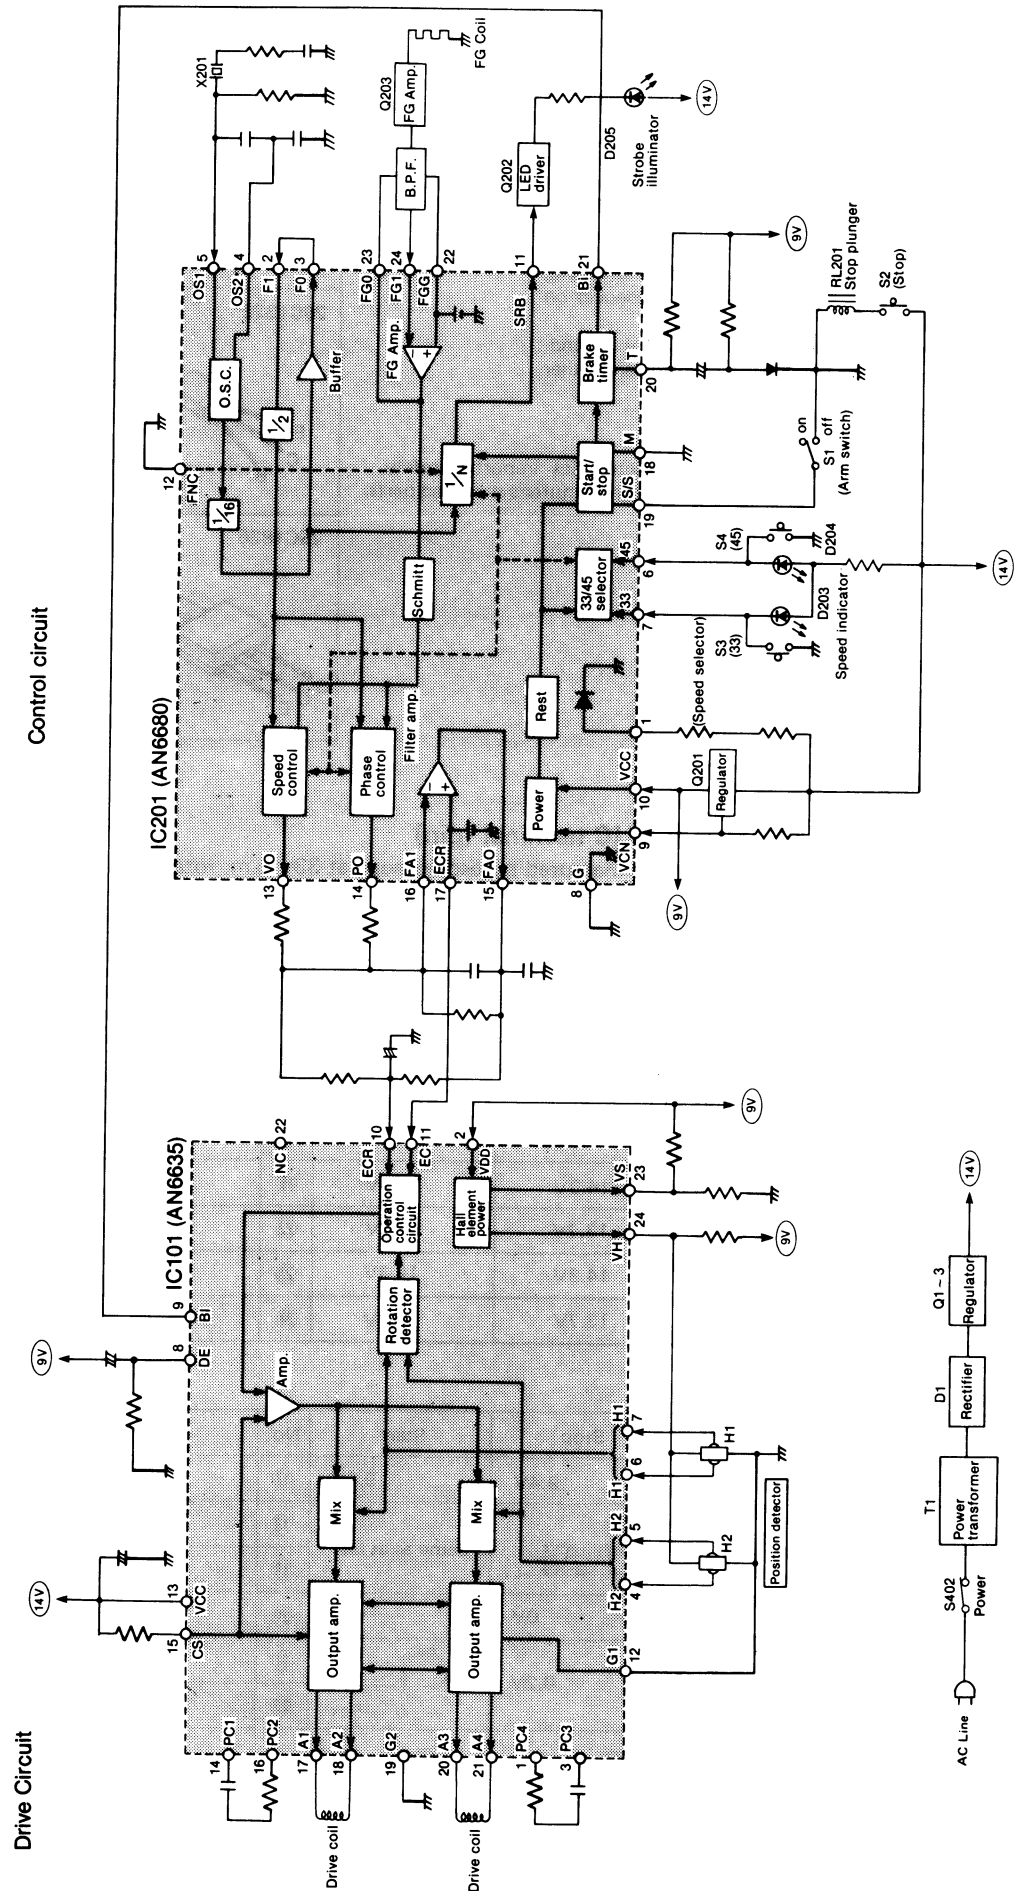

■ TROUBLE SHOOTING GUIDE

1. No rotation

Check point	Checking method	Possible defects
1 Power supply circuit	Q3 emitter voltage → 14.3V	Q1 ~ 3 D1, 2
2 Constant voltage circuit	Q201 emitter voltage → 9.4V	Q201
3 Control circuit (S/S circuit)	With arm switch (S1) turned on/off, the voltage changes of IC201 terminal ⑱ are as follows: S1 "on" → 7.0V "off" → 0V	S1 IC201
4 Drive circuit	Voltage at each terminal of IC101 (in start mode) (S1 "on")	IC101

Terminal	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫
Voltage	13.7	9.4	13.6	3.3	3.3	3.3	3.3	0	4.2	6.4	5.1	0
Terminal	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳	㉑	㉒	㉓	㉔
Voltage	14.3	13.7	14.3	13.6	0.6	0.6	0	0.6	0.6	0	8.0	7.5

Note: Besides the above-mentioned defects, burnt-out drive coil is also possible. But if it is on one phase, the motor rotates although the driving torque is halved. Also, it is possible that both Hall elements are defective.

2. Abnormal rotation

Check point	Checking method	Possible defects
1 FG amplifier circuit	Solder lead wire to terminal ㉓ of IC201; remove it from the bottom plate and measure the waveform in the state of rotation. (See Fig. 16)	Q203 IC201 FG coil pattern breakage
2 Control circuit (Reference voltage circuit)	Voltage of IC201 terminal ⑰ 5.1V	IC201

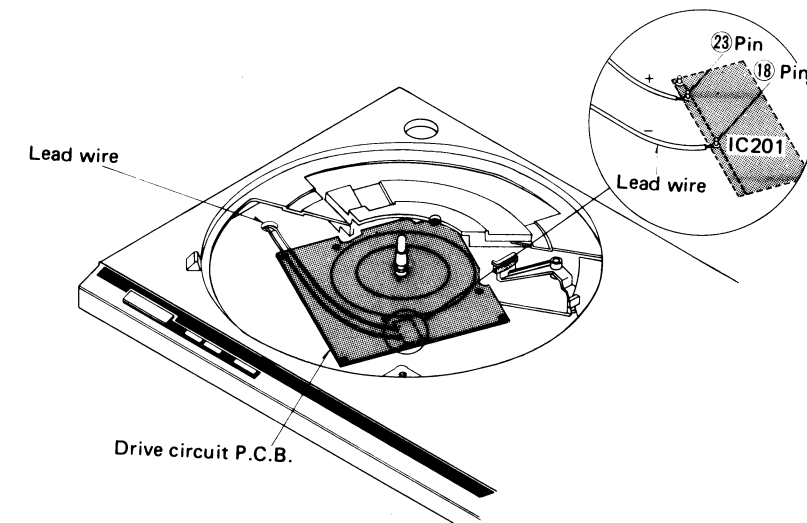


Fig. 16

Note:

•How to

Instr

1. CR o
2. Oscil
3. 50V


■ TROUBLE SHOOTING GUIDE

1. No rotation

Check point	Checking method	Possible defects																																																				
1 Power supply circuit	Q3 emitter voltage → 14.3V	Q1 ~ 3 D1, 2																																																				
2 Constant voltage circuit	Q201 emitter voltage → 9.4V	Q201																																																				
3 Control circuit (S/S circuit)	With arm switch (S1) turned on/off, the voltage changes of IC201 terminal ⑱ are as follows: S1 "on" → 7.0V "off" → 0V	S1 IC201																																																				
4 Drive circuit	Voltage at each terminal of IC101 (in start mode) (S1 "on") <table border="1" style="font-size: small;"> <tr> <td>Terminal</td> <td>①</td><td>②</td><td>③</td><td>④</td><td>⑤</td><td>⑥</td><td>⑦</td><td>⑧</td><td>⑨</td><td>⑩</td><td>⑪</td><td>⑫</td> </tr> <tr> <td>Voltage</td> <td>13.7</td><td>9.4</td><td>13.6</td><td>3.3</td><td>3.3</td><td>3.3</td><td>3.3</td><td>0</td><td>4.2</td><td>6.4</td><td>5.1</td><td>0</td> </tr> <tr> <td>Terminal</td> <td>⑬</td><td>⑭</td><td>⑮</td><td>⑯</td><td>⑰</td><td>⑱</td><td>⑲</td><td>⑳</td><td>㉑</td><td>㉒</td><td>㉓</td><td>㉔</td> </tr> <tr> <td>Voltage</td> <td>14.3</td><td>13.7</td><td>14.3</td><td>13.6</td><td>0.6</td><td>0.6</td><td>0</td><td>0.6</td><td>0.6</td><td>0</td><td>8.0</td><td>7.5</td> </tr> </table>	Terminal	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	Voltage	13.7	9.4	13.6	3.3	3.3	3.3	3.3	0	4.2	6.4	5.1	0	Terminal	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳	㉑	㉒	㉓	㉔	Voltage	14.3	13.7	14.3	13.6	0.6	0.6	0	0.6	0.6	0	8.0	7.5	IC101
Terminal	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫																																										
Voltage	13.7	9.4	13.6	3.3	3.3	3.3	3.3	0	4.2	6.4	5.1	0																																										
Terminal	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳	㉑	㉒	㉓	㉔																																										
Voltage	14.3	13.7	14.3	13.6	0.6	0.6	0	0.6	0.6	0	8.0	7.5																																										

Note: Besides the above-mentioned defects, burnt-out drive coil is also possible. But if it is on one phase, the motor rotates although the driving torque is halved. Also, it is possible that both Hall elements are defective.

2. Abnormal rotation

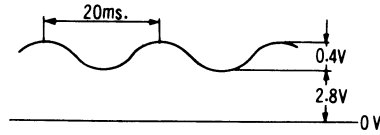Check point	Checking method	Possible defects
1 FG amplifier circuit	Solder lead wire to terminal ㉓ of IC201; remove it from the bottom plate and measure the waveform in the state of rotation. (See Fig. 16) 	Q203 IC201 FG coil pattern breakage
2 Control circuit (Reference voltage circuit)	Voltage of IC201 terminal ⑰ 5.1V	IC201

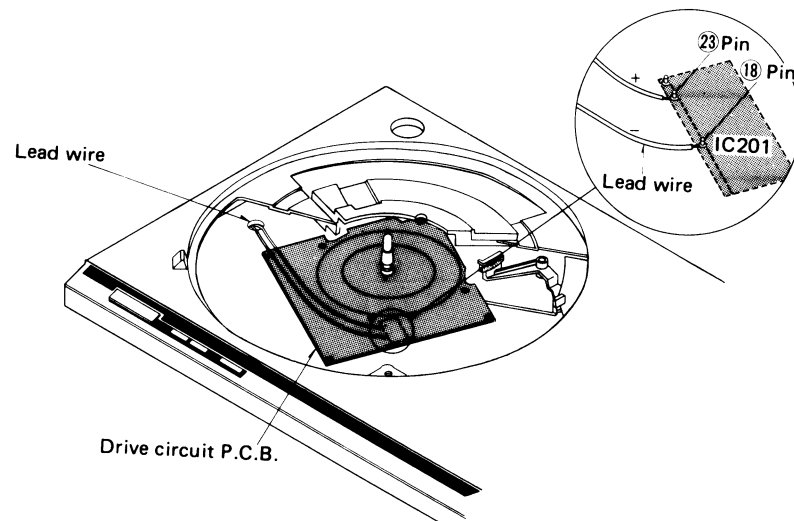
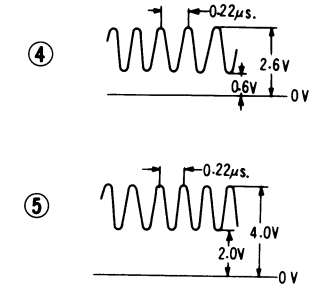
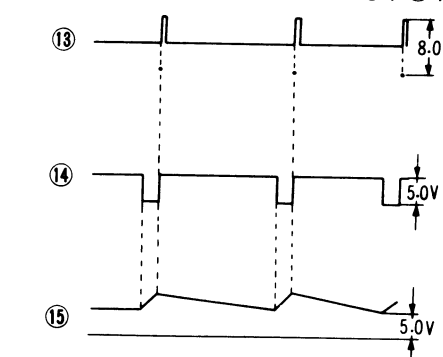



Fig. 16

3. Unstable rotation (Uneven rotation, repeat of normal and reverse rotations)

Check point	Checking method	Possible defects
1 Control circuit (Crystal oscillator)	Measure the waves at IC201 terminals ④ and ⑤. 	X201 IC201
2 Control circuit (Brake, timer circuit)	Voltage at IC201 terminals ⑳ and ㉑ . (S1 "on") ⑳ → 5.9V ㉑ → 4.2V	IC201 IC101
3 Control circuit (Control output circuit)	Instead of FG signal, apply FG signal by CR oscillator, (Refer to "How to check the control circuit.") Measure the waves at IC201 terminals ⑬, ⑭, ⑮. 	IC201

Note: Besides the above, it is possible that Hall elements are defective. In this case, the symptom may be that the turntable reversely rotates because the turntable position cannot be detected.

4. Others

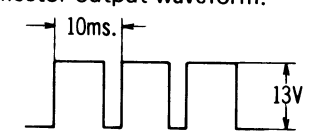Check point	Checking method	Possible defects												
1 Strobe LED does not light up.	Q202 collector output waveform. 	D205 Q202												
2 33/45 r.p.m. changeover is impossible.	Voltage at IC201 terminals ⑥ and ⑦. <table border="1" style="font-size: small;"> <tr> <td></td> <td>Speed</td> <td>33</td> <td>45</td> </tr> <tr> <td>Terminal ⑥</td> <td></td> <td>3.5V</td> <td>0V</td> </tr> <tr> <td>Terminal ⑦</td> <td></td> <td>0V</td> <td>4.0V</td> </tr> </table>		Speed	33	45	Terminal ⑥		3.5V	0V	Terminal ⑦		0V	4.0V	IC201 S3, 4
	Speed	33	45											
Terminal ⑥		3.5V	0V											
Terminal ⑦		0V	4.0V											

•How to check the control circuit

Instruments used


1. CR oscillator
2. Oscilloscope (Two channel type)
3. 50V 1µF electrolytic condenser

Setting



1. Remove the turntable and panel cover. (Refer to "Disassembly instructions".)
2. Remove the connector (CN2) from the arm switch.
3. Unsolder the positive ⊕ side of C203.

Checking procedure

- Solder the condenser to the negative ⊖ side of C203, and connect the CR oscillator to it.
Or, connect the oscillator to the positive ⊕ side of C203. (See Fig. 17)
- Checking the output of the oscillator on the oscilloscope, adjust so that the waveform becomes as shown below.



- Measure the waves at terminals ⑬, ⑭, ⑮ of IC201. When the output waveforms are as shown below, the control circuit is normal. However, because of the stability of the CR oscillator, the waveforms are not the same as those in normal rotation.

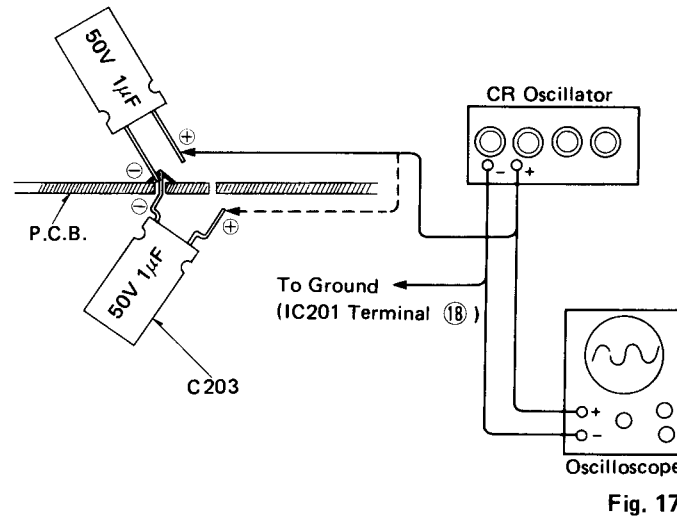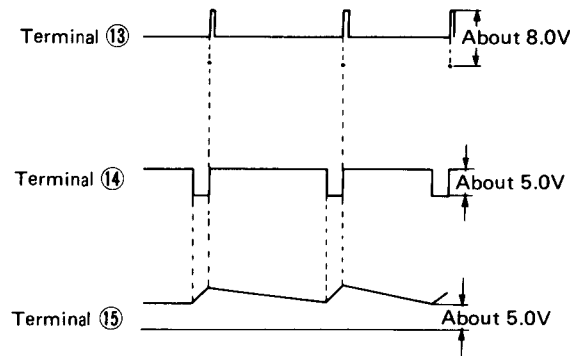

Ref. No.	Part No.	Part Name & Description
RESISTORS		
R1	ERD25FJ103	Carbon, 1/4W, 10kΩ, ± 5%
R2	ERD25TJ123	Carbon, 1/4W, 12kΩ, ± 5%
R3	ERD25FJ822	Carbon, 1/4W, 8.2kΩ, ± 5%
R4	ERD25FJ272	Carbon, 1/4W, 2.7kΩ, ± 5%
R101	ERX1ANJ1R2	Metal Oxide, 1W, 1.2Ω, ± 5%
R102	ERD25FJ472	Carbon, 1/4W, 4.7kΩ, ± 5%
R103	ERD25FJ822	Carbon, 1/4W, 8.2kΩ, ± 5%
R105	ERD25TJ683	Carbon, 1/4W, 68kΩ, ± 5%
R106, 107	ERD25FJ221	Carbon, 1/4W, 220Ω, ± 5%
R202	ERD25FJ391	Carbon, 1/4W, 390Ω, ± 5%
R203	ERD25TJ223	Carbon, 1/4W, 22kΩ, ± 5%
R204	ERD25FJ472	Carbon, 1/4W, 4.7kΩ, ± 5%
R205	ERD25FJ470	Carbon, 1/4W, 47Ω, ± 5%
R206	ERD25TJ154	Carbon, 1/4W, 150kΩ, ± 5%
R207	ERD25TJ223	Carbon, 1/4W, 22kΩ, ± 5%
R208	ERD25FJ102	Carbon, 1/4W, 1kΩ, ± 5%
R209	ERD25FJ332	Carbon, 1/4W, 3.3kΩ, ± 5%
R210	ERD25FJ221	Carbon, 1/4W, 220Ω, ± 5%
R211	ERD25FJ471	Carbon, 1/4W, 470Ω, ± 5%
R212	ERD25TJ124	Carbon, 1/4W, 120kΩ, ± 5%
R213	ERD25FJ272	Carbon, 1/4W, 2.7kΩ, ± 5%
R214	ERD25TJ223	Carbon, 1/4W, 22kΩ, ± 5%
R215	ERD25TJ473	Carbon, 1/4W, 47kΩ, ± 5%
R216	ERD25FJ472	Carbon, 1/4W, 4.7kΩ, ± 5%
R217	ERD25TJ104	Carbon, 1/4W, 100kΩ, ± 5%
R218	ERD25FJ103	Carbon, 1/4W, 10kΩ, ± 5%
R219	ERD25TJ563	Carbon, 1/4W, 56kΩ, ± 5%
R220	ERD25TJ183	Carbon, 1/4W, 18kΩ, ± 5%
R230	ERD25FJ181	Carbon, 1/4W, 180Ω, ± 5%
R231	ERD25FJ221	Carbon, 1/4W, 220Ω, ± 5%
R232	ERD25TJ224	Carbon, 1/4W, 220kΩ, ± 5%
R233	ERD25FJ222	Carbon, 1/4W, 2.2kΩ, ± 5%

Ref. No.	Part No.	Part Name & Description
R234	ERD25FJ181	Carbon, 1/4W, 180Ω, ± 5%
R401	ERD50FJ4R7	Carbon, 1/2W, 4.7Ω, ± 5%
R402	ERD25FJ102	Carbon, 1/4W, 1kΩ, ± 5%
CAPACITORS		
C1	ECEB1HS471	Electrolytic, 50V, 470μF
C2	ECEA25Z4R7	Electrolytic, 25V, 4.7μF
C3, 4	ECKD1H223ZF	Ceramic, 50V, 0.022μF, ± 80%
C5, 6	ECKD1H102KB	Ceramic, 50V, 0.001μF, ± 10%
C101, 102	ECQM1H104KZ	Polyester, 50V, 0.1μF, ± 10%
C103	ECQM1H104KZ	Polyester, 50V, 0.1μF, ± 10%
C104	ECEA1CS330	Electrolytic, 16V, 33μF
C105	ECEA1AS470	Electrolytic, 10V, 47μF
C106	ECKF1E104ZV	Ceramic, 25V, 0.1μF, ± 80%
C201	ECEA1CS330	Electrolytic, 16V, 33μF
C202, 203	ECEA50Z1	Electrolytic, 50V, 1μF
C204	ECEA50Z1	Electrolytic, 50V, 1μF
C205	ECQM1H473KZ	Polyester, 50V, 0.047μF, ± 10%
C206	ECEA1ES470	Electrolytic, 25V, 47μF
C207	ECEA50Z1	Electrolytic, 50V, 1μF
C208	ECEA0JS471	Electrolytic, 6.3V, 470μF
C209	ECEA1AS470	Electrolytic, 10V, 47μF
C210	ECQV05224JZ	TF, 50V, 0.22μF, ± 5%
C211	ECEA50Z2R2	Electrolytic, 50V, 2.2μF
C212	ECQV05224JZ	TF, 50V, 0.22μF, ± 5%
C213	ECKF1E104ZV	Ceramic, 25V, 0.1μF, ± 80%
C214	ECEA1ES470	Electrolytic, 25V, 47μF
C215	ECCD1H471K	Ceramic, 50V, 470pF, ± 10%
C216	ECCD1H330K	Ceramic, 50V, 33pF, ± 10%
C217	ECCD1H151K	Ceramic, 50V, 150pF, ± 10%
C218	ECKF1E104ZV	Ceramic, 25V, 0.1μF, ± 80%
C219, 220	ECQV05224JZ	TF, 50V, 0.22μF, ± 5%
C221	ECQM1H103KZ	Polyester, 50V, 0.01μF, ± 10%
C401 [Other Areas]	ECQE2A473MZ	Polyester, 250VAC, 0.047μF, ± 20%
C401 [E, EK, XL]	ECQU2A473MF	Polyester, 250VAC, 0.047μF, ± 20%

REPLACEMENT PARTS LIST...Electrical Parts

- Notes:**
- Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
 - Important safety notice: Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
 - Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.

Ref. No.	Part No.	Part Name & Description
INTEGRATED CIRCUITS		
IC101	AN6635	IC, Drive
IC201	AN6680	IC, Control
TRANSISTORS		
Q1, 201, 202	2SD636	Transistor, Regulator & Switching
Q2	2SD638	Transistor, Regulator
Q3	2SC1826	Transistor, Regulator
Q203	2SC1328-T	Transistor, FG Amplifier
DIODES		
D1	Δ SVDS1RBA20Z	Diode, Rectifier
D2	MA1051A	Diode, 5.1V Zener
D201	MA162A	Diode
D202	SVDRM1Z	Diode
D203, 204	SVDRP5531K	Light Emitting Diode, Speed Indicator (Red)
D205	SVDEBR5505S	Light Emitting Diode, Strobe
HALL ELEMENT		
H1, 2	OH-001	Hall Element, Turntable Position Detector

Ref. No.	Part No.	Part Name & Description
CRYSTAL		
X201	SVQU306115	Crystal, 4,19328MHz Counter Oscillator
SOLENOID		
RL201	SFDZQ34N01Z	Solenoid Ass'y, Start/Stop
SWITCHES		
S1	SFDSA2985	Switch, Arm (Rest) Switch
S2 ~ 4	EVQQJR02K	Switch, Stop & Speed Selector
S401	Δ SFDSHXW0225	Switch, Voltage Adjuster
S402	Δ SFDSQ34N05R	Switch, Power Source
FUSES		
F1	Δ XBAS2C016T1W	Fuse, T 0.16A 250V
F2	Δ XBA2C06TR0	Fuse, T 0.63A 250V
POWER TRANSFORMER		
T1	Δ SLT57P24E	Transformer, Power Source

Areas

- * [E] is available in Switzerland and Scandinavia.
- * [EK] is available in United Kingdom.
- * [XL] is available in Australia.
- * [EG] is available in F.R. Germany.
- * [EB] is available in Belgium.
- * [EF] is available in France.
- * [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.
- * [XM] is available in Central South America.
- * [EH] is available in Holland.
- * [Ei] is available in Italy.
- * [EC] is available in Czechoslovakia.


REPLACEMENT PARTS LIST... Cabinet, Chassis and Packing Parts

- Notes:**
1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
 2. Important safety notice:
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
 3. $\text{\textcircled{K}}$ -marked parts are used for black type only, while $\text{\textcircled{O}}$ -marked parts are for silver type only.
 4. Parts other than $\text{\textcircled{K}}$ and $\text{\textcircled{O}}$ -marked are used for both black and silver types.
 5. Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.

Black type model No. : SL-Q202 (K)


Ref. No.	Part No.	Part Name & Description
CABINET and CHASSIS PARTS		
1	SFTEQ22N01A	Turntable
2	SFTGQ22N01	Turntable Mat
5	$\text{\textcircled{O}}$ SFACQ22N01	Cabinet (Silver)
5	$\text{\textcircled{K}}$ SFACQ22N21	Cabinet (Black)
6	SFKKQ22G01	Surface Plate
7	SFUMQ34N22	Cover, Panel
8	SFATQ34N01A	Hinge
9	SFUMQ34N06	Cover, Transformer
10	SFUMQ11N09	Cover, Neon Lamp Strove
11	SFUMQ34N02	Guide, Power Switch
13	SFUMQ34N12	Plate, Power Switch
14	SFUMQ34N13	Plate, Power Knob
15	SFKTQ34N02	Knob, Power
16	SFXJQ34N02	Shaft, Power
17	SFQAD20-01	Spring, Power
18	SFKTQ34N01	Knob, Cueing
19	SFUMQ34N23	Slider, Cueing
20	SFXJQ34N01	Shaft Guide
21	SFUMQ34N04	Rink, Cueing (A)
22	SFXOQ34N01	Pipe, Cueing
23	SFQA130-11	Spring, Cueing
24	SFYB-5-32	Ball, Cueing
25	SFUMQ22N01	Guide, Speed Selector/Stop Switch
26	SFKTQ34N03	Knob, Speed Selector/Stop Switch
27	SFGZD11N01	Spacer, LED Speed
33	SFUMQ34N11	Rink, Cueing (B)
34	SFUZQ34N02	Rod, Cueing
35 [Other Areas]	Δ SJA137	AC Cord
35 [EK]	Δ SJA139	AC Cord
35 [XL]	Δ SJA141	AC Cord
36 [XL]	SFUMQ34N09	Bushing, AC Cord
36 [Other Areas]	SFUMQ34N10	Bushing, AC Cord
37	SFDJQ34N03E	Connector Ass'y 6P
38	SFDJQ34N04E	Connector Ass'y 2P
39 [E]	SFNNQ22S01	Name Plate
39 [EK, XL]	SFNNQ22G01	Name Plate
39 [XA, XM]	SFNNQ22X01	Name Plate
39 [Other Areas]	SFNNQ22R01	Name Plate

EXPLODED VIEWS.....Cabinet

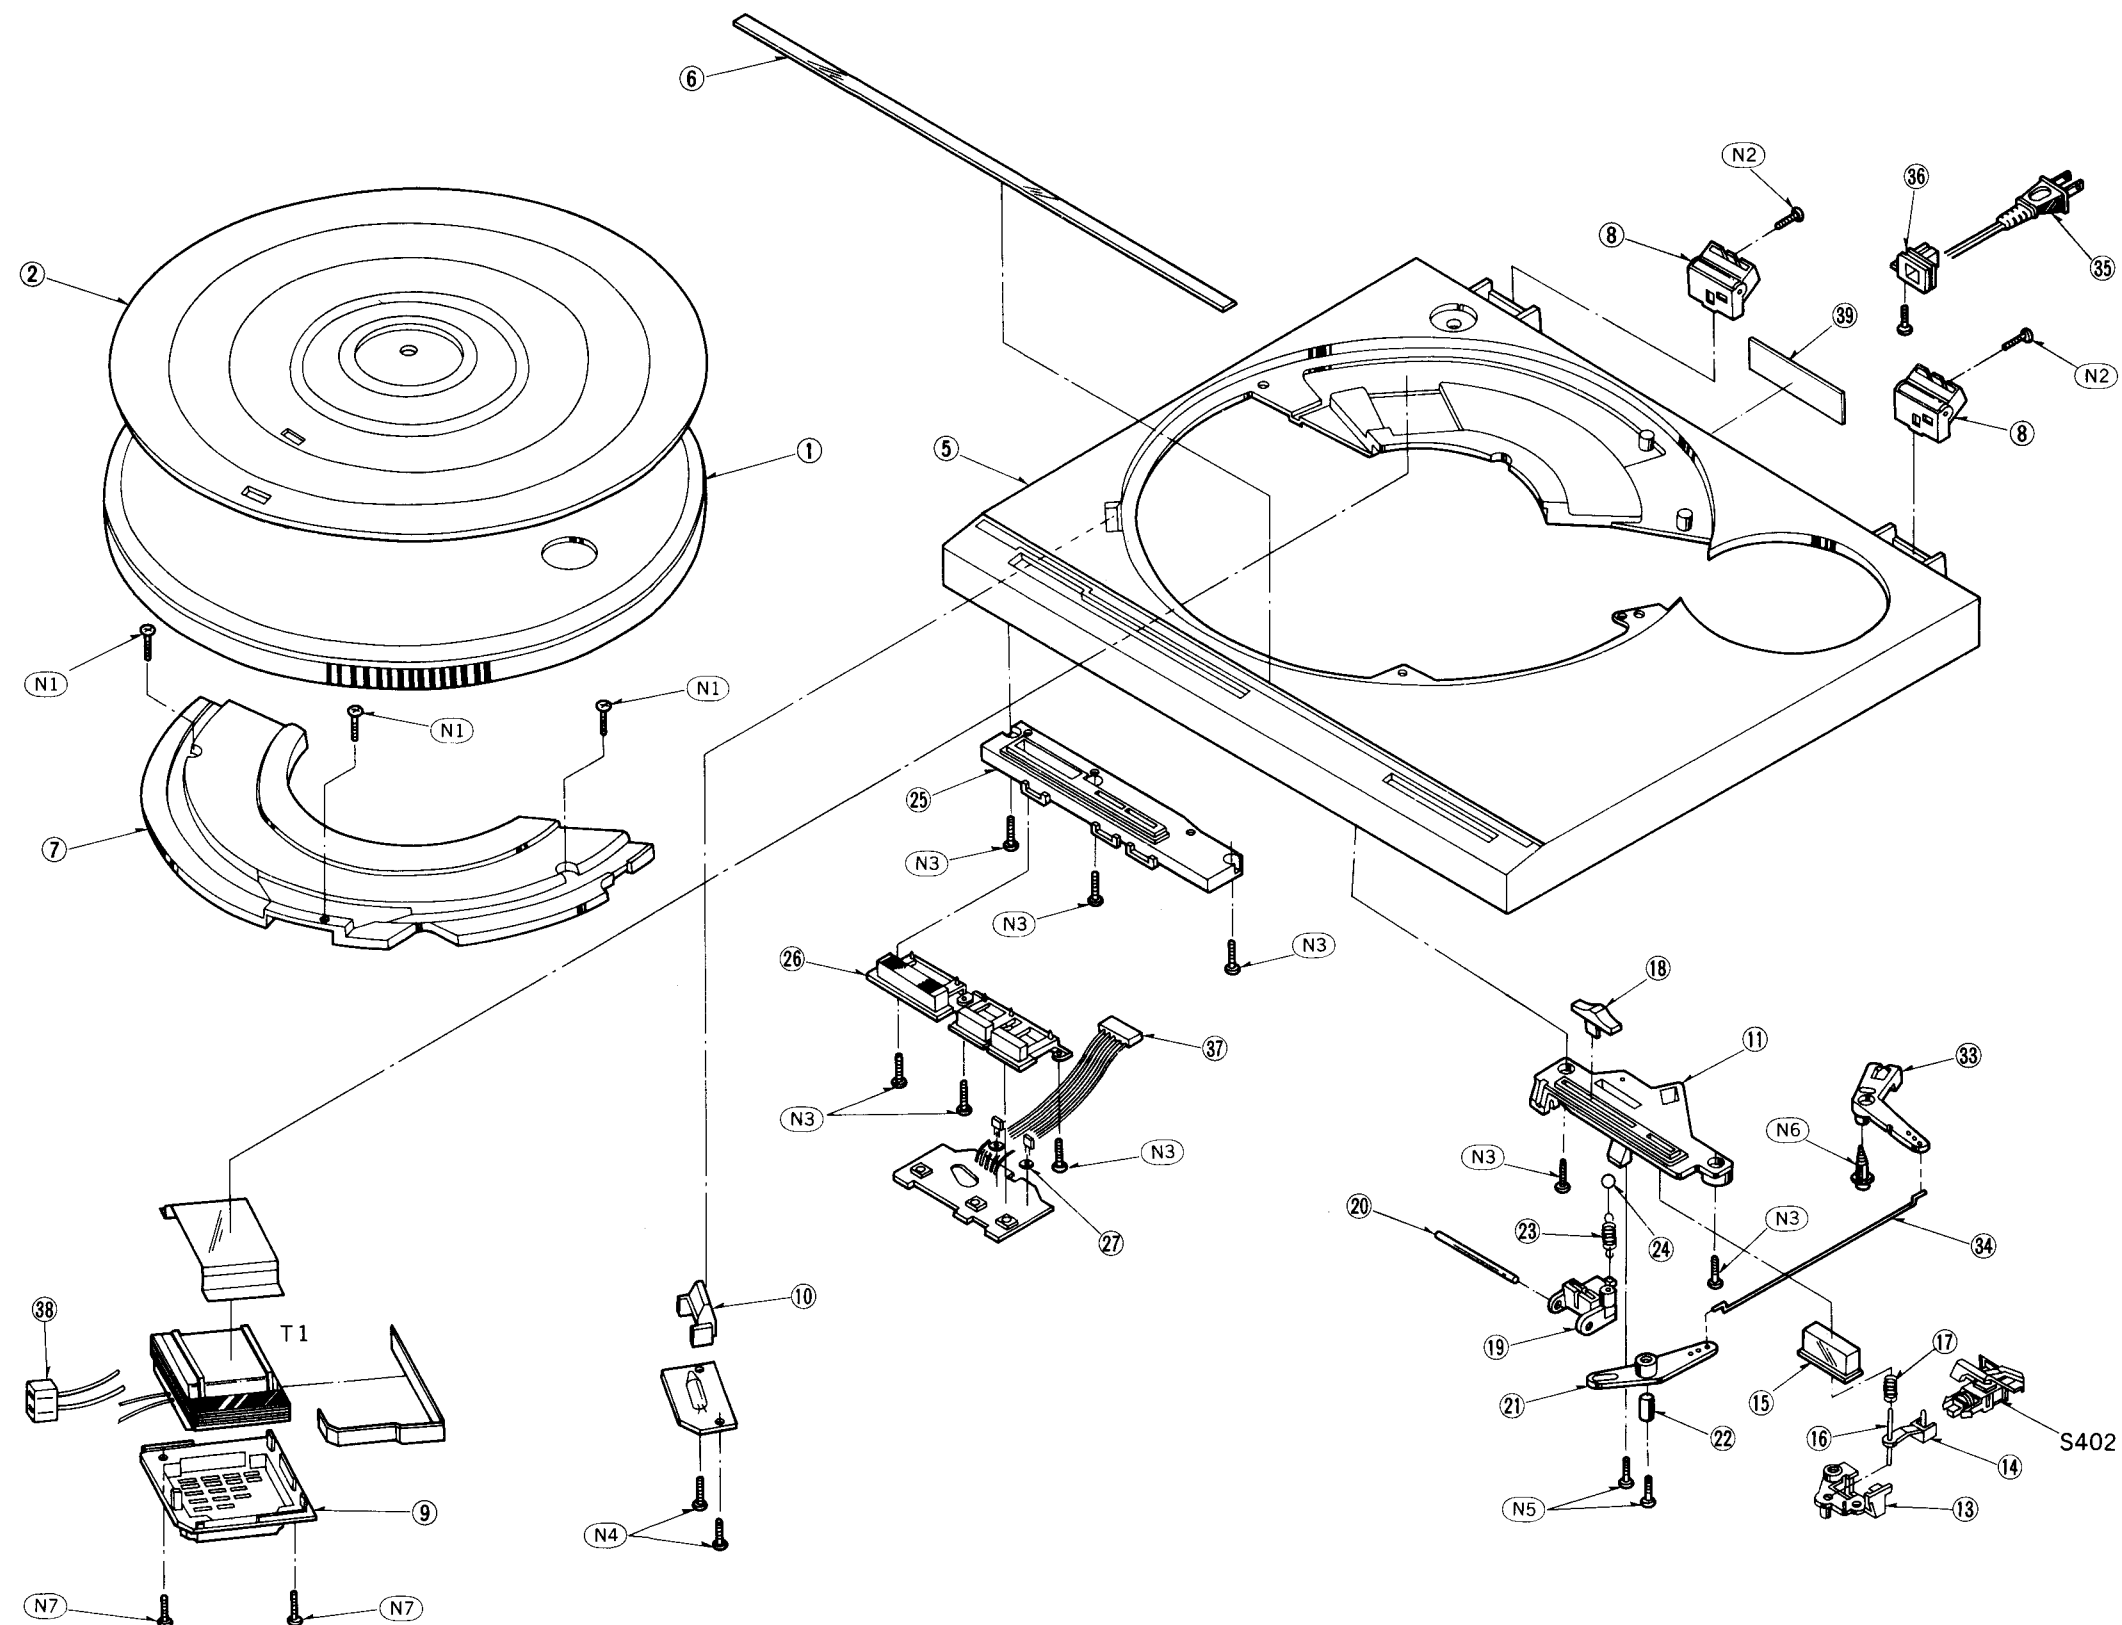


EXPLODED VIEWS.....Main Base and Tonearm

Ref. No.	Part No.	Part Name & Description
MAIN BASE and TONE ARM PARTS		
50	SFAUQ34N01	Bottom Board
51	SFUMQ34N08	Supporter, Mechanism Plate (A)
52	SFUMQ34N14	Supporter, Mechanism Plate (B)
53	SFUMQ34N15	Supporter, Drive P.C.B.
54	SFUMQ34N16	Supporter, Clamper
55	SFUPQ34N01	Cover, Gear
56	SFUZQ34N06E	Latch, Gear Cover
57	SFMZQ34N04	Spacer, Driver P.C.B.
58	SFGAQ34N01	Rubber Insulator
59	SFQHQ34N01	Spring, Insulator Front & Rear Left
61	SFQHQ34N03	Spring, Insulator Rear Right
62	SFUMQ34N07E	Foot, Insulator
105	SFMZQ34N01A	Stater Frame Ass'y
TONE ARM PARTS		
70	SFPAM30301A	Tone Arm (Silver)
70	SFPAM30302A	Tone Arm (Black)
71	SFPWG30301A	Balance Weight
72	SFPCC31002K	Head Shell
73	SFPRT30301E	Arm Rest
74	SFPRT30302E	Lift Arm
75	SFPSP30304	Spring, Left Arm
76	SFGK170-01	Rubber Cap (Silver)
76	SFGK171F01	Rubber Cap (Black)
77	SFPKD30301	Base, Tone Arm (Silver)
77	SFPKD30302	Base, Tone Arm (Black)
78	SFPAB30310	Sub Base, Tone Arm
79	SFPAB30305A	Plate, Lift Ass'y
80	SFPAB30301A	Plate, Tone Arm
81	SFDH212-01	Phono Cord
82	SFEL028-01E	Ground Wire
83	SFUMQ34N10	Bushing, Phono Cord
84	SFPSP30302	Spring, Anti-Skate Force Control
85	SFPJK30301	Knob, Anti-Skate Force Control
86	EPC-U25S	Cartridge, * Not available as Parts,
	EPS-25CS	Stylus Please Order to Sales de Partment
SCREWS, WASHERS and CIRCLIPS		
N1	XTW3+14GFZ	Screw, Tapping, ⊕ 3 x 14
N2	XTV3+8BFZ	Screw, Tapping, ⊕ 3 x 8
N3	XTV3+8BFN	Screw, Tapping, ⊕ 3 x 8
N4	XTW3+8T	Screw, Tapping, ⊕ 3 x 8
N5	XTW3+10Q	Screw, Tapping, ⊕ 3 x 10
N6	SFXGQ20-01	Screw, Tapping
N7	XTW3+10TFZ	Screw, Tapping, ⊕ 3 x 10
N8	XTV3+10BFN	Screw, Tapping, ⊕ 3 x 10
N9	XTW4+10QFZ	Screw, Tapping, ⊕ 4 x 10
N10	XTW4+30TFYR	Screw, Tapping, ⊕ 4 x 30
N11	XTS3+16BFZ	Screw, Tapping, ⊕ 3 x 16
N12	SFXGQ34N02	Screw, Tapping
N13	XYN3+C12S	Screw, Tapping, ⊕ 3 x 12
N14	XYN3+C8S	Screw, Tapping, ⊕ 3 x 8
N15	XUC3FT	Circlip, φ3
N16	XUB4FT	Circlip, φ4
N17	SFXWQ34N26	Washer
N18	SFXWQ30-11	Washer
N19	XUC5FT	Circlip, φ5
N20	XWE4BW	Washer, φ4
N21	SFXWQ34N21	Washer
N22	XTV3+6BFN	Screw, Tapping, ⊕ 3 x 6
N23	XUC2FT	Circlip, φ2
N24	SFPEW9601	Washer, Cartridge
N25	SFCZV8800	Screw, Cartridge

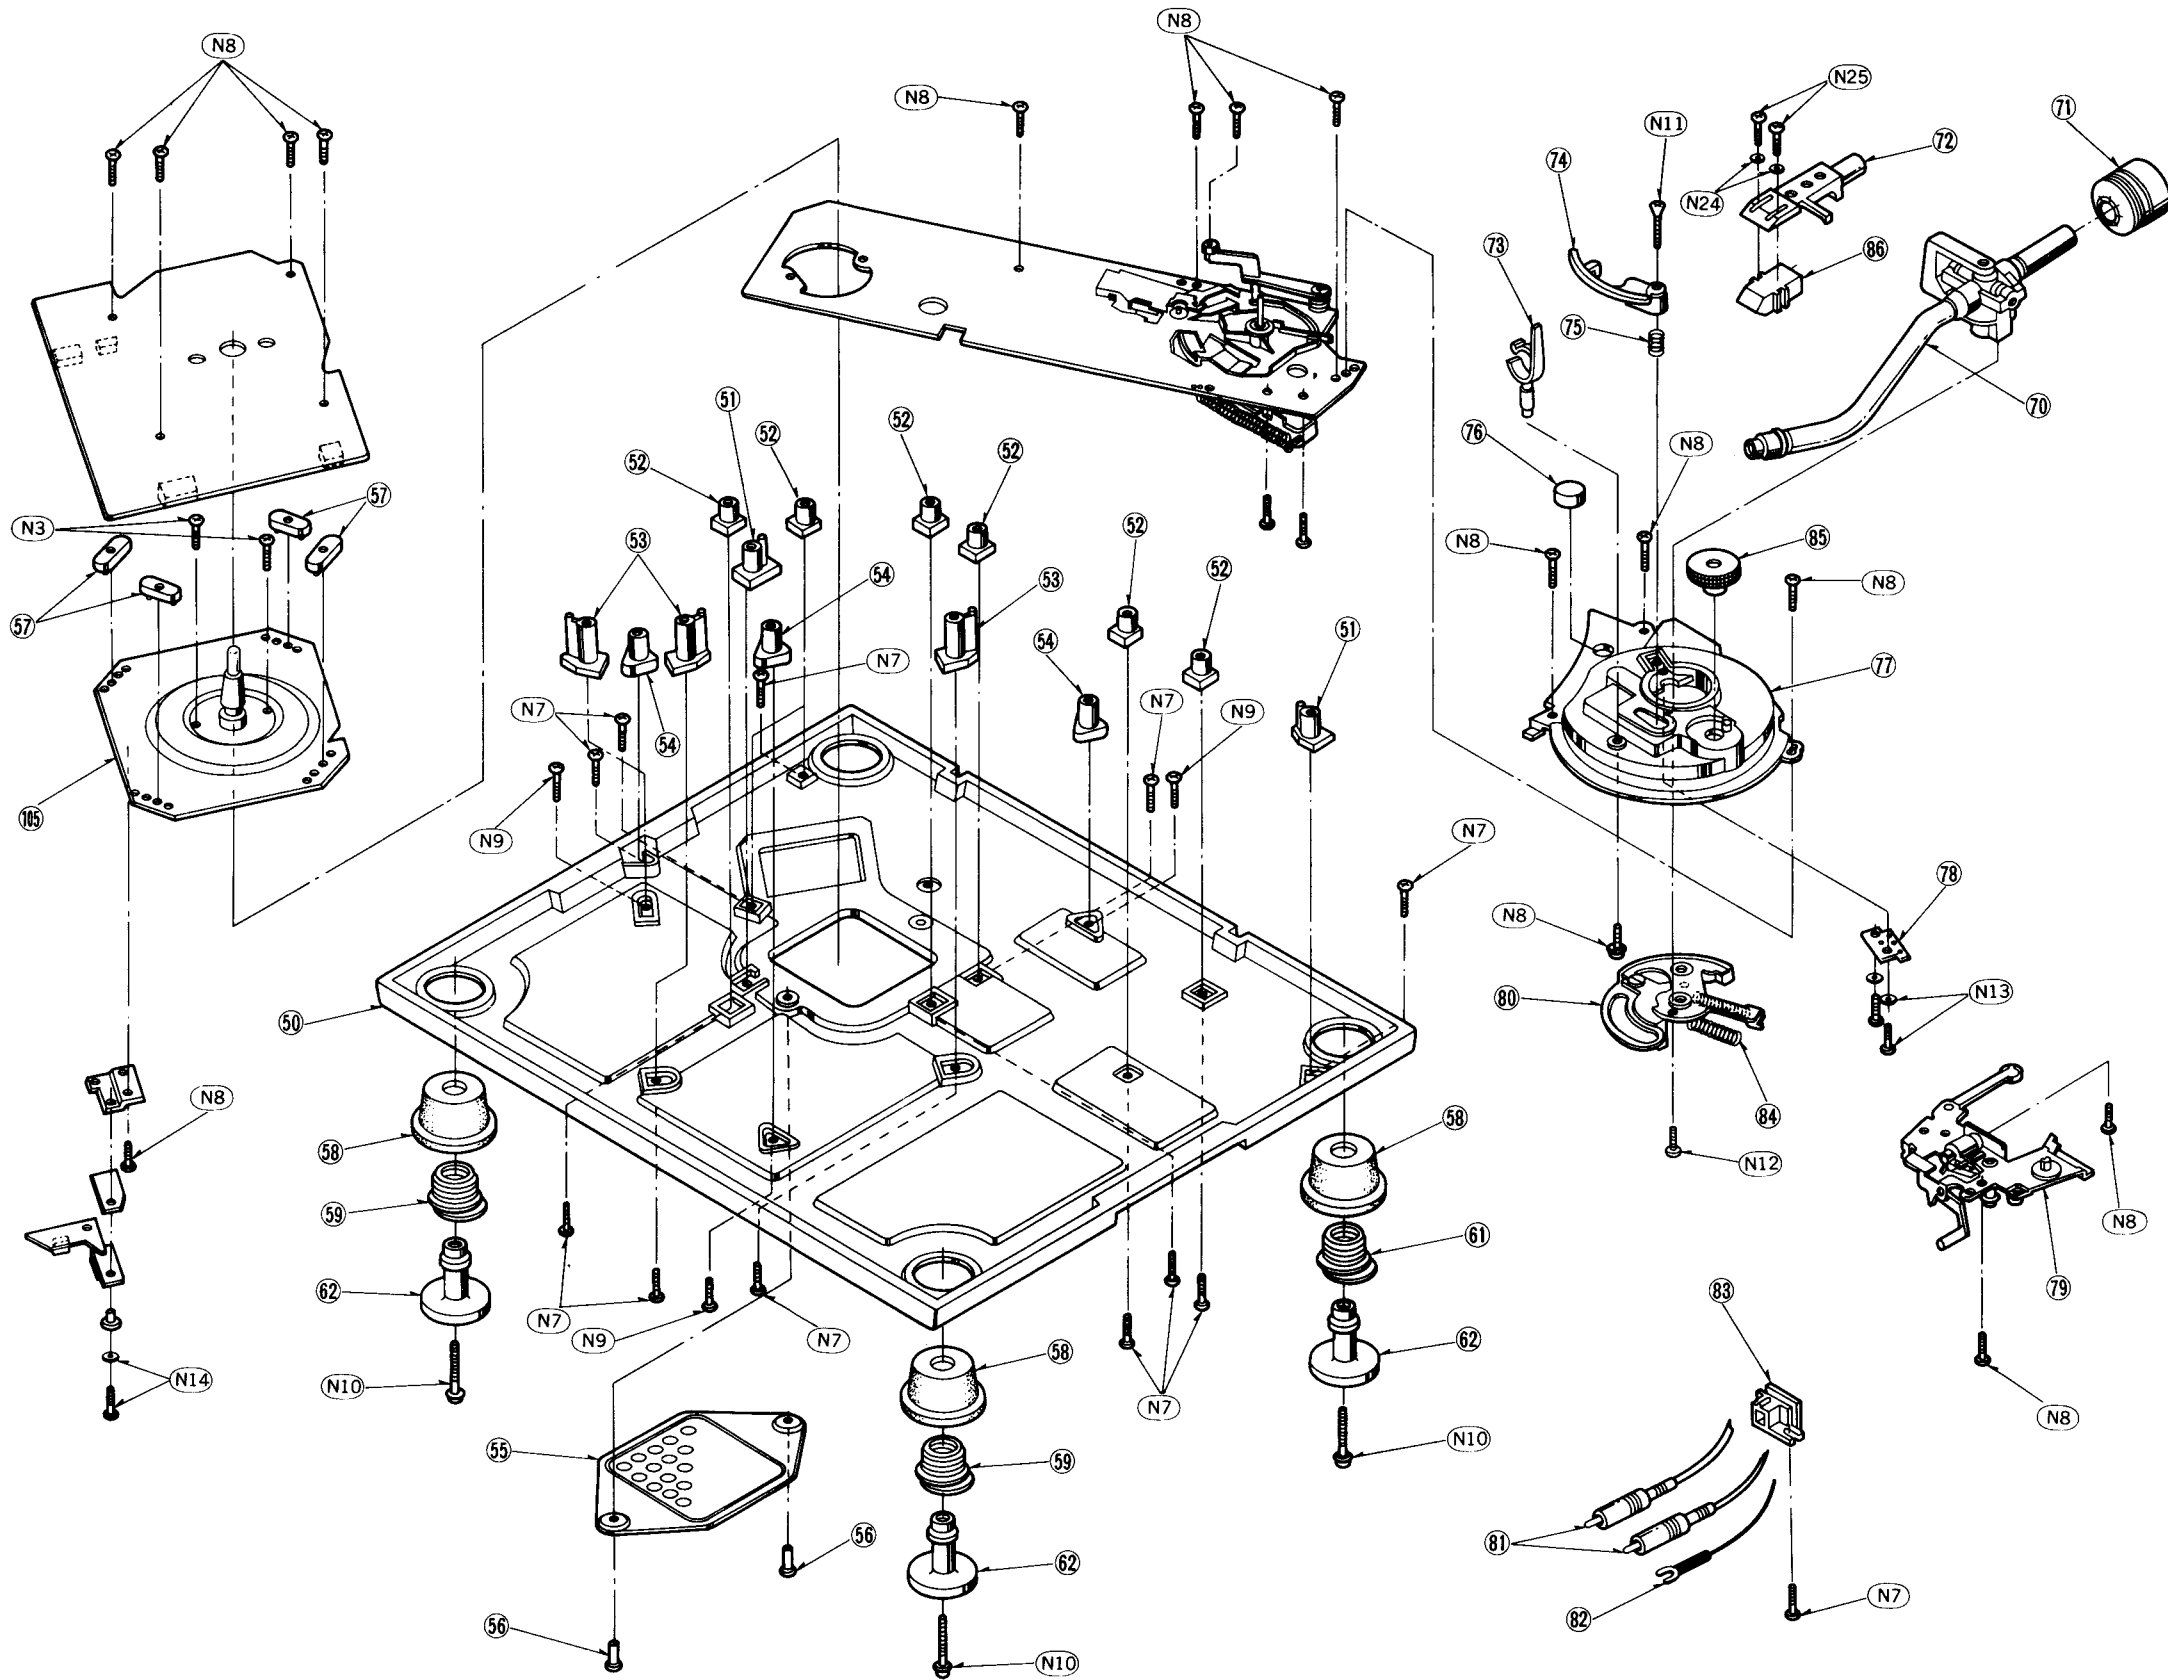

EXPLODED VIEWS.....Automatic Mechanism Plate

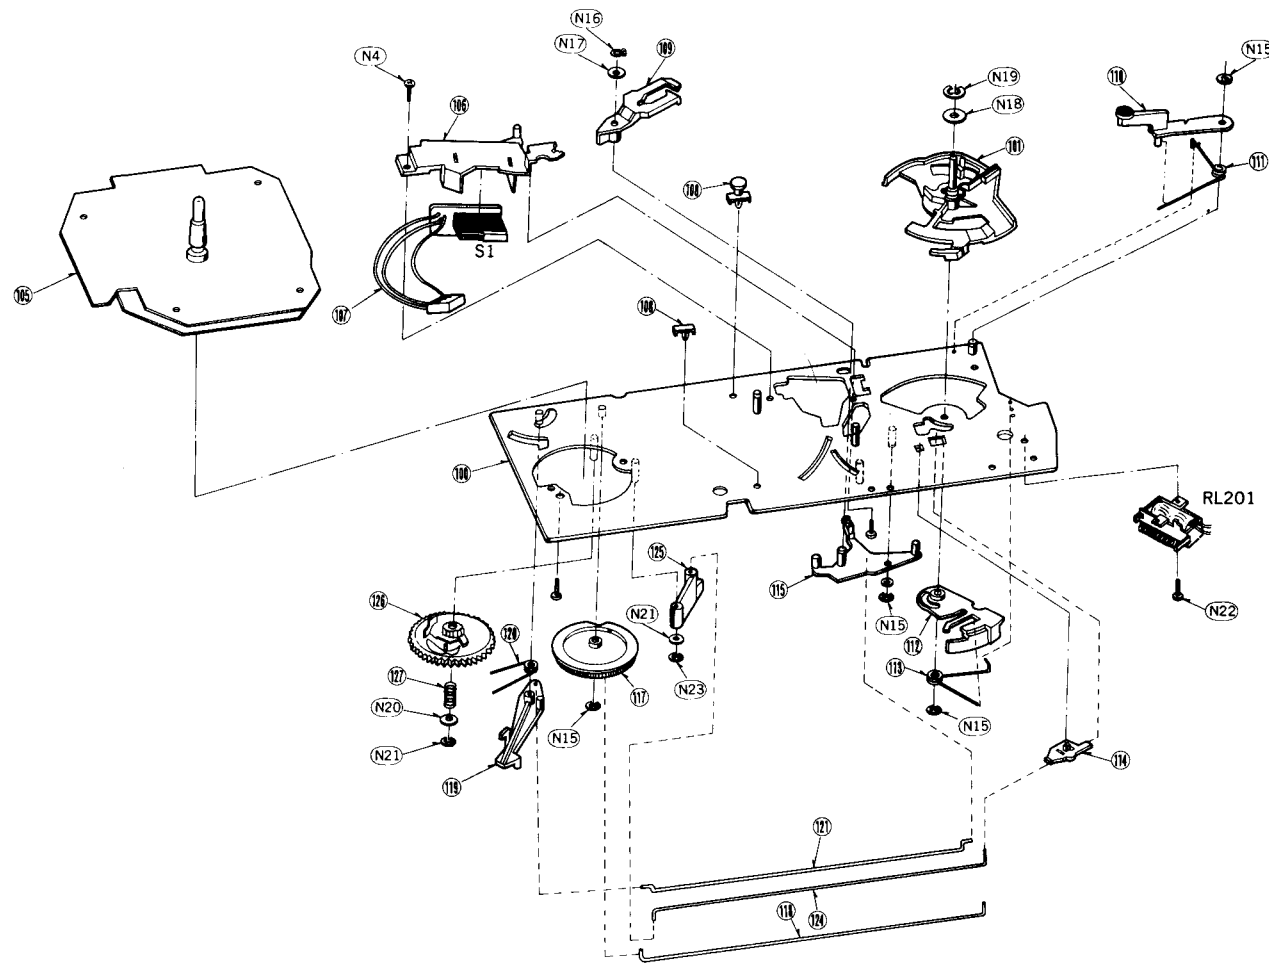


Ref. No.	Part No.	Part Name & Description
AUTOMATIC MECHANISM ASS'Y		
100	SFUKQ22N01E	Plate, Automatic Mechanism
101	SFUMQ22N03E	Cam, Drive
105	SFMZQ34N01A	Stator Frame Ass'y
106	SFUMQ34N36	Case, Switch
107	SFDJQ34N02E	Connector Ass'y 3P
108	SFEZQ34N01	Clamper
109	SFUMQ34N38	Lever, Stop
110	SFUMQ34N43	Plate, Brake
111	SFQSQ34N28	Spring, Brake
112	SFUMQ22N02E	Cam, Start
113	SFQSQ22N01	Spring, Start
114	SFUMQ34N32	Support, Actuating Rod
117	SFUGQ34N22	Gear, Drive
118	SFQSQ34N22	Rod, Drive
119	SFUMQ34N31	Plate, Stop Gear
120	SFQSQ34N21	Spring, Stop Gear
121	SFQSQ34N26	Rod, Switch
124	SFQSQ34N23	Rod, Actuating
125	SFUMQ34N42	Connector, Actuating
126	SFUGQ34N21E	Main Gear Ass'y
127	SFQAQ34N21	Spring, Main Gear
ACCESSORIES		
A1 [E]	SFNUQ22S01	Instructions Book, Printed Matter
A1 [EK]	SFNUQ22G01	Instructions Book, Printed Matter
A1 [Other Areas]	SFNUQ22X01	Instructions Book, Printed Matter
A2	SFWE212-01	Adaptor, 45r.p.m.
A3	SFCZB30505	Shell Weight

Ref. No.	Part No.	Part Name & Description
PACKING PARTS		
P1	○ SFHPQ22M01	Carton Box (Silver)
P1 [EF] only	○ SFHPQ22C01	Carton Box (Silver)
P1	⊗ SFHPQ22M21	Carton Box (Black)
P2	SFHHQ34N01	Pad, Front
P3	SFHHQ34N02	Pad, Rear
P4	SFHDQ34N01	Pad, Turntable
P5	SFHZ144X02	Sheet
P6	SFYH60X60	Polyethylene Bag, Unit & Dust Cover
P7	SFYF09A15	Polyethylene Bag, Accessories
P8	SFYH40X45	Polyethylene Bag, Turntable
P9 [XA, XM]	SFHDQ34X01	Front, Pad
P10 [XA, XM]	SFHDQ34X02	Rear, Pad

Areas

- * [E] is available in Switzerland and Scandinavia.
- * [EK] is available in United Kingdom.
- * [XL] is available in Australia.
- * [EG] is available in F.R. Germany.
- * [EB] is available in Belgium.
- * [EF] is available in France.
- * [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.
- * [XM] is available in Central South America.
- * [EH] is available in Holland.
- * [Ei] is available in Italy.
- * [EC] is available in Czechoslovakia.

PACKINGS

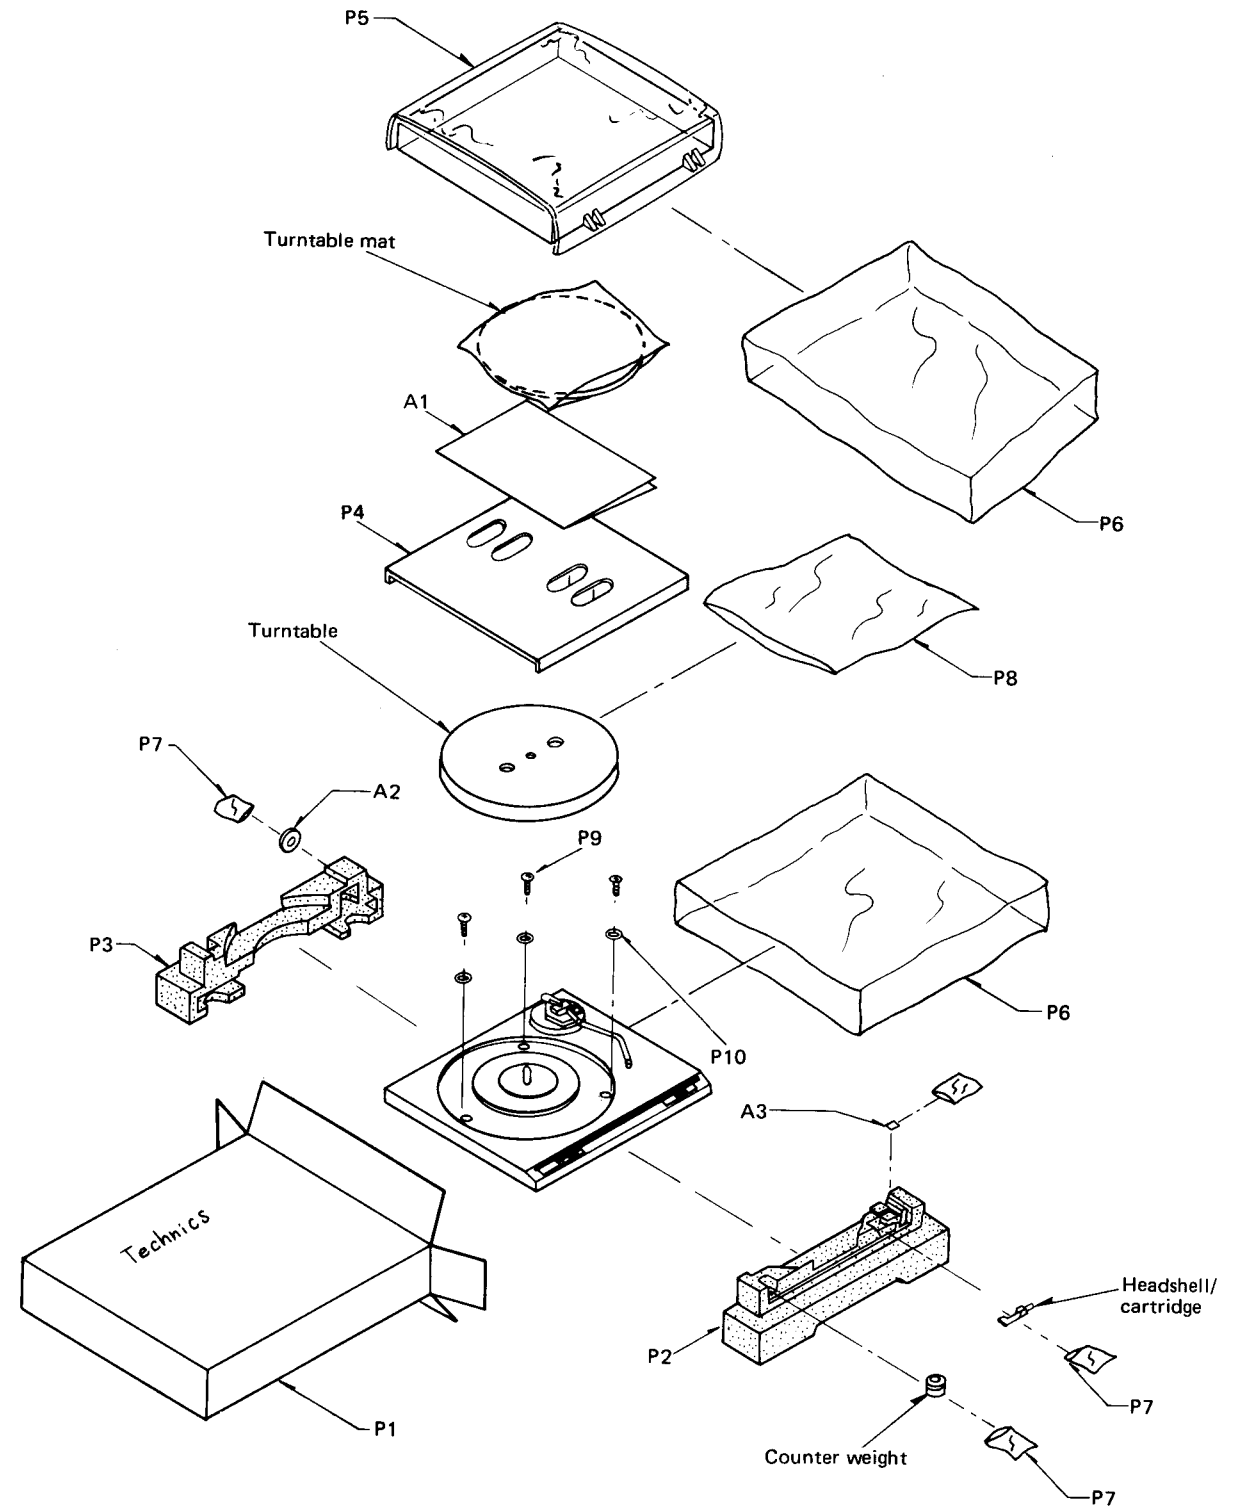

Parts Change Notice

File this bulletin with your Service manual

MODEL NO: SL-Q202/SL-Q202(K)
ORDER NO: SD81061945C8

FILE No. SL-Q202/K(E,XA)-1

Subject: Change of Parts Number.

Please revise the original parts list in the Service Manual to conform to the change(s) shown herein. If new part numbers are shown, be sure to use them when ordering parts.

① Reason for Change					
<input type="checkbox"/>	1 Improve performance				
<input type="checkbox"/>	2 Change of material				
<input type="checkbox"/>	3 Change of dimension				
<input type="checkbox"/>	4 To meet approved specification				
<input type="checkbox"/>	5 Standardization				
<input type="checkbox"/>	6 Addition				
<input type="checkbox"/>	7 Deletion				
<input type="checkbox"/>	8 Correction				
<input type="checkbox"/>	9 Other ()				
② Interchangeability Code					
Parts		Set Production			
A	Original		Early		Original or new parts may be used in early or late production set. Use original parts until exhausted, then stock new parts.
	New		Late		
B	Original		Early		Original parts may be used in early production sets only. New parts may be used in early or late production sets. Use original parts where possible, then stock new parts.
	New		Late		
C	Original		Early		New parts only may be used in early or late production sets. Stock new parts.
	New		Late		
D	Original		Early		Original parts may be used in early production sets only. New parts may be used in late production sets only. Stock both original and new parts.
	New		Late		
Part Number					
①	②	Ref. No.	Original Part No.	New Part No.	Part Name & Descriptions
<input checked="" type="checkbox"/>	<input type="checkbox"/>	40	Addition	SFADQ34N01E	Dust Cover
<input type="checkbox"/>	<input type="checkbox"/>				
<input type="checkbox"/>	<input type="checkbox"/>				
<input type="checkbox"/>	<input type="checkbox"/>				
<input type="checkbox"/>	<input type="checkbox"/>				
<input type="checkbox"/>	<input type="checkbox"/>				
<input type="checkbox"/>	<input type="checkbox"/>				

Technics

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

Printed in Japan
81090860 ©TK

SERVICE NEWS

**NPS National Panasonic
Service GmbH**

- 2 -

Nr.: 186	Datum: 26.3.1982	WL/RI	26/82
THEMA	TEXT		
SLQ 202, Q 303 SLD 202, D 303 SLB 303	Bitte folgende Teile wechseln und Ausführungen durchführen. 1. Stopfeder (SFQSQ 34N21) 2. Antriebsrad (SFQSQ 34N26) 3. Schmiermittel beseitigen mit mit neuem Fett versehen.		