# Service Manual

QUARTZ Direct Drive Automatic Turntable System



#### Color

(S)..... Silver Type (K) .... Black Type

#### Note:

Only models for U.S A. and Canada are not provided with cartridge

is the standard mark for plug-in-connector system Products carrying this mark are interchangeable and compatible with each other

Turntable System

SL-QD33

Color	Areas
(S) (K)	[M] U.S.A
(S) (K)	[MC] Canada
(S) (K)	[E] Switzerland and
	Scandinavia.
(S) (K)	[EK] United Kingdom.
(S) (K)	[XL] Australia
(S) (K)	[EG] FR Germany.
(S) (K)	[EB] Belgium.
(S) (K)	[EH] Holland
(S) (K)	[EF] France.
(S) (K)	[Ei] Italy.
(S) (K)	[EC] Czechoslovakia.
(S) (K)	[XA] Asia, Latin
	America, Mıddle
	near East, Africa
	and Oceania.

# SPECIFICATIONS

#### **■ TURNTABLE SECTION**

Quartz direct drive Type:

Automatic turntable

Auto-start Auto-return Auto-stop Repeat play Manual play

Drive method: Direct drive

Brushless-DC motor Motor:

Drive control method: Quartz phase locked control

Turntable platter:

Aluminum die-cast

Diameter 31.2 cm (12-9/32") 33-1/3 rpm and 45 rpm

Turntable speeds: Wow and flutter:

0 012% WRMS\*

0.025% WRMS (JIS C5521) ±0 035% Weighted zero to peak

(IEC 98A weighted)

\* This rating refers to turntable assembly alone, excluding effects of record, cartridge or tonearm, but including Measured by obtaining signal from built-in frequency generator of motor assembly

Rumble: -56 dB DIN-A

> (IEC 98A unweighted) -78 dB DIN-B

# TONEARM SECTION

Type: Static-balanced straight tonearm

Plug-in-connector cartridge

system

Effective length: 230 mm (9-1/16") Overhang: 15 mm (19/32")

Tracking error angle: Within 2°32' at outer groove of

30 cm (12") record

Within 0°32' at inner groove of

13.5 g (including cartridge)

30 cm (12") record

Effective mass: Stylus pressure

adjustment range: 1 25±0 25 g

Applicable cartridge

weight: 6 g

# CARTRIDGE SECTION

(Except for U.S.A. and Canada) Type: Moving magnet stereo cartridge

Magnet circuit: All laminated core 10 Hz~40 kHz Frequency response:

(IEC 98A weighted)

Matsushita Services Company 50 Meadowland Parkway, Secaucus, New Jersey 07094

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. Ave 65 De Infanteria, KM 9 7

Victoria Industrial Park

Carolina, Puerto Rico 00630

Panasonic Hawaii, Inc.

91-238, Kauhi St Ewa Beach PO Box 774

Honolulu, Hawaii 96808-0774

Matsushita Electric of Canada Limited 5770 Ambler Drive, Mississauga, Ontario, L4W 2T3

Matsushita Electric Trading Co., Ltd. P O Box 288, Central Osaka Japan

# Technics

Output voltage: 2.5 mV at 1 kHz, 5 cm/s zero to

peak lateral velocity

(7 mV at 1 kHz, 10 cm/s zero to peak 45° velocity [DIN 45 500]) More than 22 dB at 1 kHz

Channel separation: More than 22 dB at 1 kHz
Channel balance: Within 1 8 dB at 1 kHz

Recommended load

impedance:  $47 \text{ k}\Omega \sim 100 \text{ k}\Omega$ 

Compliance (dynamic):  $12\times10^{-6}$  cm/dyne at 100 Hz Stylus pressure range:  $1.25\pm0.25$  g ( $12.5\pm2.5$  mN)

Weight: 6 g (cartridge only)

Replacement stylus: EPS-30ES

■ GENERAL

Power supply: For U S.A. and Canada

AC 120V, 60 Hz

For United Kingdom and

Australia

AC 240V, 50 Hz For continental Europe AC 220V, 50 Hz

For others.

AC 110~127/220~240V, 50/60 Hz

Power consumption: 8 W

Dimensions (W×H×D): 430×100×375 mm

(16-15/16"×3-15/16"×14-3/4") When dust cover is open

430×370×410 mm

(16-15/16"×14-9/16"×16-1/8")

Weight: 4 5 kg (9 9 lb )

Specifications are subject to change without notice for further

improvement.

Weight and dimensions shown are approximate

# ■ CONTENTS

Page	Page
SAFETY PRECAUTION 2	CIRCUIT BOARD AND WIRING
LOCATION OF CONTROLS 3	CONNECTION DIAGRAM 17
CONNECTIONS 3	SCHEMATIC DIAGRAM 19
DISASSEMBLY INSTRUCTIONS 4	
MEASUREMENTS AND ADJUSTMENTS 6	
TECHNICAL GUIDE 8	REPLACEMENT PARTS LIST 23
DESCRIPTION OF IC301 (SVILC6526CPA) TERMINALS 14	EXPLODED VIEW
BLOCK DIAGRAM 15	


# ■ SAFETY PRECAUTION (This "safety precaution" is applied only in U.S.A.)

- 1. Before servicing, unplug the power cord to prevent an electric shock.
- 2. When replacing parts, use only manufacturer's recommended components for safety
- 3. Check the condition of the power cord. Replace if wear or damage is evident.
- 4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields, etc.
- 5. Before returning the serviced equipment to the customer, be sure to make the following insulation resistance test to prevent the customer from being exposed to a shock hazard.

#### INSULATION RESISTANCE TEST

- 1. Unplug the power cord and short the two prongs of the plug with a jumper wire.
- 2. Turn on the power switch.
- 3. Measure the resistance value with ohmmeter between the jumpered AC plug and each exposed metal cabinet part, such as screwheads, antenna, control shafts, handle brackets, etc Equipment with antenna terminals should read between 3MΩ and 5.2MΩ to all exposed parts. (Fig. A) Equipment without antenna terminals should read approximately infinity to all exposed parts. (Fig. B)

Note: Some exposed parts may be isolated from the chassis by design. These will read infinity.

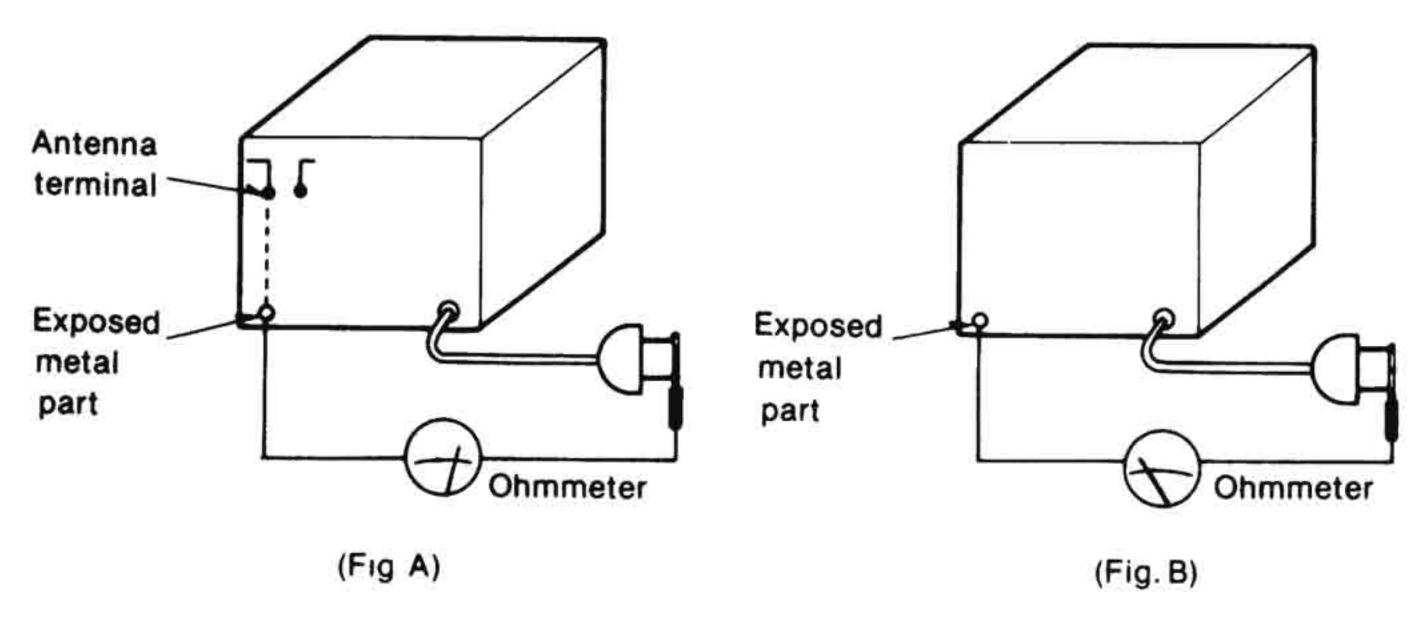


Resistance =  $3M\Omega - 52M\Omega$ 


Resistance = Approx ∞

4. If the measurement is outside the specified limits, there is a possibility of a shock hazard. The equipment should be repaired and rechecked before it is returned to the customer

# ■ LOCATION OF CONTROLS

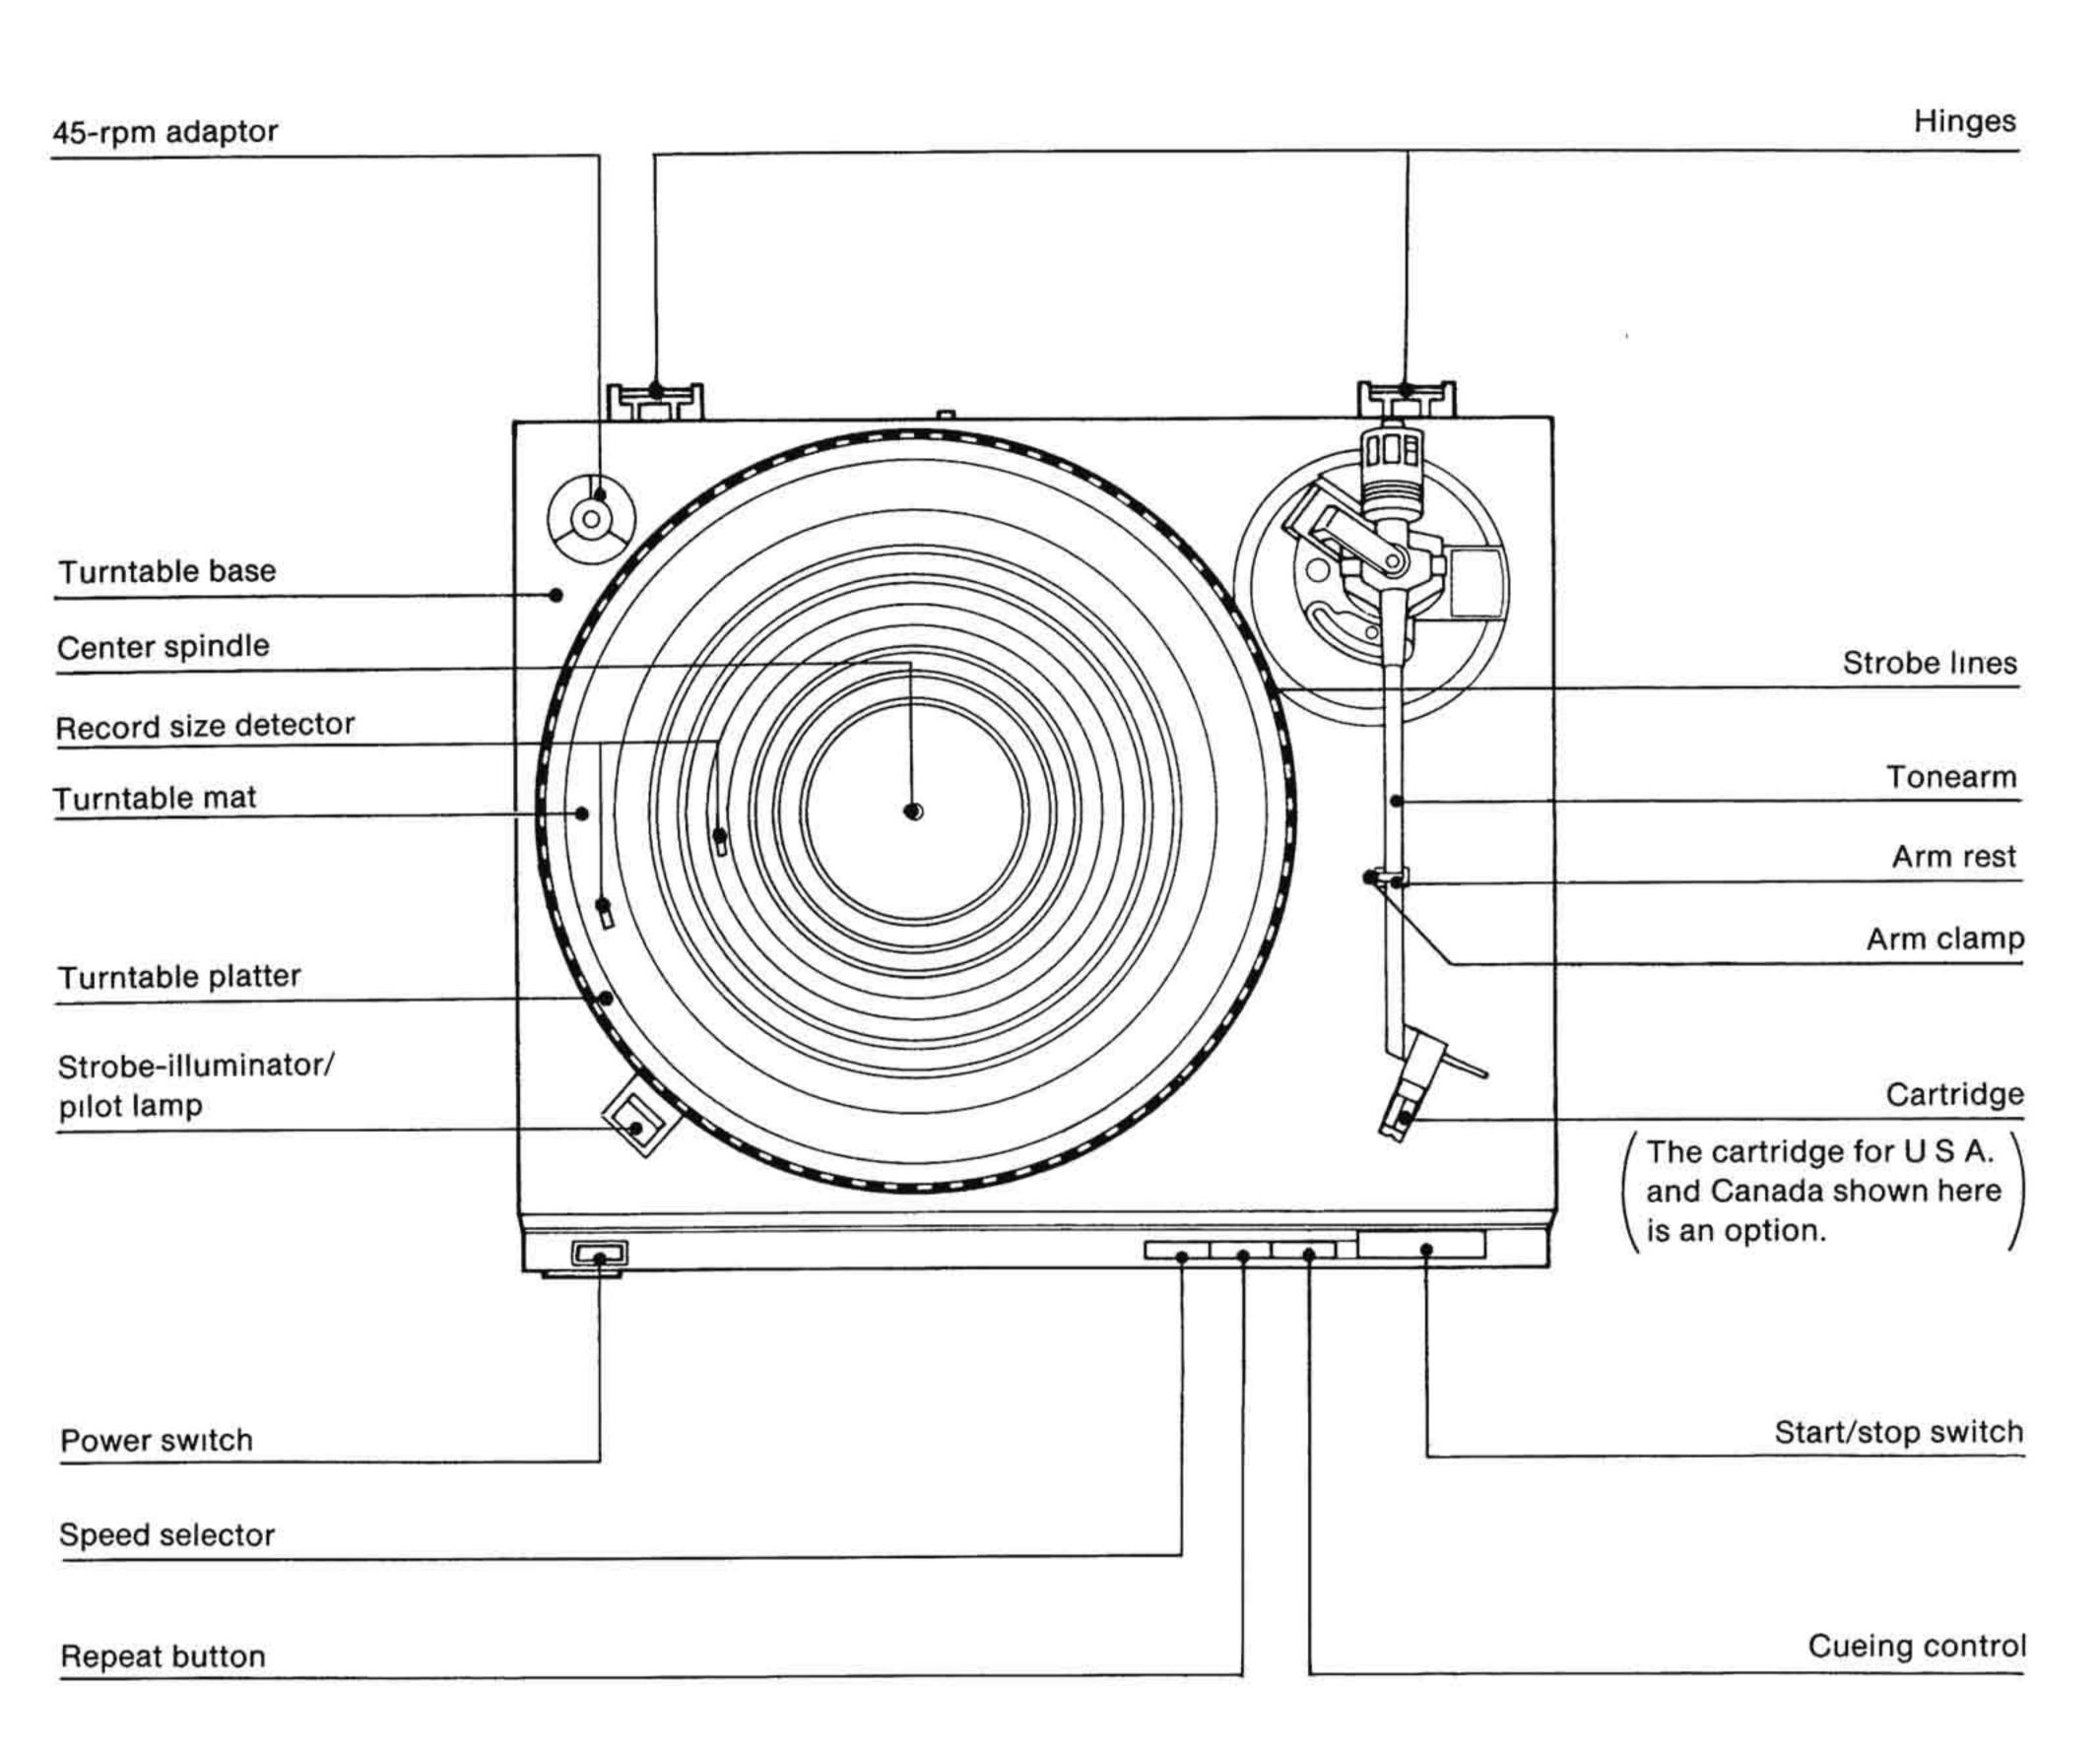

# **CONNECTIONS**

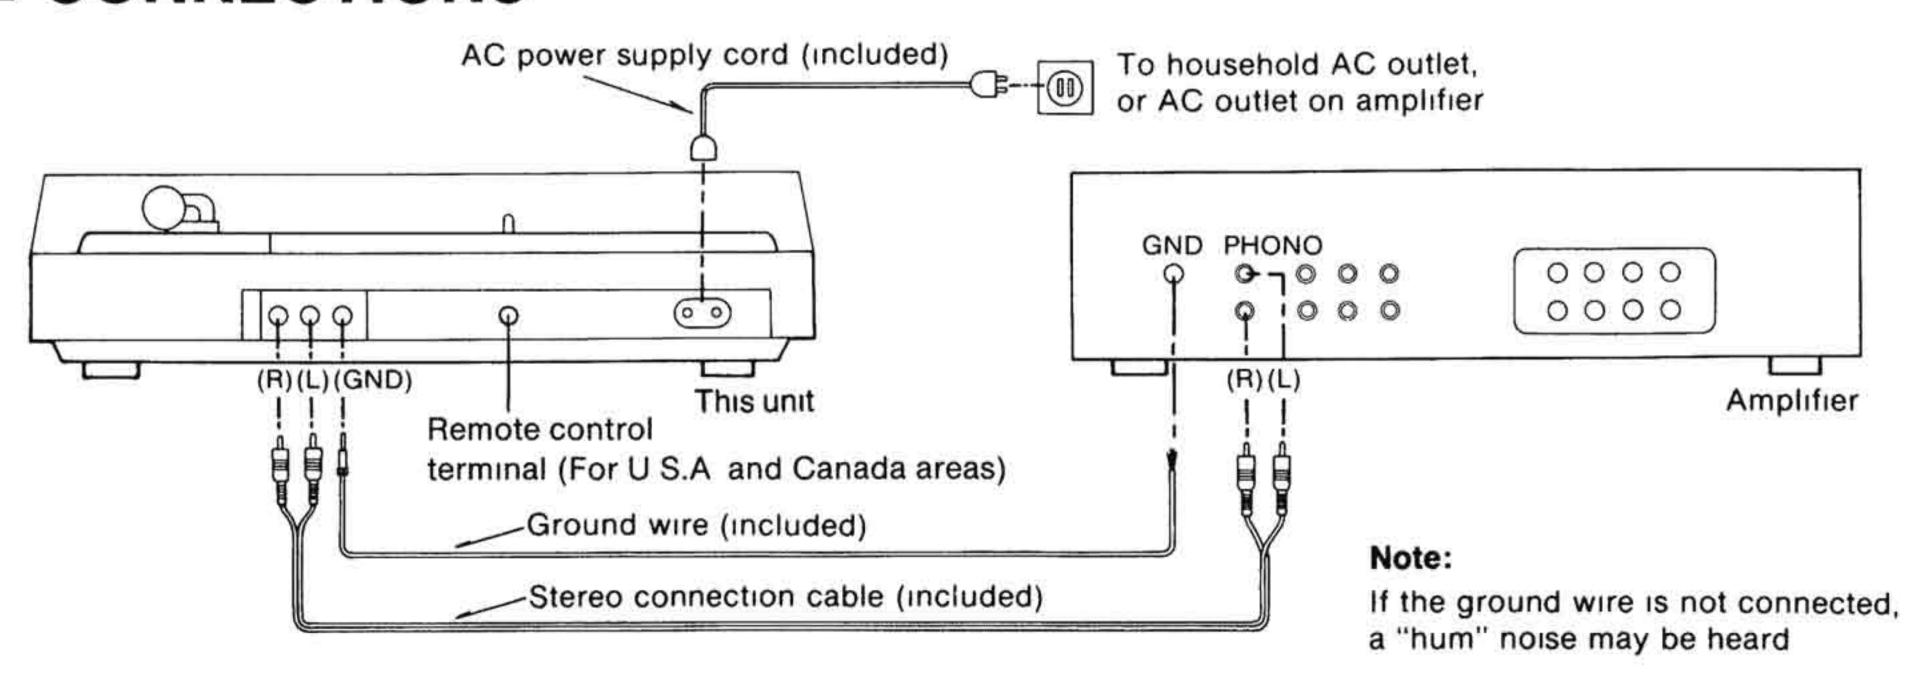


# ■ DISASSEMBLY INSTRUCTIONS


Ref. No 1	How to remove the cartridge	Ref. No 2	How to remove the bottom board
rocedure 1	When servicing, remove the cartridge or stylus in order to protect the stylus tip of cartridge.	Procedure 2	<ol> <li>Secure tonearm with arm clamp.</li> <li>Remove the turntable platter.</li> <li>Turn over the unit on a soft cloth.</li> <li>Remove the 5 setscrews.</li> </ol>
	e the setscrew and pull out the cartridge, care that your hand does not touch the stylus  Setscrew  Cartridge	Soft clo	oth Control of the co
Ref. No 3 rocedure	How to remove the each block      Remove the setscrews of each black as sh	own in drawir	
<b>2 ♦ 3</b> Mechanish	Tur	ntable drive P	
Pul	out		Power source P C B

Power button

Operation P C B

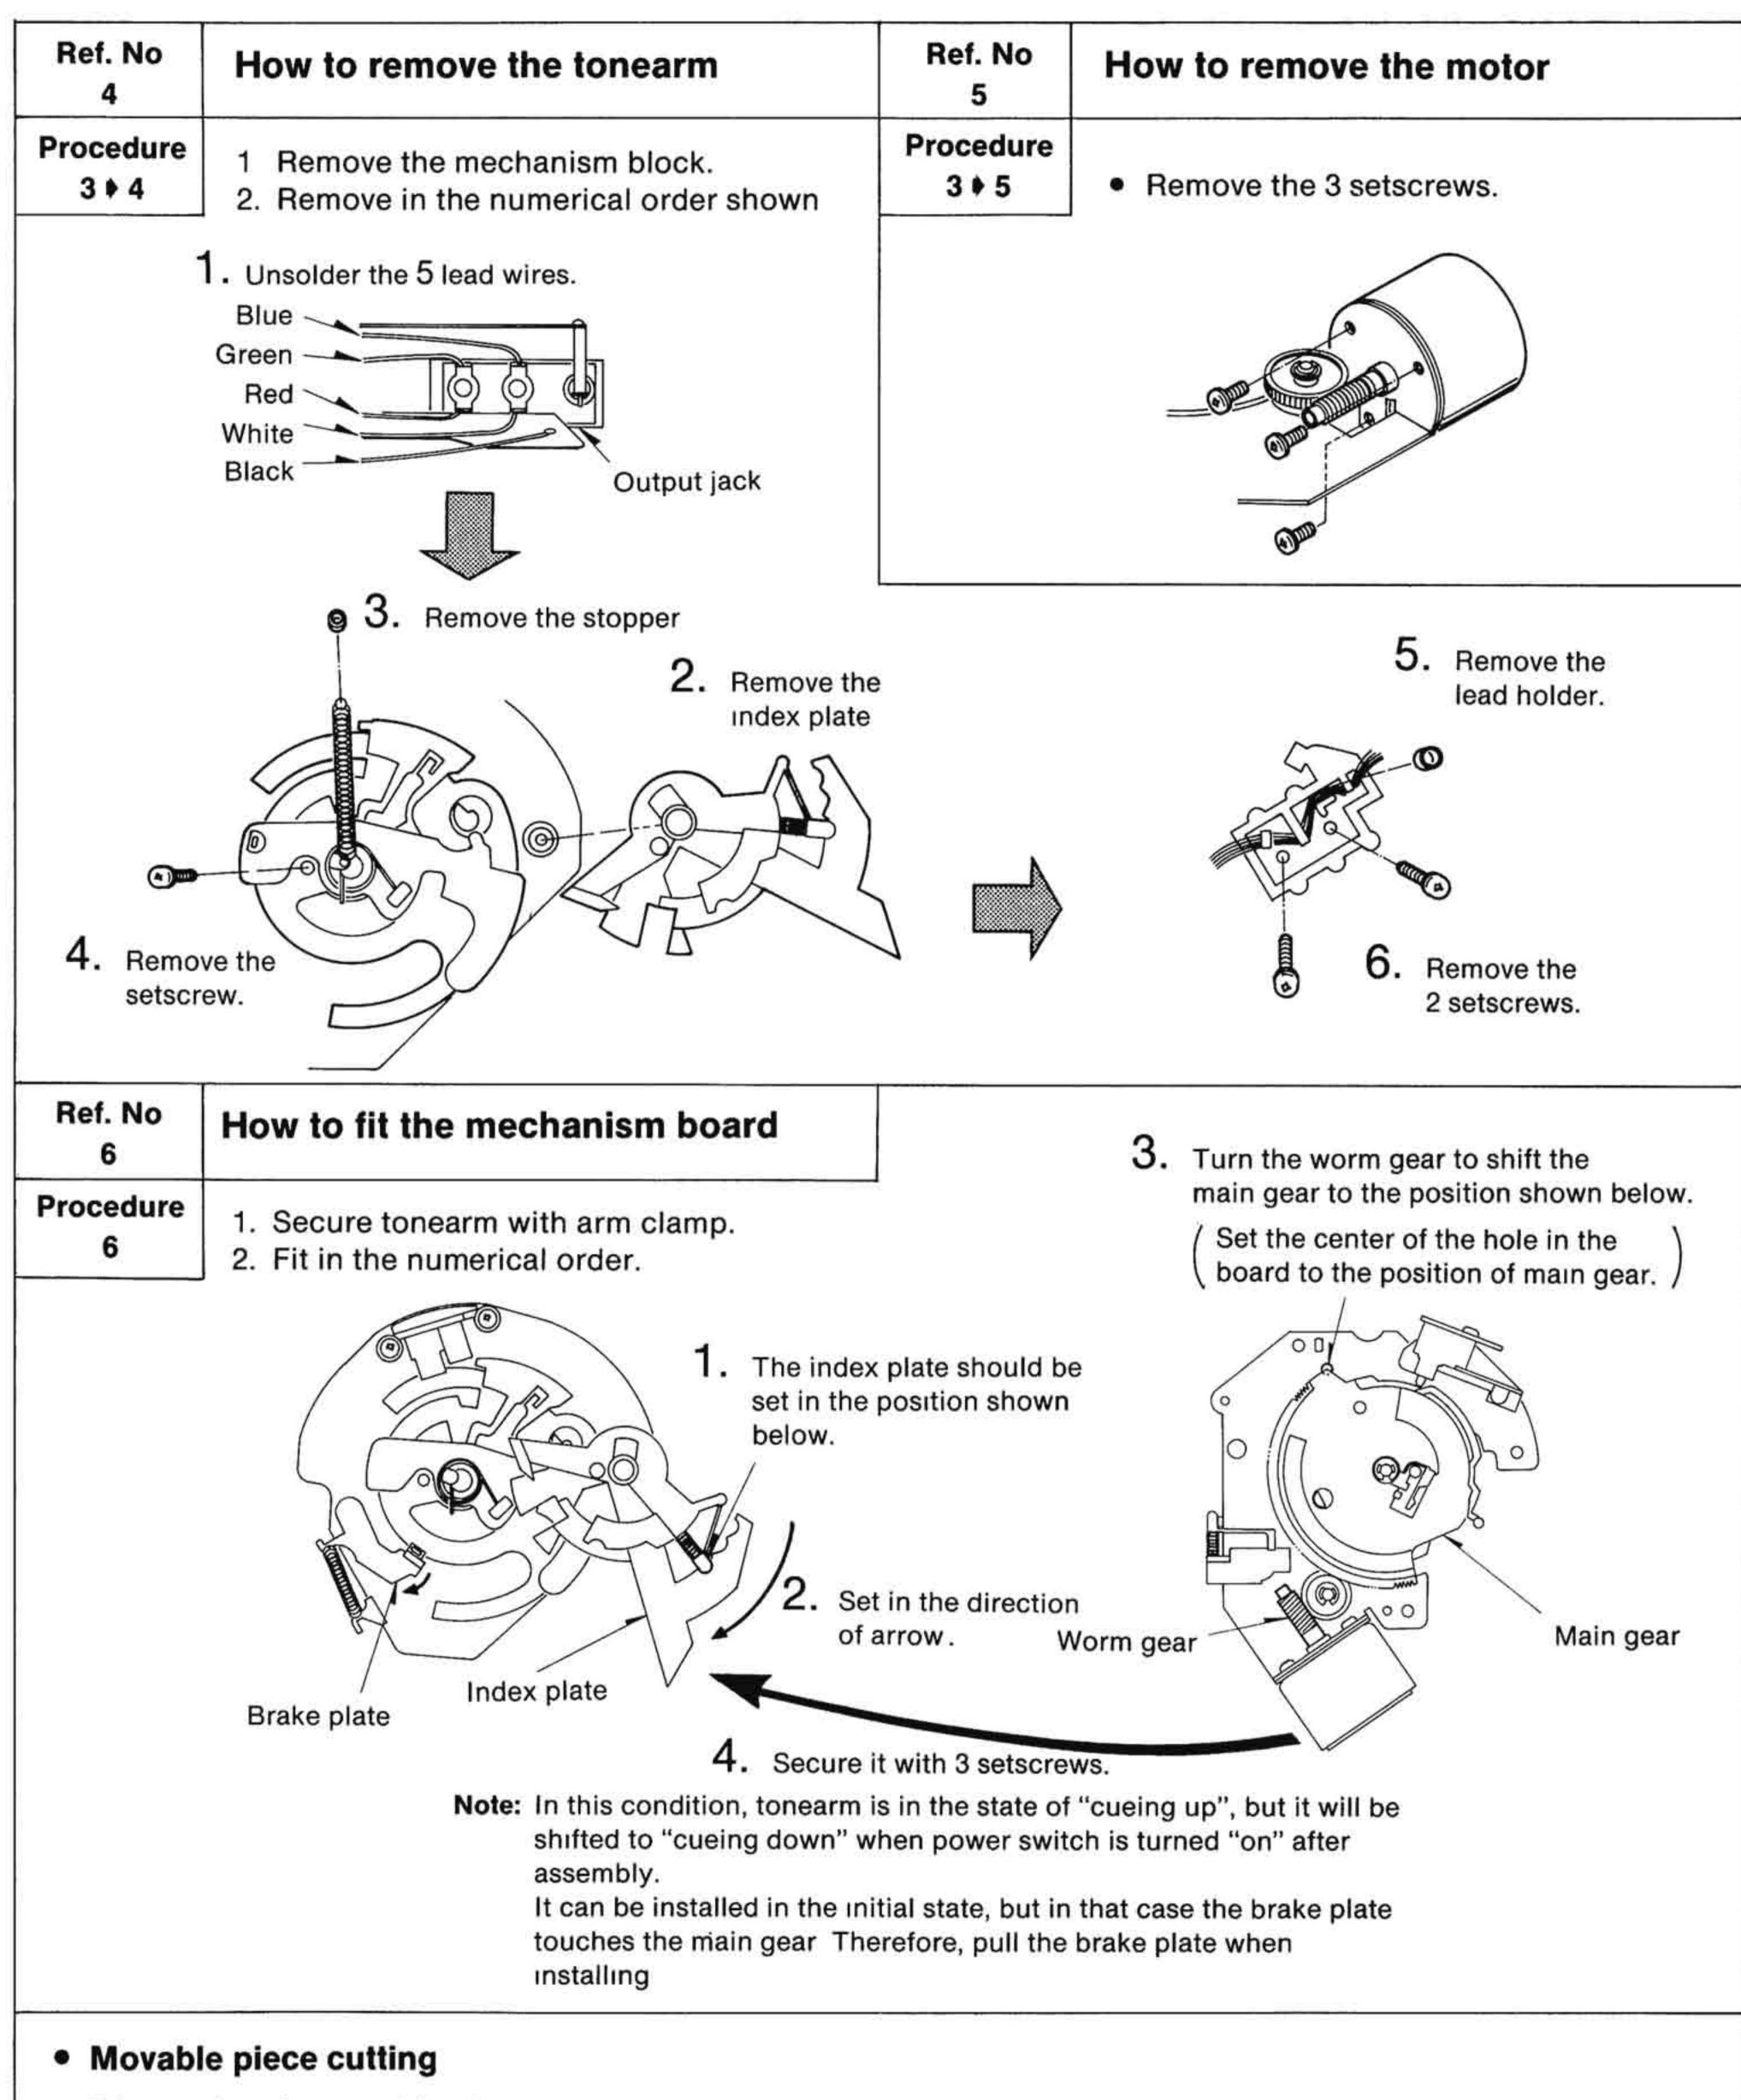


When using the movable piece for this unit, cut off the part as shown by using nippers

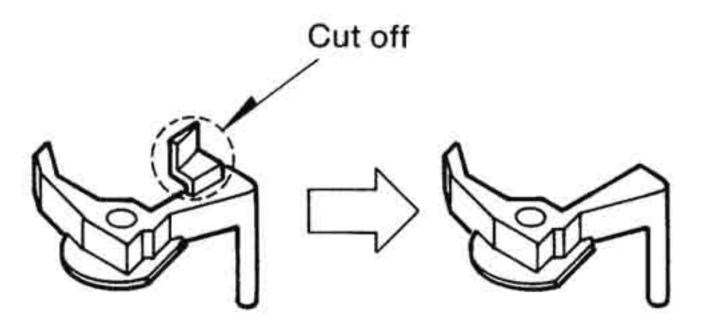


# ■ MEASUREMENTS AND ADJUSTMENTS

# **ADJUSTMENT POINTS**

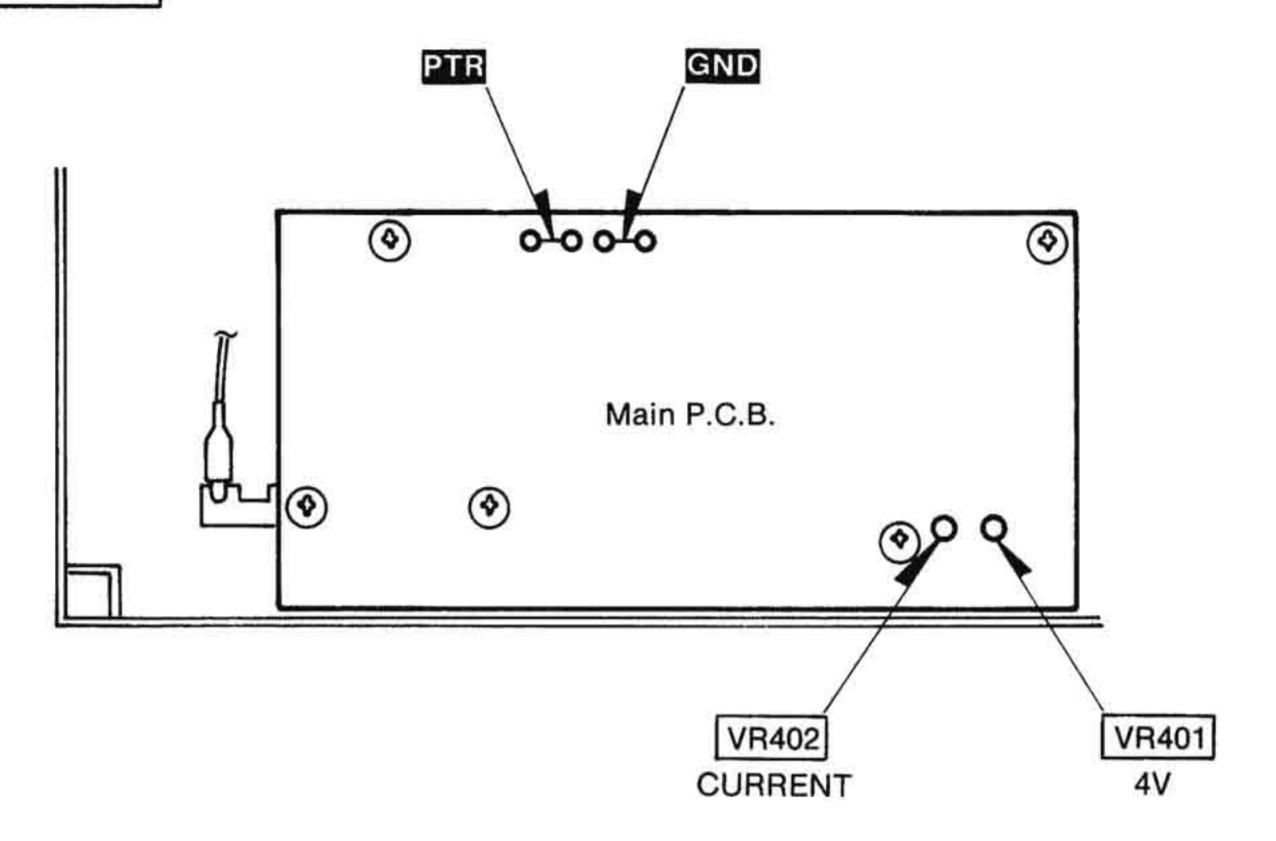

#### STATE OF SET

- Remove the bottom plate and put it on the repair table.
- Make sure that the tonearm is free (cueing down) in the rest position. (If it is not free, turn on the power switch and wait until the tonearm is free.)
- Set the stylus cover on the cartridge, and remove the rubber cap of arm base.
- Turn over the turntable mat and put it on the turntable platter. (The turntable mat is provided with match mark at the position R65 mm and R48 mm from the center.)

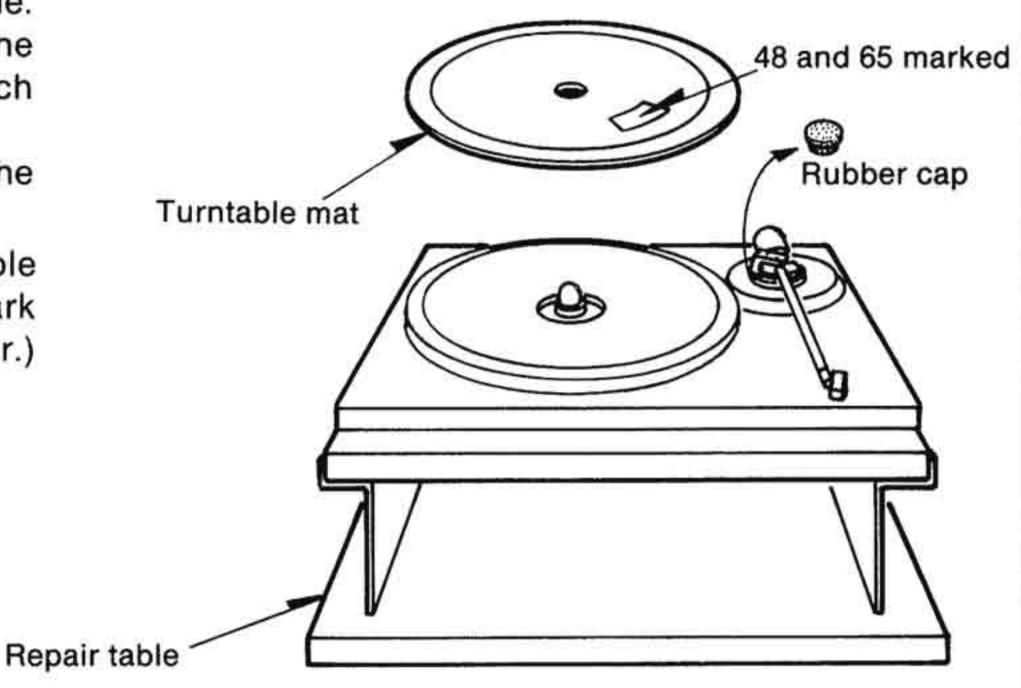


#### PROCEDURE BEFORE ADJUSTMENT

The microcomputer used in this unit has a function to select normal and adjustment modes. There are **Test 1** and **Test 2** for the adjustment mode. So, check the mode before making the adjustment.

#### How to select the adjustment mode

#### 1. Test mode 1


Before turning on the power switch, make sure that the tonearm is free in the rest position, and set all the 4 operation keys to on (pressing all the keys with fingers). Subsequently, turn on the power swith. (In the test mode, the turntable will not rotate even when the tonearm is moved inwards.)

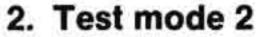

Press the Stop key once in the state of Test mode 1.

#### 3. Normal mode


Press the Stop key once in the state of Test mode 2

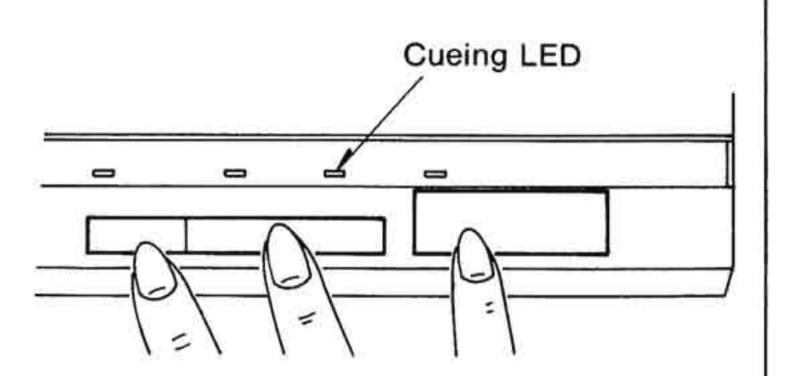

#### **CURRENT ADJUSTMENT**


- Set the microcomputer to Test mode 1.
- 2 Connect DC voltmeter to PTR (+) and GND (-) of P.C.B.
- 3 Move the tonearm to the position where the reading of DC voltmeter is 8V±0.005V.
- 4 Adjust VR402 so that cueing LED lights up.
- After the LED lights up, be sure to turn off the power switch.


(Be sure to turn off the power switch before the next adjustment.)

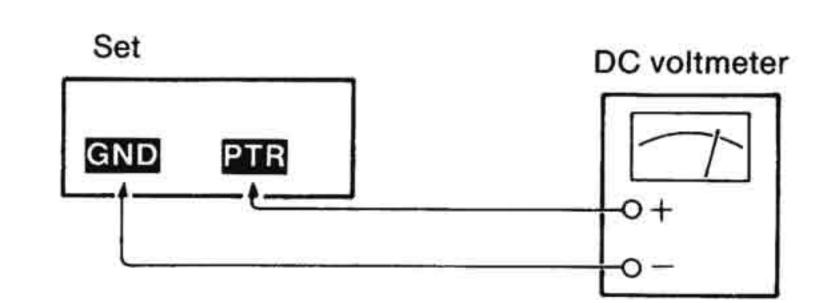

#### **8V ADJUSTMENT**


- 1. Set the microcomputer to Test mode 1.
- 2 Manually fix the stylus cover in the 65 position of turntable mat, matching the marks (♥).
- Turn the shutter plate adjusting screw in the adjusting hole of the arm base so that the cueing LED lights up.

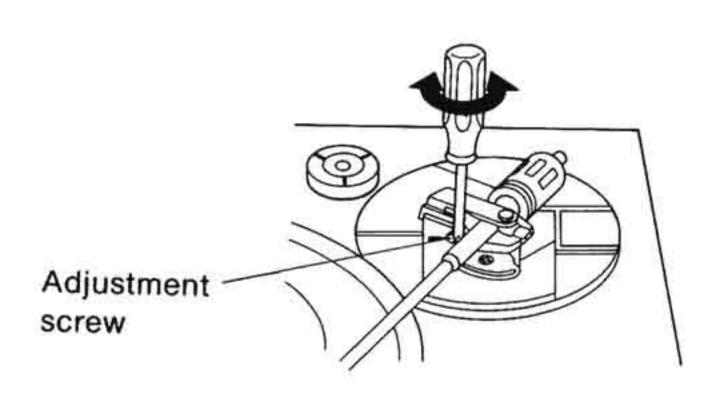

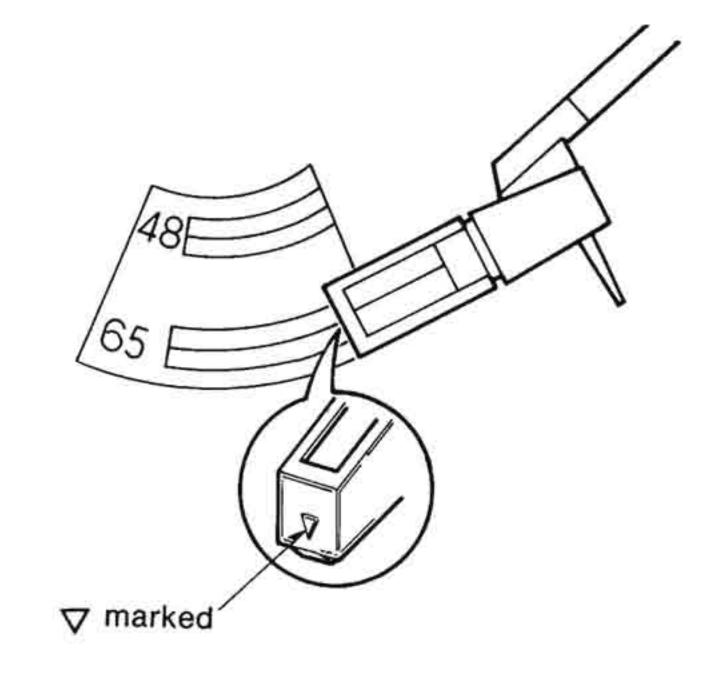

#### **4V ADJUSTMENT**


- Press the Start/Stop key or Stop key and shift the mode to Test 2 (In SL-QD33, Repeat LED lights up.)
- Manually fix the stylus cover in the 48 position of turntable mat, matching the marks (♥).
- 3. Turn VR401 so that the cueing LED lights up.
- Return the tonearm to the rest position and press the Start/Stop or Stop key, then the mode is reset to the normal mode.

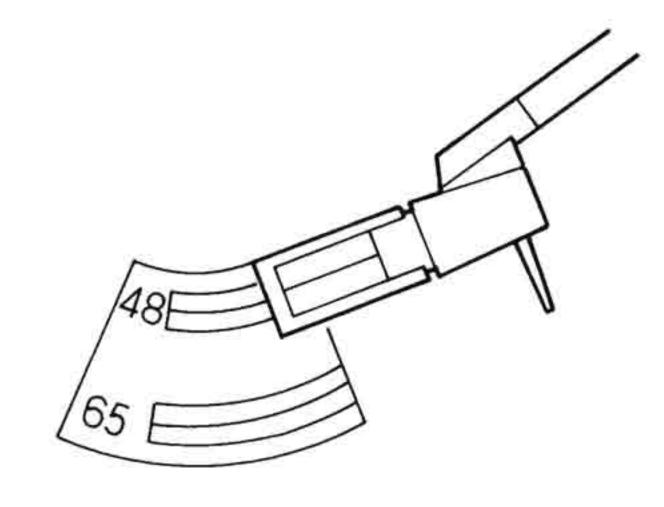

## **ADJUSTMENT OF THE STYLUS-TO-DISC CLEARANCE**

Make this adjustment if the cartridge is replaced, or at any other time an adjustment is necessary because of the length of the stylus being used. (This adjustment is usually unnecessary.)

- Set the cueing control to "∑".
- 2. Move the tonearm to a position above the disc.
- 3. Adjust the stylus tip position.

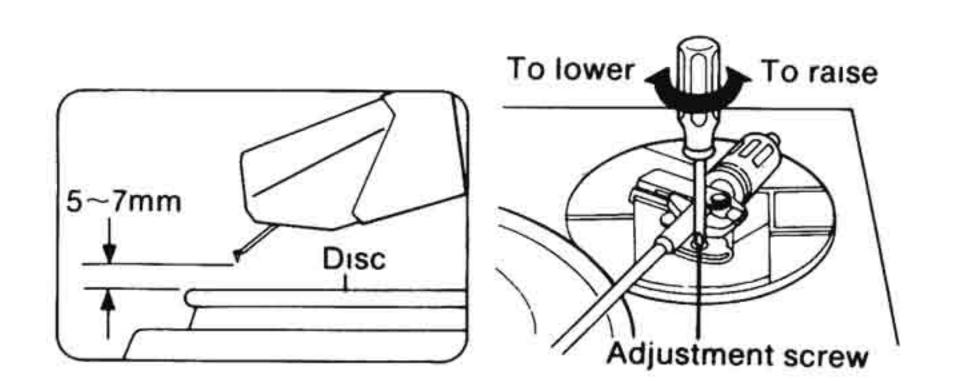

#### **AUTOMATIC START POSITION**

If the stylus does not land in the lead-in groove, adjust as follows.

- Clamp the tonearm to the arm rest.
- Remove the rubber cap.
- Turn the screw with a screwdriver, clockwise or counterclockwise as necessary.


If the stylus tip sets down too far in the recorded groove,

-turn counterclockwise.

If the stylus tip sets down outside of the record,

-turn clockwise.

Adjust so the stylus tip lands 1-2 mm in from the edge of the record

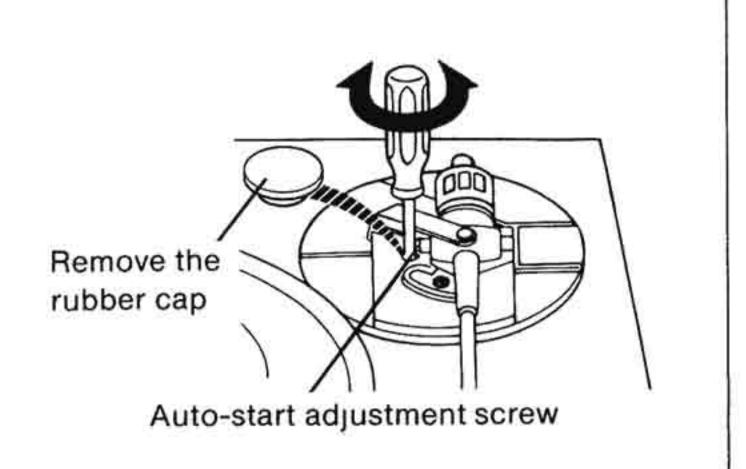

# **■ TECHNICAL GUIDE**

Unlike the conventional mechanism, the automatic operation mechanism of this unit has been improved in performance employing a new mechanism with microcomputer and motor for automatic operation and an optical end detection system.


#### Description of Mechanism

#### 1. Record size detection

The presence of record and its sizes 17 cm and 30 cm are detected by the size detection plate of the turntable platter and the index plate attached to the main body.


#### a) State of no record

Both of the 2 sensors are free and the detection pins are up.

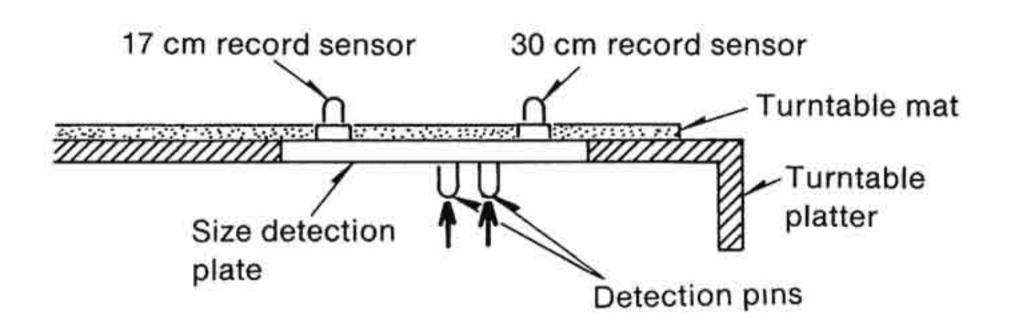


#### b) 17 cm record

The 17 cm record sensor is pressed by the record, and the inside detection pin is shifted down

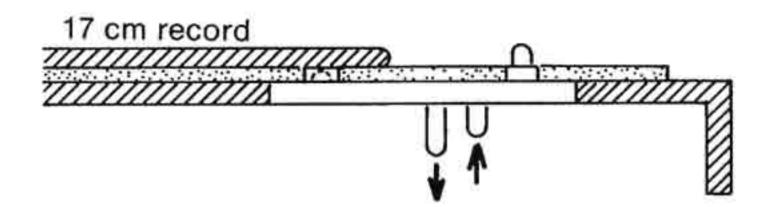



#### c) 30 cm record

Both of the 2 sensors are pressed, and the 2 detection pins are down.

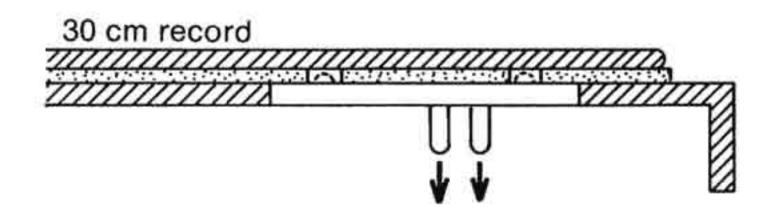


As the turntable platter starts rotating, the index plate is shifted from the initial position (broken line) to the solid line position by the arm mechanism. Since the detection pin of the turntable platter is as mentioned above, the detection pin does not touch the index plate. When 17 cm record is present, the inside detection pin touches the index plate thereby setting the index plate to the position of 17 cm record. When 30 cm record is present, both of the inside and outside detection pins come in touch with the index plate thereby setting the index plate to the position of 30 cm record.

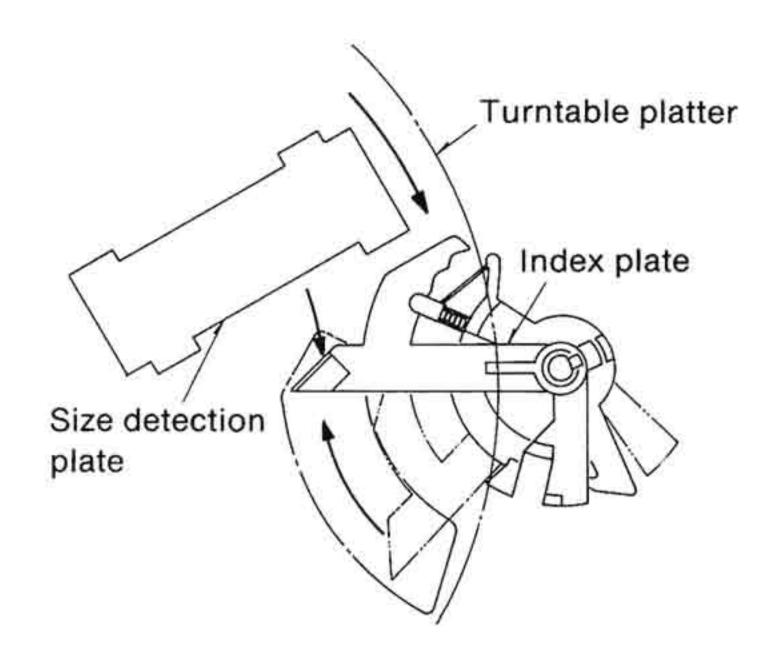

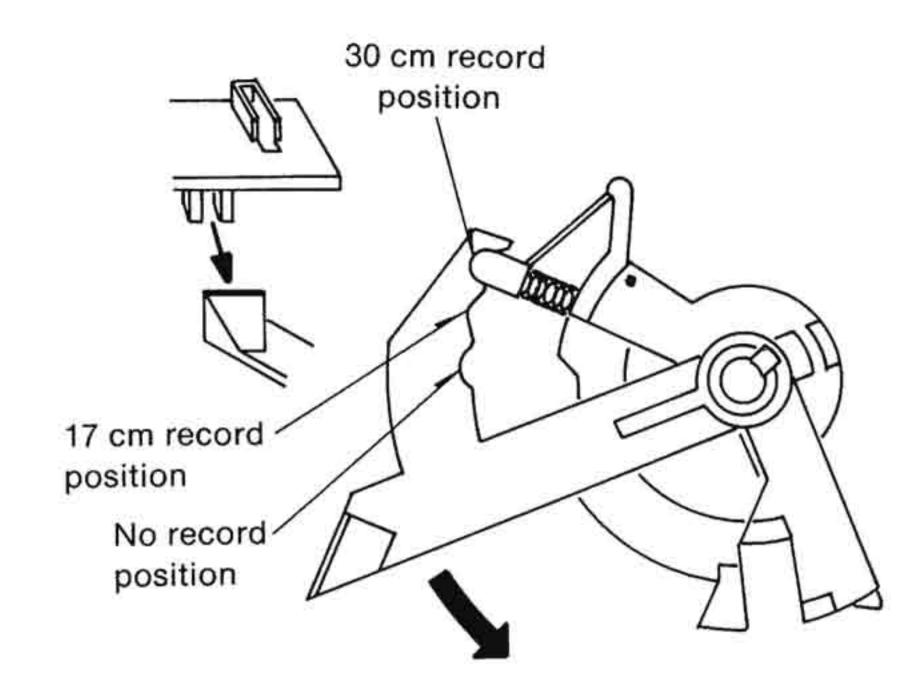


# 2. Drop position setting


When the index plate is set with the record size detected, the tonearm drop position at auto start is determined. The PU fixing plate moves in auto start but its movement is limited as the drop position setting pin of PU fixing plate touches the index plate to set the drop position. The position then set is the tonearm drop position.

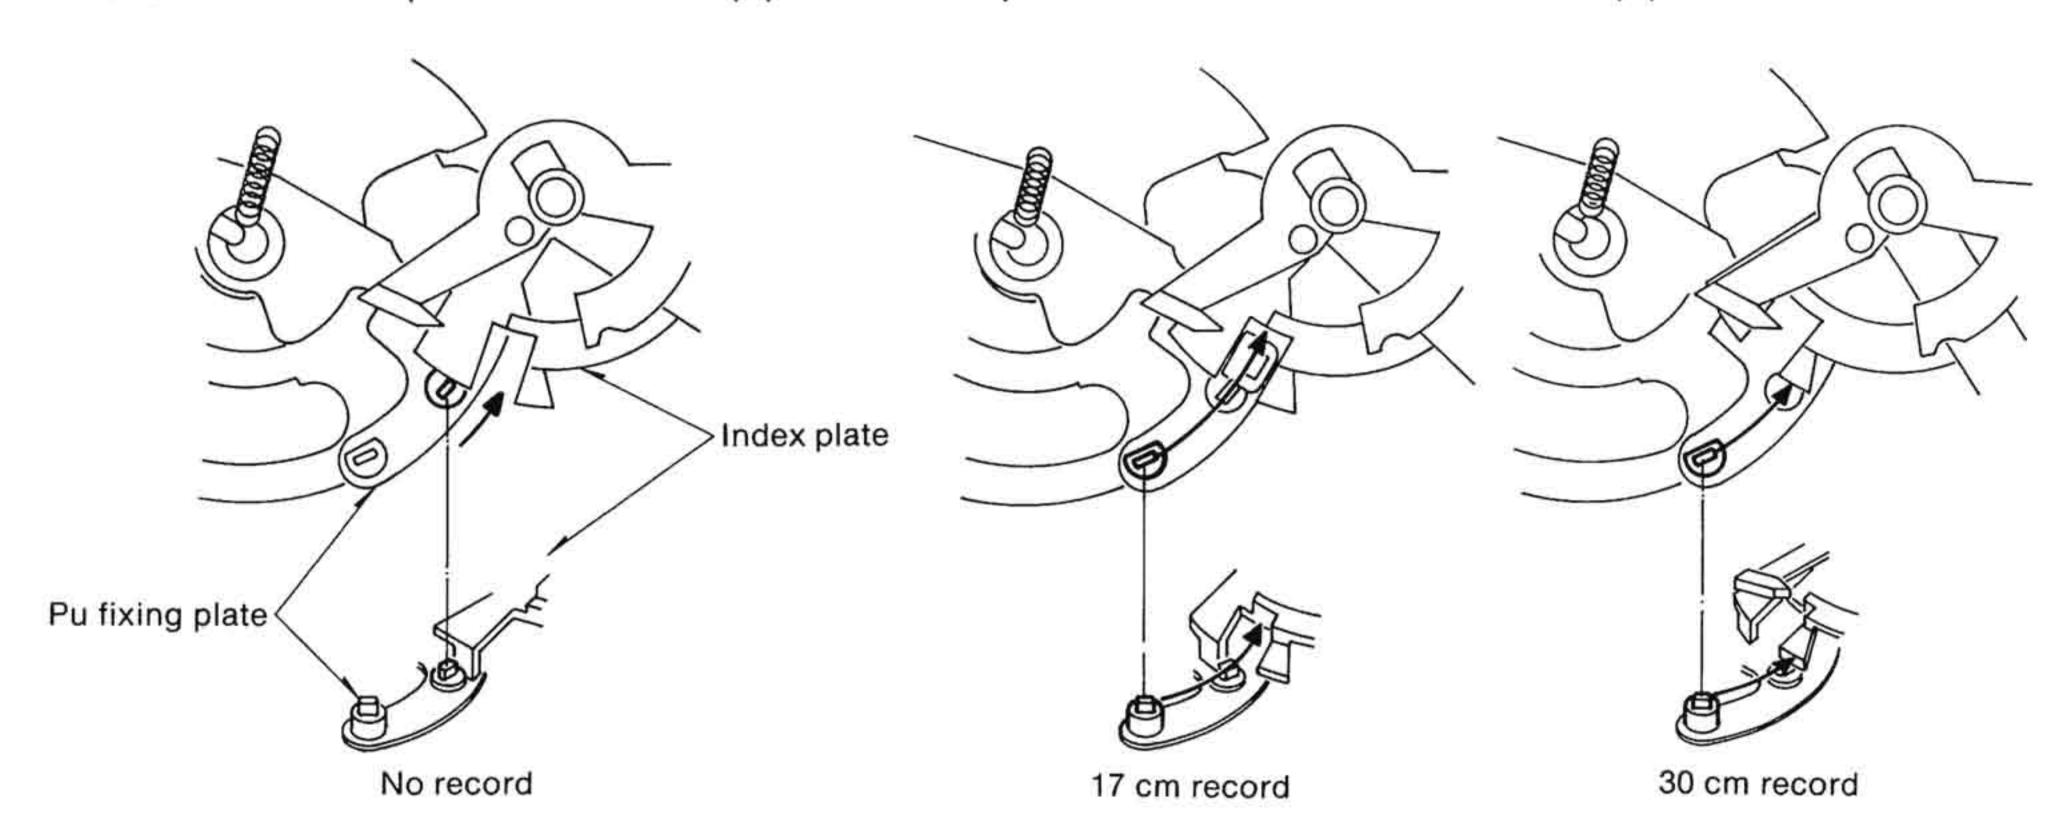

# 3. Mechanism of tonearm operation


The main gear is rotated by DC motor to perform cueing up/down, tonearm lead-in and return operations. Also, UP switch and DOWN switch are provided for the detection of mechanism operating position, and Rest switch, for the detection of tonearm rest position. The arm driving mechanism structure and the names of component parts are shown below.

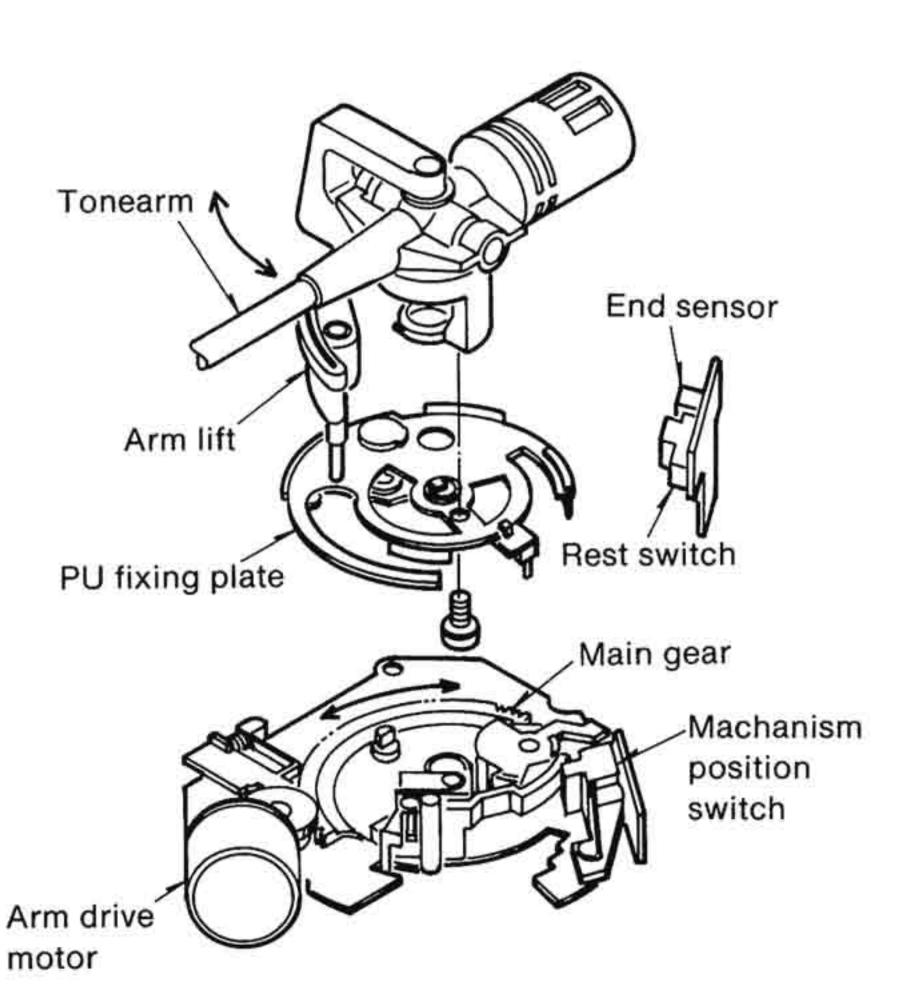


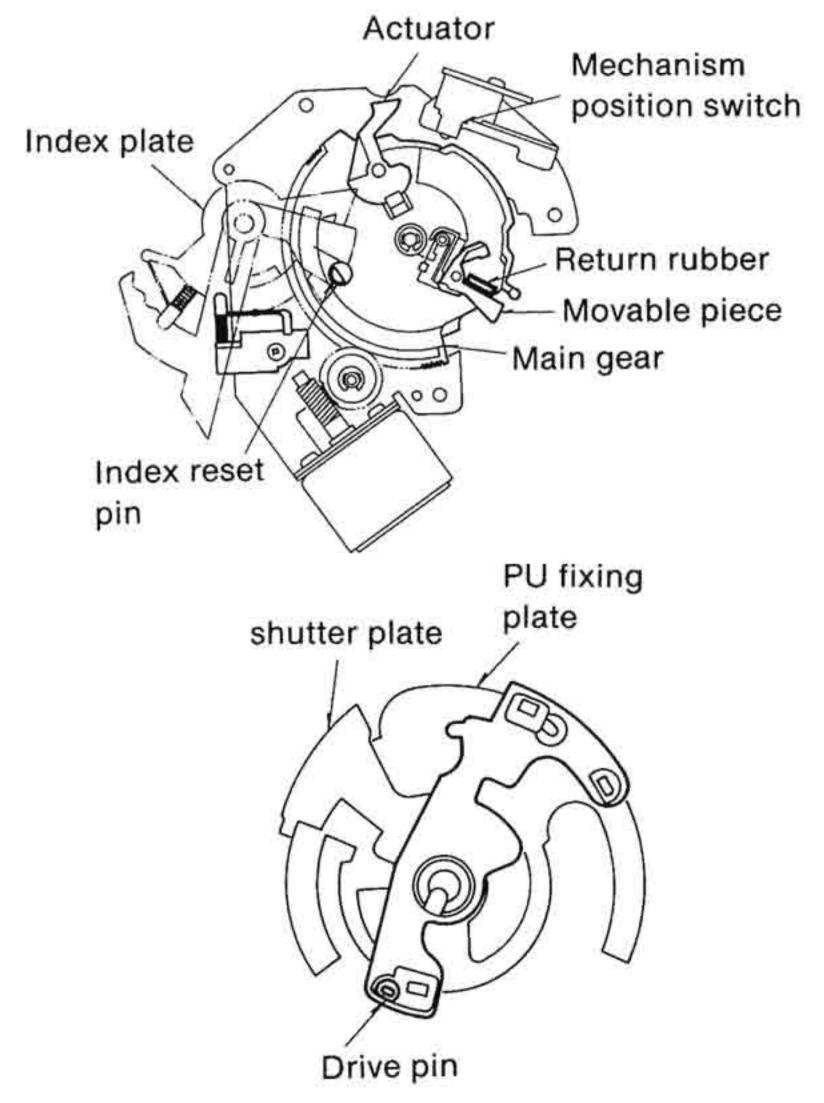

#### a) Cueing operation

The lift rod is initially in the position of main gear (Fig. A) when cueing mode is "down". With the cueing key pressed, the motor rotates according to the command from the microcomputer to turn the main gear to the position of Fig. B. The main gear rotation causes the cueing mode to be shifted from "down" to "up". When the cueing key is pressed again, the motor reversely rotates according to the reversing command from the microcomputer, then the main gear returns to the initial position of Fig. A.

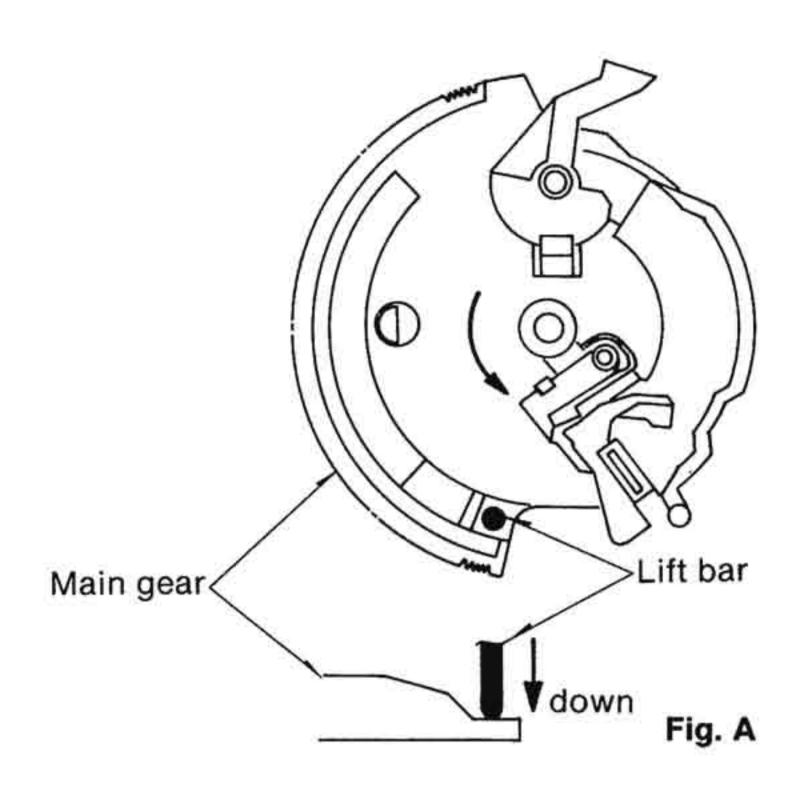

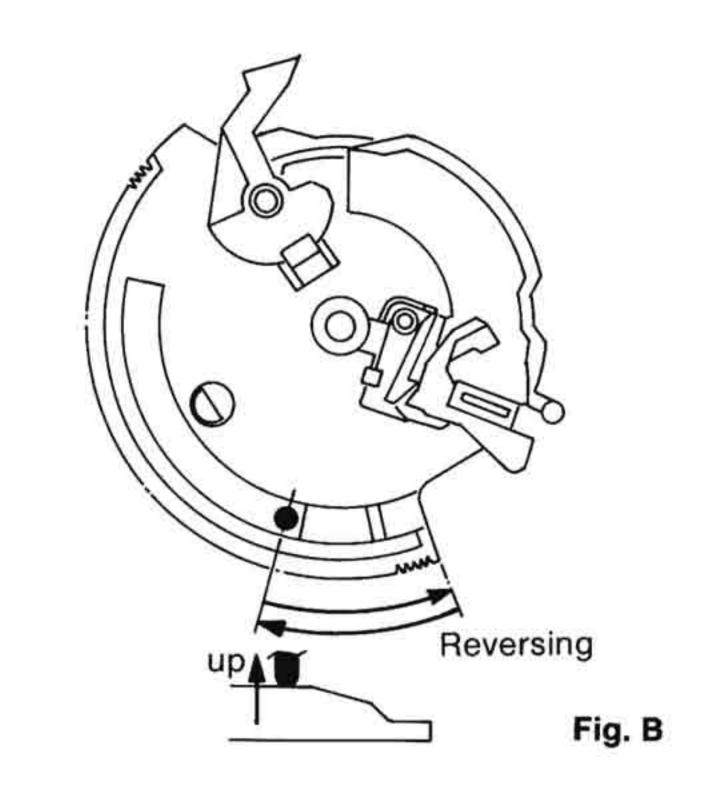



#### b) Stop operation

During play mode, the main gear is in the initial position (Fig. A). With the stop key pressed, the motor rotates according to the command from the microcomputer to turn the main gear to the position of Fig. C. The rotation of main gear causes the cueing mode to be shifted to "up", and subsequently the return rubber pushes the drive pin of PU fixing plate to move the tonearm to the rest position. When the above operations have been completed, the motor reversely rotates according to the reversing command from the microcomputer, and the main gear returns to the initial position of Fig. A.


#### c) Auto start operation

When the start key is pressed, the motor rotates according to the command from the microcomputer to turn the main gear to the position of Fig. D. The rotation of main gear causes the cueing mode to be shifted to "up", then the mechanism is set so that the pin of movable piece touches the mechanism board to catch the drive pin of PU fixing plate located in the rest position. Also, it is set so that the record size can be detected by the index plate with the actuator of main gear. With the above operations completed, the motor reversely rotates according to the reversing command from the microcomputer to return the main gear to the initial position of Fig. A. In that case, the PU fixing plate moves along with main gear because the drive pin is set on the movable piece, while tonearm is moved inside, but with the record size detected, the drive pin is released from the movable piece at the record drop position since the index plate is set in place.

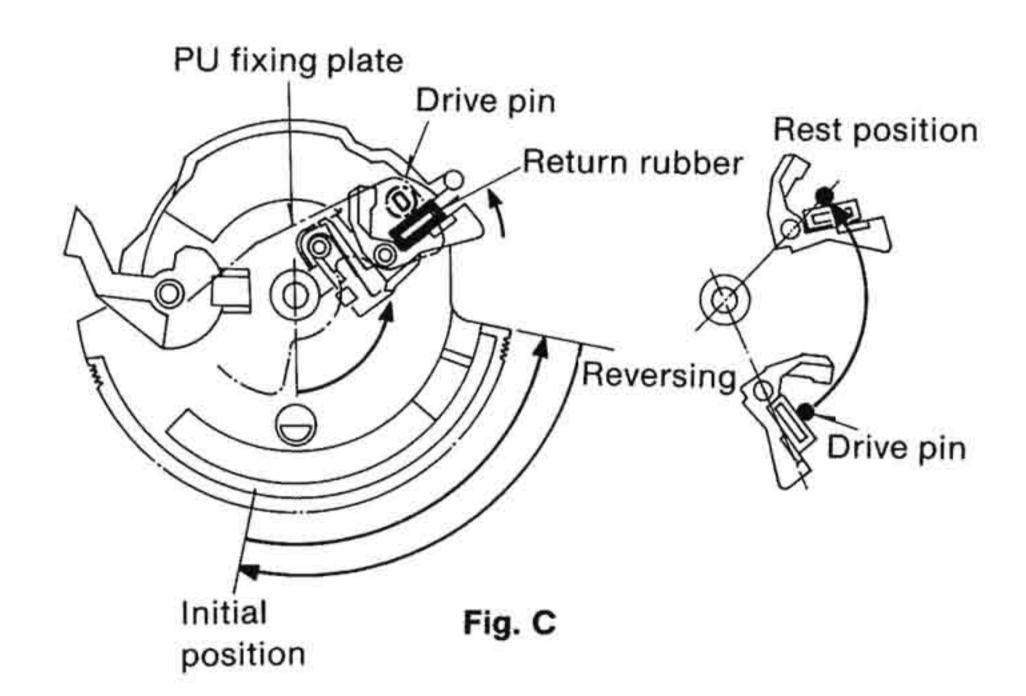

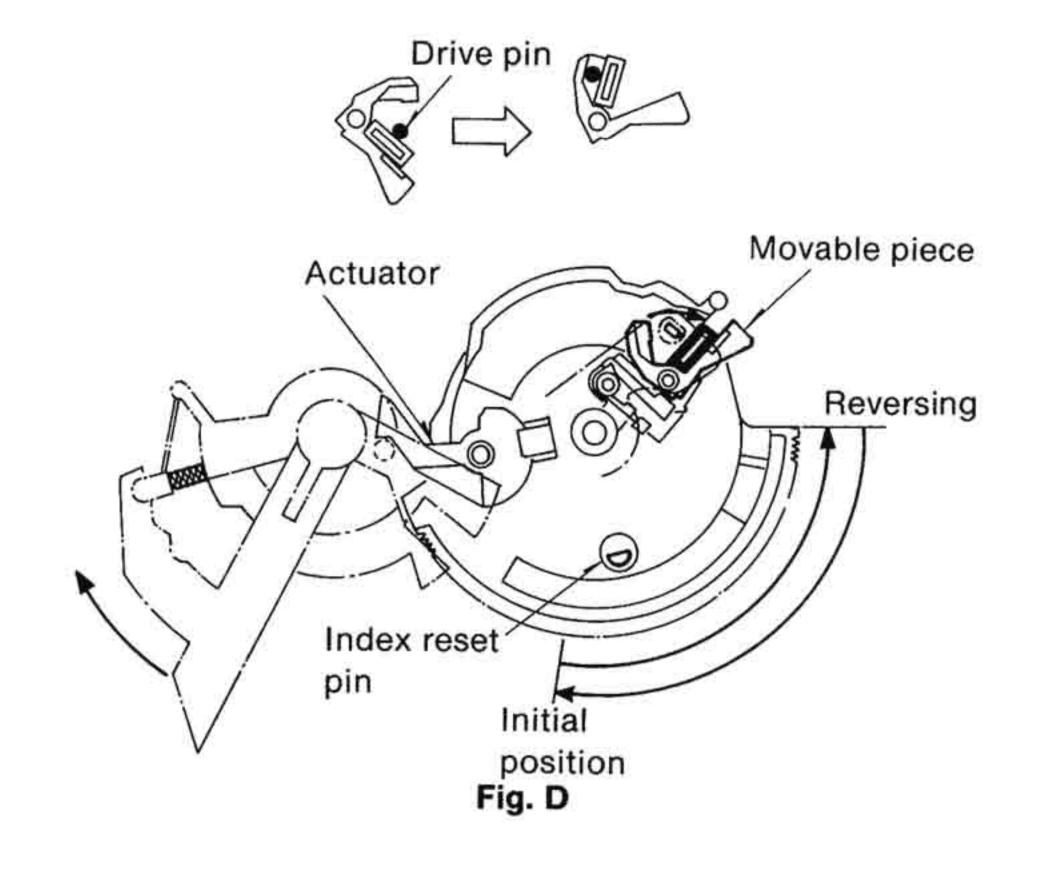

### 4. Auto mechanism timing chart

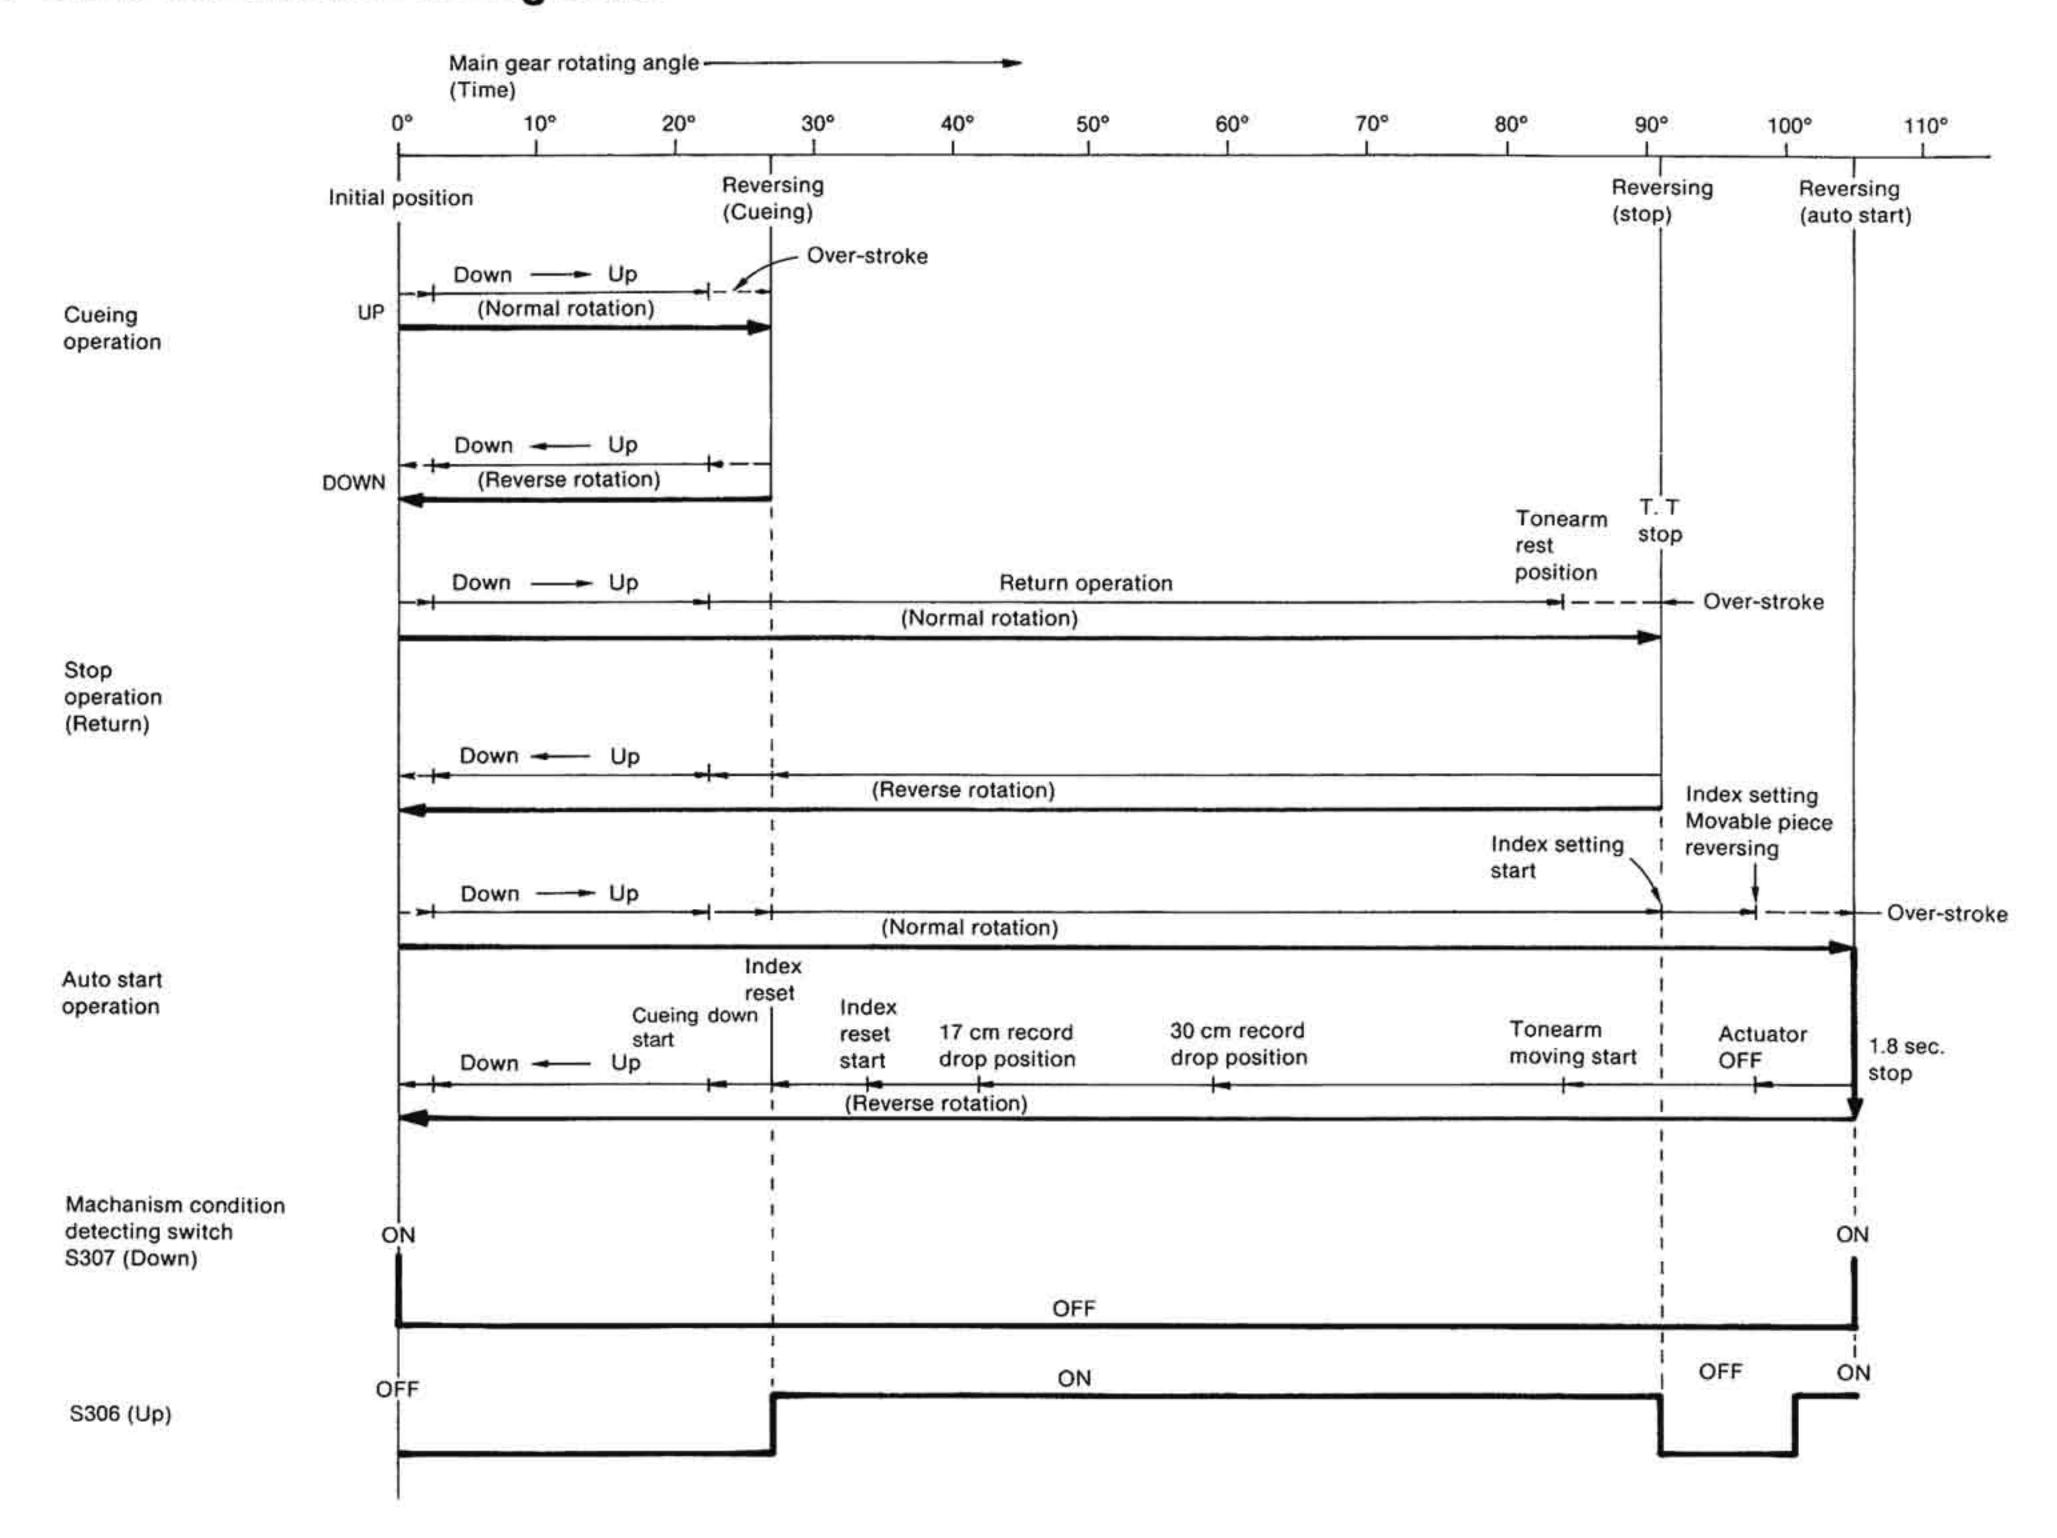



To detect the state of mechanism operation, a detection switch which turns ON/OFF with the rotation of main gear is installed as shown. With this switch operated, the state of mechanism is input to the microcomputer to give the normal or reverse rotation command to the motor.

# **Description of Circuit**


#### End detection sensor

It detects the output voltage change when the shutter plate installed under the tonearm passes through the end detection sensor. The shutter plate is not shaped in circular arc but in volution so that the output voltage changes linearly. The good linearity part of the characteristic is used as the range of end detection. (The actual range of detection is R65~R48 mm from the center of the record.)

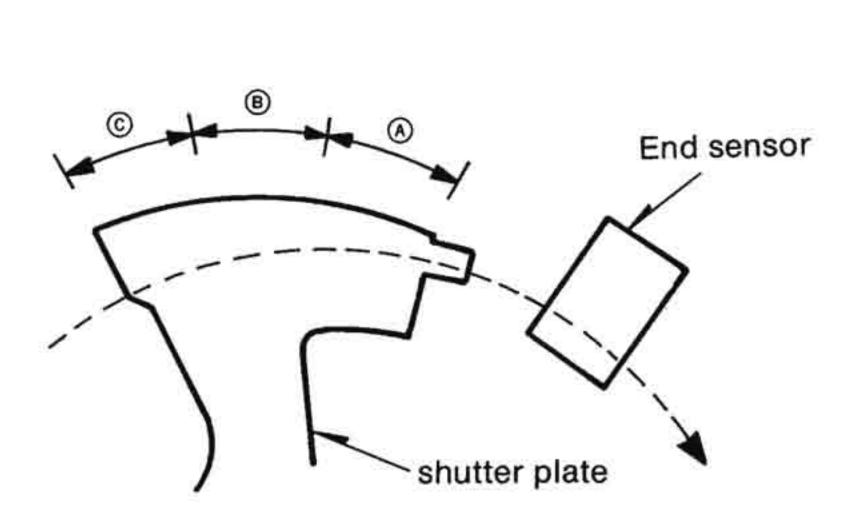

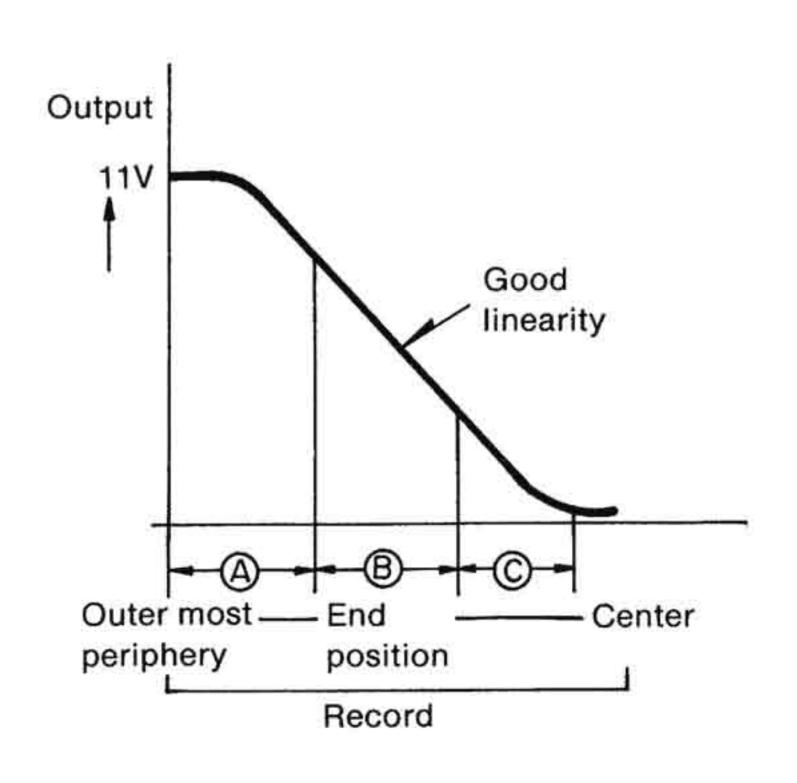

#### 2. End detection circuit

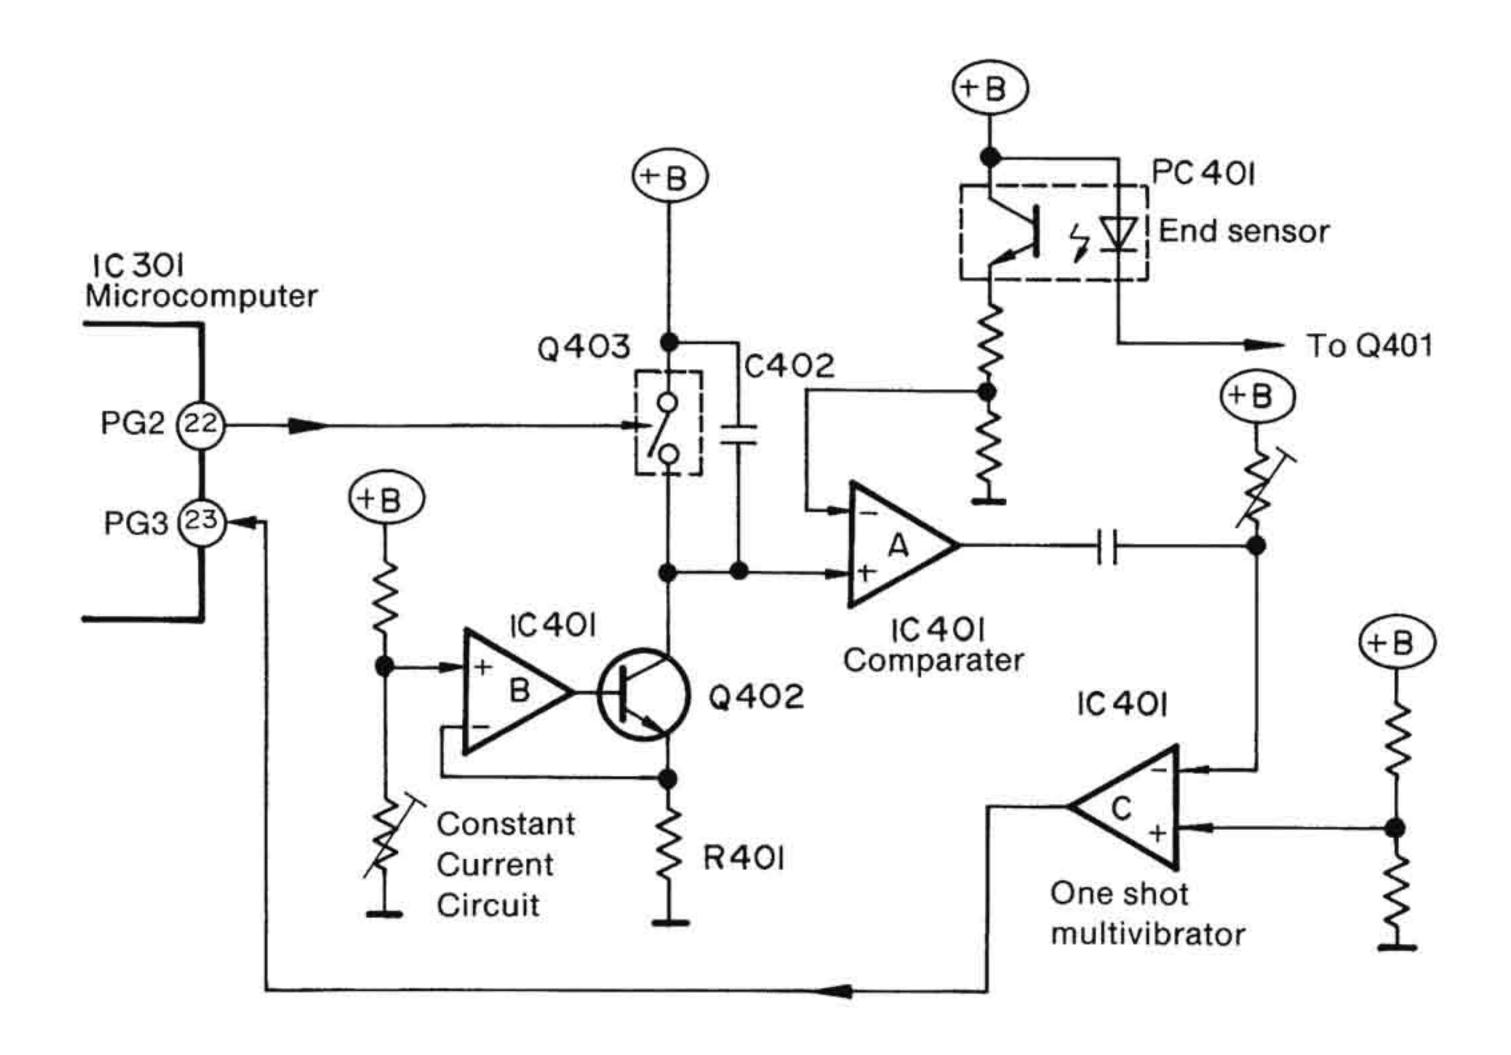

Q403 repeats to turn on/off with the strobe output from pin ② (PG2) of microcomputer (IC301). When the strobe of pin ② is at "L", Q403 turns on, therefore (+B) is applied to the (+) side of OP amp A (IC401). When the strobe of pin ② changes to "H", Q403 turns off and the voltage on the (+) side of OP amp A is lowered but the constant current circuit consisting of OP amp B and Q402 keeps the current flowing to R401 constant so that the voltage charged in C402 is discharged causing the (+) side voltage of OP amp A to gradually decrease. The voltage and the output of end detection sensor (PC401) are compared at OP amp A. The output of OP amp A goes "L" when the (+) side voltage is lower than the (-) side voltage. The output of OP amp A is input to the (-) side of one-shot multi-vibrator consisting of OP amp C. The output of OP amp C goes "H" at the rise of (-) side

Microcomputer
② pin

OP amp A
(+) side
(-) side

Output

OP amp C
output


t t2

Timing chart

input. Using this circuit, the microcomputer reads the time (t) required until rise of the pulse input to pin ③ with the rise of the strobe of pin ②. Duty (t2) of output pulse of OP amp C is read by the microcomputer during the initial detection, which is the detection sensitivity. The wider the duty, the higher the sensitivity, and vice versa. The detection sensor is set so that the output changes in the range of end detection. Therefore, t is shorter when the output voltage is higher, and it is longer when the voltage is lower. Thus, the microcomputer is able to detect the tonearm position. Also, the amount of change in t can be found by reading the amount of t several times with the rotation of turntable platter, and therefore the tonearm advancing speed can be judged from the amount of change in t. In this way, the microcomputer detects the end of record to control the arm drive mechanism.

#### 3. Automatic adjustment of end detection sensor output

In order to stabilize the operation point of end detection sensor after power ON, the output is automatically adjusted by the microcomputer so that the detection sensor output voltage becomes 11V while the tonearm is in the rest position and is returned to the rest position.

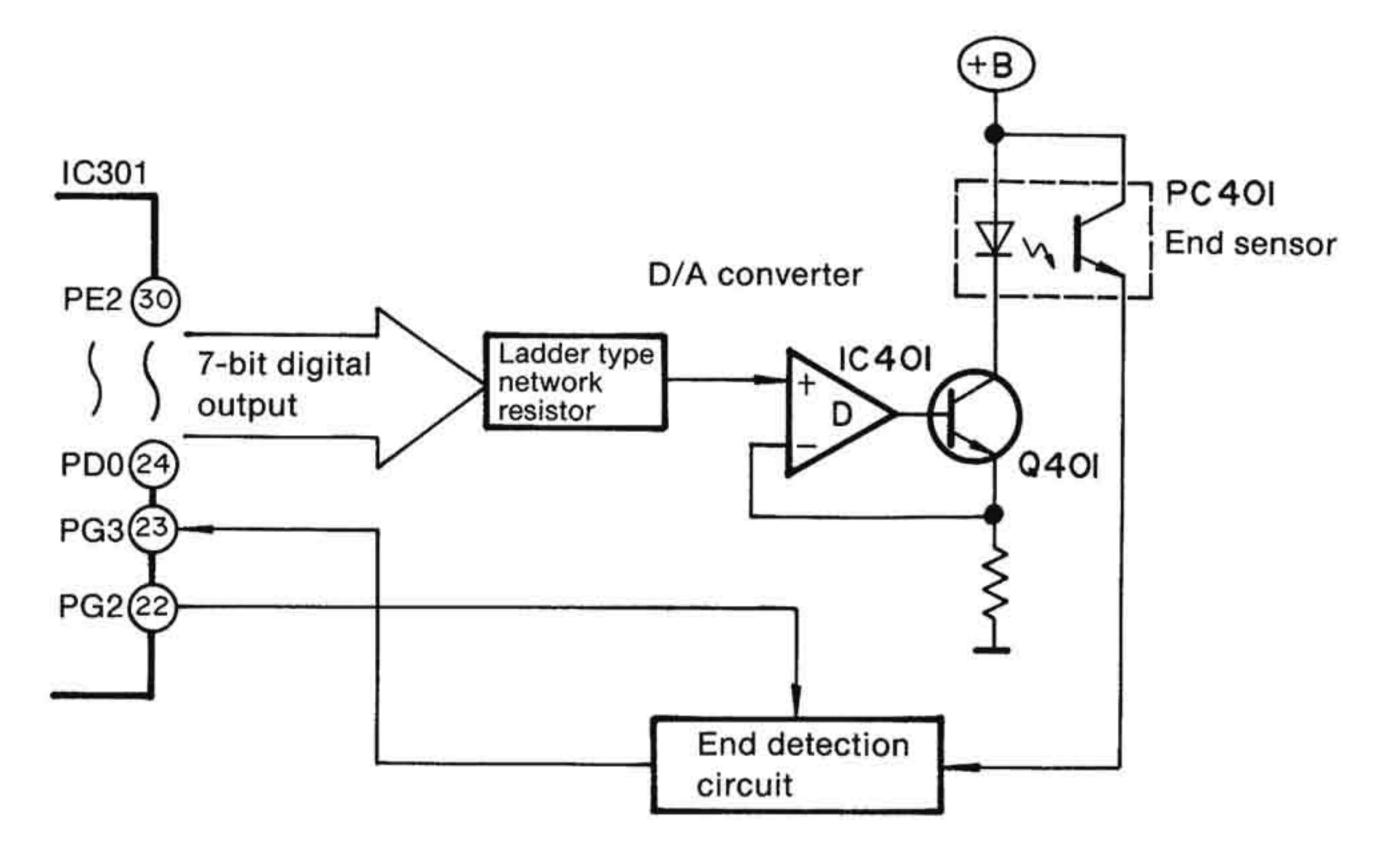


When the tonearm is in the rest position, 7-bit pulses are output from pins  $@\sim@$  of microcomputer, and the digital output is changed to analog output by OP amp D and D/A converter consisting of ladder type network resistor, thereby controlling the current flowing to LED of the detection sensor. In that case, strobe is output from pin @ (PG2) of microcomputer, and the sensor output is detected by the end detection circuit mentioned in the previous section. The microcomputer outputs 7-bit pulses until the detected output becomes 11V thereby automatically adjusting the output of detection sensor.


# ■ DESCRIPTION OF IC301 (SVILC6526CPA) TERMINALS


Pin No.	Mark	Description			
1	PE3	Turntable start/stop command output terminal ("L" at start, "H" at stop.)			
2	VDD	Power supply terminal (+5V)			
3	PF0	Mechanism condition detecting switch (Down SW) input terminal. (Mechanism condition is detected in up switch combination.)			
4	PF1	Mechanism condition detecting switch (Up SW) input terminal. (Mechanism condition is detected in down switch combination.)			
5	PF2	Full-auto mechanism and semi-auto mechanism mode changeover terminal. [Openfull-auto (SL-QD33), Groundsemi-auto (SL-QD22).]			
6	PF3	Tonearm rest position detecting switch input terminal. ("L" with tonearm is rest position.)			
7	PG0	45 LED lighting output and speed changeover command output terminal (LED lights up at "L", 45 r.p.m"L", 33 r.p.m"H".)			
8	PG1	REPEAT LED lighting output terminal. (LED lights up at "L".)full-auto (SL-QD33)			
9	PG2	CUEING LED lighting output terminal. (LED lights up at "L".)			
10	PG3	START/STOP LED lighting output terminal. (LED lights up at "L".)			
11	PA0	Speed select key input terminal. (Used in full-auto mode.) 33 key input terminal. (Used in semi-auto mode.)			
12	PA1	Repeat key input terminal. (Used in full-auto mode.) 45 key input terminal. (Used in semi-auto mode.)			
13	PA2	Cueing key input terminal.			
14	PA3	Start/stop key input terminal. (Used in full-auto mode.) Stop key input terminal. (Used in semi-auto mode.)			

Pin No.	Mark	Description						
15	OSC2	Clock (800 k	oscillatio Hz)	n input t	erminal.			
16	OSC1	Clock (800 k	oscillatio Hz)	n input t	erminal.	(		
17	TEST		erminal sed, conr	ected to	ground	l.)		
18	VSS	Groun	d termina	ıl				
19	REST	A STANSON OF THE STAN	Reset terminal (Microcomputer is reset at "L".)					
20	PG0	Tonea	rm motor	drive co	ntrol ou	tput teri	minal.	
			Part Motor conditions					
21	PG1	1	CVILLENSED:	Braked	Free	Normal	Reverse	
	10 10 2 4 2	)	PG0 PG1	н	L	Н	L	
22	PG2	Strobe output terminal.  (Strobe is output during detection sensor automatic output adjustment and end detection.						
23	PG3	Detection sensor automatic output adjustment and end detection input terminal.  (It reads the time from rise of strobe of PG2 until rise of pulse input during automatic adjustment and end detection.						
24	PD0	LSB		37-41-1-2				
25	PD1		7-bit diç	gital outp	out term	inal.		
26	PD2		/7-hit nu	lses are	outnut t	o I FD o	of \	
27	PD3	1 }	detection	n senso	r until th	ne outpu	it of	
28	PE0			PG3	- 크림 크림(1)			
29	PE1		244 255	ent of d			· 1 1	
30	PE2	мѕв						

# BLOCK DIAGRAM

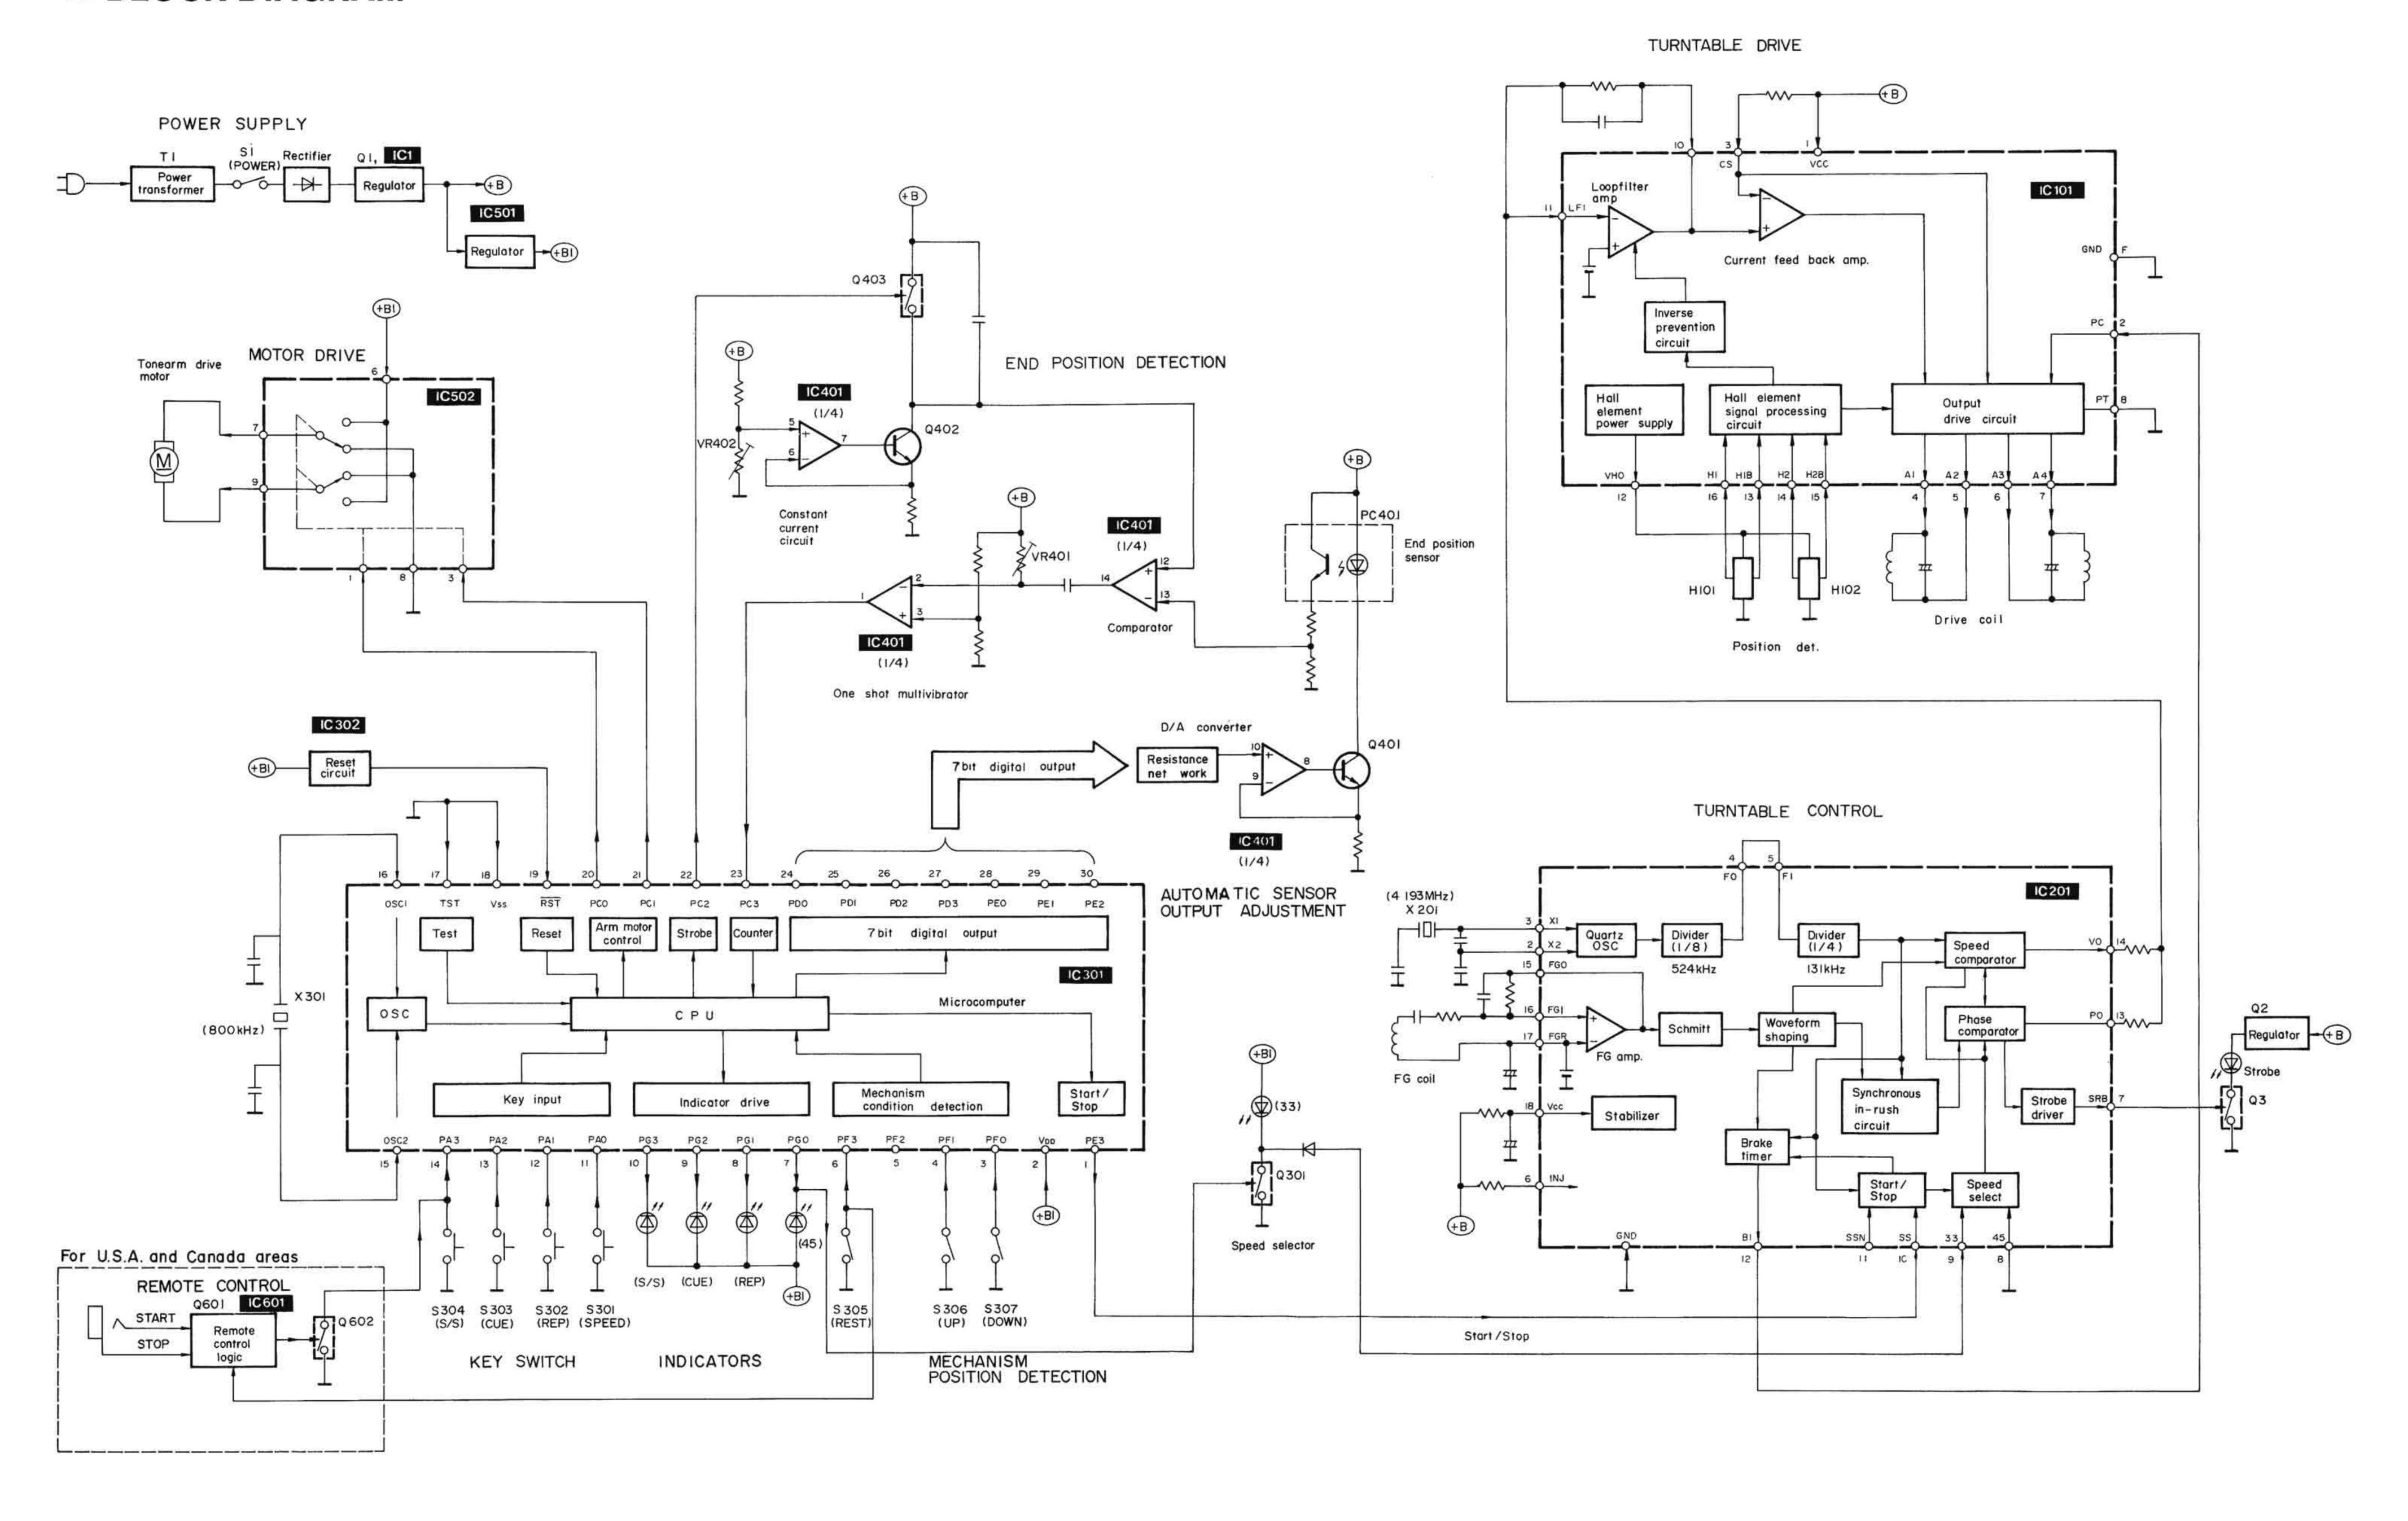

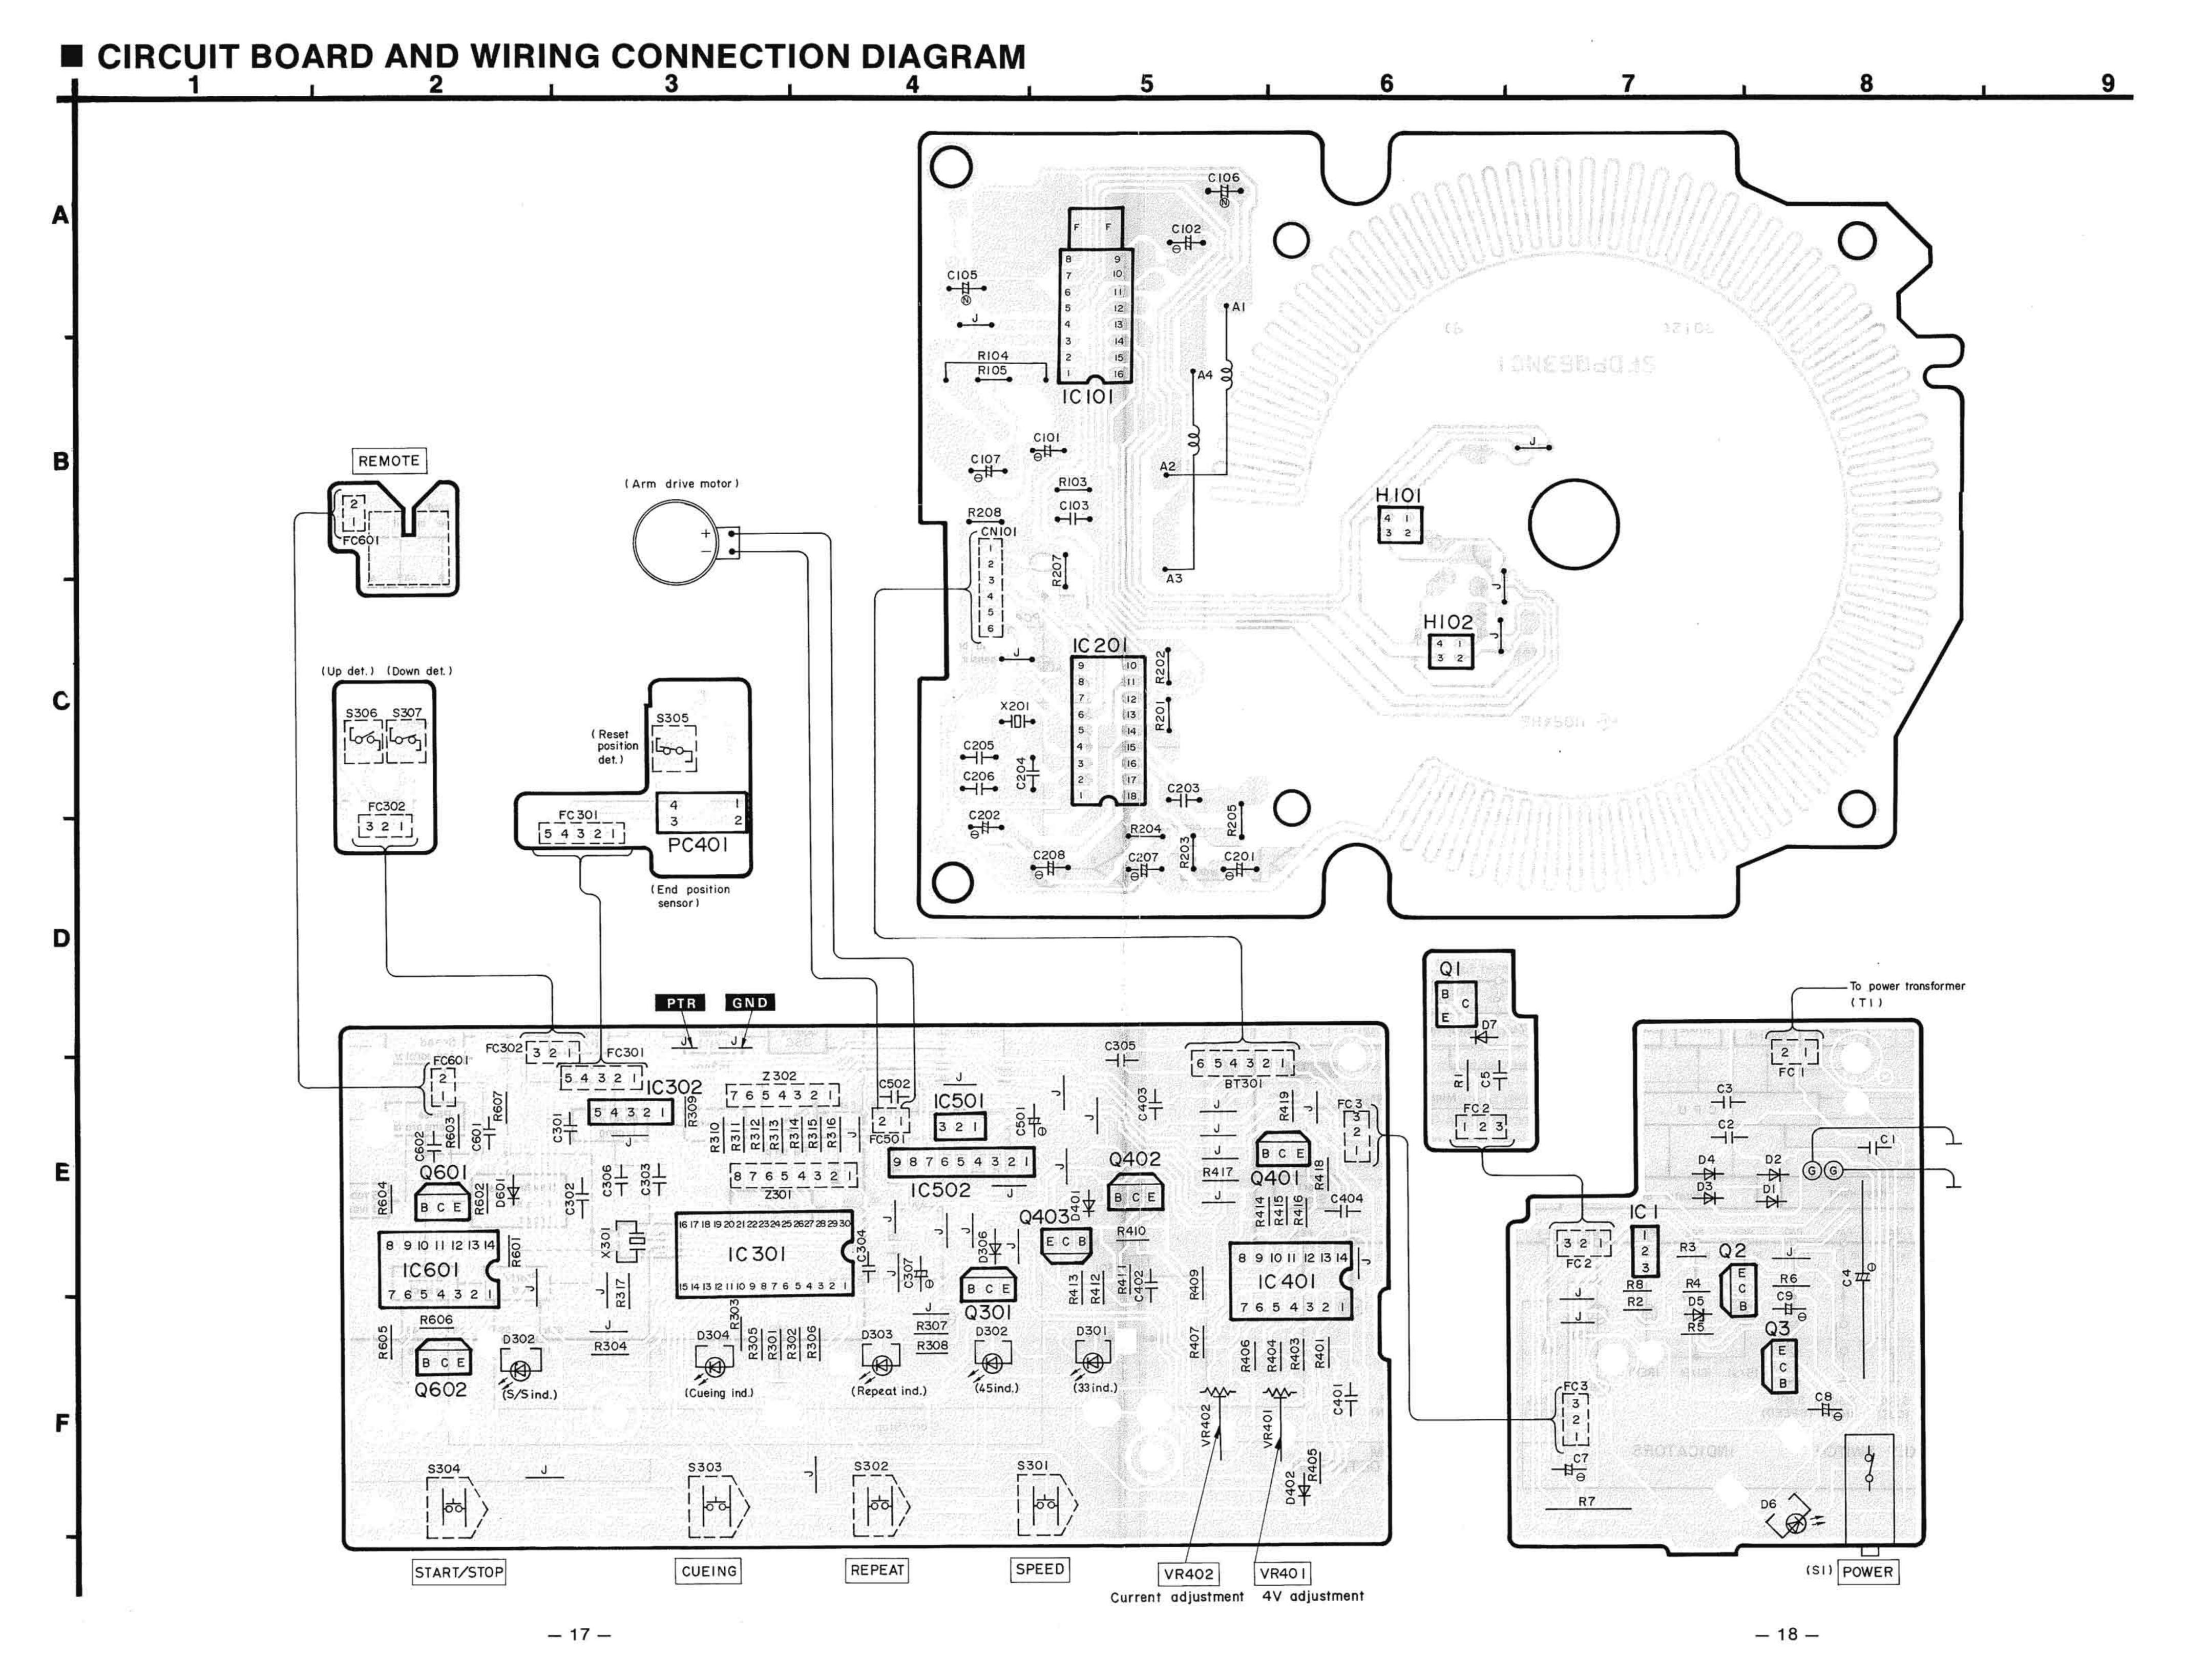

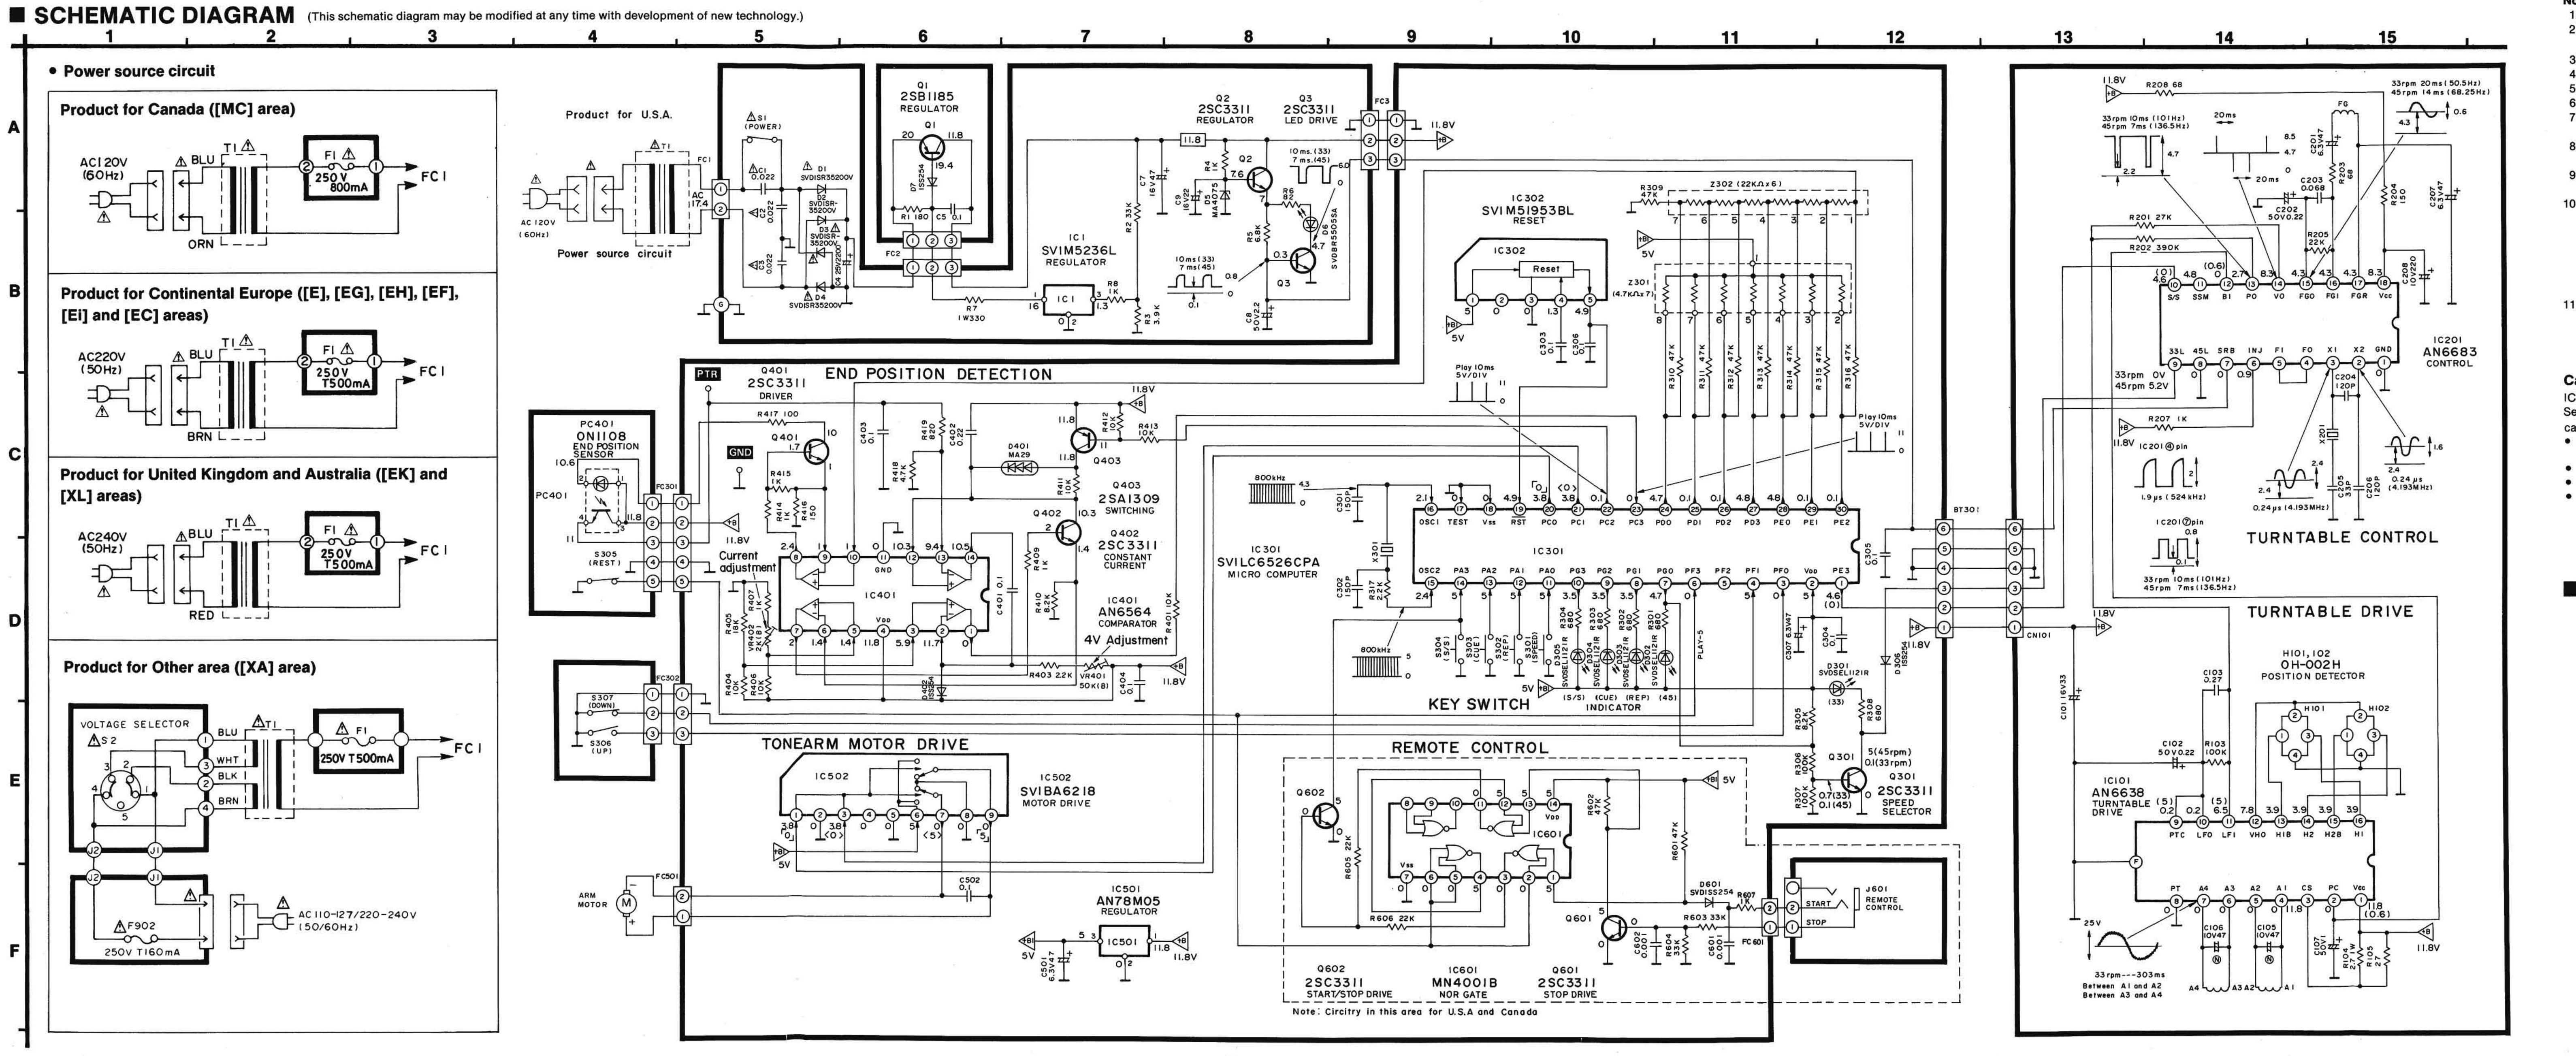

Voltage selector switch in "220-240V" position.

(For [XA] area only) 3. S301 : Speed select switch.

4. S302 : 5. S303 : Cueing switch.

6. S304 2. S305 : Rest position detection switch in "on" position. (Tonearm is in the rest position.)

(Tonearm is in the rest position.)

8. S306 : Mechanism position detection (up) switch in "off" position.

(Tonearm is in the rest position.) : Mechanism position detection (down) switch in "on" position.

10. The voltage value and waveform are the standard values (stop mode) of this measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis. Therefore, the voltage value and waveform may include some error due to the internal impedance of the tester or the measuring unit.

is the voltage when turntable is in rotation.

is the voltage when arm motor is in normal rotation mode.

\* < > is the voltage when arm motor is in reverse rotation mode.

11. Important safety notice:

Components identified by A mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

#### Caution!

IC and LSI are sensitive to static electricit Secondary trouble can be prevented by takin care during repair.

- Cover the parts boxes made of plastics with aluminum foil.

- Do not touch the legs of IC or LSI with the fingers directly.


# Product for MC only **FUSE REPLACEMENT**

Symbol located near the fuse indicates fast operating type. For continued protection against fire hazard, replace with same type fuse. Refer to the symbol for fuse rating.

#### **FUSIBLE REMPLACEMENT**

singifie un fusible à action rapide. Pour un die, n'utiliser que des fusibles du même type. S apporter au symbole pour la vàleur des fusibles

# ■ TERMINAL GUIDE OF IC'S, TRANSISTORS **AND DIODES**

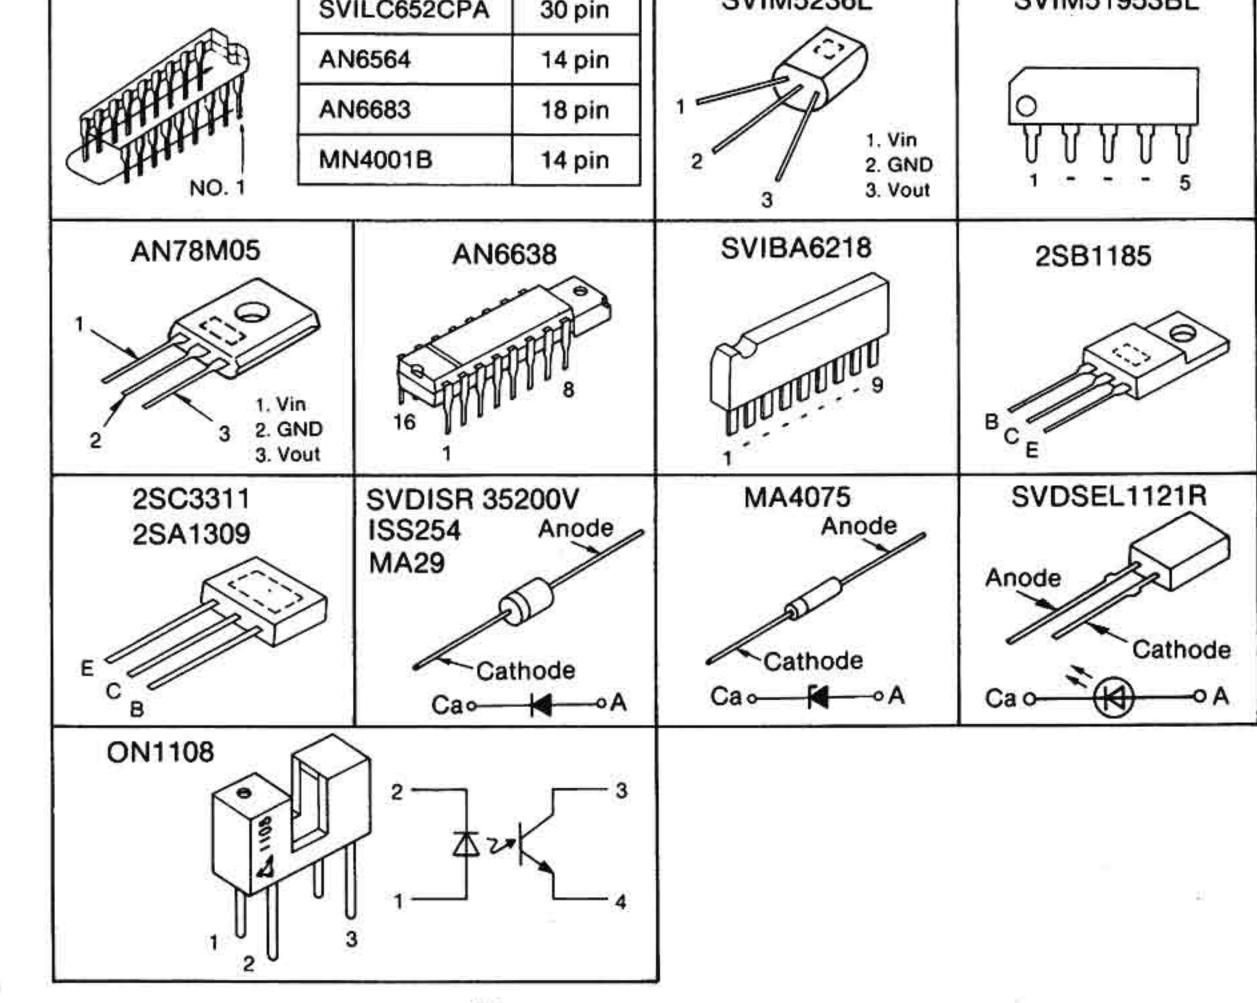

- 20 -

**- 19 -**

**- 22 -**

**– 21 –** 

# REPLACEMENT PARTS LIST

#### Notes:

- Part numbers are indicated on most mechanical parts.
   Please use this part number for parts order.
- Important safety notice:
   Components identified by mark have special characteristics important for safety.

When replacing any of these components, use only manufacturer's specified parts.

- ®-marked parts are used for black type only, while Omarked parts are for silver type only.
- Parts other than 
   ⑥-and ○-marked are used for both black and silver type.
- Bracketed indications in Ref. No. columns specify the area.Parts without these indications can be used for all areas.
- The "S" mark is service standard parts and may differ from production parts.
- The parenthesized numbers in the column of description stand for the quantity per set.

Unless otherwise specified. All resistors are in OHMS ( $\Omega$ ) K=1000 $\Omega$ , M=1000k $\Omega$ 

All capacitors are in MICROFARADS ( $\mu$ F), P=10<sup>-6</sup> $\mu$ F.

Ref. No.	Part. No.	Description
INTEGRA	TED CIRCUITS	
IC1	SVIM5236L	IC -
IC101	AN6638	IC
IC201	AN6683	IC
IC301	SVILC6526CPA	IC
IC302	SVIM51953BL	IC
IC401	AN6564	IC
IC501	AN78M05	IC
IC502	SVIBA6218	IC
IC601 [M,MC] only	MN4001B	IC
TRANSIS	TORS	
Q1	2SB1185DEF	Transistor
Q2, 3	2SC3311	Transistor
Q301	2SC3311	Transistor
Q401, 402	2SC3311	Transistor
Q403	2SA1309	Transistor
Q601, 602 [M,MC] only	2SC3311	Transistor
DIODES		
D1~4 <u></u>	\SVD1SR35200V	Rectifier
D5	MA4075	Zener Diode
D6	SVDBR5505SA	LED
D7	1SS254	Diode

Ref. No.	Part. No.	Description	
D301~305	SVDSEL1121R	LED	
D306	1SS254	Diode	
D401	MA29TA	Diode	
D402	1SS254	Diode	
D601 [M,MC] only	SVD1SS254	Diode	
OSCILLA	TORS		
X201	SVQNR41TR	Crystal, 4.193 MHz	
X301	SVFCSB800D	Ceramic, 800 kHz	
VARIABL	E RESISTOR		
VR401	EVN61AA00B54	Variable Resistor, 50kΩ (B)	
VR402	EVN61AA00B23	Variable Resistor, 2kΩ (B)	
рното п	NTERRUPTOR		
PC401	ON1108	End Position Sensor	
COMPON	ENT COMBINA	TION	
Z301	EXBP87472KR	4.7kΩ×7	
Z302	EXBS86223KR	22kΩ×6	
HALL ELE	EMENT		
H101, 102	OH 003	Hall Element	

Ref. No.	Part. No.	Description
SWITCHE	S	•
	SFDSF01N02	Power
	SFDSHXW225-3	
2012	EVQQS405K	Operation
S305~307	22HB1	Rest & Mechanism
		Position Det.
POWER T	RANSFORMER	
T1 [M]	SLT48DTL3A	Power Source
T1 [MC] 1	SLT48DT11C	Power Source
T1 <u> </u>	SLT48DTE13E	Power Source
[EK, XL]		
T1 [XA]	\SLT57DT7E	Power Source
T1 [Other]/	ASLT48DT10E	Power Source
FUSES		
F1 [MC]	XBA2F08NU100	250V, 800mA
F1 / / except [M]	XBA2C05TB0	250V, T500mA
EQUO (XV)	XBA2C016TB0	250V, T160mA

#### Resistors and Capacitors

#### **Numbering System of Resistor**

Example

ERD	S2	T	J	101
Type	Wattage	Shape	Tolerance	Value
(Carbon)	(1/4W)		(±5%)	(100Ω)
ERG	1	AN	J	2R2
Type	Wattage	Shape	Tolerance	Value
(Metol Oxide)	(1W)		(±2%)	(2.2Ω)
ERD	2	FC	G	101
Type	Wattage	Shape	Tolerance	Value
(Carbon)	(1/4W)	Peculiarity	(±2%)	(100Ω)

Ref. No.	Part No.	Value	Ref. No.	Part No.	Value
RESISTORS			R205	ERDS2TJ223	22K
	·		R207	ERDS2TJ102	1K
R1	ERDS2TJ181	180	R208	ERDS2TJ680	68
R2	ERDS2TJ333	33K	R301, 302	ERDS2TJ681	680
R3	ERDS2TJ392	3.9K	R303, 304	ERDS2TJ681	680
R4	ERDS2TJ102	1K			
R5	ERDS2TJ682	6.8K	R305	ERDS2TJ822	8.2K
R6	ERDS2TJ820	82	R306, 307	ERDS2TJ104	100K
R7	ERG1ANJ331	330	R308	ERDS2TJ681	680
R8	ERDS2TJ102	1K	R309, 310	ERDS2TJ473	47K
R103	ERDS2TJ104	100K	R311, 312	ERDS2TJ473	47K
R104	ERX1ANJ2R7	2.7	R313, 314	ERDS2TJ473	47K
			R315, 316	ERDS2TJ473	47K
R105	ERDS2TJ270	27	R317	ERDS2TJ222	2.2K
R201	ERDS2TJ273	27K	R401	ERDS2TJ103	10K
R202	ERDS2TJ394	390K	R403	ERDS2TJ222	2.2K
R203	ERDS2TJ680	68			
R204	ERDS2TJ151	150	R404	ERDS2TJ103	10K

R405

# Numbering System of Capacitor

Example

ECE	A or B	OJ	U	470	
Type (Electrolytic)	Shape	Voltage (6.3V)	Peculiarity use	Value (47μF)	
ECQ	G	1	223	K	Z
Type (Plastic Film)	Peculiarity	Voltage (100V DC)	Value (0.022μF)	Tolerance (±10%)	Shape
ECK	R	_1H	473	Z	
Type (Ceramic)	Shape	Voltage (50V DC)	Value (0.047μF)	Tolerance	Peculiarity

7	`	/oltage	Toloronoo
Туре	ECE Type	Others	Tolerance
ECE : Electrolytic	0J : 6.3V	1C : 16V DC	K : ±10%
ECK)	1A : 10V	1E : 25V DC	Z : +80 %
ECF > : Ceramic	1C : 16V	05 : 50V DC	14.237
ECC	1E : 25V	1H : 50V DC	1
ECQ : Plastic Film	1V : 35V	1 : 100V DC	
	1H : 50V		
	1J : 63V		

Ref. No.	Part No.	Value
R406	ERDS2TJ103	10K
R407	ERDS2TJ102	1K
R409	ERDS2TJ102	1K
R410	ERDS2TJ822	8.2K
R411	ERDS2TJ103	10K
R412, 413	ERDS2TJ103	10K
R414, 415	ERDS2TJ102	1K
R416	ERDS2TJ151	150

Ref. No.	Part No.	Value	
R417	ERDS2TJ101	100	
R418	ERDS2TJ472	4.7K	
R419	ERDS2TJ821	820	
R601, 602	ERDS2TJ473	47K	
R603, 604	ERDS2TJ333	33K	
R605, 606	ERDS2TJ223	22K	
R607	ERDS2TJ102	1K	

18K

ERDS2TJ183

Ref. No.		Part No.	Value
CAPACITORS			
C1	Λ	ECQG1223KZ	0.022
C2, 3	$\triangle$	ECKR1H223ZF	0.022
C4		ECEB1EU222	2200
C5		ECFR1H104ZFM	0.1
C7		ECEA1CU470	47
C8		ECEA1HU2R2	2.2
C9		ECEA1CU220	22

Ref. No.	Part No.	Value
C101	ECEA1CU330	33
C102	ECEA50ZR22	0.22
C103	ECQV05274JZ	0.27
C105, 106	ECEA1AN470S	47
C107	ECEA1HU010	1
C201	ECEA0JU470	47
C202	ECEA50ZR22	0.22
C203	ECQM1H683KZ	0.068

Ref. No.	Part No.	Value
C204	ECCD1H121KC	120P
C205	ECCD1H330JC	33P
C206	ECCD1H121KC	120P
C207	ECEA0JU470	47
C208	ECEA1AU221	220
C301, 302	ECCR1H151K	150P
C303	ECQG1H104KZT	0.1
C304, 305	ECFR1E104ZFM	0.1

Ref. No.	Part No.	Value
C306	ECFR1E104ZFM	0.1
C307	ECEA0JU470	47
C401	ECQG1H104KZT	0.1
C402	ECQG1H224KZW	0.22
C403, 404	ECFR1E104ZFM	0.1
C501	ECEA0JU470	47
C502	ECFR1E104ZFM	0.1
C601, 602	ECKR1H102ZF	0.001

Ref. No.	Part. No.	Description	
CABINET	AND CHASSIS	PARTS	
1	SFADZ15R01E	Dust Cover	(1)
1-1	SFGZD04N01	Rubber Cushion	(2)
2	SHOB5	Turntable Mat	(1)
3	SHRB15E	Base,	
		Disc Size Sensor	(1)
4	SFTEQD3N01	Turntable Platter	(1)
5	SFTMC07-01E	Magnet	(1)
6	SFMGQ34N01	Cover, Stator Coil	(1)
7	SFMZQ63M53A	Stator Flame Ass'y	(1
[AX] 8	SFGCC05X01	Cushion Rubber	(2
8 [Other]	SFGCC05N02	Cushion Rubber	(2)
9	SFGZC05N03	Cushion Rubber	(1
10	SFUPC05N02	Shield Plate	(1)
11 0	SKMB36-0S	Plate	(1)
11 ®	SKMB36-0K	Plate	(1)
12 0	SBCB100-0S	Button	(1)
12 ®	SBCB100-0C	Button	(1)
13	SUWB9	Lever, Button	(1
14	SHRB40	Bracket	(1
15	SFUMBD2N07	Strobe Cover	(1
16	SFUMBD2N06	Holder	(1
17 [M,MC]	SGXB130-00D	Ornament Plate	(1
17 [Other]	SGXB130-00E	Ornament Plate	(1
18 0	SBCB120-0S	Button	(1
18 ®	SBCB120-0C	Button	(1
19	SHRB41	Holder	(1
20	SKUB3-1	<b>Bottom Cover</b>	(1
21	SFQCQD3N01	Spring, Insulator	(4
22	SKLB2	Insulator	(4
23 🔾	SFGK170-01	Rubber Cap	(2
23 ®	SFGK171F01	Rubber Cap	(2
24	SMCB2	Shield Plate	(1
25	SFDJBD2N03	Terminal Plate	(1
26 🔾	SKMLQD33-SM	Cabinet	(1
26 ®	SKMLQD33-KM	Cabinet	(1
27 [M]	SGTB52	Name Plate	(1
27 [MC]	SGTB53	Name Plate	(1
27 [E,EC]	SGTB54	Name Plate	(1
27 [EG]	SGTB55	Name Plate	(1
27 [EK]	SGTB57	Name Plate	(1
27 [XA]	SGTB67	Name Plate	(1
27 [XL]	SGTB98	Name Plate	(1
27 [Other]	SGTB56	Name Plate	(1
28	SGXB230	Plate	(1
except [M, MC]	SKMB55-0S	Cover	(1
except [M, MC]	SKMB55-0K	Cover	(1

Ref. No.	Part. No.	Description	
30 O	SKMB35-0S	Cover	(1)
[XA] 30 ® except	SKMB35-0K	Cover	(1)
[XA] 31	SFKUMA1N01E	Tonearm Rest	(1)
32	SFATZ15R01A	Hinge	(1)
	\SJSB4	AC Socket	(1)
34 [M,MC] only	SJJ130-1	Jack, Remote control	56.
TONEAR	M PARTS		
41	SFPAMQD201A	Tonearm Ass'y	(1)
42 except	EPC-P30	<b>★</b> Cartridge	(1)
[M, MC] 43 except	EPS-30ES	★Stylus	(1)
[M, MC] 44	SFCNC03301	Cover	(1)
except [M, MC]			
45	SUXB4	Shaft	(1)
46	SFUMBD2N51	Lift Arm	(1)
47	SUWLQD33-KM	Arm Base	(1)
48	SUSB1	Spring	(1)
49 50	SHRB48	Lever	(1)
50	SFGZN05N51	Cushion Rubber	(1)
51	SUSB14	Spring	(1)
52	SHRB12	Plate, Index	(1)
53 54	SHRB38 SUSB42	Sub Plate, Index Spring	(1)
55	SUWB10E	Plate, Pidk-up Fixing	(1)
55-1	SUSB22	Spring	(1)
56	SFGZZ15R02	Spacer	(2)
57	SHRB32-1	Holder	(1)
58	SHRB43-1	Pin	(1)
MECHAN	ISM PARTS		_
61	SUKB6E	Mechanism Plate	(1)
62	SDGB3	Main Gear	(1)
63 64	SFUMB63M51	Movable Piece Cushion Rubber	(1)
64 65	SFGZB63M51 SUSB31	Spring	(1)
66	SHRB47	Lever	(1)
00		20.0.	10000
67	7446 M	Motor Ass'v	
67 68	SMNLQD33-KM SHGB11	Motor Ass'y Cushion Rubber	- 20197
68	SMNLQD33-KM		(1) (1)
1000	SMNLQD33-KM SHGB11	Cushion Rubber	(1)
68 69 70 71	SMNLQD33-KM SHGB11 SDGB6 SHRB62 SHRB64	Cushion Rubber Wheel Holder Pin	(1) (1) (1)
68 69 70 71 72	SMNLQD33-KM SHGB11 SDGB6 SHRB62 SHRB64 SHRB63	Cushion Rubber Wheel Holder Pin Lever	(1) (1) (1) (2) (1)
68 69 70 71 72 73	SMNLQD33-KM SHGB11 SDGB6 SHRB62 SHRB64 SHRB63 SUSB42	Cushion Rubber Wheel Holder  Pin Lever Spring	(1) (1) (1) (2) (1)
68 69 70 71 72 73 <b>SCREWS</b>	SMNLQD33-KM SHGB11 SDGB6 SHRB62 SHRB64 SHRB63 SUSB42	Cushion Rubber Wheel Holder  Pin Lever Spring	(1) (1) (2) (1) (1)
68 69 70 71 72 73 <b>SCREWS</b> N1	SMNLQD33-KM SHGB11 SDGB6 SHRB62 SHRB64 SHRB63 SUSB42 AND WASHERS XTV3+10G	Cushion Rubber Wheel Holder  Pin Lever Spring  Screw, ⊕3×10	(1) (1) (2) (1) (1)
68 69 70 71 72 73 <b>SCREWS</b>	SMNLQD33-KM SHGB11 SDGB6 SHRB62 SHRB64 SHRB63 SUSB42	Cushion Rubber Wheel Holder  Pin Lever Spring	(1) (1) (2) (1) (1) (17)
68 69 70 71 72 73 <b>SCREWS</b> N1 N2	SMNLQD33-KM SHGB11 SDGB6 SHRB62 SHRB64 SHRB63 SUSB42 AND WASHERS XTV3+10G SFXWC06N02	Cushion Rubber Wheel Holder  Pin Lever Spring  Screw, ⊕3×10 Washer	(1) (1) (2) (1) (1) (1) (3)
68 69 70 71 72 73 <b>SCREWS</b> N1 N2 N3	SMNLQD33-KM SHGB11 SDGB6 SHRB62 SHRB64 SHRB63 SUSB42 AND WASHERS XTV3+10G SFXWC06N02 XTN3+6J	Cushion Rubber Wheel Holder  Pin Lever Spring  Screw, ⊕3×10 Washer Screw, ⊕3×6	(1) (1) (2) (1) (1) (1) (1) (3) (1)
68 69 70 71 72 73 <b>SCREWS</b> N1 N2 N3 N4 N5 N6	SMNLQD33-KM SHGB11 SDGB6 SHRB62 SHRB63 SUSB42 AND WASHERS XTV3+10G SFXWC06N02 XTN3+6J XYN3+C8S XTV3+6J SNSB4	Cushion Rubber Wheel Holder  Pin Lever Spring  Screw, ⊕3×10 Washer Screw, ⊕3×6 Screw, ⊕3×8 Screw, ⊕3×6 Screw, ⊕3×6 Screw, ⊕3×6 Screw, ⊕3×6 Screw	(1) (1) (1) (1) (1) (1) (1) (3) (1) (4) (4)
68 69 70 71 72 73 <b>SCREWS</b> N1 N2 N3 N4 N5	SMNLQD33-KM SHGB11 SDGB6 SHRB62 SHRB63 SUSB42 AND WASHERS XTV3+10G SFXWC06N02 XTN3+6J XYN3+C8S XTV3+6J	Cushion Rubber Wheel Holder  Pin Lever Spring  Screw, ⊕3×10 Washer Screw, ⊕3×6 Screw, ⊕3×8 Screw, ⊕3×8 Screw, ⊕3×6	(1) (1) (1)

Ref. No.	Part. No.	Description	
N10	хмсзв	Washer, $\phi$ 3	(2)
N11	SFXGQ34N02	Screw	(1)
N12	XUC3FY	Washer, φ3	(2)
N13	XYN26+C5	Screw, ⊕2.6×5	(3)
N14	XTV3+35J	Screw, ⊕3×35	(1)
N15	XTV3+8J	Screw, ⊕3×8	(2)
N16	XTV3+8G	Screw, ⊕3×8	DEDM
N17	SNSB5		(5)
		Screw	(2)
ACCESSO	HIES	a	
A1 [M]	SQX54018-1	Instruction Book	(1)
A1 [MC]	SQXLQD33-KMC	Instruction Book	(1)
A1 [EK]	SQX54020	Instruction Book	(1)
A1 [EG]	SQX54021	Instruction Book	(1)
A1 [EF]	SQX54022	Instruction Book	(1)
A1 [EI]	SQX54023	Instruction Book	(1)
A1	SQX54024	Instruction Book	(1)
[XL, XA] A1 [Other]	SQXLQD33-KE	Instruction Book	(1)
	SJA170	AC Cord	(1)
[M, MC]	**************************************		
A2 [EK] 🛕	SFDAC05G02	AC Cord	(1)
A2 [XL] /	\SJA163	AC Cord	(1)
	\SJA168-1	AC Cord	(1)
	SFDAC05E02	AC Cord	(1)
A3	SFDHBD2N01	Output Cord	(1)
A4	SFDLJ11N01E	Ground Wire	(1)
A5	SFWE212-01		
A6 [XA] 🛕	SJP9215	45 Adaptor Adaptor	(1)
only A7 [M, MC]	SJP2257K	Remoto Control Cord	(1)
only			
PACKING	PARTS		
P1 [M] ()	SPGB26	Carton Box	(1)
P1 [M] ®	SPGB47	Carton Box	(1)
P1 [MC]()	SPGB27	Carton Box	(1)
P1 [MC]®	SPGB48	Carton Box	(1)
P1 [EF] ()	SPGB54	Carton Box	(1)
P1 [EF] ®	SPGB69	Carton Box	(1)
P1 0	SPGB53	Carton Box	(1)
[Other] P1 ® [Other]	SPGB68	Carton Box	(1)
ita e a	e and the second se	()(>0)(1 (24 -40)(20)	gravene.
P2	SFHHBD3N01	Pad, Left	(1)
P3	SFHHBD3N02	Pad, Right	(1)
P4	SFHZBD2N01	Pad, Tonearm Weight	(1)
P5	SFHZB63M01	Clamper, Tonearm	(1)
P6 P7	SPEB3 SFYH60X60	Clamper, Turntable Polyethylene Bag,	(2)
		Unit	(1)
P8	SPPB1	Polyethylene Bag, Dust Cover	(1)
P9	SFYF32A35	Polyethylene Bag,	
		Turntable Mat	(1)

