

#81 V1

Service Manual

QUARTZ Synthesizer
LW/MW/FM Stereo Tuner

40767

Tuner
ST-X999L

Color

(K)...Black Type



Area

| Country Code | Area | Color |
|--------------|--------------------|-------|
| (E) | Continental Europe | (K) |
| (EB) | Great Britain | (K) |
| (G) | Third Region | (K) |

SPECIFICATIONS

(DIN 45 500)

■ **FM TUNER SECTION**

Frequency range 87.50~108.00 MHz (0.05 MHz-steps)
 Sensitivity 1.5 μ V (IHF, usable)
 S/N 30 dB 1.3 μ V (75 Ω)
 S/N 26 dB 1.2 μ V (75 Ω)
 S/N 20 dB 0.9 μ V (75 Ω)
 IHF 46 dB stereo quieting sensitivity 28 μ V / 75 Ω
 Total harmonic distortion
 MONO 0.15%
 STEREO 0.3%
 S/N
 MONO 70 dB (78 dB, IHF)
 STEREO 65 dB (71 dB, IHF)
 Frequency response 20 Hz ~ 15 kHz, +0.5 dB ~ -1.5 dB
 Alternate channel selectivity \pm 400 kHz 65 dB
 Capture ratio 1.0 dB
 Image rejection at 98 MHz 46 dB
 IF rejection at 98 MHz 70 dB
 Spurious response rejection at 98 MHz 70 dB
 AM suppression 55 dB
 Stereo separation
 1 kHz 40 dB
 10 kHz 30 dB
 Carrier leak
 19 kHz -30 dB (-35 dB, IHF)
 38 kHz -45 dB (-50 dB, IHF)
 Channel balance (250 Hz ~ 6,300 Hz) \pm 1.5 dB
 Limiting point 1.2 μ V
 Bandwidth
 IF amplifier 180 kHz
 FM demodulator 1000 kHz
 Antenna terminals 75 Ω (unbalanced)

■ **AM TUNER SECTION**
 Frequency range
 MW 522 kHz ~ 1611 kHz (9 kHz-steps)
 530 kHz ~ 1620 kHz (10 kHz-steps)
 LW 155 kHz ~ 353 kHz (9 kHz-steps)
 153 kHz ~ 351 kHz (-2 kHz shift)

Sensitivity (S/N 20 dB)

MW 20 μ V, 300 μ V/m
 LW 50 μ V
 Selectivity (\pm 9 kHz)
 MW (at 999 kHz) 55 dB
 LW (at 254 kHz) 55 dB
 Image rejection
 MW (at 999 kHz) 40 dB
 LW (at 254 kHz) 40 dB
 IF rejection
 MW (at 999 kHz) 60 dB
 LW (at 254 kHz) 60 dB

■ **TIMER SECTION**

Clock Quartz-lock type
 24-hour indication
 Precision Within 0 sec. \sim \pm 10 sec.
 monthly (at 25°C)
 Functions 24-hours programmable
 weekly (1 setting)
 once only (1 setting)
 sleep (at 10~60 min. 10-min. intervals)
 Programmable content Program source(FM, MW, LW)
 Power ON/OFF setting
 Designation of preset station
 Setting intervals 1 minute ~ 23 hours, 59 minutes
 (at 1-min. intervals)
 sleep, once, weekly

Priority order

■ **GENERAL**

Output voltage 0.3V (0.6V, IHF)
 Power consumption 9W (clock 5W)
 Power supply
 For Great Britain AC 50 Hz/60 Hz, 240V
 For continental Europe AC 50 Hz/60 Hz, 220V
 For others AC 50 Hz/60 Hz, 110V/127V/220V/240V
 Dimensions (W x H x D) 360 x 64.5 x 288 mm
 (14-3/16" x 2-17/32" x 11-11/32")
 Weight 2.1 kg (4.6 lb.)

Notes:

Specifications are subject to change without notice.
 Weight and dimensions are approximate.

Technics

Matsushita Electric Industrial Co., Ltd.
 Central P.O. Box 288, Osaka 530-91, Japan

DEUTSCH

Tuner

ST-X999L

MESSUNGEN UND JUSTIERUNGEN

UKW JUSTIERUNGEN

Einstellungen der Bedienelemente und zu verwendende Geräte.

- UKW-Messender(UKW-MS)
- Stereo-Modulator
- Verzerrungs-Analysator
- Elektronische Gleichstrom-Voltmeter(EVM)
- Frequenzzähler
- Drosselspule(100µH)
- Widerstand(100kΩ)


Anmerkung: Für Z202,Z251,L321 und L322 werden bereits justierte Ersatzteile geliefert. Die Kerne dieser Teile daher nicht drehen.

UKW-MONO-VERZERRUNGS-JUSTIERUNG

1. Der Testaufbau ist in der Abbildung gezeigt.
2. Stellen Sie die Einheit auf "FM(UKW)" Betrieb.
3. Die Radiofrequenzanzeige und den Messender auf 100.10MHz einstellen.
4. Den Kern von T201 so justieren, daß die im Signalzustand gemessene Spannung 0mV (0±20mV) im 300mV-Bereich beträgt.
5. T202 so justieren, daß der Verzerrungsfaktor des linken Kanals minimal wird.
6. Schritte 4 und 5 einige Male wiederholen.
7. Versichern Sie sich, daß die Verzerrungsfaktoren von Kanal L und Kanal R annähernd gleich sind und auf ein Minimum gehalten sind.

Anmerkung: Für die Justierung ist ein Schraubendreher aus Kunststoff zu verwenden.

ZUSTAND DES UKW-MESSENDERS
 Modulation100%
 Modulationsfrequenz1kHz
 Ausgangspegel66dB

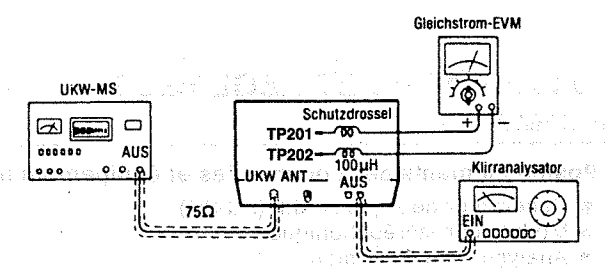

MPX-SGO-JUSTIERUNG



1. Der Testaufbau ist in der Abbildung gezeigt.
2. Den UKW-Betriebsart-Wahlschalter in die "on/auto" Position stellen.
3. Radio und Meßsender auf 100.10MHz einstellen.
4. VR301 auf 19kHz ± 30Hz auf der Frequenzzähleranzeige justieren.

VERWENDUNG EINES ALTERNATIVSYSTEMS

1. Stereosignal vom Meßsender eingeben oder eine Stereo-Sendung empfangen.
2. VR301 justieren, bis die Stereo-Anzeige aufleuchtet. Den Arm von VR301 mit Lack sichern, wie in der Abbildung gezeigt.

ZUSTAND DES UKW-MESSENDERS

Modulation100%
 Modulationsfrequenz0kHz
 Ausgangspegel,.....66dB

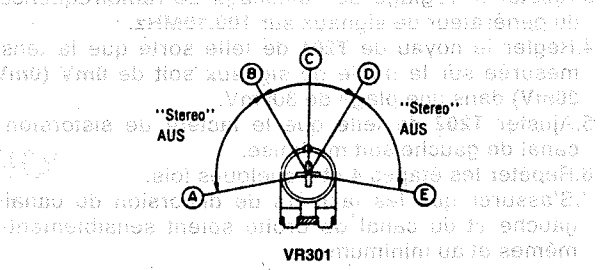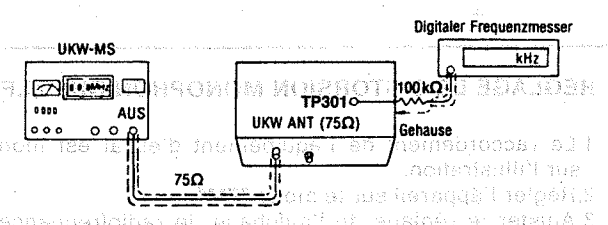

- Ⓐ-Ⓑ..... "Stereo" AUS Stellung
- Ⓒ-Ⓓ..... "Stereo" EIN Stellung (Anzeigebeleuchtung)
- Ⓒ..... Einstellpunkt des pilotschaltkreis'

CONTENTS

| | Page |
|--|-------|
| ACCESSORIES | 2 |
| CONNECTIONS | 2 |
| LOCATION OF CONTROLS | 3 |
| DISASSEMBLY INSTRUCTIONS | 4,5 |
| MEASUREMENTS AND ADJUSTMENTS | 6,7 |
| BLOCK DIAGRAM | 8,9 |
| SCHEMATIC DIAGRAM | 10~13 |
| TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES | 14 |


| | Page |
|--|----------|
| CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM | 14~16 |
| FUNCTIONS OF IC TERMINALS | 17 |
| DESCRIPTION OF FL PANEL | 18 |
| RESISTORS AND CAPACITORS | 19,20 |
| REPLACEMENT PARTS LIST | 20~22,24 |
| EXPLODED VIEW | 23,24 |

ACCESSORIES

| | |
|---|---|
| ● Stereo connection cable (SJP2269) | 1 |
| ● FM indoor antenna | 1 |
| For [G] area only (SSA269M) | |
| For others areas (SSA270M) | |
| ● AM loop antenna (SPB1162T) | 1 |
| ● AM antenna holders (SMA233-1M) | 1 |
| (SMA231M) | 1 |
| ● Screws (XTB3+10AFZ) | 2 |


| | |
|---|---|
| ● 3-core flat cable (SWKTX930E) | 1 |
| ● Attachment plug (SJP9009 for [EB] area only) | 1 |
| ● AC plug adaptor (RJP120ZBS-H for [G] area only) | 1 |
| ● AC power supply cord | 1 |
| For [EB] area only (SJA193) | |
| For [EG] area only (RJA0004) | |
| For others areas (SFDAC05E03) | |
| ● Remote-control transmitter (EUR64754) | 1 |
| ● Batteries (R03) | 2 |

CONNECTIONS

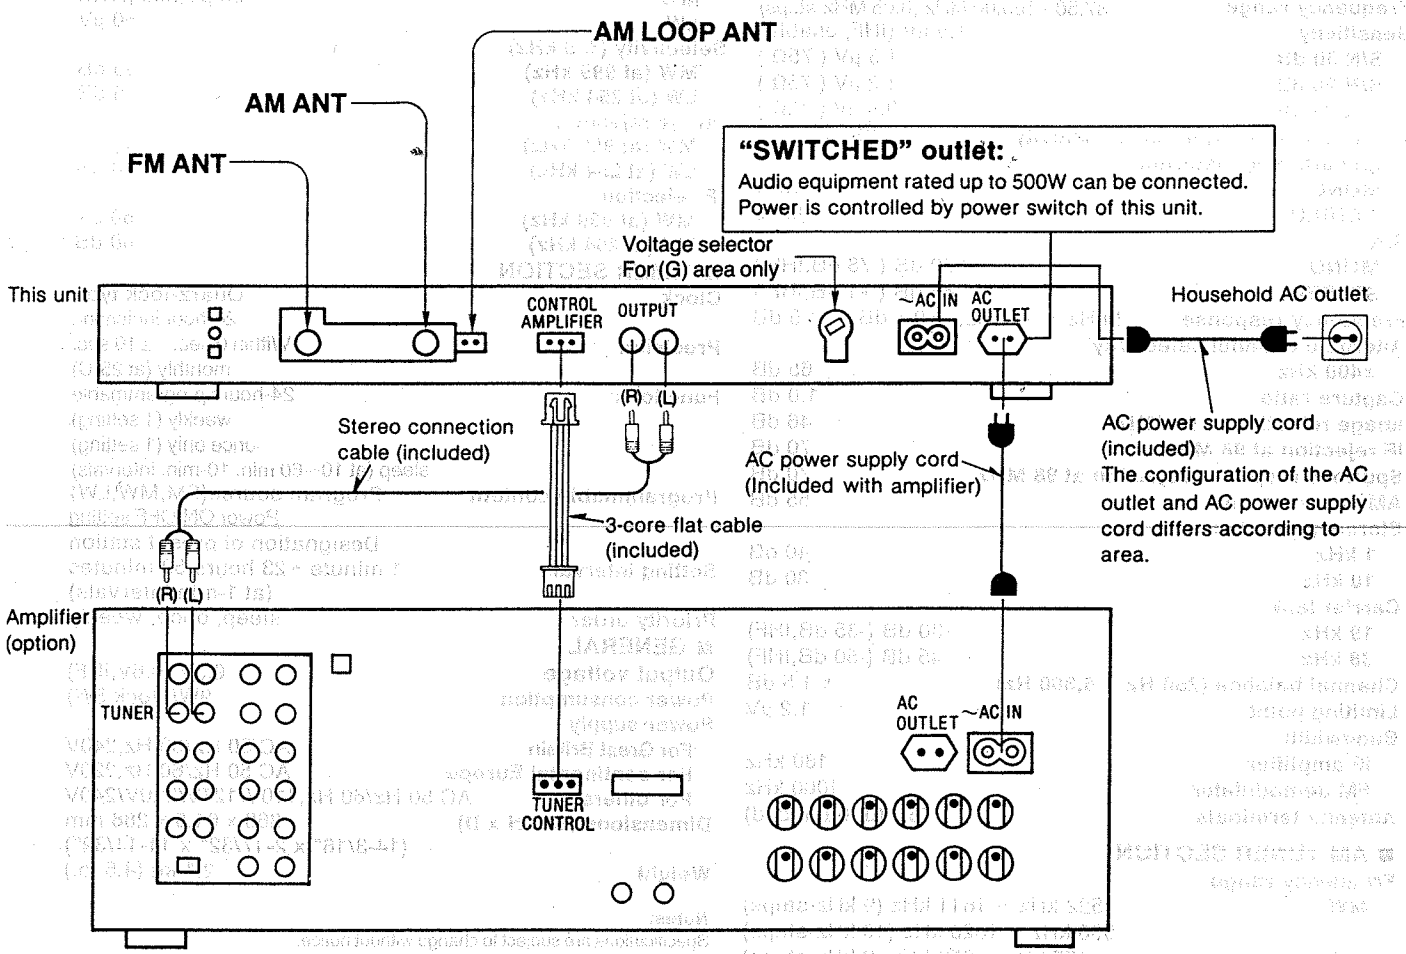

ELNSTELLUNG DER PHASESPERRUNG EINES SCHLEIFENVERSCHIUSSES

1. Der Testaufbau ist in der Abbildung gezeigt.
2. Den UKW-Betriebsart-Wahlhalter in die "AM" Position stellen.
3. Vornehmen Sie ein Kurzschluß zwischen TP903 und TP904.
4. Stellen Sie den Radiofrequenzbildschirm auf "1629kHz".
5. CT901 auf 524.288kHz ± 10Hz auf der Frequenzzähleranzeige justieren.

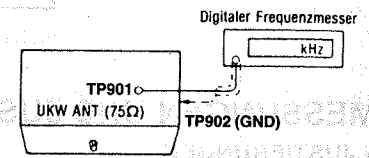

FRANÇAIS

MEURAGES ET REGLAGES

M.F. REGLAGES

Positionnements des commandes et équipement utilisé


- Générateur de signaux M.F. (FG-SG)
- Modulateur stéréophonique
- Analyseur de distorsion
- Voltmètre électronique à C.C. (EVM).
- Compteur de fréquence
- Bobine d'amortissement d'arrêt (100µH)
- Résistance (100KΩ)

Nota: Pour Z202, Z251, L321 et L322, ajuster les éléments qui sont fournis. Aussi, ne pas tourner les noyaux de ces éléments.

REGLAGE DE DISTORSION MONOPHONIQUE M.F.

1. Le raccordement de l'équipement d'essai est montré sur l'illustration.
2. Régler l'appareil sur le mode "FM".
3. Ajuster le réglage de l'affichage de radiofréquence et du générateur de signaux sur 100.10MHz.
4. Régler le noyau de T201 de telle sorte que la tension mesurée sur le mode de signaux soit de 0mV (0mV ± 20mV) dans une plage de 300mV.
5. Ajuster T202 de telle que le facteur de distorsion du canal de gauche soit minimisé.
6. Répéter les étapes 4 et 5 quelques fois.
7. S'assurer que les facteurs de distorsion du canal de gauche et du canal de droite soient sensiblement les mêmes et au minimum.

CONDITION DU GENERATEUR DE SIGNAUX M.F.
 Modulation100%
 Fréquence de modulation1kHz
 Niveau de sortie66dB

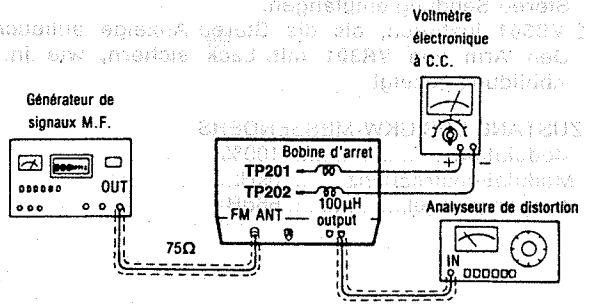



Nota: Le tournevis de réglage utilisé devra être fait en résines.

REGLAGE MULTIPLEX DE L'OSCILLATEUR COMMANDE PAR VARIATION DE TENSION

1. Le raccordement de l'équipement d'essai est montré sur la figure.
2. Régler l'appareil sur la position "on/auto".
3. Régler le cadran radio et le générateur de signaux sur 100.10MHz.
4. Ajuster VR301 pour 19kHz ± 30Hz sur le compteur de lecture de fréquences.

EN UTILISANT UN SYSTEME ALTERNATIF

1. Applique un signal stéréo à partir du générateur ou recevoir une émission stéréo.
2. Ajuster VR301 jusqu'à ce que l'indicateur stéréo s'éclaire. Coller le bras de VR301 comme il est montré sur la figure.

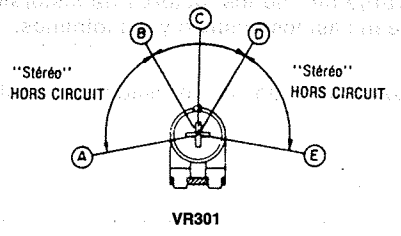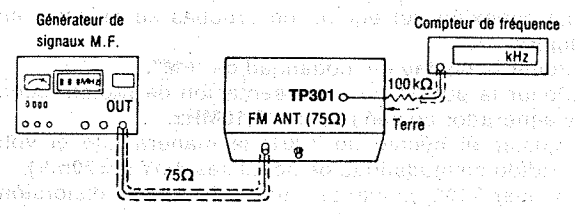


- A-B, D-E..... Position de HORS CIRCUIT "Stereo".
- B-D..... Position de MISE EN CIRCUIT "Stereo". (Eclairage de l'indicateur)
- C..... Point de réglage du circuit pilote.

CONDITION DU GENERATEUR DE SIGNAUX M.F.
 Modulation100%
 Fréquence de modulation0kHz
 Niveau de sortie66dB

REGLAGE DE L'HORLOGE EN BOUCLE À BLOCAGE DE PHASE

1. Le raccordement de l'équipement d'essai est montré sur la figure.
2. Régler l'appareil sur la position "AM".
3. Faire de court-circuit entre TP903 et TP904.
4. Régler l'affichage de radiofréquence sur "1629kHz".
5. Ajuster CT901 pour 524.288kHz ± 10Hz sur le compteur de lecture de fréquences.

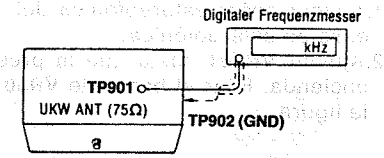

ESPAÑOL

MEDICIONES Y AJUSTES

FM AJUSTES

Posiciones de control y equipo usado


- Generador de señales de FM (FM-SG)
- Modulador estéreo
- Analizador de distorsiones
- Voltímetro electrónico de CC (EVM)
- Frecuencímetro
- Bobina de choque (100µH)
- Resistor (100kΩ)

Nota: Para Z202, Z251, L321 y L322, se suministran piezas ajustadas. Por lo tanto, no cambie los núcleos de estas piezas.

AJUSTE DE DISTORSION MONO FM

- 1.La conexión del equipo de pruebas se muestra en la figura.
- 2.Poner la unidad en modalidad de "FM".
- 3.Poner la puesta de la presentación de radiofrecuencia y generador de señales a 100,10MHz.
- 4.Ajustar el núcleo de T201 de manera que el voltaje medido en modalidad de señal sea 0mV (0±20mV).
- 5.Ajustar T202 de manera que el factor de distorsión de CH-I se minimice.
- 6.Repetir los pasos 4 y 5 algunas veces.
- 7.Asegurarse de que los factores de distorsión de CH-I y CH-D sean casi los mismos y los mínimos.


CONDICION DE GENERADOR DE SEÑALES DE FM
 Modulación100%
 Frecuencia de modulación1kHz
 Nivel de salida66dB

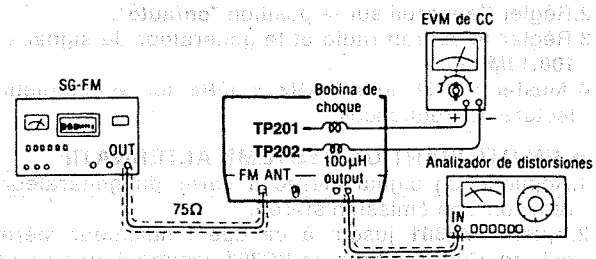

Nota:
 El destornillador de ajuste usado debe estar hecho de resina.


AJUSTE DE MPX VCO(OSCILADOR CONTROLADO POR VOLTAJE MPX)

- 1.La conexión del equipo de pruebas se muestra en la figura.
- 2.Poner la unidad en la posición de "on/auto".
- 3.Poner la presentación de la radio y la puesta del generador de señales en 100.10MHz.
- 4.Ajustar VR301 para 19kHz±30Hz en lectura de frecuencímetro.

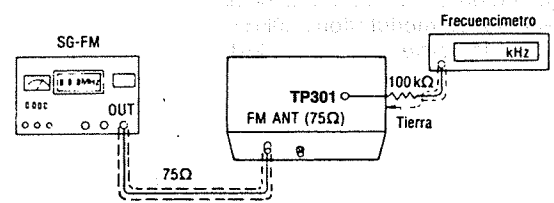

*** USANDO SISTEMA ALTERNATIVO**

- 1.Aplicar señal estereofónica del generador o recibir la emisión estereofónica.
- 2.Ajustar VR301 hasta que la presentación de estéreo se encienda. Fijar el brazo de VR301 como se muestra en la figura.

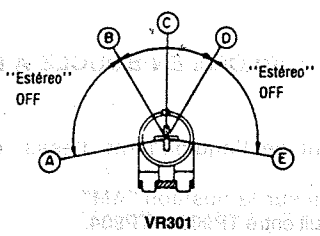


CONDICION DE GENERADOR DE SEÑALES DE FM
 Modulación100%
 Frecuencia de modulación0kHz
 Nivel de salida66dB

- Ⓐ-Ⓑ..... Pósiçión de "estéreo" OFF.
- Ⓒ-Ⓓ..... Pósiçión de "estéreo" ON. (indicador encendido)
- Ⓒ..... Punto de ajuste de circuito piloto.


AJUSTE DEL RELOJ DEL ENLACE DE LA FASE DE CIERRE(PHASE-LOCKED LOOP)

- 1.La conexión del equipo de pruebas se muestra en la figura.
- 2.Poner la unidad en la posición de "AM".
- 3.Hacer cortocircuito del TP903 y TP904.
- 4.Ajuste la frecuencia de radio a 1629kHz en la pantalla.
- 5.Ajustar CT901 para 524.288kHz±10Hz en lectura de frecuencímetro.

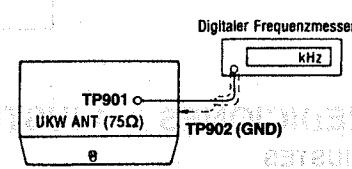


LOCATION OF CONTROLS

Tuner section

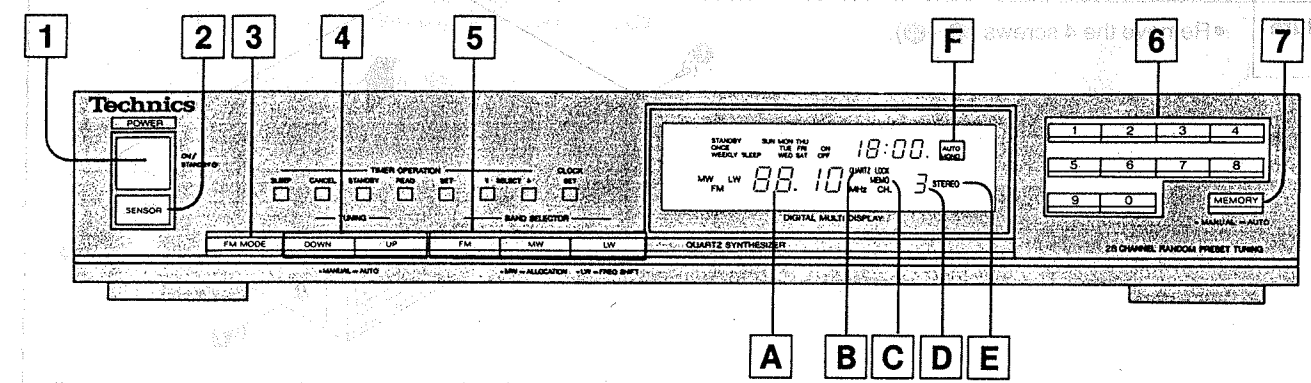

- 1 Power "STANDBY ON" switch (POWER "ON/STANDBY")
- 2 Remote-control signal receptor (SENSOR)
- 3 FM mode selector (FM MODE)
- 4 Tuning buttons (TUNING)
- 5 Band selectors (BAND SELECTOR)
- 6 Preset-tuning buttons (1-6) (28 CHANNEL RANDOM PRESET TUNING)
- 7 Memory button (MEMORY)
- A Digital frequency display
- B Quartz-lock indicator (QUARTZ LOCK)
- C Memory indicator (MEMO)
- D Channel display
- E FM stereo indicator (STEREO)
- F FM mode indicators

Timer section

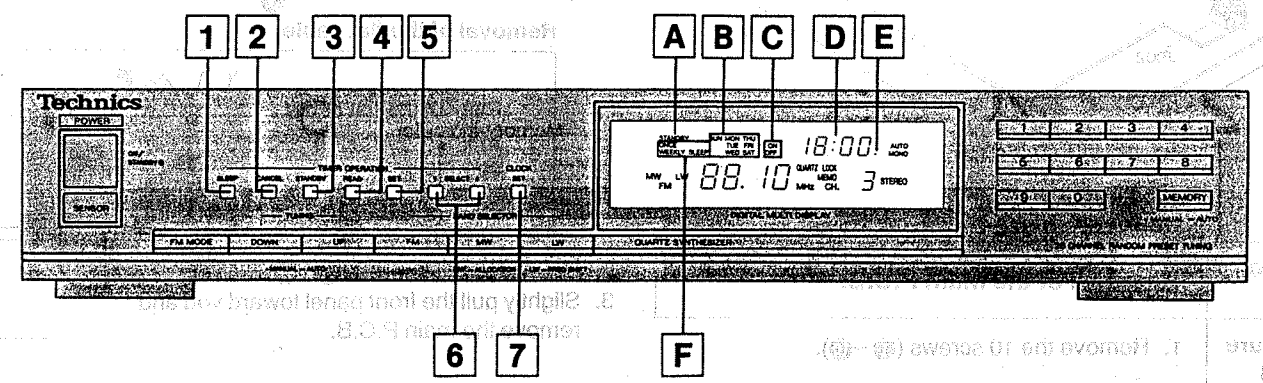


- 1 Sleep button (SLEEP)
- 2 Cancel button (CANCEL)
- 3 Stand-by button (STANDBY)
- 4 Read button (READ)
- 5 Set button (SET)
- 6 Select buttons (SELECT)
- 7 Clock set button (CLOCK SET)
- A Stand-by indicator (STANDBY)
- B Day display
- C Timer ON/OFF indicator (ON/OFF)
- D Time display
- E Colon indicator
- F Timer-mode indicator (ONCE/WEEKLY/SLEEP)

*The operating procedures and features are similar to those for and of the ST-X990L.

DISASSEMBLY INSTRUCTIONS

Ref. No. 1 Removal of the cabinet



Procedure 1 Remove the 4 screws (1~4).

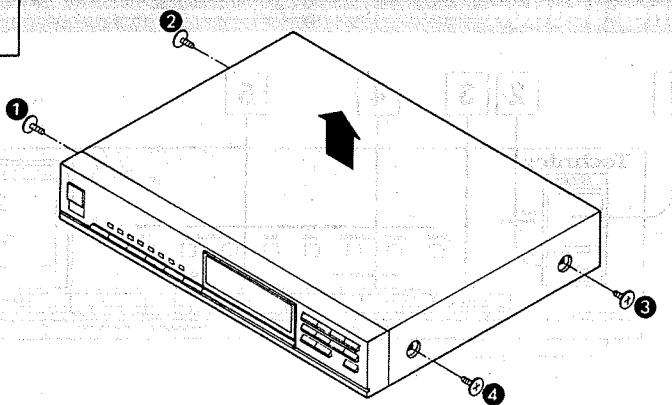

Ref. No. 2 Removal of the front panel

Procedure 1-2 1. Remove the flat cable (J901, J902).
2. Push the front panel in the direction of the arrow (A) and remove the holder in the direction of the arrow (B).

3. Remove the 3 screws (1~3).
4. Remove the front panel in the direction of the arrow.

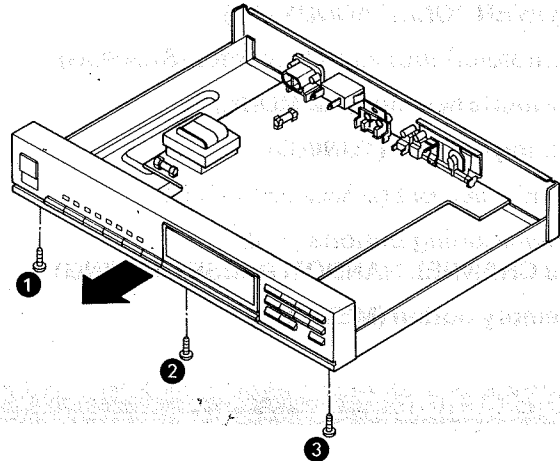
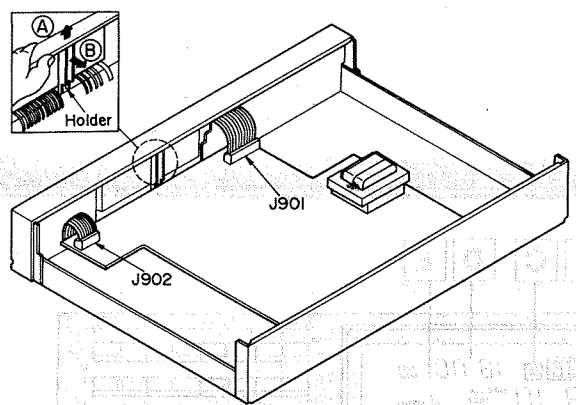


Removal of the flat cable
Pull out the flat cable while pressing the connector

Ref. No. 3 Removal of the main P.C.B.


Procedure 1-3 1. Remove the 10 screws (1~10).

2. Remove the 3 screws (11~13).
3. Slightly pull the front panel toward you and remove the main P.C.B.

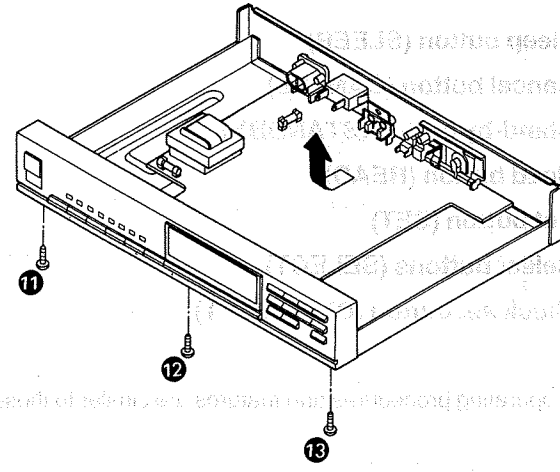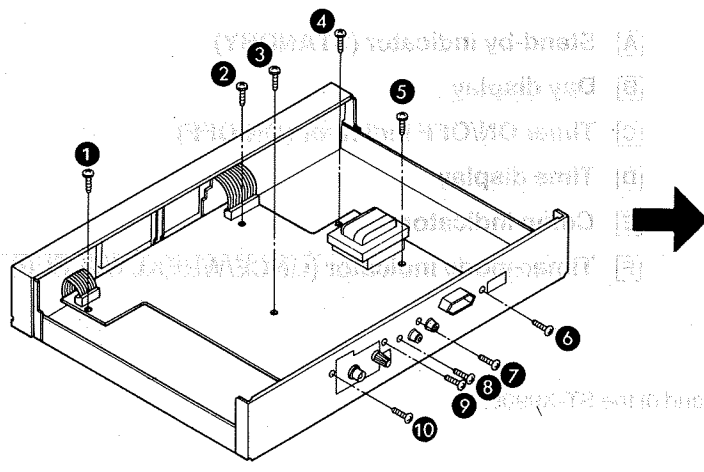

Ref. No. 4 Removal of the preset tuning SW P.C.B. and band/tuning/timer operation SW P.C.B.



Procedure 1-2-4 1. Remove the 4 screws (1~4).
2. Remove the band/tuning/timer operation SW P.C.B.
3. Remove the 1 screw (5).
4. Push the 4 claws and remove the preset tuning SW P.C.B.

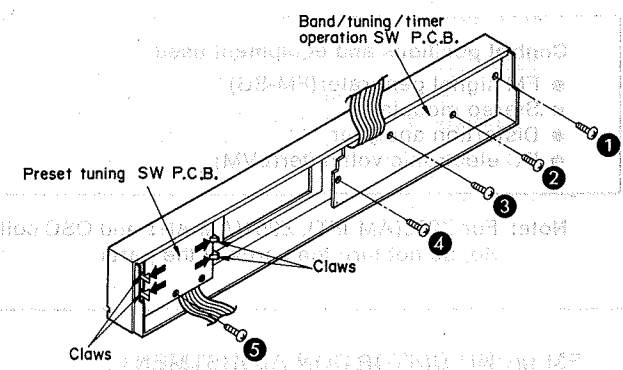

Ref. No. 5 Removal of the remote control

Procedure 5 1. Remove the battery cover lid.
2. Remove the one screw (1).

3. Insert a screwdriver blade between the upper and lower covers inside the battery compartment and then slowly loosen the bottom cover.

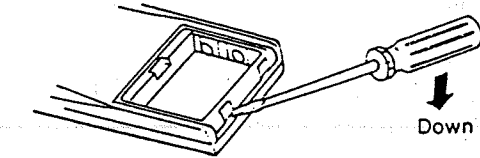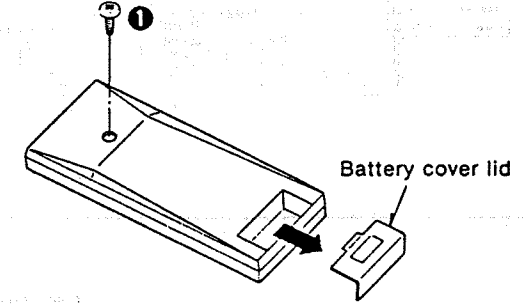

MEASUREMENTS AND ADJUSTMENTS

FM ADJUSTMENT

Control positions and equipment used

- FM signal generator(FM-SG)
- Stereo modulator
- Distortion analyser
- DC electronic voltmeter(EVM)
- Frequency counter
- Choke coil(100μH)
- Resistor(100kΩ)

Note: For Z202(AM-IFT), Z251(AM ANT and OSC coil), L321 (L.P.F) and L 322(L.P.F), they are supplied as adjusted parts. So, do not turn the cores of the parts.


FM MONO DISTORTION ADJUSTMENT

1. Test equipment connection is shown in figure.
2. Set the unit to "FM" mode.
3. Set the radio frequency display and signal generator to 100.10MHz.
4. Adjust the core of T201 so that the voltage measured in signal mode is 0mV(0±20mV) in 300mV range.
5. Adjust T202 so that the distortion factor of L-CH is minimized.
6. Repeat steps 4 and 5.
7. Make sure that the distortion factors of L-CH and R-CH are nearly the same and minimum.

Note: The adjusting screwdriver used should be made of resin.

FM SIGNAL GENERATOR CONDITION

- Modulation100%
- Modulation frequency1kHz
- Output level66dB

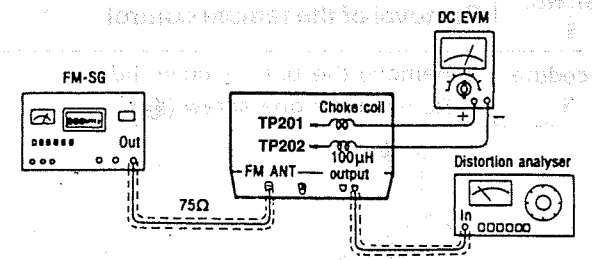

MPX VCO ADJUSTMENT



1. Test equipment connection is shown in figure.
2. Set the unit to "on/auto" position.
3. Set the radio frequency display and signal generator to 100.10MHz.
4. Adjust VR301 for 19kHz±30Hz on frequency counter reading.

USING ALTERNATE SYSTEM

1. Receive the stereo broadcast.
2. Adjust VR301 until stereo indicator lights up. Fix the arm of VR301 as shown in figure.

FM SIGNAL GENERATOR CONDITION


- Modulation100%
- Modulation frequency0kHz
- Output level66dB

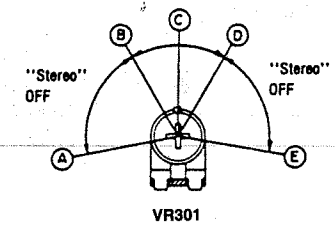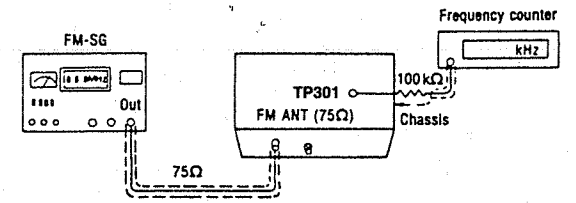


- Ⓐ-Ⓑ..... "Stereo" OFF position
- Ⓒ-Ⓔ..... "Stereo" OFF position
- Ⓑ-Ⓓ..... "Stereo" ON position (Indicator lighting)
- Ⓒ..... Adjust point of pilot circuit

PLL CLOCK FREQUENCY ADJUSTMENT


1. Test equipment connection is shown in figure.
2. Set the unit to "AM" position.
3. Short TP903 and TP904.
4. Set the radio frequency display 1629 kHz.
5. Adjust CT901 for 524.288kHz±10Hz on frequency counter reading.

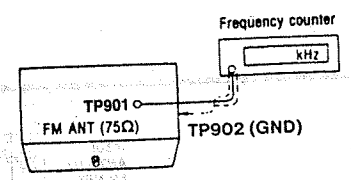

ADJUSTMENT POINTS

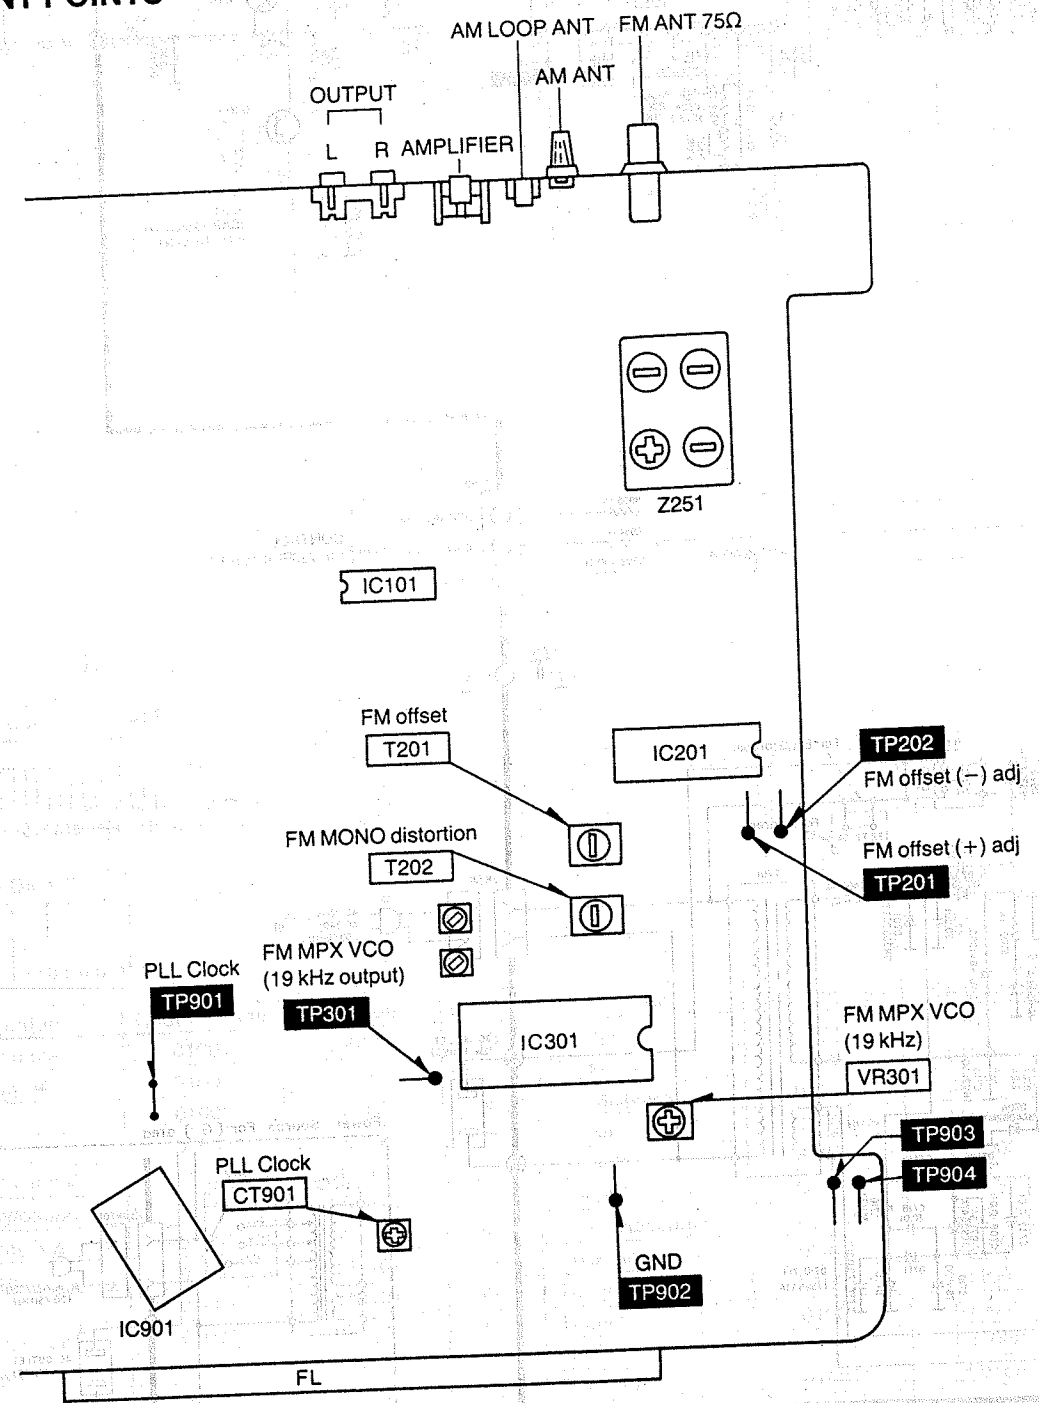

BLOCK DIAGRAM

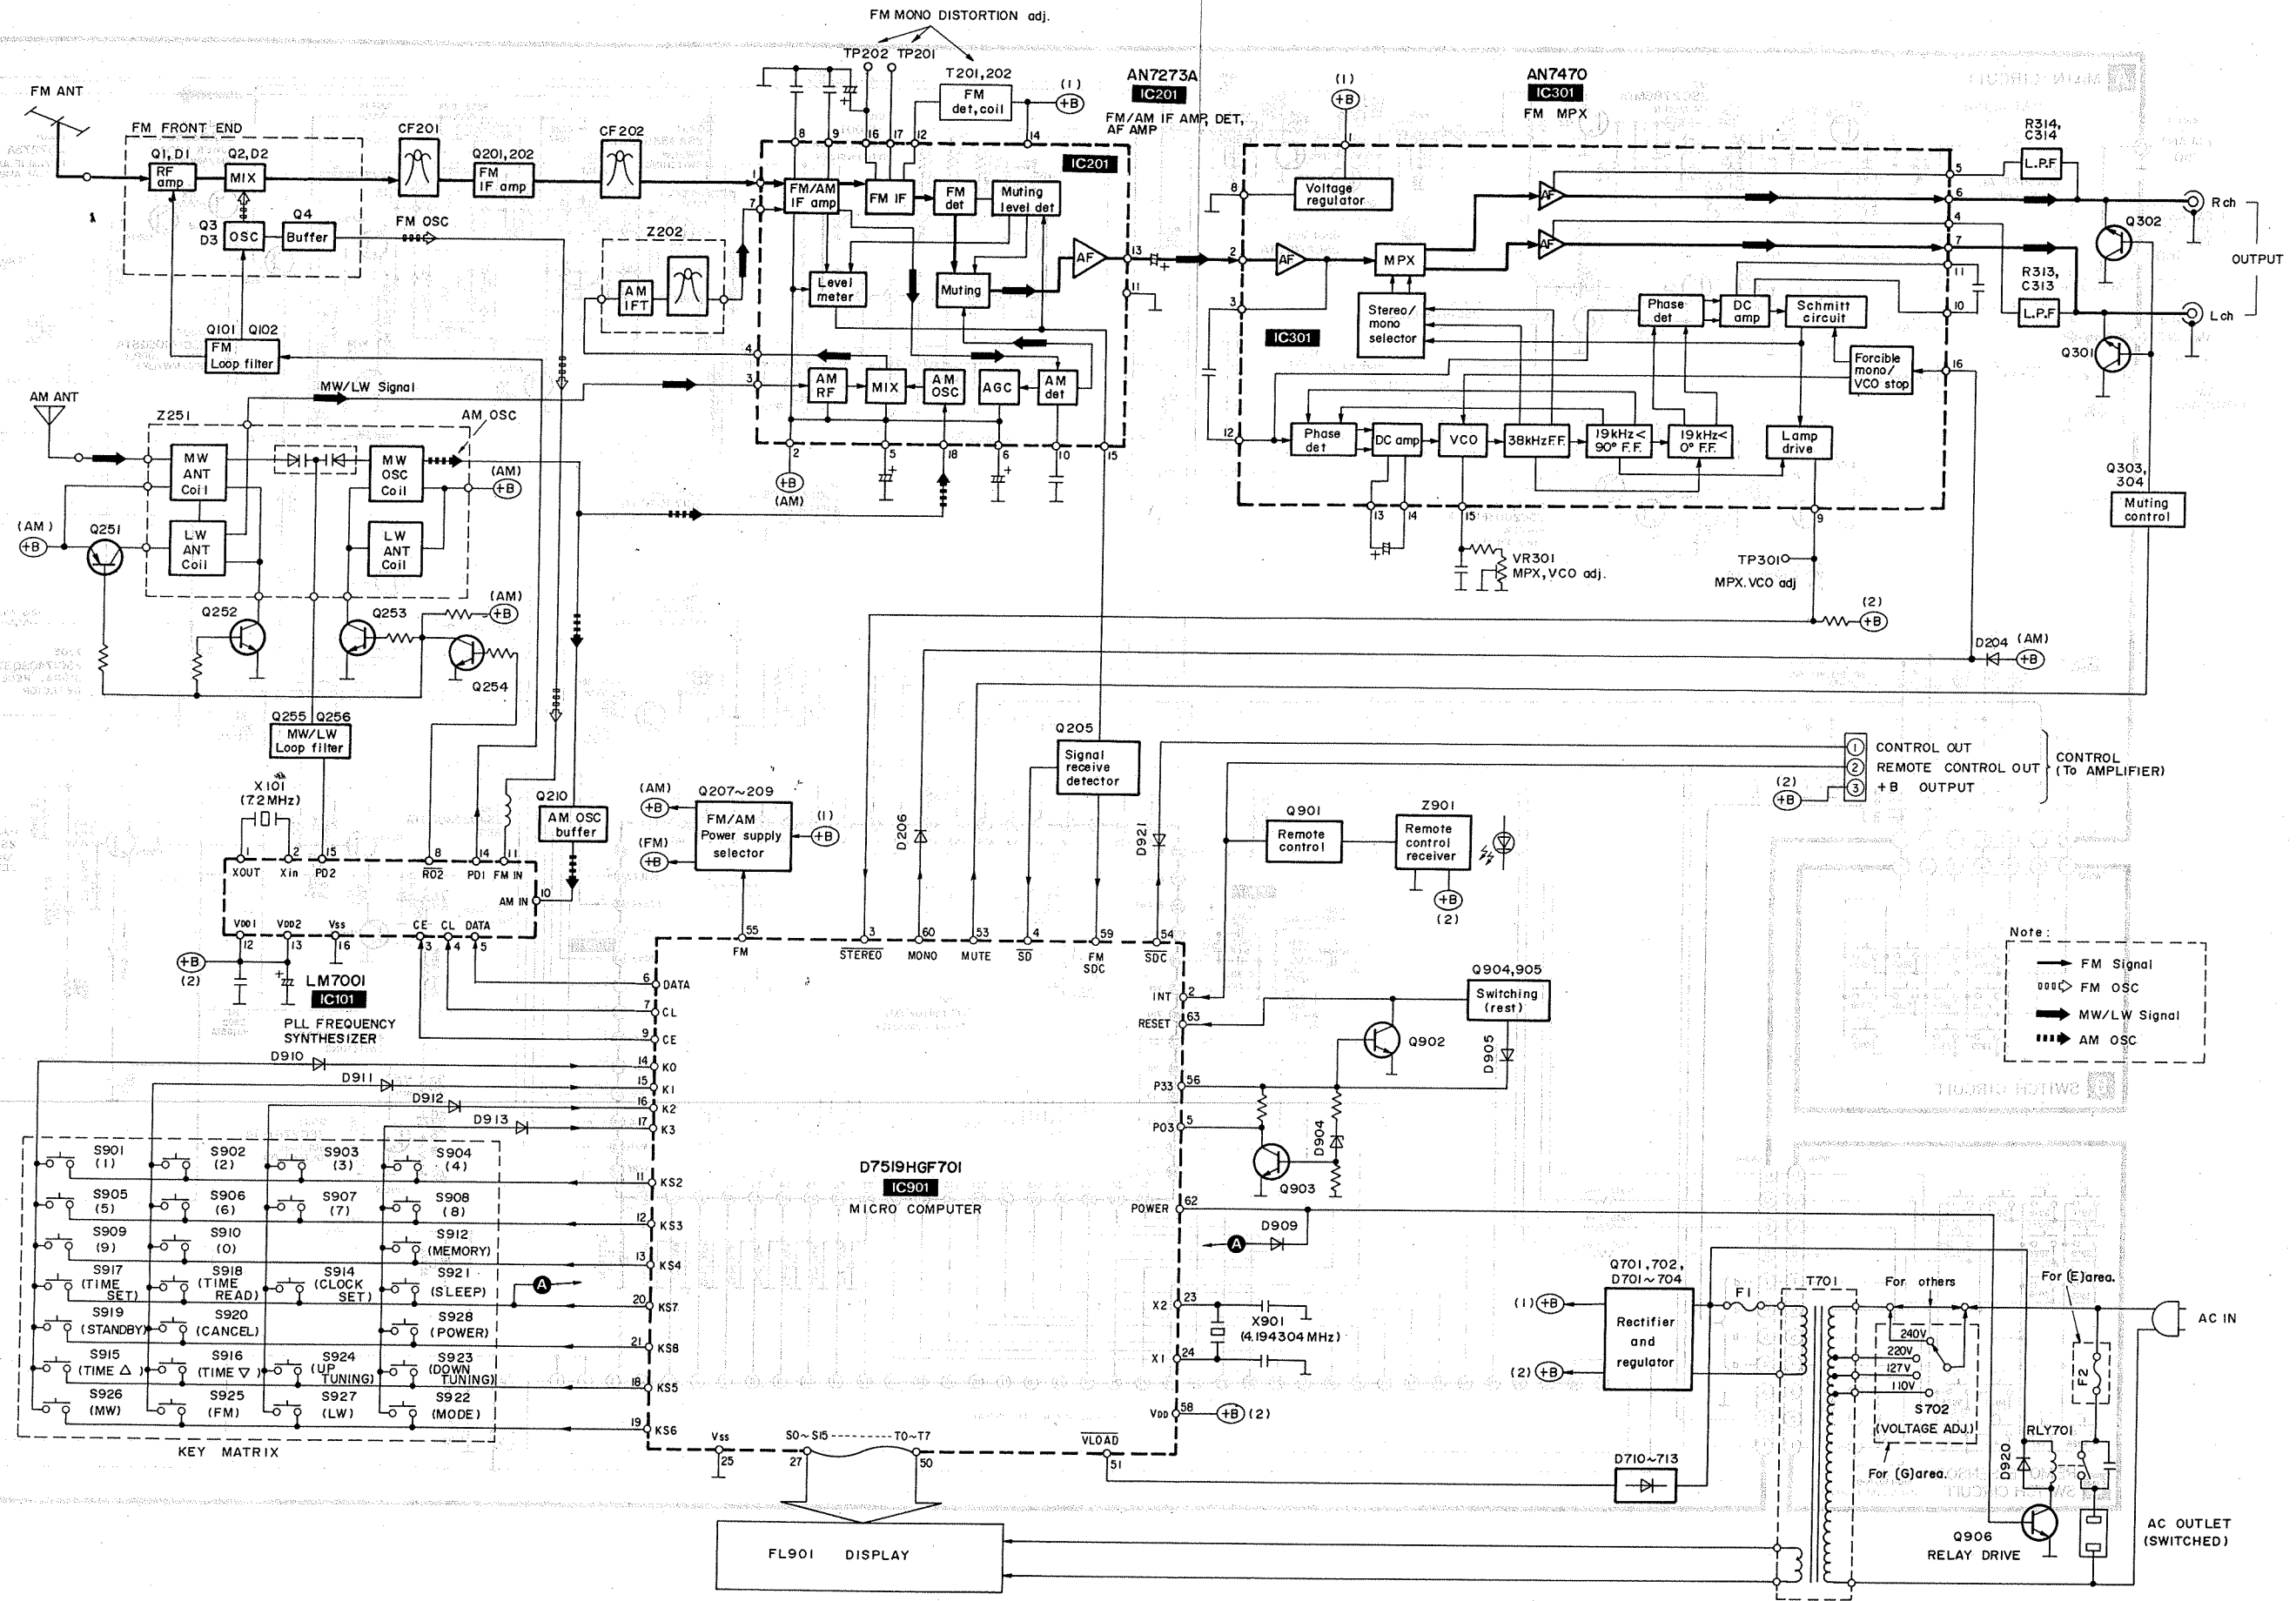

1 2 3 4 5 6 7 8 9 10

A


B


C

D


E

F

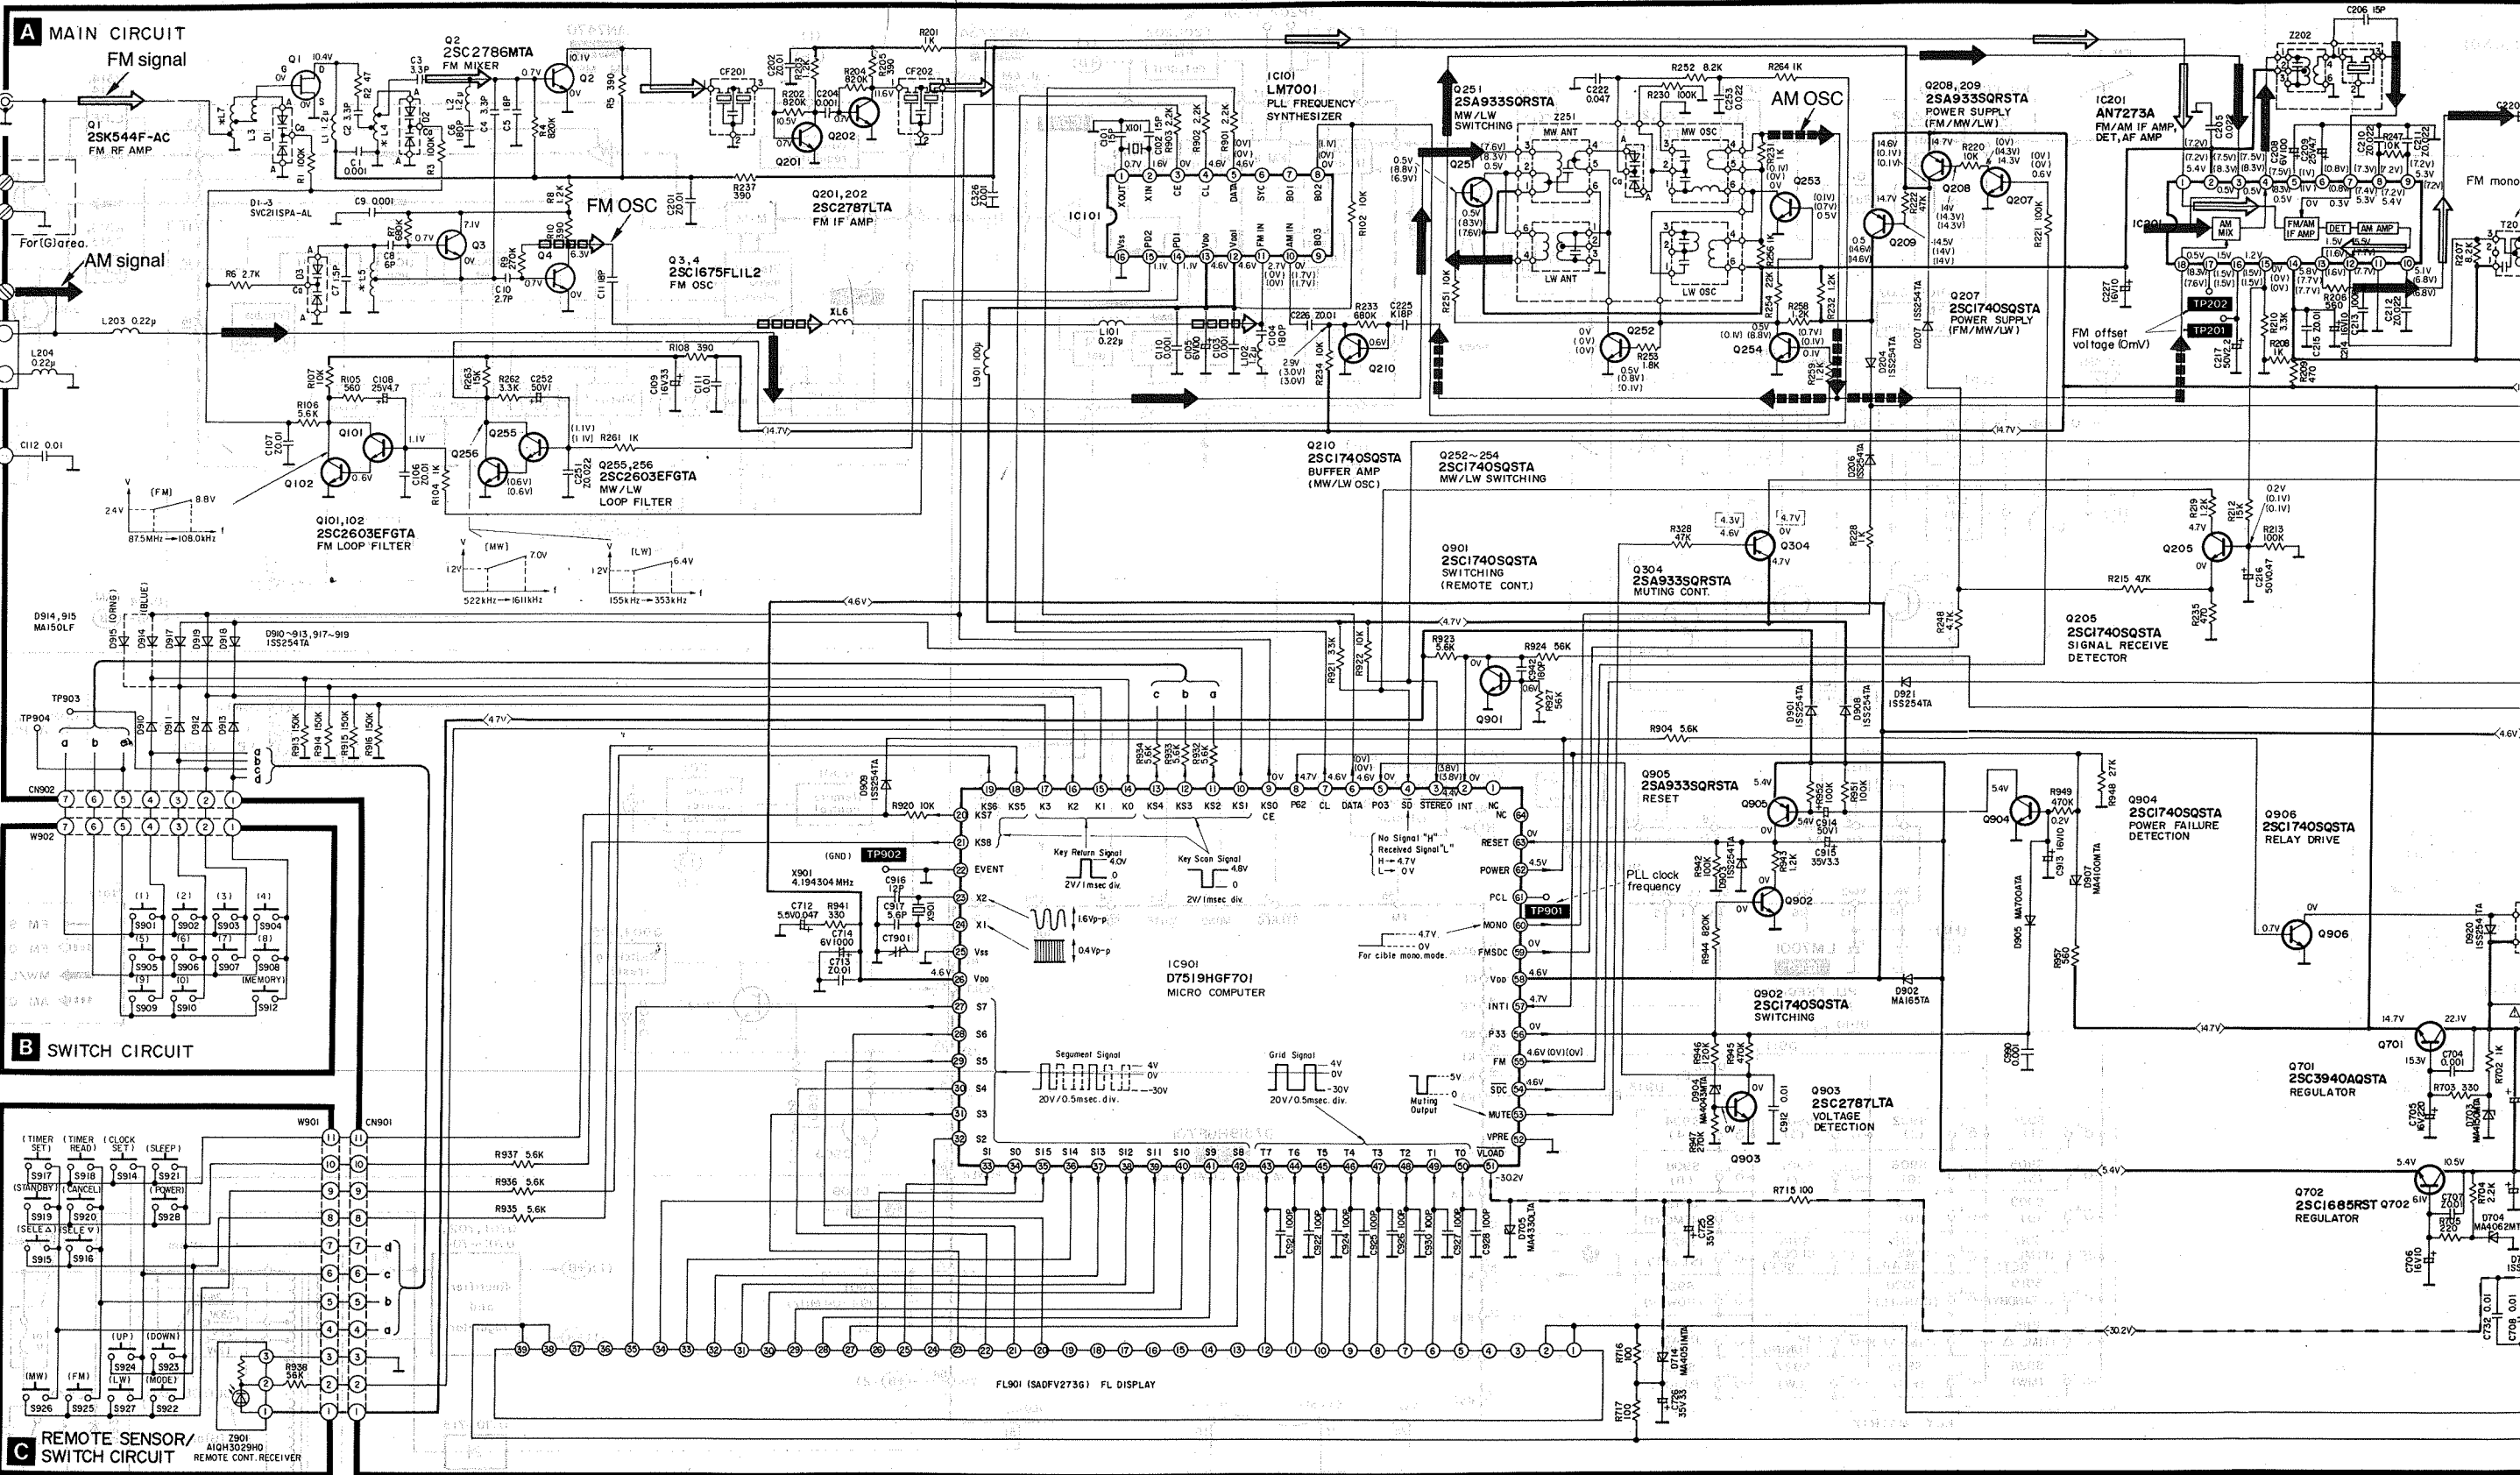


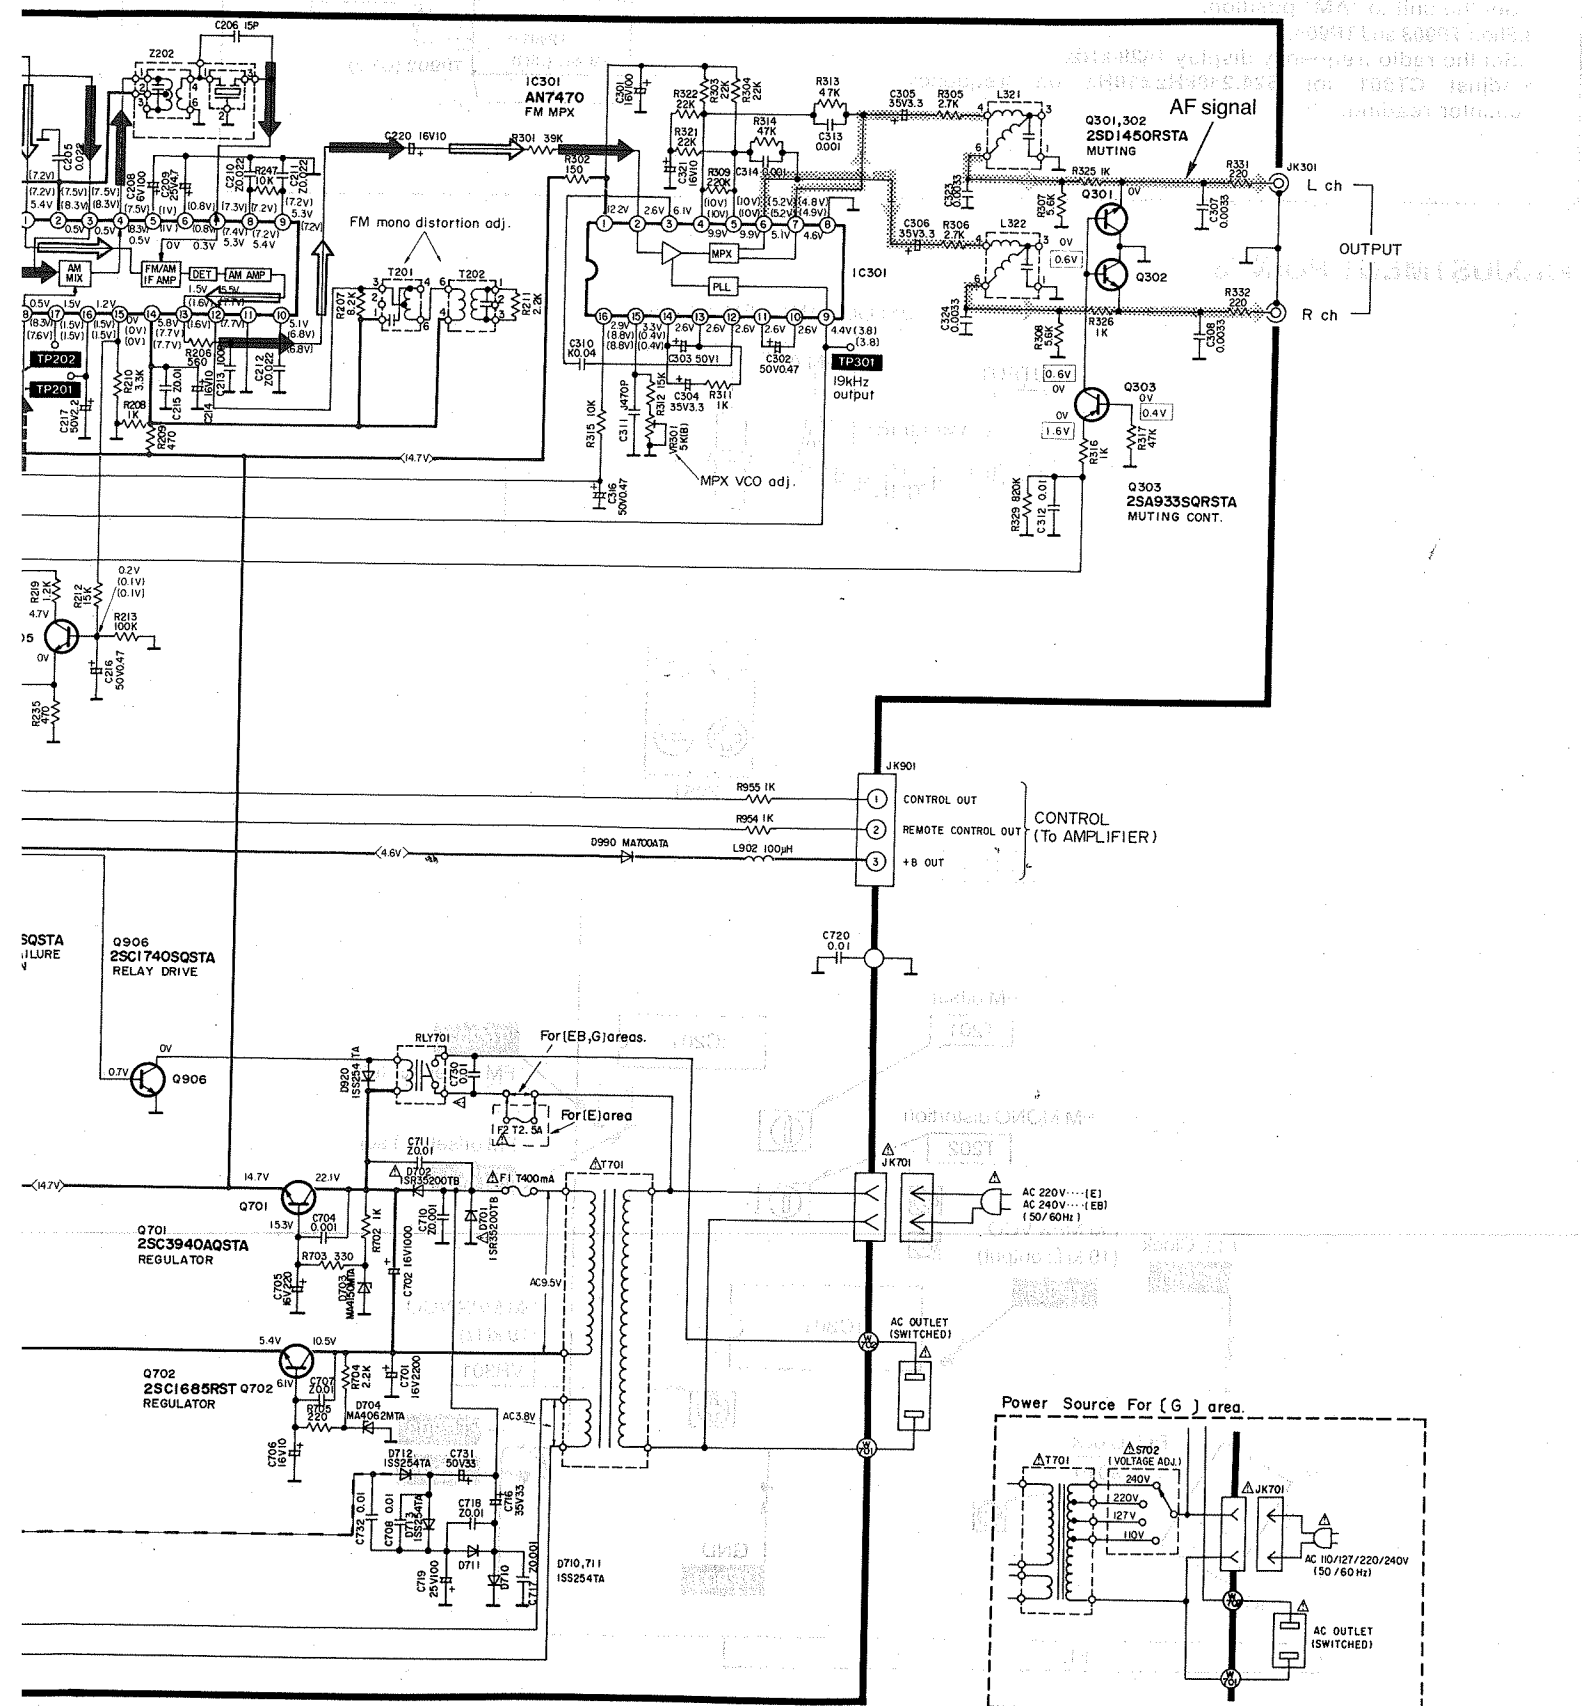

• Remote control unit


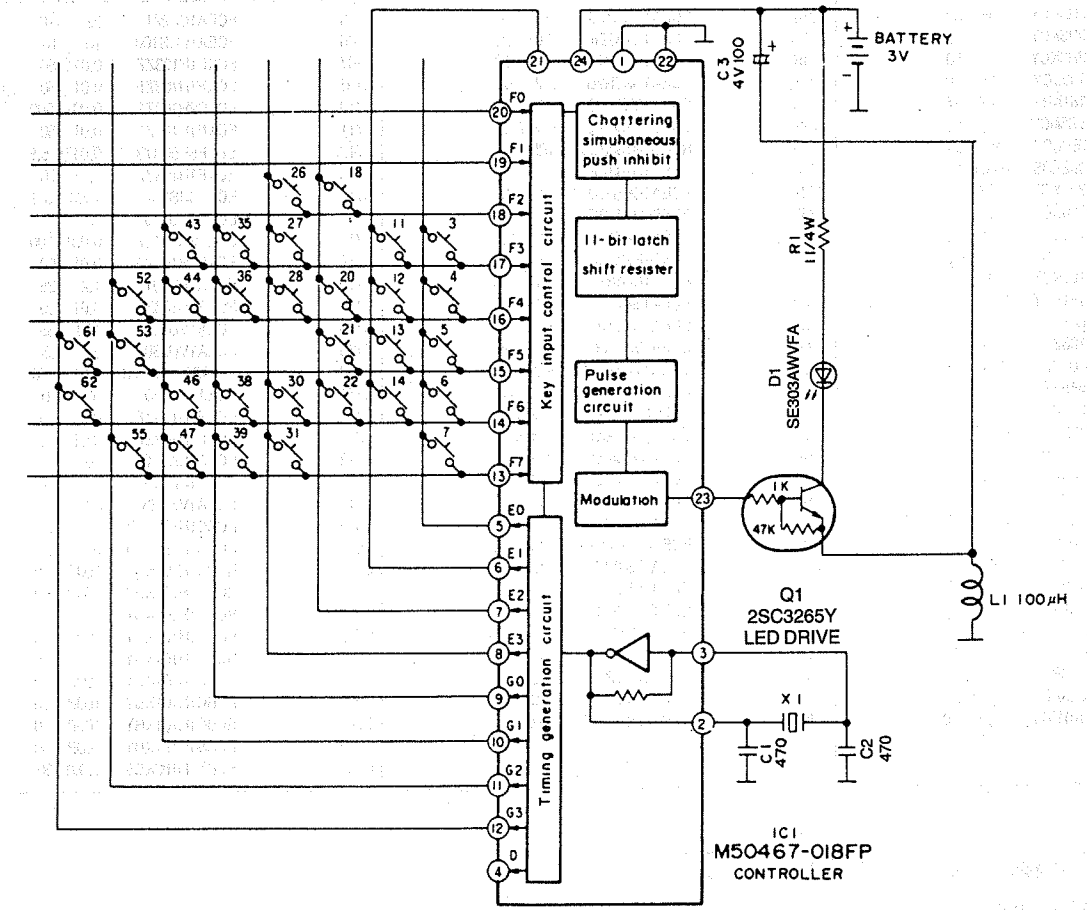


• Remote control data code

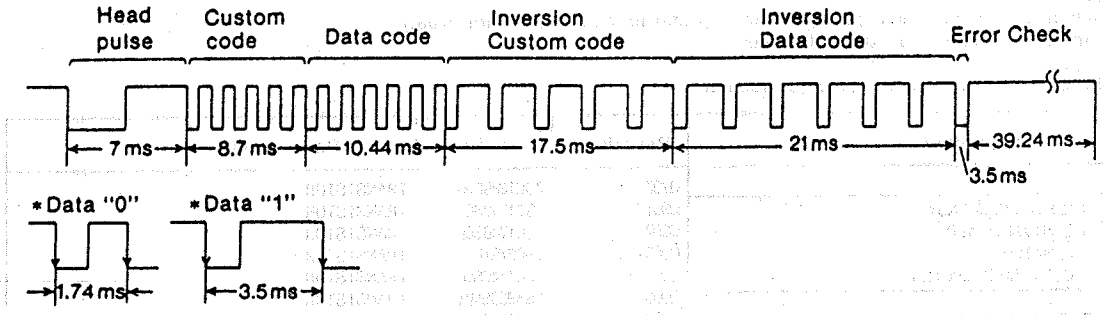


| Key No. | Function | Custom code | Data code | Key No. | Function | Custom code | Data code |
|---------|-----------------|-------------|-----------|---------|------------------|-------------|-----------|
| 3 | Auto rec mute | 01001 | 000111 | 30 | Tuner 8 | 01001 | 010111 |
| 4 | Deck play ◀ | 01001 | 001001 | 31 | Tuner 1 | 01001 | 010000 |
| 5 | Vol. up | 01001 | 100100 | 35 | CD • skip/search | 01100 | 000010 |
| 6 | Tuner 5 | 01001 | 010100 | 36 | Pause | 01001 | 000110 |
| 7 | Power ON/OFF | 01001 | 100000 | 38 | Tuner 9 | 01001 | 011000 |
| 11 | CD play/pause | 01100 | 001010 | 39 | Tuner 2 | 01001 | 010001 |
| 12 | Deck play ▶ | 01001 | 001010 | 43 | CD • skip/search | 01100 | 000011 |
| 13 | Vol. Down | 01001 | 100101 | 44 | Deck stop | 01001 | 000000 |
| 14 | Tuner 6 | 01001 | 010101 | 46 | Tuner 0 | 01001 | 011001 |
| 18 | Turntable start | 01001 | 001100 | 47 | Tuner 3 | 01001 | 010010 |
| 20 | Deck ◀◀ | 01001 | 000010 | 52 | Rec | 01001 | 001000 |
| 21 | Muting | 01001 | 100111 | 53 | Deck A/B | 01001 | 000100 |
| 22 | Tuner 7 | 01001 | 010110 | 55 | Tuner 4 | 01001 | 010011 |
| 26 | Turntable stop | 01001 | 001101 | 61 | EQ • OF/FLAT | 01001 | 110000 |
| 27 | CD stop | 01100 | 000000 | 62 | EQ Preset | 01001 | 110010 |
| 28 | Deck ▶▶ | 01001 | 000011 | | | | |

CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM (Parts list on pages 19~21)

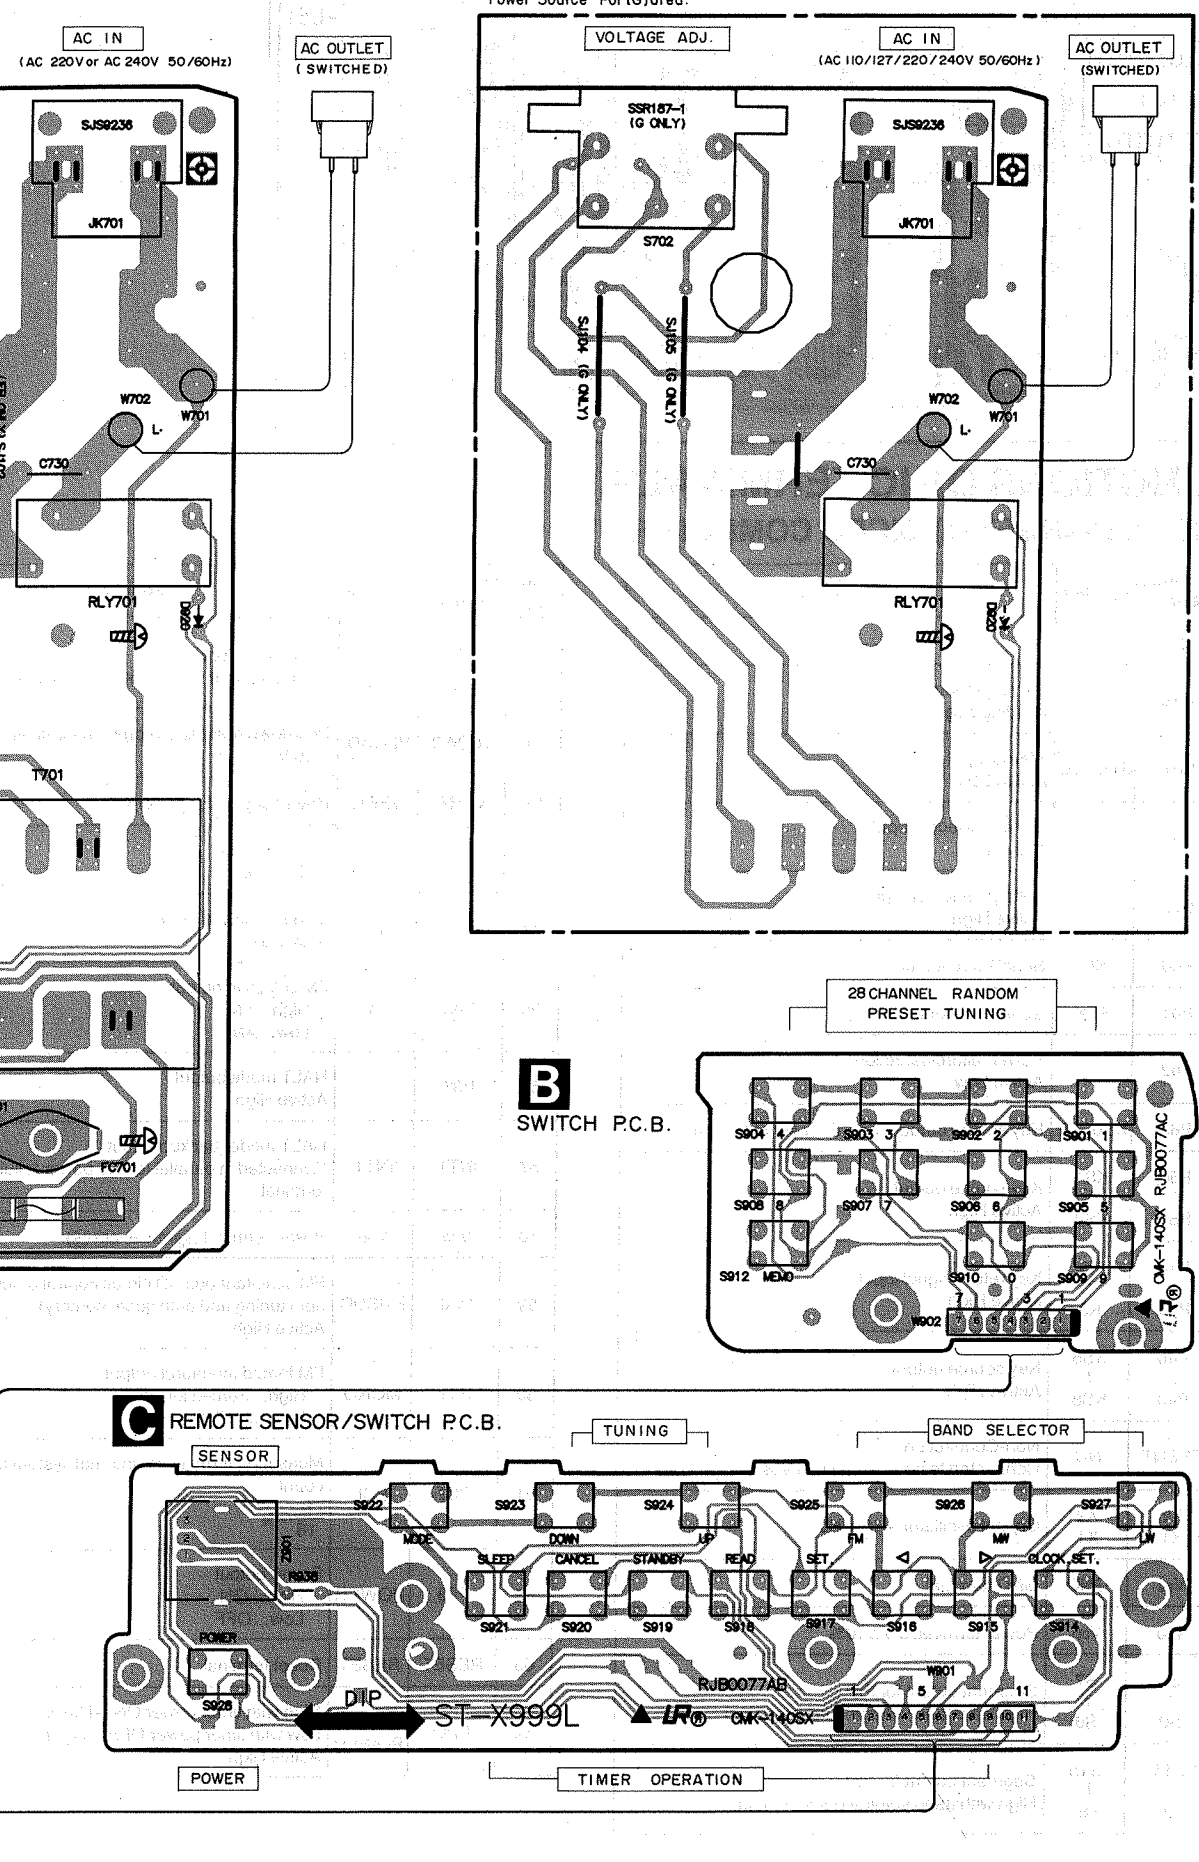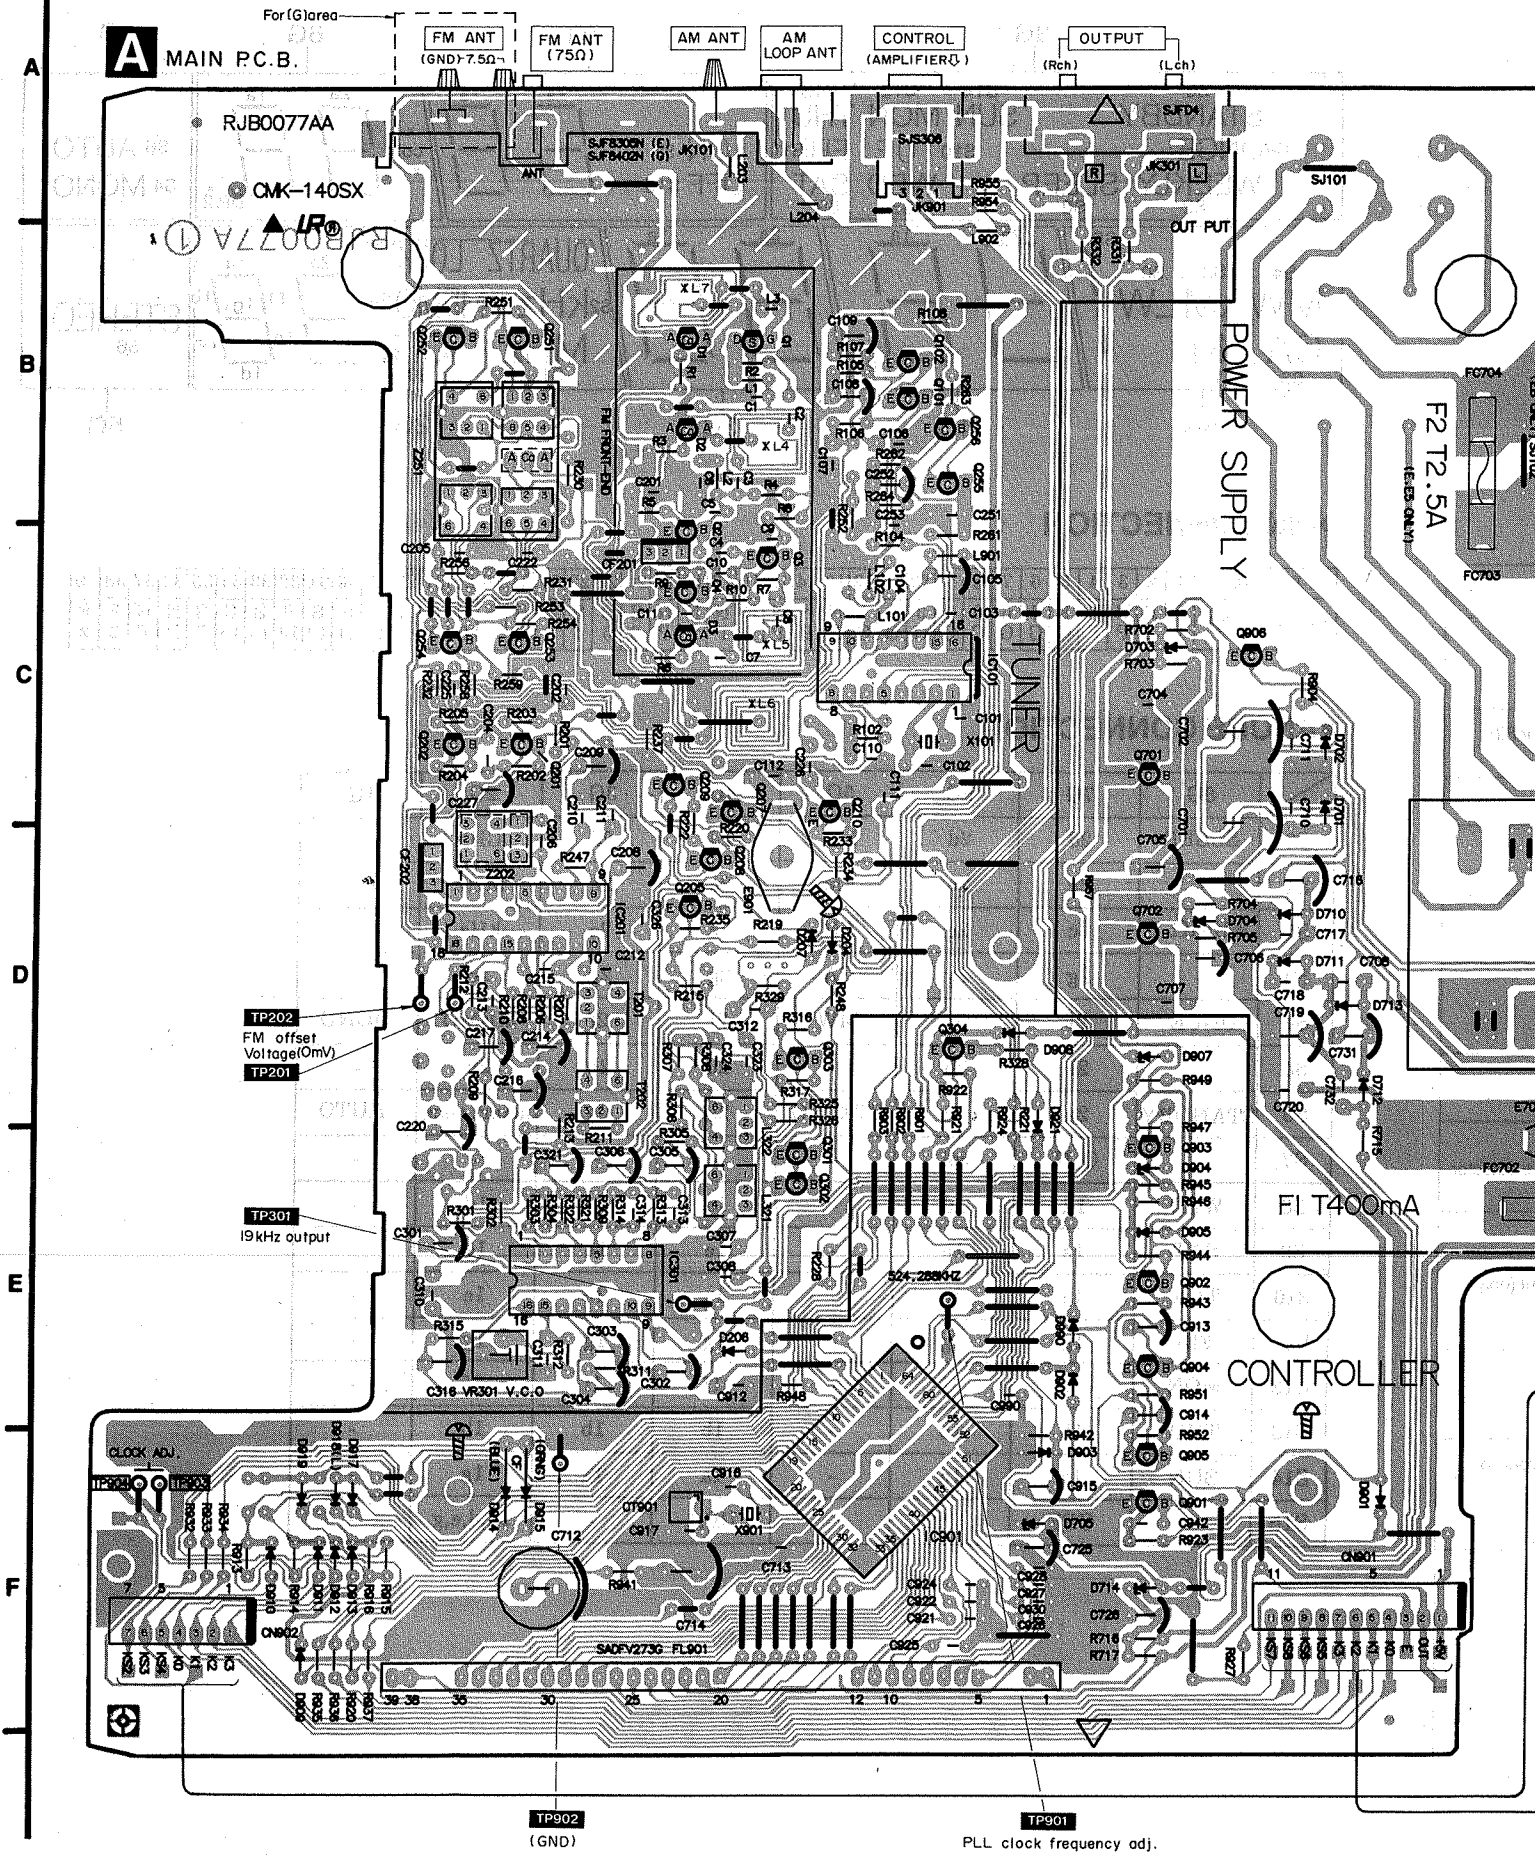

Remote control unit

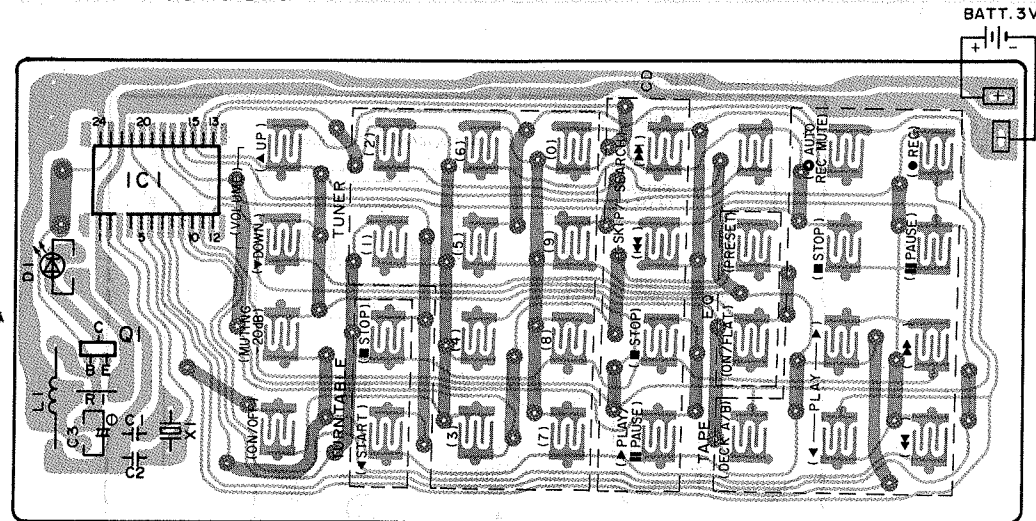

FUNCTIONS OF IC TERMINALS


IC901 (D7519HGF701) MICRO COMPUTER

| Pin No. | Terminal Name | Symbol | Function |
|---------|---------------|---------|--|
| 1 | NC | | |
| 2 | INT0 | INT | Remote-control input Leading edge |
| 3 | P01 | STEREO | Stereo input Active Low |
| 4 | P02 | SD | Station detector input Active Low |
| 5 | P03 | | Voltage detector input Active High |
| 6 | P60 | SO | Serial data output |
| 7 | P61 | SCK | Serial clock output |
| 8 | P62 | | Power failure detection Active Low |
| 9 | P63 | KS0, CE | Key source output and CE for serial transfer |
| 10 | P50 | KS1 | Key source output Active High |
| 13 | P53 | KS4 | |
| 14 | P10 | K0 | Key return signal input Active High |
| 17 | P13 | K3 | |
| 18 | P40 | KS5 | Key source output Active High |
| 21 | P43 | KS8 | |
| 22 | EVENT | NC | Non-Connection Connected to non-connection Vss |
| 23 | X2 | X2 | Crystal oscillator 4.19 MHz |
| 24 | X1 | X1 | |
| 25 | Vss | GND | GND terminal |
| 26 | VDD | VDD | Power terminal 5 V ± 10% |
| 27 | S7 | S7 | Segment output for FIP High withstand voltage output terminal |
| 34 | S0 | S0 | |
| 35 | S15 | S15 | Segment output for FIP High withstand voltage output terminal |
| 42 | S8 | S8 | |

| Pin No. | Terminal Name | Symbol | Function |
|---------|---------------|-------------|--|
| 43 | T7 | T7 | Digit output for FIP |
| 50 | T0 | T0 | High withstand voltage output terminal |
| 51 | VLOAD | VLOAD | Pull-down resistance common terminal for FIP -30 V |
| 52 | VPRE | VPRE | Power supply for pre-driver |
| 53 | P30 | MUTE | Muting output Active Low |
| 54 | P31 | SDC | DTS selective output Active Low |
| 55 | P32 | FM | FM selective output High...FM Low...AM |
| 56 | P33 | | HALT mode output Active High |
| 57 | INT1 | INT1 | HALT mode (backup) reset Connected in parallel to P62 power failure detector terminal |
| 58 | VDD | VDD | Power terminal (same as pin 26) |
| 59 | P20 | FMSDC | FM simultaneous SD circuit control output (only auto tuning and auto scan memory) Active High |
| 60 | P21 | MONO | FM forced monaural output High...Forced MONO Low...AUTO |
| 61 | P22 | PCL | Measuring terminal for internal system clock to count $\frac{f_x}{16} = f_0$ |
| 62 | P23 | POWER | Power output High...ON Low...OFF |
| 63 | RESET | RESET | Reset terminal |
| 64 | PPO | TIMER POWER | High with timer power ON → HIGH Low with timer power OFF → LOW Active High |

DESCRIPTION OF FL PANEL

GRID ASSIGNMENT

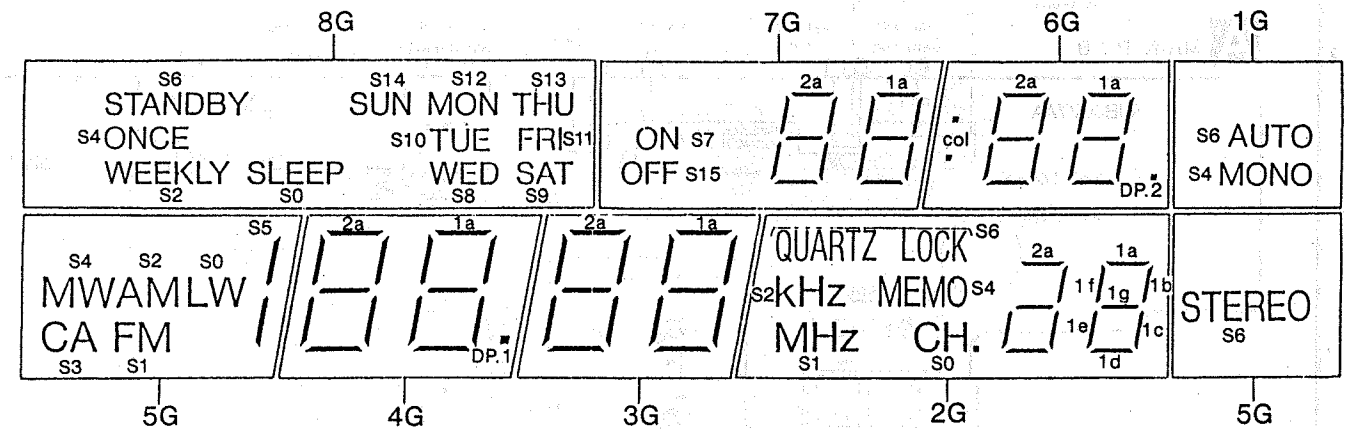

PIN CONNECTION

| PIN NO. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | |
|------------|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|---|
| CONNECTION | F | F | N | N | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | N | N | N | N | N | N | N | N | S | S | S | S | S | S | S | S | S | S | S | S | S | S | S | N | N | F | F | |
| | 1 | 1 | P | P | G | G | G | G | G | G | G | G | P | P | P | P | P | P | P | P | 6 | 5 | 4 | 3 | 2 | 1 | 0 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 7 | P | P | 2 | F |

ANODE CONNECTION

| | 8G | 7G | 6G | 5G | 4G | 3G | 2G | 1G |
|-----|---------|-----|------|--------|------|----|-------------|------|
| S0 | SLEEP | 2d | 2d | LW | 2d | 2d | CH. | - |
| S1 | - | 2e | 2e | FM | 2e | 2e | MHz | - |
| S2 | WEEKLY | 2c | 2c | AM | 2c | 2c | kHz | - |
| S3 | - | 2g | 2g | CA | 2g | 2g | 2c | - |
| S4 | ONCE | 2f | 2f | MW | 2f | 2f | MEMO | MONO |
| S5 | - | 2b | 2b | | 2b | 2b | 2b | - |
| S6 | STANDBY | 2a | 2a | STEREO | 2a | 2a | QUARTZ LOCK | AUTO |
| S7 | - | ON | col | - | - | - | - | - |
| S8 | WED | 1d | 1d | - | 1d | 1d | 1d | - |
| S9 | SAT | 1e | 1e | - | 1e | 1e | 1e | - |
| S10 | TUE | 1c | 1c | - | 1c | 1c | 1c | - |
| S11 | FRI | 1g | 1g | - | 1g | 1g | 1g | - |
| S12 | MON | 1f | 1f | - | 1f | 1f | 1f | - |
| S13 | THU | 1b | 1b | - | 1b | 1b | 1b | - |
| S14 | SUN | 1a | 1a | - | 1a | 1a | 1a | - |
| S15 | - | OFF | DP,2 | - | DP,1 | - | 2a,d,e,g | - |

RESISTORS AND CAPACITORS

Notes : * Important safety notice :
 Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 * Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)
 Parts without these indications can be used for all areas.

Numbering System For Resistors

Example:

| | | | | |
|------|----------------|-------|-----------|-----------------------|
| ERD | 25 | F | J | 102 |
| Type | Wattage (1/4W) | Shape | Tolerance | Value (1K Ω) |
| ERX | 2 | AN | J | 471 |
| Type | Wattage (2W) | Shape | Tolerance | Value (470 Ω) |

Numbering System For Capacitors

Example:

| | | | | |
|------|---------------|-----------------------|-----------|--------------------|
| ECKD | 1H | 102 | Z | F |
| Type | Voltage (50V) | Value (0.001 μ F) | Tolerance | Unique |
| ECEA | 50 | M | | 330 |
| Type | Voltage (50V) | Characteristics | | Value (33 μ F) |

● Capacity values are in microfarads (μ F) unless specified otherwise, P= Pico-farads (pF) F= Farads (F).
 ● Resistance values are in ohms (Ω), unless specified otherwise, 1K = 1,000 Ω , 1M = 1,000k Ω

| Resistor Type | Wattage | Tolerance |
|--------------------------------|----------------------|---------------|
| ERD : Carbon | 10 : 1/8W 12 : 1/2W | J : \pm 5% |
| ERG : Metal Oxide | 14 : 1/4W 25 : 1/4W | F : \pm 1% |
| ERQ : Fuse Type Metal | 1A : 1W 18 : 1/8W | G : \pm 2% |
| ERX : Metal Film | S2 : 1/4W S1 : 1/2W | J : \pm 5% |
| ERD L : Carbon (chip) | 2F : 1/4W 50 : 1/2W | K : \pm 10% |
| ERO K : Metal Film (chip) | 2A : 2W 3A : 3W | M : \pm 20% |
| ERC : Solid | 6G : 1/10W 8G : 1/8W | |
| ERF : Incombustible Box-Shaped | | |
| ERM : Wire-Wound | | |
| RRJ : Chip Resistor | | |
| ERJ : Chip Resistor | | |

| Capacitor Type | Voltage | Tolerance |
|--|---------------------|------------------|
| ECE : Electrolytic | 0J : 6.3V 1A : 10V | K : \pm 10% |
| ECCD : Ceramic | 1C : 16V 1E : 25V | M : \pm 20% |
| ECKD : Ceramic Capacitor | 1H : 50V 1V : 35V | Z : +80% |
| ECQM : Polyester | 50 : 50V 05 : 50V | -20 |
| EQQP : Polypropylene | 2H : 500V 2A : 100V | J : \pm 5% |
| ECG : Ceramic | 1 : 100V 1J : 63V | G : \pm 2% |
| ECEA N : Non Polar Electrolytic | KC : 400V AC | F : \pm 1% |
| OCU : Ceramic (Chip Type) | KC : 125V AC | C : \pm 0.25pF |
| ECUX : Ceramic (Chip Type) | (UL) | D : \pm 0.5pF |
| ECF : Semiconductor | | |
| EECW : Liquid electrolyte double layer capacitor | | |

| Ref. No. | Part No. | Value | Ref. No. | Part No. | Value | Ref. No. | Part No. | Value |
|---------------------------------|-------------|----------|----------|-------------|----------|----------------------------------|--------------|----------|
| RESISTORS(VALUE,WATTAGE) | | | | | | | | |
| R1 | ERDS2T J104 | 100K 1/4 | R235 | ERDS2T J471 | 470 1/4 | R705 | ERDS2T J221 | 220 1/4 |
| R2 | ERDS2T J470 | 47 1/4 | R237 | ERDS2T J391 | 390 1/4 | R715 | ERDS2T J101 | 100 1/4 |
| R3 | ERDS2T J104 | 100K 1/4 | R247 | ERDS2T J103 | 10K 1/4 | R716 | ERDS2T J101 | 100 1/4 |
| R4 | ERDS2T J824 | 820K 1/4 | R248 | ERDS2T J472 | 4.7K 1/4 | R717 | ERDS2T J101 | 100 1/4 |
| R5 | ERDS2T J391 | 390 1/4 | R251 | ERDS2T J103 | 10K 1/4 | R901 | ERDS2T J222 | 2.2K 1/4 |
| R6 | ERDS2T J272 | 2.7K 1/4 | R252 | ERDS2T J822 | 8.2K 1/4 | R902 | ERDS2T J222 | 2.2K 1/4 |
| R7 | ERDS2T J684 | 680K 1/4 | R253 | ERDS2T J182 | 1.8K 1/4 | R903 | ERDS2T J222 | 2.2K 1/4 |
| R8 | ERDS2T J122 | 1.2K 1/4 | R254 | ERDS2T J223 | 22K 1/4 | R904 | ERDS2T J562 | 5.6K 1/4 |
| R9 | ERDS2T J274 | 270K 1/4 | R256 | ERDS2T J102 | 1K 1/4 | R913 | ERDS2T J154 | 150K 1/4 |
| R10 | ERDS2T J391 | 390 1/4 | R258 | ERDS2T J122 | 1.2K 1/4 | R914 | ERDS2T J154 | 150K 1/4 |
| R102 | ERDS2T J103 | 10K 1/4 | R259 | ERDS2T J122 | 1.2K 1/4 | R915 | ERDS2T J154 | 150K 1/4 |
| R104 | ERDS2T J102 | 1K 1/4 | R261 | ERDS2T J102 | 1K 1/4 | R916 | ERDS2T J154 | 150K 1/4 |
| R105 | ERDS2T J561 | 560 1/4 | R262 | ERDS2T J332 | 3.3K 1/4 | R920 | ERDS2T J103 | 10K 1/4 |
| R106 | ERDS2T J562 | 5.6K 1/4 | R263 | ERDS2T J153 | 15K 1/4 | R921 | ERDS2T J333 | 33K 1/4 |
| R107 | ERDS2T J103 | 10K 1/4 | R264 | ERDS2T J102 | 1K 1/4 | R922 | ERDS2T J103 | 10K 1/4 |
| R108 | ERDS2T J391 | 390 1/4 | R301 | ERDS2T J393 | 39K 1/4 | R923 | ERDS2T J562 | 5.6K 1/4 |
| R201 | ERDS2T J102 | 1K 1/4 | R302 | ERDS2T J151 | 150 1/4 | R924 | ERDS2T J563 | 56K 1/4 |
| R202 | ERDS2T J824 | 820K 1/4 | R303 | ERDS2T J223 | 22K 1/4 | R927 | ERDS2T J563 | 56K 1/4 |
| R203 | ERDS2T J122 | 1.2K 1/4 | R304 | ERDS2T J223 | 22K 1/4 | R932 | ERDS2T J562 | 5.6K 1/4 |
| R204 | ERDS2T J824 | 820K 1/4 | R305 | ERDS2T J272 | 2.7K 1/4 | R933 | ERDS2T J562 | 5.6K 1/4 |
| R205 | ERDS2T J391 | 390 1/4 | R306 | ERDS2T J272 | 2.7K 1/4 | R934 | ERDS2T J562 | 5.6K 1/4 |
| R206 | ERDS2T J561 | 560 1/4 | R307 | ERDS2T J562 | 5.6K 1/4 | R935 | ERDS2T J562 | 5.6K 1/4 |
| R207 | ERDS2T J822 | 8.2K 1/4 | R308 | ERDS2T J562 | 5.6K 1/4 | R936 | ERDS2T J562 | 5.6K 1/4 |
| R208 | ERDS2T J102 | 1K 1/4 | R309 | ERDS2T J224 | 220K 1/4 | R937 | ERDS2T J562 | 5.6K 1/4 |
| R209 | ERDS2T J471 | 470 1/4 | R311 | ERDS2T J102 | 1K 1/4 | R938 | ERDS2T J563 | 56K 1/4 |
| R210 | ERDS2T J332 | 3.3K 1/4 | R312 | ERDS2T J153 | 15K 1/4 | R941 | ERDS2T J331 | 330 1/4 |
| R211 | ERDS2T J222 | 2.2K 1/4 | R313 | ERDS2T J473 | 47K 1/4 | R942 | ERDS2T J104 | 100K 1/4 |
| R212 | ERDS2T J153 | 15K 1/4 | R314 | ERDS2T J473 | 47K 1/4 | R943 | ERDS2T J122 | 1.2K 1/4 |
| R213 | ERDS2T J104 | 100K 1/4 | R315 | ERDS2T J103 | 10K 1/4 | R944 | ERDS2T J824 | 820K 1/4 |
| R215 | ERDS2T J472 | 4.7K 1/4 | R316 | ERDS2T J102 | 1K 1/4 | R945 | ERDS2T J474 | 470K 1/4 |
| R219 | ERDS2T J122 | 1.2K 1/4 | R317 | ERDS2T J473 | 47K 1/4 | R946 | ERDS2T J124 | 120K 1/4 |
| R220 | ERDS2T J103 | 10K 1/4 | R321 | ERDS2T J223 | 22K 1/4 | R947 | ERDS2T J274 | 270K 1/4 |
| R221 | ERDS2T J104 | 100K 1/4 | R322 | ERDS2T J223 | 22K 1/4 | R948 | ERDS2T J273 | 27K 1/4 |
| R222 | ERDS2T J473 | 47K 1/4 | R325 | ERDS2T J102 | 1K 1/4 | R949 | ERDS2T J474 | 470K 1/4 |
| R228 | ERDS2T J102 | 1K 1/4 | R326 | ERDS2T J102 | 1K 1/4 | R951 | ERDS2T J104 | 100K 1/4 |
| R230 | ERDS2T J104 | 100K 1/4 | R328 | ERDS2T J473 | 47K 1/4 | R952 | ERDS2T J104 | 100K 1/4 |
| R231 | ERDS2T J102 | 1K 1/4 | R329 | ERDS2T J824 | 820K 1/4 | R954 | ERDS2T J102 | 1K 1/4 |
| R232 | ERDS2T J122 | 1.2K 1/4 | R331 | ERDS2T J221 | 220 1/4 | R955 | ERDS2T J102 | 1K 1/4 |
| R233 | ERDS2T J684 | 680K 1/4 | R332 | ERDS2T J221 | 220 1/4 | R957 | ERDS2T J561 | 560 1/4 |
| R234 | ERDS2T J103 | 10K 1/4 | R702 | ERDS2T J102 | 1K 1/4 | CAPACITORS(VALUE,VOLTAGE) | | |
| | | | R703 | ERDS2T J331 | 330 1/4 | C1 | ECBT1H102KB5 | 0.001 50 |
| | | | R704 | ERDS2T J222 | 2.2K 1/4 | | | |

| Ref. No. | Part No. | Value | Ref. No. | Part No. | Value | Ref. No. | Part No. | Value |
|----------|---------------|----------|----------|--------------|-----------|----------|--------------|------------|
| C2 | RCBS1H3R3KCY | 3.3P 50 | C214 | ECEA1CKS100 | 10 16 | C705 | ECEA1CU221 | 220 16 |
| C3 | RCBS1H3R3KCY | 3.3P 50 | C215 | ECBT1E103ZF | 0.01 25 | C706 | ECEA1CKS100 | 10 16 |
| C4 | RCBS1H3R3KCY | 3.3P 50 | C216 | ECEA1HKR47 | 0.47 50 | C707 | ECKF1H103ZF | 0.01 50 |
| C5 | RCBS1H180JCY | 18P 50 | C217 | ECEA1HK2R2B | 2.2 50 | C708 | ECKF1H103ZF | 0.01 50 |
| C6 | RCBS1H181KBY | 180P 50 | C220 | ECEA1CKS100 | 10 16 | C710 | ECKD2H102ZF | 0.001 500 |
| C7 | RCBS1H1R5MCMY | 1.5P 50 | C222 | ECFTD473KXL | 0.047 25 | C711 | ECKF1H103ZF | 0.01 50 |
| C8 | ECCD1H060CC | 6P 50 | C225 | RCBS1H180JCY | 18P 50 | C712 | EECF5R5U473 | 0.047F 5.5 |
| C9 | ECBT1H102KB5 | 0.001 50 | C226 | ECKF1H103ZF | 0.01 50 | C713 | ECKF1H103ZF | 0.01 50 |
| C10 | ECEA1CKS100 | 2.7P 50 | C227 | ECEA1CKS100 | 10 16 | C714 | ECEA0JS102 | 1000 6.3 |
| C11 | RCBS1H180JCY | 18P 50 | C251 | ECKD1H223PF | 0.022 50 | C716 | ECEA1VU330 | 33 35 |
| C101 | RCBS1H150JCY | 15P 50 | C252 | ECEA1HK010 | 1 50 | C717 | ECKD2H102ZF | 0.001 500 |
| C102 | RCBS1H150JCY | 15P 50 | C253 | ECKD1H223PF | 0.022 50 | C718 | ECKF1H103ZF | 0.01 50 |
| C103 | ECBT1H102KB5 | 0.001 50 | C301 | ECEA1CU101 | 100 16 | C719 | ECEA1EU101 | 100 25 |
| C104 | RCBS1H181KBY | 180P 50 | C302 | ECEA1HKR47 | 0.47 50 | C720 | ECKF1H103ZF | 0.01 50 |
| C105 | ECEA0JU101 | 100 6.3 | C303 | ECEA1HK010 | 1 50 | C725 | ECEA1VU101 | 100 35 |
| C106 | ECKF1H103ZF | 0.01 50 | C304 | ECEA1VK3R3 | 3.3 35 | C726 | ECEA1VU330 | 33 35 |
| C107 | ECKF1H103ZF | 0.01 50 | C305 | ECKF1H103ZF | 3.3 35 | C730 | ECKWNS103ZVS | 0.01 250 |
| C108 | ECEA25M4R7R | 4.7 25 | C306 | ECEA1VK3R3 | 3.3 35 | C731 | ECEA1HS330 | 33 50 |
| C109 | ECEA1CU330 | 33 16 | C307 | ECFTD332KXL | 0.0033 25 | C732 | ECKF1H103ZF | 0.01 50 |
| C110 | ECBT1H102KB5 | 0.001 50 | C308 | ECFTD332KXL | 0.0033 25 | C912 | ECKF1H103ZF | 0.01 50 |
| C111 | ECKF1H103ZF | 0.01 50 | C310 | ECFTD473KXL | 0.047 25 | C913 | ECEA1CKS100 | 10 16 |
| C112 | ECKF1H103ZF | 0.01 50 | C311 | ECQP1471JZ | 470P 125 | C914 | ECEA1HK010 | 1 50 |
| C201 | ECKF1H103ZF | 0.01 50 | C312 | ECEA1VK3R3 | 3.3 35 | C915 | ECEA1VK3R3 | 3.3 35 |
| C202 | ECKF1H103ZF | 0.01 50 | C313 | ECBT1H102KB5 | 0.001 50 | C916 | RCBC1H120KCY | 12P 50 |
| C204 | ECBT1H102KB5 | 0.001 50 | C314 | ECBT1H102KB5 | 0.001 50 | C917 | RCBS1H5R6KCY | 5.6P 50 |
| C205 | ECEA1HKR47 | 0.022 25 | C316 | ECEA1HKR47 | 0.47 50 | C921 | RCBC1H101KBY | 100P 50 |
| C206 | RCBS1H150JCY | 15P 50 | C321 | ECEA1CKS100 | 10 16 | C922 | RCBC1H101KBY | 100P 50 |
| C208 | ECEA0JU101 | 100 6.3 | C323 | ECFTD332KXL | 0.0033 25 | C924 | RCBC1H101KBY | 100P 50 |
| C209 | ECEA1EK4R7 | 4.7 25 | C324 | ECFTD332KXL | 0.0033 25 | C925 | RCBC1H101KBY | 100P 50 |
| C210 | ECKD1H223PF | 0.022 50 | C326 | ECKF1H103ZF | 0.01 50 | C926 | RCBC1H101KBY | 100P 50 |
| C211 | ECKD1H223PF | 0.022 50 | C701 | ECEA1CU222 | 2200 16 | C927 | RCBC1H101KBY | 100P 50 |
| C212 | ECEA16V1000 | 1000 16 | C702 | ECEA16V1000 | 1000 16 | C928 | RCBC1H101KBY | 100P 50 |
| C213 | RCBC1H101KBY | 100P 50 | C704 | ECBT1H102KB5 | 0.001 50 | C930 | RCBC1H101KBY | 100P 50 |
| | | | | | | C942 | RCBS1H181KBY | 180P 50 |
| | | | | | | C990 | ECBT1H102KB5 | 0.001 50 |

REPLACEMENT PARTS LIST

Notes : * Important safety notice :
 Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 * Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)
 Parts without these indications can be used for all areas.
 * Remote Control Ass'y:
 Supply period for three years from termination of production.


| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|----------------------------|--------------|---------------------|---------------|--------------|-------------|
| INTEGRATED CIRCUITS | | | | | |
| IC101 | LM7001 | I.C. PLL FREQUENCY | Q702 | 2SC1685RST | TRANSISTOR |
| IC201 | AN7273B | I.C. FM/AM 1F AMP | Q901 | 2SC1740SQ | TRANSISTOR |
| IC301 | SV1UPC1161C3 | I.C. FM MPX | Q902 | 2SC1740SQ | TRANSISTOR |
| IC901 | D7519HGF701 | I.C. MICRO COMPUTER | Q903 | 2SC2787L | TRANSISTOR |
| | | | Q904 | 2SC1740SQ | TRANSISTOR |
| | | | Q905 | 2SA933SQR | TRANSISTOR |
| | | | Q906 | 2SC1740SQ | TRANSISTOR |
| TRANSISTORS | | | | | |
| Q1 | 2SK544F-AC | TRANSISTOR | DIODES | | |
| Q2 | 2SC2786M | TRANSISTOR | D1 | SVC211SPA-AL | VARI CAP |
| Q3 | 2SC1675L1L2 | TRANSISTOR | D2 | SVC211SPA-AL | VARI CAP |
| Q4 | 2SC1675L1L2 | TRANSISTOR | D3 | SVC211SPA-AL | VARI CAP |
| Q101 | 2SC2603EFG | TRANSISTOR | D204 | MA165 | DIODE |
| Q102 | 2SC2603EFG | TRANSISTOR | D206 | MA165 | DIODE |
| Q201 | 2SC2787L | TRANSISTOR | D207 | MA165 | |

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|------------------------|--------------|-----------------------|----------|--------------|------------------------|
| D909 | MA165 | DIODE | CF201 | RLFETNGM02LC | CERAMIC FILTER(ORANGE) |
| D910 | MA165 | DIODE | CF202 | RLFETNGM02LB | CERAMIC FILTER(BLUE) |
| D911 | MA165 | DIODE | CF202 | RLFETNGM02LC | CERAMIC FILTER(ORANGE) |
| D912 | MA165 | DIODE | DISPLAYS | | |
| D913 | MA165 | DIODE | FL901 | SADPV273G | DISPLAY TUBE |
| D914 | MA162A | DIODE | FUSES | | |
| D915 | MA162A | DIODE | F1 | △ XBA2C04TB0 | FUSE, T0.4A 250V |
| D917 | MA165 | DIODE | F2 | △ XBA2C25TB0 | FUSE, T2.5A 250V |
| D918 | MA165 | DIODE | (E) | | |
| D919 | MA165 | DIODE | SWITCHES | | |
| D920 | MA165 | DIODE | S702 | △ SSR187-1 | SW, VOLTAGE SELECTOR |
| D921 | MA165 | DIODE | (G) | | |
| D990 | MA700 | DIODE | S901 | EVQQB005R | SW, 1 |
| VARIABLE RESISTORS | | | S902 | EVQQB005R | SW, 2 |
| VR301 | EVNDXAA00B53 | V.R., MPX VCO ADJ. | S903 | EVQQB005R | SW, 3 |
| VARIABLE CAPACITORS | | | S904 | EVQQB005R | SW, 4 |
| CT901 | ECRLA010A52 | TRIMMER CAPACITOR | S905 | EVQQB005R | SW, 5 |
| COILS AND TRANSFORMERS | | | S906 | EVQQB005R | SW, 6 |
| L1 | RLQZP1R2KT-Y | CHOKO COIL | S907 | EVQQB005R | SW, 7 |
| L2 | RLQZP1R2KT-Y | CHOKO COIL | S908 | EVQQB005R | SW, 8 |
| L3 | RLQY15S5-0 | ANTENNA COIL | S909 | EVQQB005R | SW, 9 |
| L101 | RLQZP2R2KT-Y | COIL | S910 | EVQQB005R | SW, 0 |
| L102 | RLQZP1R2KT-Y | CHOKO COIL | S912 | EVQQB005R | SW, MEMORY |
| L203 | ELEPKR22MA | COIL | S914 | EVQQB005R | SW, CLOCK SET |
| L204 | ELEPKR22MA | COIL | S915 | EVQQB005R | SW, SELECT |
| L321 | SLM1B9-P | MPX COIL | S916 | EVQQB005R | SW, SELECT |
| L322 | SLM1B9-P | MPX COIL | S917 | EVQQB005R | SW, SET |
| L901 | RLQZP101KT-Y | COIL | S918 | EVQQB005R | SW, READ |
| L902 | RLQZP101KT-Y | COIL | S919 | EVQQB005R | SW, STAND-BY |
| T201 | RLI4B002-Z | I.F.TRANSFORMER | S920 | EVQQB005R | SW, CANCEL |
| T202 | RLI4B003-Z | I.F.TRANSFORMER | S921 | EVQQB005R | SW, SLEEP |
| T701 | △ SLT5K262-K | POWER TRANSFORMER | S922 | EVQQB005R | SW, FM MODE |
| (E) | | | S923 | EVQQB005R | SW, TUNING DOWN |
| T701 | △ SLT5K263-K | POWER TRANSFORMER | S924 | EVQQB005R | SW, TUNING UP |
| (EB) | | | S925 | EVQQB005R | SW, BAND FM |
| T701 | △ SLT5K264-K | POWER TRANSFORMER | S926 | EVQQB005R | SW, BAND MW |
| (G) | | | S927 | EVQQB005R | SW, BAND LW |
| COMPONENT COMBINATIONS | | | S928 | EVQQB005R | SW, POWER |
| Z202 | SLI7Z101-T | I.F.TRANSFORMER | RELAYS | | |
| Z251 | SLA6Z1-T | COIL | RLY701 | △ SSY138 | RELAY |
| Z901 | A1QH3029H0 | COMPONENT COMBINATION | OTHERS | | |
| FILTERS | | | X101 | SVQ49U722-S | CRYSTAL OSCILLATOR |
| CF201 | RLFETNGM02LB | CERAMIC FILTER(BLUE) | X901 | SVQ49U422T-S | CRYSTAL OSCILLATOR |


EXPLODED VIEW

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|----------------------------|------------|------------------|----------|--------------|------------------------|
| CABINET AND CHASSIS | | | | | |
| 1 | SGP7360E | REAR PANEL | 15 | SBC989D | BUTTON, PRESET |
| (E) | | | 16 | SBC989E | BUTTON, PRESET |
| 1 | SGP7362B | REAR PANEL | 17 | SBZ9104 | BUTTON, PRESET |
| (G) | | | 20 | SGX7971A | ORNAMENT |
| 1 | SGP7363A | REAR PANEL | 22 | XTBS3+6JFZ1 | SCREW |
| (EB) | | | 23 | XTB3+8G | SCREW |
| 2 | SKL307 | FOOT | 24 | XTB3+20J | SCREW |
| 3 | △ SJS9221 | AC OUTLET | 25 | SKC2061K16 | CABINET |
| (G) | | | 26 | SNE2129-1 | SCREW |
| 3 | △ SJS9225 | AC OUTLET | 27 | △ SJT390 | FUSE HOLDER |
| (E) | | | 28 | SJFD4 | TERMINAL BOARD, OUTPUT |
| 4 | SHE181 | HOLDER | 29 | SJFB305N | TERMINAL BOARD, ANT |
| 5 | SUW3102 | BRACKET | 29 | SJFB402N | TERMINAL PLATE |
| 6 | SUS874 | SPRING | (G) | | |
| 8 | RYP0066 | FRONT PANEL | 30 | △ SJS9236 | AC INLET |
| 9 | SHG6390 | RUBBER SPACER | 31 | SJT30740LX-V | CONNECTOR(7P)(CN902) |
| 10 | SGTX990-KG | FRONT GRILLE | 32 | SJT31143-V | CONNECTOR(11P)(CN901) |
| 11 | SBC986 | BUTTON, POWER | 33 | SKU11651-4 | BOTTOM BOARD |
| 12 | SBC1029A | BUTTON, SELECTOR | 34 | RJS1A0203-0M | SOCKET(3P)(JK901) |
| 14 | SBC988 | BUTTON, TIMER | 35 | SJS9332A | AC OUTLET COVER |
| | | | (EB) | | |
| | | | 36 | △ SJS9332B | AC OUTLET |
| | | | (EB) | | |

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|-------------------------|--------------|--------------------|----------|---------------|-------------------|
| PACKING MATERIAL | | | | | |
| P1 | RPG0106 | PACKING CASE | A2 | △ SJA193 | POWER CORD |
| P2 | SPS5169 | PAD | (EB) | | |
| P3 | SPS5170 | PAD | A3 | SJP2269 | CORD |
| P4 | SPS5073 | PAD | A4 | SPB1162T | AM LOOP ANTENNA |
| ACCESSORIES | | | | | |
| A1 | RQF0091 | INSTRUCTION MANUAL | A4-1 | SMA233-1M | HOLDER |
| (E) | | | A4-2 | SMA231M | BRACKET |
| A1 | RQF0092 | INSTRUCTION MANUAL | A4-3 | XTB3+10AFZ | SCREW |
| (G) | | | A5 | SSA269M | FM ANTENNA |
| A1 | RQF0093 | INSTRUCTION MANUAL | (G) | | |
| (EB) | | | A5 | SSA270M | FM ANTENNA |
| A2 | △ RJA0004 | POWER CORD | (E, EB) | | |
| (G) | | | A6 | SWKTX930E | LEAD WIRE |
| A2 | △ SFDAC05E03 | POWER CORD | A7 | △ SJP9009 | ATTACHMENT PLUG |
| (E) | | | (EB) | | |
| | | | A8 | △ RJP120ZBS-H | AC PLUG ADAPTOR |
| | | | (G) | | |
| | | | A101 | EUR64754 | REMOTE CONTROLLER |

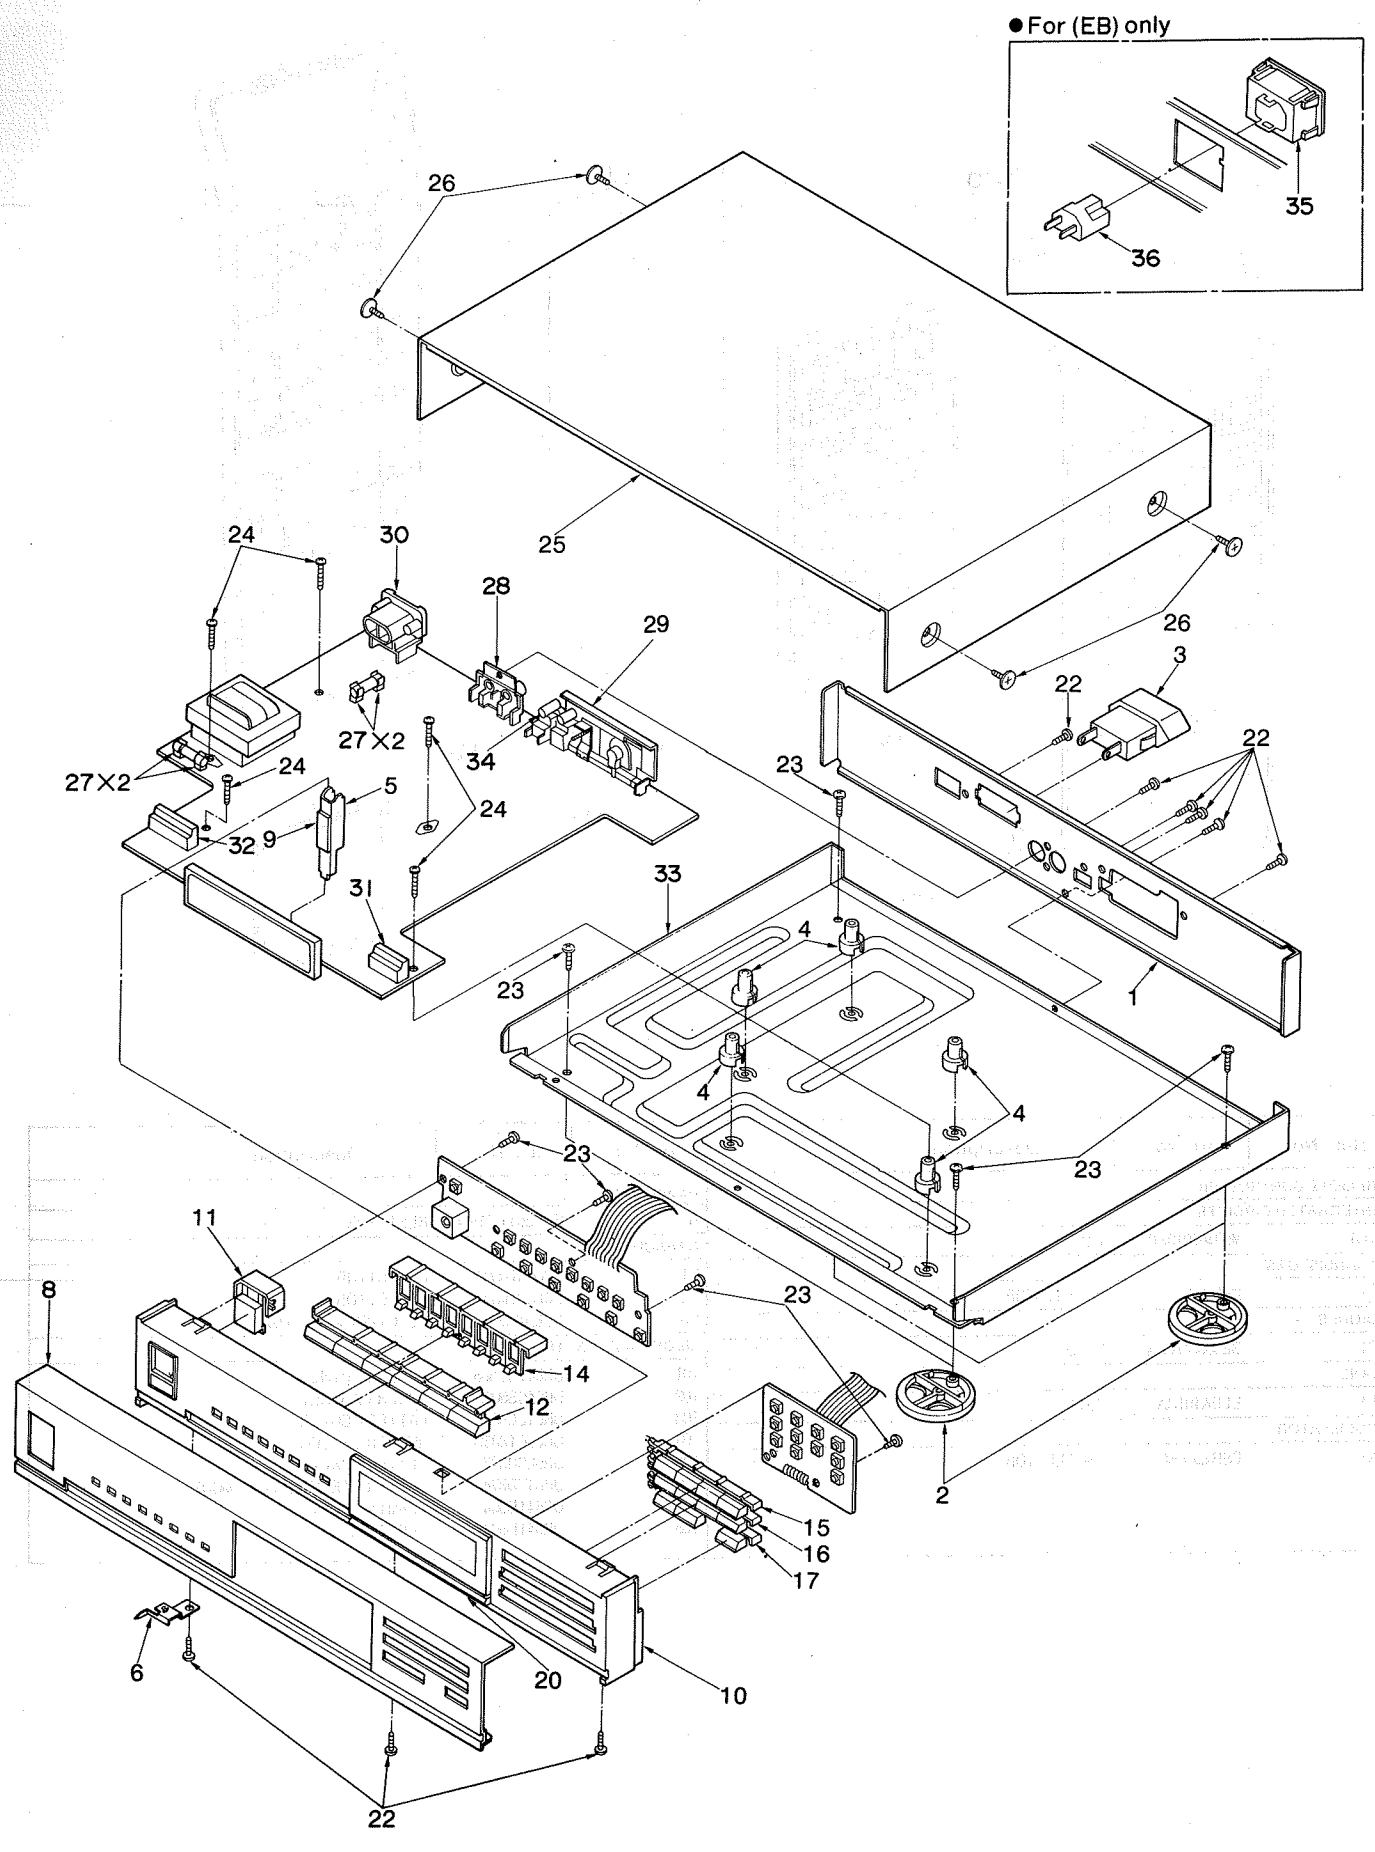

•REMOTE CONTROL UNIT

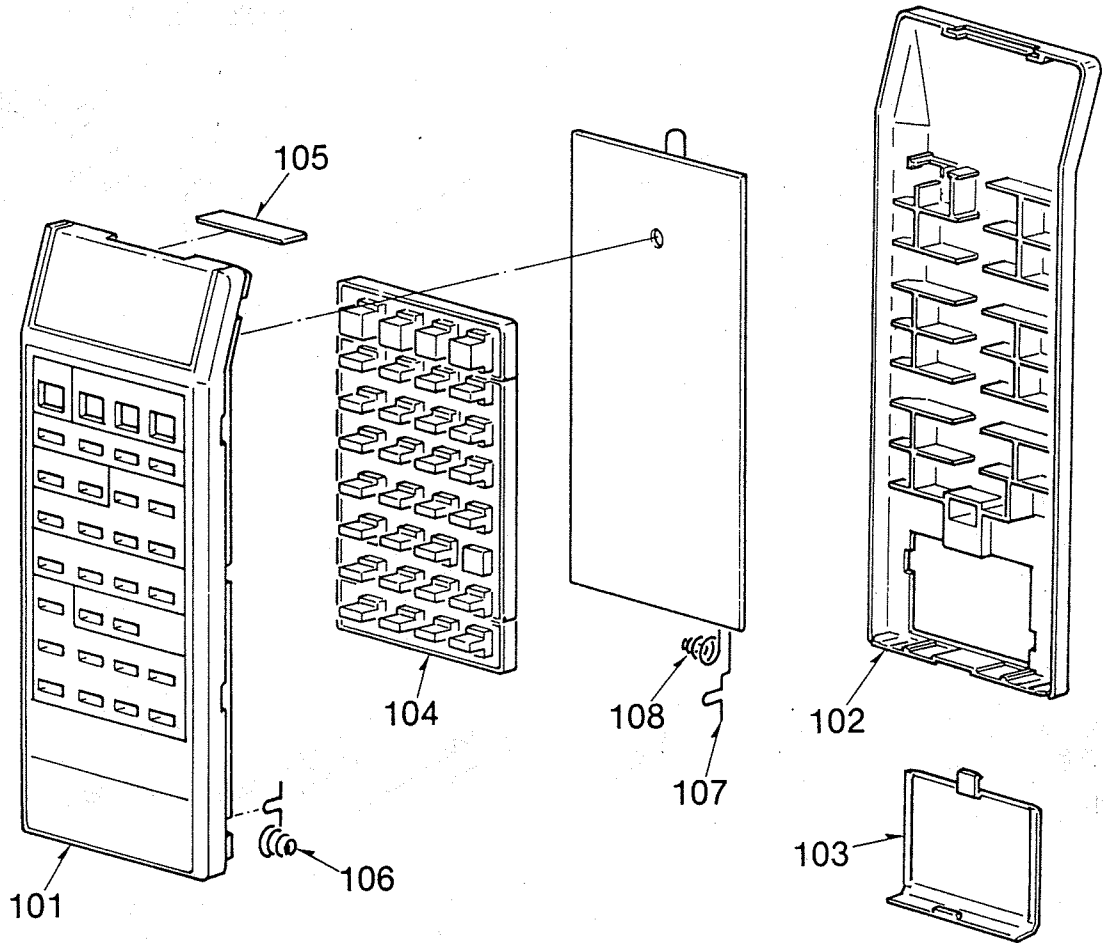

| Ref. No. | Part No. | Description | Ref. No. | Part No. | Description |
|---------------------|-------------|-------------|-----------------|--------------|-------------------------------|
| REMOTE CONTROLLER | | | RESISTORS | | |
| INTEGRATED CIRCUITS | | | R1 | ERD25TLJ1R0U | RESISTOR |
| IC1 | M50467018FP | I.C | CAPACITORS | | |
| TRANSISTORS | | | C1 | ECUV1H471KCG | CAPACITOR |
| Q1 | 2SC3265Y | TRANSISTOR | C2 | ECUV1H471KCG | CAPACITOR |
| DIODES | | | C3 | ECEA0GK101 | ELECTROLYTIC, 100 μ F, 4V |
| D1 | SE303AWVFA | L.E.D | MECHANISM PARTS | | |
| COIL | | | 101 | UR64VCS566 | UPPER CABINET |
| L1 | ELEA101JA | COIL | 102 | UR64CS803A | LOWER CABINET |
| OSCILLATOR | | | 103 | UR64EC804 | BATTERY COVER |
| X1 | CSB420PB6 | OSCILLATOR | 104 | UR64CT805D | RUBBER SWITCH |
| | | | 105 | UR52SB327 | PLATE(SMOKE) |
| | | | 106 | UR64TD374 | BATTERY TERMINAL(COMMON) |
| | | | 107 | UR64TD808 | TERMINAL (+) |
| | | | 108 | UR64TD809 | TERMINAL (-) |