

Service Manual

Stereo Integrated Amplifier

Amplifier SU-V55A

**Color**

(S)Silver Type
(K)Black Type

Area

Color	Area
(S)(K)	(E)Continental Europe.
(S)(K)	(Ei)Italy.
(S)(K)	(EG)F.R.Germany.
(S)(K)	(EB)Belgium.
(S)(K)	(EK)United Kingdom.
(S)(K)	(EF)France.
(S)(K)	(EH)Holland.
(S)(K)	(XL)Australia.
(S)(K)	(XA)Asia, Latin America, Middle Near East, Africa and Oceania.

SPECIFICATIONS

(DIN 45 500)

■ AMPLIFIER SECTION

20 Hz ~ 20 kHz continuous power output both channels driven	2 x 60 W (8Ω)
1 kHz continuous power output both channels driven	2 x 100 W (4Ω)
Total harmonic distortion	
rated power at 20 Hz ~ 20 kHz	0.002% (8Ω)
rated power at 1 kHz	0.005% (4Ω)
half power at 20 Hz ~ 20 kHz	0.0009% (8Ω)
half power at 1 kHz	0.002% (8Ω)
Intermodulation distortion	
rated power at 250 Hz:8 kHz = 4:1, 8Ω	0.005%
rated power at 60 Hz:7 kHz = 4:1, SMPTE, 8Ω	0.005%
Power bandwidth	5 Hz ~ 60 kHz (8Ω, 0.03%)
both channels driven, -3dB	
Residual hum and noise	0.8 mV
Damping factor	30 (4Ω), 60 (8Ω)
Input sensitivity and impedance	
PHONO MM	2.5mV/47 kΩ
PHONO MC	170 μV/220 Ω
TUNER, CD, AUX, TAPE 1/DA TAPE, TAPE 2/EXT	150mV/22 kΩ
PHONO maximum input voltage (1 kHz, RMS)	
MM	160 mV
MC	12 mV
S/N	
rated power(4Ω)	
PHONO MM	77 dB (83 dB: IHF, A)
PHONO MC	64 dB (65 dB: IHF, A)
TUNER, CD, AUX, TAPE 1/DA TAPE, TAPE 2/EXT	91 dB (100 dB: IHF, A)
-26 db power (4Ω)	
PHONO MM	68 dB
PHONO MC	62 dB

TUNER, CD, AUX, TAPE 1/DA TAPE, TAPE 2/EXT	70 dB
50 mW power (4Ω)	
PHONO MM	62 dB
PHONO MC	61 dB
TUNER, CD, AUX, TAPE 1/DA TAPE, TAPE 2/EXT	62 dB
Frequency response	
PHONO	RIAA standard curve ± 0.8dB(30 Hz ~ 15 kHz)
TUNER, CD, AUX, TAPE 1/DA TAPE, TAPE 2/EXT	5 Hz ~ 120 kHz (-3 dB) + 0, -0.2 dB (20 Hz ~ 20 kHz)
Tone controls	
BASS	50 Hz, +10 dB ~ -10 dB
TREBLE	20 kHz, +10 dB ~ -10 dB
Loudness control (volume at -30 dB)	50 Hz, +9 dB
Output voltage	
TAPE 1, 2 REC OUT	150 mV
Channel balance, AUX 250 Hz ~ 6,300 Hz	±1 dB
Channel separation, AUX 1 kHz	50dB
Headphones output level and impedance	500 mV/330 Ω
Load impedance	
MAIN or REMOTE	4 Ω ~ 16 Ω
MAIN and REMOTE	8 Ω ~ 16 Ω

■ GENERAL

Power consumption	490 W
Power supply	
For United Kingdom and Australia	AC 50 Hz/60 Hz, 240 V
For continental Europe	AC 50 Hz/60 Hz, 220 V
For others	AC 50 Hz/60 Hz, 110 V/127 V/220 V/240 V
Dimensions (W x H x D)	430 x 126 x 290 mm (16-15/16" x 4-31/32" x 11-7/16")
Weight	7.5 kg (16.5 lb.)

Notes:

- Specifications are subject to change without notice. Weight and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer (H.P. 3045 system).

Technics


Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

CONTENTS

LOCATION OF CONTROLS	Page
PROTECTION CIRCUITRY	2
BEFORE REPAIR AND ADJUSTMENT	3
DISASSEMBLY INSTRUCTIONS	3
MEASUREMENTS AND ADJUSTMENTS	4, 5
	6

PRINTED CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM	Page
SCHEMATIC DIAGRAM	7 ~ 10
BLOCK DIAGRAM	11 ~ 15
REPLACEMENT PARTS LIST	16, 17
EXPLODED VIEW	18 ~ 20
	21, 22

LOCATION OF CONTROLS

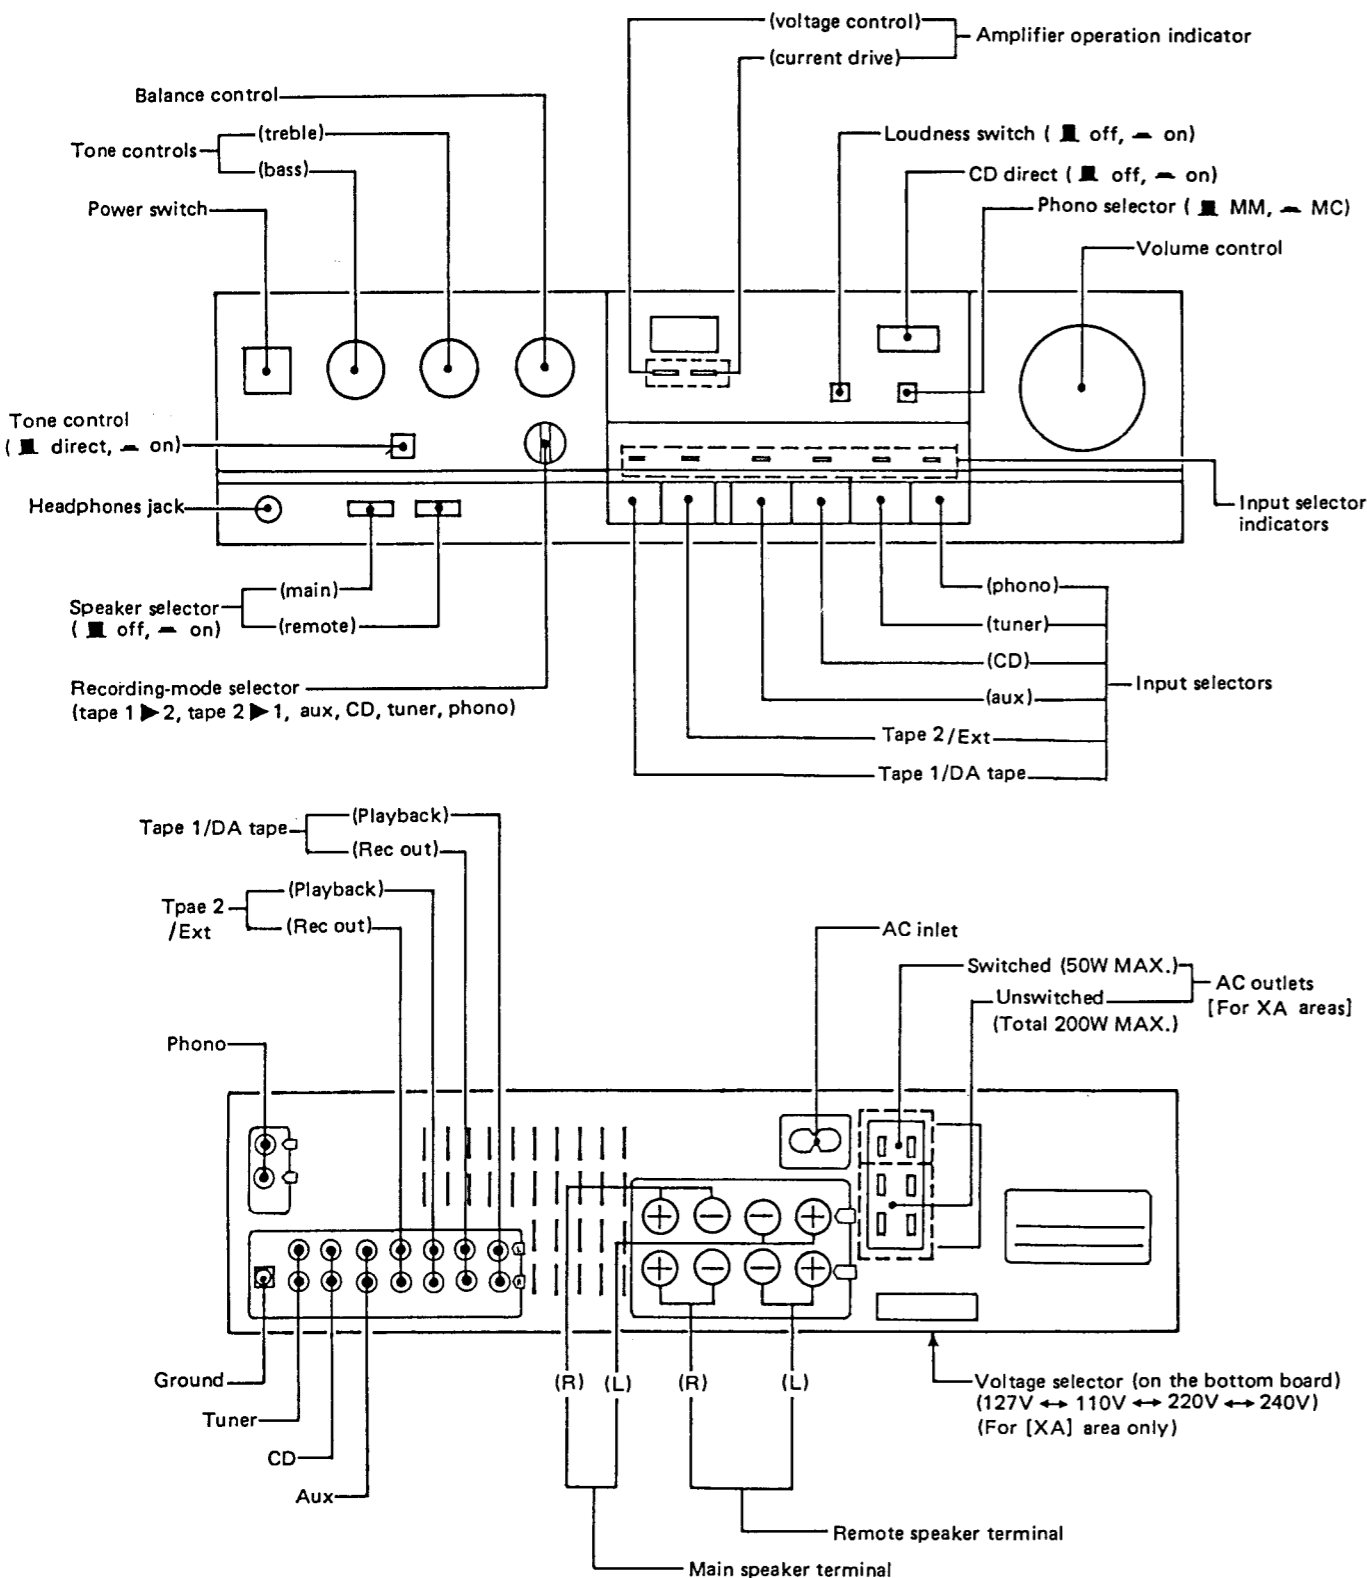

- The power supply for this unit varies depending upon the areas. Also, the parts used for power supply are different. So, refer to the circuit diagram and replacement parts list.
- * [XA] area is provided with voltage selector and AC outlets.
- * 240V (50/60Hz) for Australia and United Kingdom.
- * 220V (50/60Hz) for Continental Europe.
- * 127V/110V/220V/240V (50/60Hz) for other [XA] area.
- * Phono input capacitance is about 100pF.

Suggestions

- If noise is very annoying while listening to an FM or AM broadcast, switch OFF the video disc player, compact-disc player and turntable.
- Switch OFF the video disc player power if noise is excessive while listening to an audio tape, compact disc or regular phono disc.

Notes:

- To record sounds from a compact disc, press the input selector marked "CD". The compact-disc-direct switch is for listening only; it cannot be used to select the compact disc as a recording source.

PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following conditions is noticed:

- No sound is heard when the power is switched ON.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlined below:

1. Switch OFF the power.
2. Determine the cause of the problem and correct it.
3. Switch ON the power once again.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first switched OFF and then ON again.

BEFORE REPAIR AND ADJUSTMENT

- (1) Turn off the power supply. Using a 10Ω, 5W resistor, shortcircuit both ends of power supply capacitors (C705, C706, 8200 μF) in order to discharge the voltage.
 - (2) Before turning on the power switch of the set.
 - A. Connect the voltage controller to the primary side.
 - B. Connect the AC ampere meter to the primary side or connect the DC voltage meter to the "±B" circuit of the secondary side.
 - C. Turn the VR of ICQ (VR401 and VR402) to minimum (counterclockwise).
 - D. After setting the output to zero of the voltage controller, turn on the power switch of the set. And increase the output of voltage controller gradually. Then, check carefully whether the current value of primary side become more than followings value or whether the DC voltage of secondary side is increasing slowly.
 - E. If the value of current is increasing unusually or the DC voltage is not increasing, lower the output level of voltage controller immediately.
 - F. Check the transistors of voltage amplifier and current amplifier IC501.
 - G. After repairing, adjust the ICQ.
- The current value of the primary side at no signal. (Confirm the power supply voltage of each area and provided voltage of the set.)

Power supply voltage	AC110V	AC127V	AC220V	AC240V
Consumed current 50/60Hz	280 ~ 560mA	260 ~ 520mA	140 ~ 280mA	130 ~ 260mA

DISASSEMBLY INSTRUCTIONS

" ATTENTION SERVICER "

SOME CHASSIS COMPONENTS MAY HAVE SHARP EDGES.
BE CAREFUL WHEN DISASSEMBLING AND SERVICING.

Ref. No. 1	How to remove the cabinet
Procedure 1	<ul style="list-style-type: none"> Remove the 5 screws.



Ref. No. 2	How to remove the front panel	
Procedure 1 → 2	<ol style="list-style-type: none"> Remove the 5 knobs (① ~ ⑤). Remove the 5 nuts (⑥ ~ ⑩). Remove the 4 screws (⑪ ~ ⑭). 	<ol style="list-style-type: none"> Remove the connection rod. Remove the connector (J102, J103, J106, J118, J119). Remove the flat cable (J104, J105). Remove the "Rec-select" switch (⑮).
<ul style="list-style-type: none"> How to remove the "Rec-select" switch Pushing the rec switch, shift it up as in Fig. 1. How to fit the rec switch <ol style="list-style-type: none"> Shift the switch contact inside. Turn the "Rec-select" switch (selector knob) counterclockwise. Let the "Rec-select" switch claw change with the switch, and shift the "Rec-select" switch down while pushing in. 		
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> Removing the flat cable (No.1 side) White line ② pull ① push No.1 2 3 4... Cable Connector </div>		

Ref. No. 3	How to remove the P.C.B.	
Procedure 1 → 2 → 3	<ol style="list-style-type: none"> Push the 9 tabs (① ~ ⑨). Remove the tone and volume P.C.B. Remove the 3 screws (⑩ ~ ⑫). Remove the LED P.C.B. 	<ol style="list-style-type: none"> Remove the 1 screw (⑬). Push the 2 tabs (⑭, ⑮). Remove the speakers/headphones P.C.B.

Ref. No. 4	How to remove the main P.C.B.
----------------------	--------------------------------------


Procedure
1 → 4

1. Remove the 15 screws (① ~ ⑭).
2. Remove the connection rod.
3. Remove the main P.C.B.

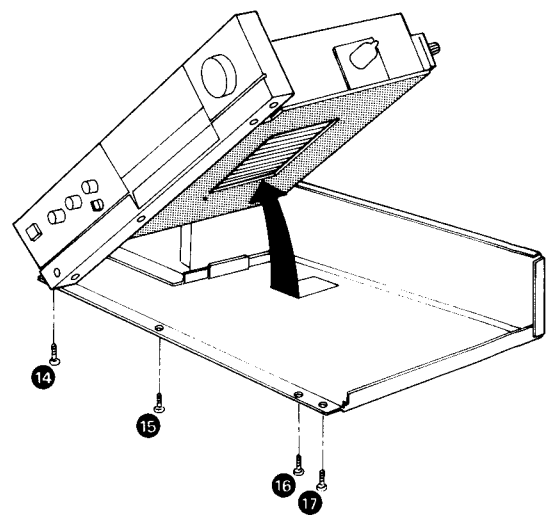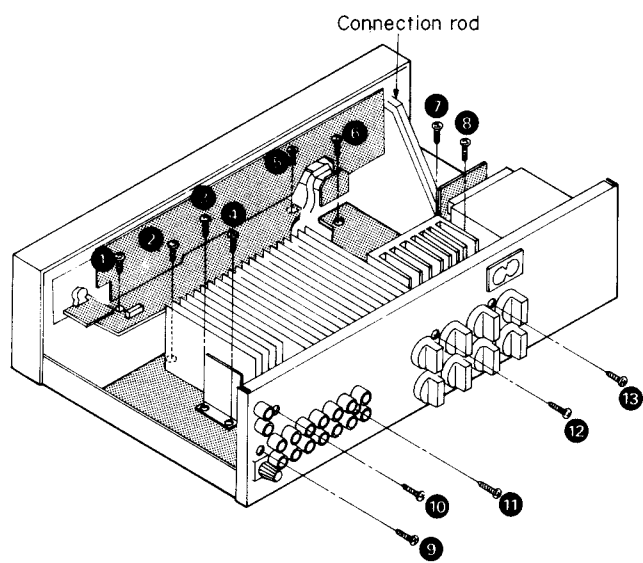

Ref. No. 5	How to remove the power IC.
----------------------	------------------------------------

Procedure
1 → 4 → 5

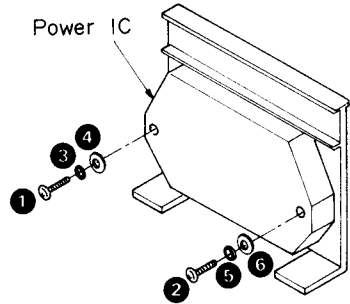

1. Unsolder the power IC.
2. Remove the 2 screws (① , ②).
3. Remove the 4 washer (③ ~ ⑥).

● When mounting the power IC, apply silicon thermal compound (SZZ0L15 or equivalent) to the rear of the power IC.


MEASUREMENTS AND ADJUSTMENTS

Control positions and equipment used.

- Volume knob 0 (Minimum)
- Main speaker selector off
- Remote speaker selector off
- Speaker impedance switch $8\Omega \sim 16\Omega$
- DC electronic voltmeter (EVM)



IDLING (ICQ) ADJUSTMENT

1. Test equipment connection is shown in figure. Connect the DC EVM. on both channels.
2. Turn the ICQ control volume (VR401, VR402) counter-clockwise.
3. Turn ON the set when it is cold, and 15 sec. later, adjust VR401 and VR402 so that the voltage is 50mV. Also, check that the voltage is 60 ~ 85mV (standard: 80mV) after lapse of 10 – 15 minutes. (Below 85mV after lapse of 60 min.).

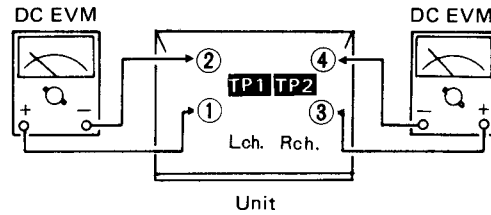

• Adjustment points


Voltage control Amp.

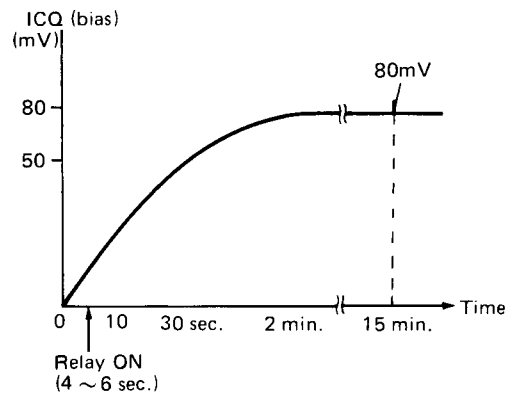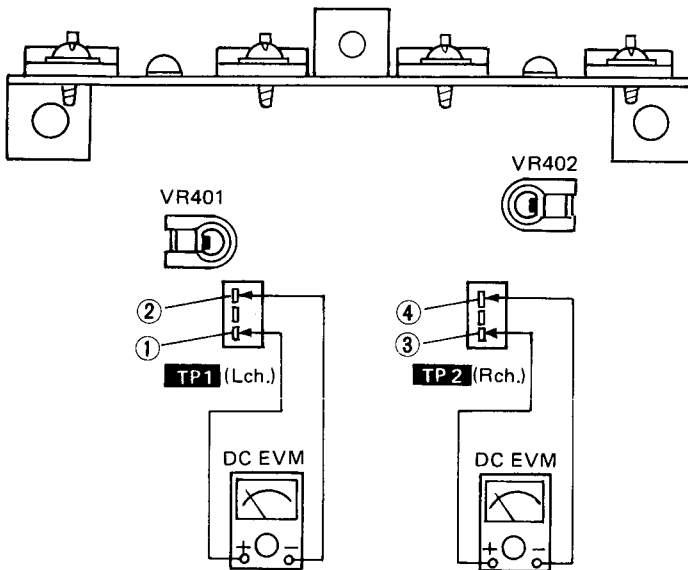

• Terminal guide of IC, transistor and diodes

<table border="1"> <tr> <td>AN6558F</td> <td>8pin</td> </tr> <tr> <td>μ PC4570C</td> <td>8pin</td> </tr> <tr> <td>AN7062N</td> <td>18pin</td> </tr> </table>	AN6558F	8pin	μ PC4570C	8pin	AN7062N	18pin	SVI4004 24pin 	AN7073 9pin 	2SA1123, 2SA992 2SC1685, 2SC2631
AN6558F	8pin								
μ PC4570C	8pin								
AN7062N	18pin								
2SA1309 2SC3311 	2SA1535 2SC3944 	MA165, MA167 SVDS10VB20F SVDSR1K2LF MA29WA 	MA4062M, MA4033M MA4160M 	LN021315P LN014314PH1 LN064316P 					

PRINTED CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

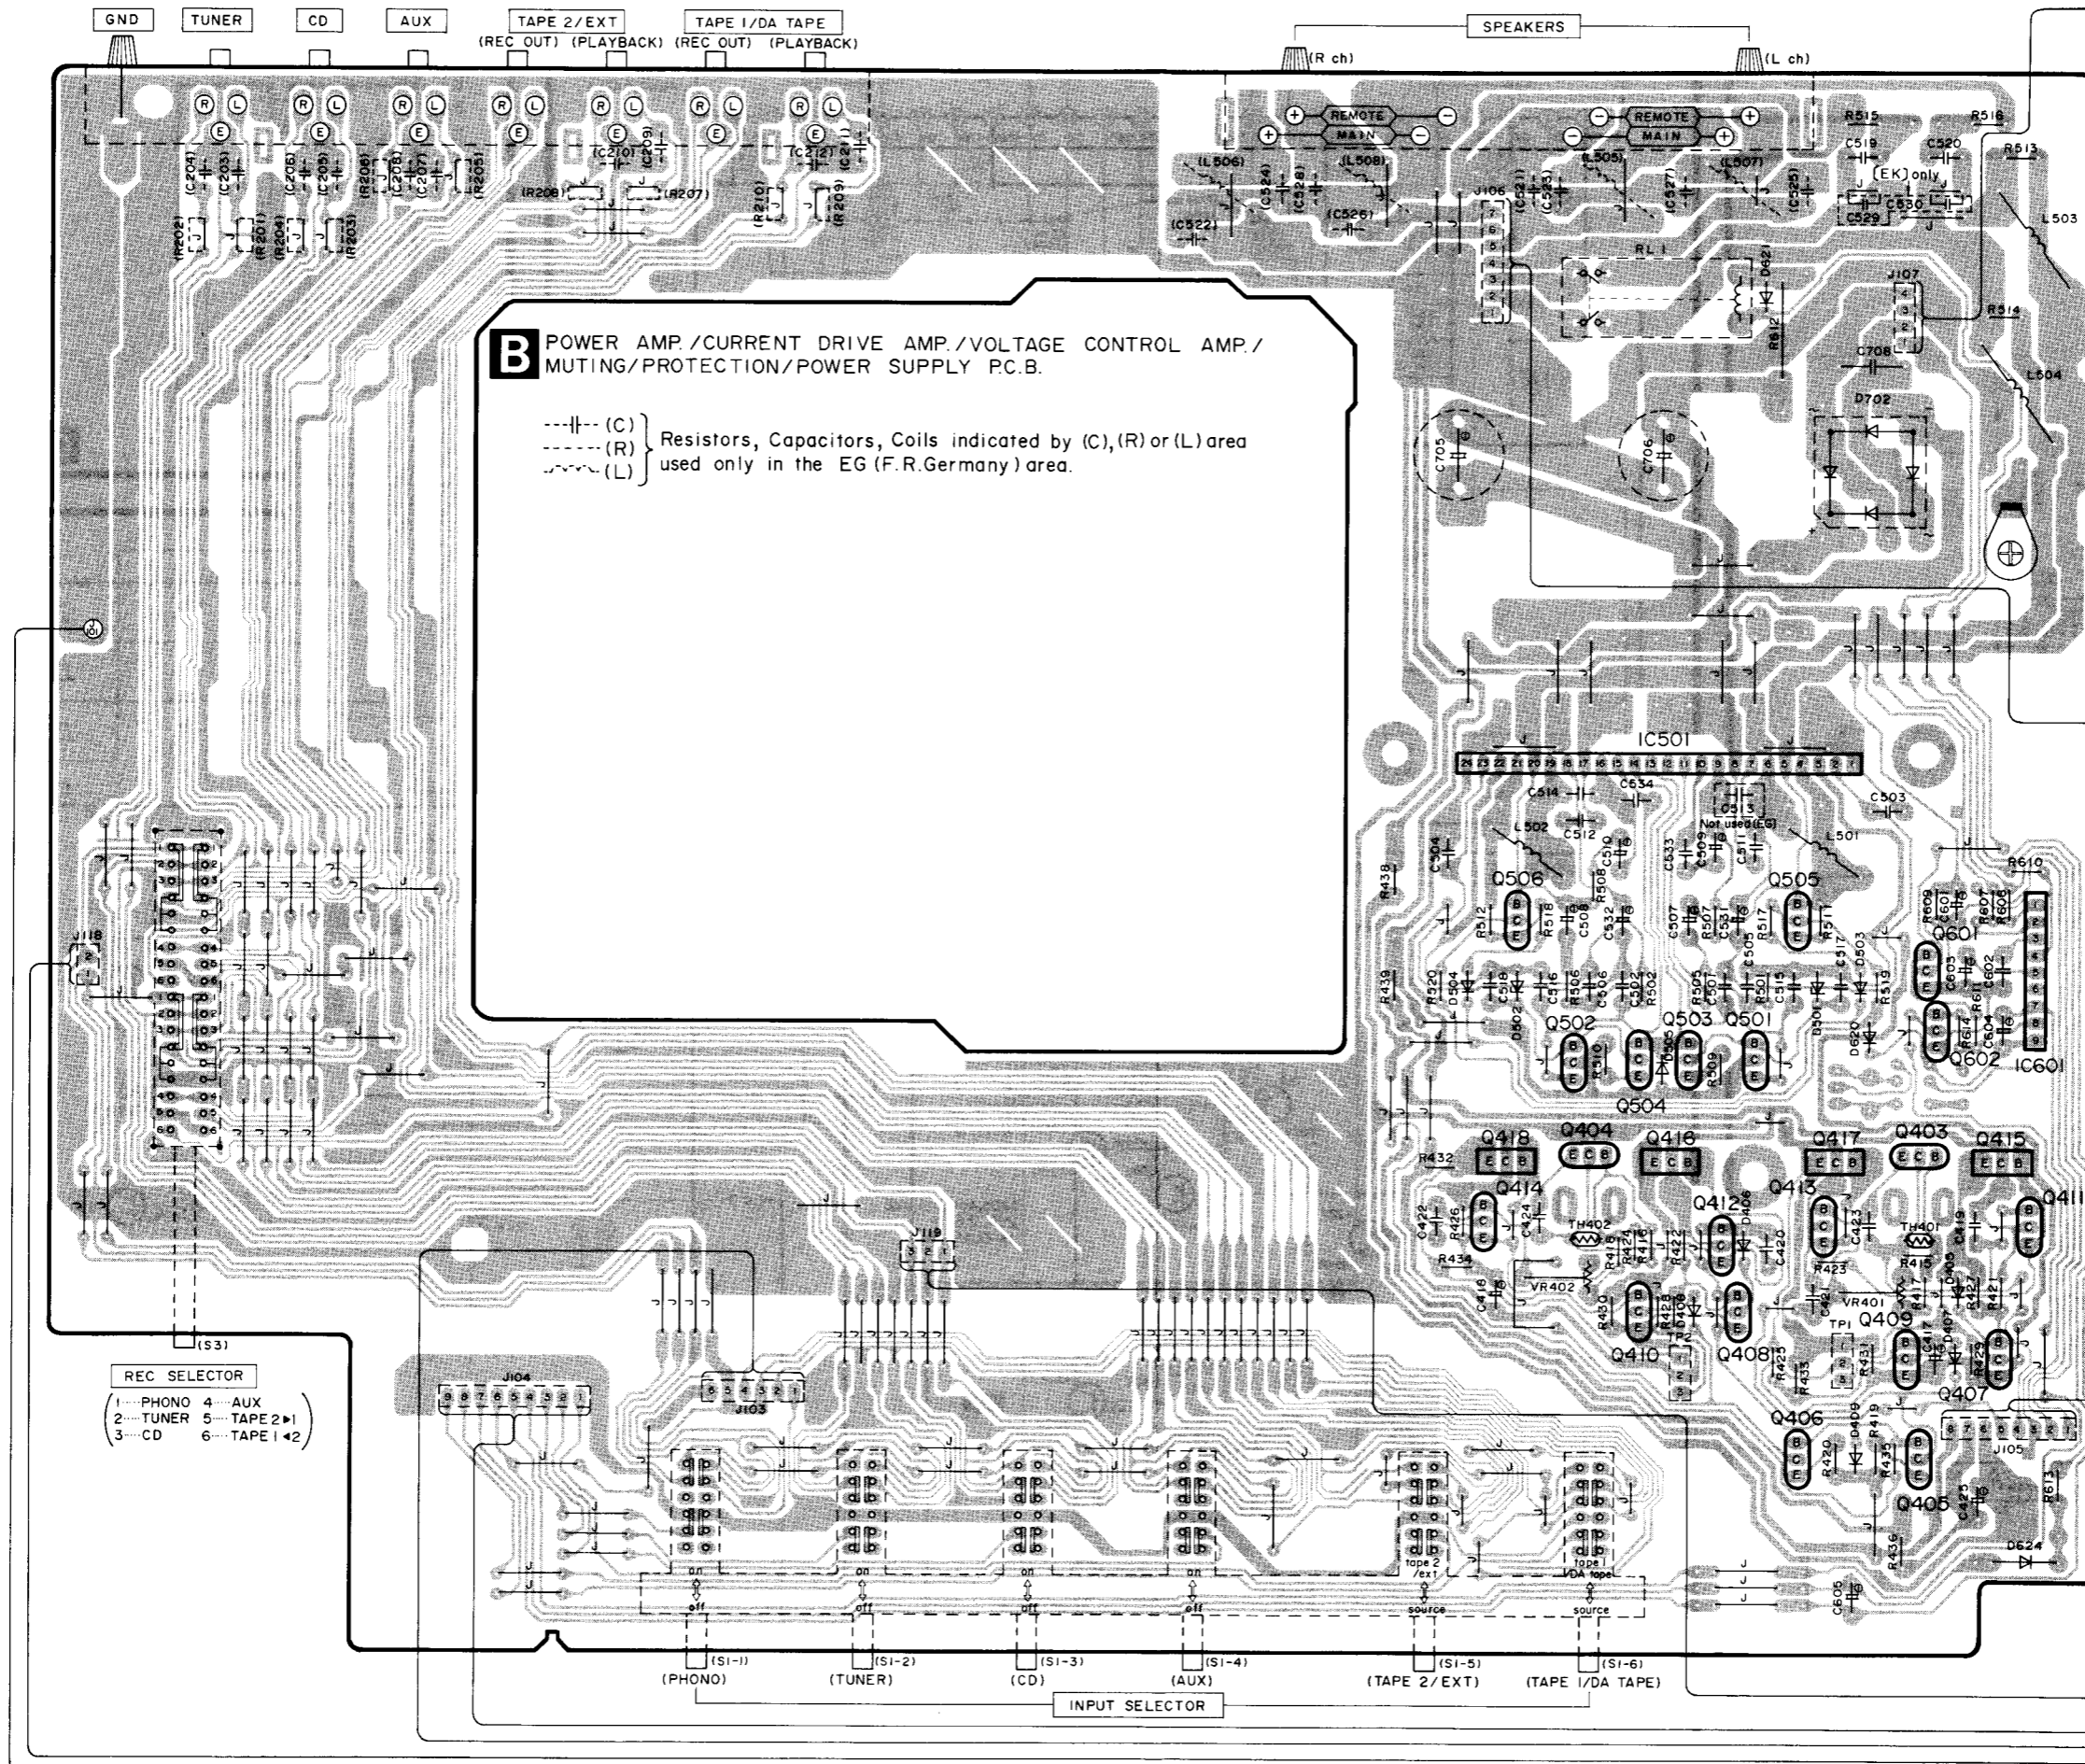

B POWER AMP./CURRENT DRIVE AMP./VOLTAGE CONTROL AMP./MUTING/PROTECTION/POWER SUPPLY P.C.B.








---||--- (C) } Resistors, Capacitors, Coils indicated by (C),(R) or (L) area
 ---(R) } used only in the EG (F.R.Germany) area.
 ---(L) }


REC SELECTOR
 1---PHONO 4---AUX
 2---TUNER 5---TAPE 2▶1
 3---CD 6---TAPE 1◀2

AC IN
 (240V 50/60Hz)---(E,K,XL)
 (220V 50/60Hz)---(E,H,EF,EB,E,I)

G PHONES JACK/SPEAKER SELECTOR P.C.B.




A PHONO

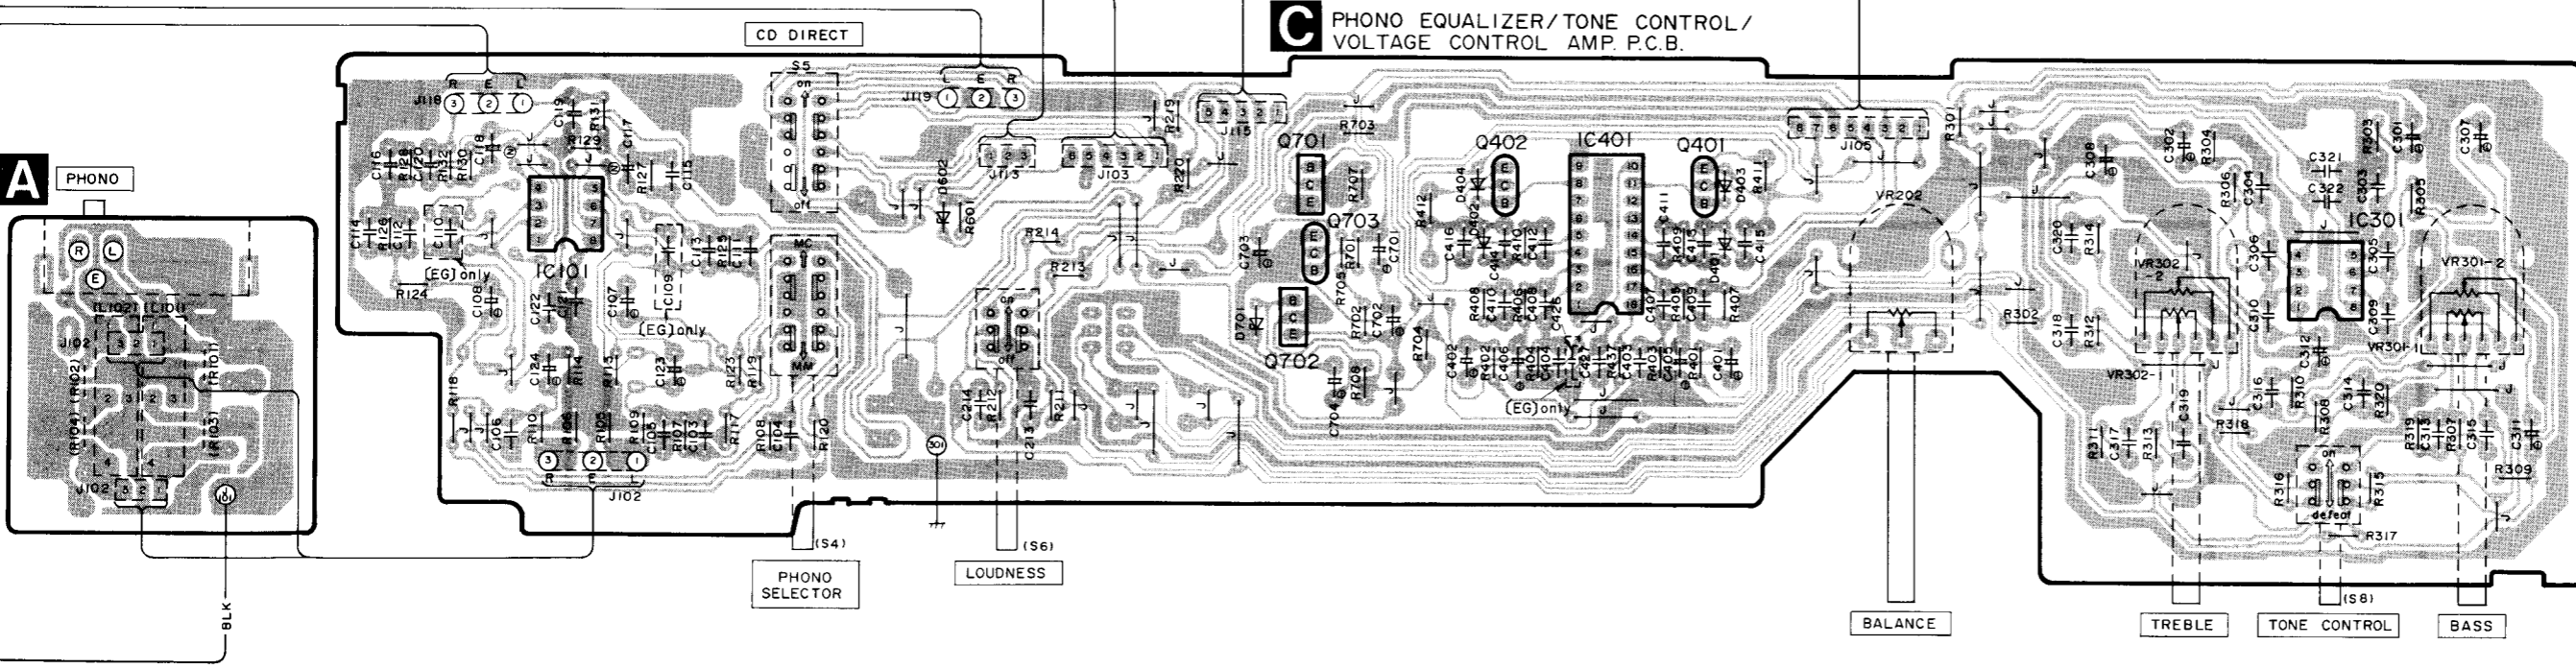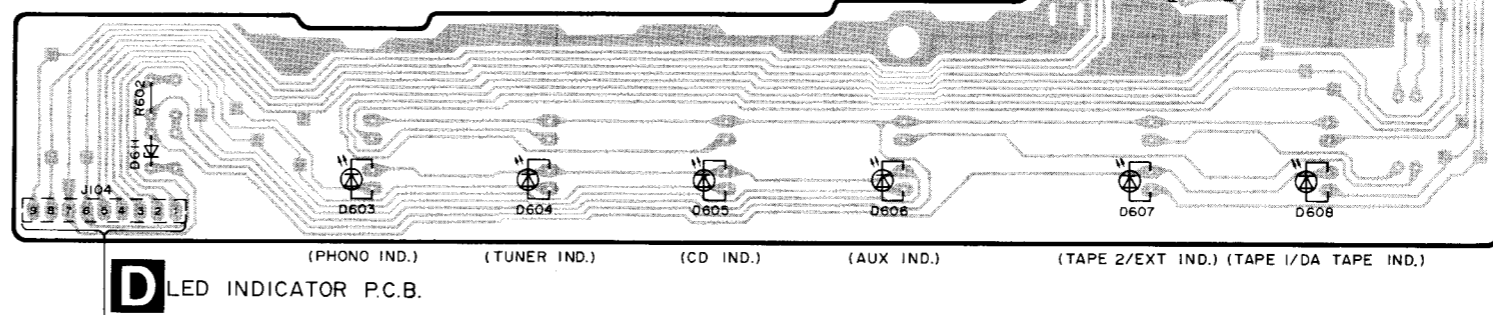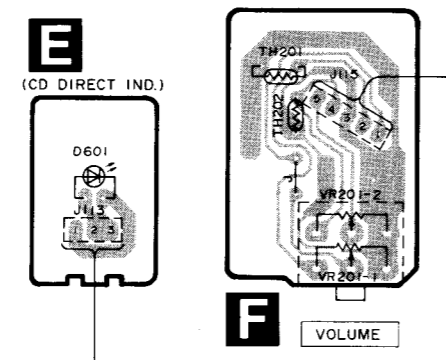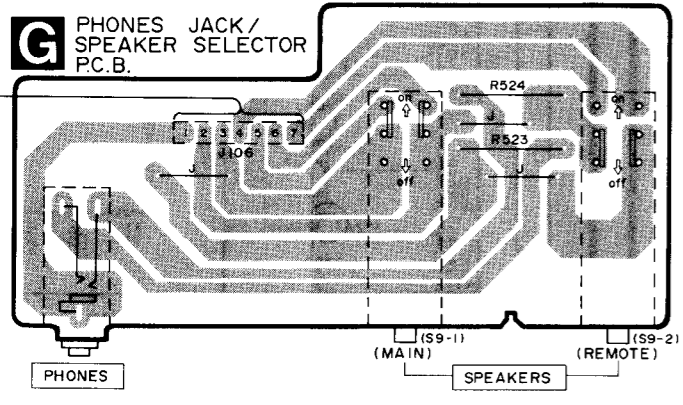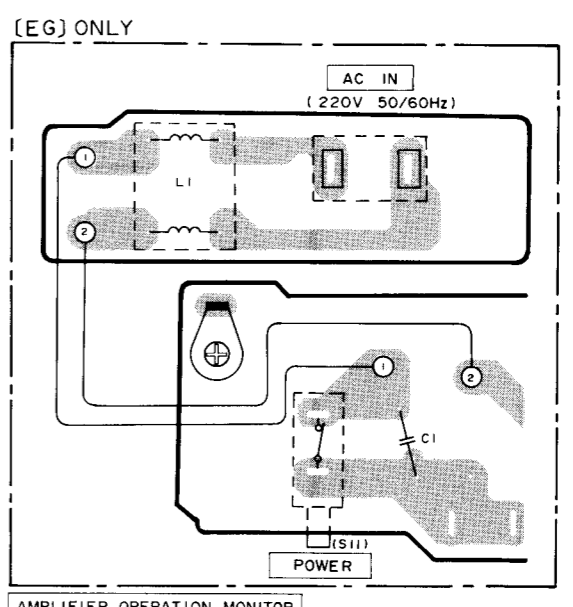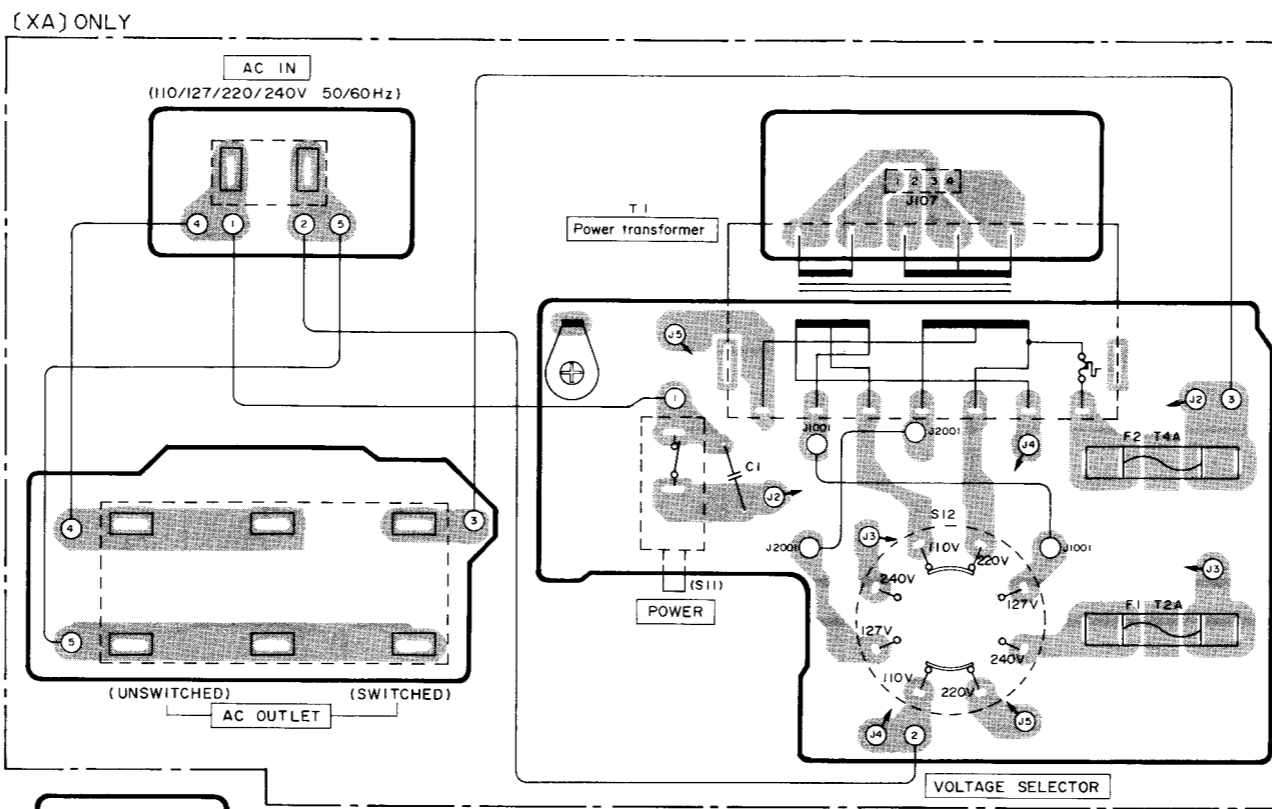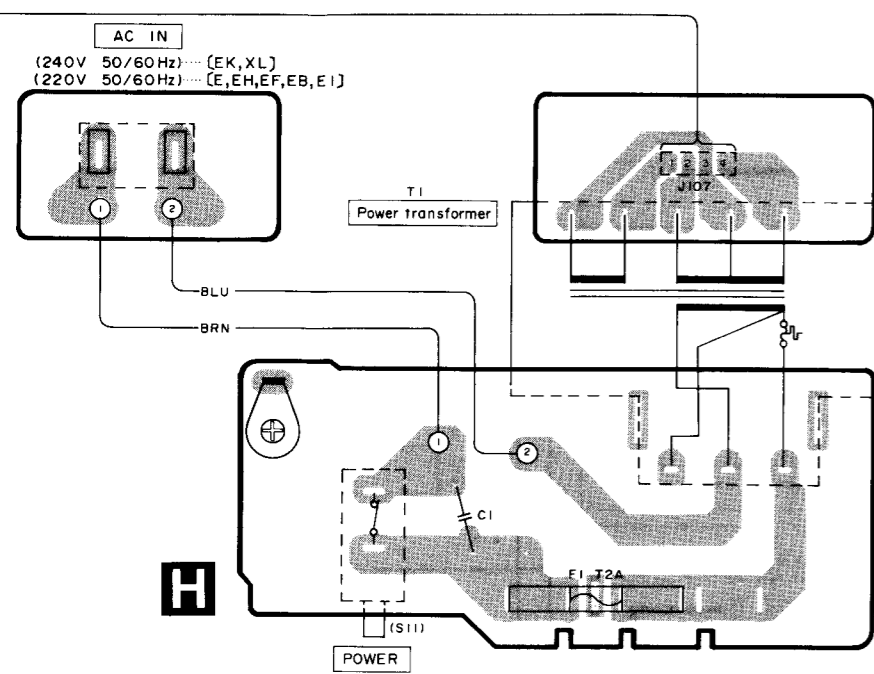

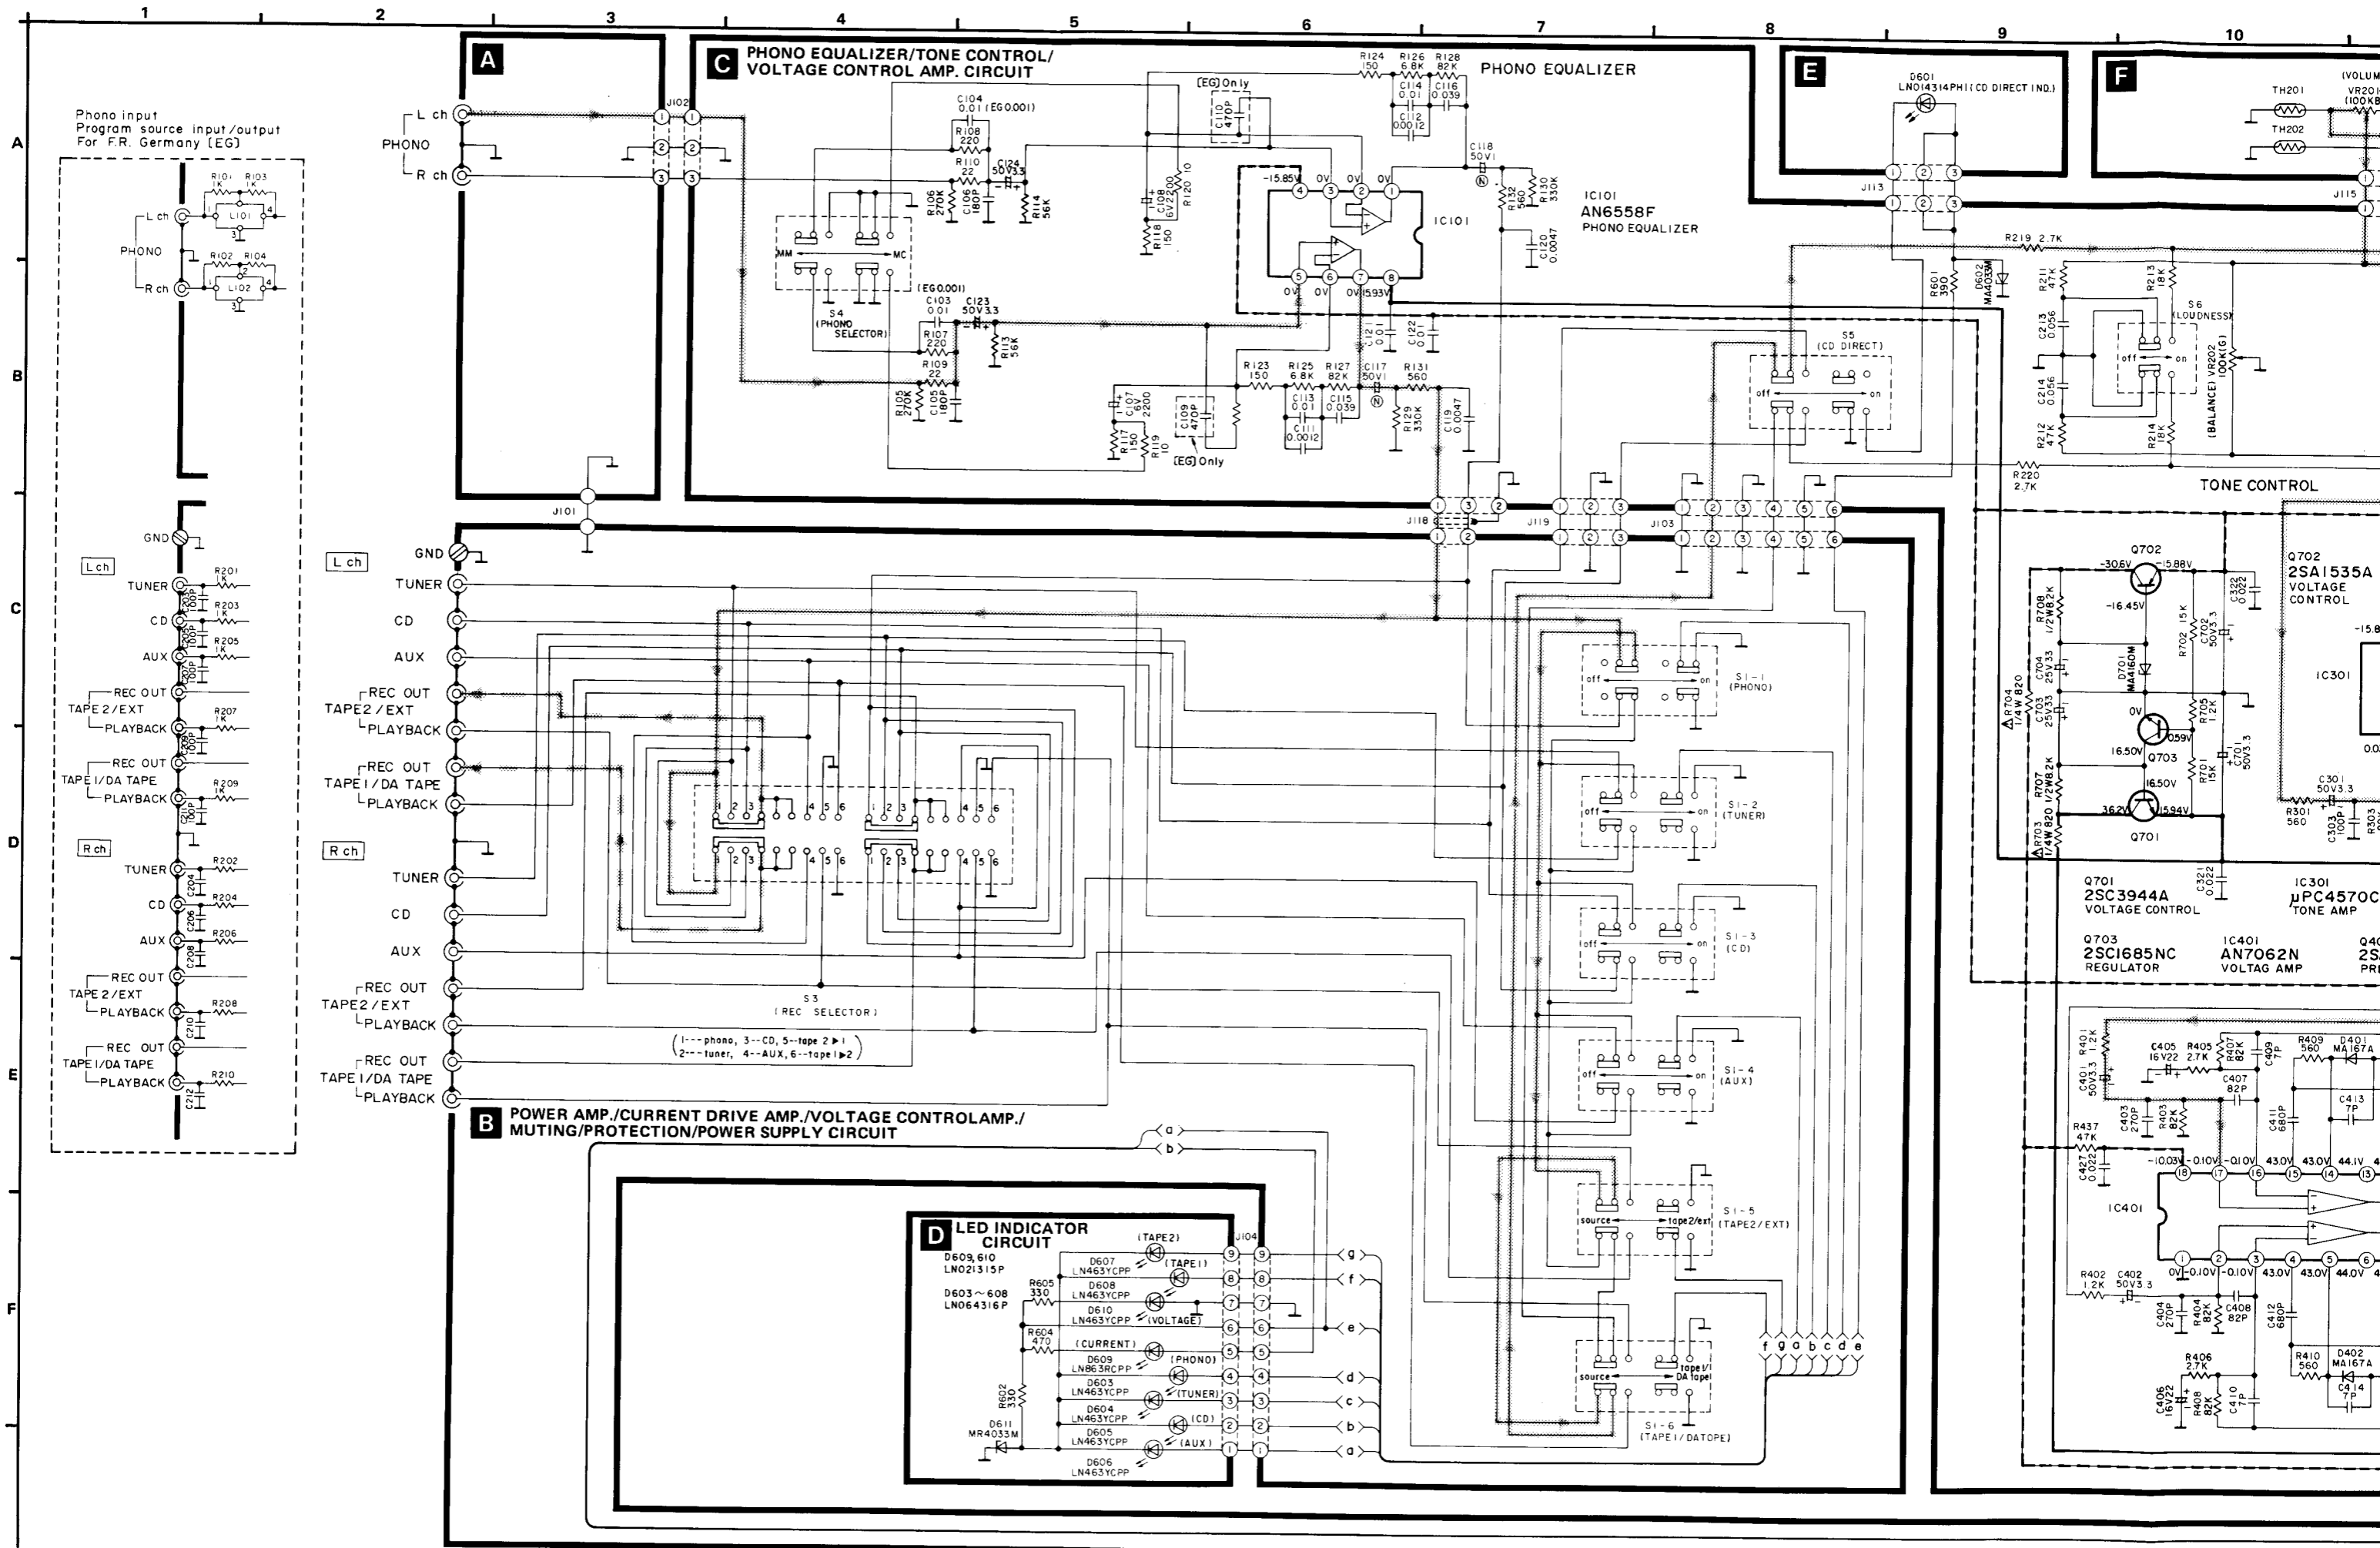


1
2
3
4
5
6
7
8
9
10





A
B
C
D
E
F





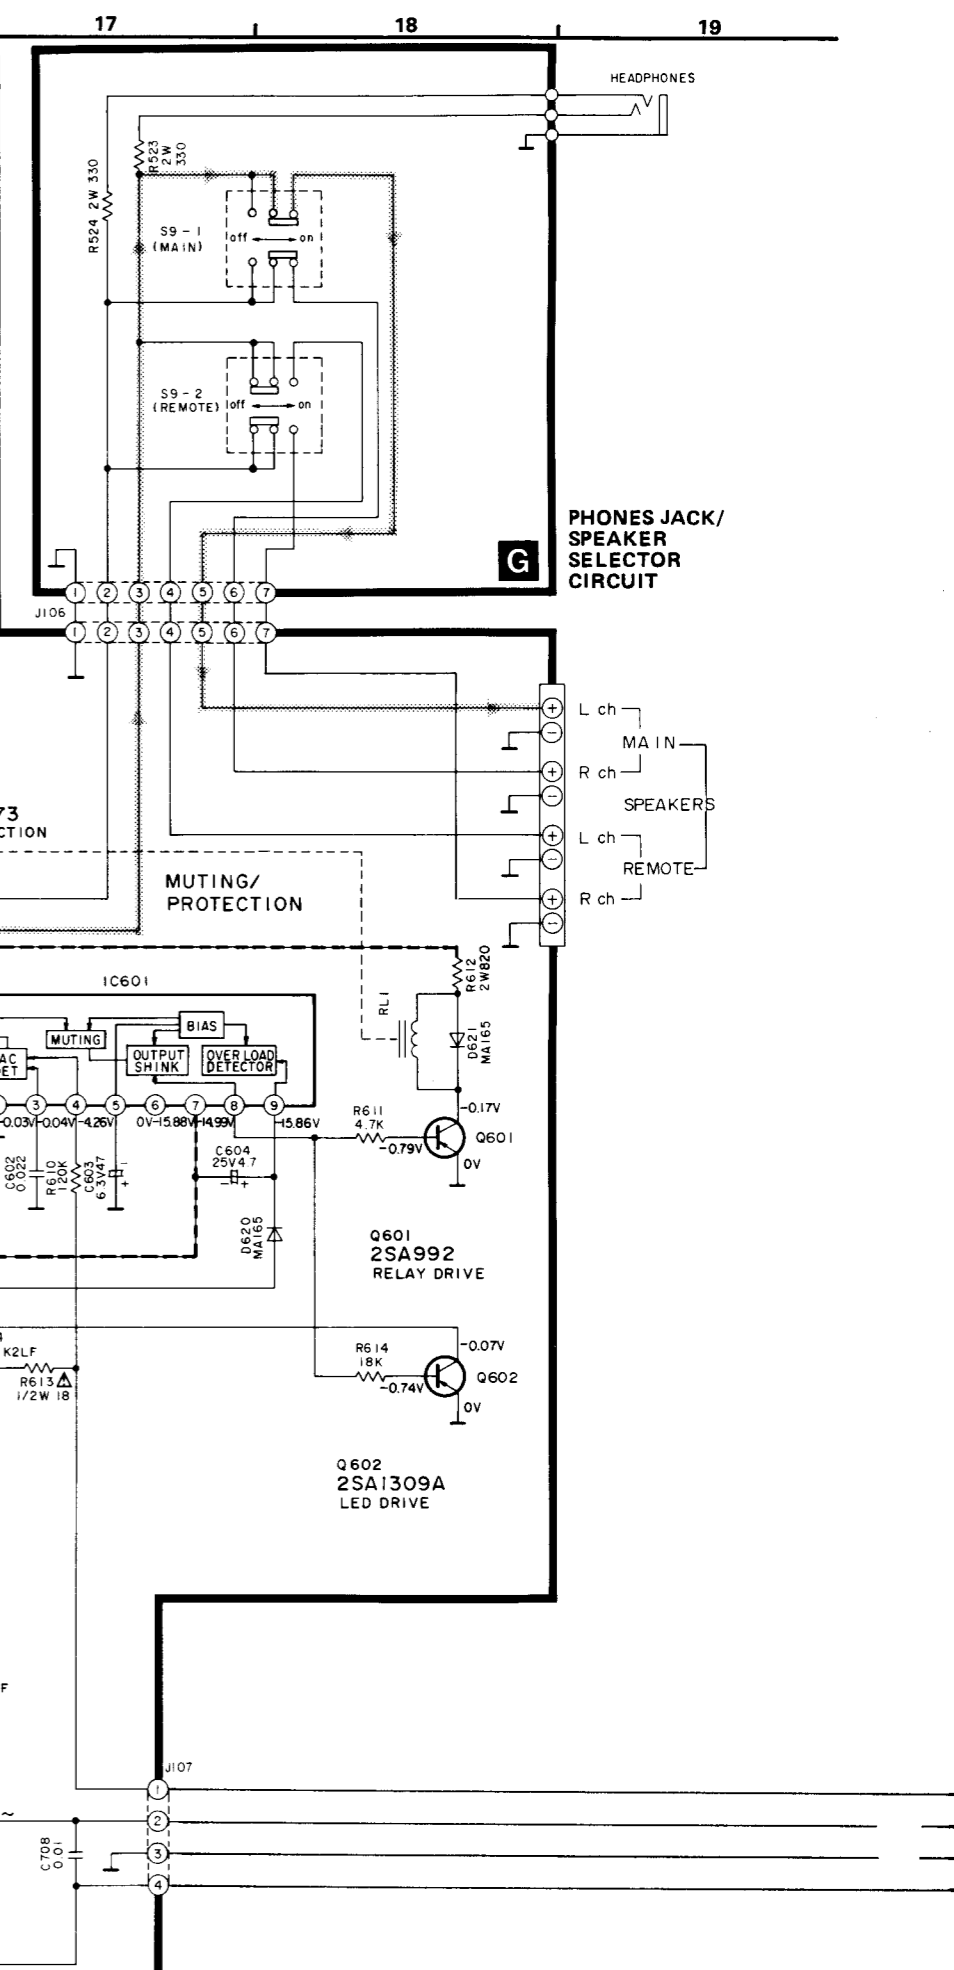
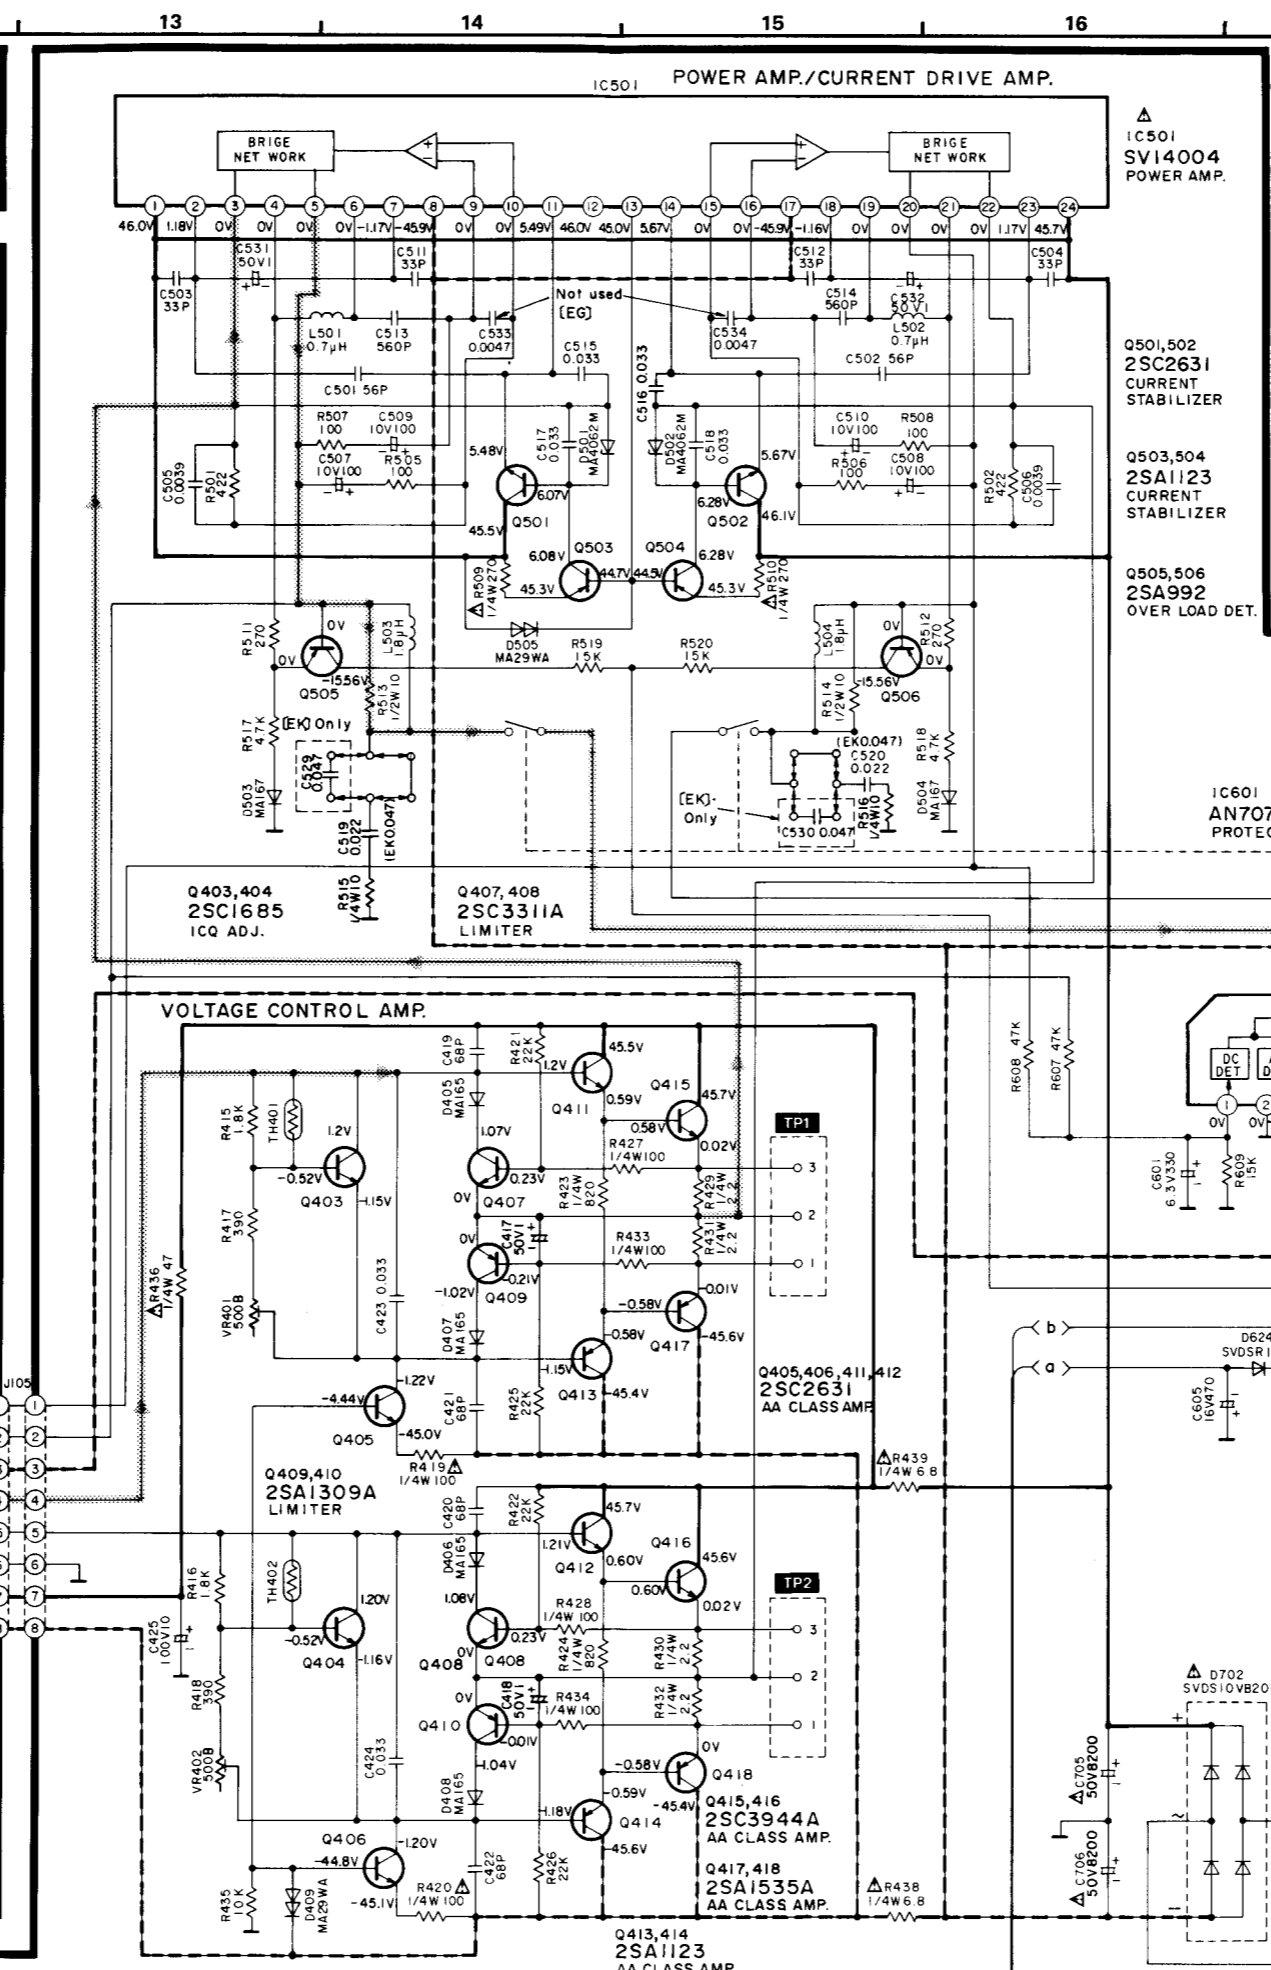
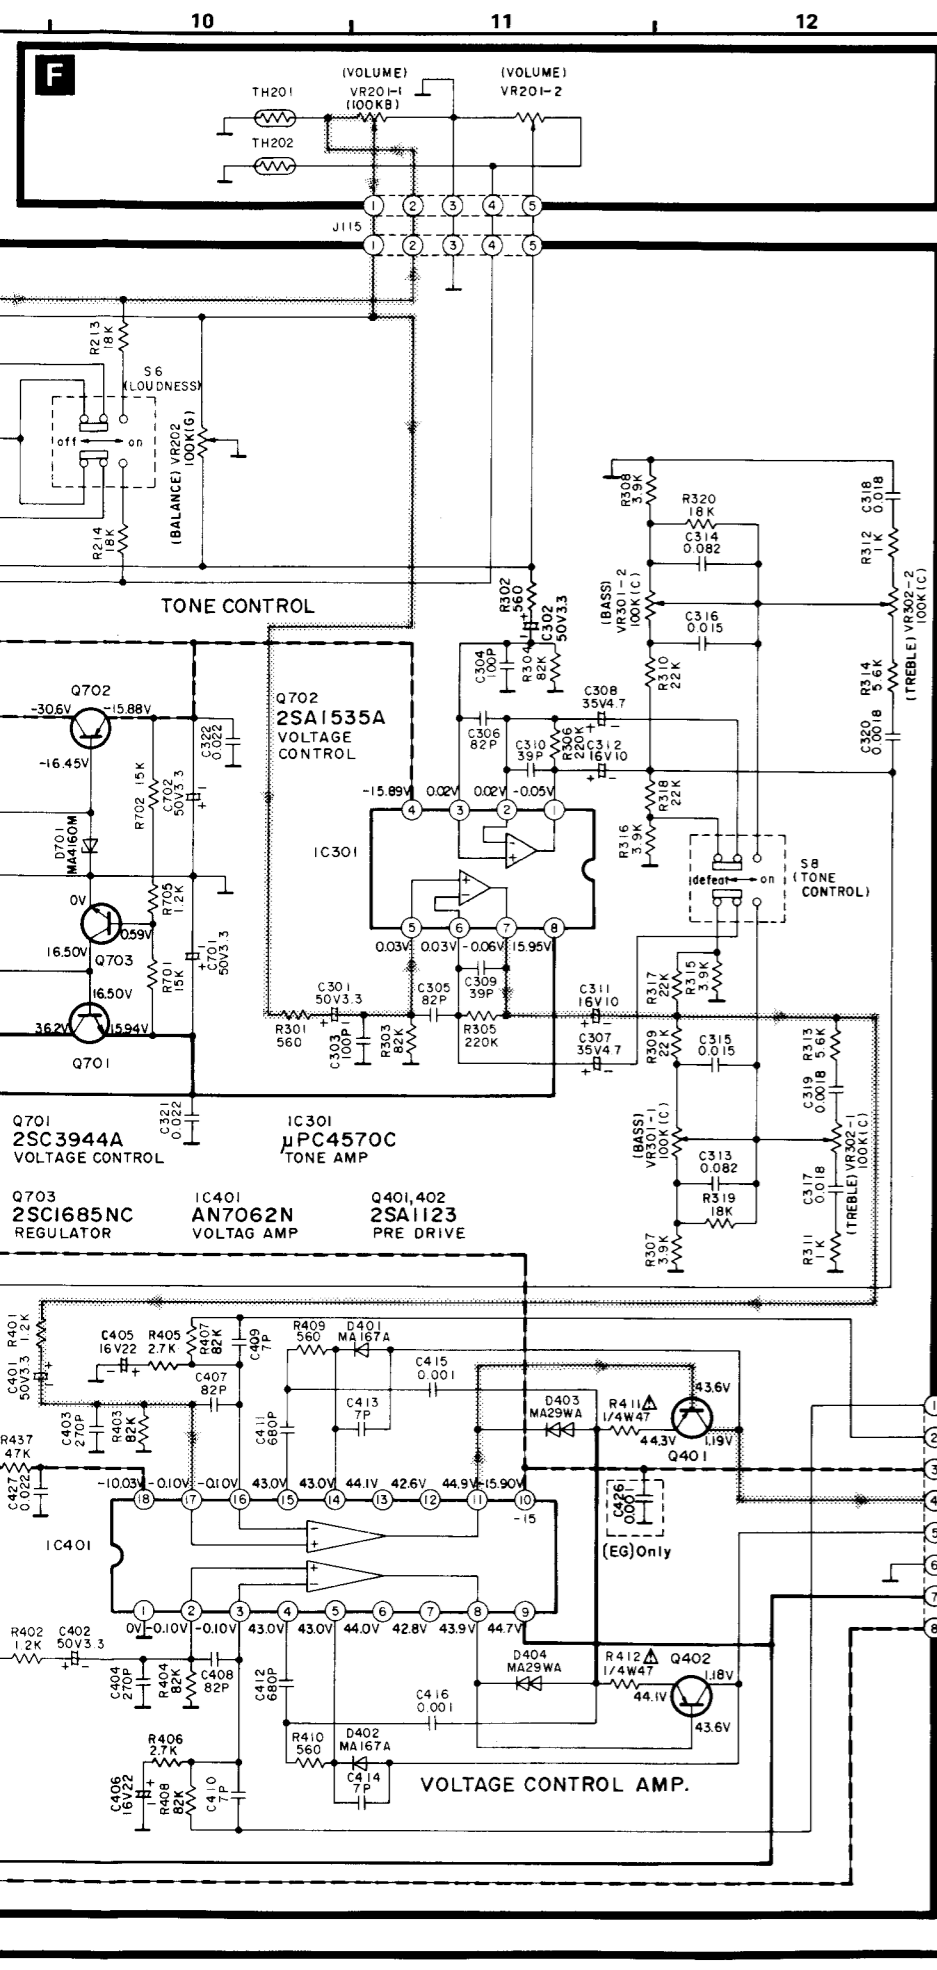


PRINTED CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

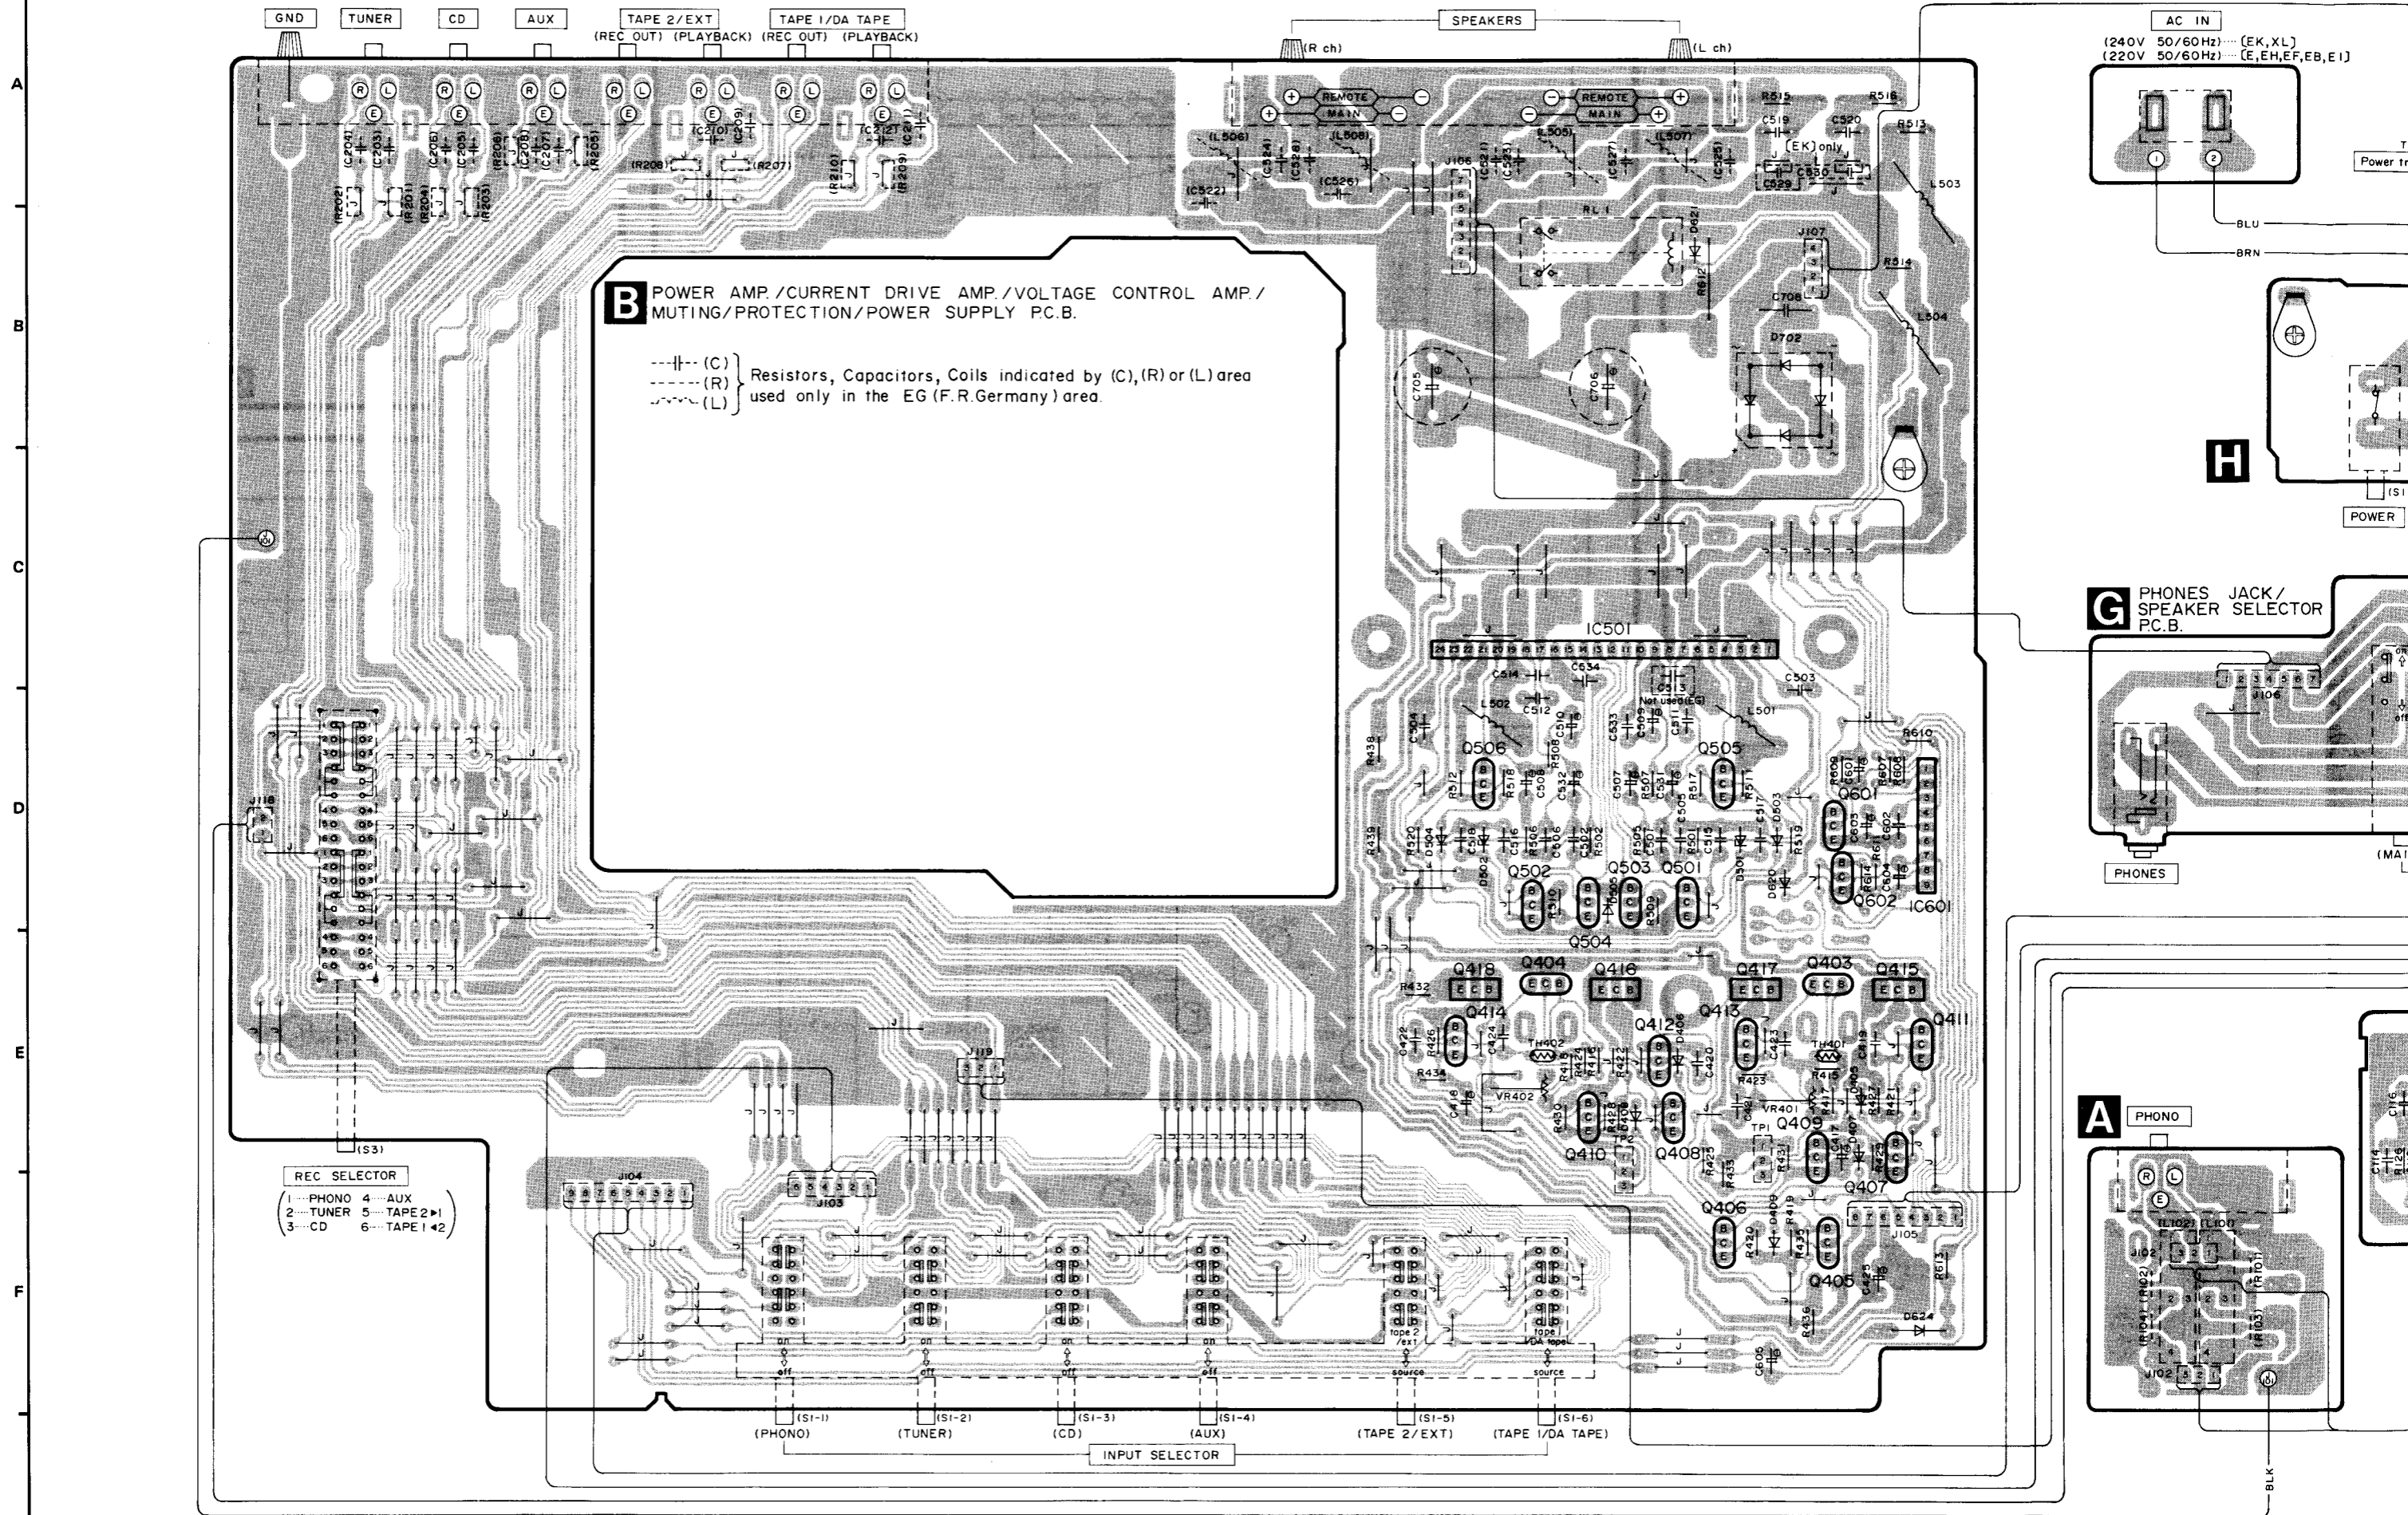

REC SELECTOR
 1---PHONO 4---AUX
 2---TUNER 5---TAPE 2▶1
 3---CD 6---TAPE 1◀2

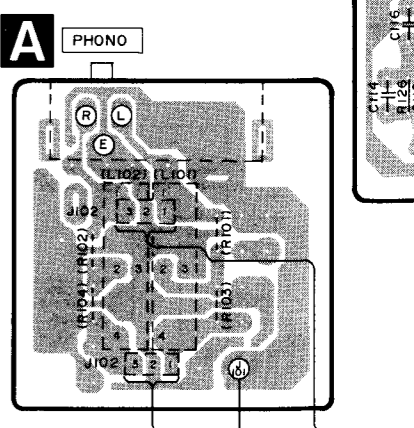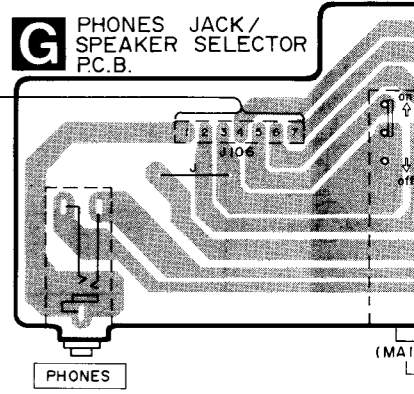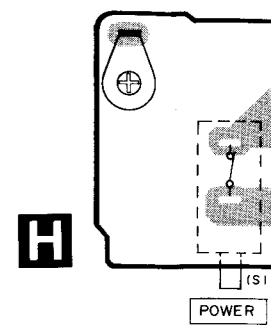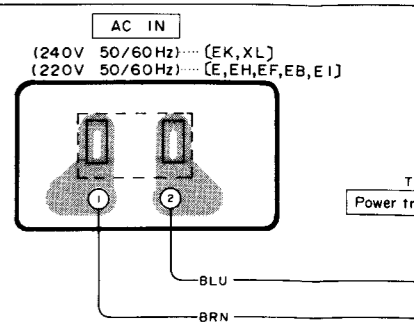

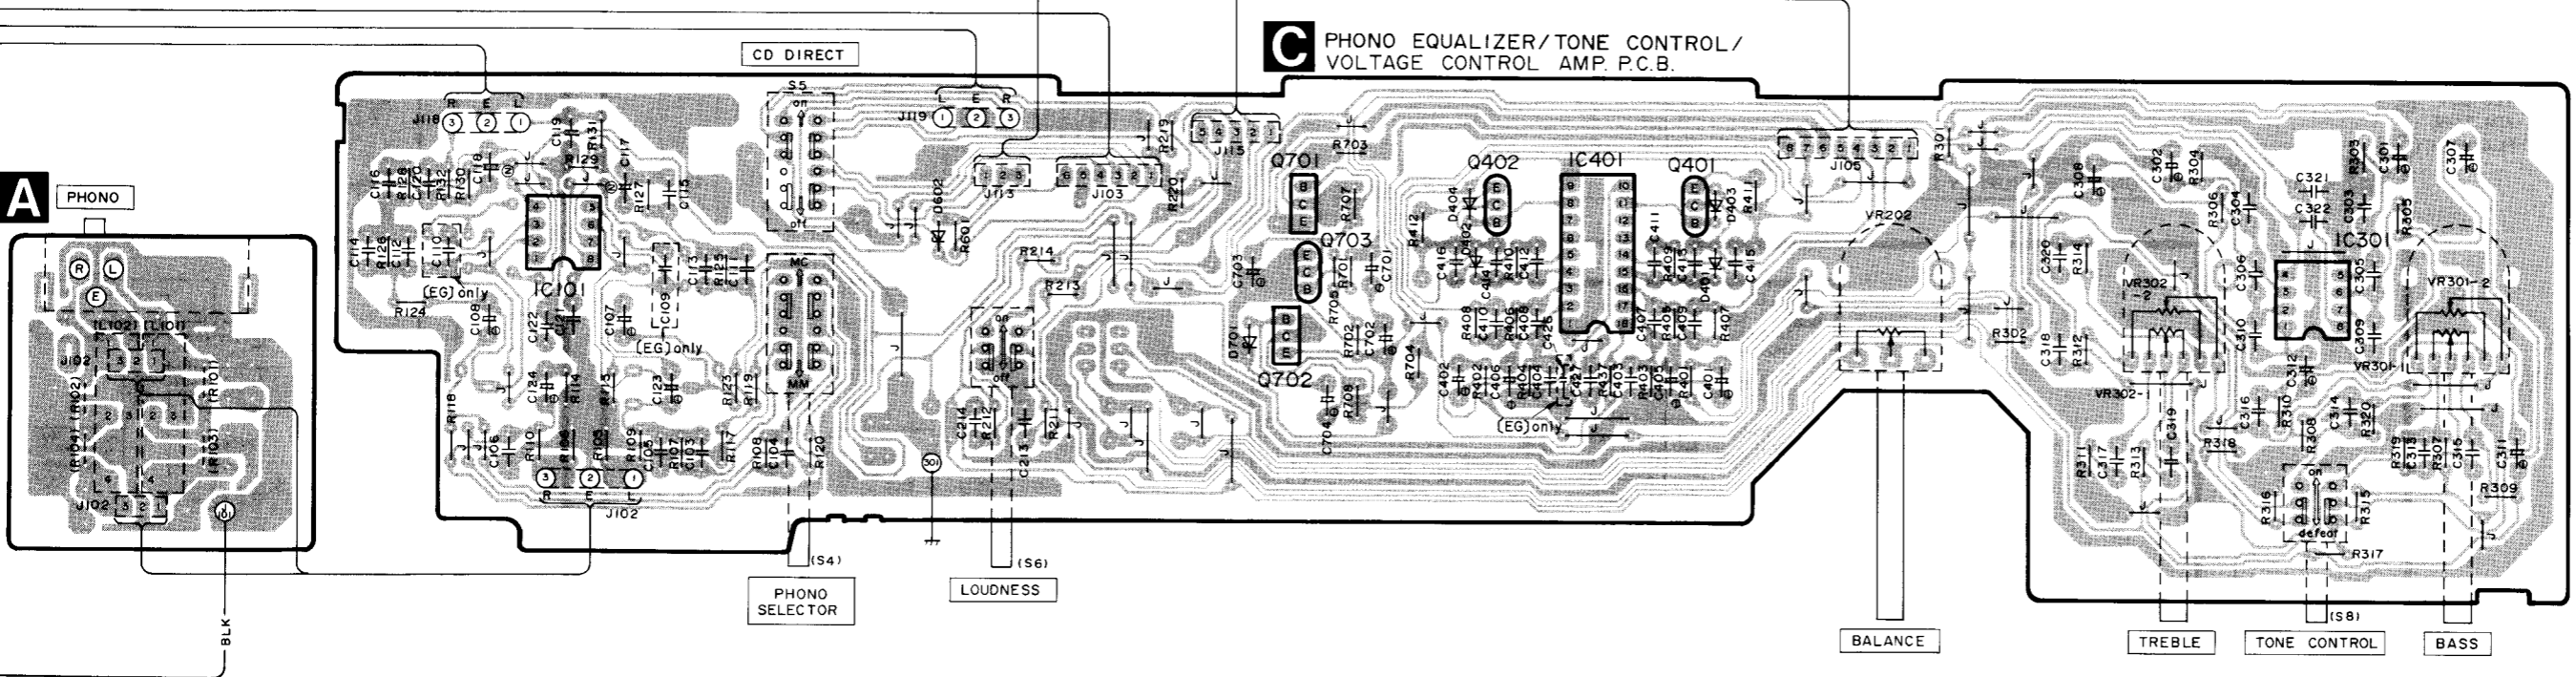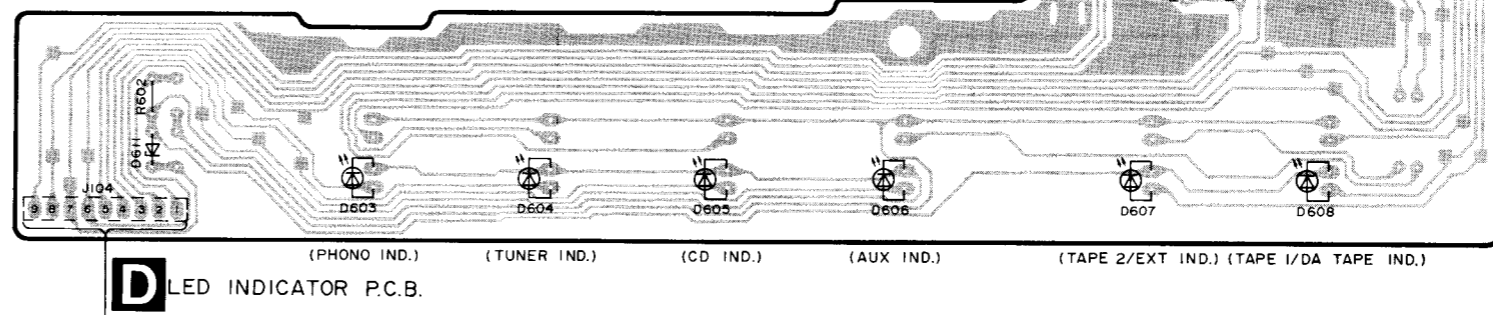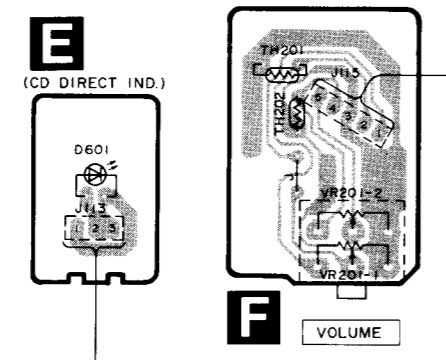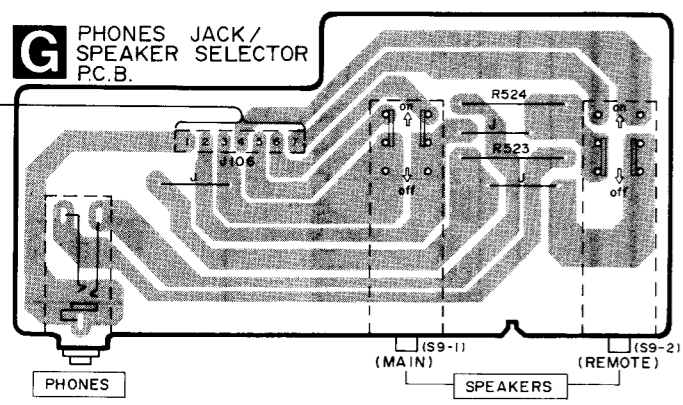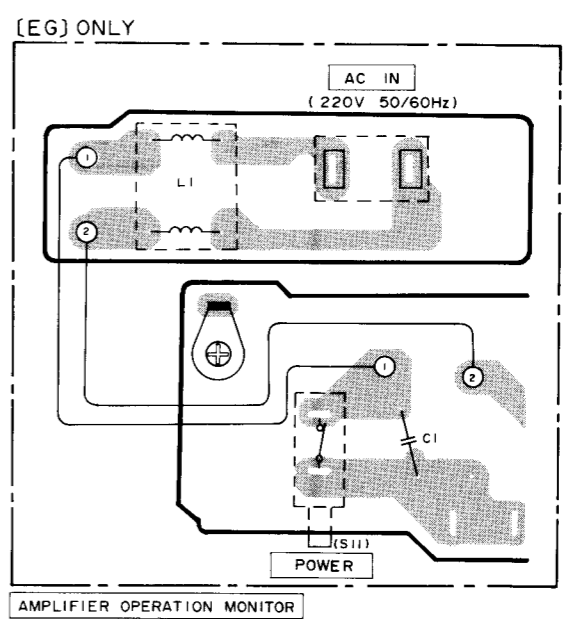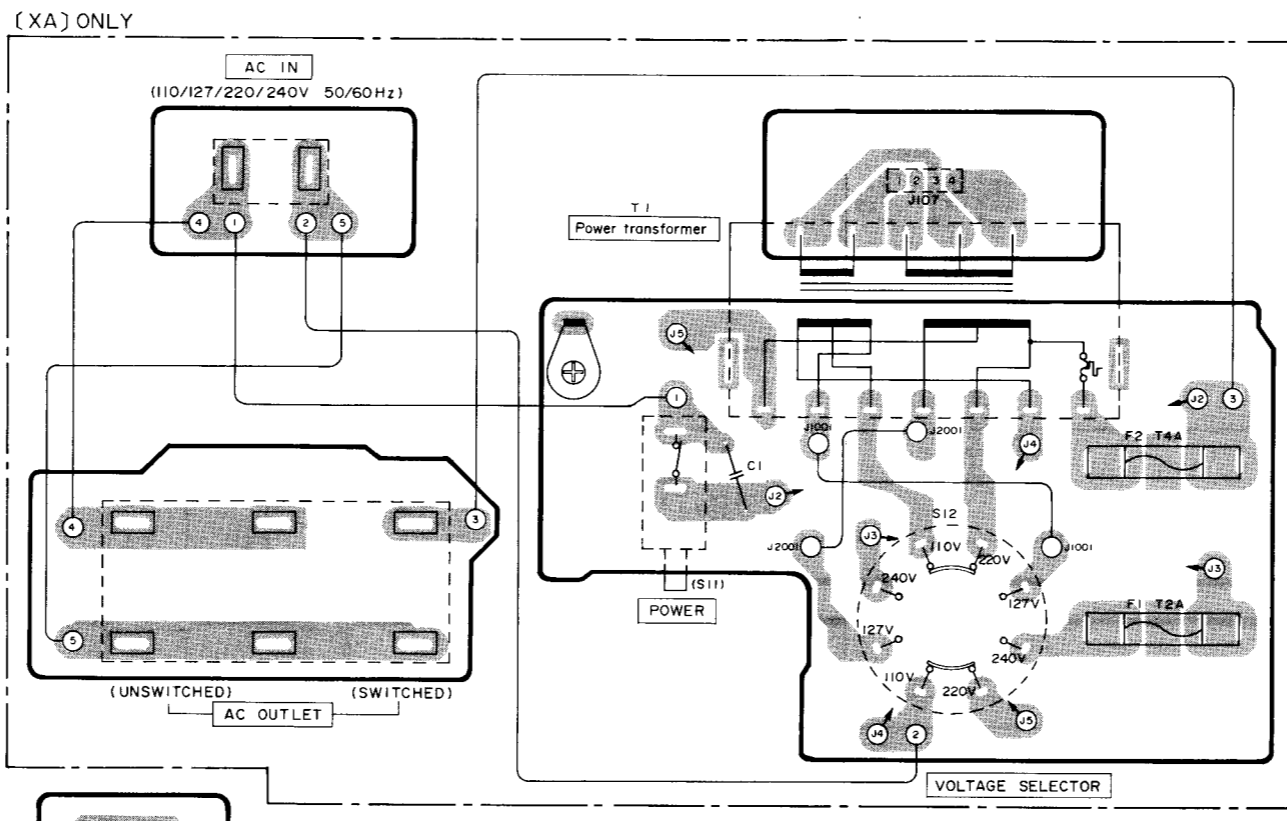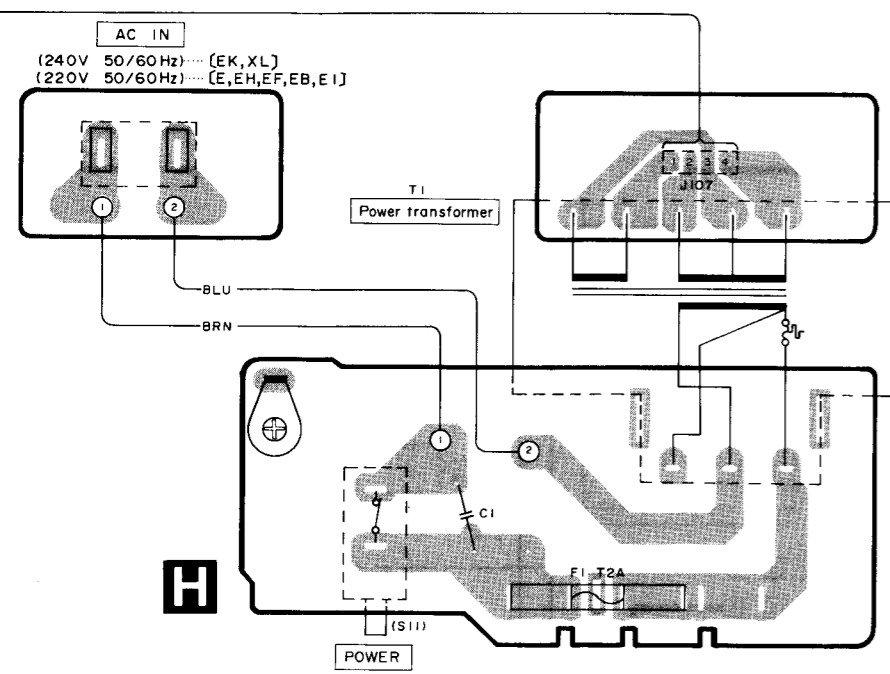


SCHEMATIC DIAGRAM


(This schematic diagram may be modified at any time with the development of new technology.)

Note:



- S1-1 ~ S1-4:** Input selector switch in "phono" position.
S1-1: phono S1-2: tuner S1-3: CD
S1-4: aux S1-5: Tape 2/ext S1-6: Tape 1/DA tape
 - S3-1, S3-2:** Recording selector in "CD" position.
 - S4:** Phono selector in "MM" position.
(■ MM, ▲ MC)
 - S5:** CD direct switch in "off" position.
(■ off, ▲ on)
 - S6:** Loudness switch in "off" position.
(■ off, ▲ on)
 - S8:** Tone control switch in "defeat" position.
(■ defeat, ▲ on)
 - S9-1:** Main speaker switch in "on" position.
(■ off, ▲ on)
 - S9-2:** Remote speaker switch in "off" position.
(■ off, ▲ on)
 - S11:** Power switch in "on" position.
(■ off, ▲ on)
 - S701:** (For [XA] area only): Voltage selector switch in "110V" position.
(127V ↔ 110V ↔ 220V ↔ 240V)
11. Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
- ▲ Phono signal (Lch)
— Positive voltage lines — Negative voltage lines.
12. Important safety notice:
Components identified by ▲ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

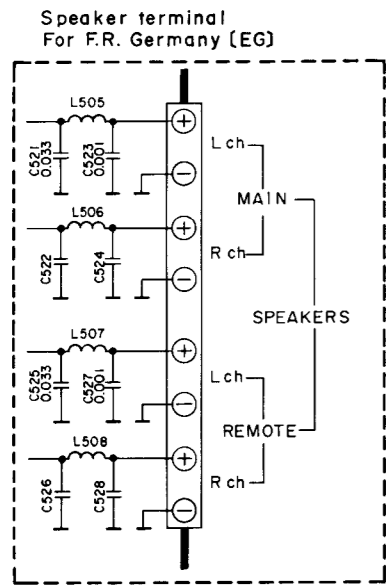


For other areas [XA]

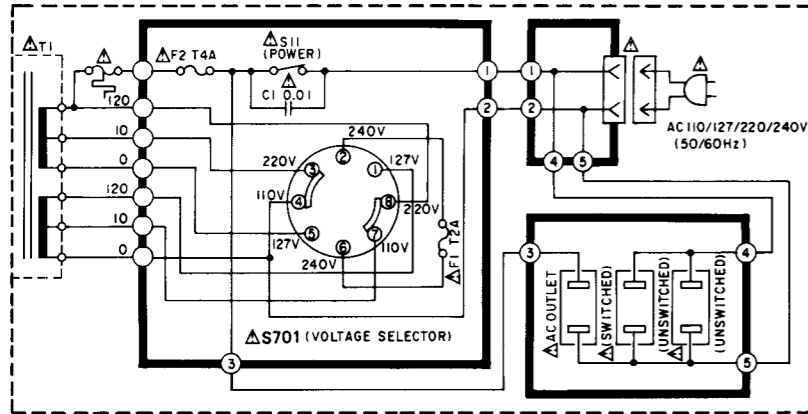

For F.R. Germany [EG]

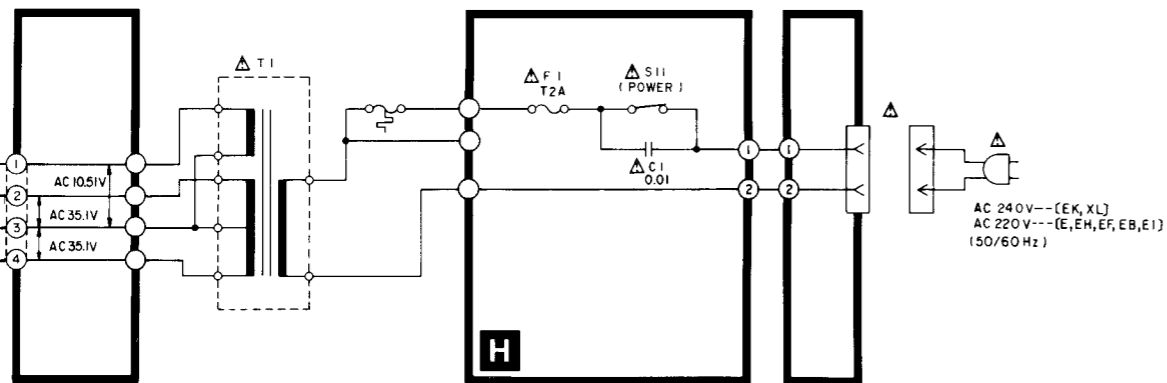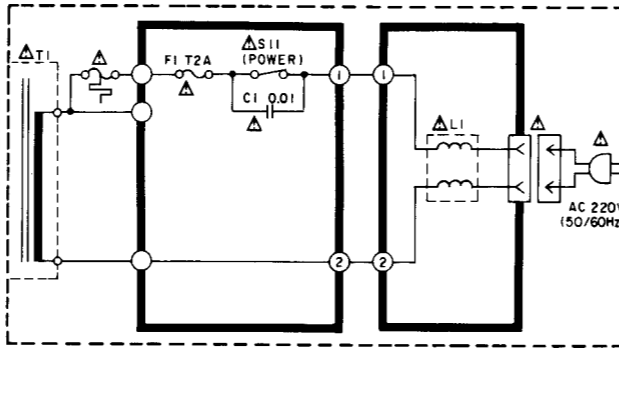

BLOCK DIAGRAM

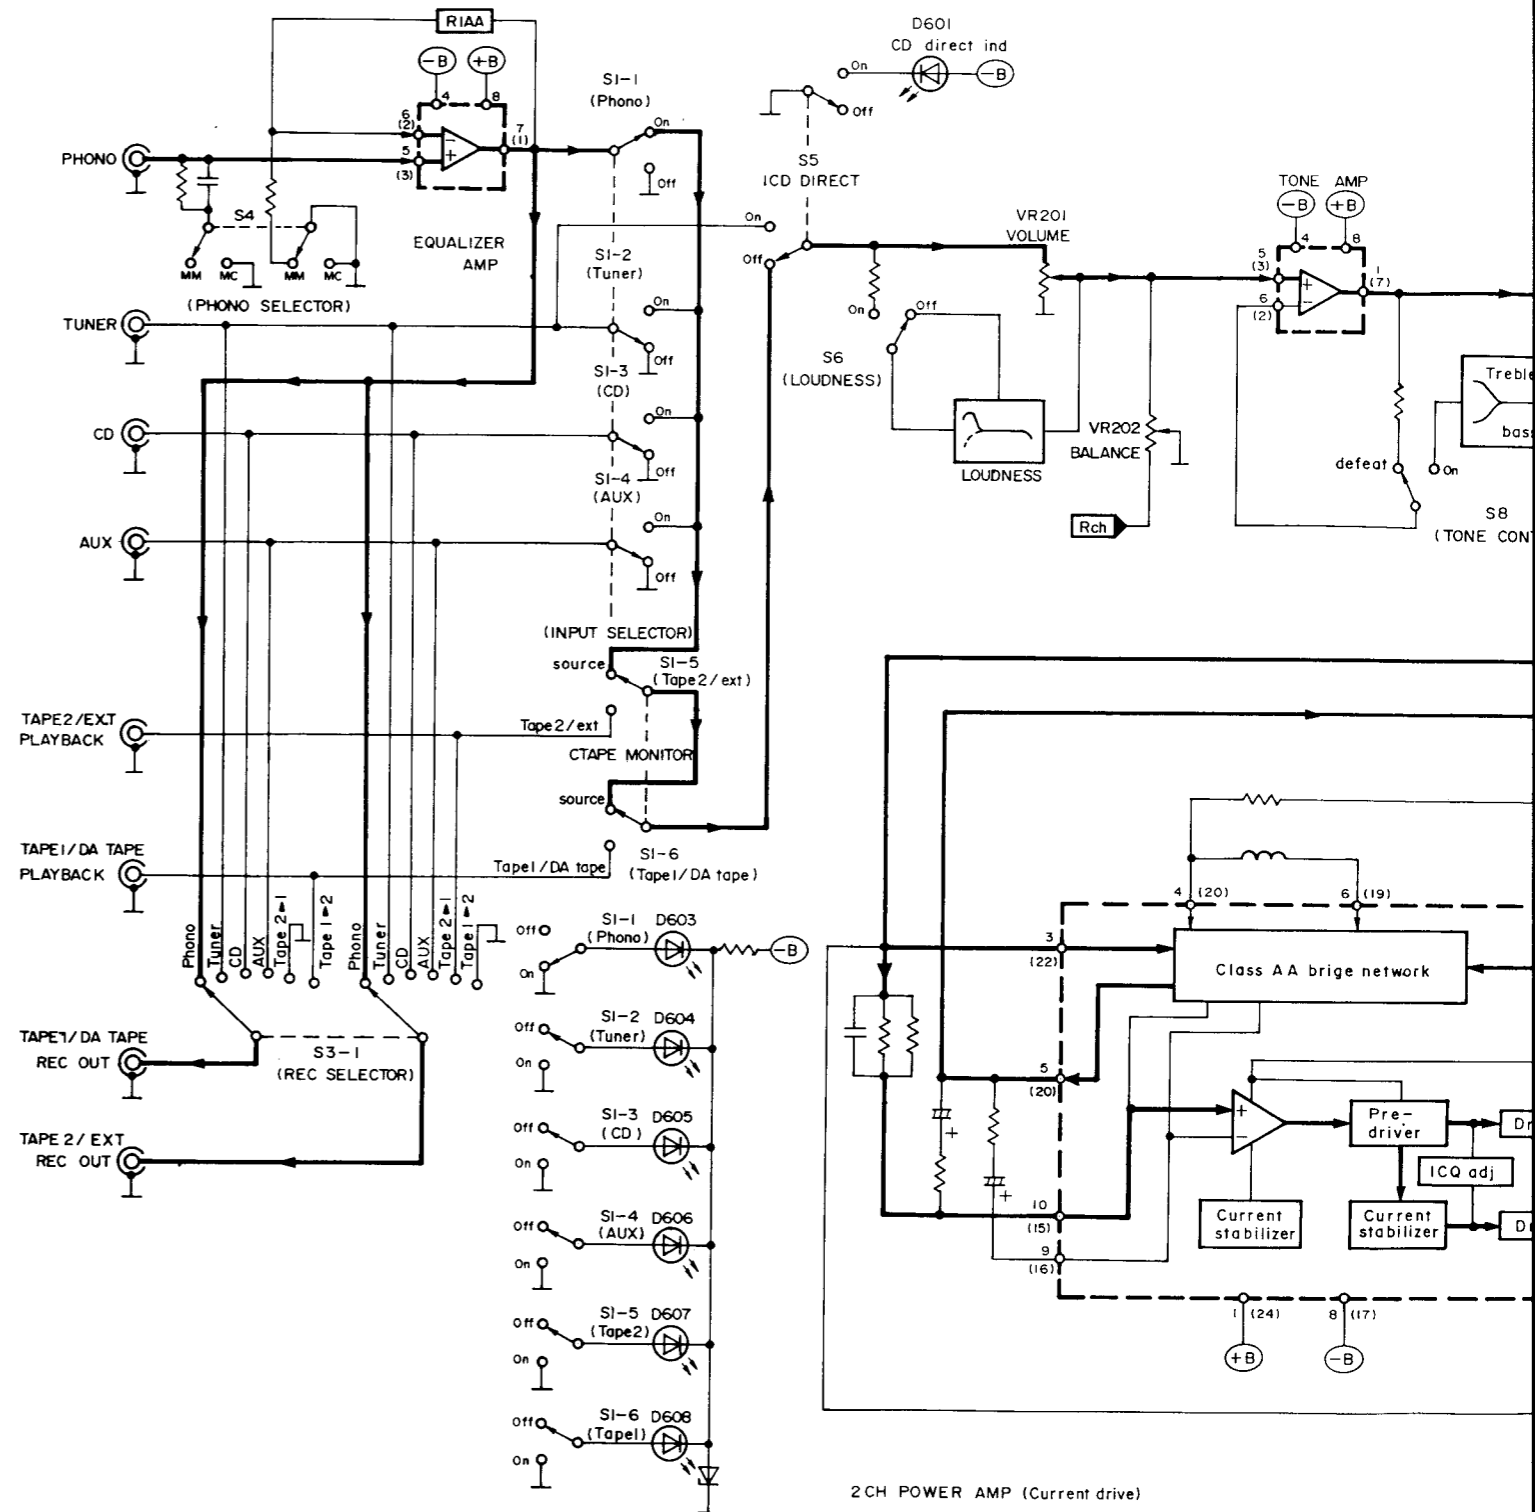

2 CH POWER AMP (Current drive)

() Indicates pin NO. of right channel.

REPLACEMENT PARTS LIST

Notes: * Important safety notice:

Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.

* Bracketed indications in Ref. No. columns specify the area.

Parts without these indications can be used for all areas.

Numbering System of Resistor

Example

ERD	25	F	J	102
Type	Wattage	Shape	Tolerance	Value
ERX	2	AN	J	471
Type	Wattage	Shape	Tolerance	Value
				47×10^1 (ohm)


Numbering System of Capacitor

Example

ECKD	1H	102	Z	F
Type	Voltage	Value	Tolerance	Peculiarity
ECEA	50	M		330
Type	Voltage	Peculiarity		Value
				(33×10^0) microfarad

Resistor Type	Wattage	Tolerance
ERD : Carbon	10 : 1/8W	J : $\pm 5\%$
ERG : Metal Oxide	12 : 1/2W	F : $\pm 1\%$
ERX : Metal Film	25 : 1/4W	G : $\pm 2\%$
ERQ : Fuse Type Metal	1A : 1W	K : $\pm 10\%$
ERD : L : Carbon (chip)	18 : 1/8W	
ERD : K : Metal Film (chip)	S2 : 1/4W	
ERC : Solid	S1 : 1/2W	
	2F : 1/4W	
	50 : 1/2W	
	2A : 2W	

Capacitor Type	Voltage	Tolerance
ECE : Electrolytic	0J : 6.3V	C : $\pm 0.25\mu\text{F}$
ECCD : Ceramic	1A : 10V	J : $\pm 5\%$
ECKD : Ceramic	1C : 16V	K : $\pm 10\%$
ECQM : Polyester	1E : 25V	Z : $+80\%$
	1H : 50V	-20%
ECQP : Polypropylene	1V : 35V	P : $+100\%$
	05 : 50V	-0%
ECCG : Ceramic	50 : 50V	M : $\pm 20\%$
ECEADDON : Non Polar Electrolytic	2H : 500V	
	2A : 100V	D : $\pm 0.5\mu\text{F}$
QCU : Ceramic (Chip Type)	1 : 100V	G : $\pm 2\%$
ECUX : Ceramic (Chip Type)	KC : 400V AC	
ECF : Semiconductor	KC : 125VAC (UL)	
	1J : 63V	
EECW : Liquid electrolyte double layer capacitor		

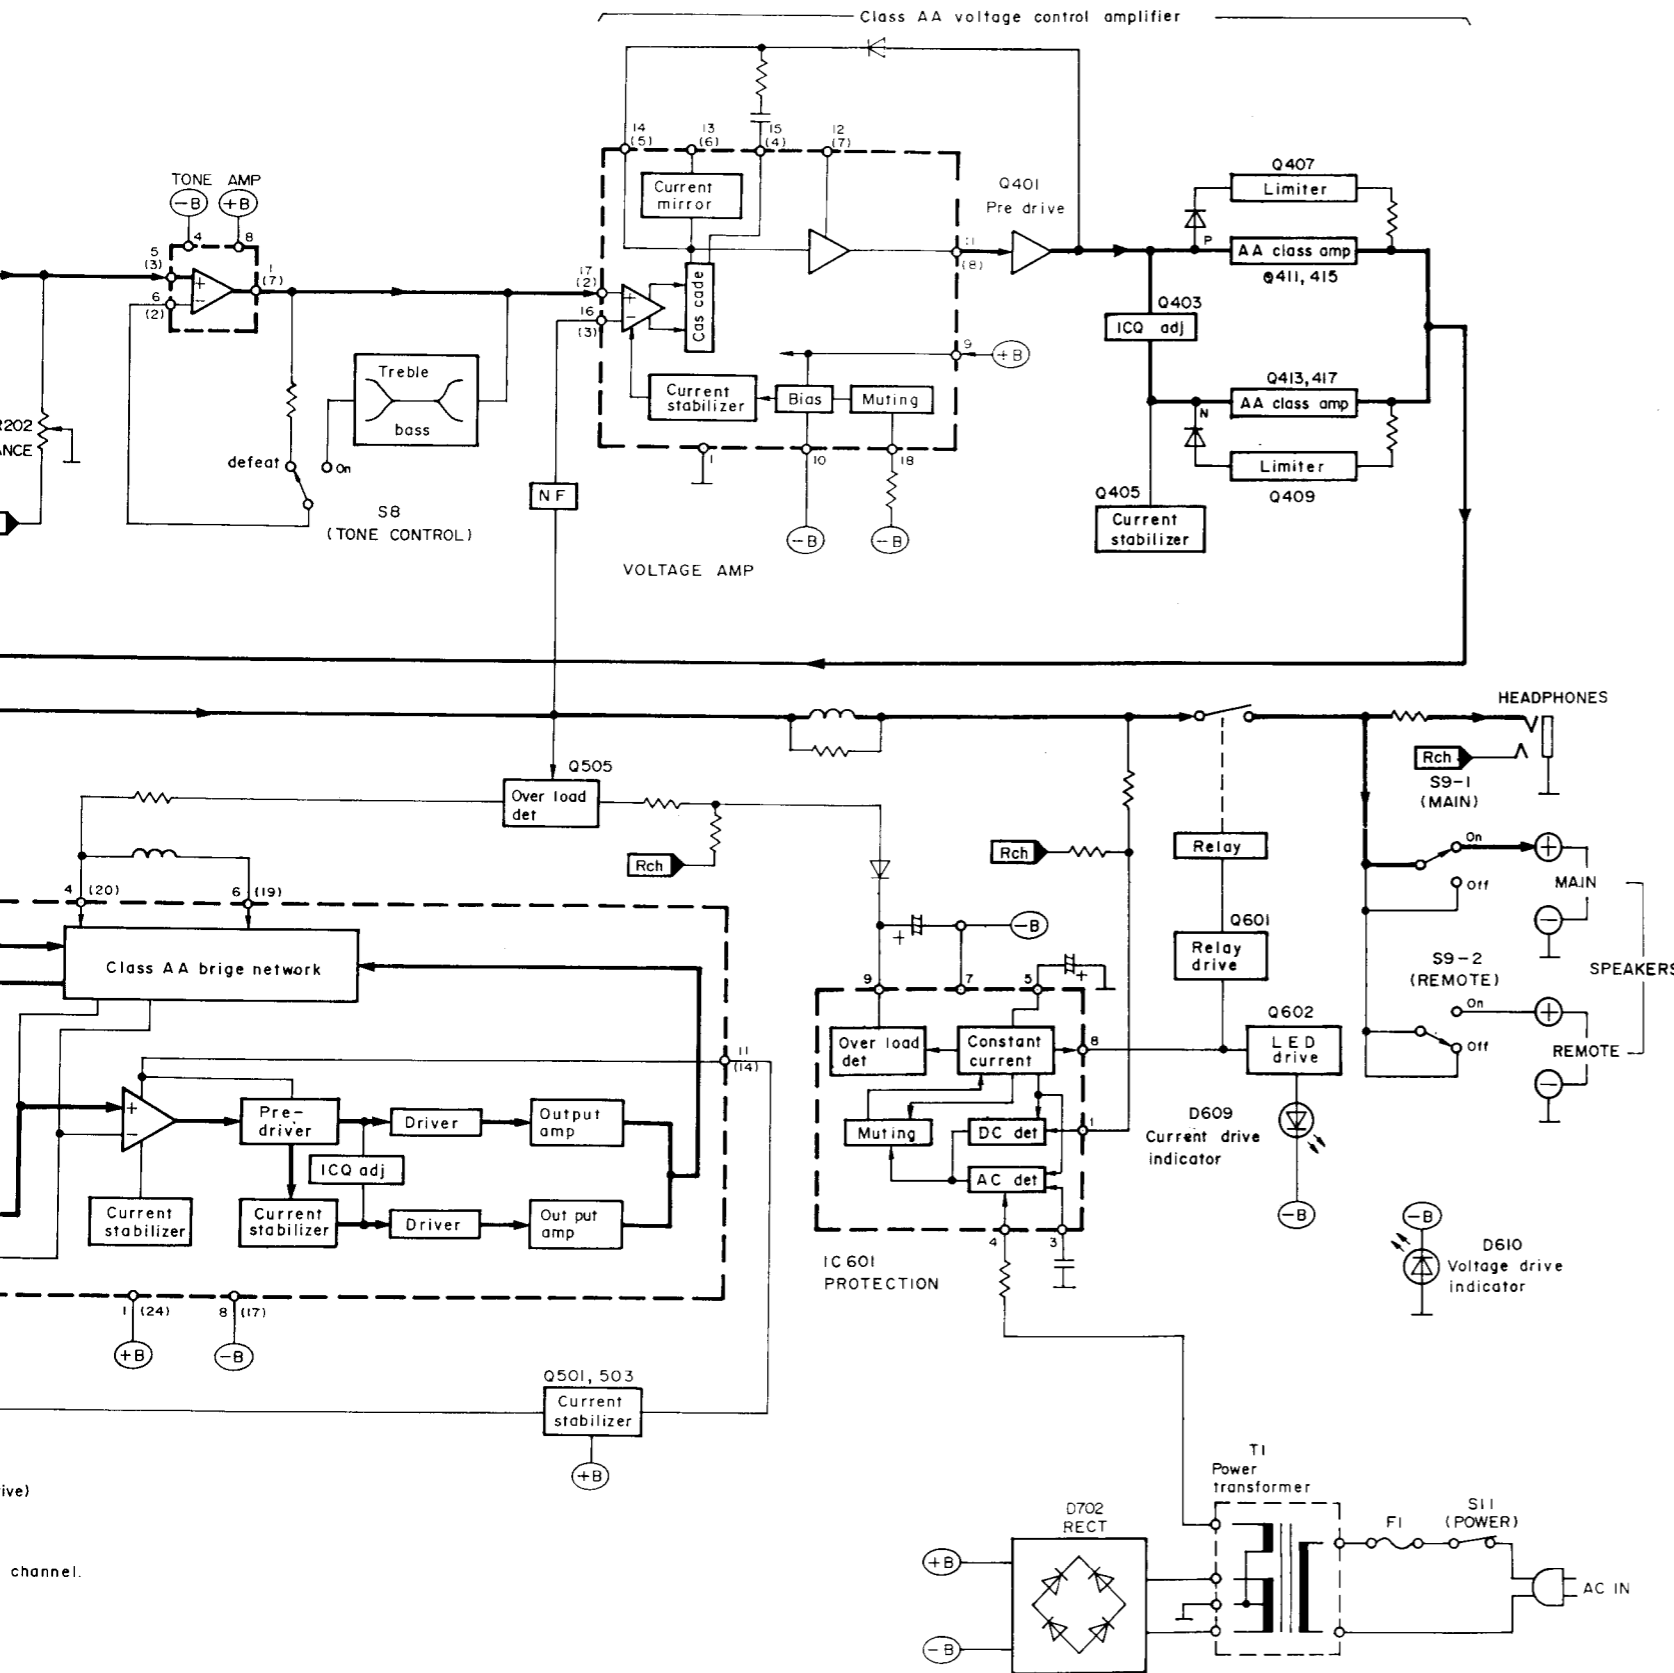

Ref. No.	Part No.	Part Code	Ref. No.	Part No.	Part Code	Ref. No.	Part No.	Part Code	
RESISTORS			R407, R408	FSR25TJ82T2		CAPACITORS			
R101, R102	ERDS2TJ102	001 152 2346 4	R409, R410	ERDS2TJ561	001 152 2364 2	C1	Δ	ECKDKC103PF2	001 103 3734 7
R103, R104	ERDS2TJ102	001 152 2346 4	R411, R412	ERD25FJ470	001 152 0309 7	(XA)			
R105, R106	ERDS2TJ274	001 152 2437 2	R415, R416	ERDS2TJ182	001 152 2352 6	C1		ECKWNS103ZVS	001 103 9317 6
R107, R108	ERDS2TJ221	001 152 2431 8	R417, R418	ERDS2TJ391	001 152 2360 6	(E, EG, EF)			
R109, R110	ERDS2TJ220	001 152 2430 9	R419, R420	ERD25FJ101	001 152 0214 3	(EH, EB, EI)			
R113, R114	ERDS2TJ563	001 152 2446 1	R421, R422	ERDS2TJ223	001 152 2432 7	(XL)			
R117, R118	ERDS2TJ151	001 152 2426 5	R423, R424	ERD25FJ821	001 152 0354 2	C103		ECKD1H102KB	001 103 1414 8
R119, R120	ERDS2TJ100	001 152 2420 1	R425, R426	ERDS2TJ223	001 152 2432 7	(EG)			
R123, R124	ERDS2TJ151	001 152 2426 5	R427, R428	ERD25FJ101	001 152 0214 3	C103		ECQM1H103JZ	001 106 0667 8
R125, R126	ERDS2TJ682	001 152 2365 1	R429, R430	ERD25FJ2R2	001 152 0251 8	(E, EK, EF)			
R127, R128	ERDS2TJ823	001 152 2456 9	R431, R432	ERD25FJ2R2	001 152 0251 8	(EH, EB, EI)			
R129, R130	ERDS2TJ334	001 152 2438 1	R433, R434	ERD25FJ101	001 152 0214 3	(XL, XA)			
R131, R132	ERDS2TJ561	001 152 2364 2	R435	ERDS2TJ103	001 152 2347 3	C104		ECKD1H102KB	001 103 1414 8
R201, R202	ERDS2TJ102	001 152 2346 4	R436	ERD25FJ470	001 152 0309 7	(EG)			
R203, R204	ERDS2TJ102	001 152 2346 4	R437	ERDS2TJ473	001 152 2363 3	C104		ECQM1H103JZ	001 106 0667 8
R205, R206	ERDS2TJ102	001 152 2346 4	R438, R439	ERD25FJ6R8	001 152 0335 5	(E, EK, EF)			
R207, R208	ERDS2TJ102	001 152 2346 4	R501, R502	ERDS2TKF4220	001 151 5927 2	(EH, EB, EI)			
R209, R210	ERDS2TJ102	001 152 2346 4	R505, R506	ERDS2TJ101	001 152 2421 0	(XL, XA)			
R211, R212	ERDS2TJ473	001 152 2363 3	R507, R508	ERDS2TJ101	001 152 2421 0	C105, C106		ECCD1H181K	001 103 0466 0
R213, R214	ERDS2TJ183	001 152 2429 2	R511, R512	ERDS2TJ271	001 152 0272 3	(E, EK, EF)			
R219, R220	FSR25TJ272T2		R513, R514	ERDS1FJ100	001 152 2612 5	(EH, EB, EI)			
R301, R302	FSR25TJ561T2		R515, R516	ERD25FJ100	001 152 0213 4	(XL, XA)			
R303, R304	ERDS2TJ823	001 152 2456 9	R517, R518	ERDS2TJ472	001 152 2362 4	C107, C108		ECEA0JU22	001 120 3161 5
R305, R306	ERDS2TJ224	001 152 2433 6	R519, R520	ERDS2TJ153	001 152 2351 7	C109, C110		ECKD1H471KB	001 103 1551 0
R307, R308	ERDS2TJ392	001 152 2439 0	R523, R524	ERG2SJ331	001 151 3570 9	(EG)			
R309, R310	ERDS2TJ223	001 152 2432 7	R601	ERDS2TJ391	001 152 2360 6	C111, C112		ECQM1H122JZ	001 106 0683 8
R311, R312	ERDS2TJ102	001 152 2346 4	R602	ERDS2TJ331	001 152 2356 2	C113, C114		ECQM1H103JZ	001 106 0667 8
R313, R314	ERDS2TJ562	001 152 2445 2	R604	ERDS2TJ471	001 152 2361 5	C115, C116		ECQM1H393JZ	001 106 0794 2
R315, R316	FSR25TJ392T2		R605	ERDS2TJ331	001 152 2356 2	C117, C118		ECEA1HND101S	001 120 0354 0
R317, R318	FSR25TJ223T2		R607, R608	ERDS2TJ473	001 152 2363 3	C119, C120		ECQM1H472JZ	001 106 0801 0
R319, R320	ERDS2TJ183	001 152 2429 2	R609	ERDS2TJ153	001 152 2351 7	C121, C122		ECKD1H103PF	001 103 1449 7
R401, R402	ERDS2TJ122	001 152 2423 8	R610	ERDS2TJ124	001 152 2425 6	C123, C124		ECEA1HPS3R3	001 120 6064 3
R403, R404	ERDS2TJ823	001 152 2456 9	R611	ERDS2TJ472	001 152 2362 4	C203, C204		ECCD1H101K	001 103 0341 2
R405, R406	FSR25TJ272T2		R612	ERG2SJ821	001 151 4940 9	(EG)			
			R613	ERDS1FJ180	001 152 2620 5	C205, C206		ECCD1H101K	001 103 0341 2
			R614	ERDS2TJ183	001 152 2429 2	(EG)			
			R701, R702	ERDS2TJ153	001 152 2351 7	C207, C208		ECCD1H101K	001 103 0341 2
			R703, R704	ERD25FJ821	001 152 0354 2	(EG)			
			R705	ERDS2TJ122	001 152 2423 8	C209, C210		ECCD1H101K	001 103 0341 2
			R707, R708	ERDS1FJ822	001 152 5897 6	(EG)			

A
B
C
D
E
F

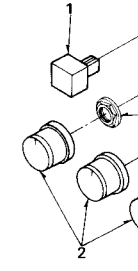


Table with 9 columns: Ref. No., Part No., Part Code, Ref. No., Part No., Part Code, Ref. No., Part No., Part Code. Contains parts like ECQM1H563JZ, ECQA1HPS3R3, ECD1H101K, etc.

Table with 9 columns: Ref. No., Part No., Part Code, Description, Ref. No., Part No., Part Code, Description. Includes sections for CABINET AND CHASSIS, INTEGRATED CIRCUITS, COILS AND TRANSFORMERS, TRANSISTORS, DIODES, FUSES, SWITCHES, RELAYS, and PACKINGS.

Table with 8 columns: Ref. No., Part No., Part Code, Description, Ref. No., Part No., Part Code, Description. Includes sections for INTEGRATED CIRCUITS, COILS AND TRANSFORMERS, TRANSISTORS, DIODES, FUSES, SWITCHES, RELAYS, and THERMISTORS AND VARISTORS.

EXPLODED VIEW

