


Service Manual

Stereo Integrated Amplifier

Amplifier
SU-V60

ORDER NO. HAD8603408CO
A2

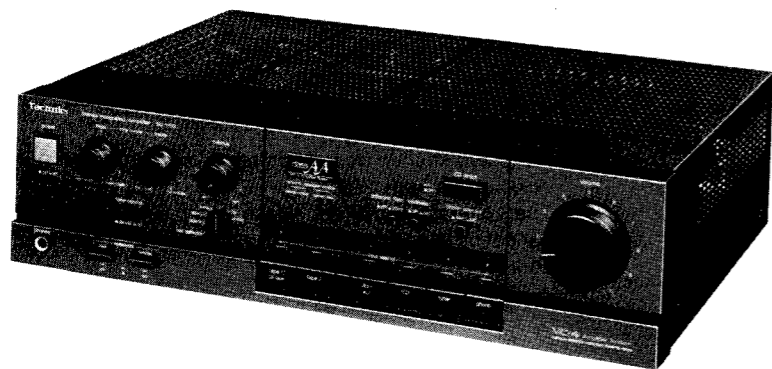

Color
(K) Black Type
(S) Silver Type

Color	Area
(K)	[M] U.S.A.
(K)	[MC] Canada
(K)(S)	[E] Continental Europe
(K)(S)	[EH] Holland
(K)(S)	[EB] Belgium
(K)(S)	[EF] France
(K)(S)	[EK] United Kingdom
(K)(S)	[EGA] . . . F.R. Germany
(K)(S)	[Ei] Italy
(K)(S)	[XL] Australia
(K)(S)	[XA] Asia, Latin America, Middle Near East, Africa & Oceania

SPECIFICATIONS

(* Refer to next page, specification of DIN 45 500)

(IHF '78)

■ AMPLIFIER SECTION

Rated minimum sine wave RMS power output
20 Hz~20 kHz both channels driven
0.002% total harmonic distortion
90W per channel (8 ohms)

1 kHz continuous power output
both channels driven
0.0009% total harmonic distortion
90W per channel (8 ohms)

0.005% total harmonic distortion
100W per channel (4 ohms)

Dynamic headroom
1 dB (8 ohms)
1.4 dB (4 ohms)

Headphones output impedance
(330 ohms)

Total harmonic distortion
rated power at 20 Hz~20 kHz 0.002% (8 ohms)
rated power at 1 kHz 0.0009% (8 ohms)
0.005% (4 ohms)

half power at 20 Hz~20 kHz 0.002% (8 ohms)
half power at 1 kHz 0.0008% (8 ohms)
0.002% (4 ohms)

SMPTE intermodulation distortion 0.005% (8 ohms)

Frequency response
PHONO RIAA standard curve ±0.8 dB
TUNER, CD, AV/AUX, TAPE 1/DA TAPE
TAPE 2 +0 dB, -0.2 dB (20 Hz~20 kHz)
5 Hz~120 kHz, -3 dB

Input sensitivity
PHONO MM 0.25 mV (2.5 mV, IHF '66)
MC 17 μV (170 μV, IHF '66)
TUNER, CD, AV/AUX
TAPE 1/DA TAPE, TAPE 2 15 mV (150 mV, IHF '66)

Maximum input voltage
PHONO MM 160 mV
MC 12 mV

S/N (IHF, A)
PHONO MM 76 dB (86 dB, IHF '66)
MC 72 dB (68 dB, IHF '66)
(250 μV)

TUNER, CD, AV/AUX, TAPE 1/DA TAPE
TAPE 2 80 dB (100 dB, IHF '66)

Input impedance
PHONO MM 47 kilohms
MC 220 ohms

TUNER, CD, AV/AUX, TAPE 1/DA TAPE
TAPE 2 22 kilohms

Tone controls
BASS 50 Hz, +10 dB~-10 dB
TREBLE 20 kHz, +10 dB~-10 dB

Subsonic filter 20 Hz, -6 dB/oct.

Loudness control (volume at -30 dB) 50 Hz, +9 dB

Output voltage
TAPE 1, 2 REC OUT 150 mV

Low frequency damping factor
60 (8 ohms)
30 (4 ohms)

Load impedance
MAIN or REMOTE 4~16 ohms
MAIN and REMOTE 8~16 ohms

■ GENERAL

Power consumption 380W, 440 VA
Power supply AC 120V, 60 Hz
Dimensions (W×H×D) 430 × 116 × 340 mm
(16-15/16" × 4-9/16" × 13-6/16")
Weight 8.5 kg (18.8 lb.)

Note:
Total harmonic distortion is measured by the digital spectrum analyzer (H.P. 3045 system).

Specifications are subject to change without notice for further improvement.

Matsushita Service Company
50 Meadowland Parkway,
Secaucus, New Jersey 07094

Panasonic Hawaii, Inc.
91-238 Kauhū St., Ewa Beach
P.O. Box 774
Honolulu, Hawaii 96808-0774

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico, Inc.
Ave. 65 De Infanteria, KM 9.7
Victoria, Industrial Park
Carolina, Puerto Rico 00630

Matsushita Electric
of Canada Limited
5770 Ambler Drive, Mississauga,
Ontario, L4W 2T3

SU-V60

■ SPECIFICATIONS (DIN 45 500)

■ AMPLIFIER SECTION

20 Hz~20 kHz continuous power output
both channels driven 2 × 90W (8Ω)

1 kHz continuous power output
both channels driven 2 × 120W (4Ω)

Total harmonic distortion
rated power at 20 Hz~20 kHz 0.002% (8Ω)
rated power at 1 kHz 0.0009% (8Ω)
0.005% (4Ω)

half power at 20 Hz~20 kHz 0.002% (8Ω)
half power at 1 kHz 0.002% (4Ω)
0.0008% (8Ω)

Intermodulation distortion
rated power at 250 Hz: 8 kHz=4:1, 8Ω 0.005%
rated power at 60 Hz: 7 kHz=4:1, SMPTE, 8Ω 0.005%

Power bandwidth
both channels driven, -3 dB 5 Hz~60 kHz (8Ω, 0.03%)

Residual hum and noise 0.8 mV

Damping factor 30 (4Ω), 60 (8Ω)

Input sensitivity and impedance
PHONO MM 2.5 mV/47kΩ
MC 170 μV/220Ω

TUNER, CD, AV/AUX, TAPE 1/DA TAPE
TAPE 2 150 mV/22kΩ

PHONO maximum input voltage (1 kHz, RMS)
MM 160 mV
MC 12 mV

S/N
rated power (4Ω)
PHONO MM 78 dB (86 dB, IHF, A)
MC 65 dB (68 dB, IHF, A)

TUNER, CD, AV/AUX, TAPE 1/DA TAPE
TAPE 2 92 dB (IHF, A: 100 dB)

-26 dB power (4Ω)
PHONO MM 69 dB
MC 65 dB

TUNER, CD, AV/AUX, TAPE 1/DA TAPE
TAPE 2 70 dB


■ SAFETY PRECAUTION (This "safety precaution" is applied only in U.S.A.)

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields, etc.
5. Before returning the serviced equipment to the customer, be sure to make the following insulation resistance test to prevent the customer from being exposed to a shock hazard.

● INSULATION RESISTANCE TEST

1. Unplug the power cord and short the two prongs of the plug with a jumper wire.
2. Turn on the power switch.
3. Measure the resistance value with ohmmeter between the jumpered AC plug and each exposed metal cabinet part, such as screwheads antenna, control shafts, handle brackets, etc. Equipment with antenna terminals should read between 3MΩ and 5.2MΩ to all exposed parts. (Fig. A) Equipment without antenna terminals should read approximately infinity to all exposed parts. (Fig. B)

Note: Some exposed parts may be isolated from the chassis by design. These will read infinity.

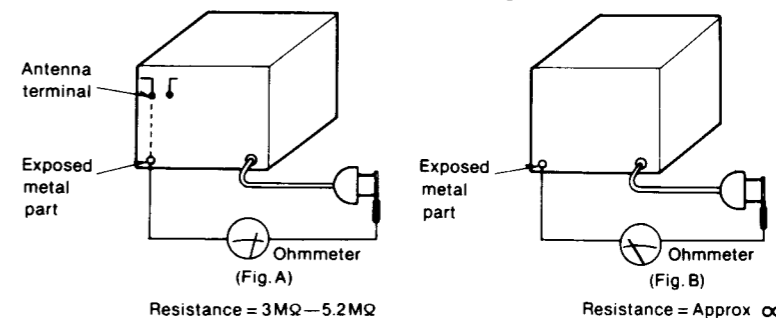

4. If the measurement is outside the specified limits, there is a possibility of a shock hazard. The equipment should be repaired and rechecked before it is returned to the customer.


Technics

SU-V60

CONTENTS

SAFETY PRECAUTION	Page 2	PRINTED CIRCUIT BOARDS	Page 9 ~ 14
LOCATION OF CONTROLS	3	CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM	15 ~ 16
PROTECTION CIRCUITRY	4	SCHEMATIC DIAGRAM	17 ~ 21
BEFORE REPAIR AND ADJUSTMENT	4	REPLACEMENT PARTS LIST	22 ~ 23
DISASSEMBLY INSTRUCTIONS	5, 6	EXPLODED VIEW	24, 25
MEASUREMENTS AND ADJUSTMENTS	6		
BLOCK DIAGRAM	7, 8		

LOCATION OF CONTROLS

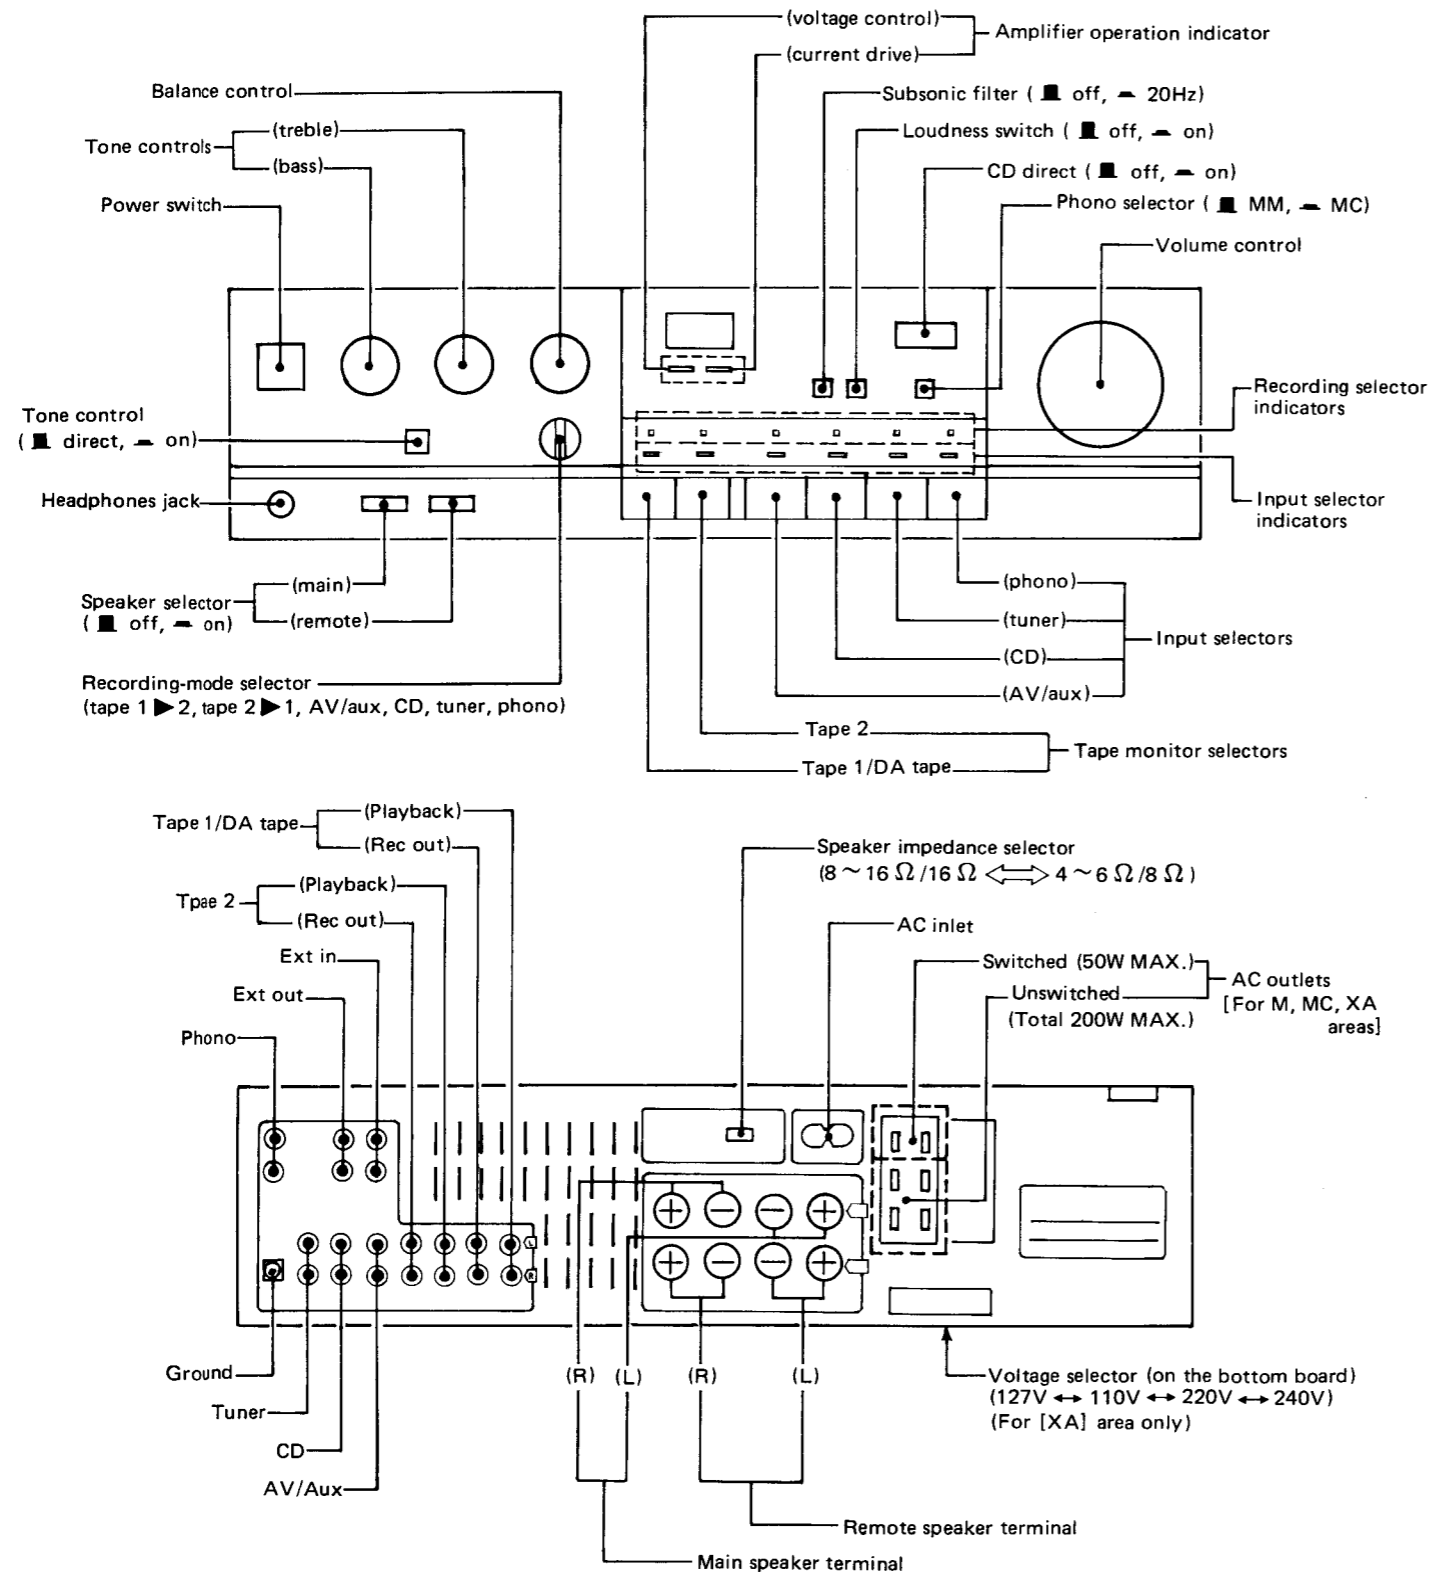

- The power supply for this unit varies depending upon the areas. Also, the parts used for power supply are different. So, refer to the circuit diagram and replacement parts list.
- * [M] [MC] area is provided with AC outlets.
- * 120V (60Hz) for U.S.A.
- * [XA] area is provided with voltage selector and AC outlets.
- * 240V (50/60Hz) for Australia and United Kingdom.
- * 220V (50/60Hz) for Continental Europe.
- * 127V/110V/220V/240V (50/60Hz) for other [XA] area.
- * Phono input capacitance is about 150pF.

Suggestions

- If noise is very annoying while listening to an FM or AM broadcast, switch OFF the video disc player, compact-disc player and turntable.
- Switch OFF the video disc player power if noise is excessive while listening to an audio tape, compact disc or regular phono disc.

Notes:

- To record sounds from a compact disc, press the input selector marked "CD". The compact-disc-direct switch is for listening only; it cannot be used to select the compact disc as a recording source.

PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following conditions is noticed:

- No sound is heard when the power is switched ON.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlined below:

1. Switch OFF the power.
2. Determine the cause of the problem and correct it.
3. Switch ON the power once again.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first switched OFF and then ON again.

BEFORE REPAIR AND ADJUSTMENT

- (1) Turn off the power supply. Using a 10Ω, 5W resistor, shortcircuit both ends of power supply capacitors (C503, C504, 6800μF) in order to discharge the voltage.
- (2) Before turning on the power switch of the set . . .
 - A. Connect the voltage controller to the primary side.
 - B. Connect the AC ampere meter to the primary side or connect the DC voltage meter to the "±B" circuit of the secondary side.
 - C. Turn the VR of ICQ (VR401 and VR402) to minimum (counterclockwise).
 - D. After setting the output to zero of the voltage controller, turn on the power switch of the set. And increase the output of voltage controller gradually. Then, check carefully whether the current value of primary side become more than followings value or whether the DC voltage of secondary side is increasing slowly.
 - E. If the value of current is increasing unusually or the DC voltage is not increasing, lower the output level of voltage controller immediately.
 - F. Check the transistors of voltage amplifier and current amplifier IC501.
 - G. After repairing, adjust the ICQ.
 - The current value of the primary side at no signal. (Confirm the power supply voltage of each area and provided voltage of the set.)

Power supply voltage	AC110V	AC120V	AC127V	AC220V	AC240V
Consumed current 50/60Hz	280 ~ 560mA	260 ~ 520mA	260 ~ 520mA	140 ~ 280mA	130 ~ 260mA

DISASSEMBLY INSTRUCTIONS

Ref. No. 1	How to remove the front panel
Procedure 1	<ol style="list-style-type: none"> Remove the connection rod. Remove the 5 knobs (1 ~ 5). Remove the 5 nuts (6 ~ 10). Remove the 4 screws (11 ~ 14). Remove the connector (J102 ~ J105, J118, J119). Remove the 1 lock pin (15). Remove the "Rec-select" switch (16). <p>● How to remove the "Rec-select" switch Pushing the rec switch, shift it up as in Fig. 1.</p> <p>● How to fit the rec switch (1) Shift the switch contact inside. (2) Turn the "Rec-select" switch (selector knob) counterclockwise. (3) Let the "Rec-select" switch claw change with the switch, and shift the "Rec-select" switch down while pushing in.</p>

Ref. No. 2	How to remove the P.C.B.
Procedure 1 → 2	<ol style="list-style-type: none"> Push the 9 tabs (1 ~ 9). Remove the tone control P.C.B. Remove the 3 screws (10 ~ 12). Remove the LED P.C.B. Remove the 1 screw (13). Push the 2 tabs (14, 15). Remove the headphones P.C.B.


Ref. No. 3	How to remove the main P.C.B.
<ol style="list-style-type: none"> Remove the 6 screws (1 ~ 6). Cut the clumper (7). Remove the 6 screws (8 ~ 13). Remove the main P.C.B. 	

MEASUREMENTS AND ADJUSTMENTS



- Control positions and equipment used.
- Volume knob ∞ (Minimum)
 - Main speaker selector off
 - Remote speaker selector off
 - Speaker impedance switch 8Ω ~ 16Ω
 - DC electronic voltmeter (EVM)

IDLING (ICQ) ADJUSTMENT

- Test equipment connection is shown in figure. Connect the DC EVM. on both channels.
- Turn the ICQ control volume (VR401, VR402) counter-clockwise.
- Turn ON the set when it is cold, and 15 sec. later, adjust VR401 and VR402 so that the voltage is 20mV. Also, check that the voltage is 18 - 47mV (standard: 40mV) after lapse of 10 - 15 minutes. (Below 50mV after lapse of 60 min.).

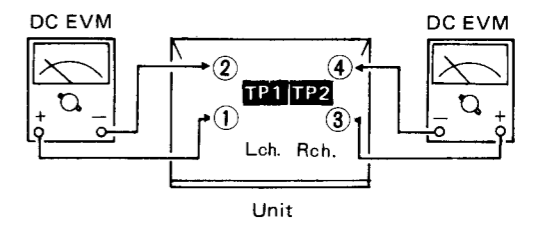


Adjustment points

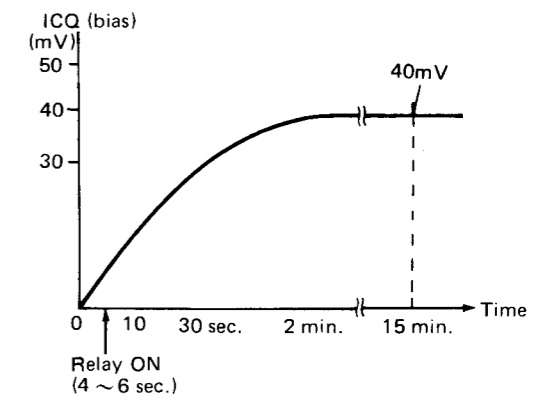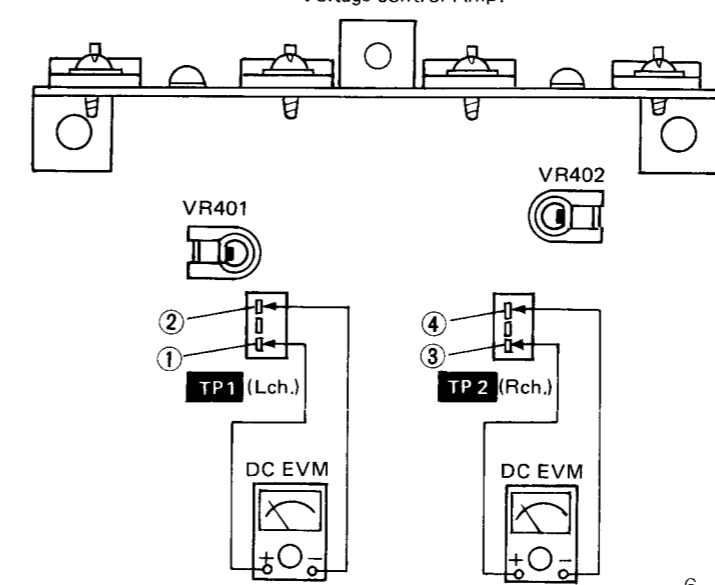

BLOCK






- PHONO
- TUNER
- CD
- AV/AUX
- TAPE 1 PLAYBACK
- TAPE 2 PLAYBACK
- TAPE 1 REC OUT
- TAPE 2 REC OUT





Terminal

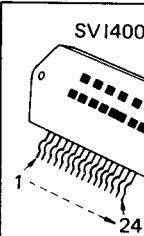


PRINTED CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM


A
B
C
D
E
F

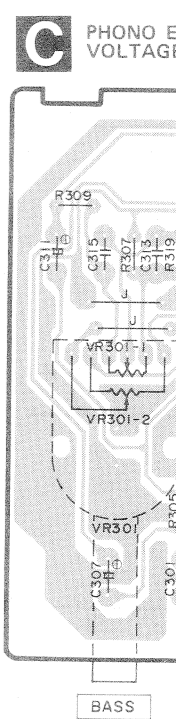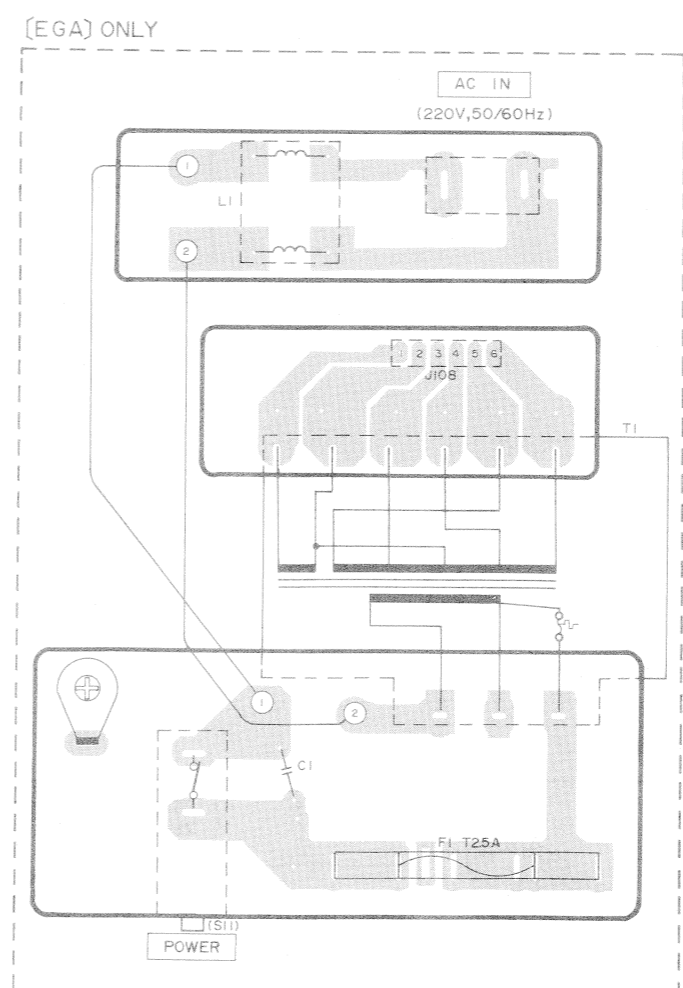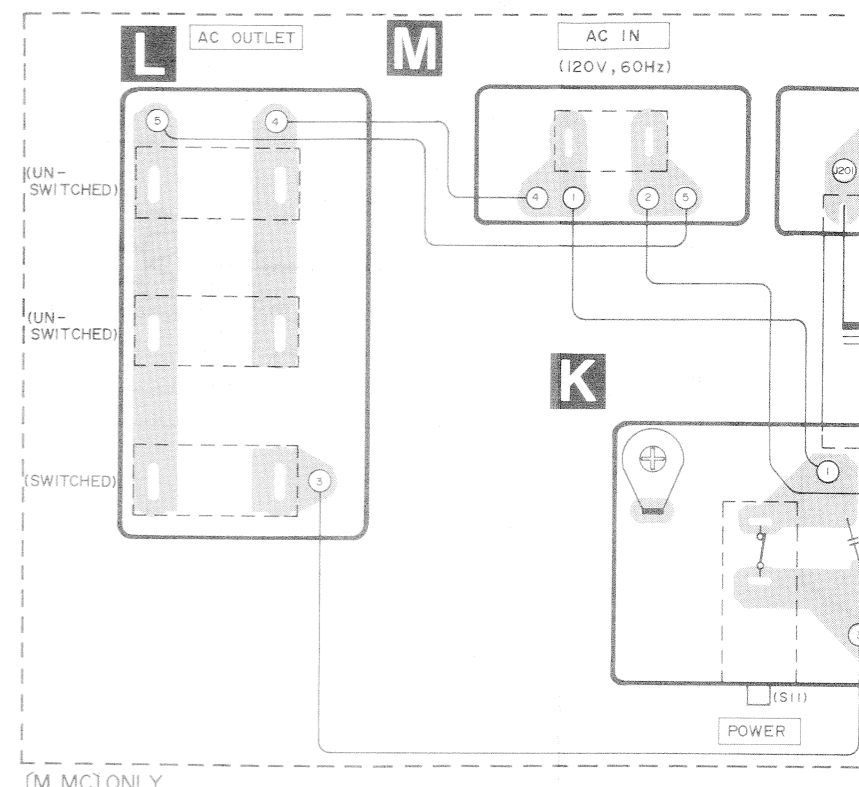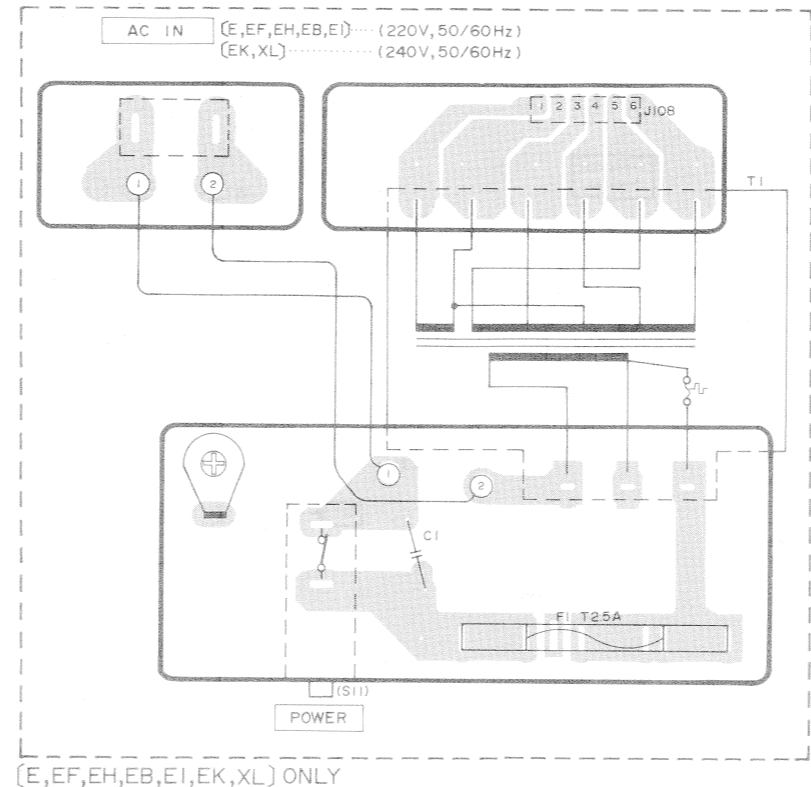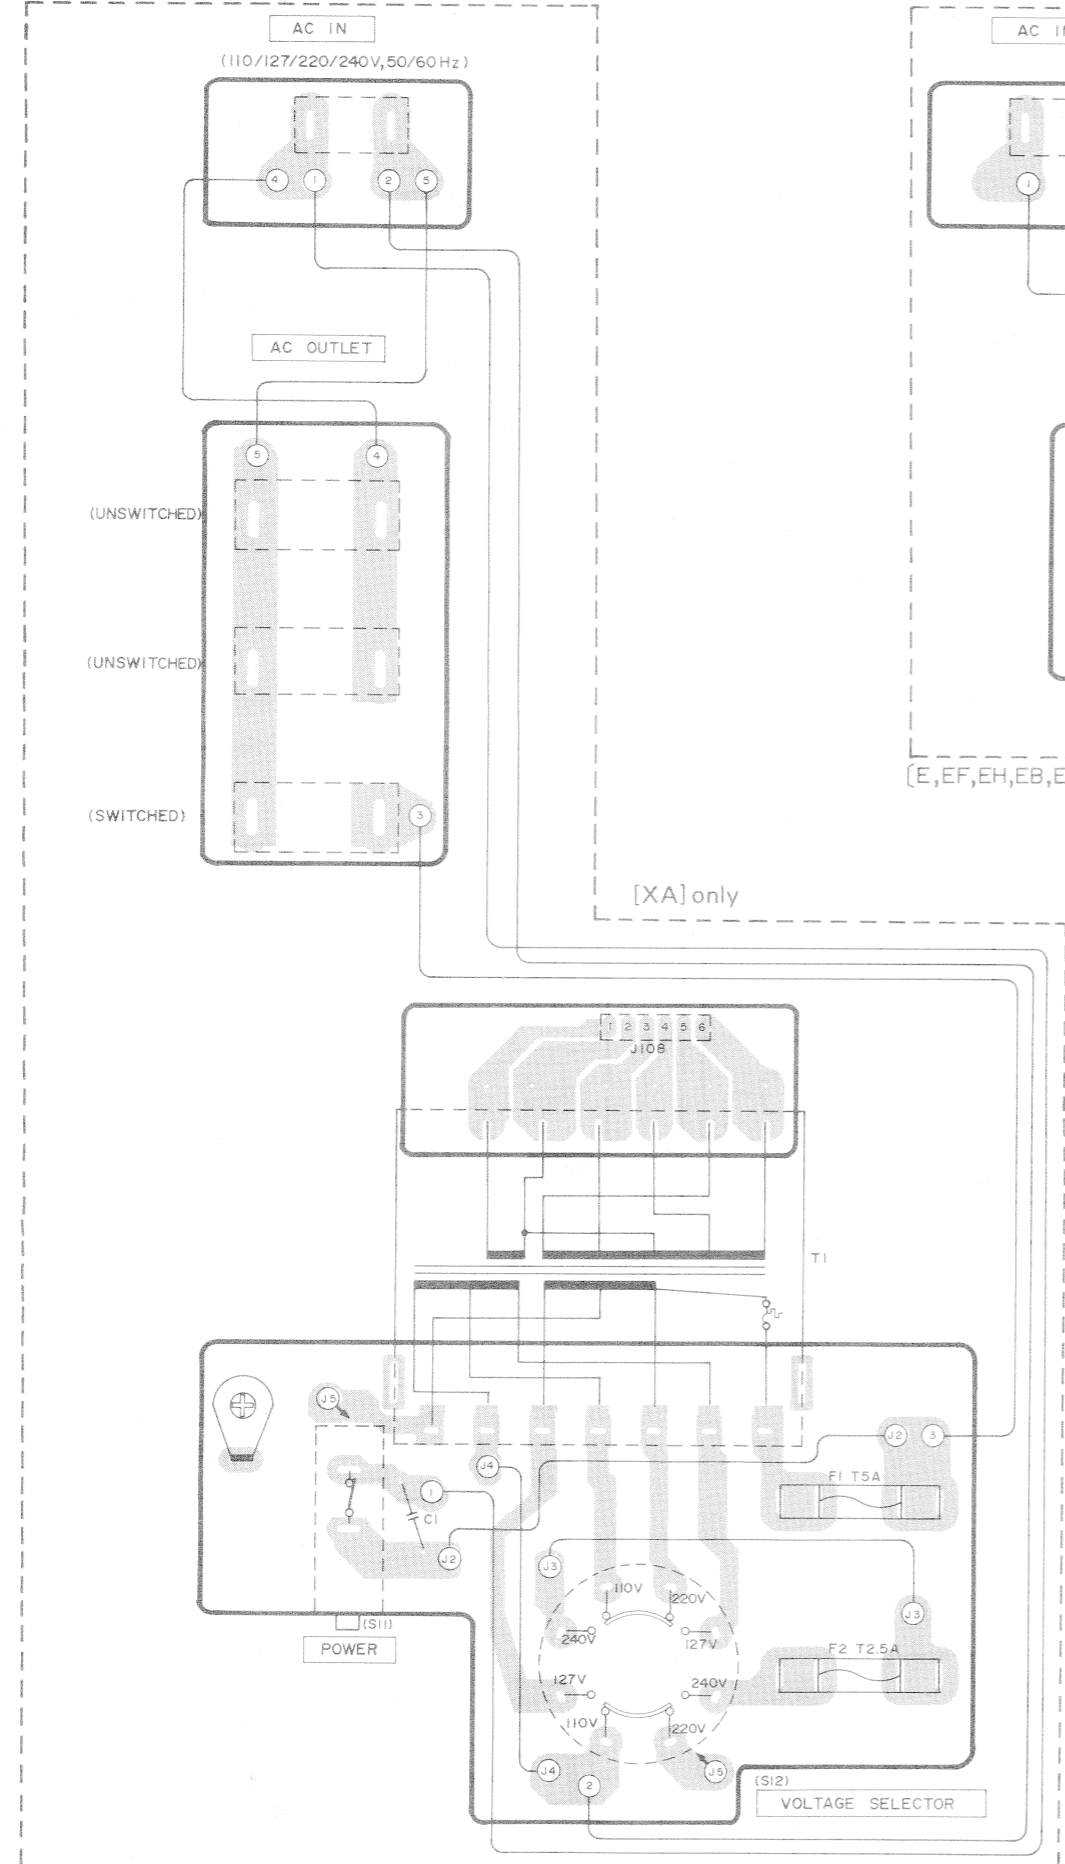

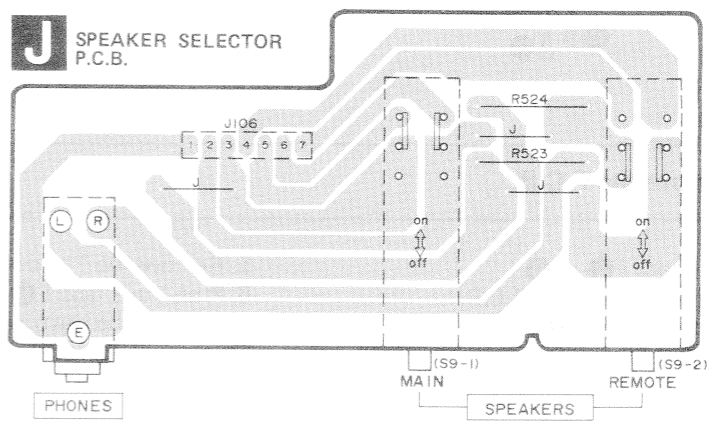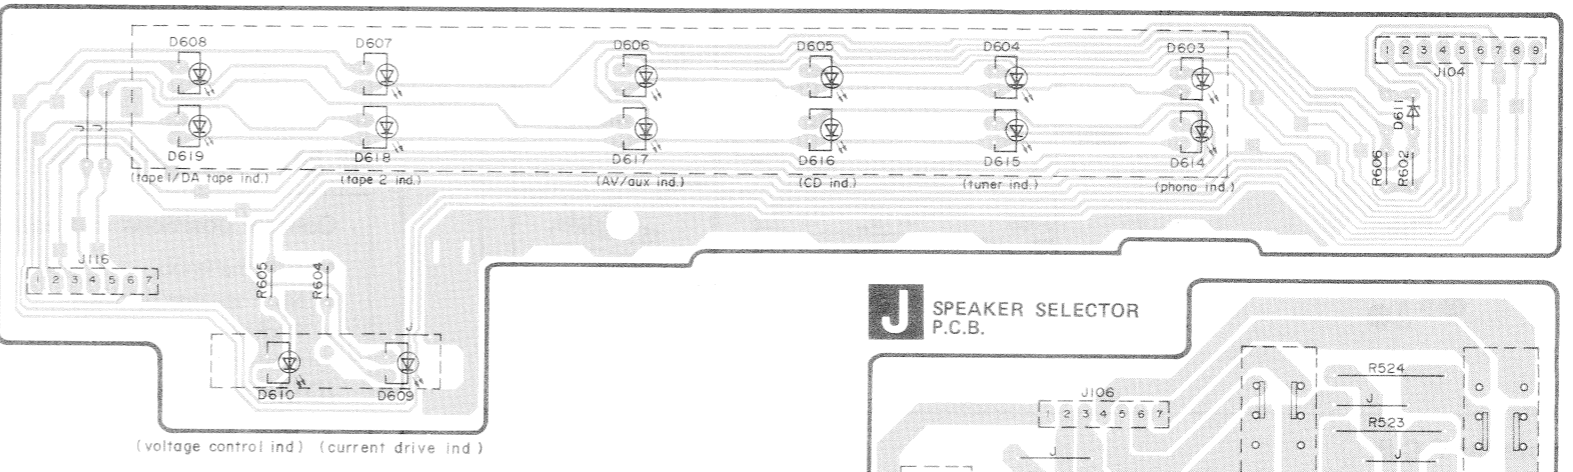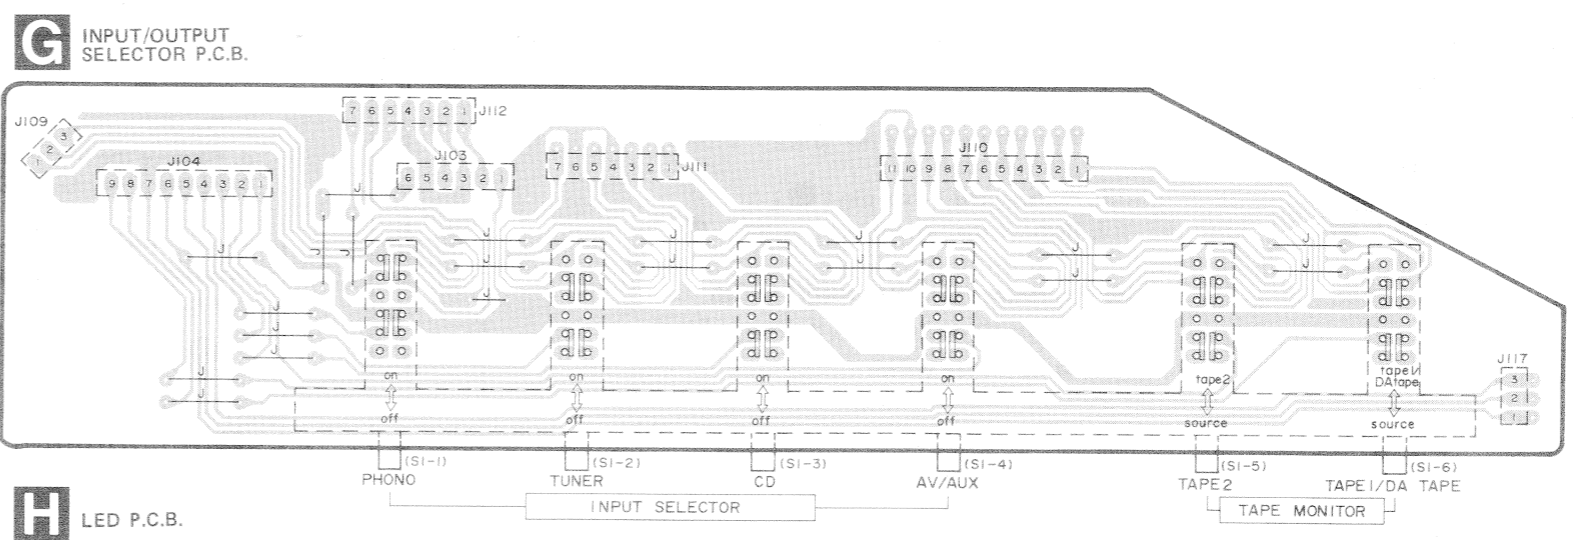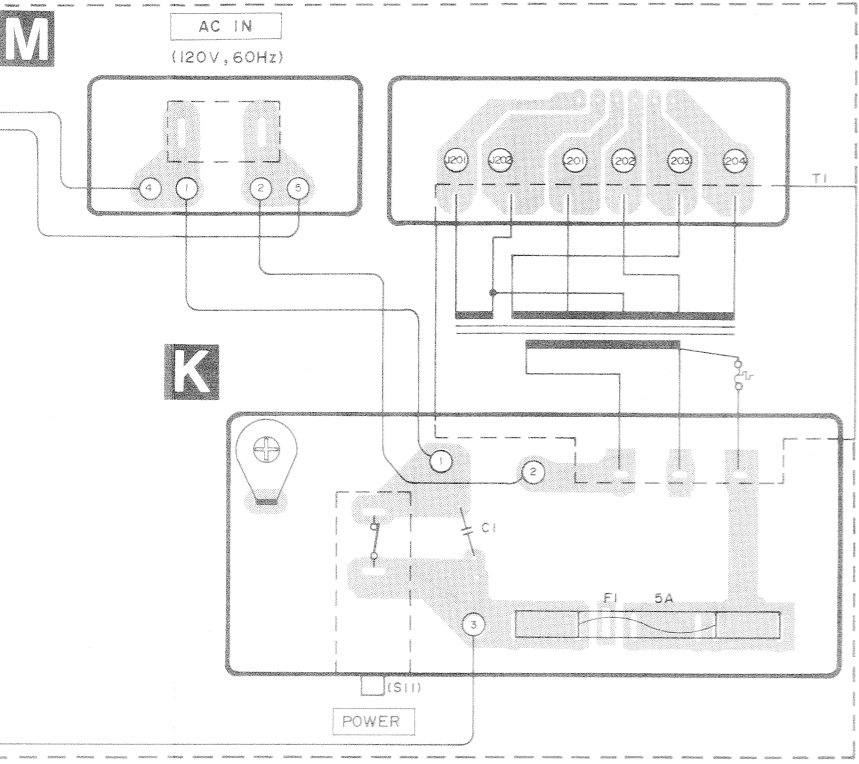

C PHONO EQUALIZER/ TONE CONTROL/ VOLTAGE CONTROL AMP. P.C.B.

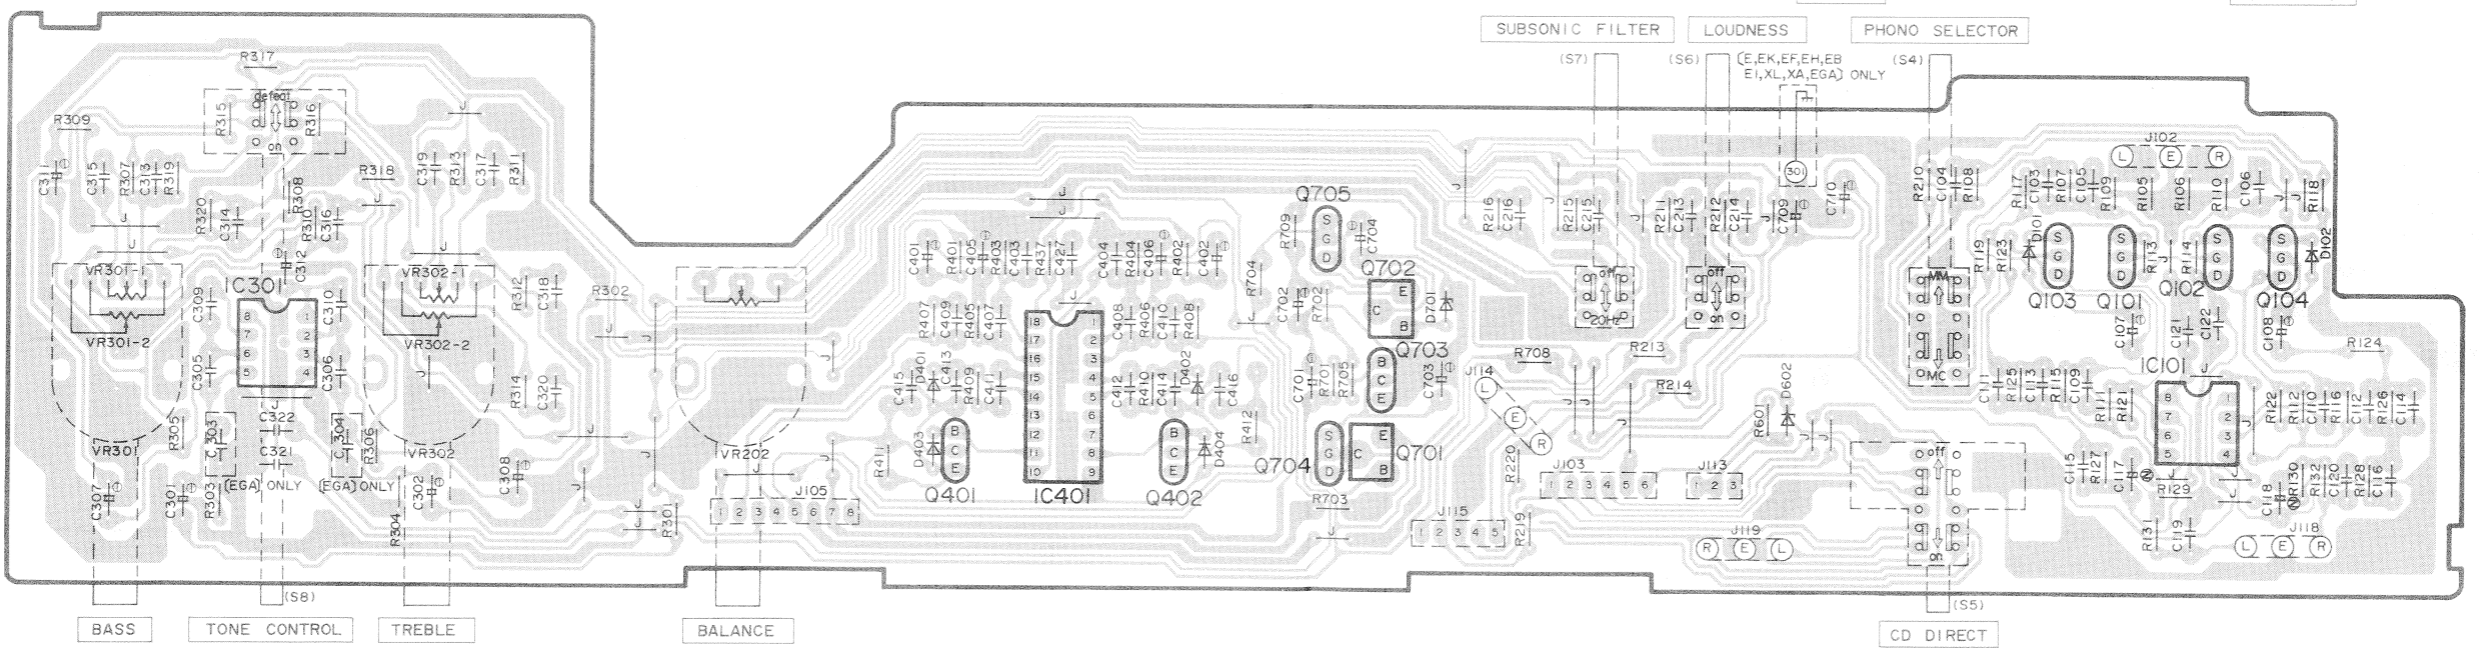

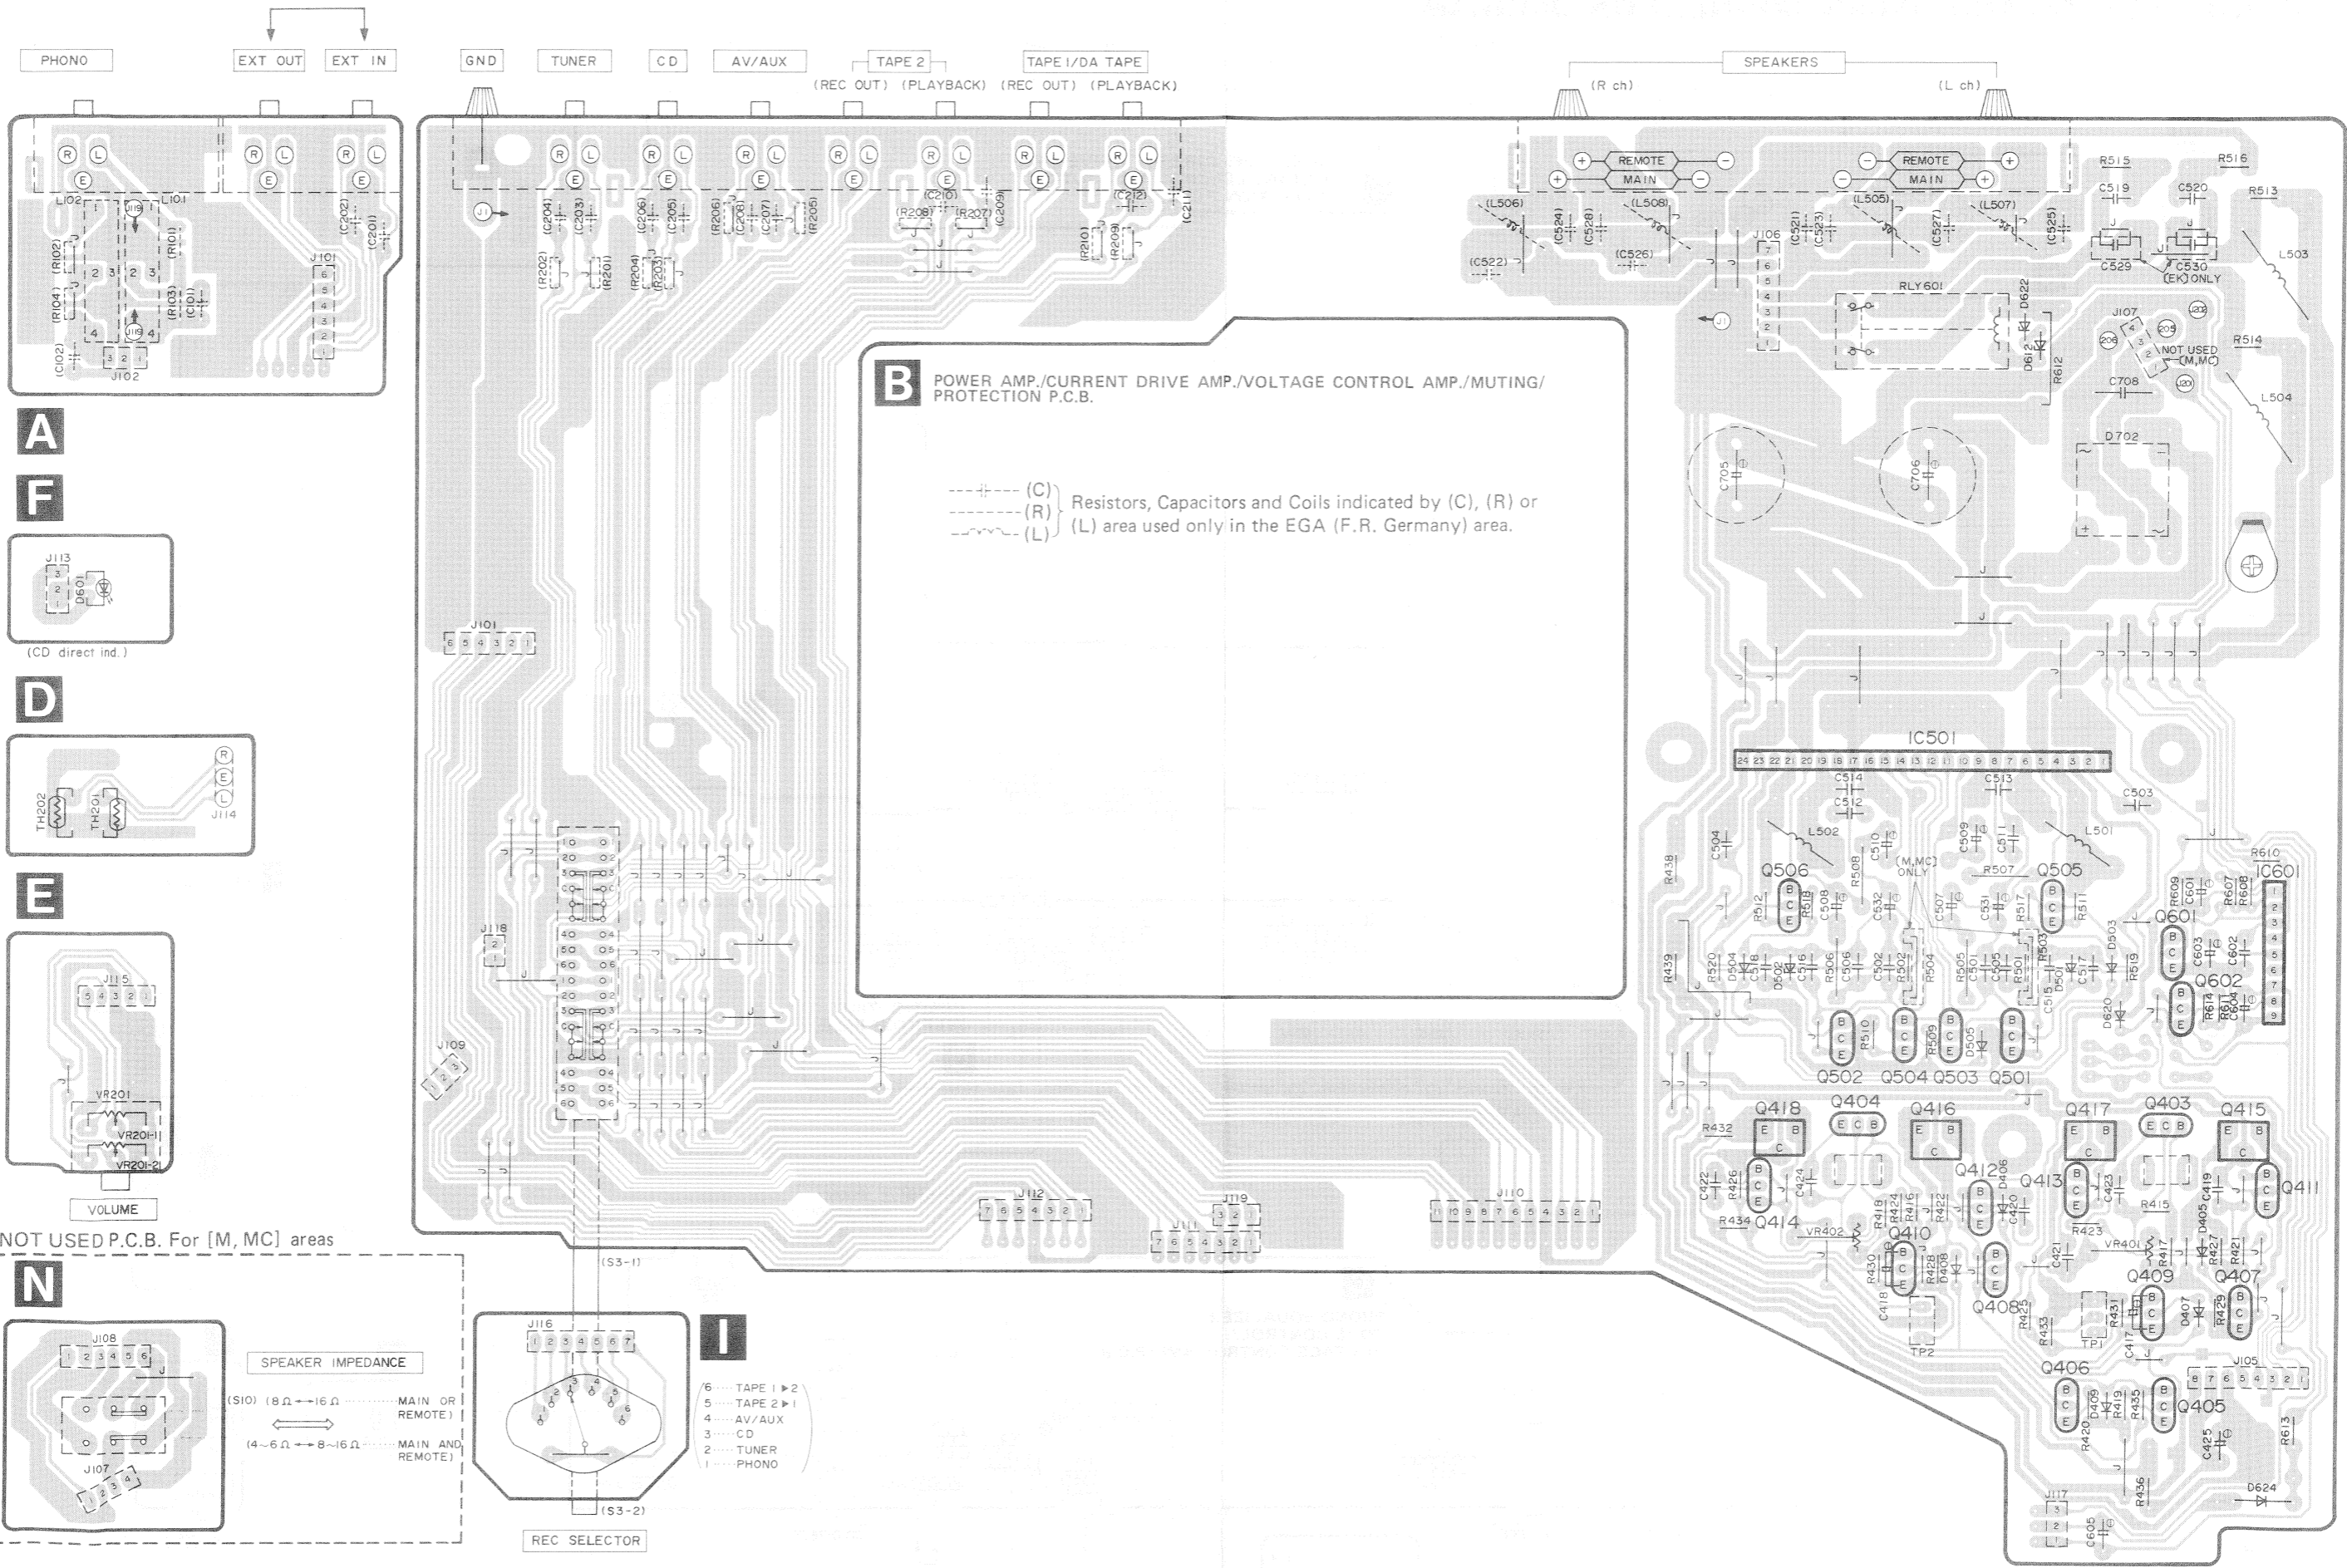


B POWER AMP./CURRENT DRIVE AMP./VOLTAGE CONTROL AMP./MUTING/ PROTECTION P.C.B.


---(C)--- Resistor, Capacitor and Coils indicated by (C), (R) or (L) area used only in the EGA (F.R. Germany) area.

A


F

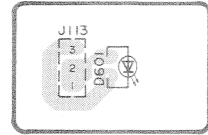

D

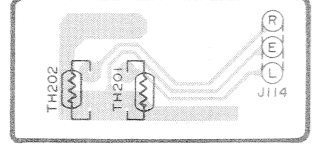


E

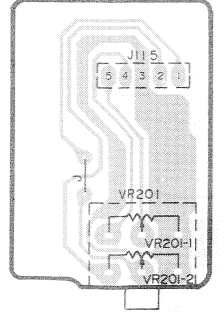


NOT USED P.C.B. For [M, MC] areas


N

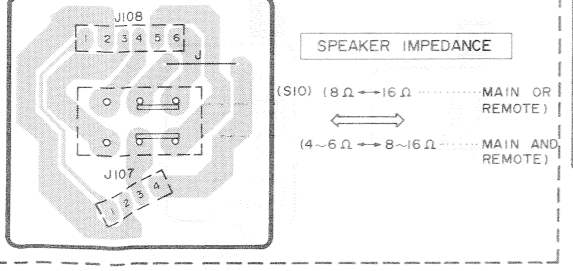



I

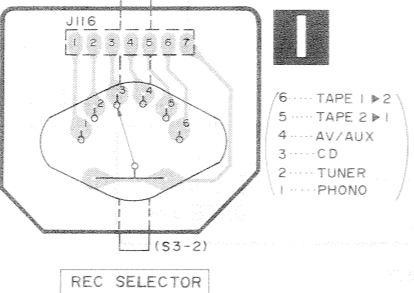







CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

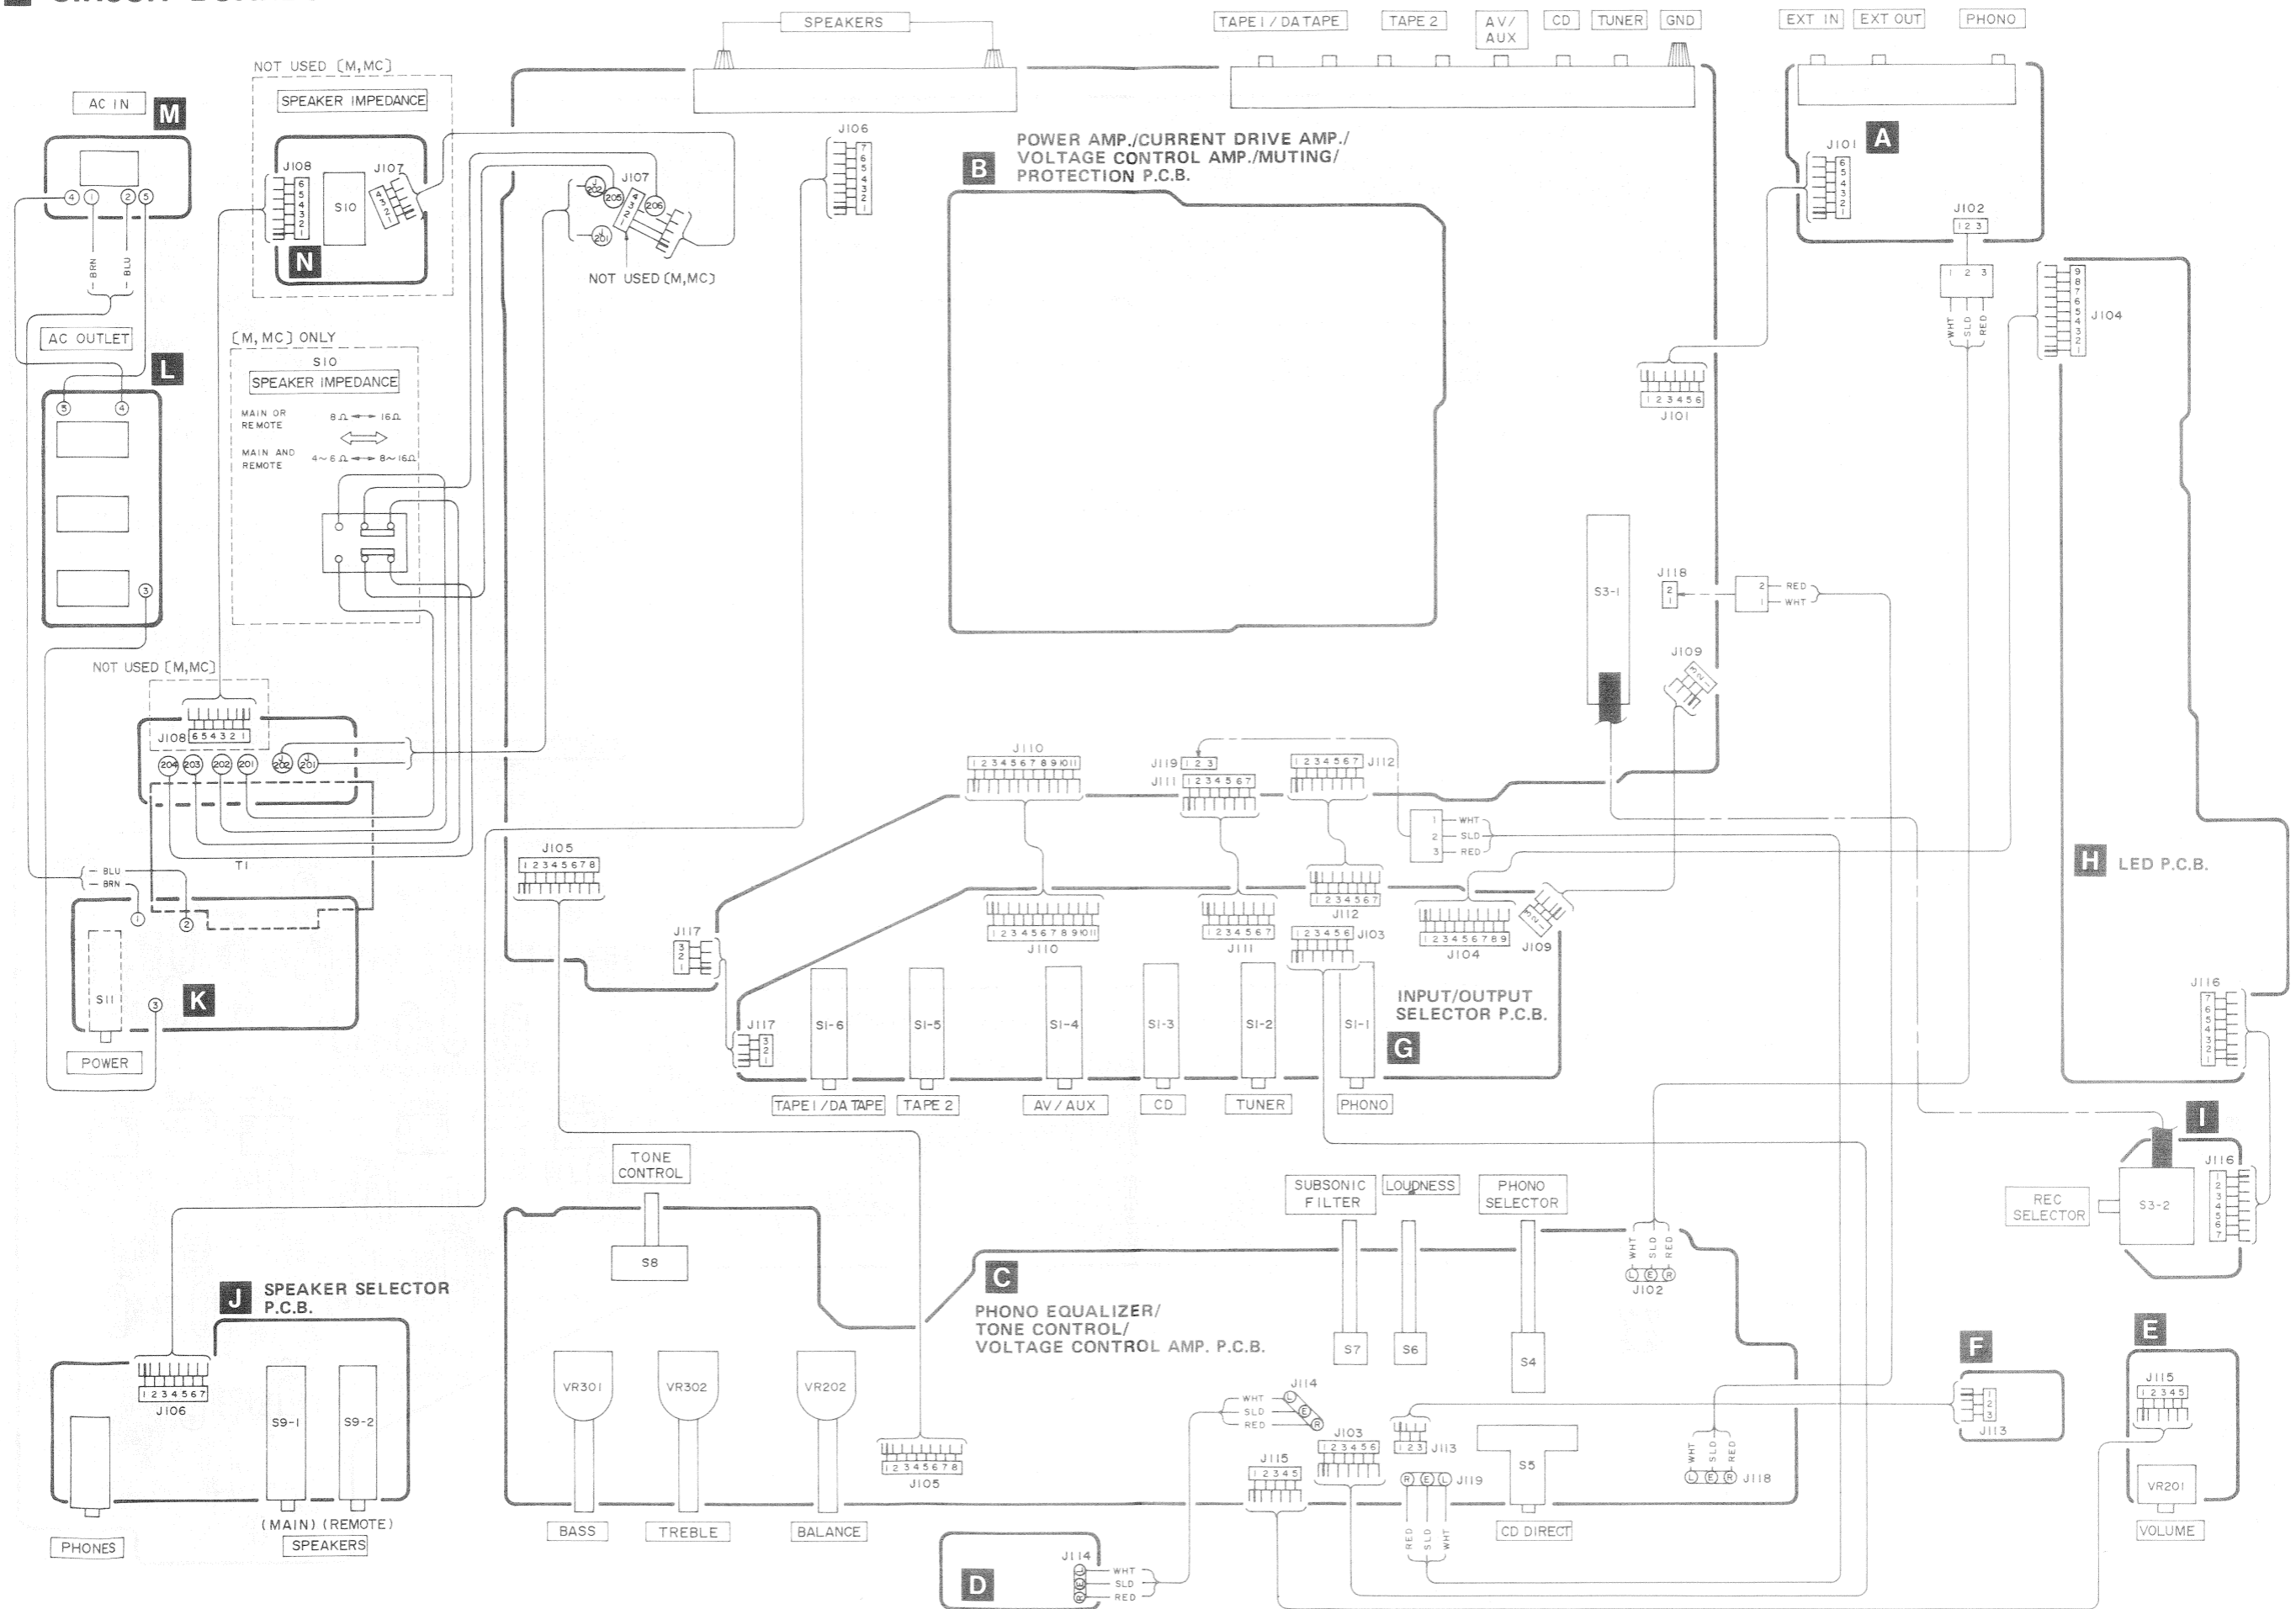


- Phono input
- Program source input/output
For F.R. Germany [EGA]

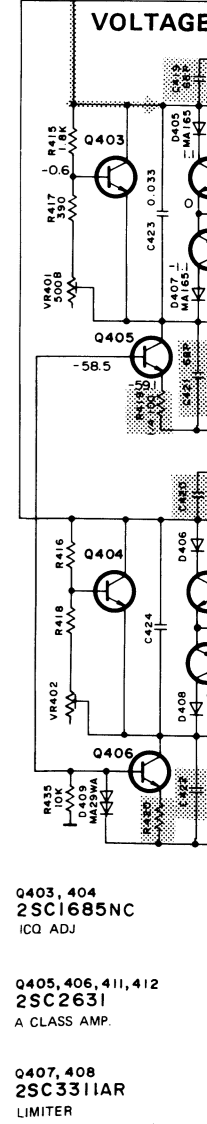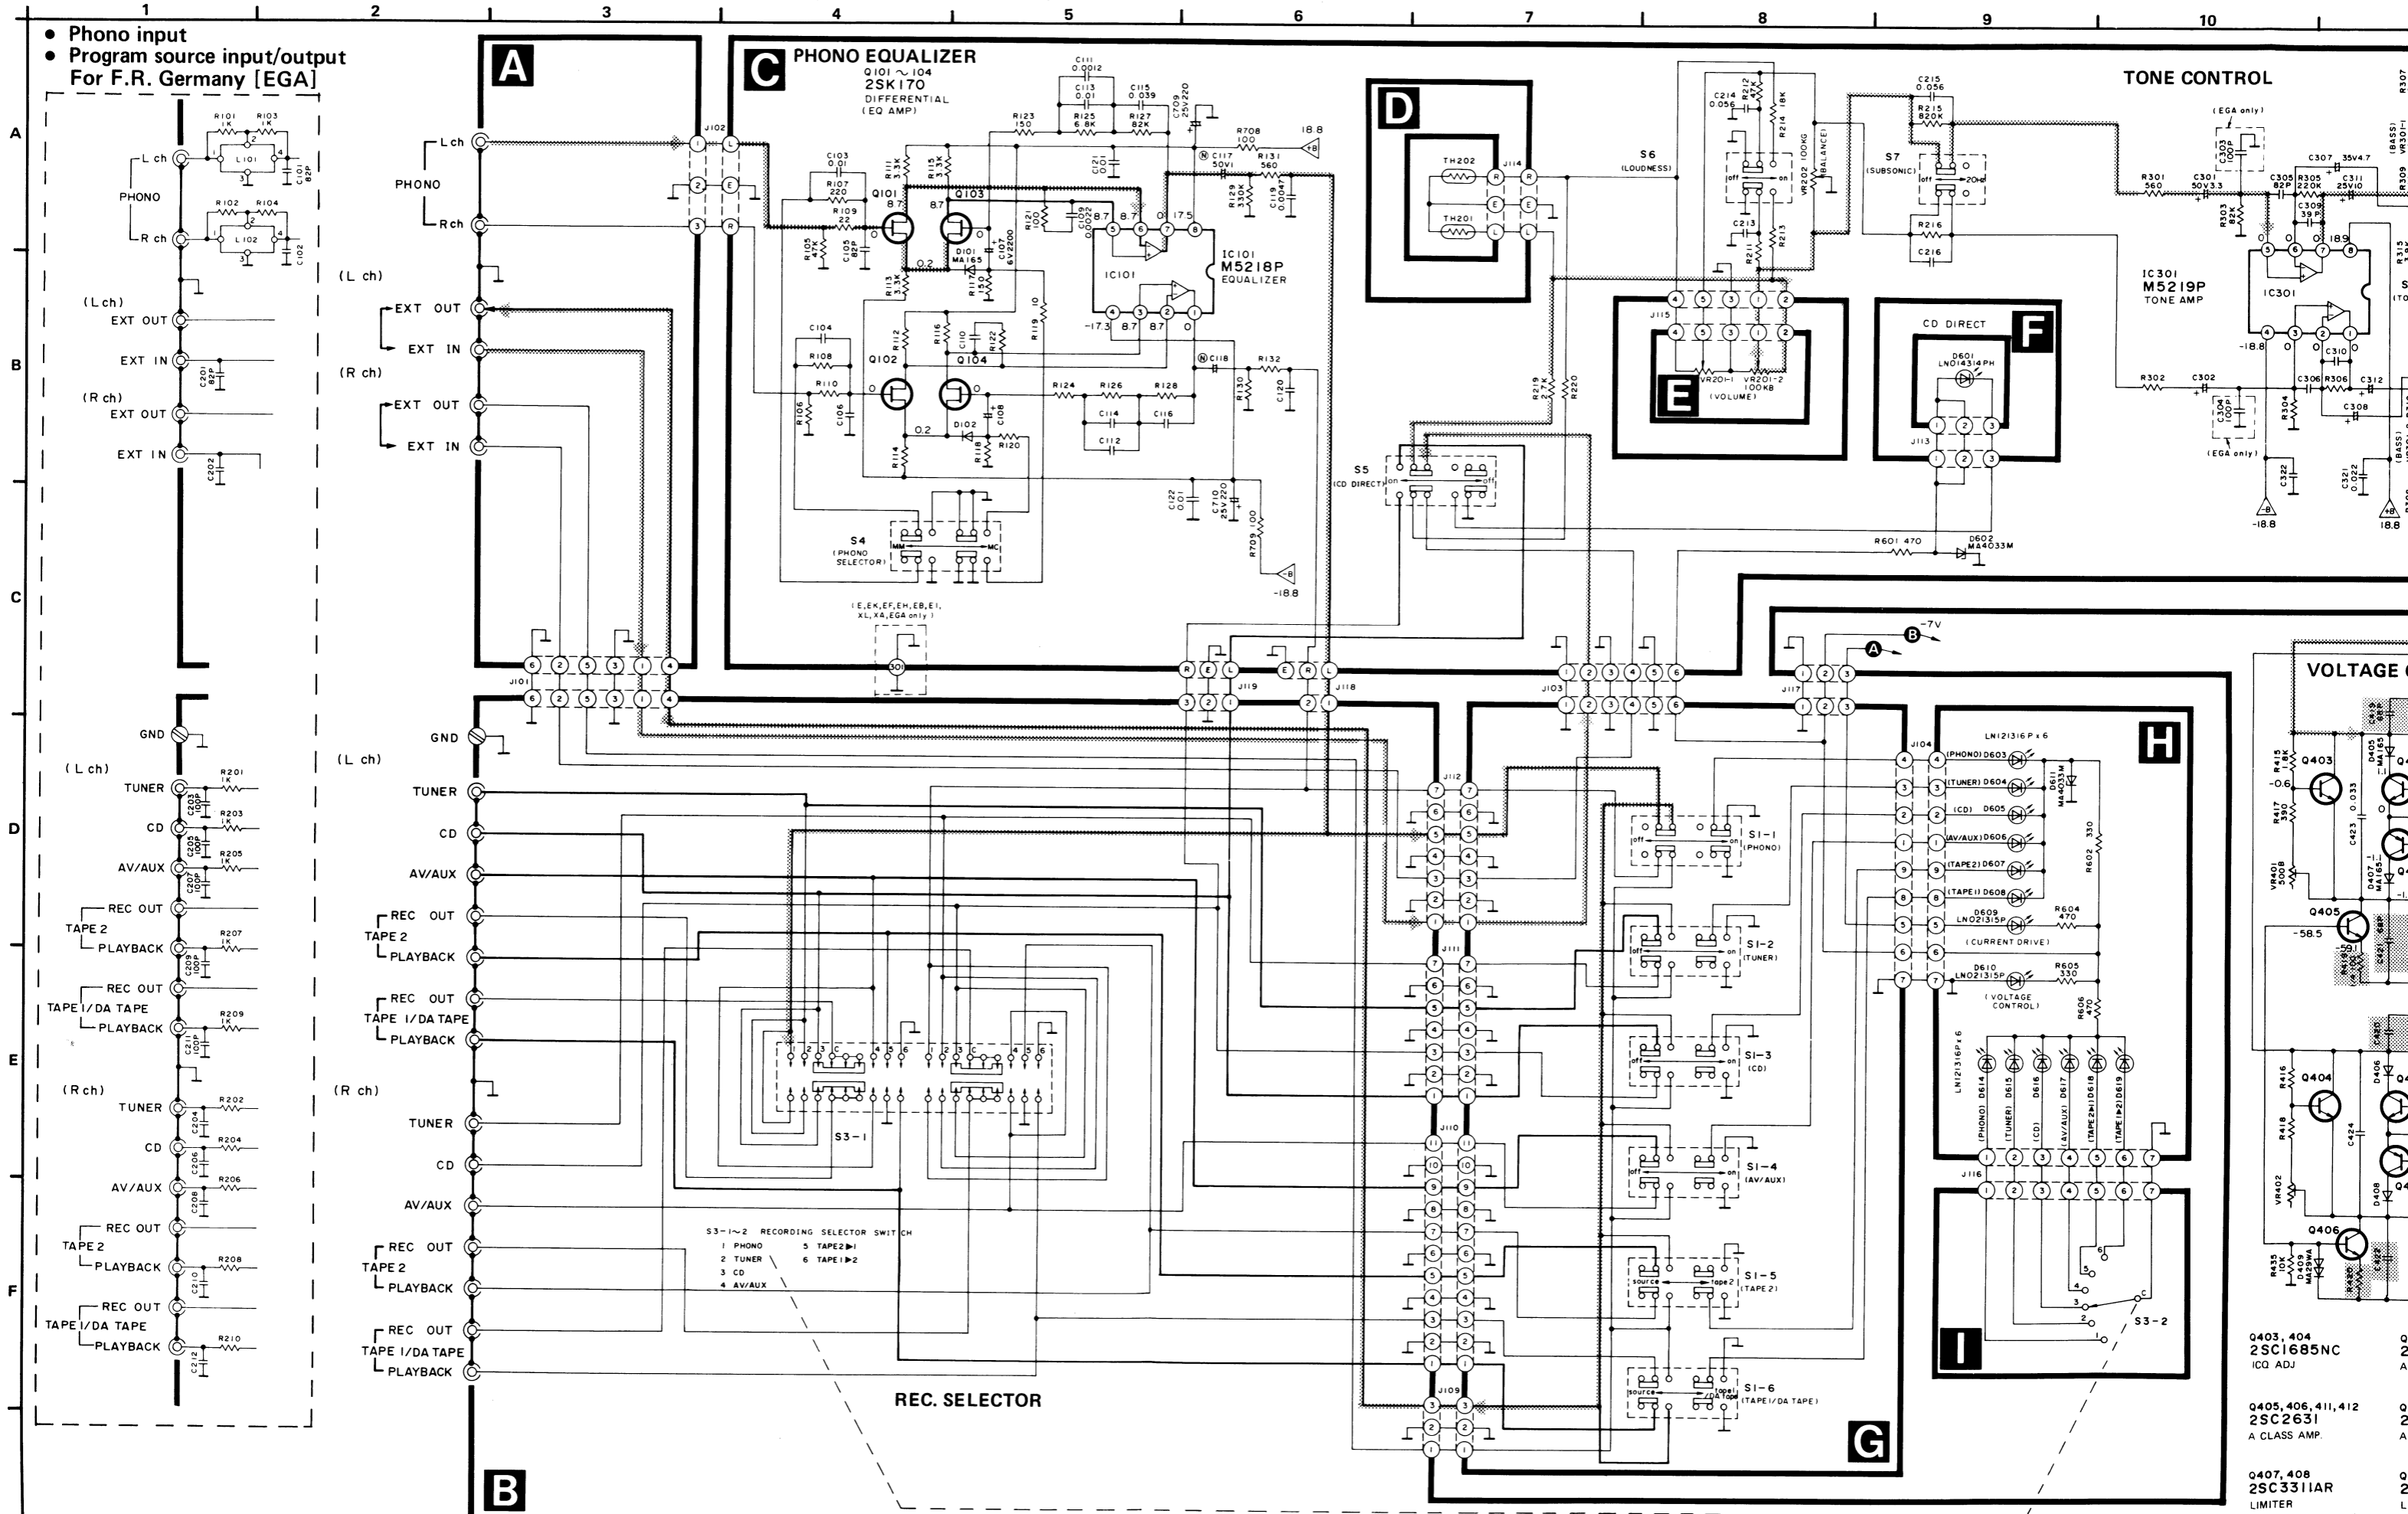

- Q403, 404 2SC1685NC (ICQ ADJ)
- Q405, 406, 411, 412 2SC2631 (A CLASS AMP)
- Q407, 408 2SC3311AR (LIMITER)

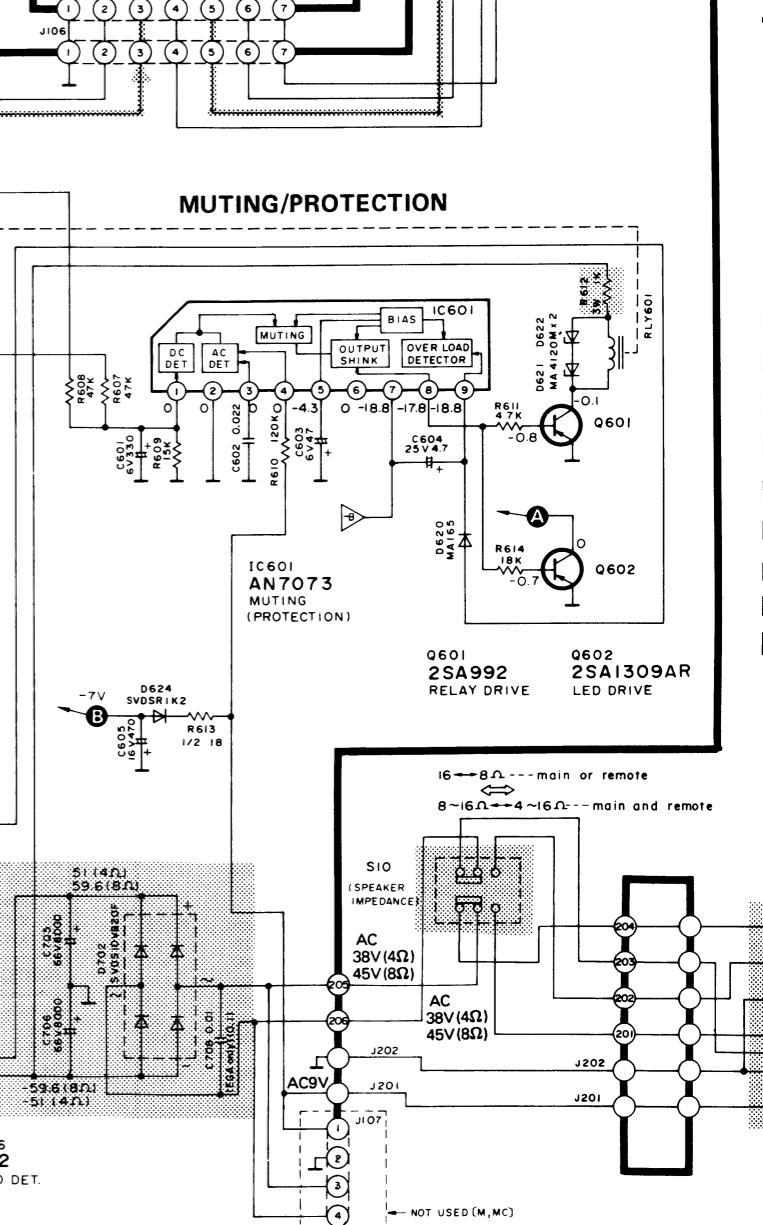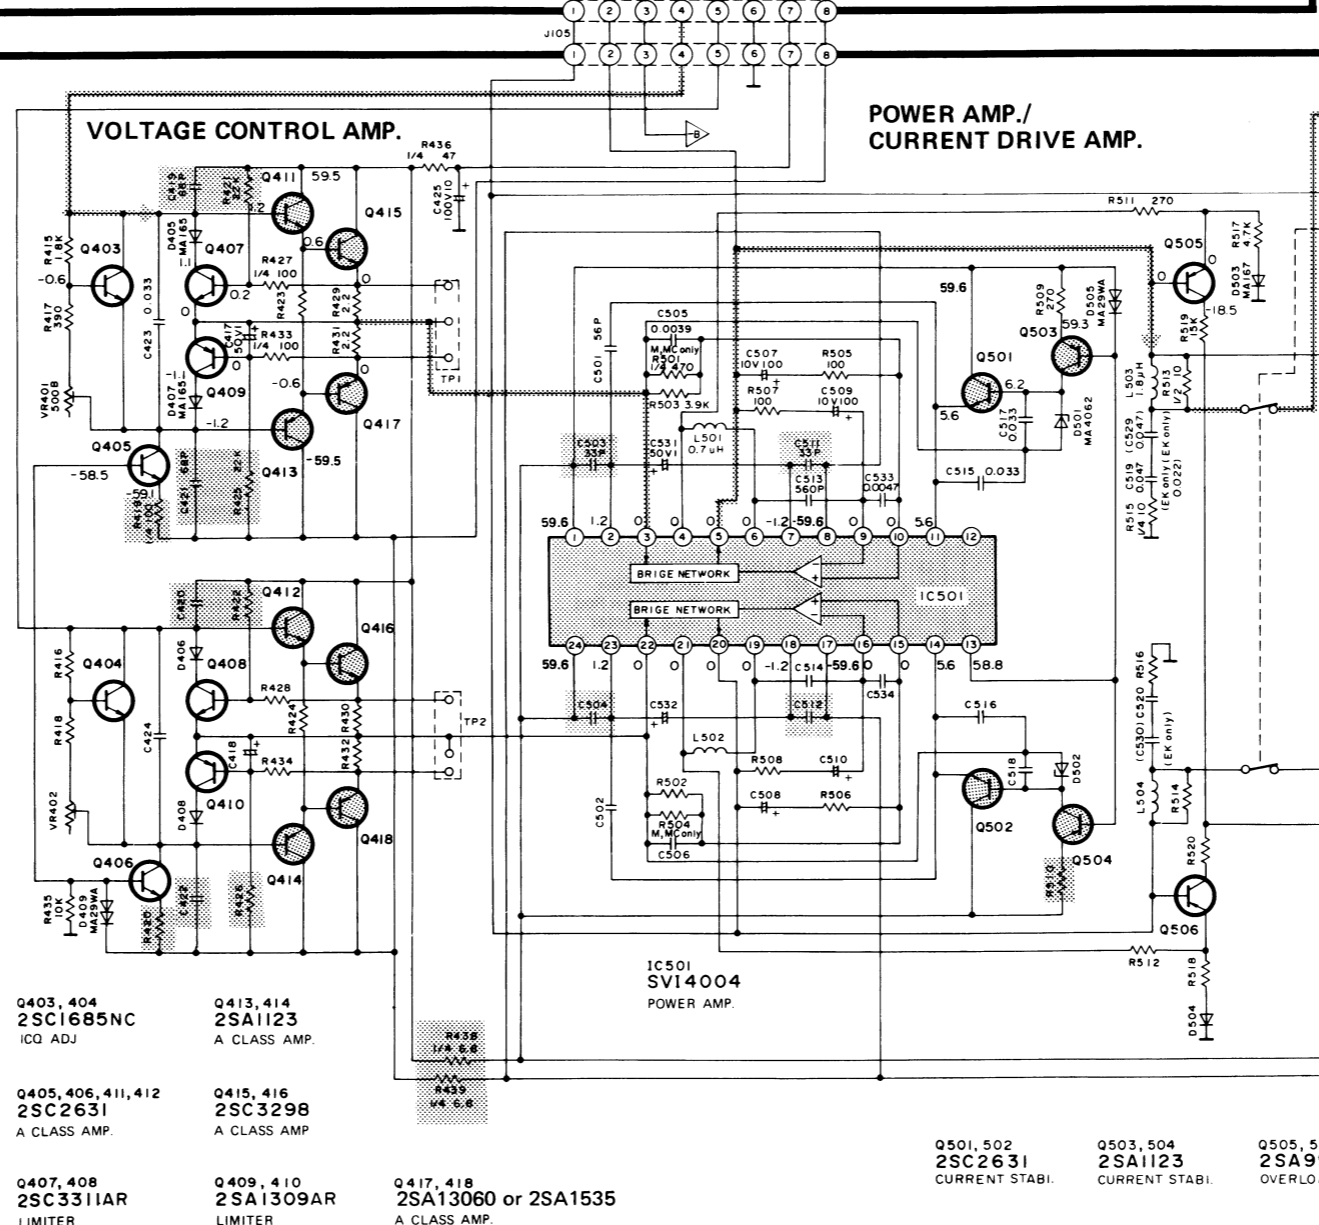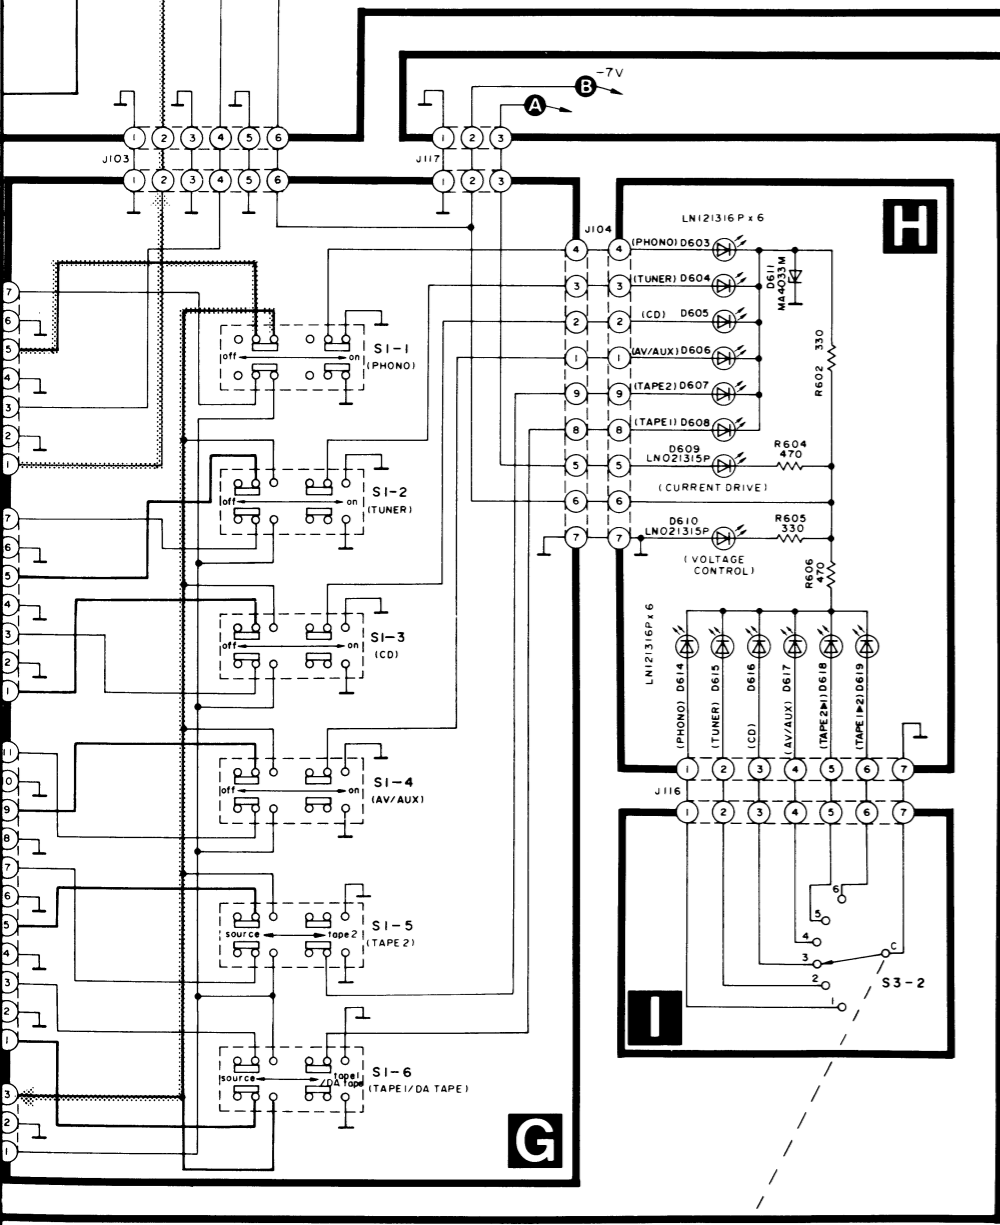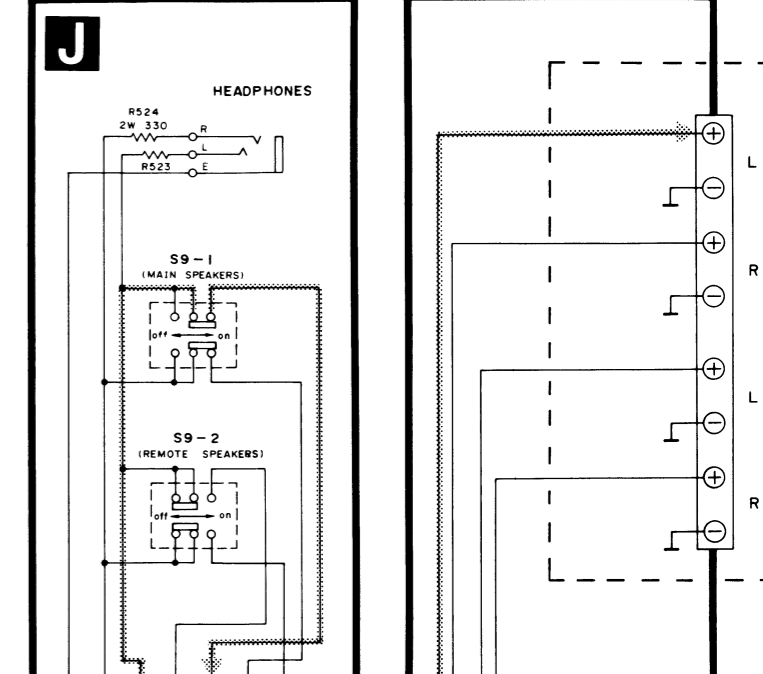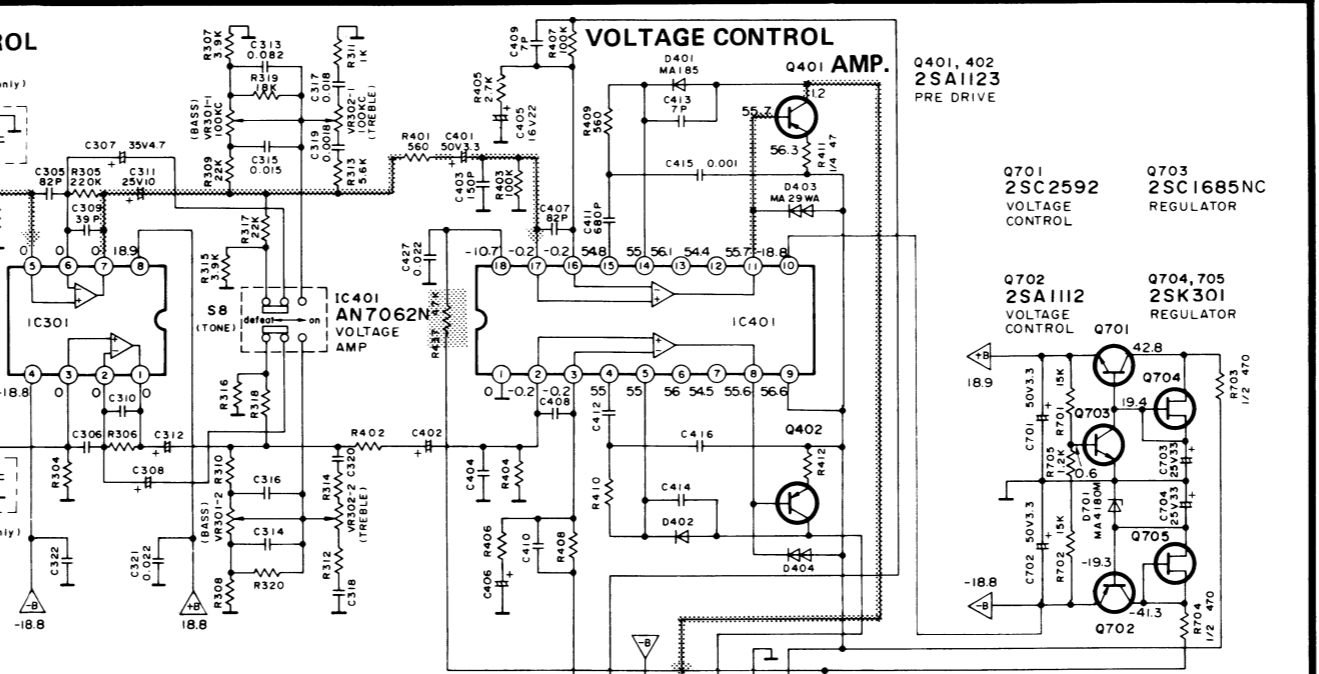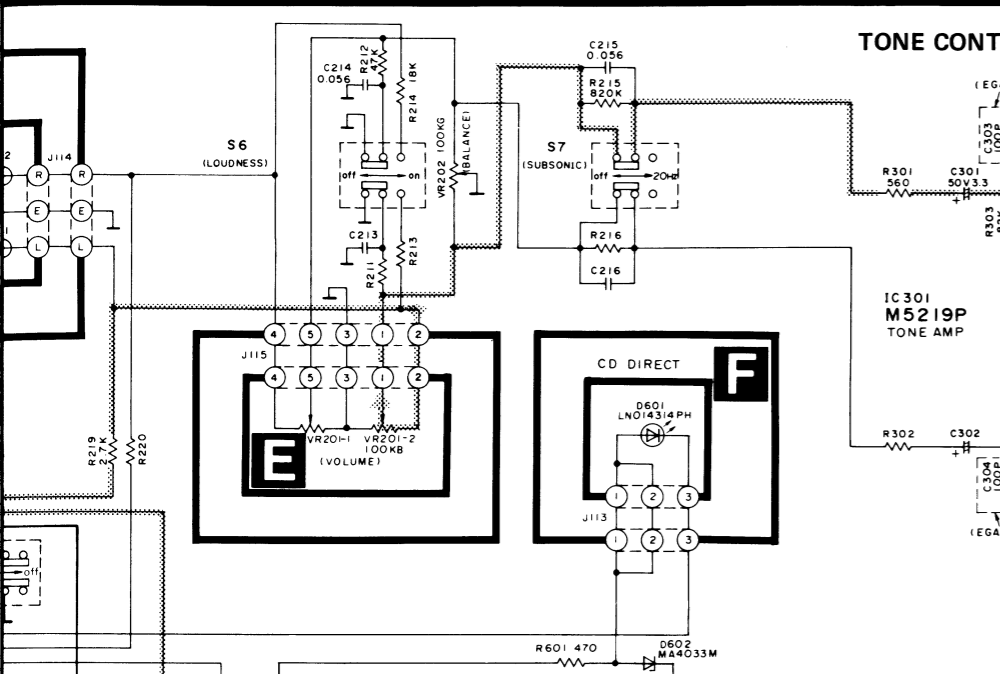

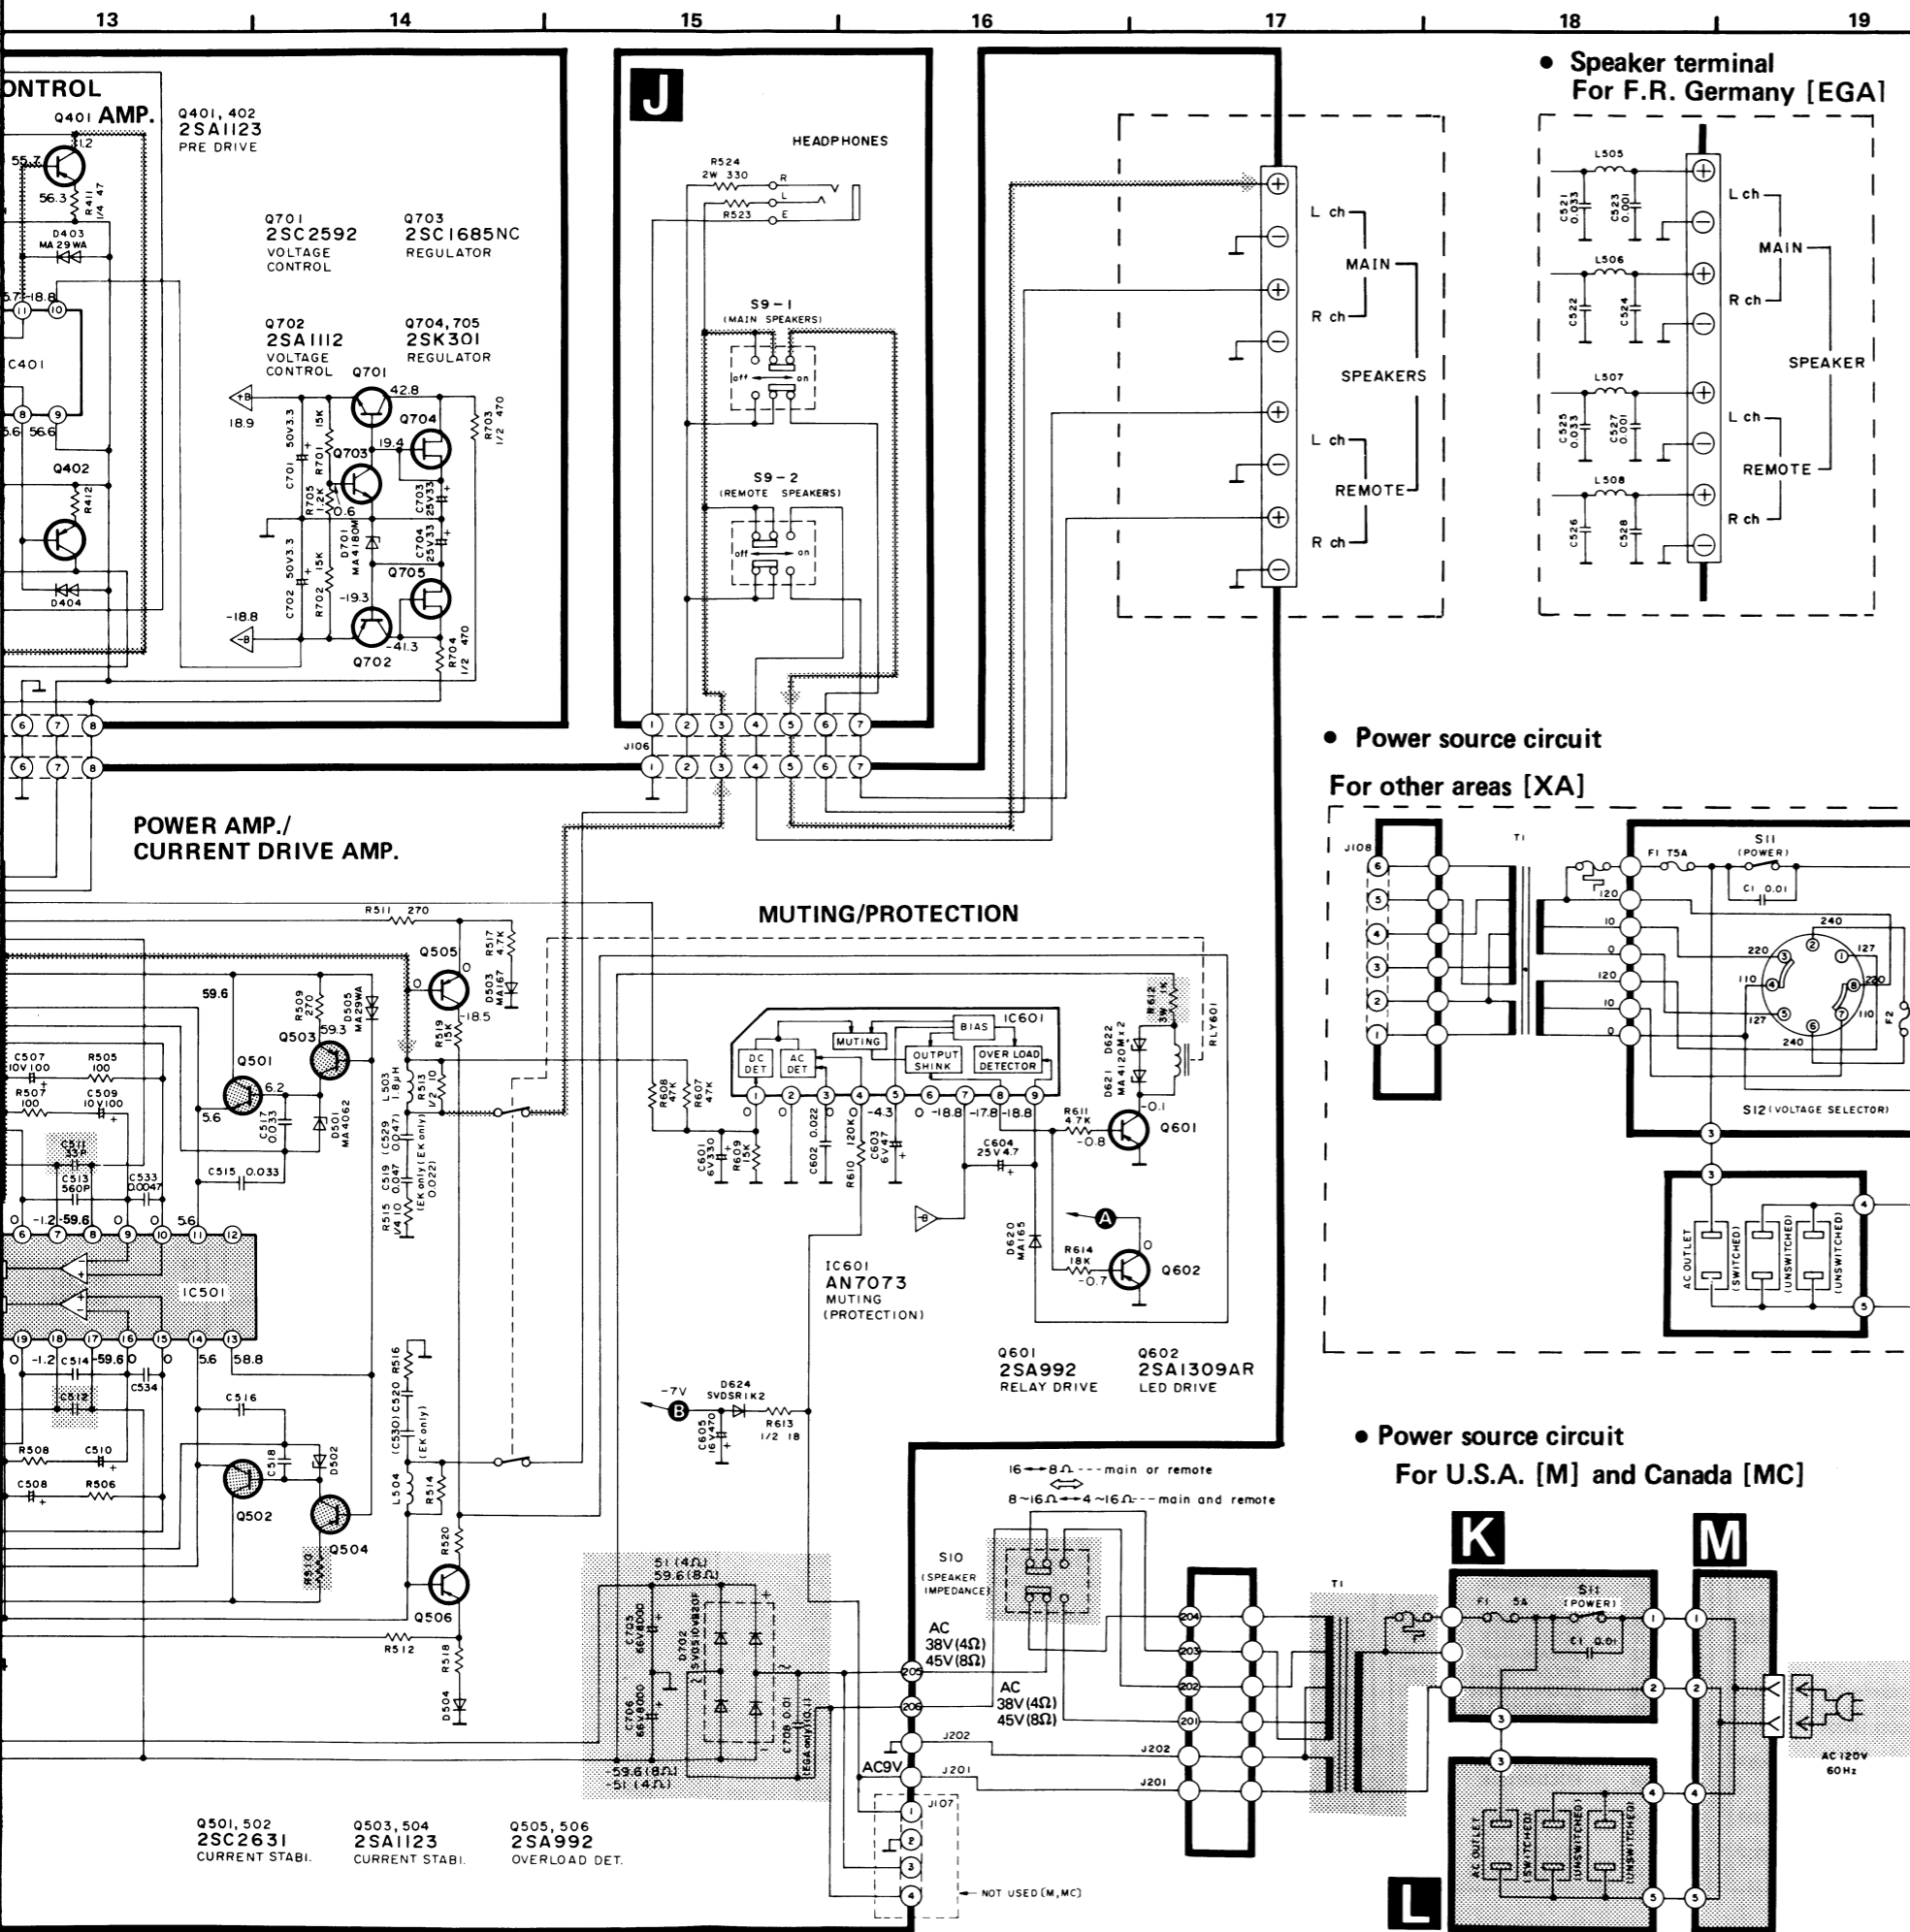

SCHEMATIC DIAGRAM

(This schematic diagram may be modified at any time with the development of new technology.)

Note:


- S1-1 ~ S1-4: Input selector switch in "phono" position.
S1-1: phono S1-2: tuner S1-3: CD
S1-4: AV/aux S1-5: Tape 2 S1-6: Tape 1/DA tape
 - S3-1, S3-2: Recording selector in "CD" position.
 - S4: Phono selector in "MM" position.
(■ MM, ▲ MC)
 - S5: CD direct switch in "off" position.
(■ off, ▲ on)
 - S6: Loudness switch in "off" position.
(■ off, ▲ on)
 - S7: Subsonic filter switch in "off" position.
(■ off, ▲ 20Hz)
 - S8: Tone control switch in "defeat" position.
(■ defeat, ▲ on)
 - S9-1: Main speaker switch in "on" position.
(■ off, ▲ on)
 - S9-2: Remote speaker switch in "off" position.
(■ off, ▲ on)
 - S10: Impedance select switch in "8~16Ω/16Ω" position.
(8~16Ω/16Ω, ▲ 4~6Ω/8Ω)
 - S11: Power switch in "on" position.
(■ off, ▲ on)
 - S12: (For [XA] area only): Voltage selector switch in "110V" position.
(127V ↔ 110V ↔ 220V ↔ 240V)
13. Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
14. Phono signal (Lch)
 Positive voltage lines or Negative voltage lines.

IMPORTANT SAFETY NOTICE

The shaded area on this schematic diagram incorporates special features important for protection from fire and electrical shock hazards. When servicing it is essential that only manufacturer's specified parts be used for the critical components in the shaded areas of the schematic.


Power source circuit

For other areas [XA]

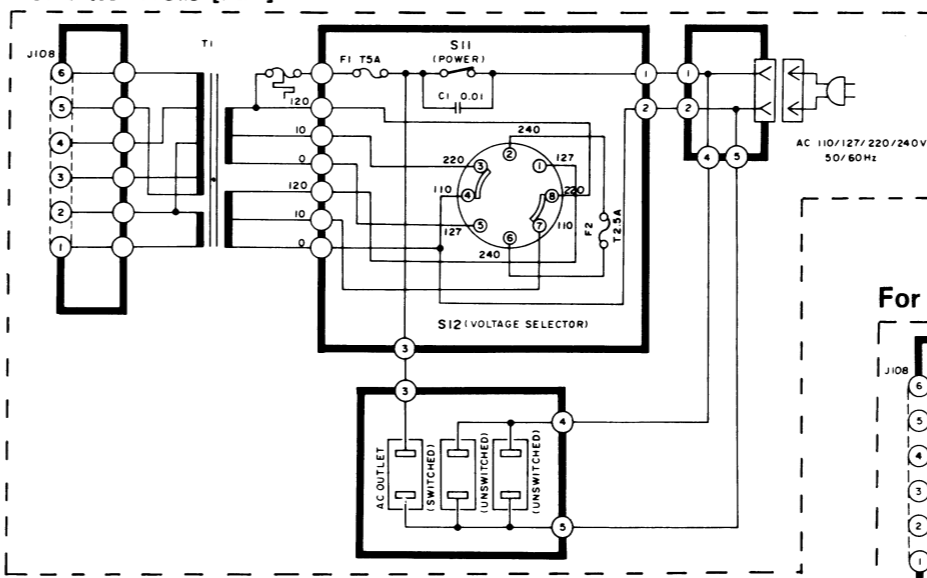


Power source circuit

For U.S.A. [M] and Canada [MC]

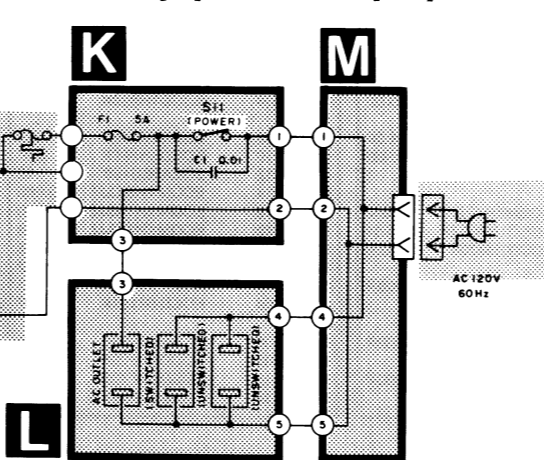

For continental Europe and Australia

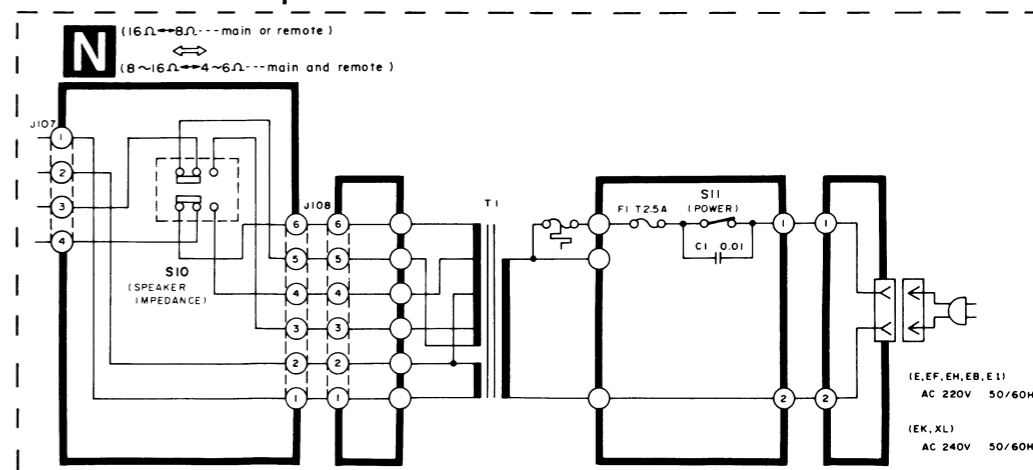

REPLACEMENT PARTS LIST

- Notes:**
- Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
 - Important safety notice: Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 - \otimes - marked parts are used for black only, while \circ - marked parts are for silver type only.
 - Part other than \otimes - and \circ - marked are used for both black and silver type.
 - Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.
 - The "S" mark is service standard parts and may differ from production parts.
 - The unit of resistance is OHM (Ω).
K = 1000 Ω , M = 1000K Ω
 - The unit of capacitance is MICROFARAD (μ F).
P = 10⁻⁶ μ F.
 - The parenthesized numbers in the column of description stand for the quantity per set.

Resistor Type	Wattage	Tolerance
ERD: Carbon	25: 1/4W	J: \pm 5%
ERG: Metal Oxide	2F: 1/4W	G: \pm 2%
ERC: Solid	S2: 1/4W	K: \pm 10%
	S1: 1/2W	
	12: 1/2W	

Capacitor Type	Voltage		Tolerance
	ECEA Type	Other	
ECEA...N : Non-polar Electrolytic	2R3: 2.3V	05: 50V DC	C: \pm 0.25 μ F
ECEA : Electrolytic	DC	1H: 50V DC	J: \pm 5%
ECCD : Ceramic	0J: 6.3V	1: 125V DC	K: \pm 10%
ECKD : Ceramic	1C: 16V	2H: 500V DC	Z: +80%, -20%
ECQM : Polyester	1E: 25V	KC: 400V AC	M: \pm 20%
ECQV : Polyester	1V: 35V		
ECQP : Polypropylene	1H: 50V		
EECW : Liquid electrolyte double layer capacitor	50: 50V		
ECKF : Ceramic	25: 25V		
	2A: 100V		

RESISTORS

Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value
R101, 102 [EGA] only	ERDS2TJ102	1K	R211, 212	ERDS2TJ473	47K	R431, 432	ERDS2TJ2R2	2.2	R519, 520	ERDS2TJ153	15K
R103, 104 [EGA] only	ERDS2TJ102	1K	R213, 214	ERDS2TJ183	18K	R433, 434 Δ	ERD25FJ101	100	Except [M, MC]		
R105, 106	ERDS2TJ473	47K	R215, 216	ERDS2TJ824	820K	R435	ERDS2TJ103	10K	R521, 522	ERDS2TJ153	15K
R107, 108	ERDS2TJ221	220	R219, 220	ERDS2TJ272	2.7K	R436 Δ	ERD25FJ470	47	[M, MC]		
R109, 110	ERDS2TJ220	22	R301, 302	ERDS2TJ561	560	R437	ERDS2TJ473	47K	R523, 524	ERG2SJ331	330
R111, 112	ERDS2TKG3301	3.3K	R303, 304	ERDS2TJ823	82K	R438, 439 Δ	ERD25FJ6R8	6.8	R529 [M, MC]	ERDS2TJ153	15K
R113, 114	ERDS2TJ332	3.3K	R305, 306	ERDS2TJ224	220K				R601	ERDS2TJ471	470
R115, 116	ERDS2TKG3301	3.3K	R307, 308	ERDS2TJ392	3.9K				R602	ERDS2TJ331	330
			R309, 310	ERDS2TJ223	22K	R501, 502 [M, MC]	ERD2FCG471	47	R604	ERDS2TJ471	470
			R311, 312	ERDS2TJ102	1K	R501, 502 [other]	EROS2TKF4220	422	R605	ERDS2TJ331	330
									R606	ERDS2TJ471	470
R117, 118	ERDS2TJ151	150	R313, 314	ERDS2TJ562	5.6K	R503, 504 [M, MC]	ERDS2TJ392	3.9K	R607, 608	ERDS2TJ473	47K
R119, 120	ERDS2TJ100	10	R315, 316	ERDS2TJ392	3.9K				R609	ERDS2TJ153	15K
R121, 122	ERDS2TJ101	100	R317, 318	ERDS2TJ223	22K	R505, 506 [M, MC]	ERD2FCG101	100	Except [M, MC]		
R123, 124	ERDS2TJ151	150	R319, 320	ERDS2TJ183	18K	R505, 506 [other]	EROS2TKF1000	1	R610	ERDS2TJ124	120K
R125, 126	ERDS2TJ682	6.8K	R401, 402	ERDS2TJ561	560	R507, 508 [M, MC]	ERD2FCG101	100	R611	ERDS2TJ472	4.7K
R127, 128	ERDS2TJ823	82K	R403, 404	ERDS2TJ104	100K	R507, 508 [other]	EROS2TKF1000	1	R612	ERG3SJ102	1K
R129, 130	ERDS2TJ334	330K	R405, 406	ERDS2TJ272	2.7K				R613 Δ	ERDS1FJ180	18
R131, 132	ERDS2TJ561	560	R407, 408	ERDS2TJ104	100K	R509, 510	ERDS2TJ271	270	R614	ERDS2TJ183	18K
R201, 202 [EGA] only	ERDS2TJ102	1K	R409, 410	ERDS2TJ561	560	R511, 512	ERDS2TJ271	270	R701, 702	ERDS2TJ153	15K
			R411, 412 Δ	ERD25FJ470	47	R513, 514 Δ	ERDS1FJ100	10			
R203, 204 [EGA] only	ERDS2TJ102	1K	R415, 416	ERDS2TJ182	1.8K	R515, 516 Δ	ERD25FJ100	10	R703, 704 Δ	ERDS1FJ471	470
R205, 206 [EGA] only	ERDS2TJ102	1K	R417, 418	ERDS2TJ391	390	R517, 518	ERDS2TJ472	4.7K	R705	ERDS2TJ122	1.2K
R207, 208 [EGA] only	ERDS2TJ102	1K	R419, 420 Δ	ERD25FJ101	100				R708, 709	ERDS2TJ101	100
R209, 210 [EGA] only	ERDS2TJ102	1K	R421, 422	ERDS2TJ223	22K						
			R423, 424	ERDS2TJ332	3.3K						
			R425, 426	ERDS2TJ223	22K						
			R427, 428	ERD25FJ101	100						
			R429, 430	ERDS2TJ2R2	2.2						

CAPACITORS

Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value
C1 [EK] only	ECKDKC103PF2	0.01	C209, 210	ECCD1H101K	100P	C413, 414	ECCD2H070D	7P	C523, 524	ECKD1H102MD	0.001
C1 [other]	ECKDNS103ZV	0.01	[EGA] only			C415, 416	ECQM1H102JZ	0.001	[EGA] only		
C101, 102 [EGA] only	ECCD1H820K	82P	C211, 212	ECCD1H101K	100P	C419, 420	ECCD2H680K	68P	C525, 526	ECQM1H333JZ	0.033
C103, 104	ECQM1H103JZ	0.01	[EGA] only			C421, 422	ECCD2H680K	68P	[EGA] only		
C105, 106	ECCD1H820K	82P	C213, 214	ECQM1H563JZ	0.056	C423, 424	ECCD1H333ZF	0.033	C527, 528	ECKD1H102MD	0.001
C107, 108	ECEA0JU222	2200	C215, 216	ECQM1H563JZ	0.056	C425	ECEA2AU100	10	[EGA] only		
C109, 110	ECQM1H222JZ	0.0022	C301, 302	ECEA1HU3R3	3.3	C427	ECKD1H223ZF	0.022	C529, 530	ECQM1H473JZ	0.047
C111, 112	ECQM1H222JZ	0.0022	C303, 304	ECCD1H101K	100P	C501, 502	ECCD1H560K	56P	[EK] only		
			[EGA] only			C503, 504	ECCD2H330K	33P	C531, 532	ECEA1HU010	1
			C305, 306	ECCD1H820K	82P	C505, 506	ECQM1H392JZ	0.0039	C601	ECEA0JU331	330
C113, 114	ECQM1H103JZ	0.01									
C115, 116	ECQM1H393JZ	0.039	C307, 308	ECEA1VU4R7	4.7	C507, 508	ECEA1AU101	100	C602	ECFTD223KXL	0.022
C117, 118 \otimes	ECEA1HNO10S	1	C309, 310	ECCD1H390K	39P	C509, 510	ECEA0JU470	470	C603	ECEA0JU470	47
			C311, 312	ECEA1EU100	10	C511, 512	ECCD2H330K	33P	C604	ECEA1EU477	4.7
			C313, 314	ECQM1H823JZ	0.082	C513, 514	ECKD1H561KB	560P	C605	ECEA1CU471	470
C119, 120	ECQM1H472JZ	0.0047	C315, 316	ECQM1H153JZ	0.015	C515, 516	ECKD1H333ZF	0.033	C701, 702	ECEA1HU3R3	3.3
C121, 122	ECKD1H103ZF	0.01	C317, 318	ECQM1H183JZ	0.018	C517, 518	ECKD1H333ZF	0.033	C703, 704	ECEA1EU330	33
C201, 202 [EGA] only	ECCD1H820K	82P	C319, 320	ECQM1H182JZ	0.0018				C705, 706 Δ	ECES66V802U	8000
C203, 204 [EGA] only	ECCD1H101K	100P	C321, 322	ECKD1H223ZF	0.022						
			C401, 402	ECEA1HU3R3	3.3	C519, 520 [EK] only	ECQM1H473JZ	0.047	C708	ECQE2104KS	0.1
			C403, 404	ECCD1H151K	150P	C519, 520 [other]	ECQM1H223JZ	0.022	[EGA] only		
									C708 [other]	ECKD2H103PE	0.01
C205, 206 [EGA] only	ECCD1H101K	100P	C405, 406	ECEA1CU220	22				C709, 710	ECEA1EU101	100
C207, 208 [EGA] only	ECCD1H101K	100P	C407, 408	ECCD1H820K	80P						
			C409, 410	ECCD1H070D	70P						
			C411, 412	ECKD1H681KB	680P	C521, 522 [EGA] only	ECQM1H333JZ	0.033			

Ref. No.	Part No.	Description
INTEGRATED CIRCUITS		
IC101	M5218P	IC
IC301	M5219P	IC
IC401	AN7062N	IC
IC501	Δ SV14004	IC
IC601	AN7073	IC
TRANSISTORS		
Q101~104	2SK170BLV	Transistor
Q401, 402, 413, 414, 503, 504	2SA1123-R	Transistor
Q403, 404, 703	2SC1685RST	Transistor
Q405, 406, 411, 412, 501, 502	2SC2631-R	Transistor
Q407, 408	2SC3311-Q	Transistor
Q409, 410, 602	2SA1309Q	Transistor
Q415, 416	2SC3298AY	Transistor
Q417, 418 [M, MC]	2SA1535RLS	Transistor
Q417, 418 [other]	2SA1306AY	Transistor
Q505, 506, 601	2SA992E	Transistor
Q701	2SC2592-R	Transistor
Q702	2SA1112-R	Transistor
Q704, 705	2SK301-QRS	Transistor
DIODES		
D101, 102, 405~408, 620	MA165	Diode
D401, 402	MA185	Diode
D403, 404, 409, 505	MA29WA	Diode
D501, 502	MA4082-M	Diode
D503, 504	MA167	Diode
D601	LN84YCP	L.E.D.
D602, 611	MA4033M	Diode
D603~608, 610	LN863RCP	L.E.D.
D609, 614~619	LN463YCPP	L.E.D.
D621, 622	MA4120-M	Diode
D624	SVDSR1K2	Diode
D701	MA4180-M	Diode
D702	SVDS10VB20F	Diode
COILS		
L1 [EGA] only	SLQZ650MH49	Coil
L101, 102	SLM1Z33	Coil
[EGA] only		
L501, 502	SLQY07G-40	Coil
L503, 504	SLQY18G-10	Coil
L505~508	SLQY07G-40	Coil
[EGA] only		
TRANSFORMERS		
T1 [M, MC]	Δ SLT5P245-W	Power Transformer
T1 [XA]	Δ SLT5P248-W	Power Transformer
T1 [EK, XL]	Δ SLT5P247-W	Power Transformer
T1 [other]	Δ SLT5P246-W	Power Transformer
VARIABLE RESISTORS		
VR201	EWJKA090B15	Main Volume
VR202	EVH0YA015G15	Balance
VR301, 302	EWCRYA023C15	Bass/Treble
VR401, 402	EVNKA00B52	log Adj.
THERMISTERS		
TH201, 202	ERTD2ZHL104S	Thermistors
FUSES		
F1 [M, MC]	Δ XBA1F50NU14	125V, 5A
F1 [EK]	Δ XBA2C25TB0	250V, T2.5A
F1 [other]	Δ XBA2C25TR0	250V, T2.5A
F1 [XA]	Δ XBA2C50TR0	250V, T5A
F2 [XA]	Δ XBA2C25TR0	250V, T2.5A
SWITCHES		
S1~1~1-6	SSH656	Input Selector
S3-1	ESA2682	Rec. Selector
S3-2	ESA335029B	Rec. Selector
S4	SSH3704	Phono Selector
S5	SSH1215	CD Direct
S6	SSH3704	Loudness
S7	SSH3704	Subsonic
S8	SSH1214	Tone
S9-1	SSH2115	Main Speaker Selector
S9-2	SSH2115	Remote Speaker Selector

Ref. No.	Part No.	Description
SWITCHES		
S10 [M]		ESD3911T
S10 [MC]		SSS174
S10 [other]		SSS154
S11	Δ	ESB8215V
S12 [XA] only		ESE37263
RELAY		
RLY601		SSY126
CABINET and CHASSIS PARTS		
1	\circ	SBN1207-1
1	\otimes	

ns specify the area.
for all areas.
nd may differ from

(μF).

umn of description

Tolerance	
C	± 0.25pF
J	± 5%
K	± 10%
Z	+80%, -20%
M	± 20%

Part No.	Value
RDS2TJ153	15K
RDS2TJ153	15K
RG2SJ331	330
RDS2TJ153	15K
RDS2TJ471	470
RDS2TJ331	330
RDS2TJ471	470
RDS2TJ331	330
RDS2TJ471	470
RDS2TJ473	47K
RDS2TJ153	15K
RDS2TJ124	120K
RDS2TJ472	4.7K
RG3SJ102	1K
RDS1FJ180	18
RDS2TJ183	18K
RDS2TJ153	15K
RDS1FJ471	470
RDS2TJ122	1.2K
RDS2TJ101	100


Part No.	Value
CKD1H102MD	0.001
CQM1H333JZ	0.033
CKD1H102MD	0.001
CQM1H473JZ	0.047
CEA1HU010	1
CEA0JU331	330
CFTD223KXL	0.022
CEA0JU470	47
CEA1EU47R	4.7
CEA1CU471	470
CEA1HU3R3	3.3
CEA1EU330	33
CES6V802U	8000
CQE2104KS	0.1
CKD2H103PE	0.01
CEA1EU101	100

Ref. No.	Part No.	Description
INTEGRATED CIRCUITS		
IC101	M5218P	IC
IC301	M5219P	IC
IC401	AN7062N	IC
IC501	SV14004	IC
IC601	AN7073	IC
TRANSISTORS		
Q101~104	2SK170BLV	Transistor
Q401, 402, 413, 414, 503, 504	2SA1123-R	Transistor
Q403, 404, 703	2SC1685RST	Transistor
Q405, 406, 411, 412, 501, 502	2SC2631-R	Transistor
Q407, 408	2SC3311-Q	Transistor
Q409, 410, 602	2SA1309Q	Transistor
Q415, 416	2SC3298AY	Transistor
Q417, 418 [M, MC]	2SA1535RLS	Transistor
Q417, 418 [other]	2SA1306AY	Transistor
Q505, 506, 601	2SA992E	Transistor
Q701	2SC2592-R	Transistor
Q702	2SA1112-R	Transistor
Q704, 705	2SK301-QRS	Transistor
DIODES		
D101, 102, 405~408, 620	MA165	Diode
D401, 402	MA185	Diode
D403, 404, 409, 505	MA29WA	Diode
D501, 502	MA4062-M	Diode
D503, 504	MA167	Diode
D601	LN84YCP	L.E.D.
D602, 611	MA4033M	Diode
D603~608, 610	LN863RCPP	L.E.D.
D609, 614~619	LN463YCPP	L.E.D.
D621, 622	MA4120-M	Diode
D624	SVDSR1K2	Diode
D701	MA4180-M	Diode
D702	SVDS10VB20F	Diode
COILS		
L1 [EGA] only	SLQ2650MH49	Coil
L101, 102	SLM1Z33	Coil
[EGA] only		
L501, 502	SLQY07G-40	Coil
L503, 504	SLQY18G-10	Coil
L505~508	SLQY07G-40	Coil
[EGA] only		
TRANSFORMERS		
T1 [M, MC]	SLT5P245-W	Power Transformer
T1 [XA]	SLT5P248-W	Power Transformer
T1 [EK, XL]	SLT5P247-W	Power Transformer
T1 [other]	SLT5P246-W	Power Transformer
VARIABLE RESISTORS		
VR201	EWJXKA090B15	Main Volume
VR202	EVH0YA015G15	Balance
VR301, 302	EWCYRA023C15	Bass/Treble
VR401, 402	EVNK6AA00B52	I _{co} Adj.
THERMISTERS		
TH201, 202	ERTD2ZHL104S	Thermistors
FUSES		
F1 [M, MC]	XBA1F50NU14	125V, 5A
F1 [EK]	XBA2C25T80	250V, T2.5A
F1 [other]	XBA2C25TR0	250V, T2.5A
F1 [XA]	XBA2C50TR0	250V, T5A
F2 [XA]	XBA2C25TR0	250V, T2.5A
SWITCHES		
S1-1~1-6	SSH656	Input Selector
S3-1	ESA2682	Rec. Selector
S3-2	ESA335029B	Rec. Selector
S4	SSH3704	Phono Selector
S5	SSH1215	CD Direct
S6	SSH3704	Loudness
S7	SSH3704	Subsonic
S8	SSH1214	Tone
S9-1	SSH2115	Main Speaker Selector
S9-2	SSH2115	Remote Speaker Selector

Ref. No.	Part No.	Description
SWITCHES		
S10 [M]	ESD3911T	Impedance Selector
S10 [MC]	SSS174	Impedance Selector
S10 [other]	SSS154	Speaker Impedance Selector
S11	ESB8215V	Power Source
S12 [XA] only	ESE37263	Voltage Selector
RELAY		
RLY601	SSY126	Relay
CABINET and CHASSIS PARTS		
1	SBN1207-1	Knob, Bass, Treble, Balance
1	SBN1206	Knob, Bass, Treble, Balance
2	SBN1089-4	Knob, Selector
2	SBN1089-3	Knob, Selector
3	SBN1210-1	Knob, Volume
3	SBN1210	Knob, Volume
4	SGWUV60-SE	Front Panel Ass'y
4	SGWUV60-KE	Front Panel Ass'y
5	SMC6407	Shield Plate
6	LN121316P	L.E.D. Ass'y
7	LN021315P	L.E.D. Ass'y
8	SBC439	Button, S.P Selector
8	SBC439-2	Button, S.P Selector
9	SJJ126B	Headphone Jack
10 [EK]	SKCUV60-SK	Cabinet Ass'y
10	SKC1960S982	Cabinet
[other]		
10 [EK]	SKCUV60-KK	Cabinet Ass'y
10	SKC1960K992	Cabinet
[other]		
11	SBC719	Button, Loudness, Tone, Subsonic, MM/MC
11	SBC719-1	Button, Loudness, Tone, Subsonic, MM/MC
12	SBC820-1	Button, CD Direct
12	SBC820	Button, CD Direct
13	LN014314PH	L.E.D.
14	SHE187-1	P.C.B. Holder
15	SUB254	Connection Rod, Input Selector
16 [M, MC]	SKUUV60-KM	Bottom Cover Ass'y
16 [XA]	SKUUV60-KX	Bottom Cover Ass'y
16 [other]	SKU11420	Bottom Cover
17	SKL299	Foot (Right)
18	SKL299-1	Foot (Left)
19	SHR401-1	Nylon Pin
20	SJS305	Connector (3 Pin)
21 [M, MC]	SJT389	Fuse Holder
21 [other]	SJT388	Fuse Holder
22	SUB256	Connection Rod, Power
23	SBC666	Button, Power
23	SBC666-3	Button, Power
24	SMX909	Insulation Cover
25 [M, MC]	SGP6810-1C	Rear Panel
25 [E]	SGP6810E	Rear Panel
25 [EK]	SGP6810G	Rear Panel
25 [XA]	SGP6810-1B	Rear Panel
25 [XL]	SGP6810H	Rear Panel
25 [EGA]	SGPUV60-KG	Rear Panel Ass'y
25 [other]	SGPUV60-KE	Rear Panel Ass'y
26	SJS9329B	AC Outlet
[M, MC]		
26 [XA]	SJS9328B	AC Outlet

Ref. No.	Part No.	Description
CABINET and CHASSIS PARTS		
27	SJS9234B	AC Inlet
[M, MC, XL]		
27	SJS9231B	AC Inlet
[other]		
28 [M, MC]	SJS9329A	AC Outlet Cover
28 [XA]	SJS9328A	AC Outlet Cover
29	SJS9234A	AC Inlet Cover
[M, MC, XL]		
29 [other]	SJS9231A	AC Inlet Cover
30	SJP9205-2	Short Pin
31	SJF4815-1	Speaker Terminal
32	SJF3057N	EXT. Terminal
33	SJF3057-5N	Phono Terminal
34	SJF3062NK	Input Terminal
35 [XA]	SHR401-1	Nylon Pin
36 [XA]	SMX916	Insulation Cover
37 [XA]	SJS702	Connector (7 Pin)
38 [XA]	SJT347	Fuse Holder
39	SHR301	Clamper
40	SJS5341	Connector (3 Pin)
41	SJT3311	Post (3 Pin)
42	SJT3321	Post (3 Pin)
42	SJT3711	Post (7 Pin)
43	SJT30843-V	Socket (8 Pin)
43	SJT30943-V	Socket (9 Pin)
44	SJT783	Connector Pin
45	SJS5215	Connector (2 Pin)
45	SJS5331	Connector (3 Pin)
45	SJS5629	Connector (6 Pin)
45	SJS5715	Connector (7 Pin)
46	SJT3213	Post (2 Pin)
46	SJT3319	Post (3 Pin)
46	SJT3611	Post (6 Pin)
47	SMY897	Bracket
SCREWS		
N1	SNE4021	Nut
N2	XTBS3+10JFZ1	Tapping, 3x10
N3	XTB3+10GFR	Tapping, 3x10
N4	SNE2095-4	Cabinet
N4	SNE2095-5	Cabinet
N5	XTB3+8JFN	Tapping, 3x8
N5	XTB3+8JFZ	Tapping, 3x8
N6	XTB3+20J	Tapping, 3x20
N7	XTW3+10T	Tapping, 3x10
N8	XTBS3+20F1	Tapping, 3x20
N9	XTW3+8T	Transistor
N10	XYN3+F14	Power IC
N11	XTB3+8FFZ	Tapping, 3x8
N12	XTW3+8TFZ	Tapping, 3x8
N13	XYN3+C8FZS	Tapping, 3x8
N14	XTBS3+8JFZ1	Tapping, 3x8
N15 [XA]	XYN3+F8	Tapping, 3x8
ACCESSORIES		
A1	SJA172	AC Cord
[M, MC]		
A1 [EK]	SFDAC05G02	AC Cord
A1 [XL]	SJA173	AC Cord
A1 [XA]	SJA168-1	AC Cord
A1	SFDAC05E03	AC Cord
[other]		
A2	SKL302	Foot
A3 [XA]	SJP9215	Plug Adaptor, AC
A4 [M]	SQFK10142	Instruction Book
A4 [MC]	SQFK10143	Instruction Book
A4 [EGA]	SQFK10146	Instruction Book
A4 [XA]	SQFK10144	Instruction Book
A4 [other]	SQFK10145	Instruction Book
PACKING PARTS		
P1 [M]	SPGK255	Carton Box
P1 [MC]	SPGK260	Carton Box
P1 [EK]	SPGK257	Carton Box
P1 [EF]	SPGK281	Carton Box
P1 [other]	SPGK256	Carton Box
P2	SPSK99	Pad (Left)
P3	SPSK100	Pad (Right)
P4	SPS4613-1	Pad (Upper)
P5	SPP653	Polyethylene Bag
P6 [EF]	SGK1411	Label

EXPLODED VIEW

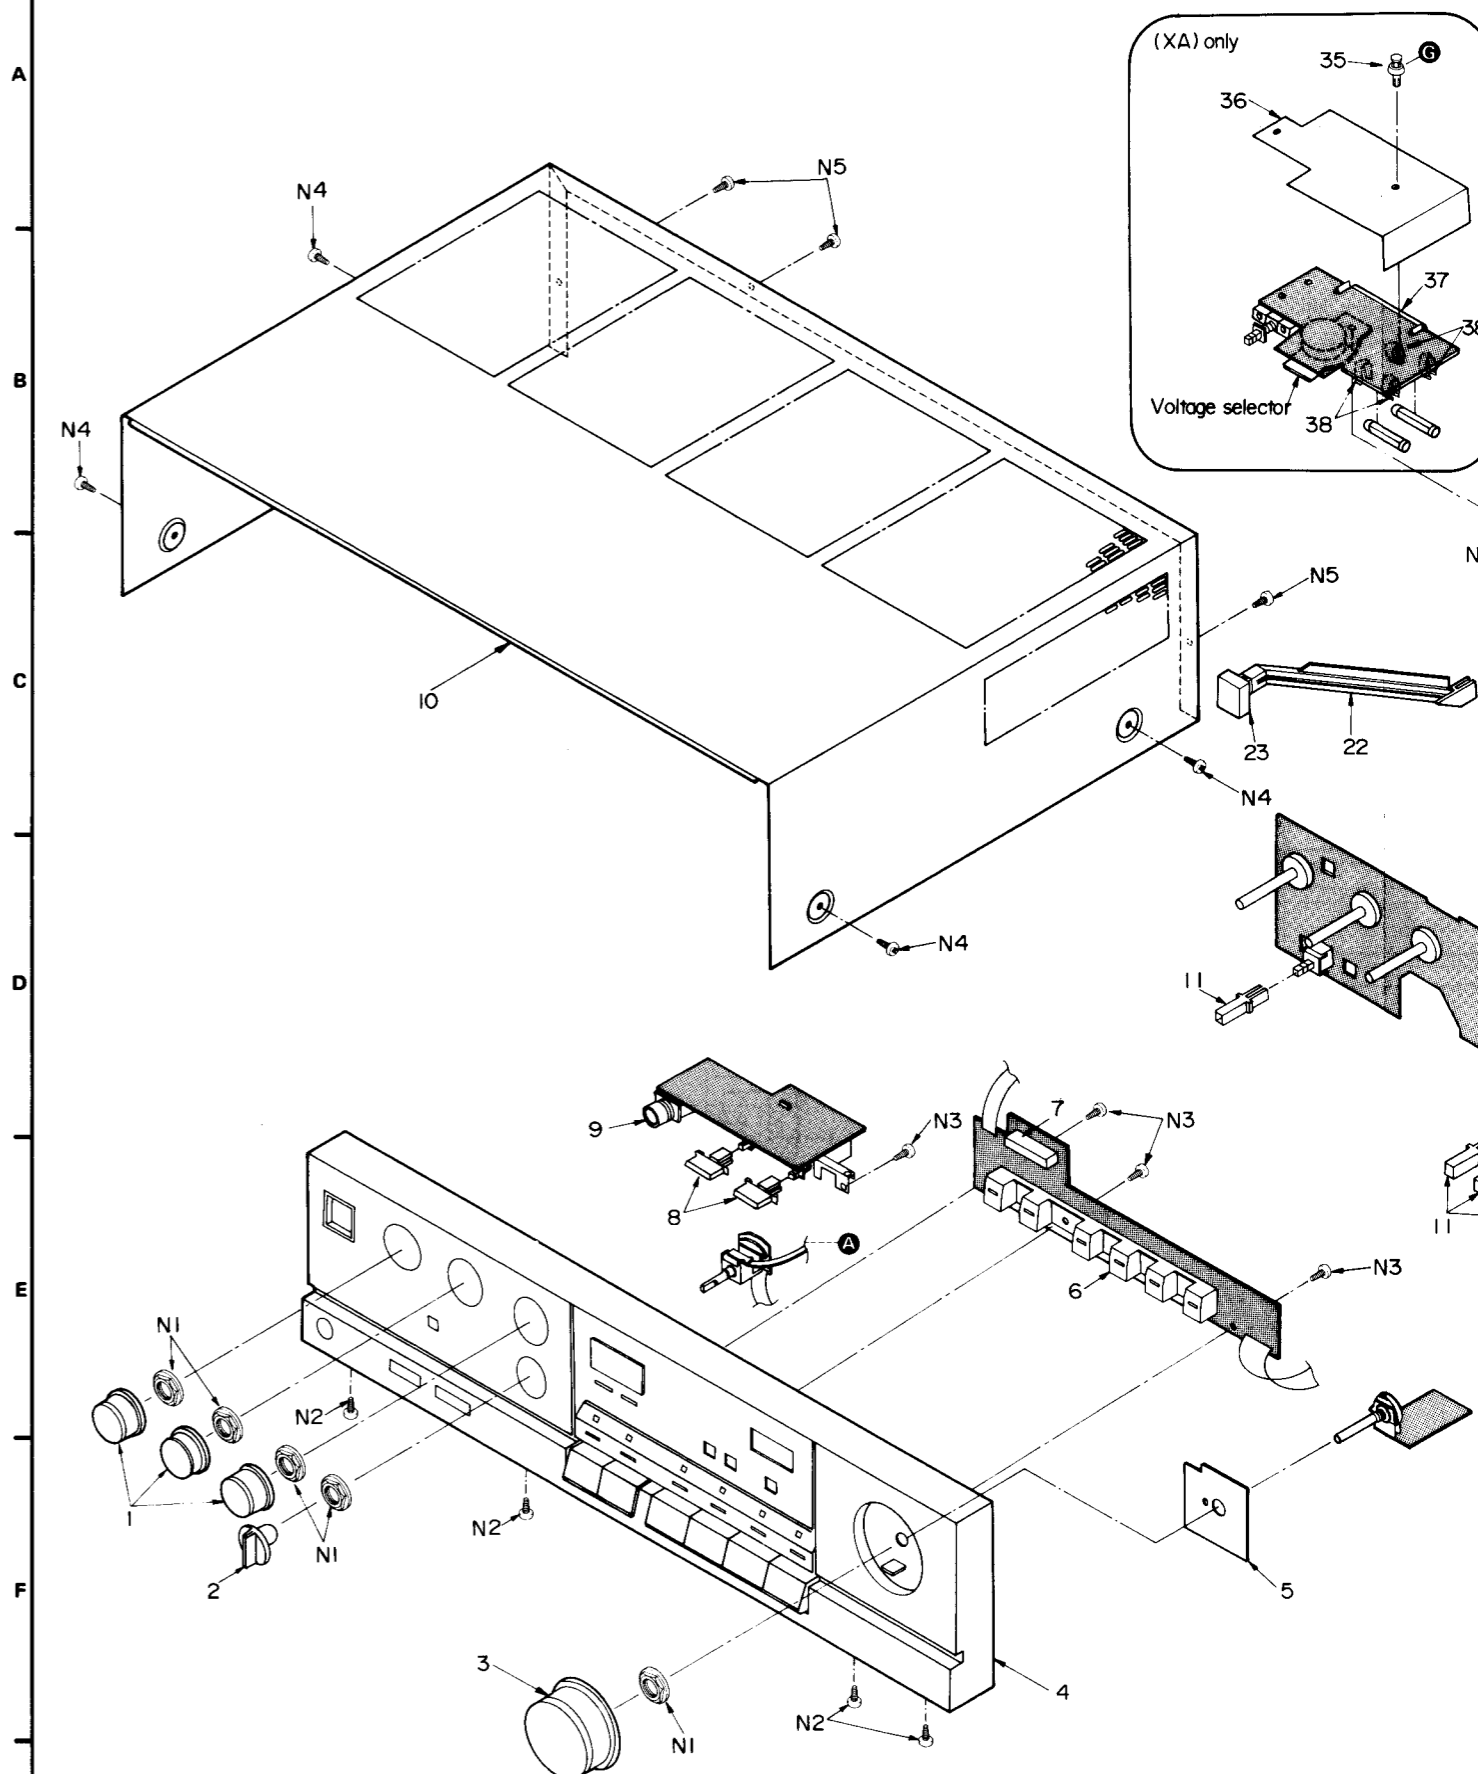

Stereo Integrated Amplifier

SU-V60


■ MESSUNGEN UND JUSTIERUNGEN

Einstellungen der Bedienelemente und zu verwendende Geräte

- Lautstärkereglern ∞
- Hauptlautsprecher-Wahlschalter off
- Nebenlautsprecher-Wahlschalter off
- Lautsprecherimpedanz-Schalter $8\Omega \sim 16\Omega$
- Elektronisches Gleichstrom-Voltmeter

LEERLAUF-(ICQ)-JUSTIERUNG

1. Anschlußverbindungen wie gezeigt vornehmen.
(Das Gleichspannungs-Voltmeter an beide Kanäle anschließen.)
2. Die ICQ-Volumenregler (**VR401, VR402**) entgegen dem Uhrzeigersinn drehen.
3. Das Gerät einschalten, wenn es kalt ist, und 15 Sekunden später **VR401** und **VR402** so justieren, daß die Spannung **20mV** beträgt. Ebenfalls überprüfen, daß die Spannung nach Ablauf von **10 – 15** Minuten zwischen **38 – 47mV** (Standardwert ist **40mV**) liegt. (Nach Ablauf von **60** Minuten: unter **50mV**)

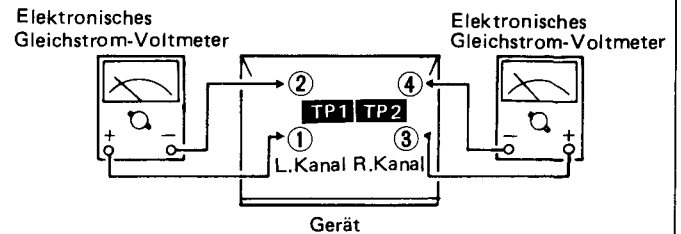


■ MESURAGES ET RÉGLAGES

Positions de réglage et équipement utilisé

- Bouton du volume ∞
- Sélecteur du haut-parleur principal hors circuit
- Sélecteur du haut-parleur auxiliaire hors circuit
- Sélecteur d'impédance des enceintes $8\Omega \sim 16\Omega$
- Voltmètres électroniques à C.C. (EVM).

RÉGLAGE DU TEMPS MORT (ICQ)

1. Effectue le raccordement comme il est montré.
(Raccorder le voltmètre à C.C. sur les deux canaux.)
2. Tourner le volume de contrôle de ICQ (**VR401, VR402**) dans sens inverse des aiguilles d'une montre, des aiguilles d'une montre.
3. Mettre l'appareil en marche lorsqu'il est froid, et 15 sec. plus tard, régler **VR401** et **VR402** de telle sorte que la tension soit de **20mV**. Vérifier aussi que la tension soit de **38 – 47mV** (normale: **40mV**) après un intervalle de **10 – 15** minutes. (Au-dessous de **50mV**, après un intervalle de **60** min.)

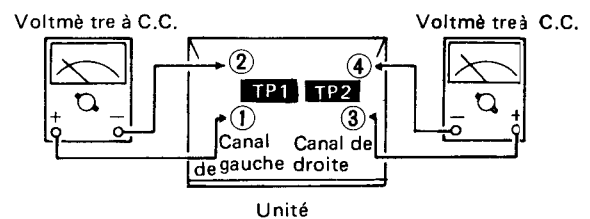

■ MEDICIONES Y AJUSTE

Posiciones de control y equipo usado

- Perilla de volumen ∞
- Selector de altavoz principal off (desconectado)
- Selector de altavoz remoto off
- Selector de impedancia de altavoces $8\Omega \sim 16\Omega$
- Voltímetro electrónico de CC (EVM)

AJUSTE DE MARCHA EN VACÍO (ICQ)

1. Hacer la conexión como se muestra.
(Conectar el voltímetro de CC en ambos canales.)
2. Girar el volumen de control ICQ (**VR401, VR402**) a la izquierda.
3. Prender el aparato cuando está frío y, 15 seg. más tarde, ajustar **VR401** y **VR402** de manera que el voltaje sea **20mV**. También, comprobar que el voltaje sea **38 – 47mV** (estándar: **40mV**) después de un lapso de **10 – 15** minutos. (Inferior a **50mV** después de un lapso de **60** min.)

