

# Service Manual


Stereo Integrated Amplifier

Amplifier

**SU-V650**

Color

(S) .....	Silver Type
(K) .....	Black Type

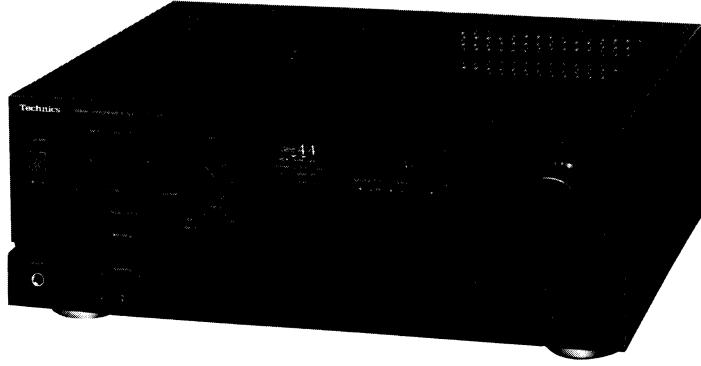

## SPECIFICATIONS

(DIN 45 500)

### ■ AMPLIFIER SECTION

20 Hz ~ 20 kHz continuous power output

both channels driven

2 x 90 W (8Ω)

1 kHz continuous power output

both channels driven

2 x 140 W (4Ω)

Total harmonic distortion

rated power at 20 Hz ~ 20 kHz

0.002% (8Ω)

rated power at 1 kHz

0.005% (4Ω)

half power at 20 Hz ~ 20 kHz

0.0009% (8Ω)

half power at 1 kHz

0.002% (4Ω)

0.0008% (8Ω)

Intermodulation distortion

rated power at 50 Hz:7 kHz = 4:1, SMPTE, 8Ω

0.005%

Power bandwidth

both channels driven, -3dB

5 Hz ~ 50 kHz (8Ω, 0.03%)

Residual hum and noise

0.8 mV

Damping factor

40 (4Ω), 80 (8Ω)

Input sensitivity and impedance

PHONO MM

2.5mV/47 kΩ

MC

170 μV/220 Ω

TUNER,CD,AUX,TAPE 1/DAT

TAPE 2/EXT

150mV/22 kΩ

PHONO maximum input voltage (IHF'66 1 kHz, RMS)

MM

160 mV

MC

12 mV

S/N

rated power(4Ω)

PHONO MM

78 dB (IHF'66 : 86 dB)

MC

65 dB (IHF'66 : 68 dB)

TUNER,CD,AUX,

TAPE 1/DAT, TAPE 2/EXT

92 dB (IHF'66 : 100 dB)

-26 dB power (4Ω)

PHONO MM

69 dB

MC

65 dB

TUNER,CD,AUX,

TAPE 1/DAT, TAPE 2/EXT

70 dB

50 mW power (4Ω)

PHONO MM

62 dB

MC

61 dB

TUNER,CD,AUX,

63 dB

TAPE 1/DAT, TAPE 2/EXT

### Frequency response

PHONO

RIAA standard curve  
± 0.8dB(30 Hz ~ 15 kHz)

TUNER,CD,AUX,

3 Hz ~ 100 kHz (-3 dB)

TAPE 1/DAT, TAPE 2/EXT

+0, -0.2 dB (20 Hz ~ 20 kHz)

### Tone controls

BASS

50 Hz, +10 dB ~ -10 dB

TREBLE

20 kHz, -6 dB/oct.

Subsonic filter

50 Hz, +9 dB

Loudness control (volume at -30 dB)

Output voltage

150 mV

TAPE 1/DAT, TAPE 2/EXT REC OUT

± 1 dB

Channel balance, AUX 250 Hz ~ 6,300 Hz

50dB

Channel separation, AUX 1 kHz

Headphones output level

635 mV/330 Ω

and impedance

Load impedance

20 kHz, +10 dB ~ -10 dB

MAIN or REMOTE

50 Hz, +9 dB

MAIN and REMOTE

4 Ω ~ 16 Ω

8 Ω ~ 16 Ω

### ■ GENERAL

Power consumption

670 W

Power supply

For United Kingdom and Australia

AC 50 Hz/60 Hz,

240 V

AC 50 Hz/60 Hz, 220 V

AC 50 Hz/60 Hz,

110 V/127 V/220 V/240 V

430 x 159 x 363 mm

(16-15/16" x 6-1/4" x 14-1/4")

10.1 kg (22.2 lb.)

Weight

### Notes:

1.Specifications are subject to change without notice.

Weight and dimensions are approximate.

2.Total harmonic distortion is measured by the digital

spectrum analyzer (H.P. 3045 system).

# Technics

Matsushita Electric Industrial Co., Ltd.  
Central P.O. Box 288, Osaka 530-91, Japan

Panasonic Tokyo Sales Department  
Matsushita Electric Industrial Co., Ltd.  
World Trade Center Bldg., 4-1, Hamamatsu-cho,  
2-chome, Minato-ku, Tokyo 105, Japan

## ■ CONTENTS

	Page		Page
BEFORE REPAIR AND ADJUSTMENT .....	2	TERMINAL GUIDE OF IC'S,	
PROTECTION CIRCUITRY .....	2	TRANSISTORS AND DIODES .....	17
ACCESSORIES .....	2	MEASUREMENTS AND ADJUSTMENTS .....	17
LOCATION OF CONTROLS .....	3, 4	BLOCK DIAGRAM .....	18, 19
CONNECTIONS .....	5, 6	REPLACEMENT PARTS LIST .....	20, 23, 26
DISASSEMBLY INSTRUCTIONS .....	7, 8	EXPLODED VIEW .....	21, 22
SCHEMATIC DIAGRAM .....	9~12	RESISTORS AND CAPACITORS .....	24~26
CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM .....	13~16		

## ■ BEFORE REPAIR AND ADJUSTMENT

- (1) Turn off the power supply. Using a 10Ω, 10W resistor, shortcircuit both ends of power supply capacitors (C705,C706)in order to discharge the voltage.
- (2) Before turning on the power switch of the unit.
  - A. Connect the voltage controller to the primary side.
  - B. Connect the AC ampere meter to the primary side or connect the DC voltage meter to the "±B" circuit of the secondary side.
  - C. Turn the VR of ICQ(VR401 and VR402)to minimum(counterclockwise).
  - D. After setting the output to zero of the voltage controller,turn on the power switch of the unit.  
And increase the output of voltage controller gradually.  
Then, check carefully whether the current value of primary side become more than following value or whether the DC voltage of secondary side is increasing slowly.
  - E. If the value of current is increasing unusually or the DC voltage is not increasing,lower the output level of voltage controller immediately.
  - The current value of the primary side at no signal. (Confirm the power supply voltage of each area and provided voltage of the unit.)

Power supply voltage	AC110V	AC127V	AC220V	AC240V
Consumed current 50/60Hz	280 ~ 560mA	260 ~ 520mA	140 ~ 280mA	130 ~ 260mA

## ■ PROTECTION CIRCUITRY

The protection circuitry of the amplifier may have operated if either of the following conditions is noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlined below:



- 1.Turn off the power.
- 2.Determine the cause of the problem and correct it.
- 3.Turn on the power once again.

### Note:

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

## ■ ACCESSORIES

●AC power supply cord .....	1	●Feet .....	2
(SJA168) .....	For (XA), (PA) and (PE) areas.		
(SJA173) .....	For (XL) area only.		
(SJA193) .....	For (EK) area only.		
(SFDA05E03) .....	For others.		

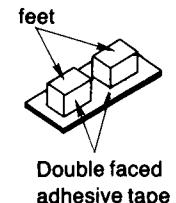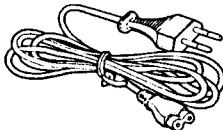

**SU-V650****■ LOCATION OF CONTROLS****• Subsonic filter switch (subsonic filter)**

**off (■—■):** Set to this position for ordinary use.  
**20 Hz (■—■):** Set to this position to eliminate ultra-low-frequency noise such as motor "rumble" and unusual vibration of the woofer cone caused by a warped disc, etc.

**• Operation indicators (amplifier operation monitor)**

This indicator illuminates to indicate the operating condition of this unit.

**voltage control:**

When the power is switched ON, this indicator illuminates when the unit is in the operation condition.

**current drive:**


When the power is switched ON, this indicator illuminates after about 4 seconds when the unit is in the operation condition. If an abnormal condition in the circuitry is detected, such as DC voltage appearing in the output, or a short-circuit of the positive (+) and negative (-) wires from the speaker terminals, the protection circuit functions and this indicator does not illuminate. If this occurs, switch the power OFF, find the cause of the trouble and correct it, and then switch the power ON once again.

**• Balance control (balance)**

This control is used to adjust left/right volume balance.

**• Tone controls (bass/treble)**

The bass control is for the low-frequency sound range, and the treble control is for the high-frequency sound range.

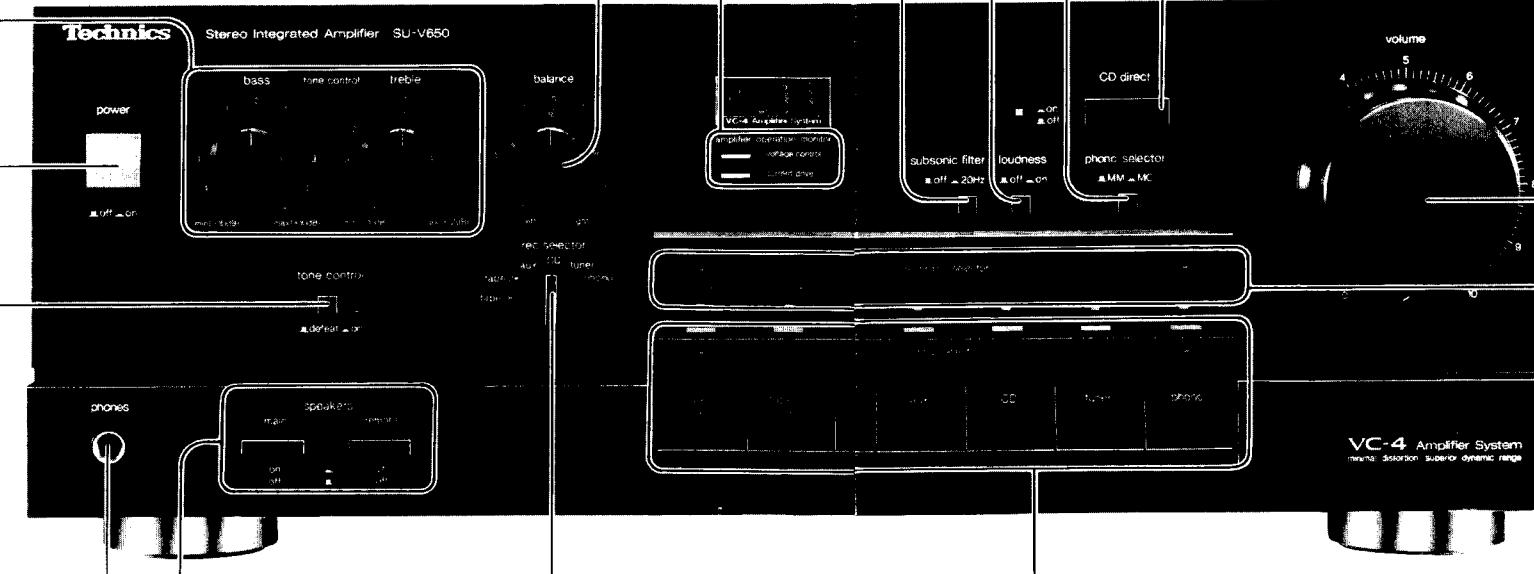**• Power switch (power)****• Tone control switch (tone control)**

This switch is used to switch the tone control circuit (bass, treble) ON or OFF.

**defeat (■—■):**

Set to this position to turn the bass/treble tone control circuit off. Regardless of the positions of the bass/treble tone controls, the characteristics will remain flat.

**on (■—■):**

Set to this position to adjust the tone quality by using the tone controls.

**• Headphones jack (phones)****• Speaker selectors (speakers)**

These selectors are used to switch the speaker systems ON and OFF.

**main on (■—■):**

Sound can be heard from the speakers connected to the "MAIN" terminals.

**remote on (■—■):**

Sound can be heard from the speakers connected to the "REMOTE" terminals.

**• Recording output selector (rec selector)**

This selector is used to select the signal to be recorded by the connected tape deck.

**tape 1▶2:**

Set to this position to record from tape deck 1 to tape deck 2.

**tape 2▶1:**

Set to this position to record from tape deck 2 to tape deck 1.

**aux:**

Set to this position to record the signals from equipment connected to the "AUX" terminals.

**CD:**

Set to this position to record from a compact disc.

**tuner:**

Set to this position to record from radio broadcasts.

**phono:**

Set to this position to record from phono discs.

**• Loudness switch (loudness)**

Set to the "on" position when listening to music at a low volume. Auditory perception of sound in the low frequency range falls off at low volume, but when the switch is in this position, this deficiency is compensated for, so that the full impact of the musical performance can be enjoyed.

**• Phono cartridge selector (phono selector)**

This selector should be set to the position which corresponds to the type of cartridge used on the turntable.

**MM (■—■):**

Set to this position when using a moving-magnet type cartridge or high-output moving-coil cartridge (1 mV or more).

**MC (■—■):**

Set to this position when using a moving-coil type cartridge (less than 1 mV).

**• Compact disc direct-through switch (CD direct)**

Even better tone quality of the very high quality signals from a compact disc can be obtained by routing these signals directly to the volume level adjustment, without passing them through an input selector.

When this switch is set to the "on" position, the sound source selected by the input selectors cannot be heard.

**• Volume control (volume)**

This control is used to adjust the volume level. Be absolutely sure to set this control to a low position before switching the power ON. After the power is switched ON, please wait several seconds before increasing the volume level.

**• Recording output indicators (recording selector)**


These indicators indicate the program source which can be recorded.

Each indicator lights up corresponding with the selected position of the recording output selector.

## ■ CONNECTIONS


### "CD" terminals

Connect a compact disc player.

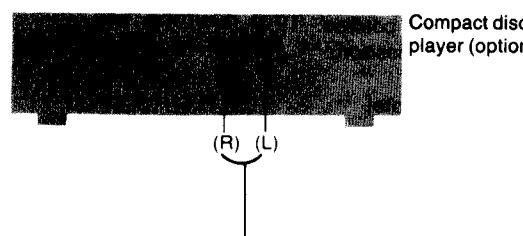



### "TAPE 1/DAT" terminals

In addition to a tape deck, the analog terminals of a digital audio tape deck (DAT) can be connected here. If the digital audio tape deck is connected, connect the tape deck to the "TAPE 2/EXT" terminals.

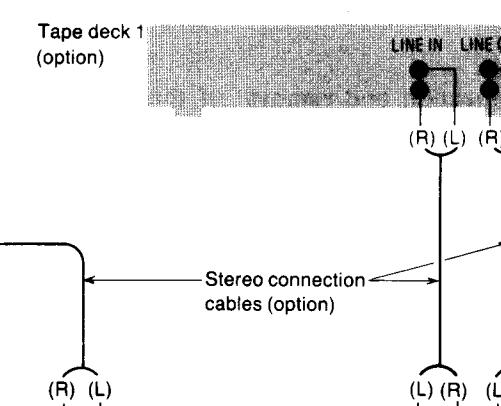



### "PHONO" terminals

Connect a turntable.

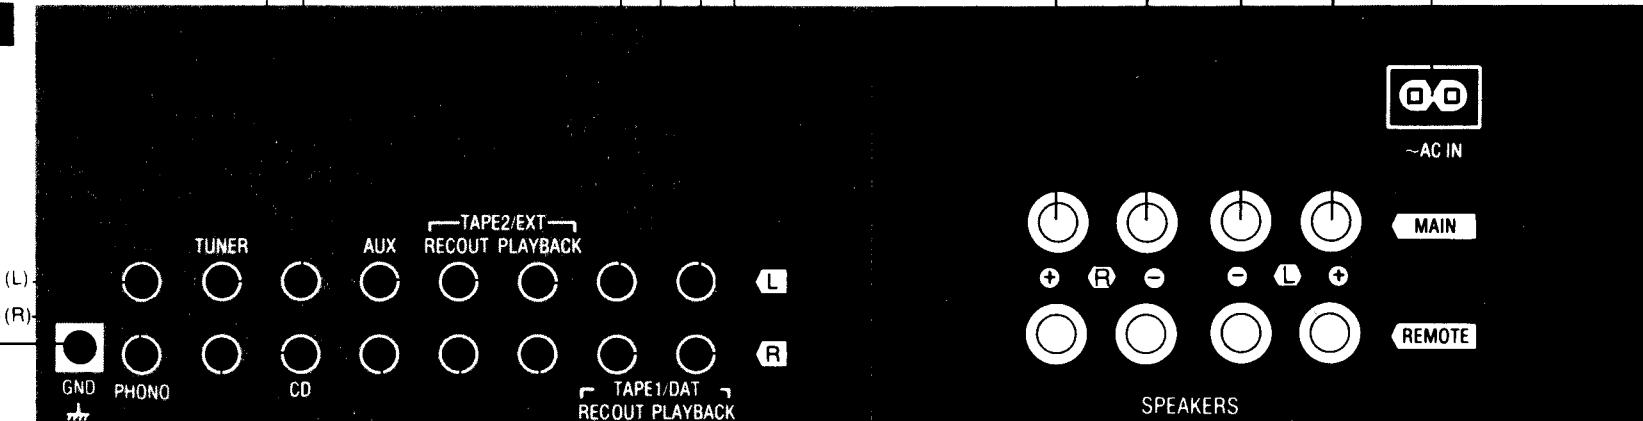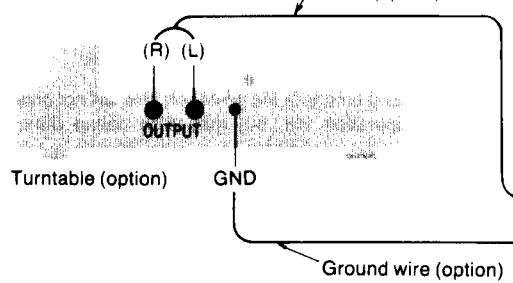


### "TUNER" terminals

Connect a tuner.

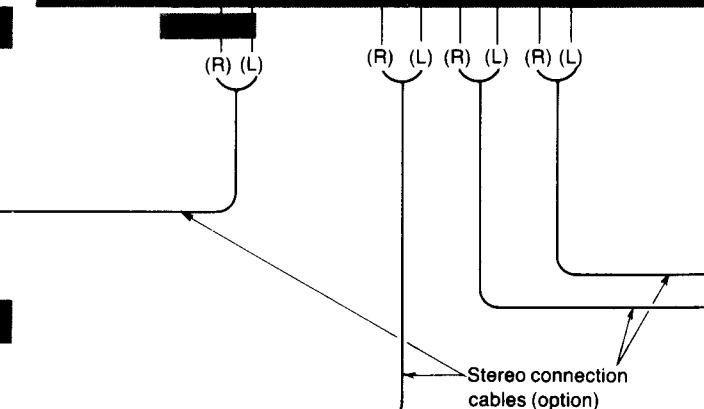


### "AUX" terminals

Connect a video disc player etc. These terminals are audio playback only.

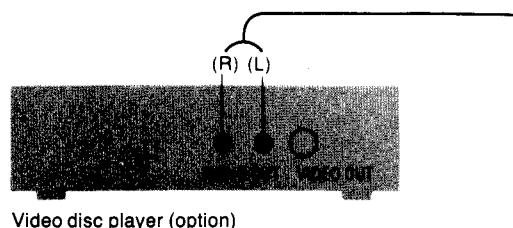

\*Phono input capacitance is about 100 pF.

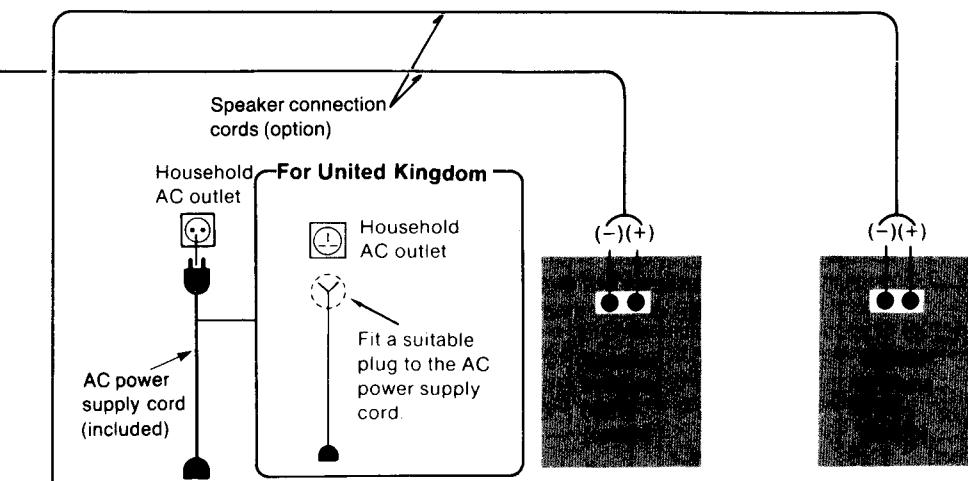

**■ Load impedance:**  
MAIN and REMOTE : 8~16Ω  
MAIN or REMOTE : 4~16Ω

This unit

### "SPEAKERS" terminals

#### ■ Connection of speaker wires

1. Strip off the outer covering, and twist the center conductor.



2. Turn 5 or 6 times.




3. Insert wire and tighten screw completely. Pull the wire to assure a proper connection.



#### Notes:

1. To prevent damage to circuitry, never short plus (+) and minus (-) speaker terminals.

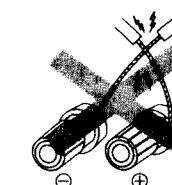




2. Be sure to only connect positive (+) cords to positive (+) terminals, and negative (-) cords to negative (-) terminals.

### ■ "REMOTE" terminals


Connection to second pair of speakers.

## ■ DISASSEMBLY INSTRUCTIONS


Ref. No. 1	<b>How to remove the cabinet</b>	
Procedure 1	• Remove the 7 screws (①~⑦).	
Ref. No. 2	<b>How to remove the front panel</b>	<ol style="list-style-type: none"> <li>1. Remove the 2 connectors (J1, J2).</li> <li>2. Remove the rec selector switch controller.</li> <li>3. Remove the 4 screws (①~④).</li> </ol>
Procedure 1→2		
Ref. No. 3	<b>How to remove the power switch button</b>	<p><b>How to remove the rec selector switch controller</b>      • Pull up the rec selector switch controller in the direction of the arrow as shown in figure 1 and then remove it.      (See Fig. 1)</p> <p><b>How to replace the rec selector switch controller</b>      1. Push the switch contact in the direction of the arrow.      (See Fig. 2)      2. Rotate the rec selector knob counterclockwise.      (See Fig. 2)      3. Install the rec selector switch controller in the rec selector switch. (See Fig. 3)</p>
Procedure 1→3	<ol style="list-style-type: none"> <li>1. Remove the power switch button by pushing it from behind the front panel.</li> <li>2. Remove the 2 screws (①, ②).</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove the power switch button by pushing it from behind the front panel.</li> <li>2. Remove the 2 screws (①, ②).</li> </ol>
		<ol style="list-style-type: none"> <li>1. Remove the power switch button by pushing it from behind the front panel.</li> <li>2. Remove the 2 screws (①, ②).</li> </ol>
Ref. No. 4	<b>How to remove the AC IN/ OUTLET P.C.B.</b>	<p><b>Procedure 1→4</b></p> <ul style="list-style-type: none"> <li>• Release the 3 claws.</li> </ul>

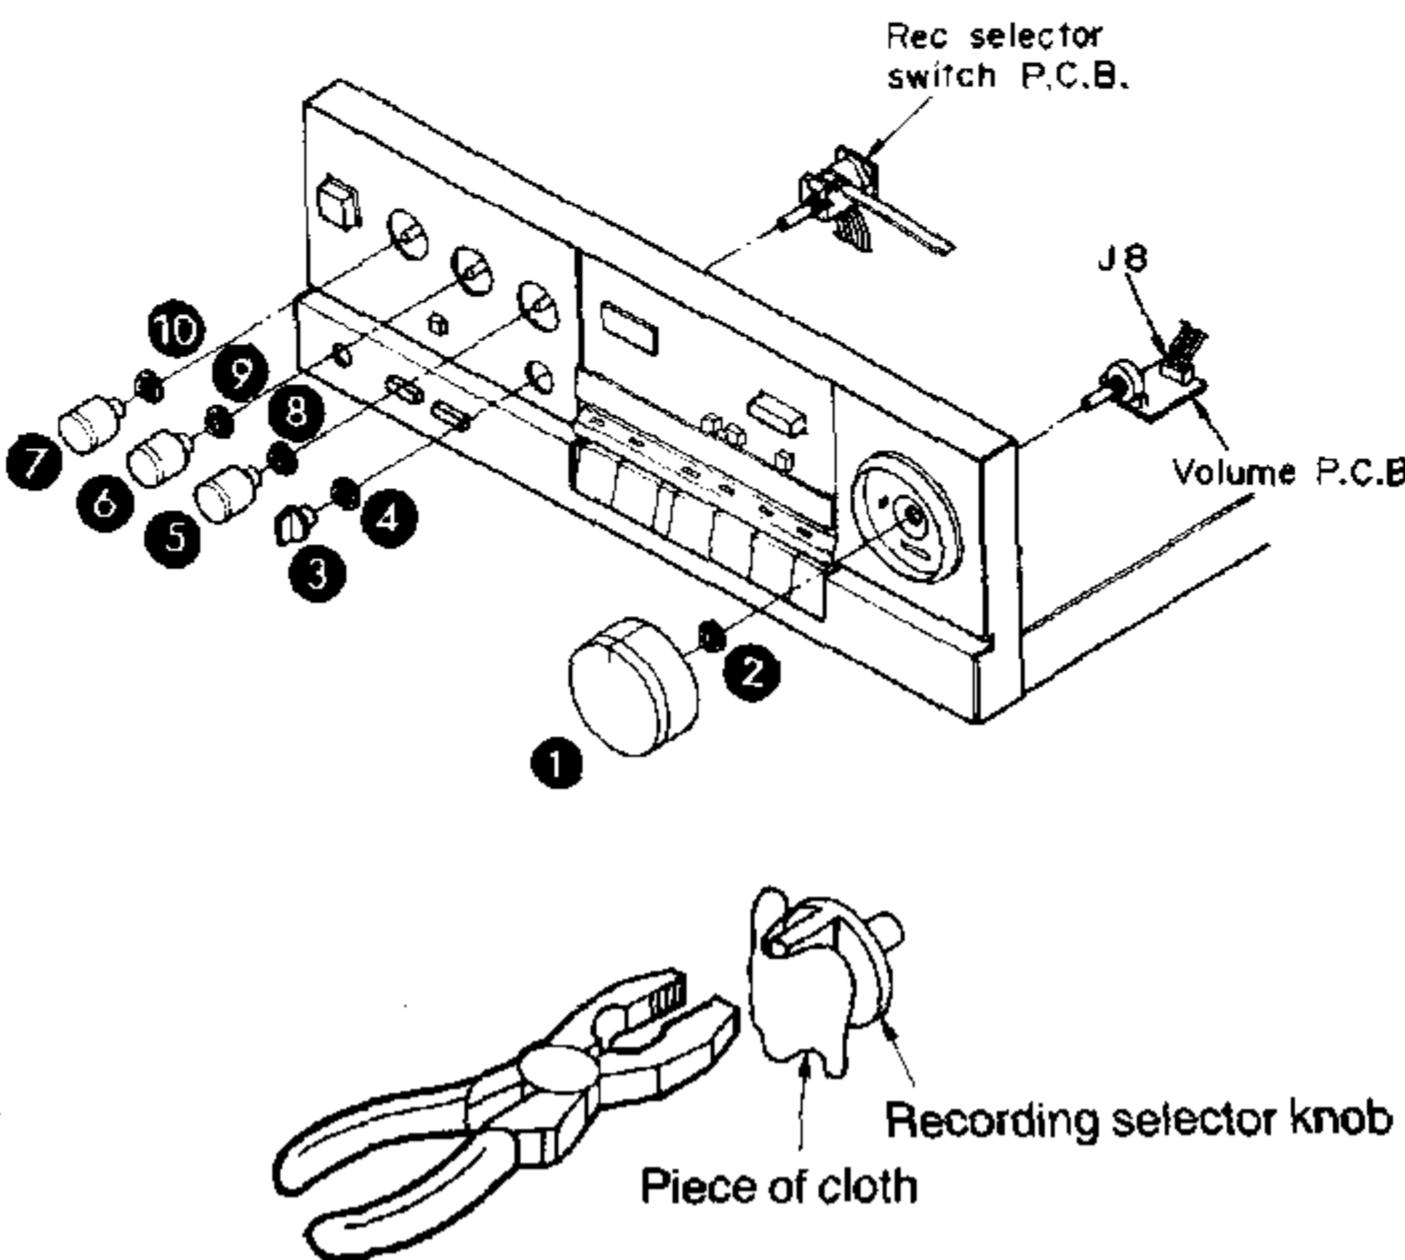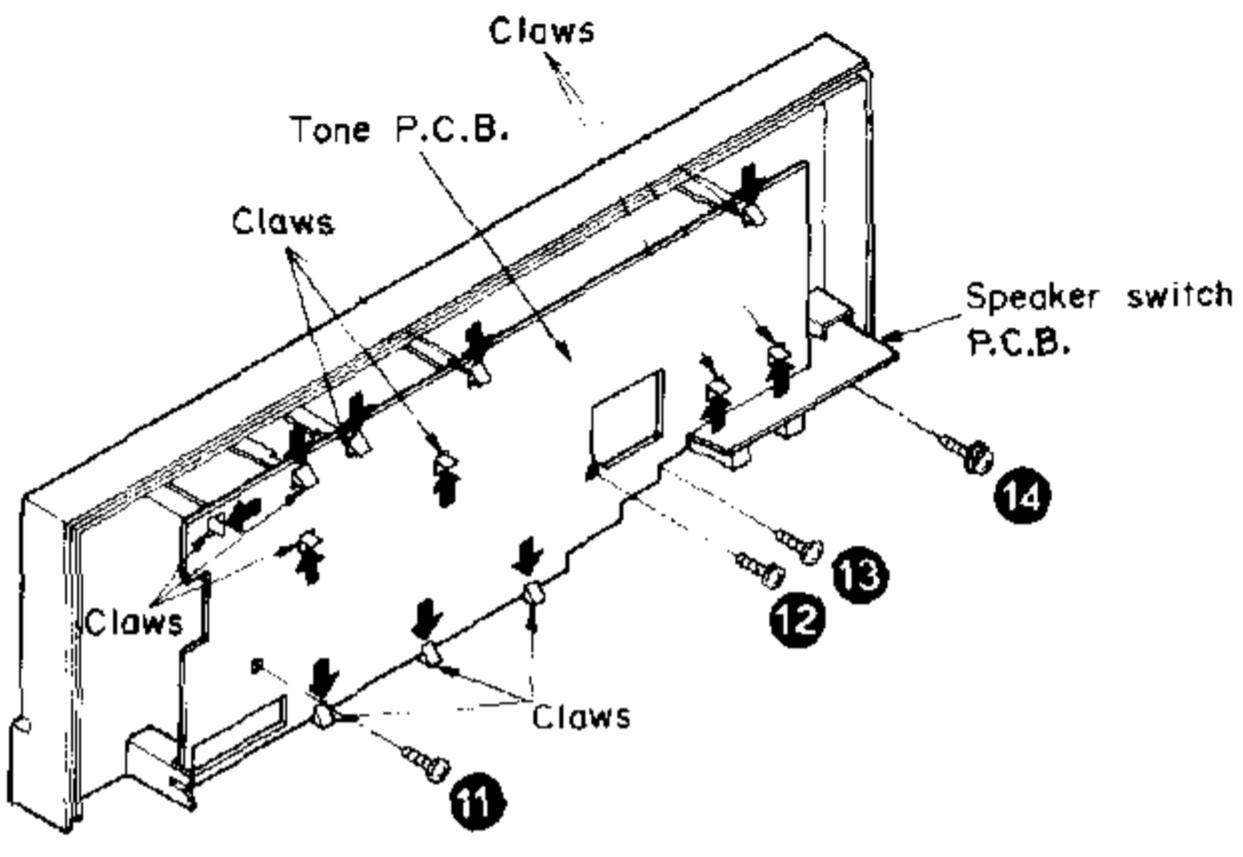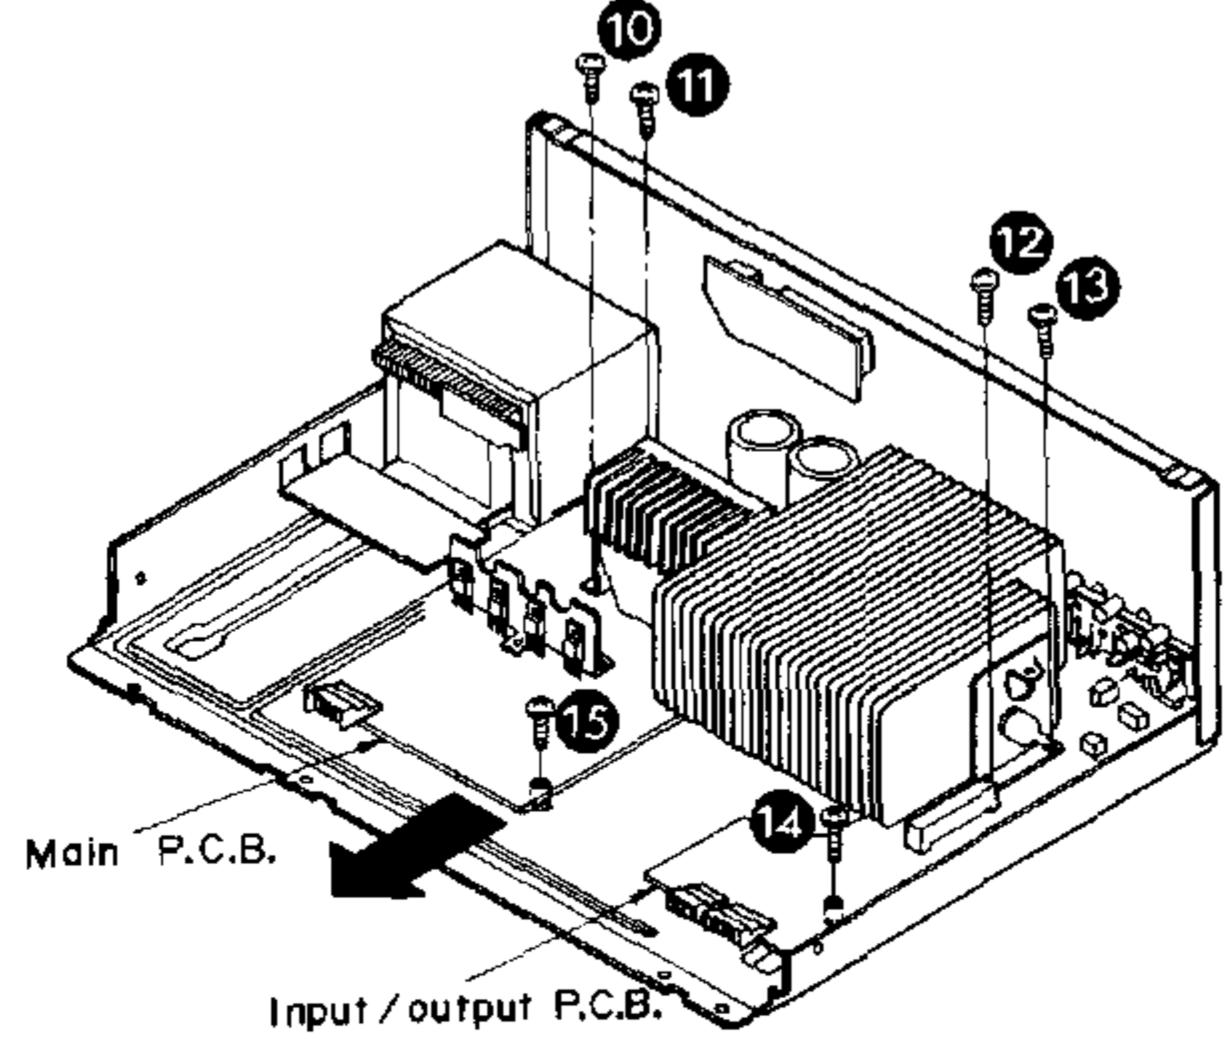
Ref. No. 5	<b>How to remove the rec selector switch P.C.B., volume P.C.B., tone P.C.B. and speaker switch P.C.B.</b>	<b>How to remove the volume P.C.B.</b> 1. Remove the 1 knob (1) and 1 nut (2). 2. Remove the flat cable (J8). <b>How to remove the rec selector switch P.C.B.</b> 1. Remove the 1 knob (3) and 1 nut (4). To prevent damage to the recording selector knob when removing it with a pair of pliers, wrap it up with a piece of cloth as shown. <b>How to remove the tone P.C.B.</b> 1. Remove the 3 knobs (5 ~ 7) and 3 nuts (8 ~ 10). 2. Remove the 2 screws (11, 12). 3. Release the 12 claws. <b>How to remove the speaker switch P.C.B.</b> 1. Remove the 2 screws (13, 14).
Procedure 1→2→5		
Ref. No. 6	<b>How to remove the main P.C.B. and input/output P.C.B.</b>	<p><b>Note:</b> To check the unit for continuity when it is turned on, place it on its right side panel where the power IC is installed. This will prevent abnormal temperature from rising inside the unit.</p> 
Procedure 1→2→6	1. Remove the 15 screws (1 ~ 15). 2. Remove the main P.C.B. and input/output P.C.B. in the direction of arrow.	

## ■ SCHEMATIC DIAGRAM

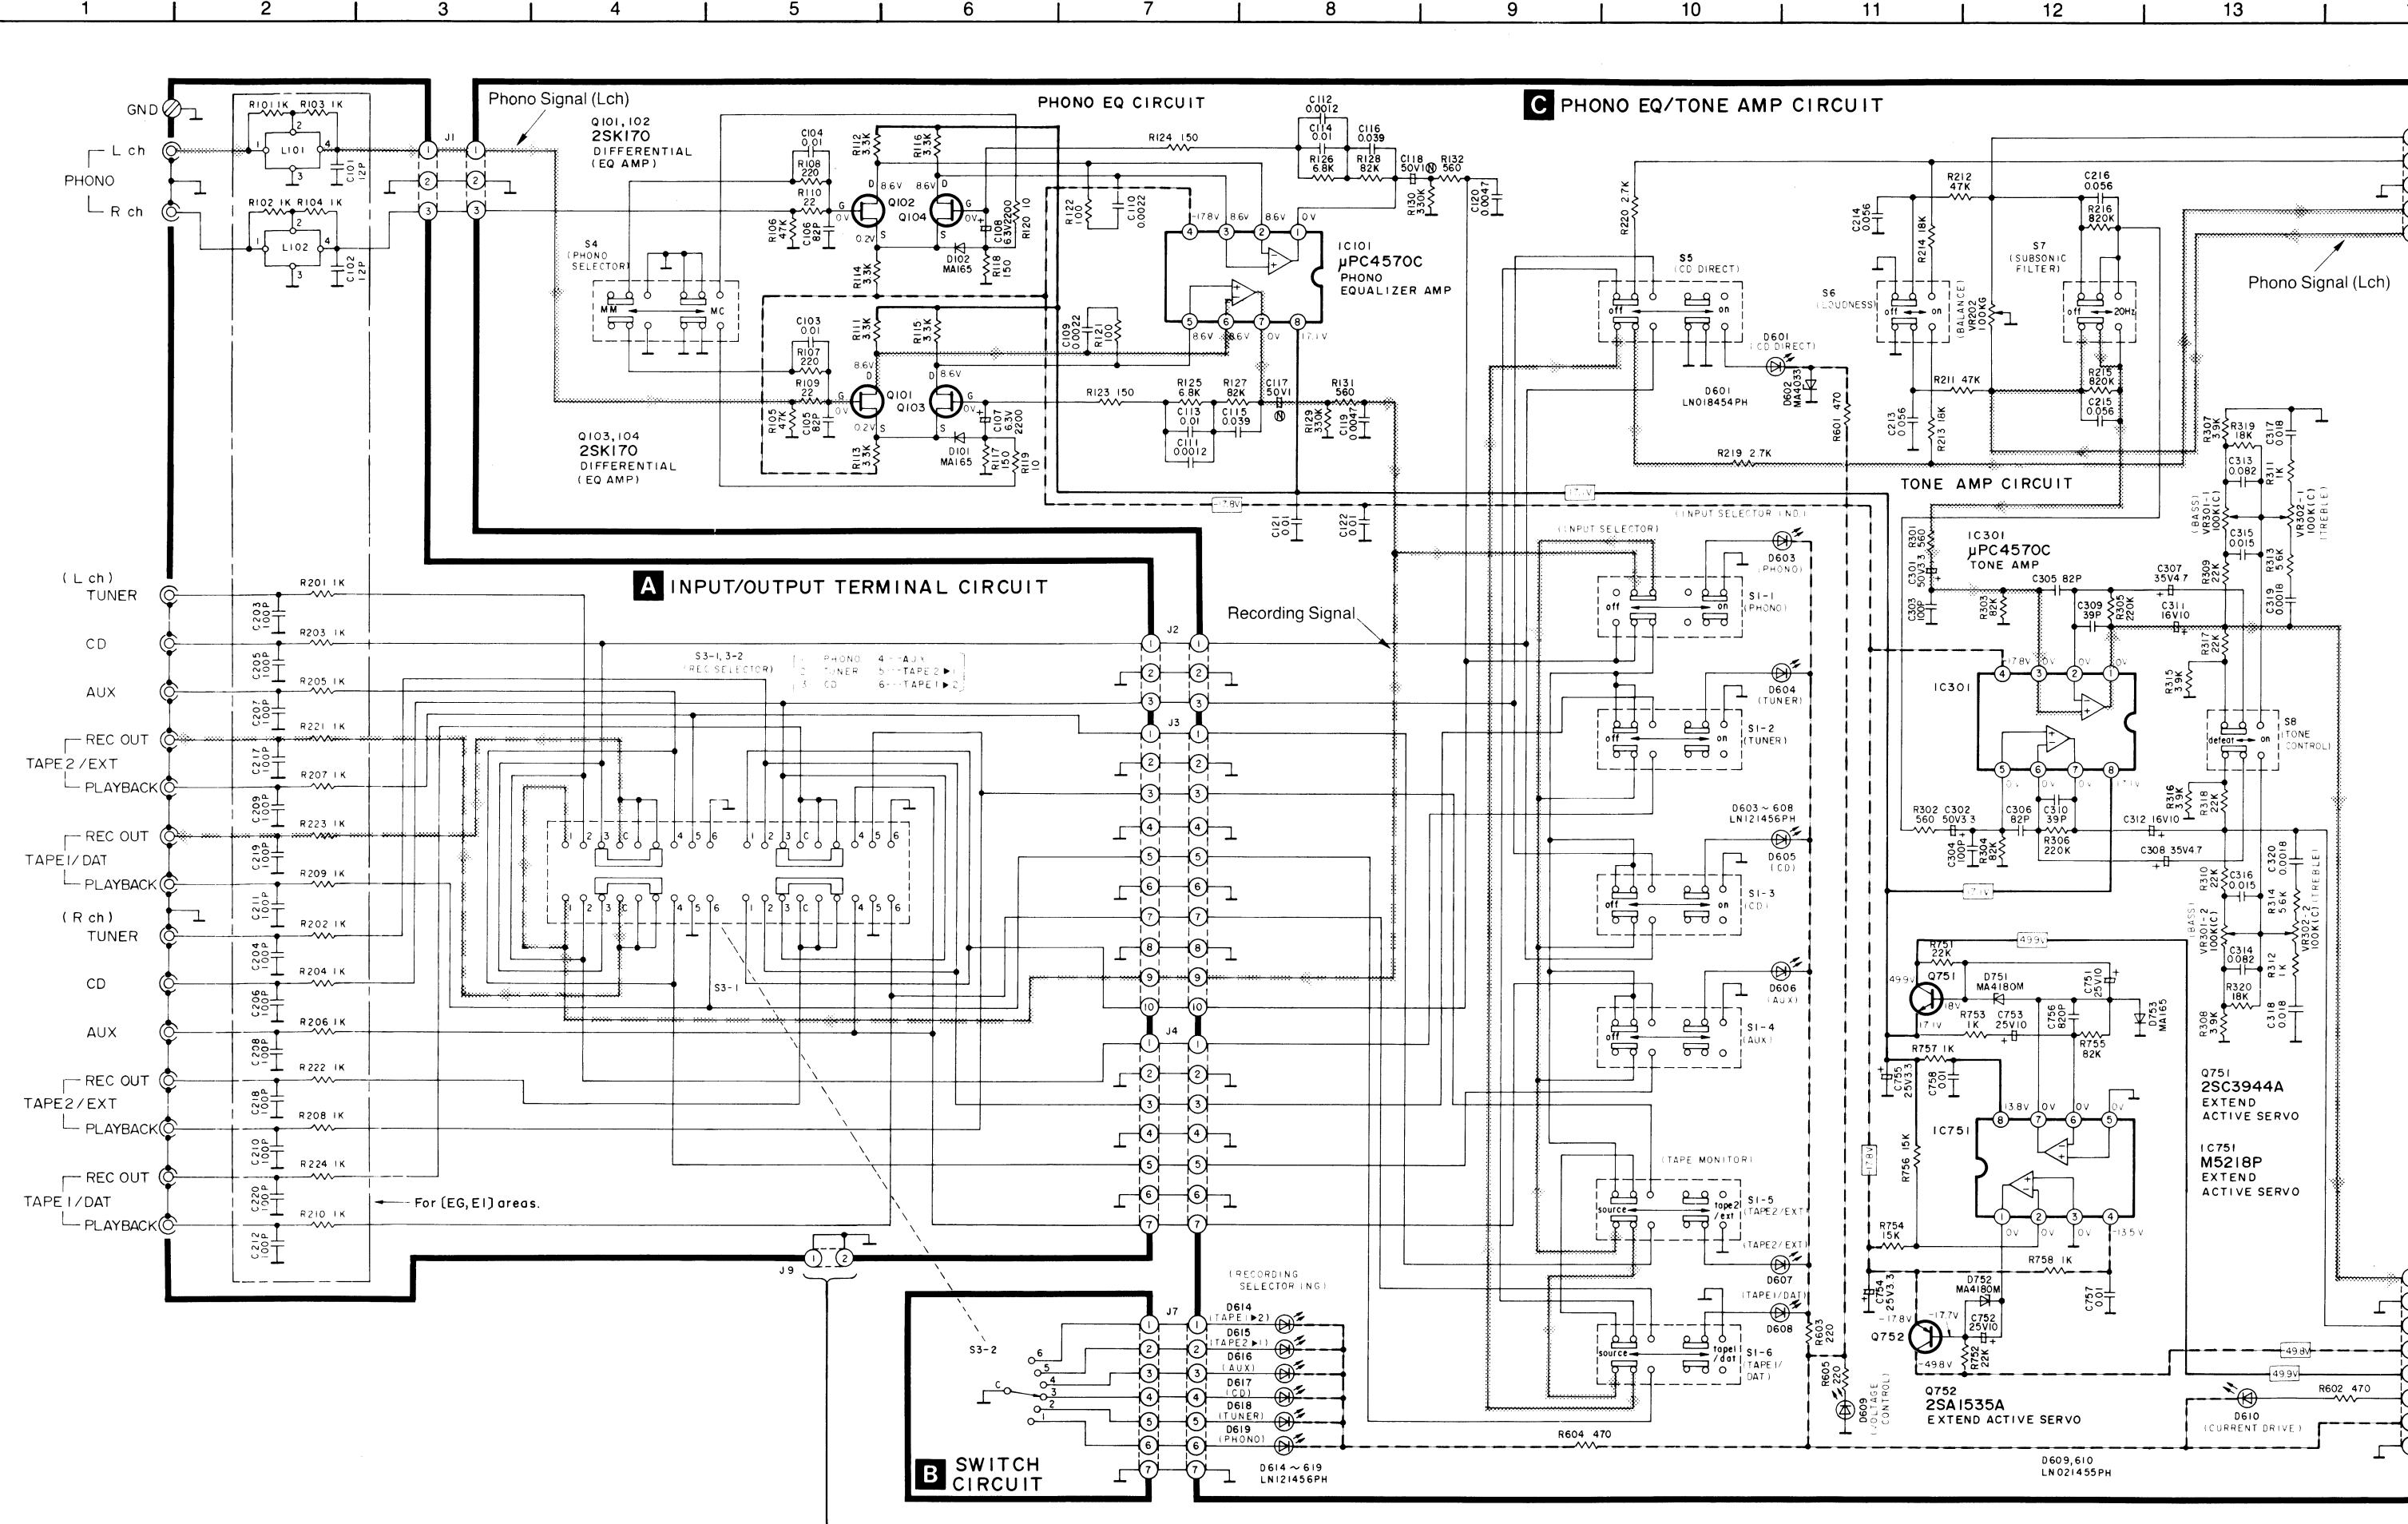


5/2014

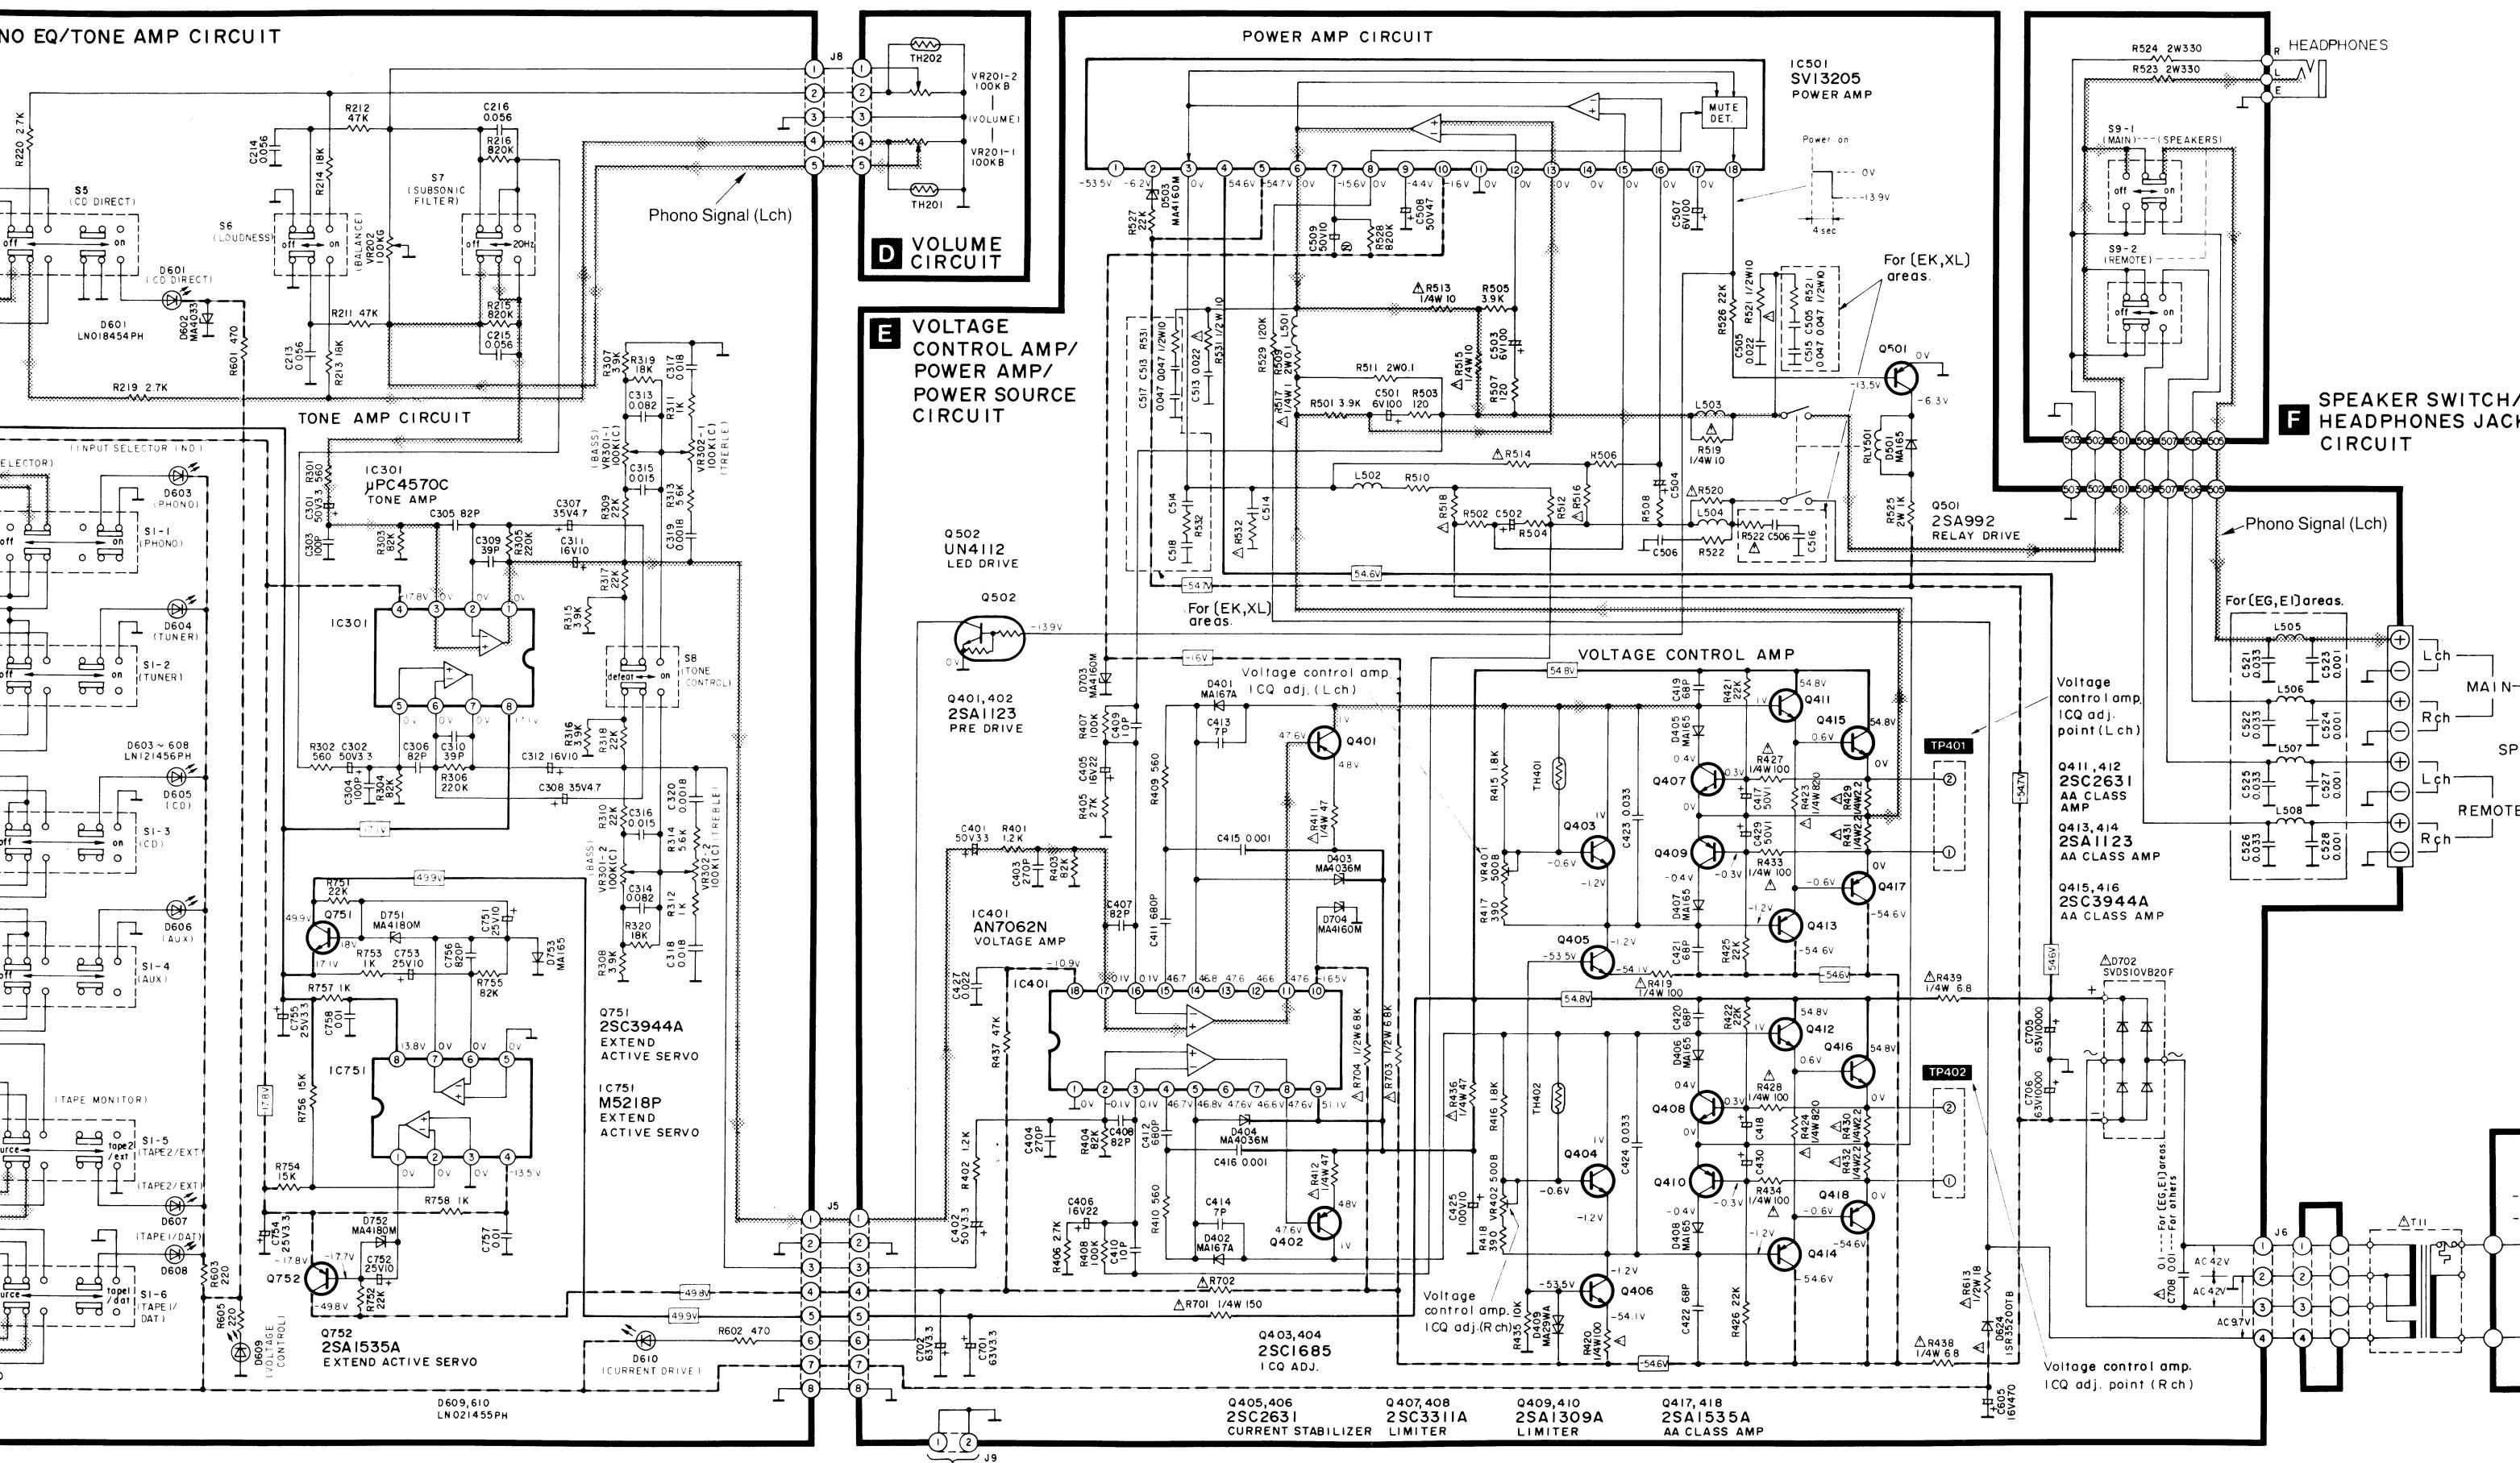

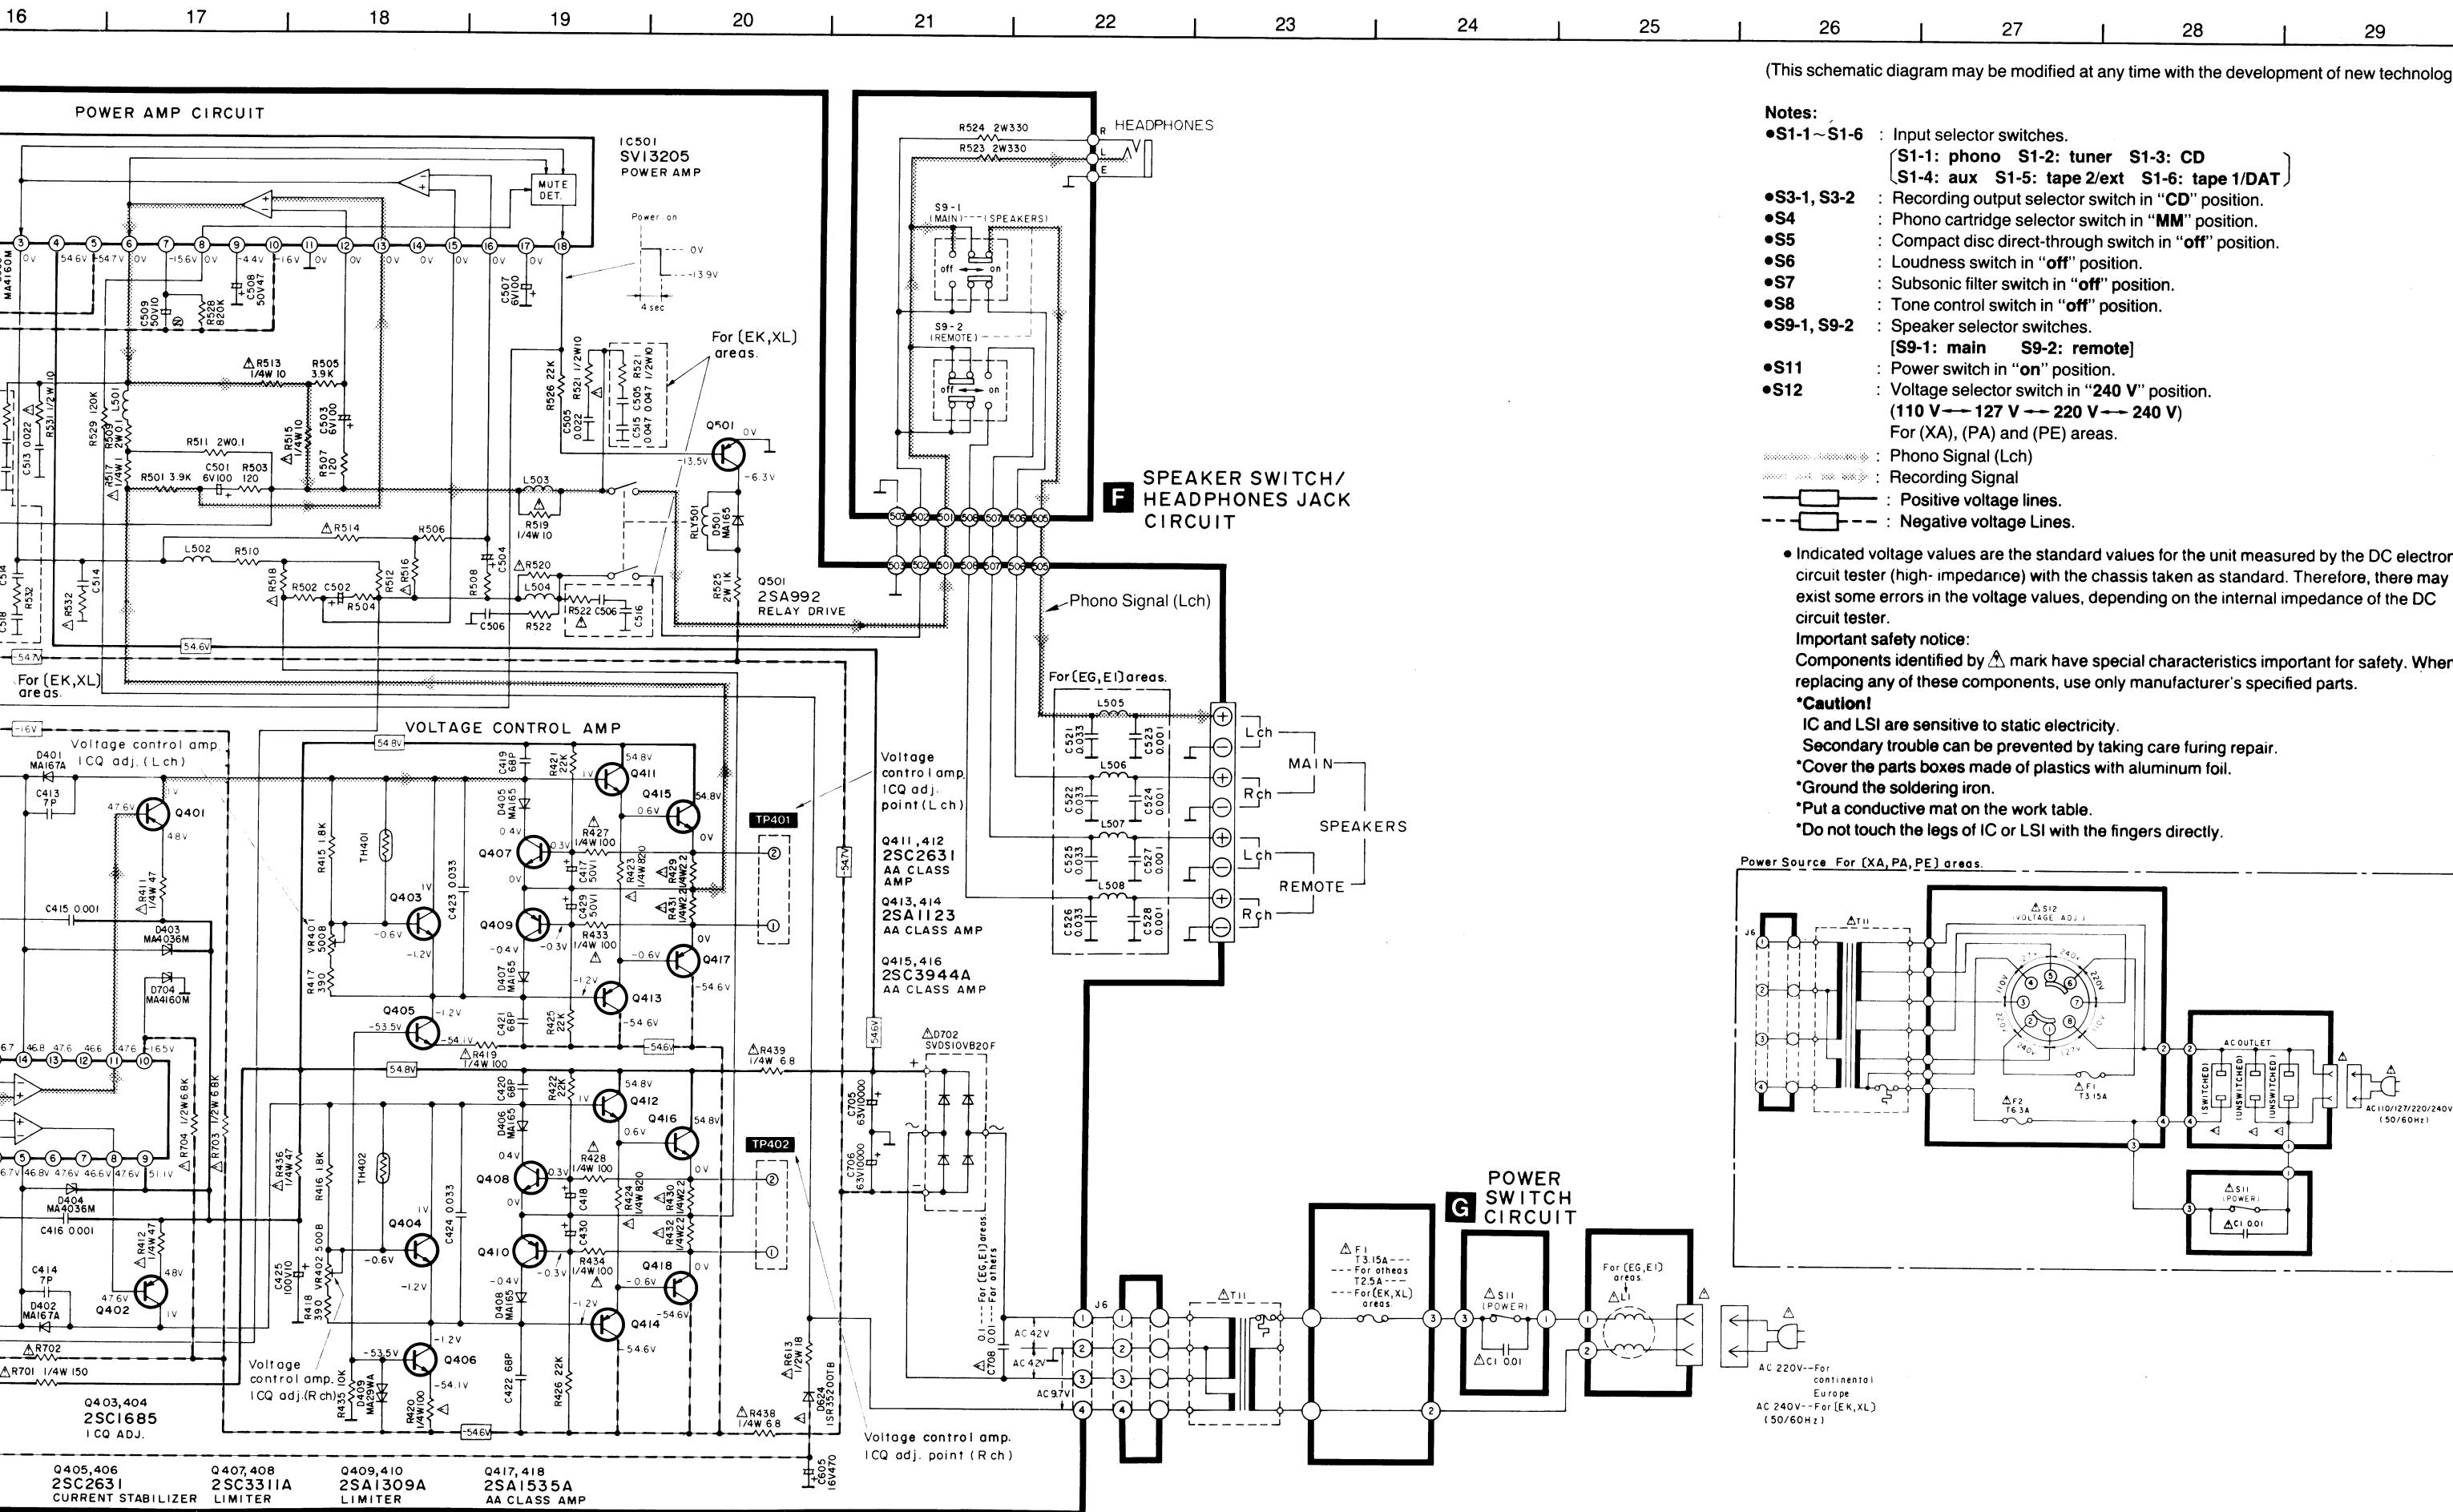

# CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

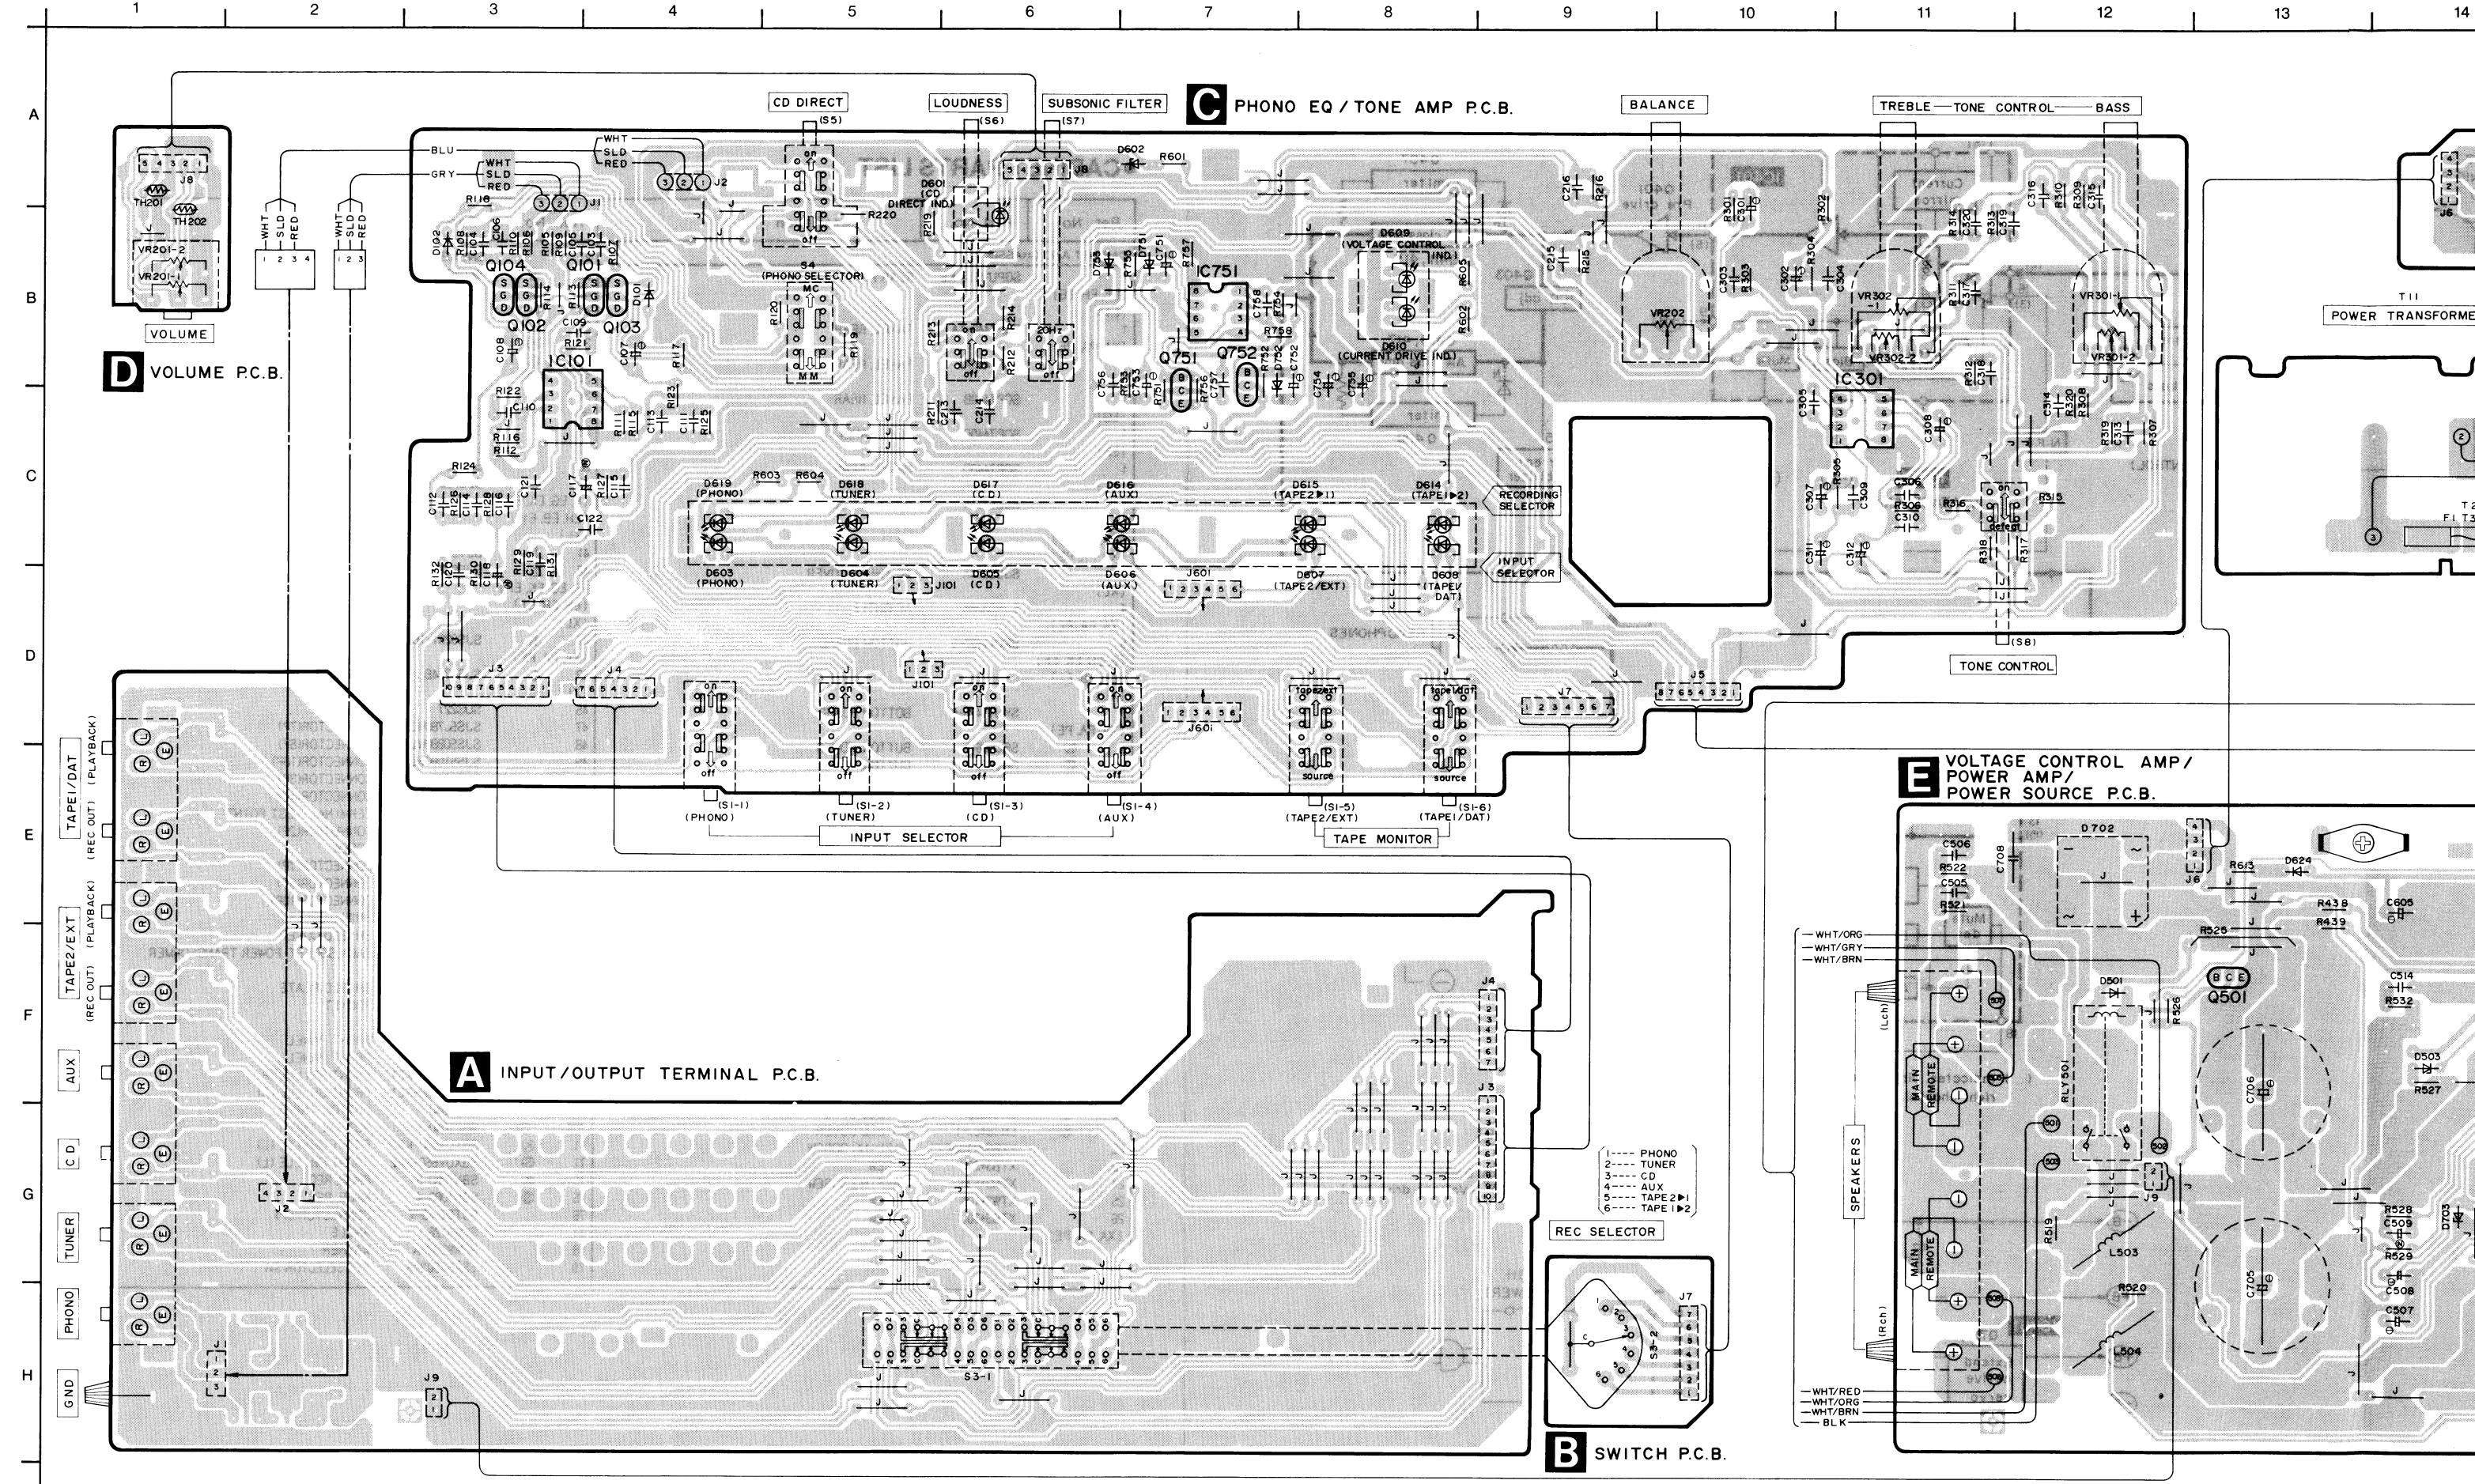

13

14



15

1

1

1

25

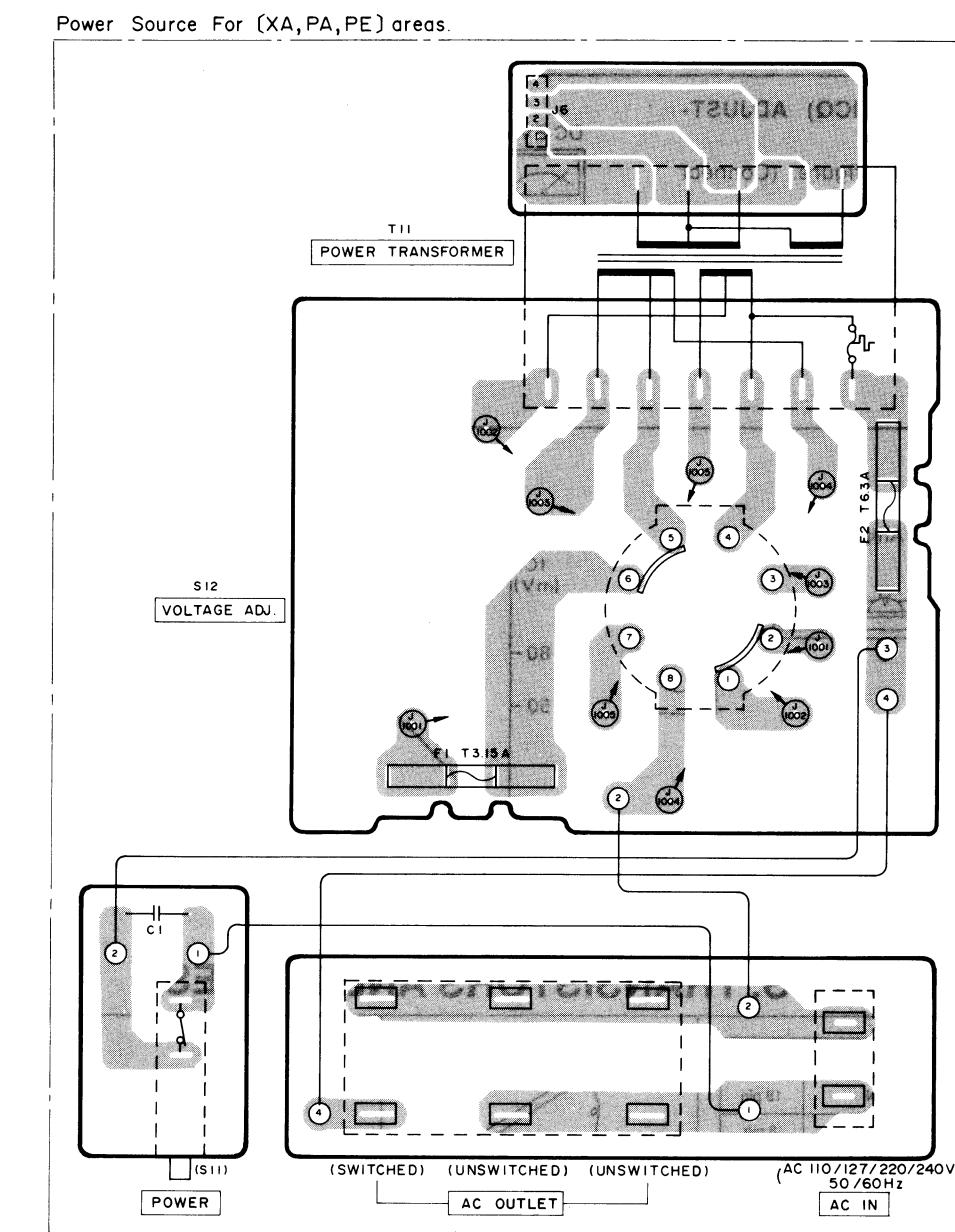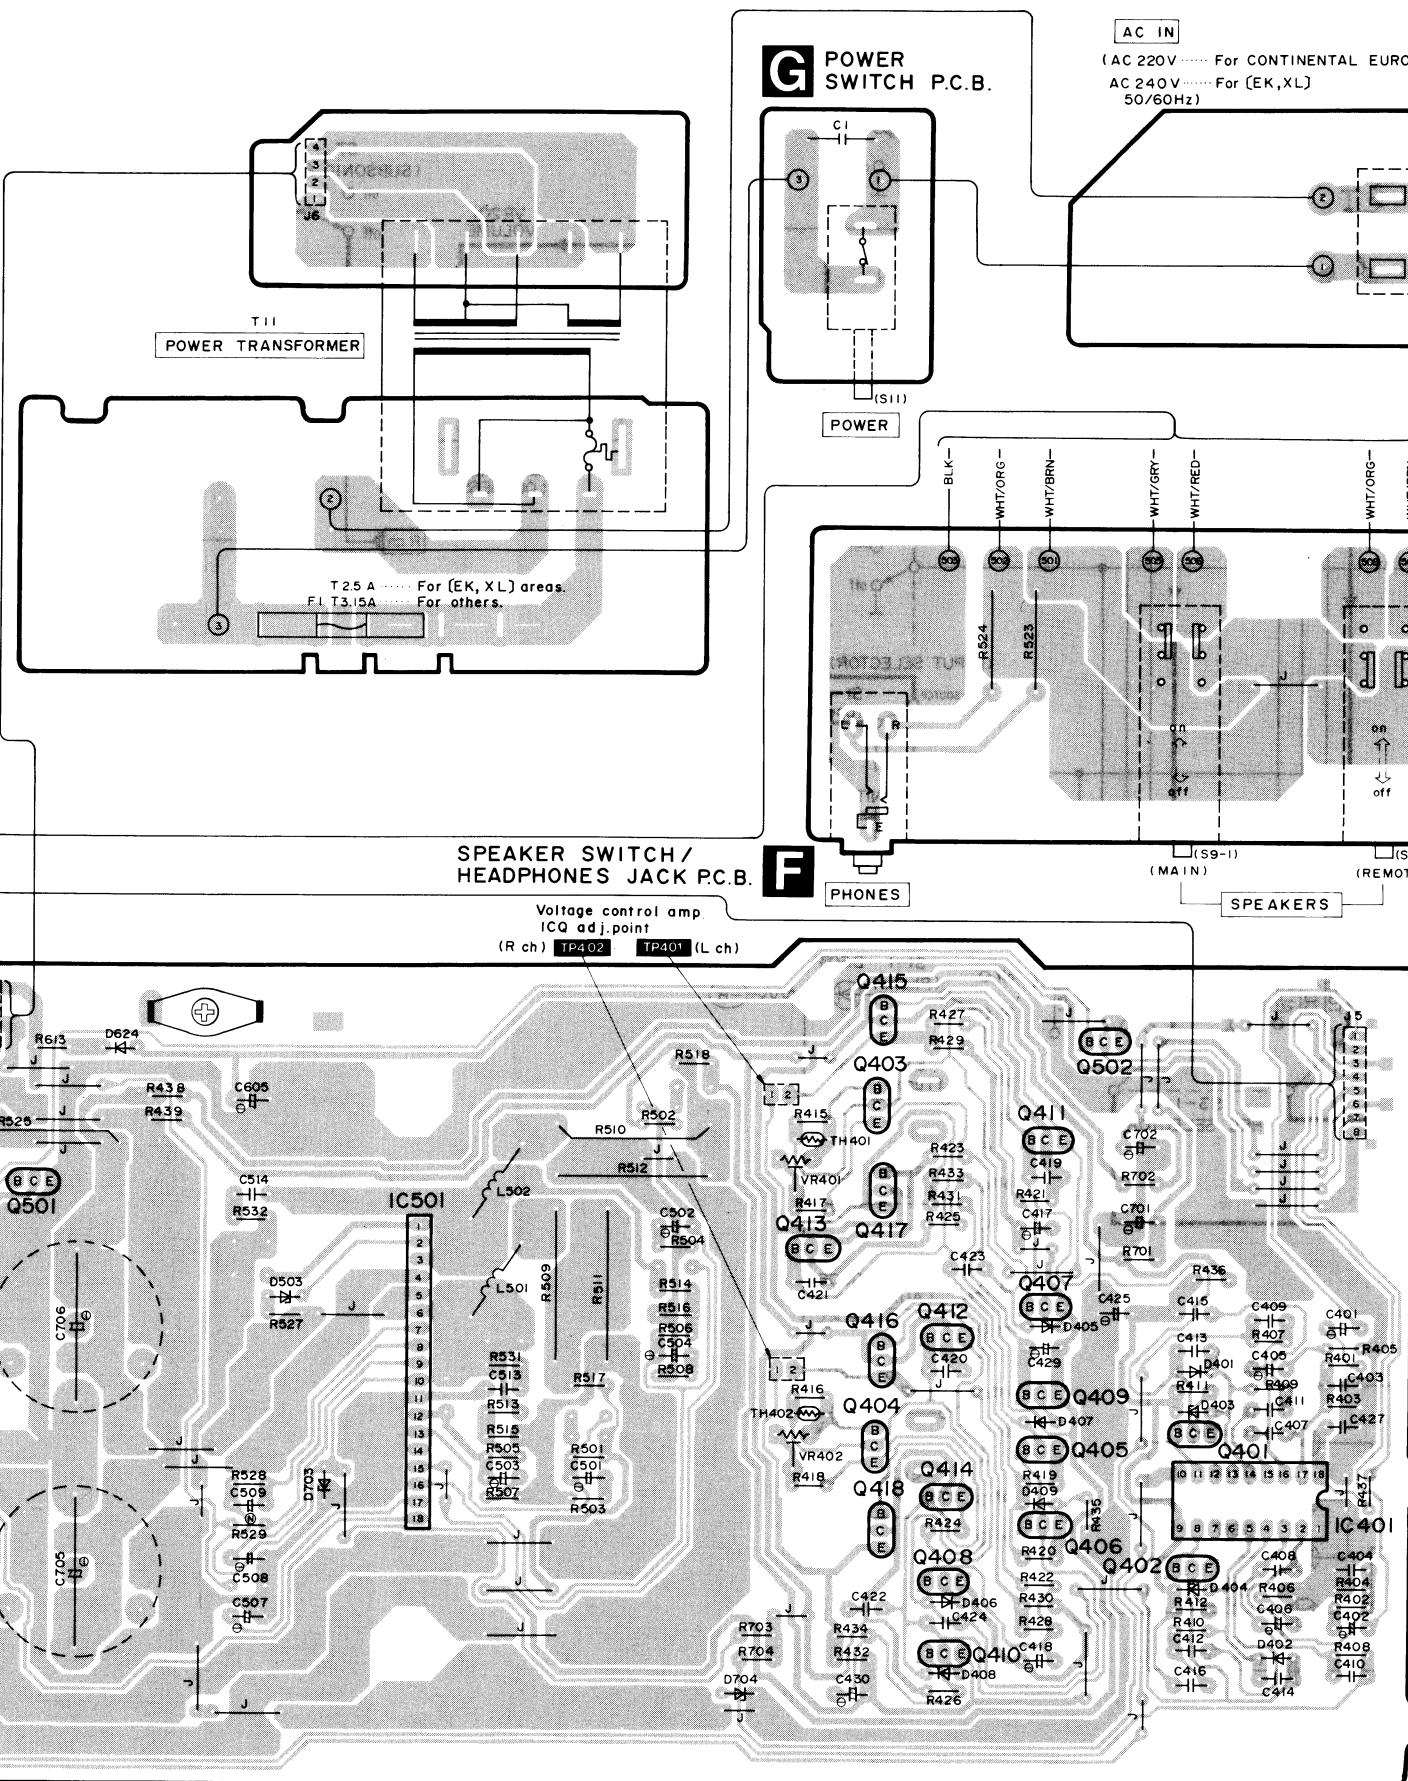


## ■ MEASUREMENTS AND ADJUSTMENTS

**Control positions and equipment used.**



- Volume knob.....∞ (Minimum)
- Main speaker selector.....off
- Remote speaker selector.....off
- DC electronic voltmeter(EVM)

### VOLTAGE CONTROL(V)AMP.IDLING(ICQ) ADJUSTMENT

- Test equipment connection is shown in figure. (Connect the DC EVM on both channels.)
- Completely turn the (V) amp. adjusting volumes (VR401, VR402) counter-clockwise.
- Turn ON the set when it is cold, and 15 sec.later, adjust VR401 and VR402 so that the voltage is 50mV. Also, check that the voltage is 60 ~ 85mV (standard : 80mV) after lapse of 10 - 15 minutes. (Below 85mV after lapse of 60 min.)

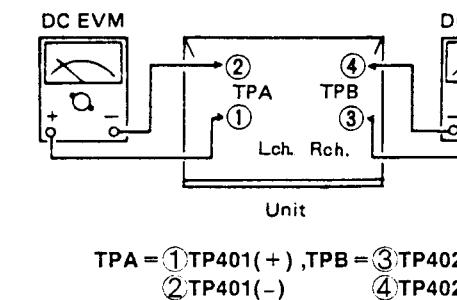


### • Adjustment points

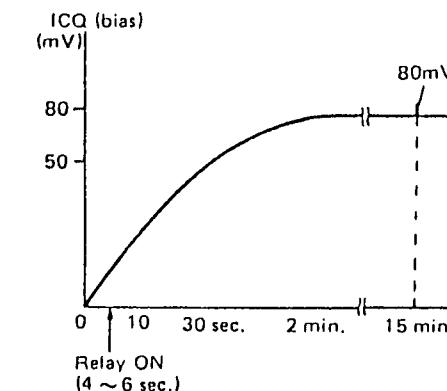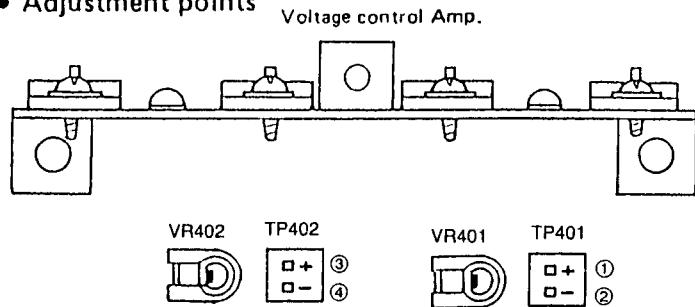

## ■ TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES

	<table border="1"> <tr><td>UPC4570C</td><td>8 pin</td></tr> <tr><td>AN7062N</td><td>18 pin</td></tr> <tr><td>M5218P</td><td>8 pin</td></tr> </table>	UPC4570C	8 pin	AN7062N	18 pin	M5218P	8 pin		
UPC4570C	8 pin								
AN7062N	18 pin								
M5218P	8 pin								
2SC3311, 2SA1309	2SC3944, 2SA1535	2SK170 2SA1123 2SC1685, 2SC2631 2SA992	SVDS10VB20						
MA165, MA167 MA29, SVD15R35200	MA4036, MA4160 MA4033, MA4180	LN018454 LN121456 LN121455							

## ■ BLOCK DIAGRAM

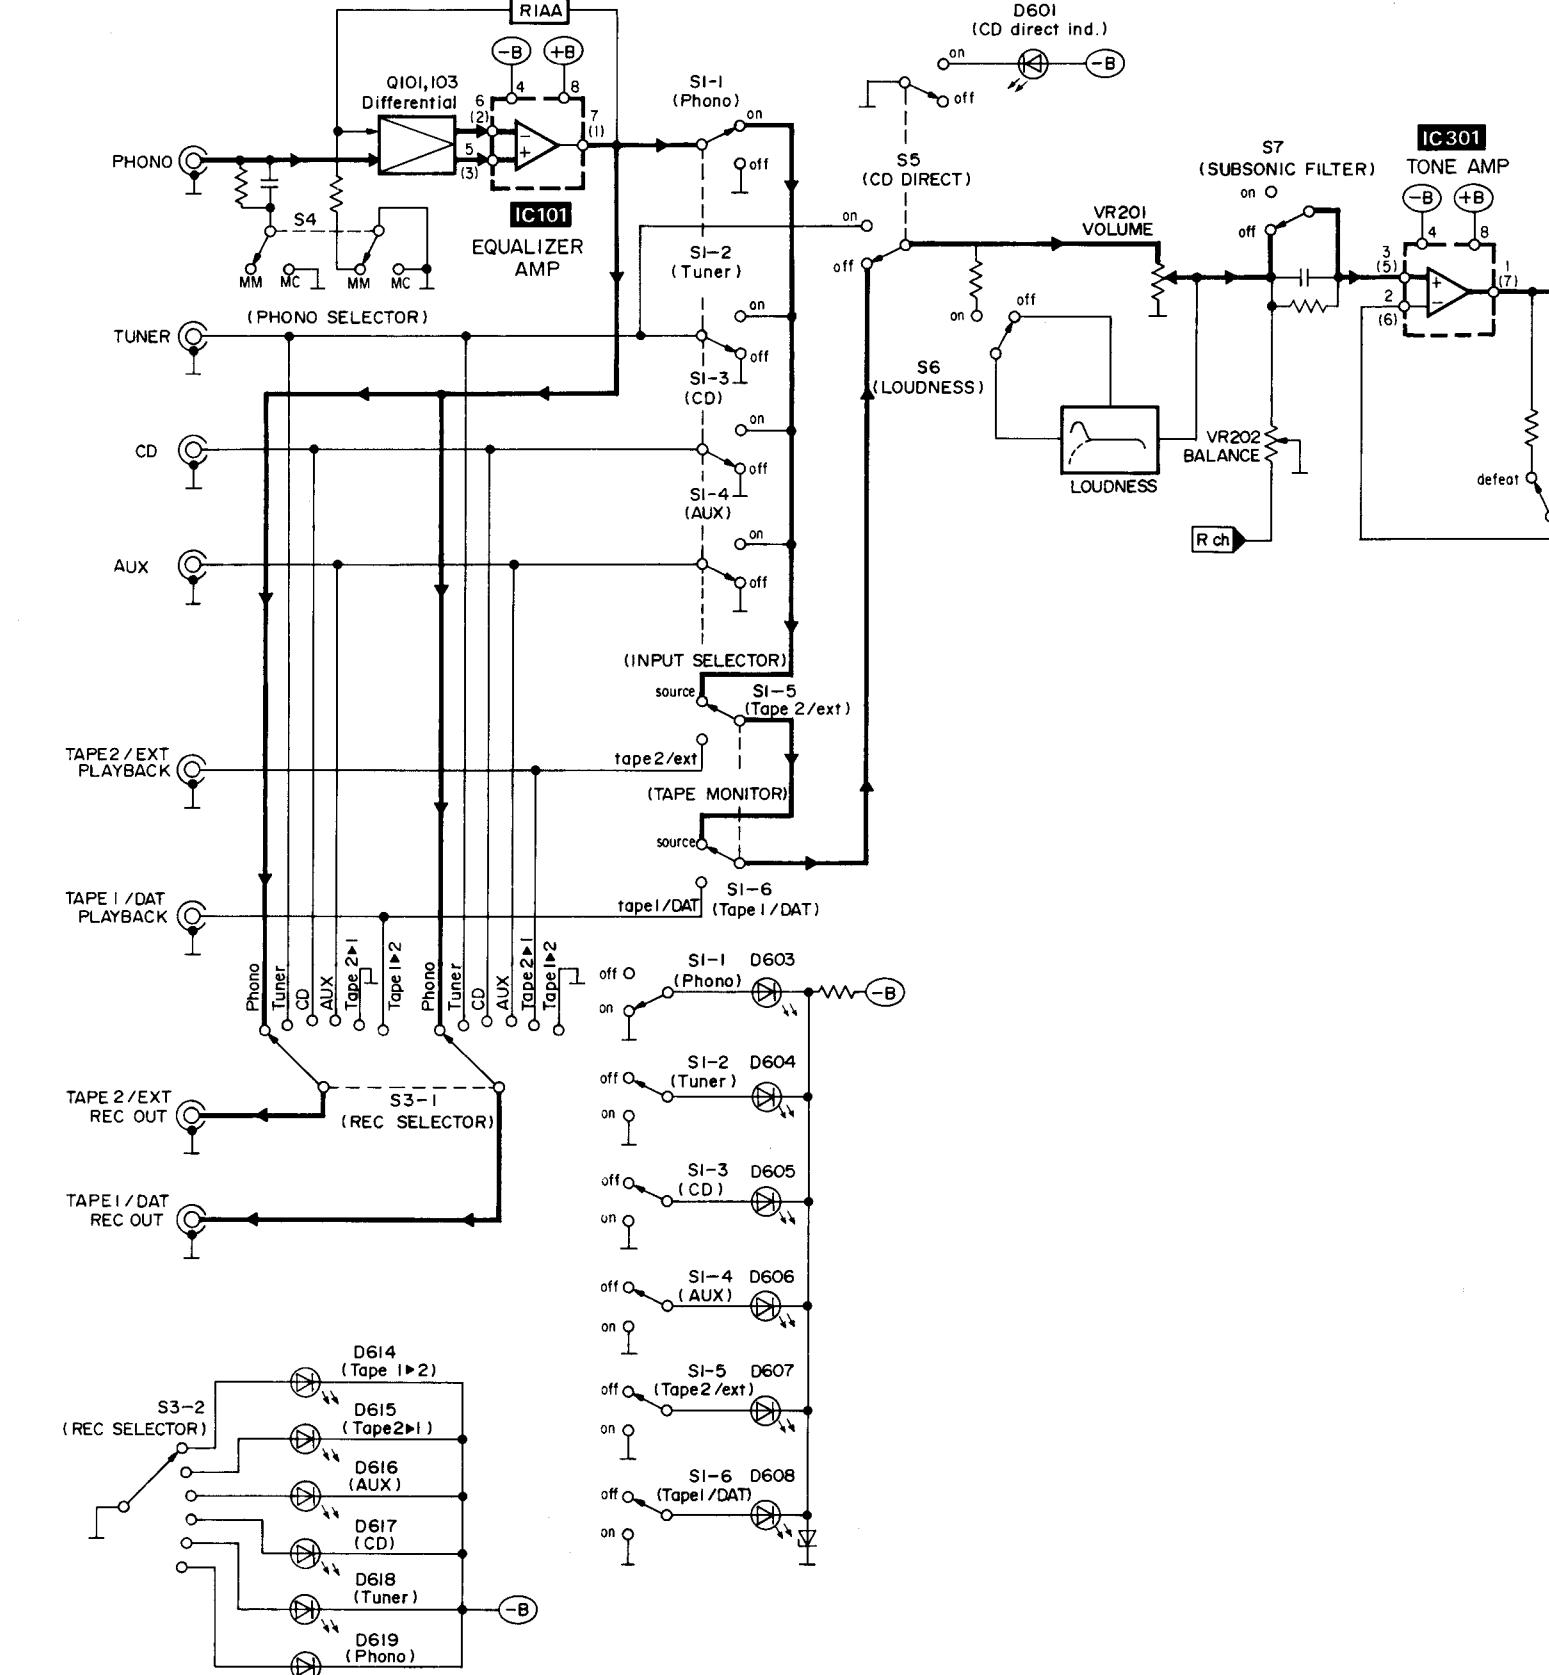



## ■ REPLACEMENT PARTS LIST

**Notes :** \* Important safety notice : Components identified by  $\triangle$  mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.  
 \* Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.) Parts without these indications can be used for all areas.

### ● CABINET PARTS LIST

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
<b>CABINET AND CHASSIS</b>					
1 (EF, EH, EB) (E1)	SGPUV650-KE	REAR PANEL	27	SNE4021-1	NUT
1 (XA, PA, PE) (E)	SGP7440-1A	PANEL, REAR	28	SKC2210K991	CABINET BODY
1 (E)	SGP7440A	PANEL, REAR	28	SKC2210S981	CABINET BODY
1 (EG)	SGP7440B	PANEL, REAR	29	SBN1249	KNOB, MAIN VOL
1 (EK)	SGP7440C	REAR PANEL	30	SBN1249-1	KNOB, MAIN VOL
1 (XL)	SGP7440D	PANEL, REAR	30	SBN1247	KNOB, TONE
3 (E, EG, EK, EF) (EH, EB, E1) (XA, PA, PE) (XL)	SJS9231A	AC INLET COVER	31	SBN1248	KNOB, TONE
3 (XL)	SJS9234A	AC INLET COVER	31	SNE2129-3	SCREW
4 (XA, PA, PE)	SJS9328A	AC OUTLET COVER	35	SJF3070NJ	TERMINAL, PHONO IN
5 (E, EG, EK, EF) (EH, EB, E1) (XL)	SKU11420-5	BOTTOM BOARD	36	SJF3071NJ	TERMINAL, INPUT
(XA, PA, PE)	SKU11420-6	BOTTOM BOARD	37	SJJD17B	JACK, HEADPHONES
5 (XA, PA, PE) (XL)	XTB3+10G	SCREW	38	SJF4819	TERMINAL, SP
6 (X)	SBC666-5	BUTTON, POWER	40	SJS305-1	JACK, POWER TRANSFORMER
6 (S)	SBC666	BUTTON, POWER	(E, EG, EK, EF) (EH, EB, E1) (XL)		
7	XTB3+8FFZ	SCREW	41	$\triangle$ SJT388	FUSE HOLDER
8	SKL308	SET FOOT(L)	42	$\triangle$ SJS9231-1B	AC INLET
9	SKL309	SET FOOT(R)	(E, EG, EK, EF) (EH, EB, E1) (XL)		
10	SHE187-2	HOLDER	42	$\triangle$ SJS9231-1B	AC INLET
11	SHE237	HOLDER	(XA, PA, PE)		
(XA, PA, PE)	SUS227	SPRING	45	SUS227	SPRING
12	SJ55780WL	CONNECTOR(7P)	47	SJ55780WL	CONNECTOR(7P)
13	SBC439-2	BUTTON, SP	48	SJ550880WL	CONNECTOR(8P)
13	SBC439	BUTTON, SP	49	SJS51080WL	CONNECTOR(10P)
14	SBC719-1	BUTTON, TONE/SUB/LOUD	50	SJT3319	CONNECTOR(3P)
14	SBC719	BUTTON, TONE/SUB/LOUD	51	SJT3415	CONNECTOR(4P)
15	SBC820	BUTTON, CD DIRECT	52	SJT3209	TERMINAL, TEST POINT
15	SBC820-1	BUTTON, CD DIRECT	53	SJT30243-V	CONNECTOR(2P)
16	SGX8006	ORNAMENT	56	XTW3+8T	SCREW
16	SGX8006-1	ORNAMENT	58	SJT30747WL	CONNECTOR(7P)
17	SGX8007	ORNAMENT	59	SJT30847WL	CONNECTOR(8P)
17	SGX8007-1	ORNAMENT	60	SJT31047WL	CONNECTOR(10P)
18	SHR415	LOCK PIN	61	SMC1300	SHIELD COVER
19	XTW3+10Q	SCREW	61	SMC1295	SHIELD COVER
20	SMC1296	SHIELD COVER	65	SJS702-1	JACK, SOCKET, POWER TRANSFORMER
21	SMC6407-1	SHIELD COVER	(XA, PA, PE)		
22	XTB3+10JFZ1	TAPPING SCREW	66	SMC1299	SHIELD PLATE
23	XTB3+20J	SCREW	68	SJS93288	SOCKET
24	XYN3+F14	TAPPING SCREW	(XA, PA, PE)		
25	XTW3+10T	SCREW	69	SGXUV650-KE	FRONT PANEL
26	XTB3+30J	SCREW	70	SGXUV650-SE	FRONT PANEL
(XA, PA, PE)			70	SGXUV650-KE1	FRONT GRILLE (R)
			70	SGXUV650-SE1	FRONT GRILLE (R)
			70A	SBC1040	BUTTON, INPUT
			70A	SBC1040-1	BUTTON, INPUT
			71	SGXUV650-KE2	FRONT GRILLE (L)
			71	SGXUV650-SE2	FRONT GRILLE (L)
			75	SBN1089-3	KNOB, REC
			75	SBN1089-4	KNOB, REC
			75	SJT30543-V	CONNECTOR(5P)
			76	SUM3126	ANGLE
			77	SHW82S25A	WASHER
			78	ESA335029B	REC SELECTOR SW
			79		

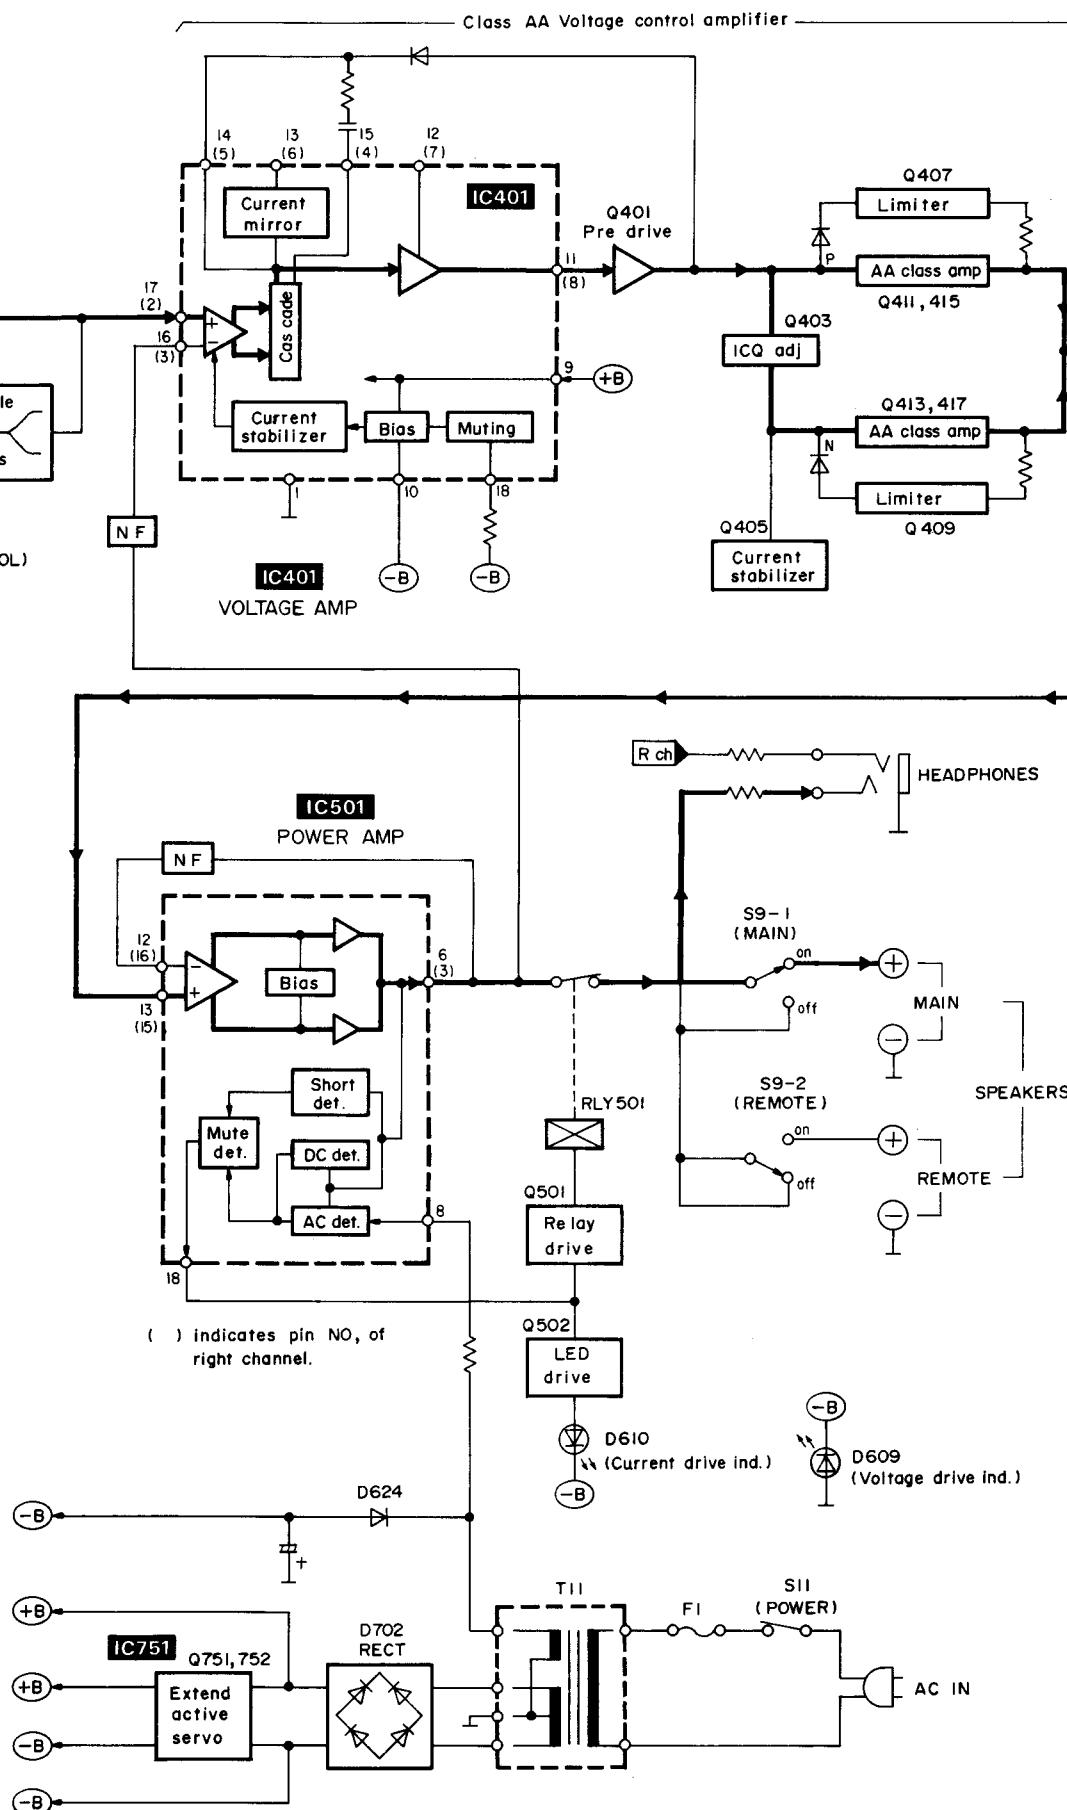

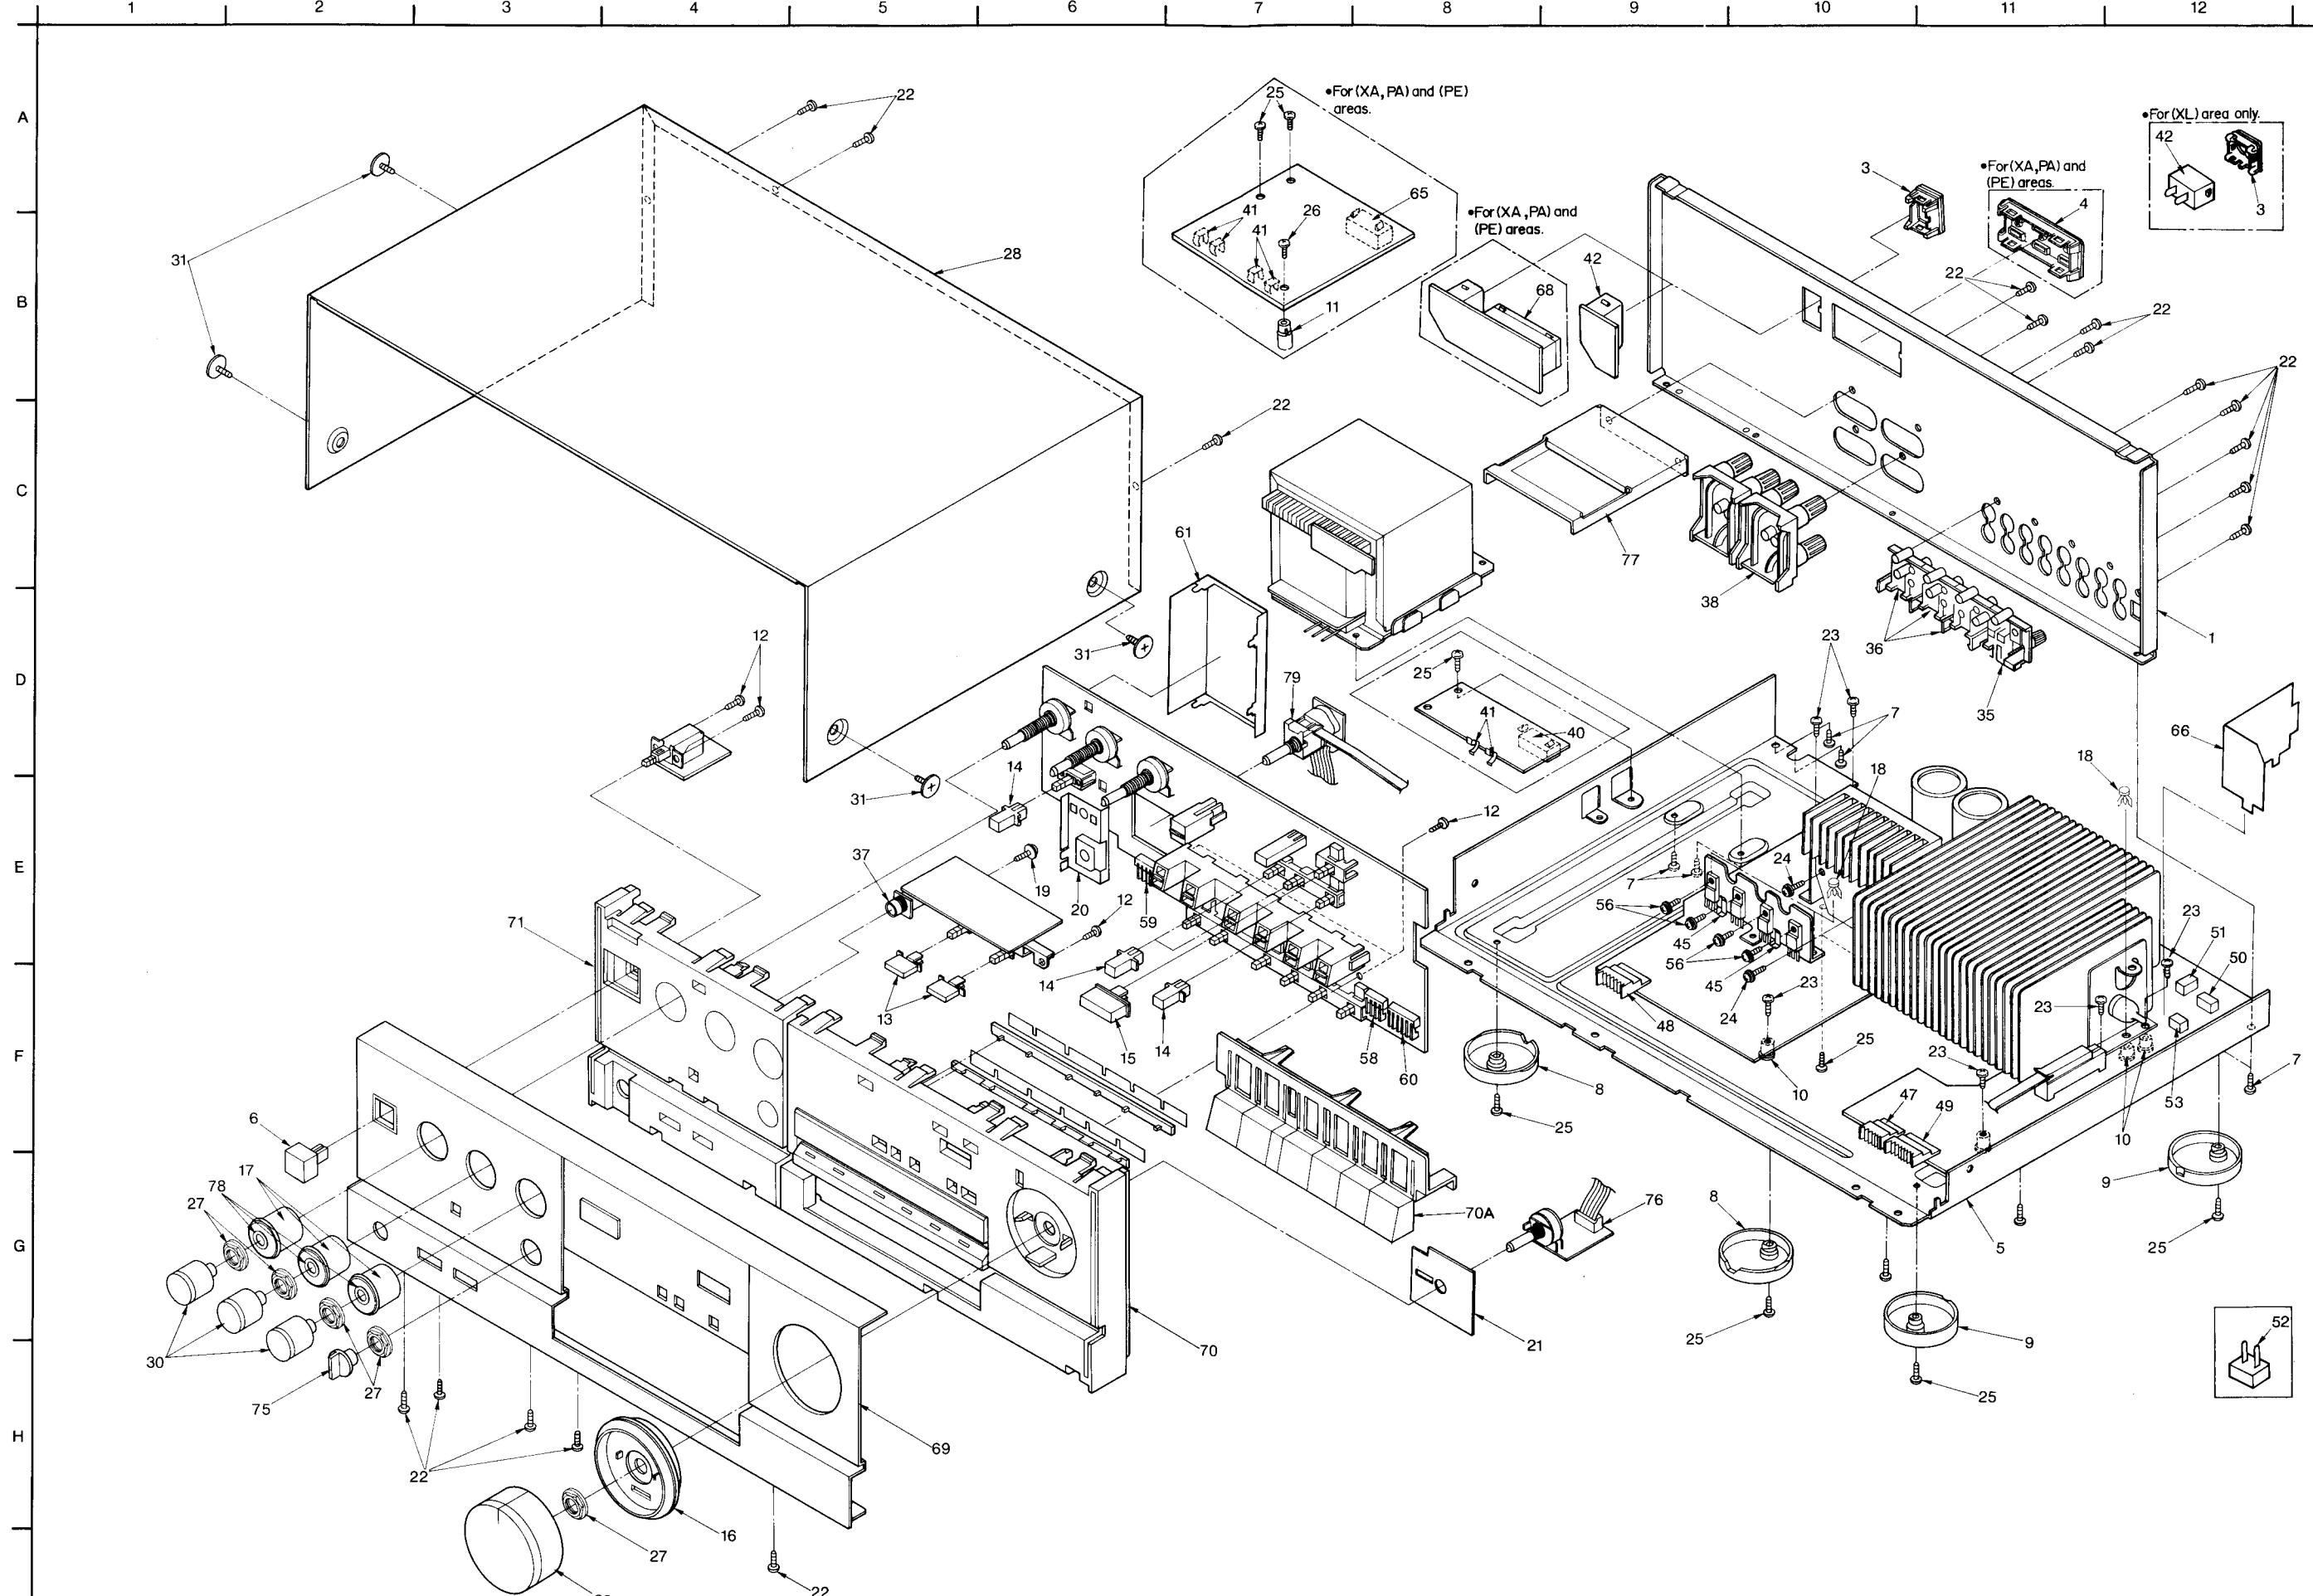**■ EXPLODED VIEW**

# ● ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
<b>INTEGRATED CIRCUITS</b>					
IC101	UPC4570C	I.C. PHONO EQ	VR202	EVH0YA015G15	V.R. BALANCE
IC301	UPC4570C	I.C. TONE CONTROL	VR301	EWCRYA023C15	V.R. TONE
IC401	AN7062N	I.C. V.AMP	VR302	EWCRYA023C15	V.R. TONE
IC501	SV13205	I.C. P.AMP/C.AMP	VR401	EVND4AA00B52	V.R. I.C.Q ADJUST
IC751	M5218P	I.C. ACTIVE SERVO	VR402	EVND4AA00B52	V.R. I.C.Q ADJUST
<b>TRANSISTORS</b>					
Q101	2SK170BL	TRANSISTOR	TH201	ERTD2WHL104S	THERMISTOR
Q102	2SK170BL	TRANSISTOR	TH202	ERTD2WHL104S	THERMISTOR
Q103	2SK170BL	TRANSISTOR	TH401	ERTD2WHL104S	THERMISTOR
Q104	2SK170BL	TRANSISTOR	TH402	ERTD2WHL104S	THERMISTOR
Q401	2SA1123R	TRANSISTOR	<b>COILS AND TRANSFORMERS</b>		
Q402	2SA1123R	TRANSISTOR	L1	△ SLQZ650MH49	CHOKE COIL
Q403	2SC1685NCQRS	TRANSISTOR	(EG, E1)		
Q404	2SC1685NCQRS	TRANSISTOR	L101	SLM1Z33	MPX COIL
Q405	2SC2631-Q	TRANSISTOR	(EG, E1)		
Q406	2SC2631-Q	TRANSISTOR	L102	SLM1Z33	MPX COIL
Q407	2SC3311A-Q	TRANSISTOR	L501	SLQY07G-50	COIL
Q408	2SC3311A-Q	TRANSISTOR	L502	SLQY07G-50	COIL
Q409	2SA1309Q	TRANSISTOR	L503	SLQY18G-20	COIL
Q410	2SA1309Q	TRANSISTOR	L504	SLQY18G-20	COIL
Q411	2SC2631-Q	TRANSISTOR	L505	SLQY07G-50	COIL
Q412	2SC2631-Q	TRANSISTOR	(EG, E1)		
Q413	2SA1123R	TRANSISTOR	L506	SLQY07G-50	COIL
Q414	2SA1123R	TRANSISTOR	L507	SLQY07G-50	COIL
Q415	2SC3944AQRS	TRANSISTOR	L508	SLQY07G-50	COIL
Q416	2SC3944AQRS	TRANSISTOR	T11	△ SLT5Q154	POWER TRANSFORMER
Q417	2SA1535AQRS	TRANSISTOR	(E, EG, EF, EH)		
Q418	2SA1535AQRS	TRANSISTOR	(EB, E1)		
Q501	2SA92EFP	TRANSISTOR	T11	△ SLT5Q155	POWER TRANSFORMER
Q502	UN4112TA	TRANSISTOR	(EK, XL)		
Q751	2SC3944AQRS	TRANSISTOR	T11	△ SLT5Q156	POWER TRANSFORMER
Q752	2SA1535AQRS	TRANSISTOR	(XA, PA, PE)		
<b>DIODES</b>					
D101	MA165	DIODE	<b>FUSES</b>		
D102	MA165	DIODE	F1	△ XBA2C25TB0	FUSE, T2.5A 250V
D401	MA167	DIODE	(EK, XL)		
D402	MA167	DIODE	F1	△ XBA2C31TB0	FUSE 250V, T3.15A
D403	MA4036MTA	DIODE	(E, EG, EF, EH)		
D404	MA4036MTA	DIODE	(EB, E1, XA)		
D405	MA165	DIODE	(PA, PE)		
D406	MA165	DIODE	F2	△ XBA2C63TB0	FUSE 250V, T6.3A
D407	MA165	DIODE	(XA, PA, PE)		
D408	MA165	DIODE	<b>SWITCHES</b>		
D409	MA29WA	DIODE	S1-1	SSH6002	PUSH SWITCH, PHONO
D501	MA165	DIODE	S1-2	SSH6002	PUSH SWITCH, TUNER
D503	MA4160M	DIODE	S1-3	SSH6002	PUSH SWITCH, CD
D601	LN018454PH	DIODE, L.E.D	S1-4	SSH6002	PUSH SWITCH, AUX
D602	MA4033	DIODE	S1-5	SSH6002	PUSH SWITCH, TAPE2/EXT
D603	LN121456PH	DIODE, L.E.D	S1-6	SSH6002	PUSH SWITCH, TAPE1/DAT
D604	LN121456PH	DIODE, L.E.D	S12	△ ESE37263	SW, VOLTAGE SELECTOR
D605	LN121456PH	DIODE, L.E.D	(XA, PA, PE)		
D606	LN121456PH	DIODE, L.E.D	S3-1	ESA2602	SWITCH, REC SELECTOR
D608	LN121456PH	DIODE, L.E.D	S3-2	ESA335029B	SWITCH, REC SELECTOR
D609	LN021455PH	DIODE, L.E.D	S4	SSH3704	SWITCH, PHONO SELECTOR
D610	LN021455PH	DIODE, L.E.D	S5	SSH1215	SWITCH, CD DIRECT
D614	LN121456PH	DIODE, L.E.D	S6	SSH3704	SWITCH, LOUDNESS
D615	LN121456PH	DIODE, L.E.D	S7	SSH3704	SWITCH, SUBSONIC
D616	LN121456PH	DIODE, L.E.D	S8	SSH1218	SWITCH, TONE CONTROL
D617	LN121456PH	DIODE, L.E.D	S9-1	SSH2115	SWITCH, SP MAIN
D618	LN121456PH	DIODE, L.E.D	S9-2	SSH2115	SWITCH, SP REMOTE
D619	LN121456PH	DIODE, L.E.D	S11	△ ESB8249V	SW, POWER
D624	△ SVD1SR35200A	DIODE	(E, EG, EK, EF)		
D702	△ SVDS10VB20F	DIODE	(EH, EB, E1)		
D703	MA4160M	DIODE	(XL)		
D704	MA4160M	DIODE	S11	△ SSH1201	SW, POWER
D751	MA4180-M	DIODE	(XA, PA, PE)		
D752	MA4180-M	DIODE	<b>RELAYS</b>		
D753	MA165	DIODE	VR201	EWJKXA090B15	V.R. MAIN VOL
<b>VARIABLE RESISTORS</b>					
<b>RELAYS</b>					
			RLY501	SSY126	RELAY

# ■ RESISTORS AND CAPACITORS

**Notes :** \* Important safety notice :

Components identified by  mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.  
 \* Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)  
 Parts without these indications can be used for all areas.

**Numbering System of Resistor****Example:**

ERD	25	F	J	102
Type	Wattage (1/4W)	Shape	Tolerance	Value (1KΩ)
ERX	2	AN	J	471

Type	Wattage (2W)	Shape	Tolerance	Value (470Ω)
------	-----------------	-------	-----------	-----------------

**Numbering System of Capacitor****Example:**

ECKD	1H	102	Z	F
Type	Voltage (50V)	Value (0.001μF)	Tolerance	Peculiarity
ECEA	50	M	330	

Type	Voltage (50V)	Peculiarity	Value (33μF)	
------	------------------	-------------	-----------------	--

● Capacity values are in microfarads (μF) unless specified otherwise, P = Pico-farads (pF), F = Farads (F).

● Resistance values are in ohms (Ω), unless specified otherwise, 1K = 1,000Ω, 1M = 1,000kΩ

Resistor Type	Wattage	Tolerance
ERD : Carbon	10 : 1/8W	J : ±5%
ERG : Metal Oxide	14 : 1/4W	F : ±1%
ERQ : Fuse Type Metal	1A : 1W	G : ±2%
ERX : Metal Film	S2 : 1/4W	J : ±5%
ERD L : Carbon (chip)	S1 : 1/2W	K : ±10%
ERO K : Metal Film (chip)	2F : 1/4W	M : ±20%
ERC : Solid	2A : 2W	
ERF : Incombustible Box-Shaped	3A : 3W	
ERM : Wire-Wound	6G : 1/10W	
RRJ : Chip Resistor	8G : 1/8W	
ERJ : Chip Resistor		

Capacitor Type	Voltage	Tolerance
ECE : Electrolytic	0J : 6.3V	K : ±10%
ECCD : Ceramic	1C : 16V	M : ±20%
ECKD : Ceramic Capacitor	1H : 50V	Z : +80 %
ECQM : Polyester	50 : 50V	-20
ECQP : Polypropylene	2H : 500V	J : ±5%
ECG : Ceramic	1 : 100V	G : ±2%
ECEA N : Non Polar Electrolytic	KC : 400V AC	F : ±1%
QCU : Ceramic (Chip Type)	KC : 125V AC	C : ±0.25pF
ECUX : Ceramic (Chip Type)	(UL)	D : ±0.5pF
ECF : Semiconductor		
ECW : Liquid electrolyte double layer capacitor		

Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.
<b>RESISTORS(VALUE,WATTAGE)</b>								
R101 (EG, E1)	ERDS2TJ102	1K 1/4	R204 (EG, E1)	ERDS2TJ102	1K 1/4	R313	ERDS2TJ562	5.6K 1/4
R102 (EG, E1)	ERDS2TJ102	1K 1/4	R205 (EG, E1)	ERDS2TJ102	1K 1/4	R314	ERDS2TJ562	5.6K 1/4
R103 (EG, E1)	ERDS2TJ102	1K 1/4	R206 (EG, E1)	ERDS2TJ102	1K 1/4	R315	ERD25FJ392	3.9K 1/4
R104 (EG, E1)	ERDS2TJ102	1K 1/4	R207 (EG, E1)	ERDS2TJ102	1K 1/4	R316	ERD25FJ392	3.9K 1/4
R105	ERDS2TJ473	47K 1/4	R208 (EG, E1)	ERDS2TJ102	1K 1/4	R317	ERD25FJ223	22K 1/4
R106	ERDS2TJ473	47K 1/4	R209 (EG, E1)	ERDS2TJ102	1K 1/4	R318	ERD25FJ223	22K 1/4
R107	ERDS2TJ221	220 1/4	R210 (EG, E1)	ERDS2TJ102	1K 1/4	R319	ERDS2TJ183	18K 1/4
R108	ERDS2TJ221	220 1/4	R211 (EG, E1)	ERDS2TJ473	47K 1/4	R320	ERDS2TJ183	18K 1/4
R109	ERDS2TJ220	22 1/4	R212 (EG, E1)	ERDS2TJ473	47K 1/4	R401	ERDS2TJ122	1.2K 1/4
R110	ERDS2TJ220	22 1/4	R213 (EG, E1)	ERDS2TJ183	18K 1/4	R402	ERDS2TJ122	1.2K 1/4
R111	ERD25FJ332	3.3K 1/4	R214 (EG, E1)	ERDS2TJ183	18K 1/4	R403	ERDS2TJ823	82K 1/4
R112	ERD25FJ332	3.3K 1/4	R215 (EG, E1)	ERD25FJ824	820K 1/4	R404	ERDS2TJ823	82K 1/4
R113	ERDS2TJ332	3.3K 1/4	R216 (EG, E1)	ERDS2TJ824	820K 1/4	R405	ERD25FJ272	2.7K 1/4
R114	ERDS2TJ332	3.3K 1/4	R217 (EG, E1)	ERD25FJ272	2.7K 1/4	R406	ERD25FJ272	2.7K 1/4
R115	ERD25FJ332	3.3K 1/4	R218 (EG, E1)	ERD25FJ272	2.7K 1/4	R407	ERD25TJ104	100K 1/4
R116	ERD25FJ332	3.3K 1/4	R219 (EG, E1)	ERD25FJ272	2.7K 1/4	R408	ERD25TJ104	100K 1/4
R117	ERDS2TJ151	150 1/4	R220 (EG, E1)	ERD25FJ272	2.7K 1/4	R409	ERDS2TJ561	560 1/4
R118	ERDS2TJ151	150 1/4	R221 (EG, E1)	ERD25FJ272	2.7K 1/4	R410	ERDS2TJ561	560 1/4
R119	ERDS2TJ100	10 1/4	R222 (EG, E1)	ERDS2TJ102	1K 1/4	R411	△ ERD25FJ470	47 1/4
R120	ERDS2TJ100	10 1/4	R223 (EG, E1)	ERDS2TJ102	1K 1/4	R412	△ ERD25FJ470	47 1/4
R121	ERDS2TJ101	100 1/4	R224 (EG, E1)	ERDS2TJ102	1K 1/4	R415	ERDS2TJ182	1.8K 1/4
R122	ERDS2TJ101	100 1/4	R225 (EG, E1)	ERDS2TJ102	1K 1/4	R416	ERDS2TJ182	1.8K 1/4
R123	ERDS2TJ151	150 1/4	R226 (EG, E1)	ERD25FJ272	2.7K 1/4	R417	ERDS2TJ391	390 1/4
R124	ERDS2TJ151	150 1/4	R227 (EG, E1)	ERD25FJ272	2.7K 1/4	R418	ERDS2TJ391	390 1/4
R125	ERDS2TJ682	6.8K 1/4	R228 (EG, E1)	ERD25FJ272	2.7K 1/4	R419	△ ERD25FJ101	100 1/4
R126	ERDS2TJ682	6.8K 1/4	R229 (EG, E1)	ERD25FJ272	2.7K 1/4	R420	△ ERD25FJ101	100 1/4
R127	ERDS2TJ682	82K 1/4	R230 (EG, E1)	ERD25FJ561	560 1/4	R421	ERDS2TJ223	22K 1/4
R128	ERDS2TJ682	82K 1/4	R231 (EG, E1)	ERD25FJ561	560 1/4	R422	ERDS2TJ223	22K 1/4
R129	ERDS2TJ334	330K 1/4	R232 (EG, E1)	ERD25FJ561	560 1/4	R423	△ ERD25FJ821	820 1/4
R130	ERDS2TJ334	330K 1/4	R233 (EG, E1)	ERD25FJ824	820K 1/4	R424	△ ERD25FJ821	820 1/4
R131	ERDS2TJ561	560 1/4	R234 (EG, E1)	ERD25FJ824	820K 1/4	R425	ERDS2TJ223	22K 1/4
R132	ERDS2TJ561	560 1/4	R235 (EG, E1)	ERD25FJ224	220K 1/4	R426	ERDS2TJ223	22K 1/4
R201	ERDS2TJ102	1K 1/4	R236 (EG, E1)	ERD25FJ224	220K 1/4	R427	△ ERD25FJ101	100 1/4
(EG, E1)	ERDS2TJ102	1K 1/4	R237 (EG, E1)	ERD25FJ224	220K 1/4	R428	△ ERD25FJ101	100 1/4
R202	ERDS2TJ102	1K 1/4	R238 (EG, E1)	ERD25FJ224	220K 1/4	R429	△ ERD25FJ2R2	2.2 1/4
(EG, E1)	ERDS2TJ102	1K 1/4	R239 (EG, E1)	ERD25FJ224	220K 1/4	R430	△ ERD25FJ2R2	2.2 1/4
R203	ERDS2TJ102	1K 1/4	R240 (EG, E1)	ERD25FJ224	220K 1/4	R431	△ ERD25FJ2R2	2.2 1/4
			R241 (EG, E1)	ERD25FJ224	220K 1/4	R432	△ ERD25FJ2R2	2.2 1/4
			R242 (EG, E1)	ERD25FJ224	220K 1/4	R433	△ ERD25FJ101	100 1/4
			R243 (EG, E1)	ERD25FJ224	220K 1/4	R434	△ ERD25FJ101	100 1/4
			R244 (EG, E1)	ERD25FJ224	220K 1/4	R435	ERDS2TJ103	10K 1/4
			R245 (EG, E1)	ERD25FJ224	220K 1/4	R436	△ ERD25FJ470	47 1/4
			R246 (EG, E1)	ERD25FJ224	220K 1/4	R437	ERDS2TJ473	47K 1/4

Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.
R438 △	ERD25FJ6R8	6.8 1/4	C118	ECEA1HK010	1 50	C421	ECCD2H680K	68P 500
R439 △	ERD25FJ6R8	6.8 1/4	C119	ECQM1H472JZ	0.0047 50	C422	ECCD2H680K	68P 500
R501	ERDS2TJ392	3.9K 1/4	C120	ECQM1H472JZ	0.0047 50	C423	ECKD1H333PF	0.033 50
R502	ERDS2TJ392	3.9K 1/4	C121	ECKD1H103PF	0.01 50	C424	ECKD1H333PF	0.033 50
R503	ERDS2TJ121	120 1/4	C122	ECKD1H103PF	0.01 50	C425	ECEA2AU100	10 100
R504	ERDS2TJ121	120 1/4	C203	RCBC1H101KBY	100P 50	C427	ECKD1H223PF	0.022 50
R505	ERDS2TJ392	3.9K 1/4	(EG, E1)			C429	ECEA1HK010	1 50
R506	ERDS2TJ392	3.9K 1/4	C204	RCBC1H101KBY	100P 50	C430	ECEA1HK010	1 50
R507	ERDS2TJ121	120 1/4	(EG, E1)			C501	ECEA0JPS101B	100 6.3
R508	ERDS2TJ121	120 1/4	C205	RCBC1H101KBY	100P 50	C502	ECEA0JPS101B	100 6.3
R509	ERF2AKR10P	0.1 2	(EG, E1)			C503	ECEA0JPS101B	100 6.3
R510	ERF2AKR10P	0.1 2	C206	RCBC1H101KBY	100P 50	C504	ECEA0JPS101B	100 6.3
R511	ERF2AKR10P	0.1 2	(EG, E1)			C505	ECKD1H223PF	0.022 50
R512	ERF2AKR10P	0.1 2	C207	RCBC1H101KBY	100P 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R513 △	ERD25FJ100	10 1/4	(EG, E1)			C505	ECKD1H473ZF	0.047 50
R514 △	ERD25FJ100	10 1/4	C208	RCBC1H101KBY	100P 50	C506	ECKD1H223PF	0.022 50
R515 △	ERD25FJ100	10 1/4	(EG, E1)			(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R516 △	ERD25FJ100	10 1/4	C209	RCBC1H101KBY	100P 50	C506	ECKD1H473ZF	0.047 50
R517 △	ERD25FJ1R0	1 1/4	(EG, E1)			(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R518 △	ERD25FJ1R0	1 1/4	C210	RCBC1H101KBY	100P 50	C506	ECKD1H473ZF	0.047 50
R519 △	ERD25FJ100	10 1/4	(EG, E1)			(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R520 △	ERD25FJ100	10 1/4	C211	RCBC1H101KBY	100P 50	C507	ECEA0JPS101B	100 6.3
R521 △	ERDS1FJ100	10 1/2	(EG, E1)			C508	ECEA1HU470	47 50
R522 △	ERDS1FJ100	10 1/2	C212	RCBC1H101KBY	100P 50	C509	ECEA1HN100S	10 50
R523	ERG2SJ331H	330 2	(EG, E1)			C513	ECKD1H223PF	0.022 50
R524	ERG2SJ331H	330 2	C213	ECQM1H563JV	0.056 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R525	ERG2ANJP102S	1K 2	C214	ECQM1H563JV	0.056 50	C513	ECKD1H473ZF	0.047 50
R526	ERDS2TJ223	22K 1/4	C215	ECQM1H563JV	0.056 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R527	ERDS2TJ223	22K 1/4	C216	ECQM1H563JV	0.056 50	C513	ECKD1H473ZF	0.047 50
R528	ERDS2TJ824	820K 1/4	C217	RCBC1H101KBY	100P 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R529	ERDS2TJ124	120K 1/4	(EG, E1)			C513	ECKD1H473ZF	0.047 50
R531 △	ERDS1FJ100	10 1/2	C218	RCBC1H101KBY	100P 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R532 △	ERDS1FJ100	10 1/2	(EG, E1)			C514	ECKD1H223PF	0.022 50
R601	ERDS2TJ471	470 1/4	C219	RCBC1H101KBY	100P 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R602	ERDS2TJ471	470 1/4	(EG, E1)			C514	ECKD1H473ZF	0.047 50
R603	ERDS2TJ221	220 1/4	C220	RCBC1H101KBY	100P 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R604	ERDS2TJ471	470 1/4	(EG, E1)			C514	ECKD1H473ZF	0.047 50
R605	ERDS2TJ221	220 1/4	C301	ECEA1HPS3R3	3.3 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R613 △	ERDS1FJ180	18 1/2	C302	ECEA1HPS3R3	3.3 50	C514	ECKD1H473ZF	0.047 50
R701 △	ERD25FJ151	150 1/4	C303	ECCD1H101K	100P 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R702 △	ERD25FJ151	150 1/4	C304	ECCD1H101K	100P 50	C515	ECKD1H473ZF	0.047 50
R703	ERDS1FJ682	6.8K 1/2	C305	ECCD1H820K	82P 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R704 △	ERDS1FJ682	6.8K 1/2	C306	ECCD1H820K	82P 50	C516	ECKD1H473ZF	0.047 50
R751	ERDS2TJ223	22K 1/4	C307	ECEA1VPS4R7	4.7 35	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R752	ERDS2TJ223	22K 1/4	C308	ECEA1VPS4R7	4.7 35	C517	ECKD1H473ZF	0.047 50
R753	ERDS2TJ102	1K 1/4	C309	ECCD1H390K	39P 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R754	ERDS2TJ153	15K 1/4	C310	ECCD1H390K	39P 50	C518	ECKD1H473ZF	0.047 50
R755	ERDS2TJ823	82K 1/4	C311	ECEA1CPS100	10 16	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R756	ERDS2TJ153	15K 1/4	C312	ECEA1CPS100	10 16	C521	ECQM1H333JZ	0.033 50
R757	ERDS2TJ102	1K 1/4	C313	ECQM1H823JZ	0.082 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
R758	ERDS2TJ102	1K 1/4	C314	ECQM1H823JZ	0.082 50	C522	ECQM1H333JZ	0.033 50
<b>CAPACITORS(VALUE,VOLTAGE)</b>								
C1 △	ECKWNS103ZV	0.01	C315	ECQM1H153JZ	0.015 50	C523	ECKD1H102MD	0.001 50
C1 △	ECKWNS103ZVS	0.01	C316	ECQM1H153JZ	0.015 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
(E, EG, EF, EH) (EB, EI, XA) (PA, PE)			C317	ECQM1H183JZ	0.018 50	C524	ECKD1H102MD	0.001 50
(XL)			C318	ECQM1H183JZ	0.018 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
C101	RCBS1H120JLY	12P 50	C319	ECQM1H182JZ	0.0018 50	C525	ECQM1H333JZ	0.033 50
(E, EG, EF, EH) (EB, EI, XA) (PA, PE)			C320	ECQM1H182JZ	0.0018 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
C102	RCBS1H120JLY	12P 50	C401	ECEA1HPS3R3	3.3 50	C526	ECQM1H333JZ	0.033 50
(E, EG, EF, EH) (EB, EI, XA) (PA, PE)			C402	ECEA1HPS3R3	3.3 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
C103	ECQM1H103JZ	0.01 50	C403	ECKD1H271KB	270P 50	C527	ECKD1H102MD	0.001 50
C104	ECQM1H103JZ	0.01 50	C404	ECKD1H271KB	270P 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
C105	ECCD1H820K	82P 50	C405	ECEA1CPS220	22 16	C528	ECKD1H102MD	0.001 50
C106	ECCD1H820K	82P 50	C406	ECEA1CPS220	22 16	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
C107	ECEA0JU222	2200 6.3	C407	ECCD1H820K	82P 50	C605	ECEA1CU471	470 16
C108	ECEA0JU222	2200 6.3	C408	ECCD1H820K	82P 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
C109	ECQM1H222JZ	0.0022 50	C409	ECCD1H100KC	10P 50	C701	ECEA1JPS3R3B	3.3 63
C110	ECQM1H222JZ	0.0022 50	C410	ECCD1H100KC	10P 50	C702	ECEA1JPS3R3B	3.3 63
C111	ECQM1H122JZ	0.0012 50	C411	ECKD1H681K	680P 50	C705	ECET1JV103LM	10000 63
C112	ECQM1H122JZ	0.0012 50	C412	ECKD1H681K	680P 50	C706	ECET1JV103LM	10000 63
C113	ECQM1H103JZ	0.01 50	C413	ECCD2H070D	7P 500	C708 △	ECKD2H103PE	0.01 500
C114	ECQM1H103JZ	0.01 50	C414	ECCD2H070D	7P 500	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
C115	ECQM1H393JZ	0.039 50	C415	ECQM1H102JZ	0.001 50	C708 △	ECQE2104KS	0.1 250
C116	ECQM1H393JZ	0.039 50	C416	ECQM1H102JZ	0.001 50	(E, EG, EF, EH) (EB, EI, XA) (PA, PE)		
C117	ECEA1HK010	1 50	C417	ECEA1HK010	1 50	C708 △	ECEA1EK100	10 25
			C418	ECEA1HK010	1 50	C751	ECEA1EK100	10 25
			C419	ECCD2H680K	68P 500	C752	ECEA1EK100	10 25
			C420	ECCD2H680K	68P 500	C753	ECEA1EK100	10 25

Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.
C754	ECEA1EK3R3B	3.3 25	C755	ECEA1EK3R3B	3.3 25	C756	ECKD1H821KB	820P 50

## •PACKING PARTS LIST

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
<b>PACKING MATERIAL</b>					
P1	SPG6386	PACKING CASE (E, EG, EK, EH) (EB, EI, XL) (XA, PA, PE)	A1	SQF13375	INSTRUCTION BOOK
P1	SPG6387	PACKING CASE (EF)	A1	SQF13376	INSTRUCTION BOOK
P1	SPG6388	PACKING CASE (E, EG, EK, EH) (EB, EI, XL) (XA, PA, PE)	A1	SQF13377	INSTRUCTION BOOK
P1	SPG6389	PACKING CASE (EF)	A1	SQF13378	INSTRUCTION BOOK
P2	SPS5257	PAD	A1	SQF13379	INSTRUCTION BOOK
P3	SPS5258	PAD	A1	SQF13380	INSTRUCTION BOOK
P4	SPS5185	PAD	A2	SFDAC05E03	POWER CORD
P5	SPP730	PROTECTION COVER	A2	(E, EG, EF, EH)	
P5	SPP705	PROTECTION COVER	(EB, EI)		
P6	SKL312	INSULATOR	A2	SJA168	POWER CORD
<b>ACCESSORIES</b>					
			A2	SJA173	POWER CORD
			(XL)		
			A2	SJA193	POWER CORD
			(EK)		
			A3	RJP120ZBS-H	AC PLUG ADAPTOR
			(XA, PA, PE)		

ORDER NO. AD8904116S9

# Service Manual

Amplifier

**SU-V650**  
Color

(S) .....Silver Type  
(K) .....Black Type

**Supplement**

Stereo Integrated Amplifier

**Area**

Color	Area
(S)(K)	(E) .....Continental Europe.
(S)(K)	(Ei) .....Italy.
(S)(K)	(EG) .....F.R.Germany.
(S)(K)	(EB) .....Belgium.
(S)(K)	(EK) .....United Kingdom.
(S)(K)	(EF) .....France.
(S)(K)	(EH) .....Holland.
(S)(K)	(XL) .....Australia.
(S)(K)	(XA) .....Asia,Latin America, Middle Near East, Africa and Oceania.
(S)(K)	(PA) .....Far East PX.
(S)(K)	(PE) .....European Military.

Please file and use this supplement manual together with the Service Manual for Model No. **SU-V650**, Order No. **AD8805088C9**.


This supplement is issued to correct a mistake in a part number on page 25.

Ref. No.	Wrong Part No.	Correct Part No.	Part Name & Descriptions		Remarks
C703	—	ECEA1JU330	E. Capacitor, 63 V 33 µF		Addition
C704	—	ECEA1JU330	E. Capacitor, 63 V 33 µF		Addition

## Technics

Matsushita Electric Industrial Co., Ltd.  
Central P.O. Box 288, Osaka 530-91, Japan

Panasonic Tokyo Sales Department  
Matsushita Electric Industrial Co., Ltd.  
World Trade Center Bldg., 4-1, Hamamatsu-cho,  
2-chome, Minato-ku, Tokyo 105, Japan

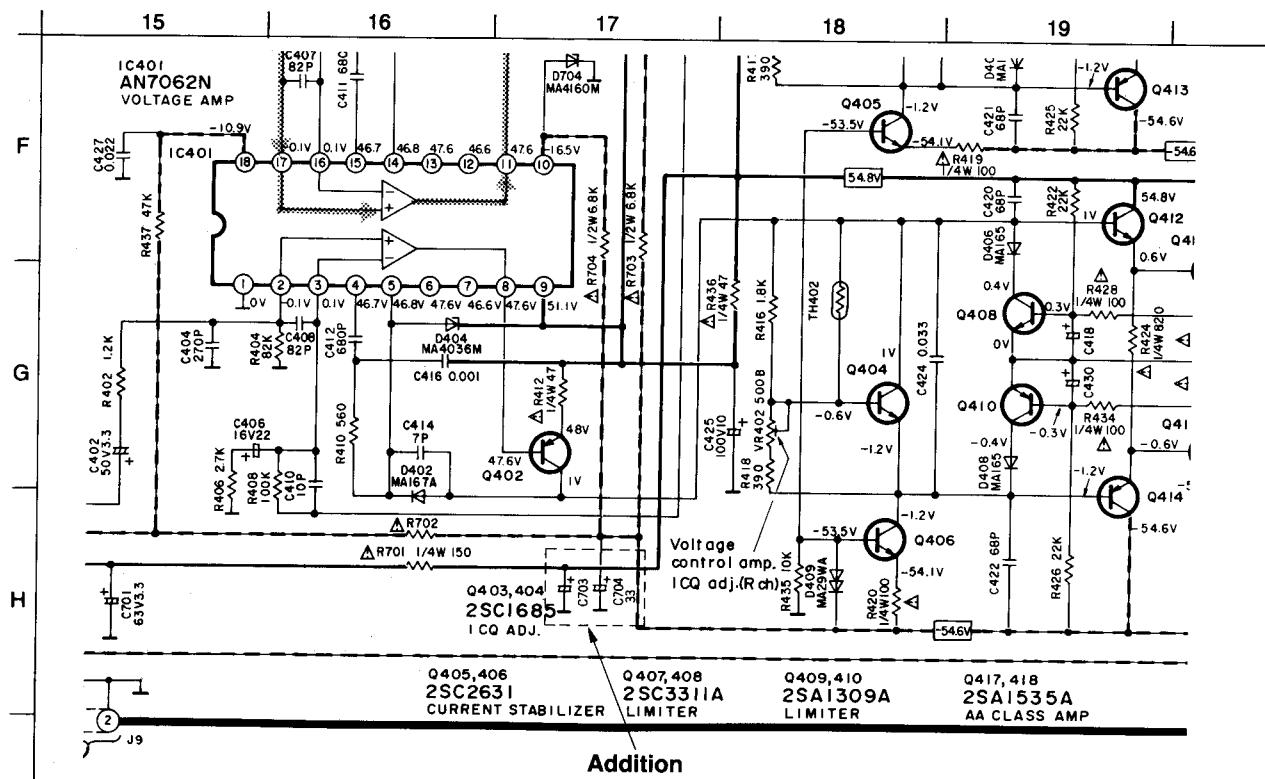**SU-V650****■ SCHEMATIC DIAGRAM (See page 11)****■ CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM (See page 15)**