

Service Manual

Stereo Integrated Amplifier

Amplifier

SU-X950

Color

(K)Black Type



Area

Color	Area
(K)	(E)Continental Europe.
(K)	(EH)Holland.
(K)	(XL)Australia.
(K)	(XA)Asia,Latin America,Middle Near East,Africa and Oceania.
(K)	(EK)United Kingdom.
(K)	(EB)Belgium.
(K)	(EF)France.
(K)	(EG)F.R.Germany.
(K)	(EI)Italy.
(K)	(XB)Saudi Arabia.

SPECIFICATIONS

(DIN 45 500)

■ AMPLIFIER SECTION

DIN power output

1 kHz THD:1%

2 x 60 W (8Ω)

Total harmonic distortion

rated power at 1 kHz

1% (8Ω)

Harmonic distortion

half power at 1 kHz

0.009% (8Ω)

Residual hum and noise

0.2 mV

Damping factor

30 (8Ω)

Input sensitivity and impedance

PHONO

3mV/47 kΩ

TUNER,AUX,TAPE 1,TAPE 2

150mV/22 kΩ

CD,DAT

200mV/22 kΩ

Maximum input voltage (1 kHz,RMS)

PHONO

100 mV

S/N (rated power 8Ω)

PHONO

75 dB (IHF,A:79 dB)

TUNER,CD,AUX,TAPE 1,TAPE 2

82 dB (IHF,A:83 dB)

Frequency response

PHONO

RIAA standard curve
± 0.8dB(30 Hz ~ 15 kHz)

TUNER,CD,AUX,TAPE 1,TAPE 2

15 Hz ~ 55 kHz (-3 dB)

DAT

Tone controls

BASS

50 Hz, + 10 dB ~ -10 dB

TREBLE

20 kHz,+ 10 dB ~ -10 dB

Muting

-20 dB

Super bass

70 Hz, + 10 dB

Output voltage

TAPE 1,TAPE 2,REC OUT

150 mV

Channel balance,AUX 250 Hz ~ 6,300 Hz

±1.0 dB

Channel separation, AUX 1 kHz

60dB

Headphones output level and impedance

520 mV/330 Ω

Load impedance

MAIN or REMOTE

8 Ω ~ 16 Ω

SURROUND

8 Ω ~ 16 Ω

■ GENERAL

Power consumption

290 W

Power supply

For United Kingdom and Australia

AC 50 Hz/60 Hz,240V

For continental Europe

AC 50 Hz/60 Hz,220V

For others

AC 50 Hz/60 Hz,110V/127V/220V/240V

Dimensions (W x H x D)

360 x 128 x 300 mm

(14-3/16" x 5-1/32" x 11-13/16")

Weight

6.6 kg (14.5 lb.)

Notes:

1.Specifications are subject to change without notice.

Weight and dimensions are approximate.

2.Total harmonic distortion is measured by the digital spectrum analyzer (H.P. 3045 system).

Technics

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan

■ CONTENTS

	Page
BEFORE REPAIR.....	2
PROTECTION CIRCUITRY.....	2
ACCESSORY.....	2
LOCATION OF CONTROLS.....	3
CINNECTIONS.....	4 ~ 6
DISASSEMBLY INSTRUCTIONS.....	7 ~ 9
SCHEMATIC DIAGRAM.....	10 ~ 16
TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES.....	17
PRINTER CIRCUIT BOARDS	17 ~ 21
WIRING CONNECTION DIAGRAM.....	22
BLOCK DIAGRAM.....	23,24
REPLACEMENT PARTS LIST.....	25
EXPLODED VIEW.....	26 ~ 28
FUNCTIONS OF IC TERMINALS.....	29,30
REPLACEMENT PARTS LIST(Electrical).....	31,32
RESISTORS AND CAPACITORS.....	32 ~ 34

■ BEFORE REPAIR

- (1) Turn off the power supply. Using a 10Ω, 5W resistor connect both ends of power supply capacitors(C701,C702,6800μF) in order to discharge the voltage.
- (2) Before turning the power supply on, after completion of repair, slowly apply the primary voltage by using a power supply voltage controller to make sure that the consumed current at 50Hz/60Hz in NO SIGNAL mode should be shown below with respect to supply voltage 110V/127V/220V/240V.

Power supply voltage	AC110V	AC127V	AC220V	AC240V
Consumed current 50Hz	173 ~ 519mA	160 ~ 480mA	87 ~ 259mA	80 ~ 239mA
Consumed current 60Hz	166 ~ 498mA	153 ~ 460mA	83 ~ 249mA	77 ~ 230mA

■ PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following conditions is noticed:

- * No sound is heard when the power is switched ON.
- * Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

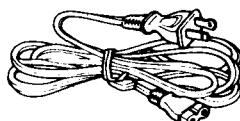
If this occurs, follow the procedure outlined below:

1. Switch OFF the power.
2. Determine the cause of the problem and correct it.
3. Switch ON the power once again.

Note:
When the protection circuitry functions, the unit will not operate unless the power is first switched OFF and then ON again.

■ ACCESSORY

Power supply cord.....	1
------------------------	---



- SJA173.....For (XL) area only.
- SJA183.....For (XB) area only.
- SJA168.....For (XA) area only.
- SJA188.....For (EK) area only.
- SFDAC05E03For (E),(EG),(EF),(EH),(EB) and (Ei) areas.

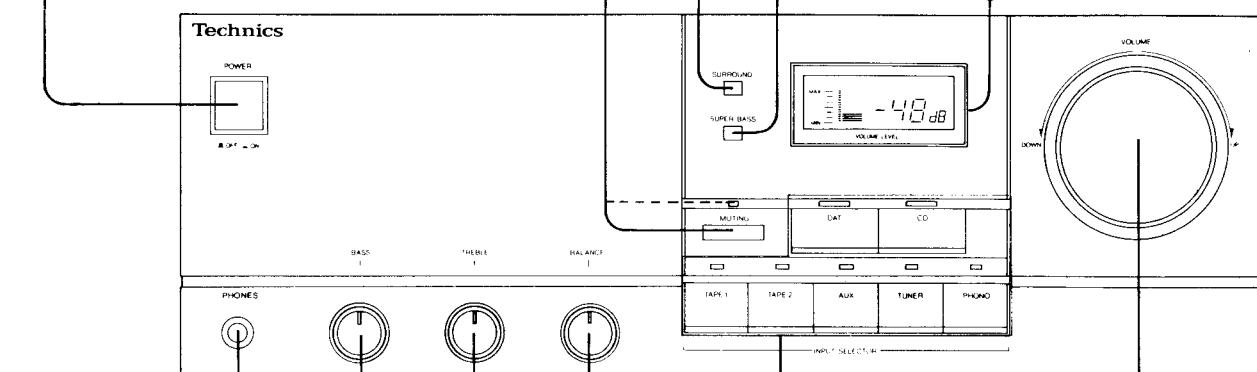
■ LOCATION OF CONTROLS

•Front panel

Audio muting switch/indicator (MUTING)

Press this switch when a disc is being changed or to temporarily reduce the volume level (approx. 1/10).

Power switch (POWER)



Balance control (BALANCE)

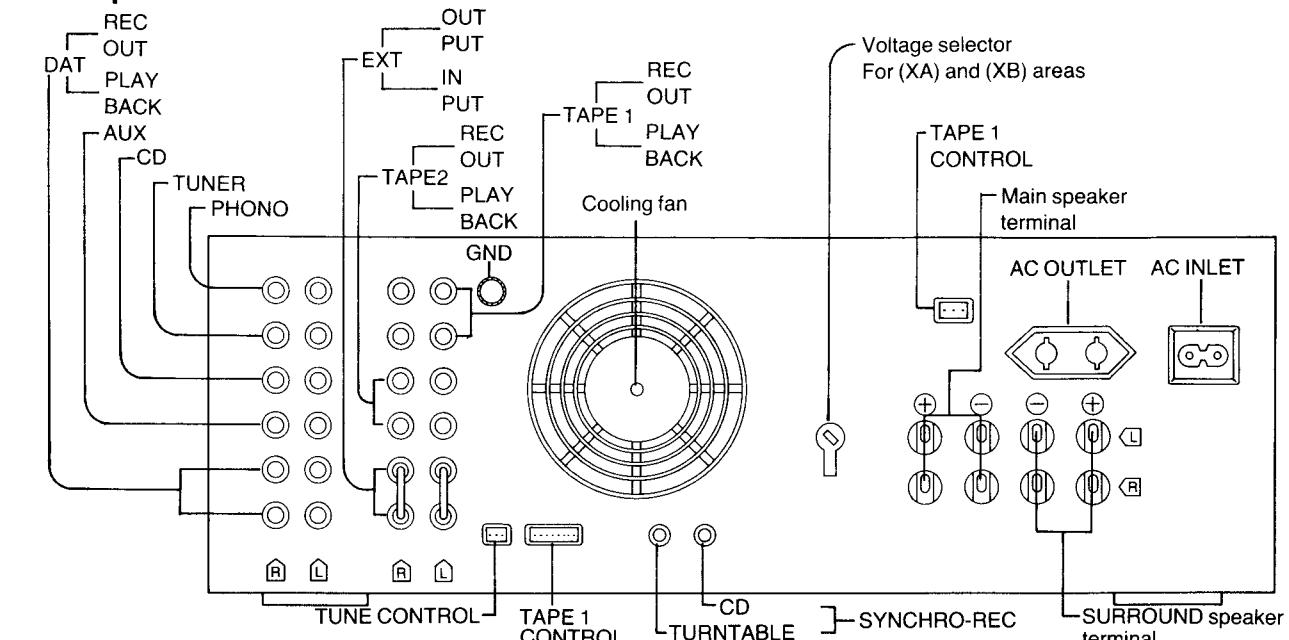
This control is used to adjust left/right volume balance.

Tone controls (BASS/TREBLE)

The bass control is for the low-frequency sound range, and the treble control is for the high-frequency sound range.

Headphones jack (PHONES)

•Rear panel




※ Phono input capacitance is about 100 pF.

■ CONNECTIONS

1. Make the connections of the stereo connection cables, the synchro-recording connection cord (option), and the remote-control cords (option).

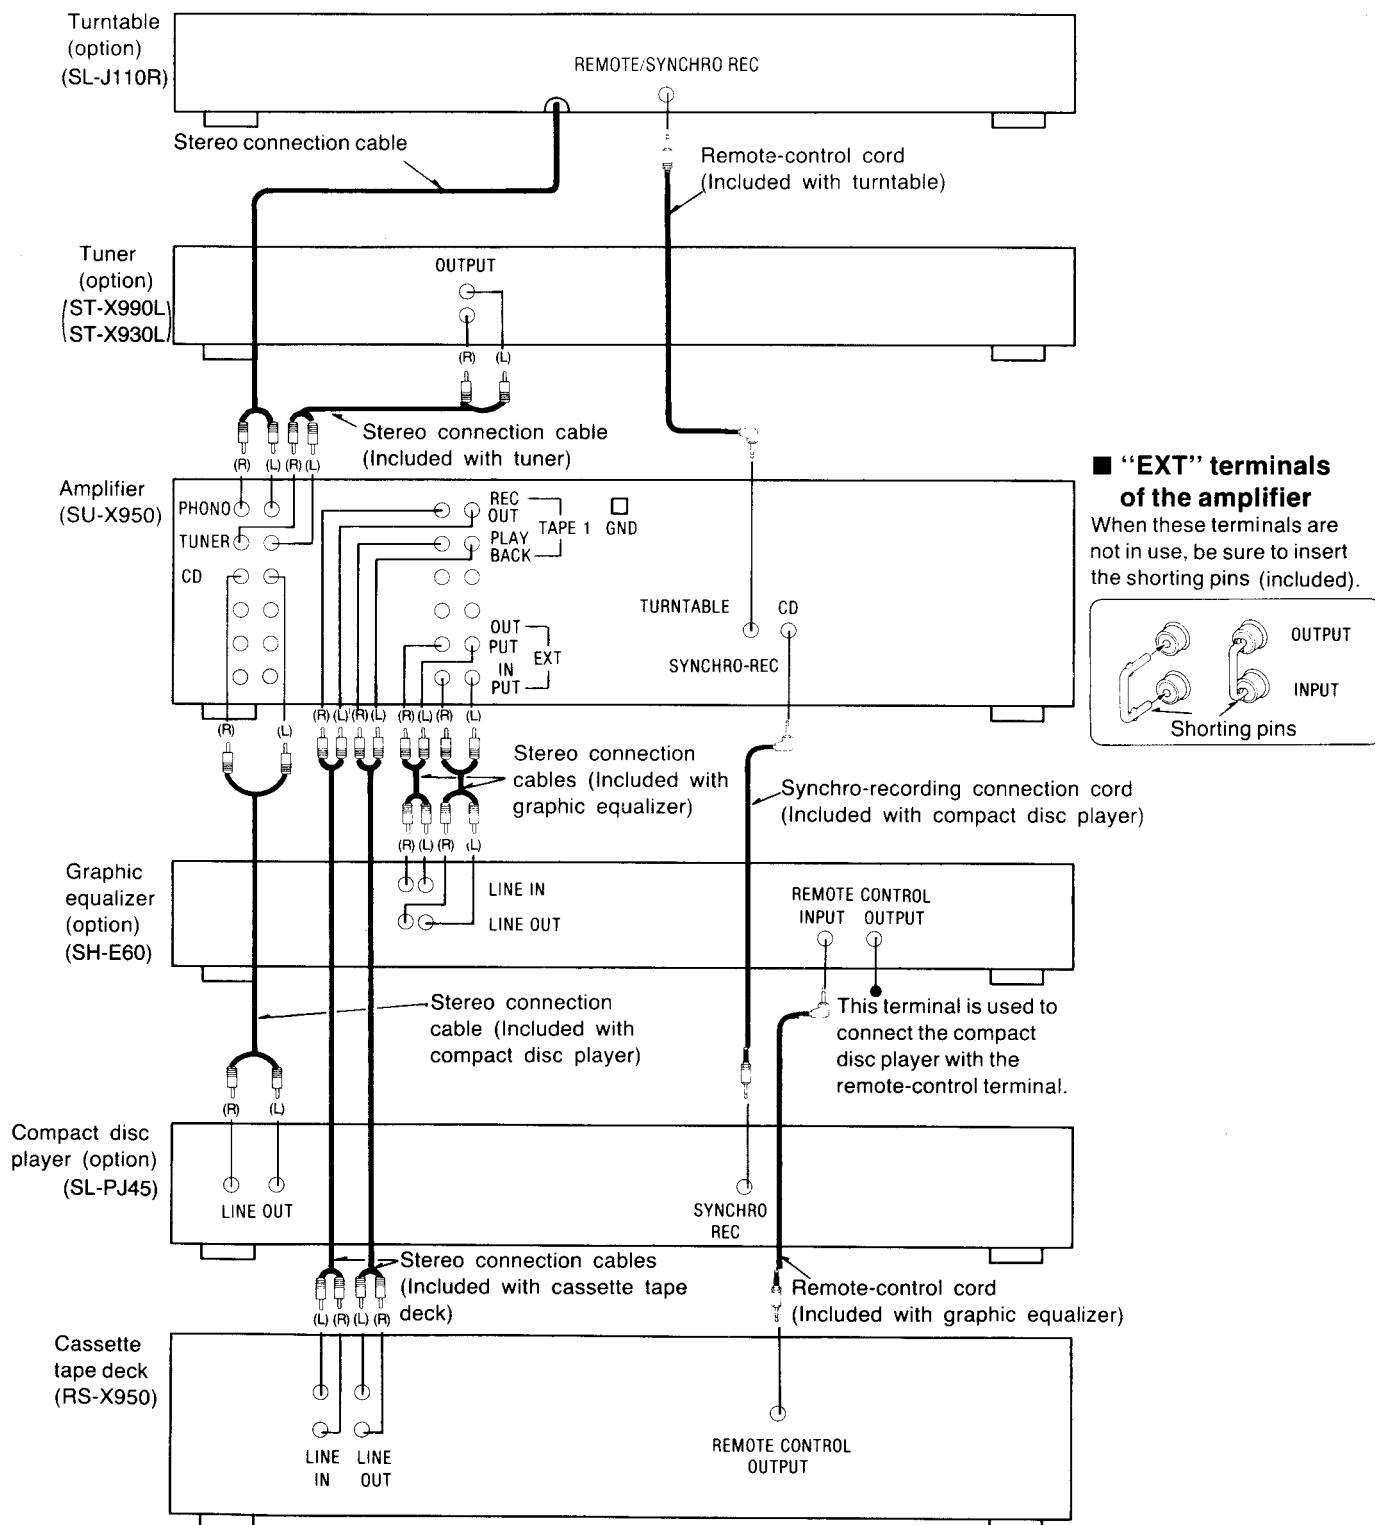
1. Although the synchro-recording connection cord and the remote-control cords are differentiated in the figure below, actually they are the same shape.
2. For a turntable with a ground terminal, be sure to connect wire to the "GND" terminal of the amplifier.



2. Make the connections of the flat cables and the AC power supply cords.

- Do not connect video-related equipment (such as a TV, etc.) to the AC outlets of these components. (These outlets are especially for audio equipment.) Also do not exceed the indicated power ratings when connecting to these outlets.
- If the graphic equalizer is not used in combination with these components, connect the AC power supply cord of the compact disc player to the AC outlet of the amplifier. If the compact disc player is not used in combination with these components, connect the AC power supply cord of the turntable to the AC outlet of the graphic equalizer.

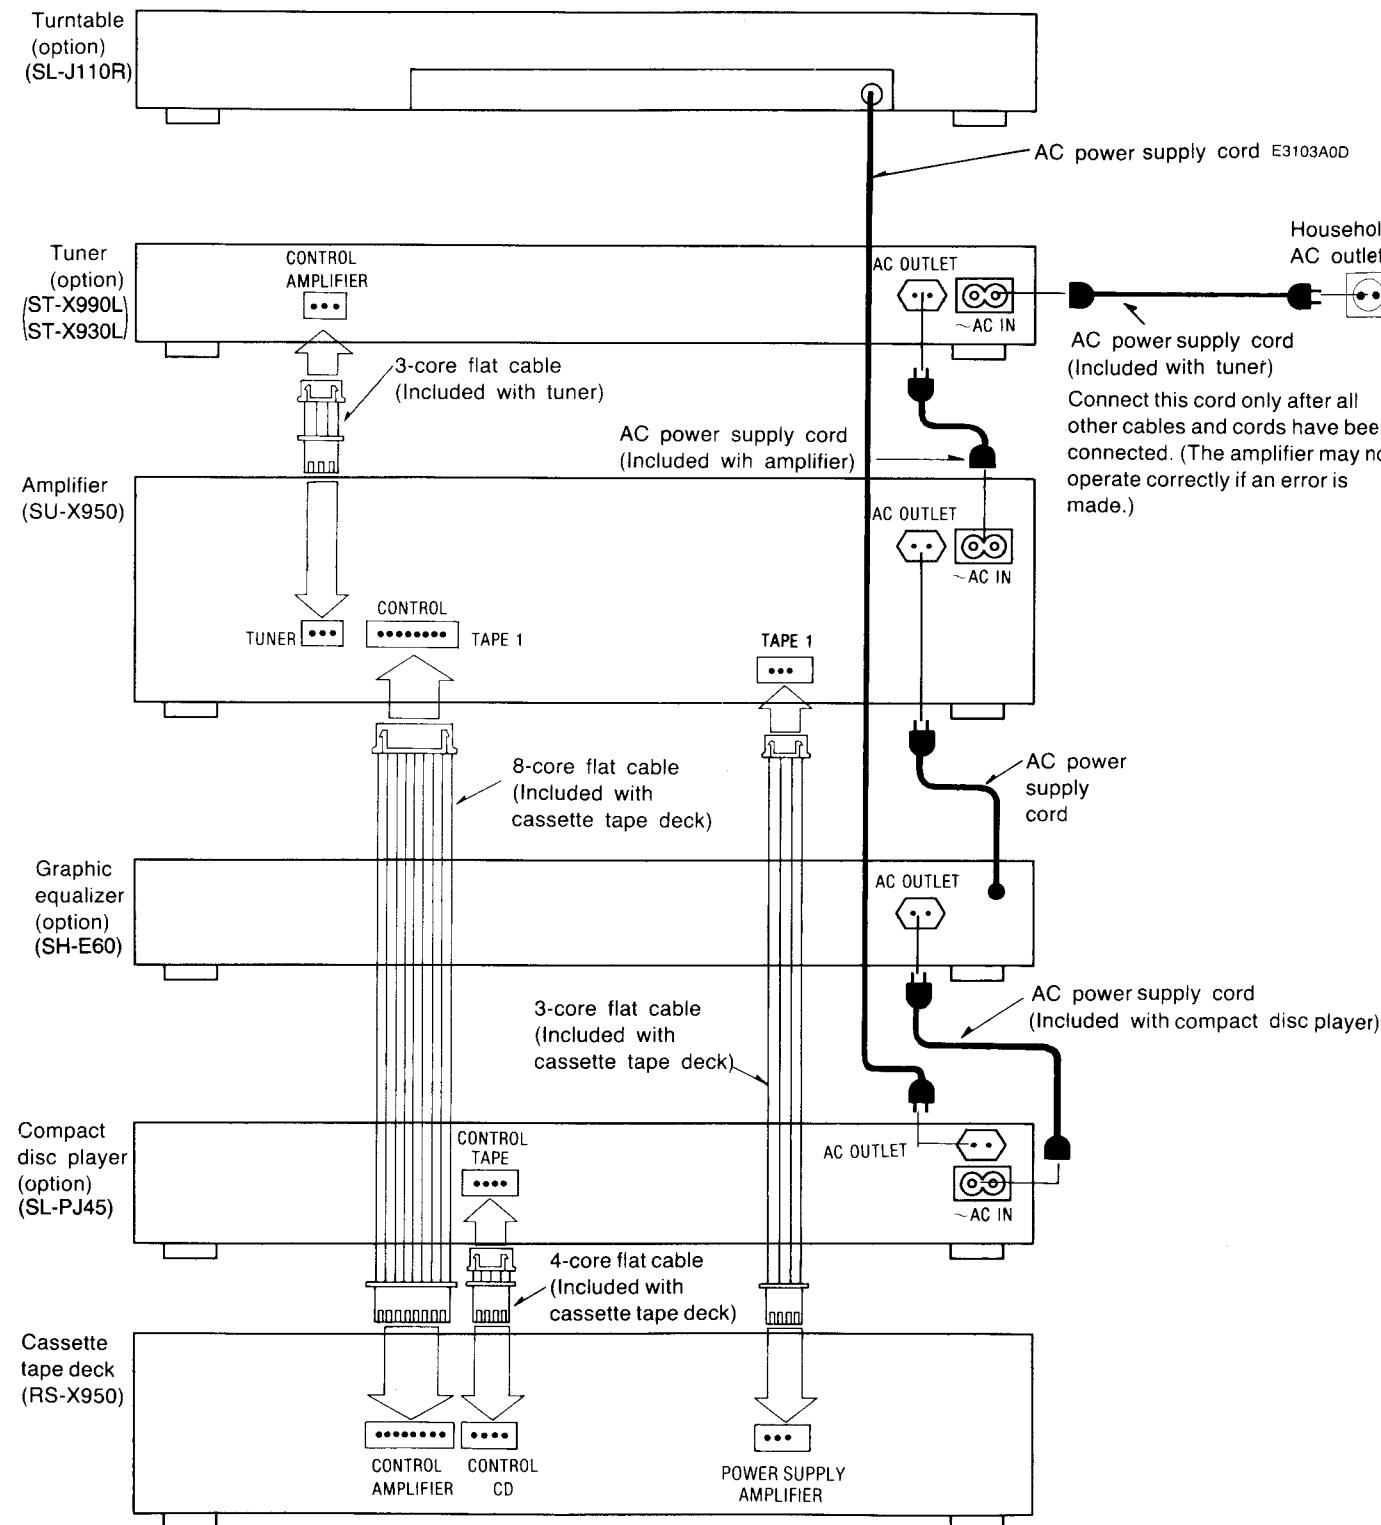Note: The configuration of the AC outlet and AC power supply cord differs according to area.



Connections to other equipment

"AUX" terminals

Connect a second compact disc player, etc.

Second compact disc player (option)




Stereo connection cable (option)

Amplifier (SU-X950)

"TAPE 2" terminals

Connect a video cassette recorder (for audio only) or a second audio tape deck.

Second tape deck (option)




Stereo connection cables (option)

Amplifier (SU-X950)

"DAT" terminals

Connect a digital audio tape deck (DAT).

Digital audio tape deck (DAT) (option)




Stereo connection cables (option)

Amplifier (SU-X950)

■ DESCRIPTION OF FL PANEL










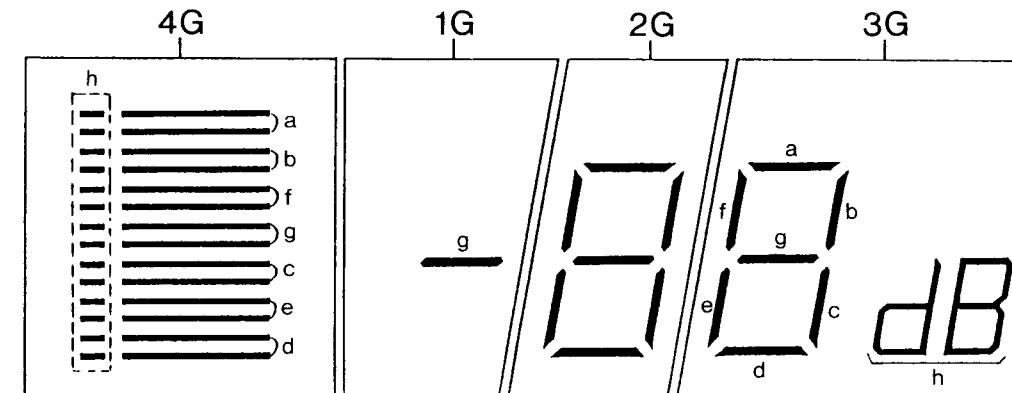
• GRID ASSIGNMENT










• PIN CONNECTION

Pin No.	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
Connection	F 2	F 2	N P	a	4 G	b	c	d	1 G	e	f	2 G	g	3 G	N h	3 G	N P	1 F	F 1	

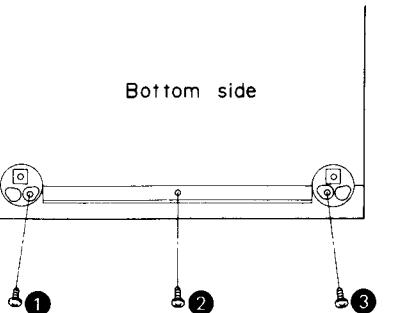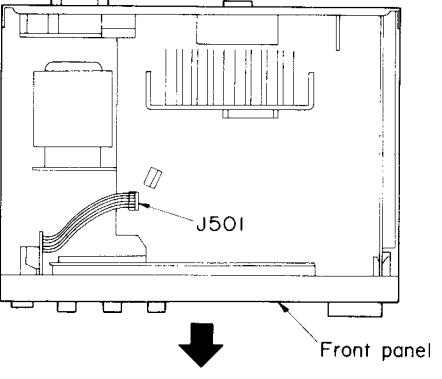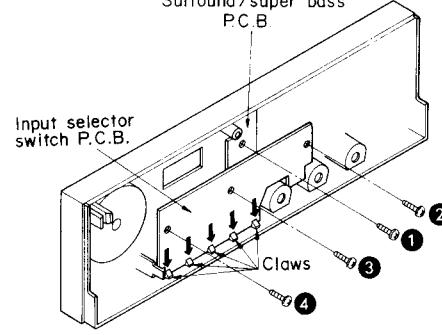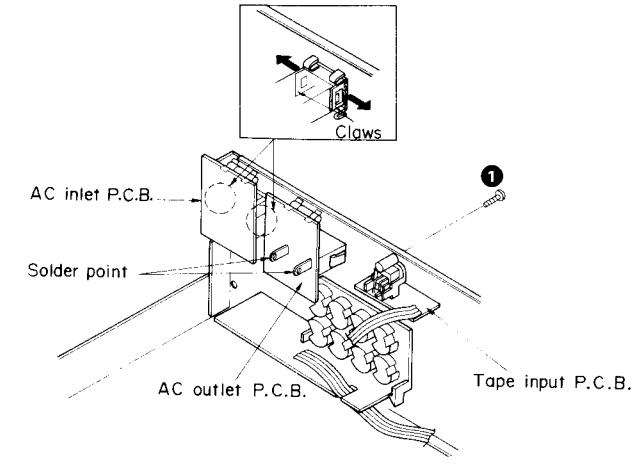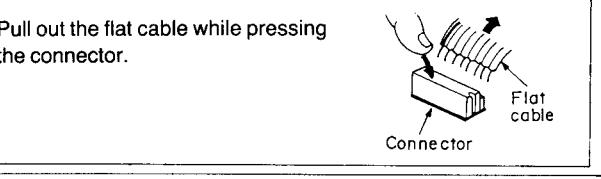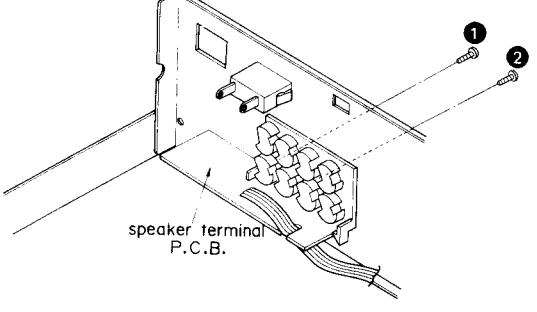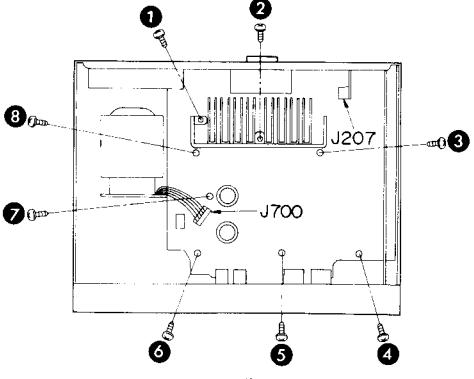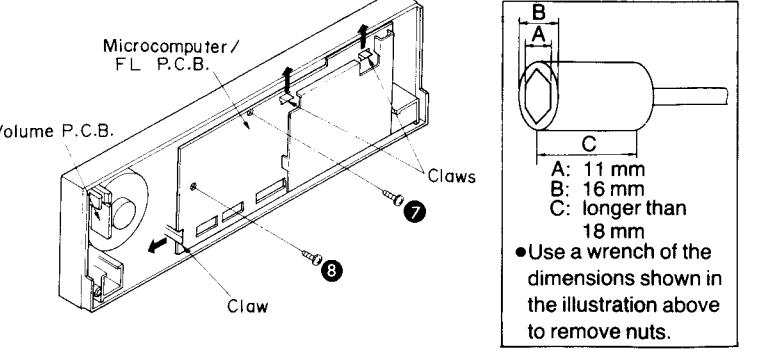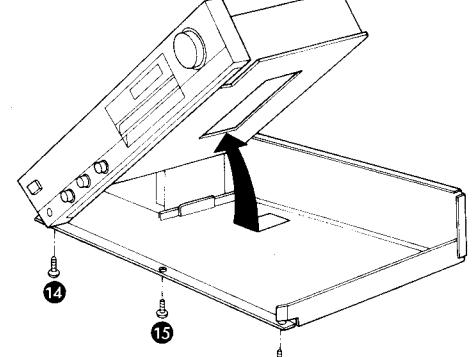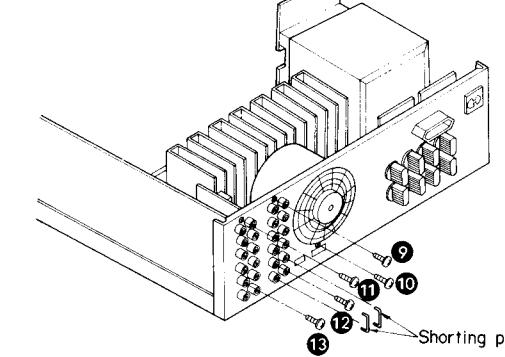
■ DISASSEMBLY INSTRUCTIONS



Ref. No. 1	How to remove the cabinet	Ref. No. 2	How to remove the front panel	Ref. No. 5	How to remove the surround/super bass P.C.B. and input selector switch P.C.B.	Ref. No. 6	How to remove the tape input P.C.B., AC outlet P.C.B. and AC inlet P.C.B.
Procedure 1	• Remove the 6 screws.	Procedure 1→2	1. Remove the 3 screws (①~③). 2. Remove the flat cable (J501). 3. Remove the front panel in the direction of the arrow.	Procedure 1→2→4→5	How to remove the surround/super bass P.C.B. • Remove the 1 screw (①). How to remove the input selector switch P.C.B. 1. Remove the 3 screws (②~④). 2. Push the 5 claws and remove the input selector switch P.C.B.	Procedure 1→6	How to remove the tape input P.C.B. • Remove the 1 screw (①). How to remove the AC inlet • Pull out the 2 claws in the direction of the arrow. How to remove the AC outlet • Unsolder the 2 terminals.
Ref. No. 3	How to remove the power switch P.C.B.						
Procedure 1→2→3	1. Remove the power switch knob by pushing it from behind the front panel. 2. Remove the 2 screws (①, ②).		How to remove the flat cable Pull out the flat cable while pressing the connector. 	Procedure 1→6→7	• Remove the 2 screws (①, ②).	Procedure 1→8	1. Remove the 8 screws (①~⑧). 2. Remove the flat cable (J207, J700).
Ref. No. 4	How to remove the microcomputer/FL P.C.B. and volume P.C.B.		How to remove the microcomputer/FL P.C.B. 1. Remove the 3 knobs (①~③). 2. Remove the 3 nuts (④~⑥). 3. Remove the 2 screws (⑦, ⑧). 4. Push the 3 claws and remove the microcomputer/FL P.C.B.				
Procedure 1→2→4	How to remove the volume P.C.B. 1. Remove the 1 knob (⑨). 2. Remove the 1 nut (⑩).		 • Use a wrench of the dimensions shown in the illustration above to remove nuts.				
				5. Remove the 3 screws (⑭~⑯).		3. Remove the 5 screws (⑨~⑬). 4. Remove the shorting pin.	

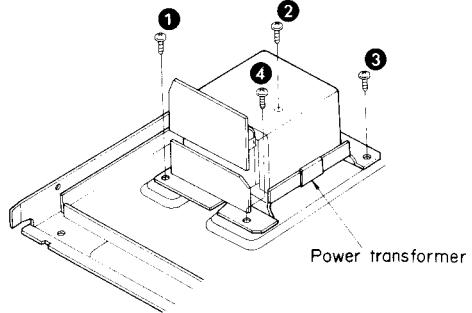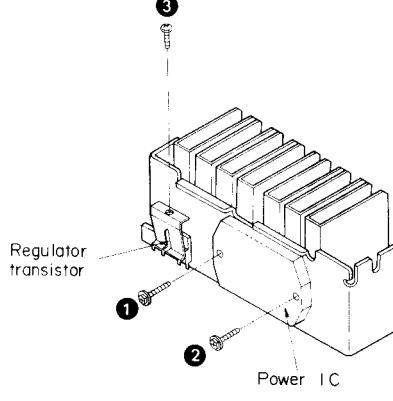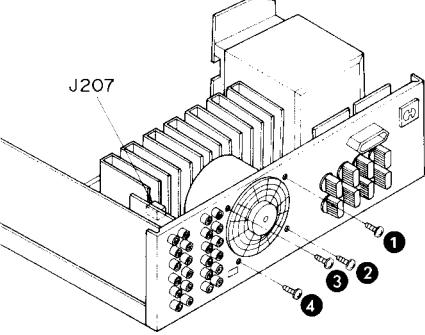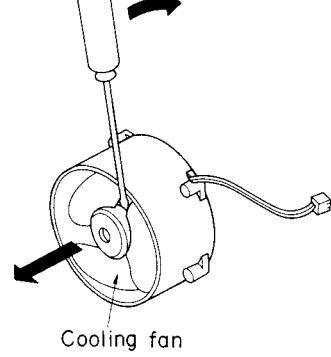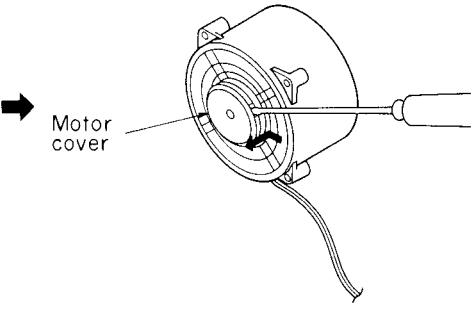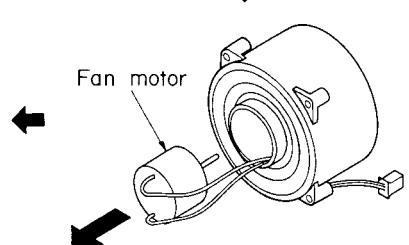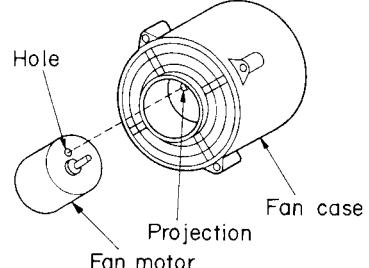
Ref. No. 9	How to remove the power transformer	Ref. No. 10	How to remove the power IC and regulator transistor
Procedure 1→6→7→9	• Remove the 4 screws (①~④).	Procedure 1→8→10	1. Unsolder the power IC or regulator transistor. 2. Remove the 3 screws (①~③).
			
Ref. No. 11	How to remove the fan motor		<p>• When mounting the power IC or regulator transistor. Apply silicone compound (SZZOL15) to the rear side of power IC or regulator transistor.</p> <p>4. Insert a screwdriver at the root of the cooling fan. Force it out of the motor shaft. 5. Remove the motor cover by used \ominus screwdriver. 6. Remove the motor from the fan casing. 7. When mounting the motor fan, align the fan casing's projection with the hole of the fan motor.</p>
Procedure 1→11	1. Pull out the 1 connector (J207). 2. Remove the 4 screws (①~④). 3. Press the rear cabinet in the direction of the arrow and remove the fan motor.		    

1 | 2 | 3 | 4 | 5 | 6 |

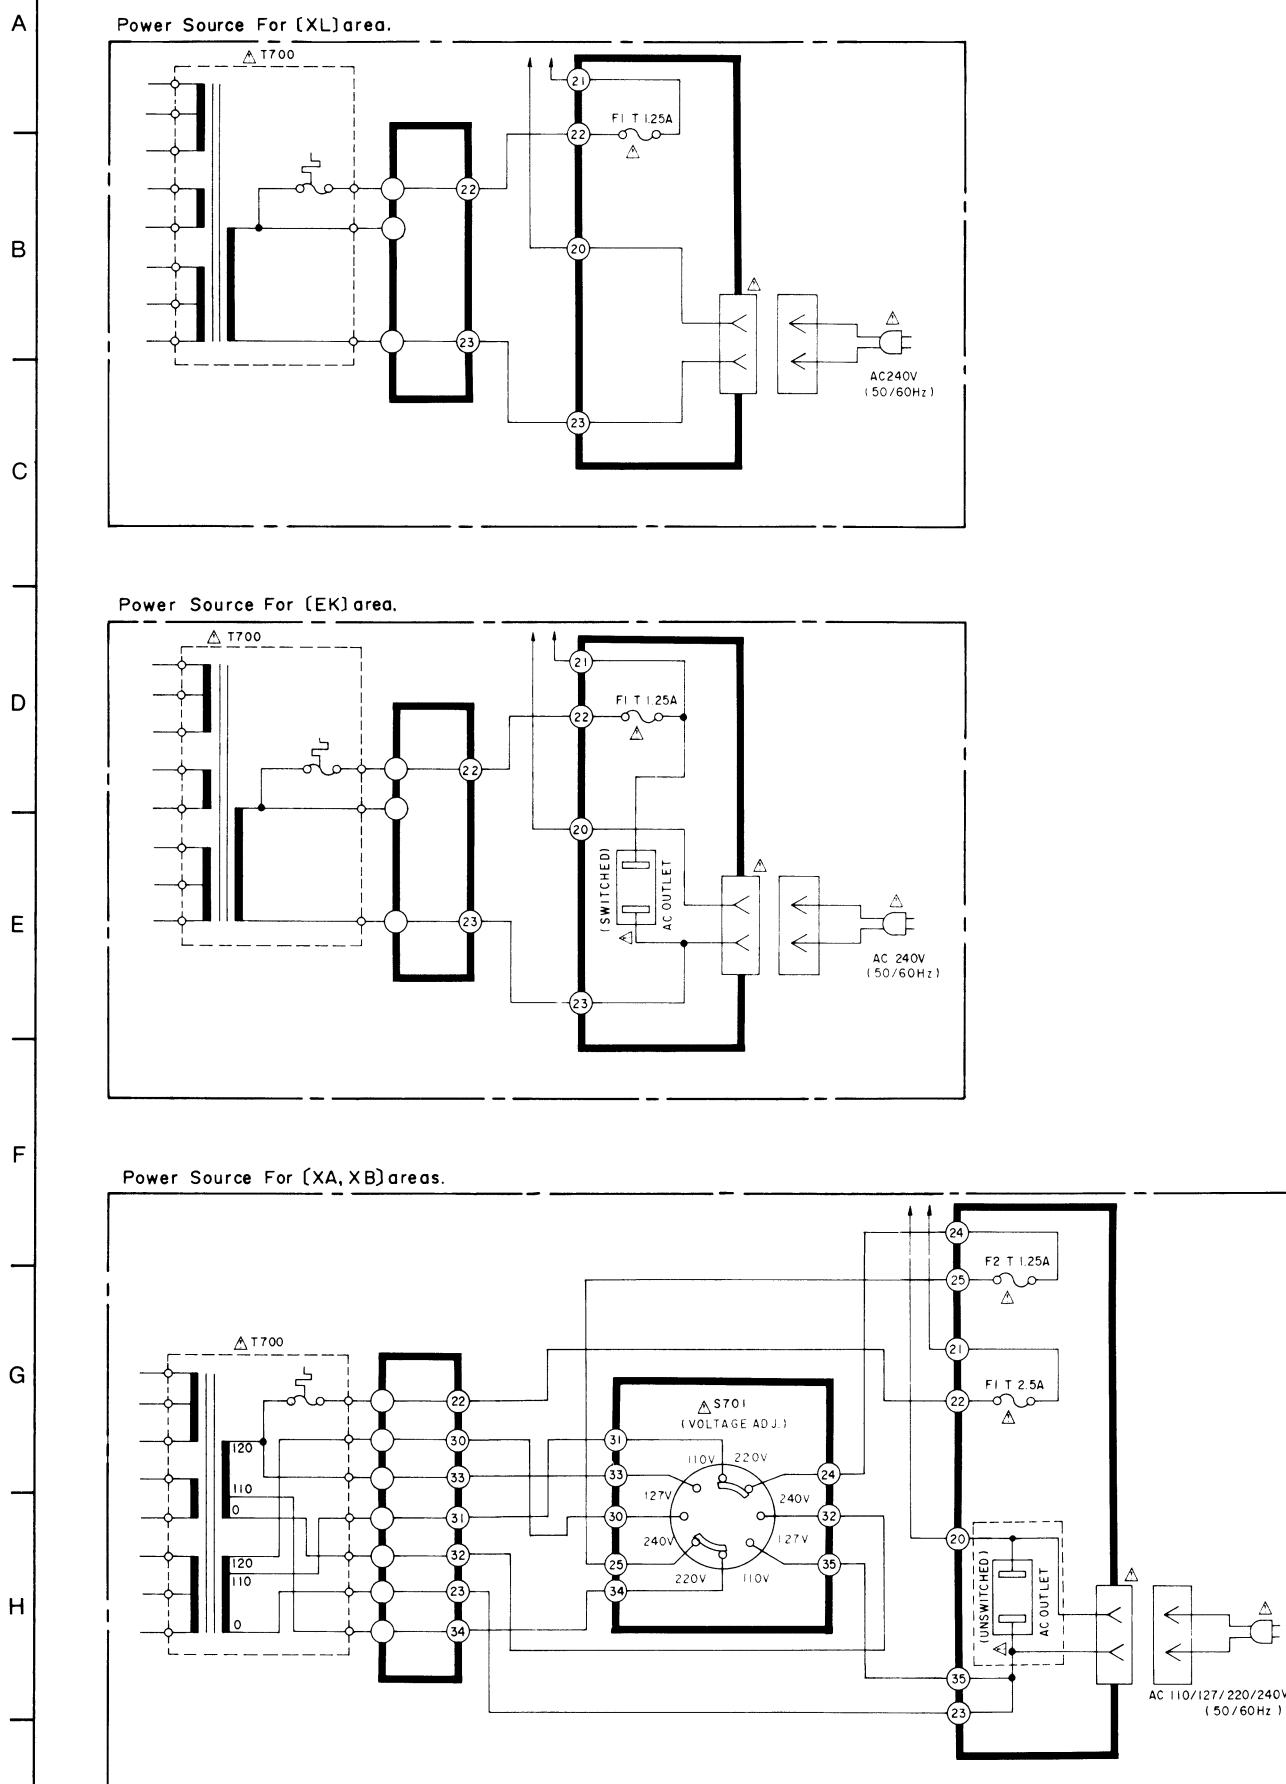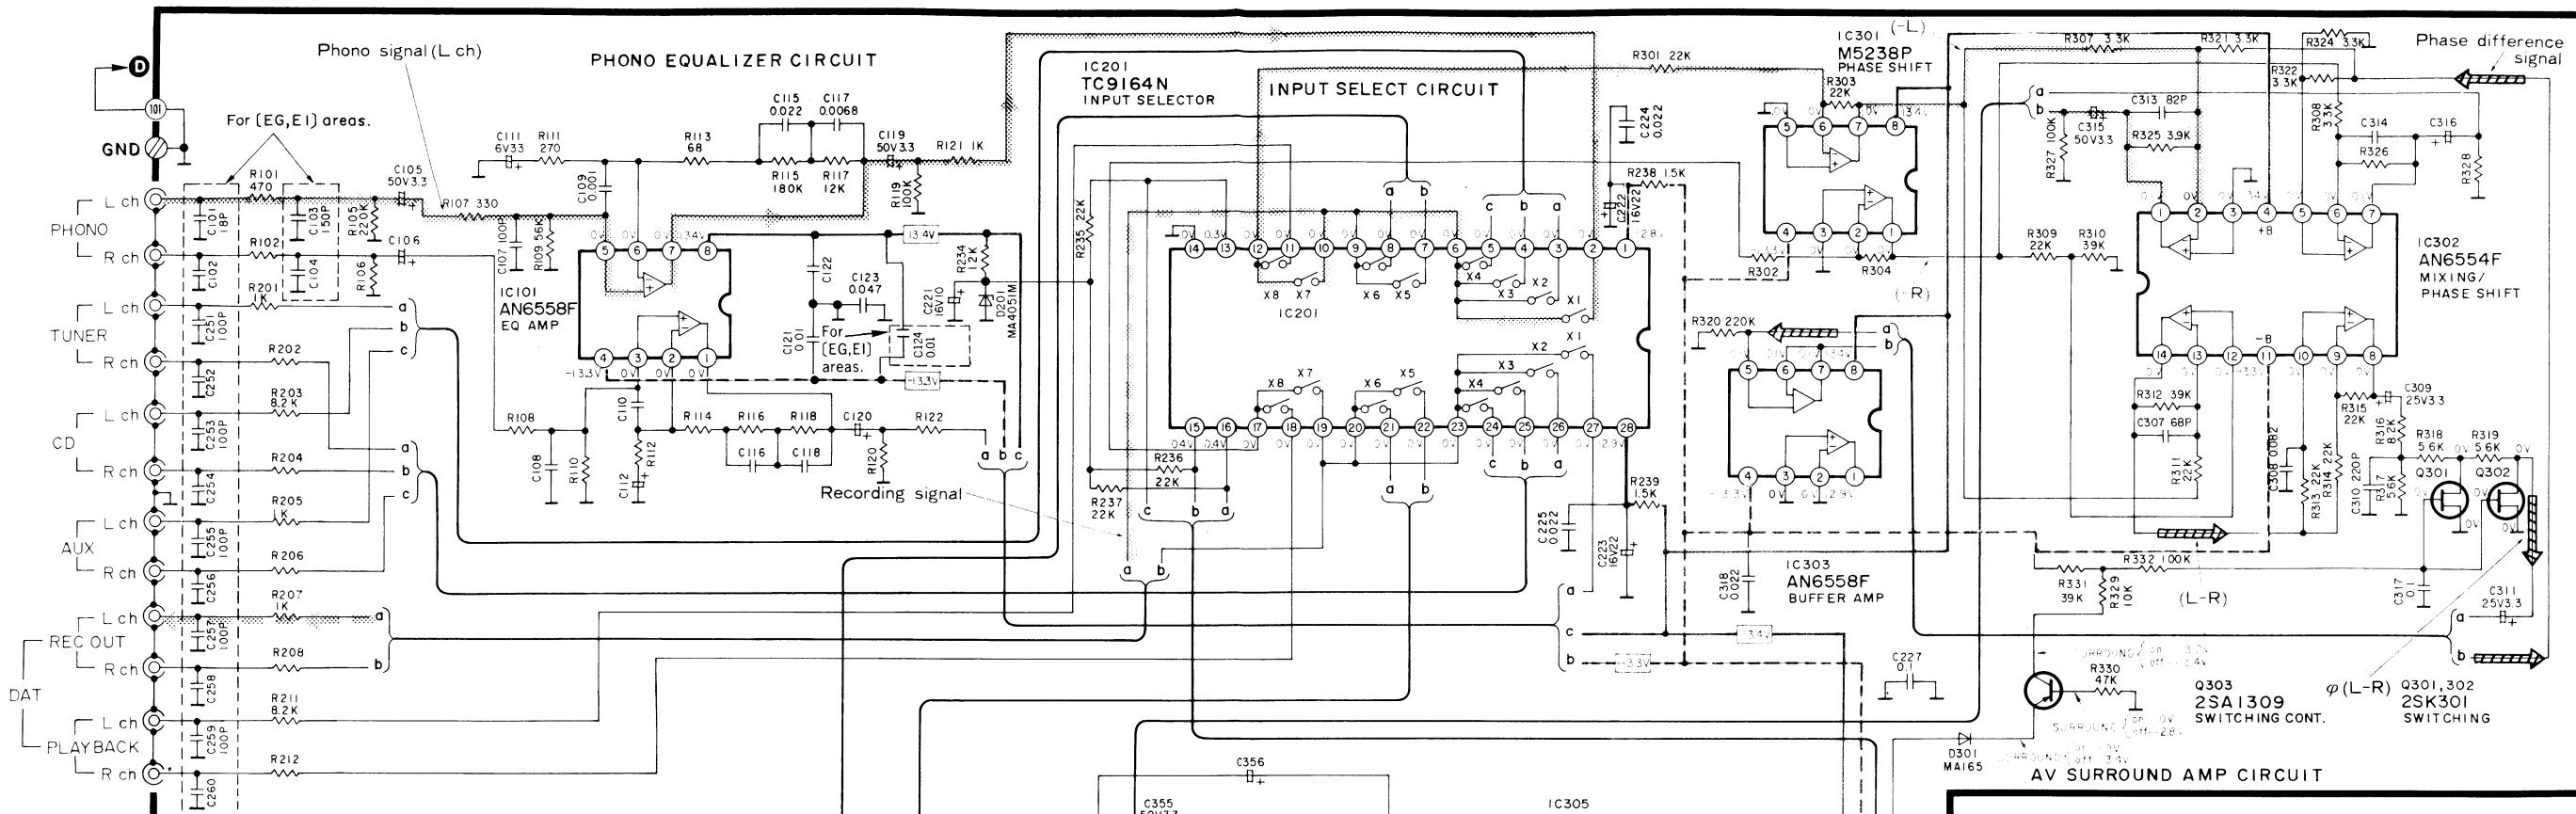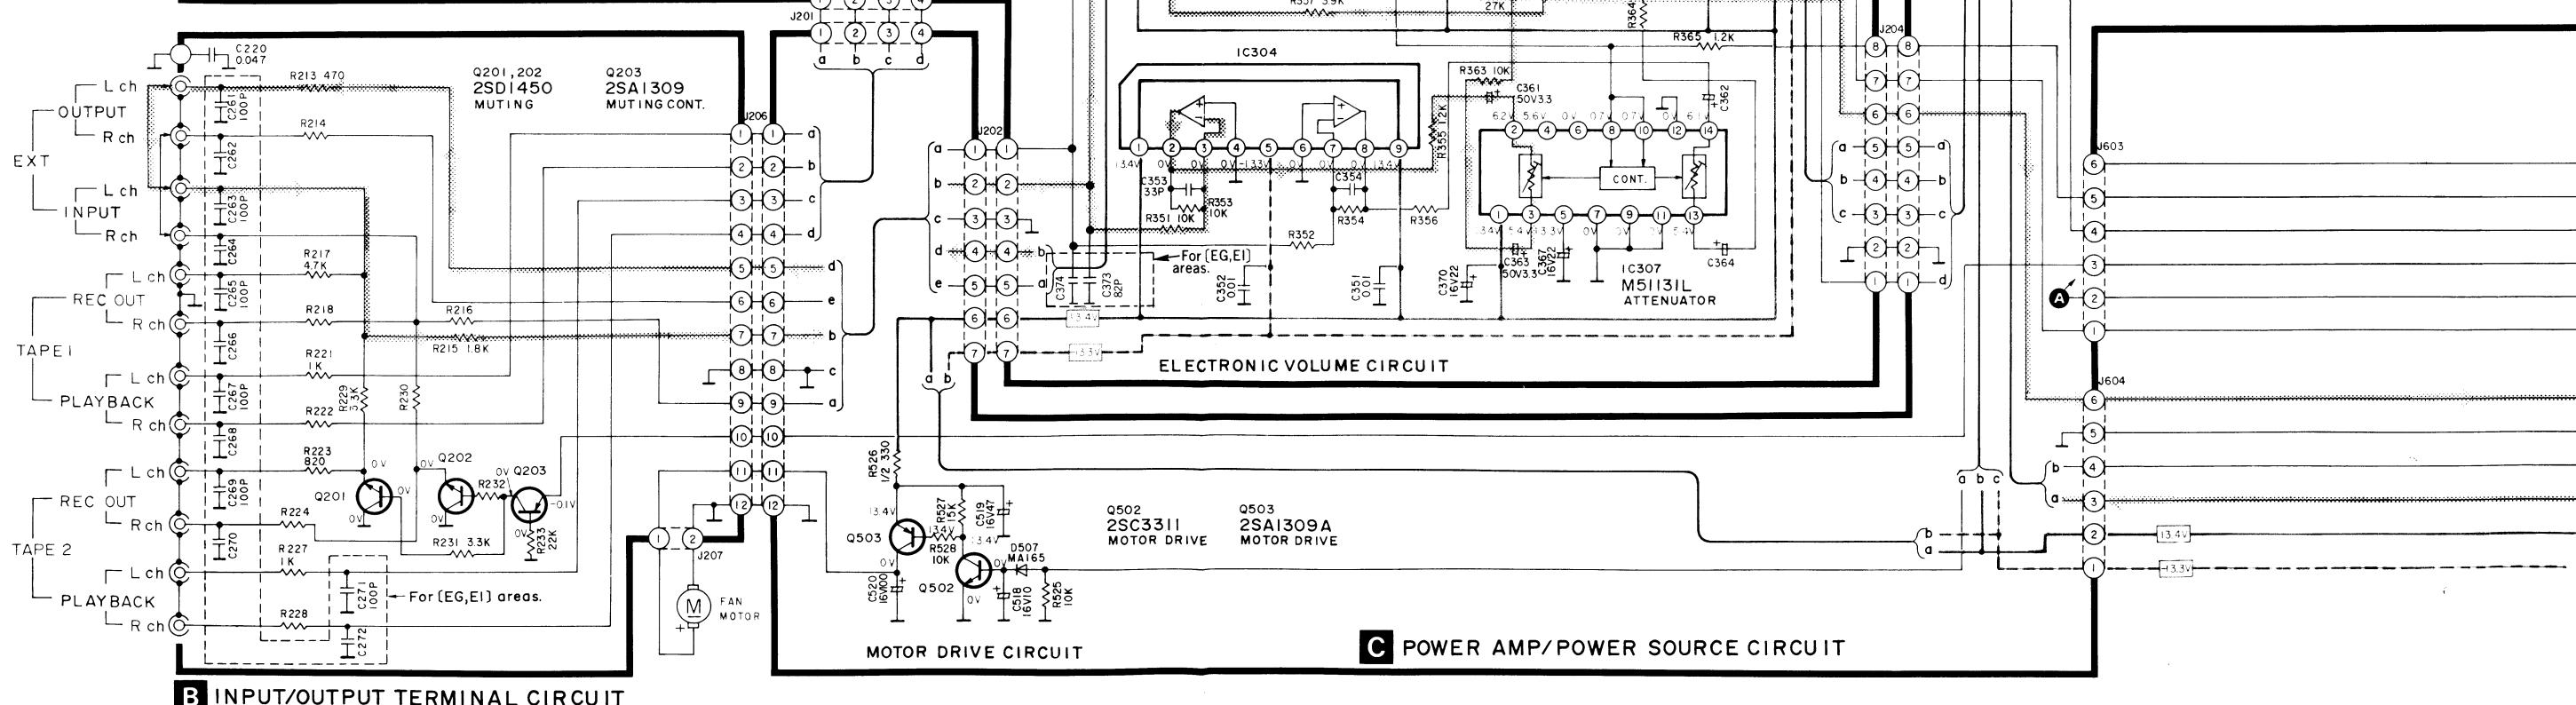■ SCHEMATIC DIAGRAM



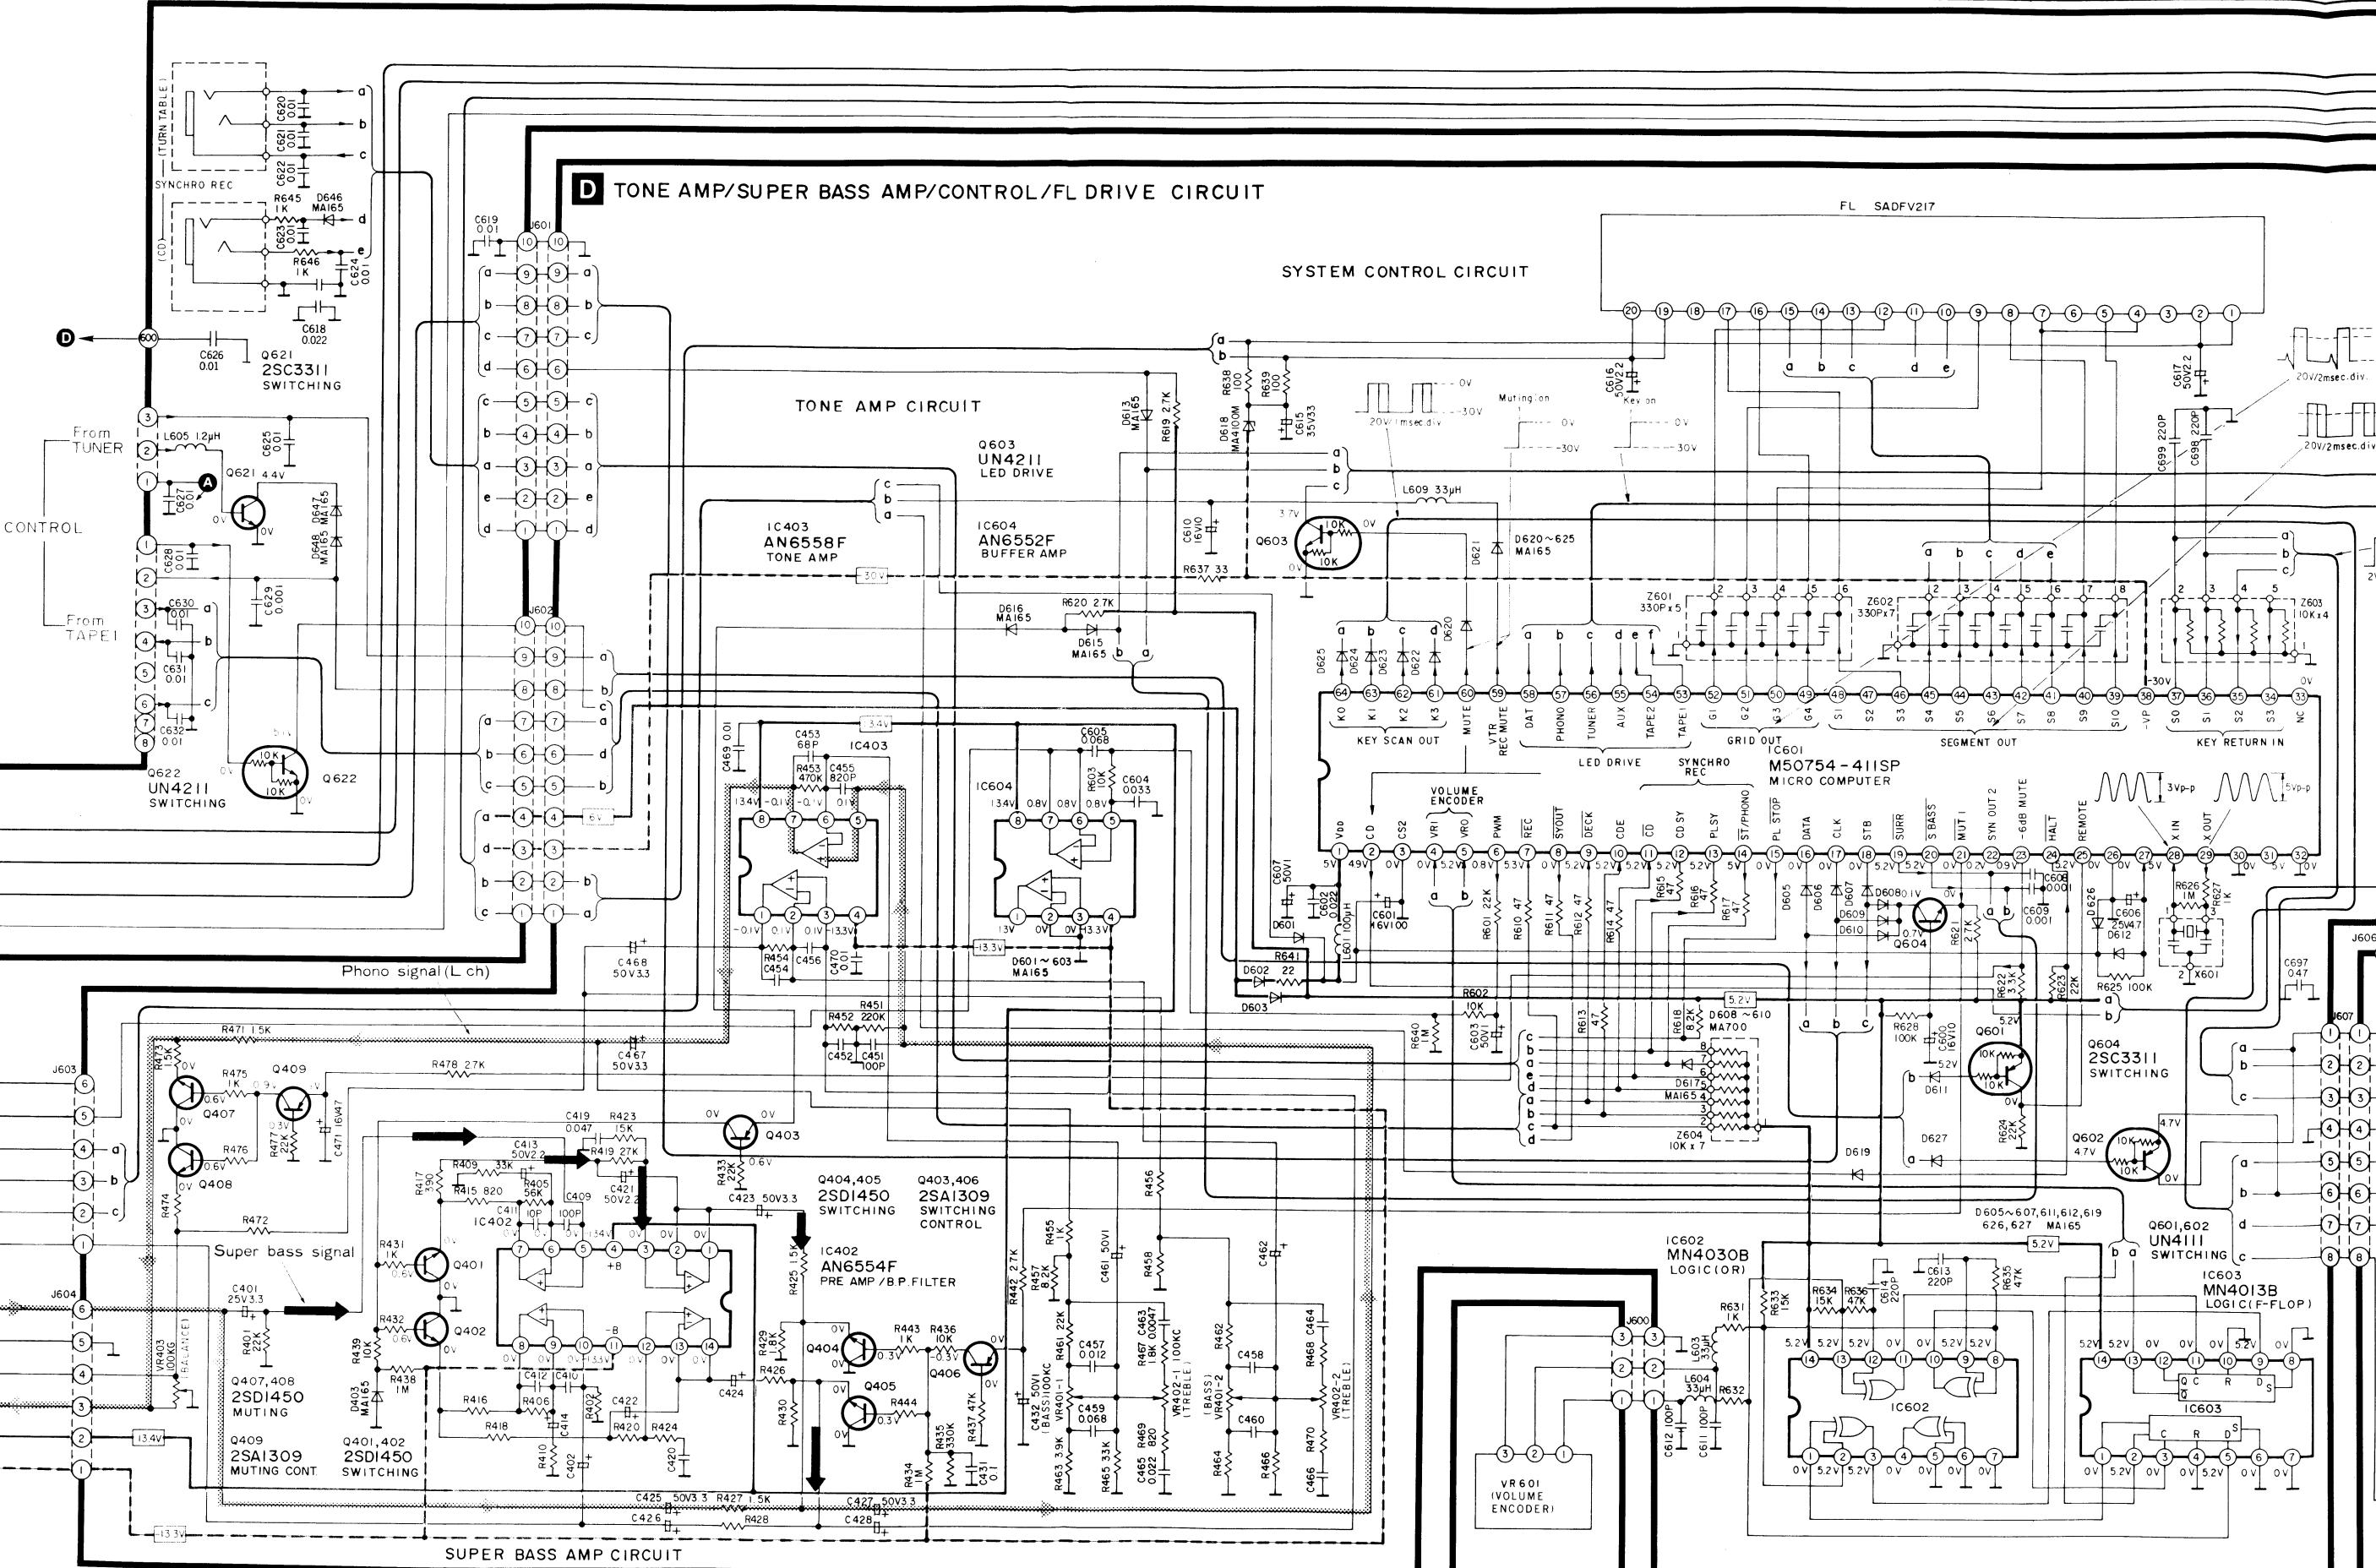
**A** INPUT SELECT/PHONO EQ AMP/
SURROUND AMP/ATTENUATOR CIRCUIT**B** INPUT/OUTPUT TERMINAL CIRCUIT**C** POWER AMP/POWER SOURCE CIRCUIT



E VOLUME CIRCUIT


CONTROL/FL DRIVE CIRCUIT

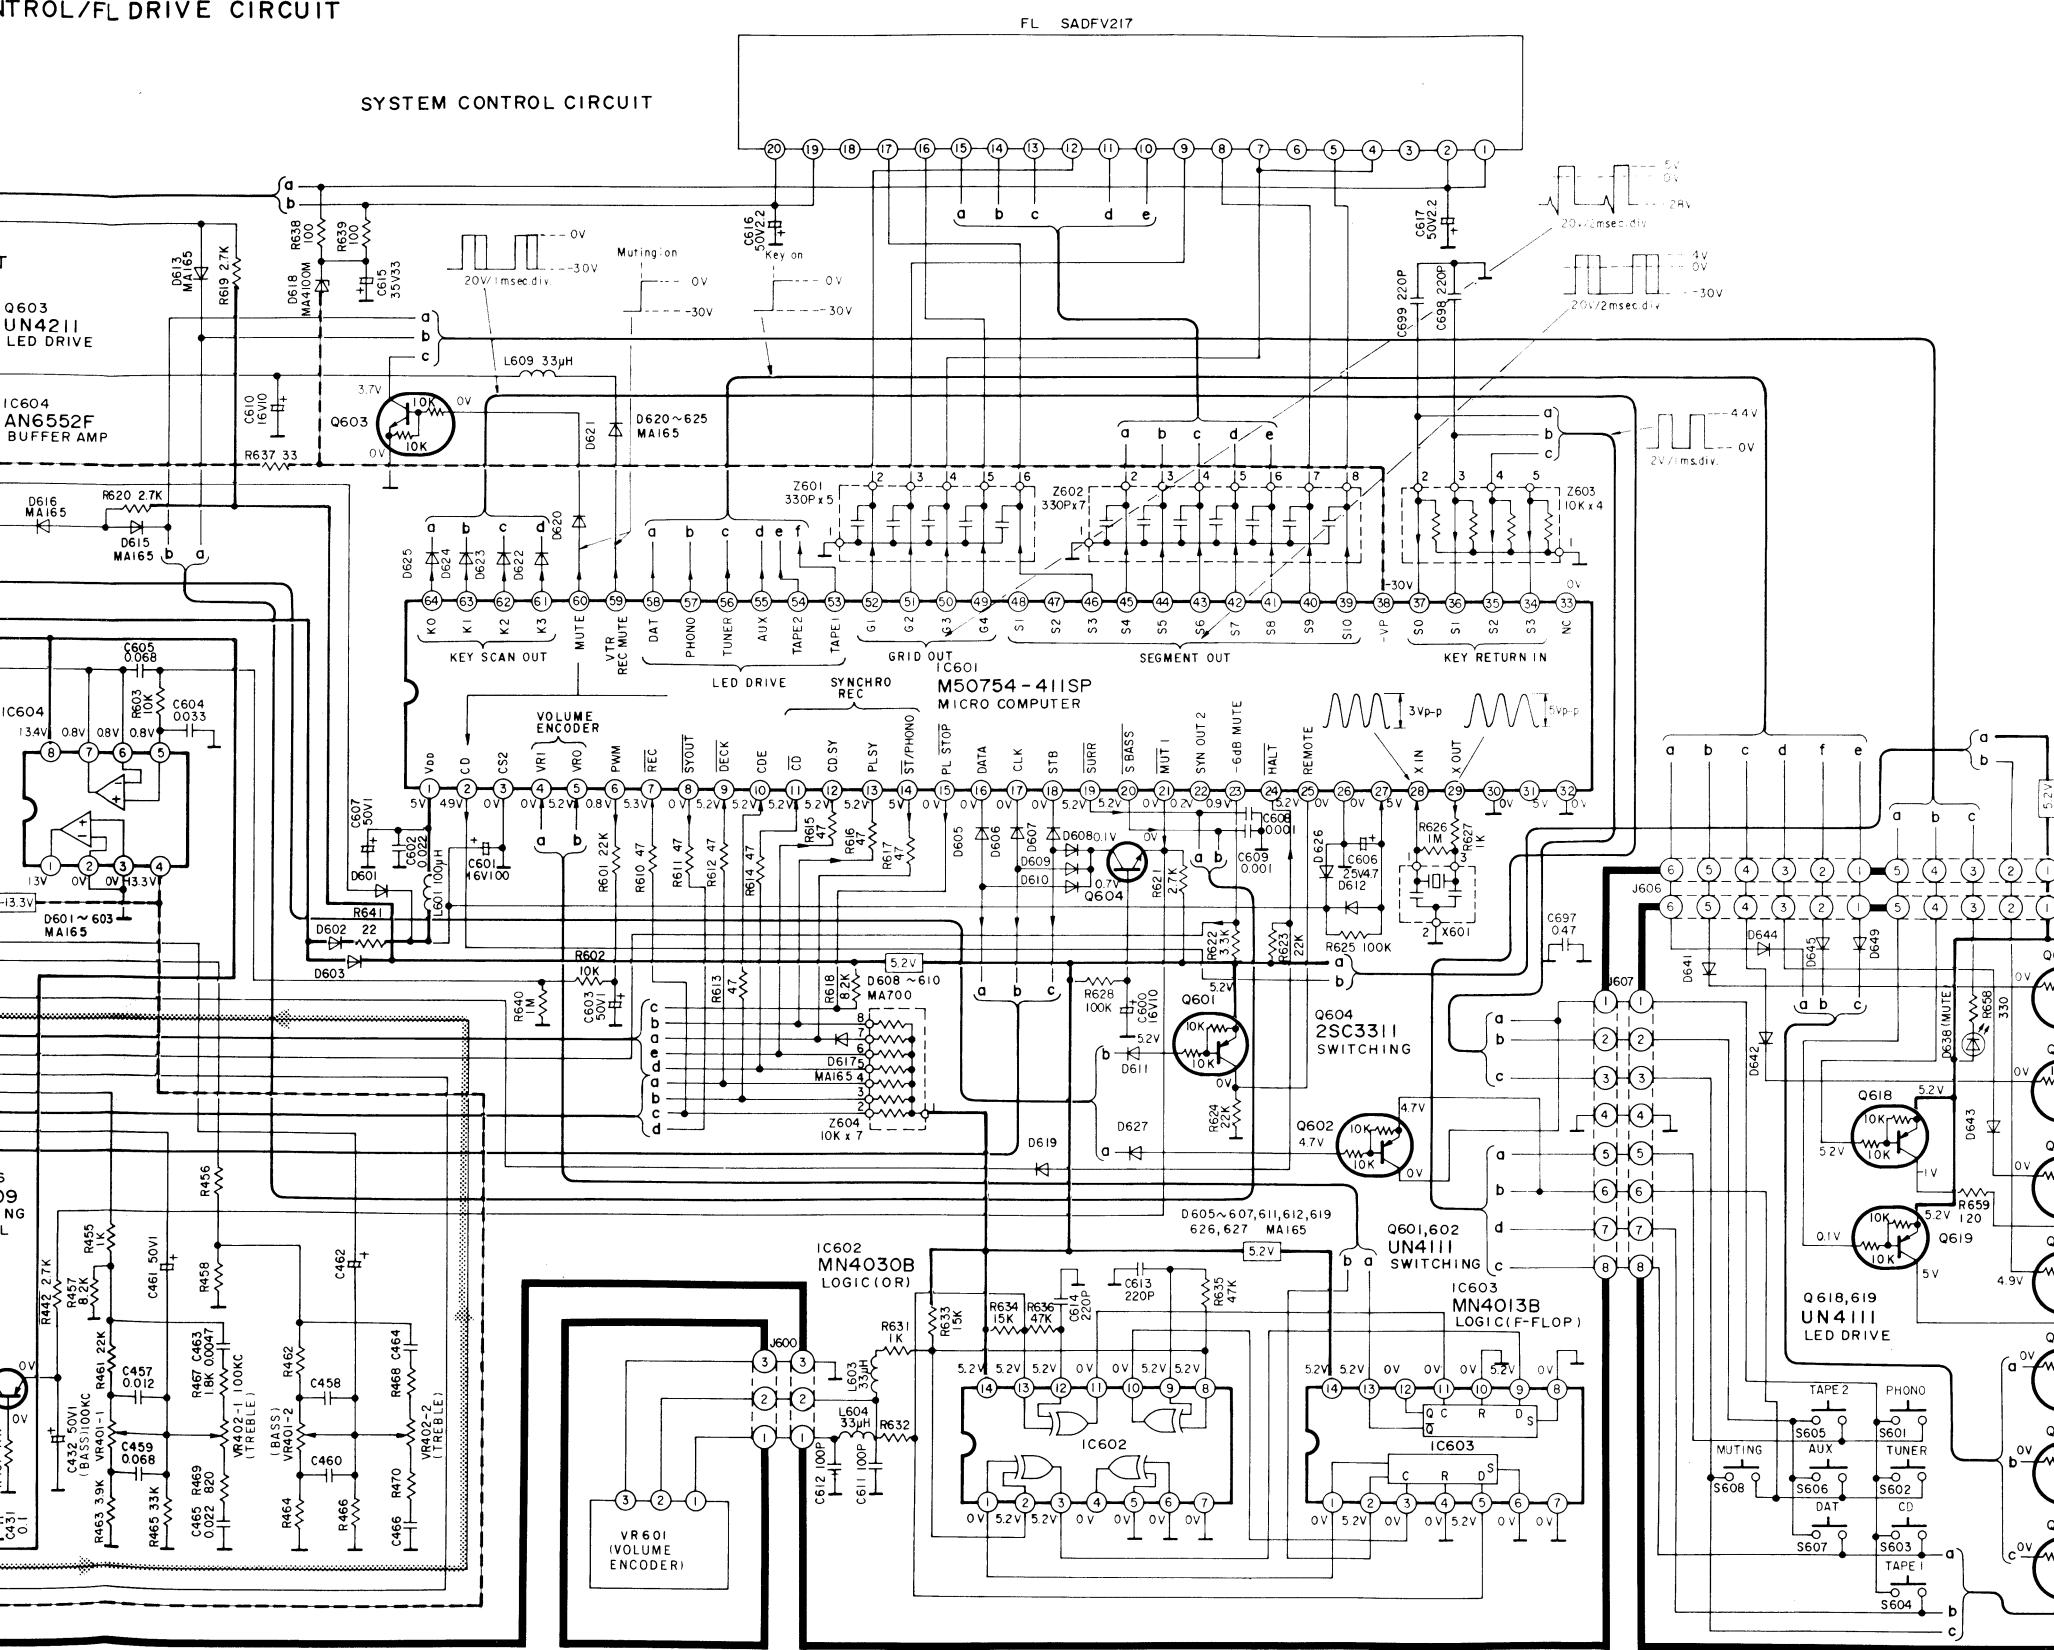
SYSTEM CONTROL CIRCUIT



E VOLUME CIRCUIT

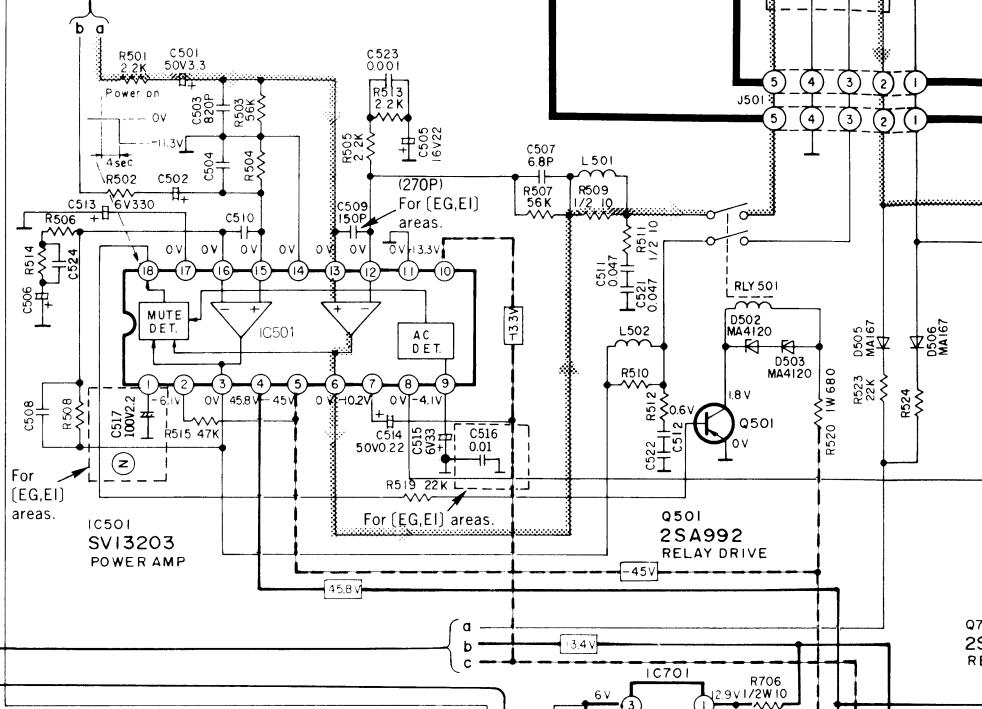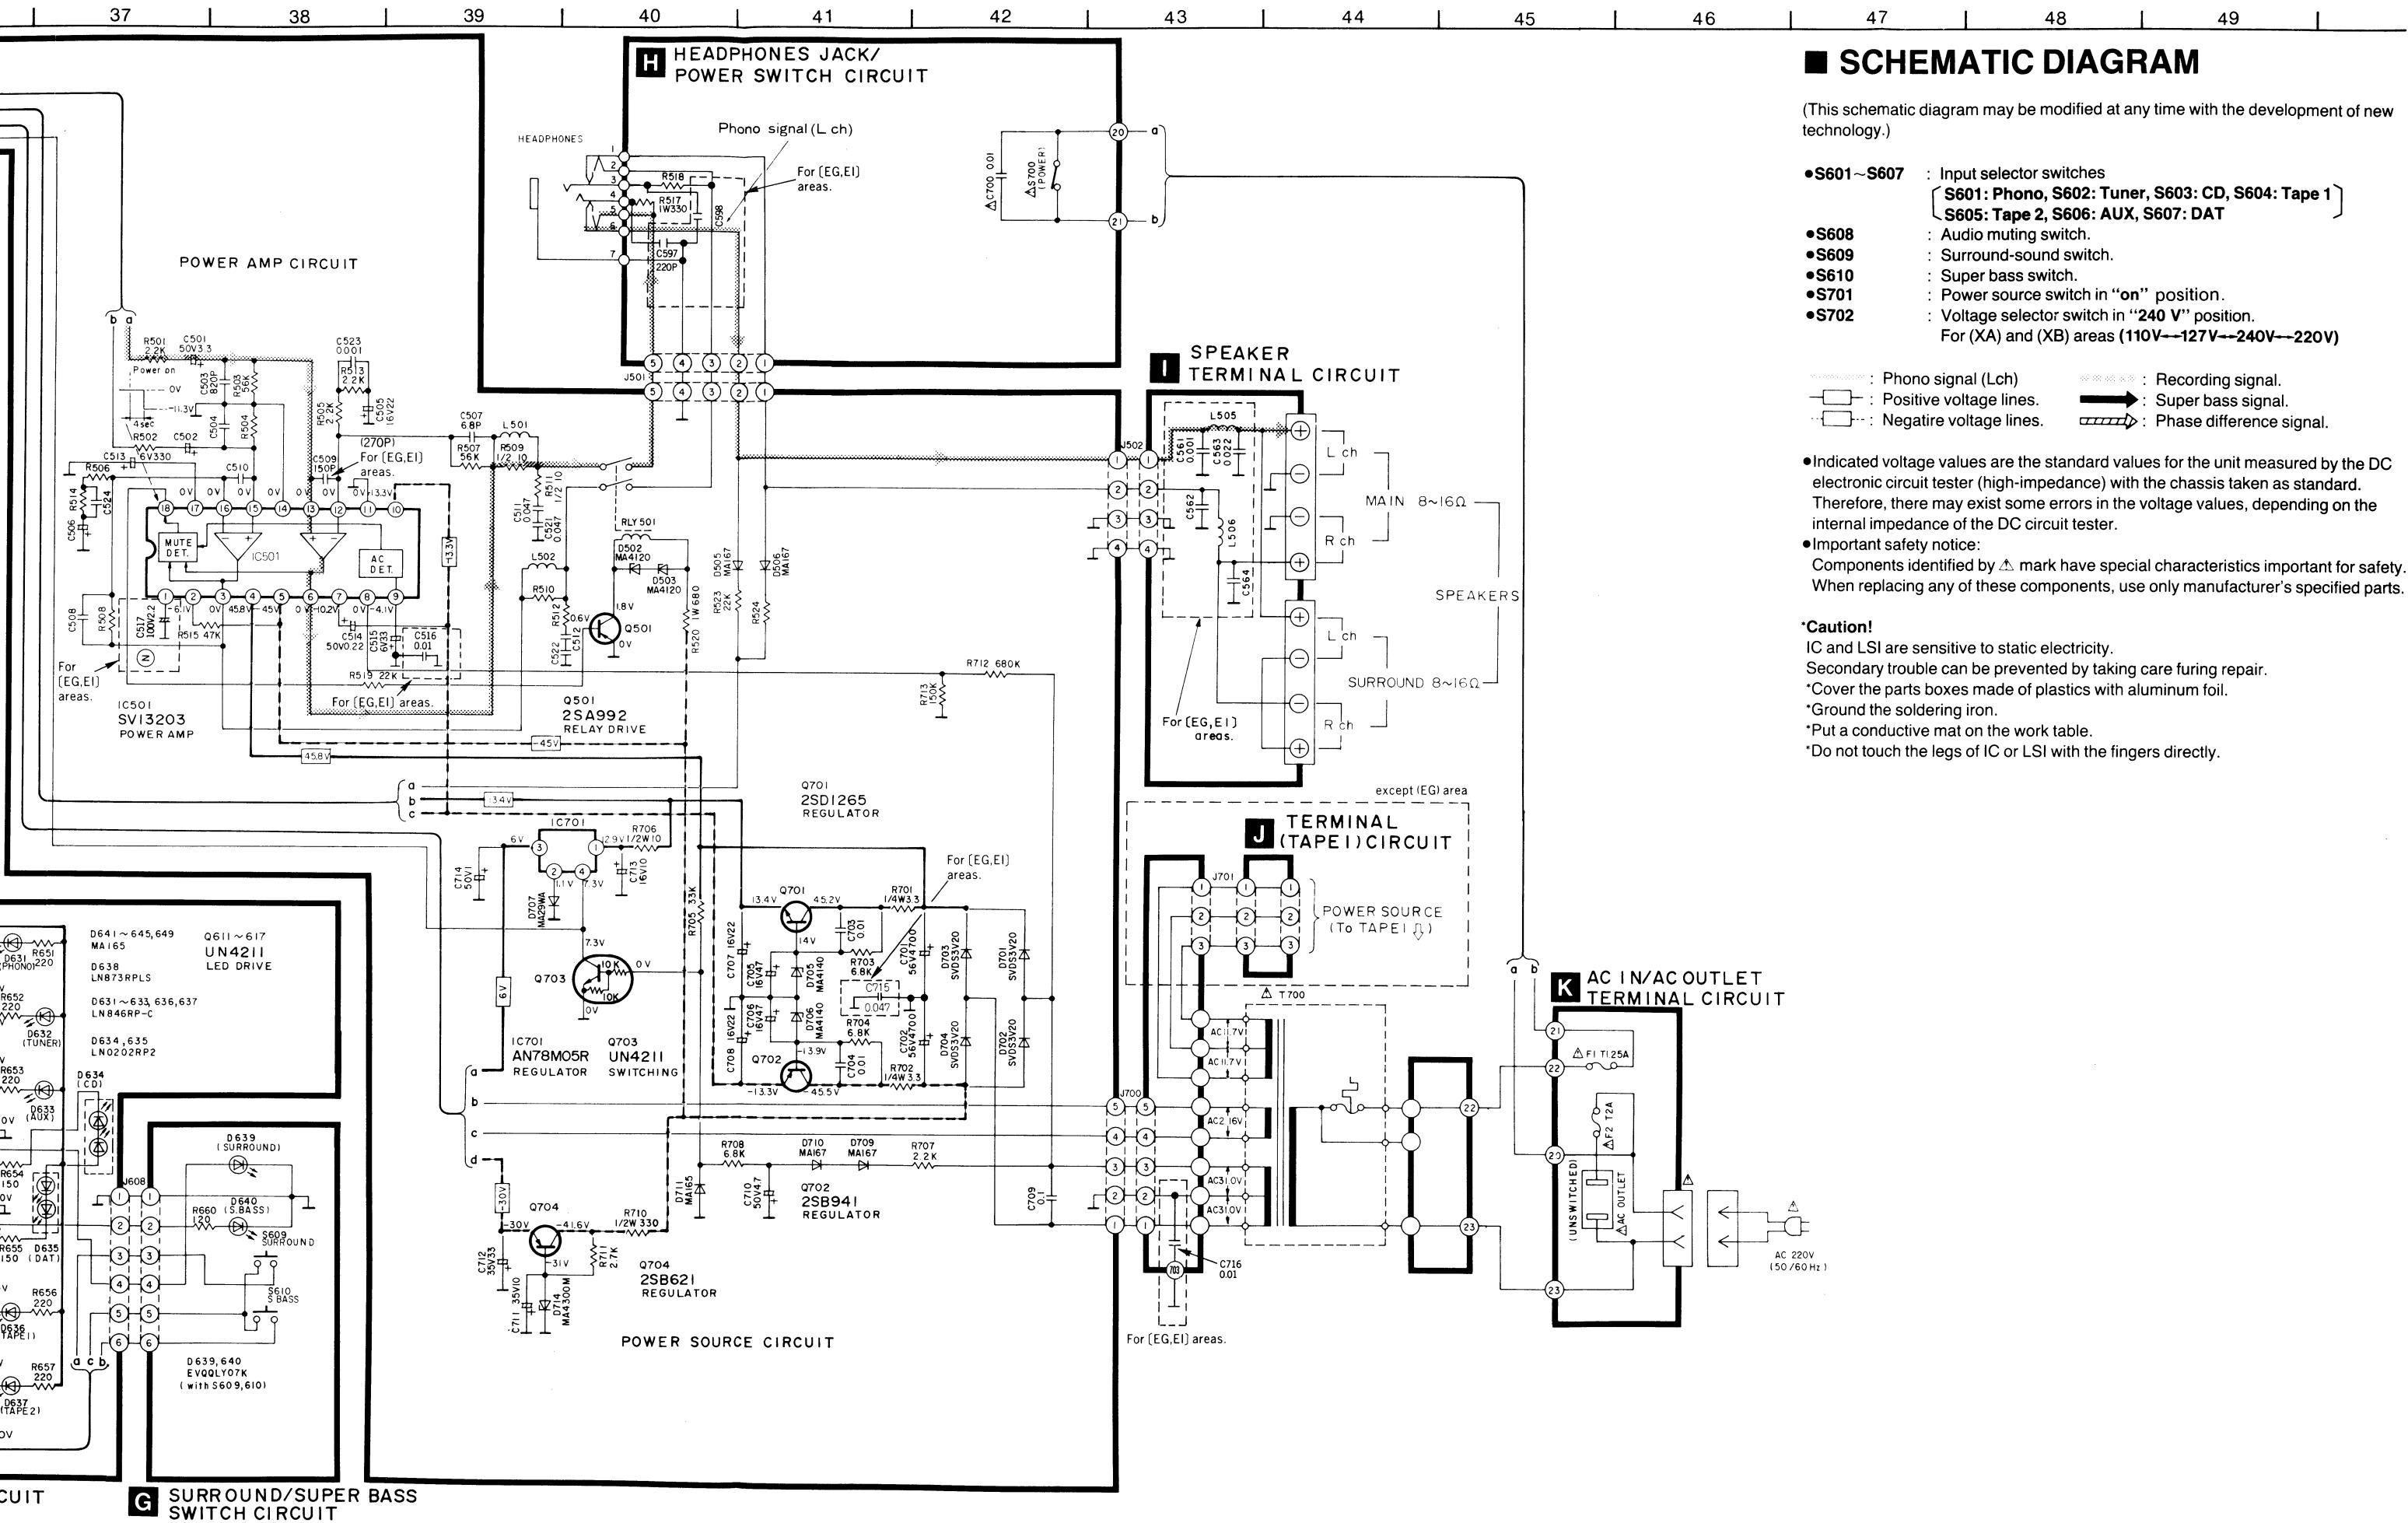POWER AMP CIRCUIT







PRINTED CIRCUIT BOARDS

TERMINAL GUIDE OF IC'S,
TRANSISTORS AND DIODES

AN6552F AN6558F M5238P MN4013B MN4030B AN6554F	8 pin M50754-411SP 14 pin	TC9164N 28 pin SVI3203
AN6557F NO.1		
M51131L	AN78M05	2SK301
		1. DRAIN 2. GATE 3. SOURCE
UN4111	UN4211	2SB621A-R 2SA992
2SA1309 2SC3311	MA29WA MA165 MA167	2SD1265-P 2SB941PQR
	Anode Cathode Ca o A	
2SD1330R	MA700A	LN873RP-LS
	Anode Cathode Ca o A	Anode Cathode Ca o A
SVDS3V40	MA4140-M MA4300M MA4100M	
	Anode Cathode Ca o A	

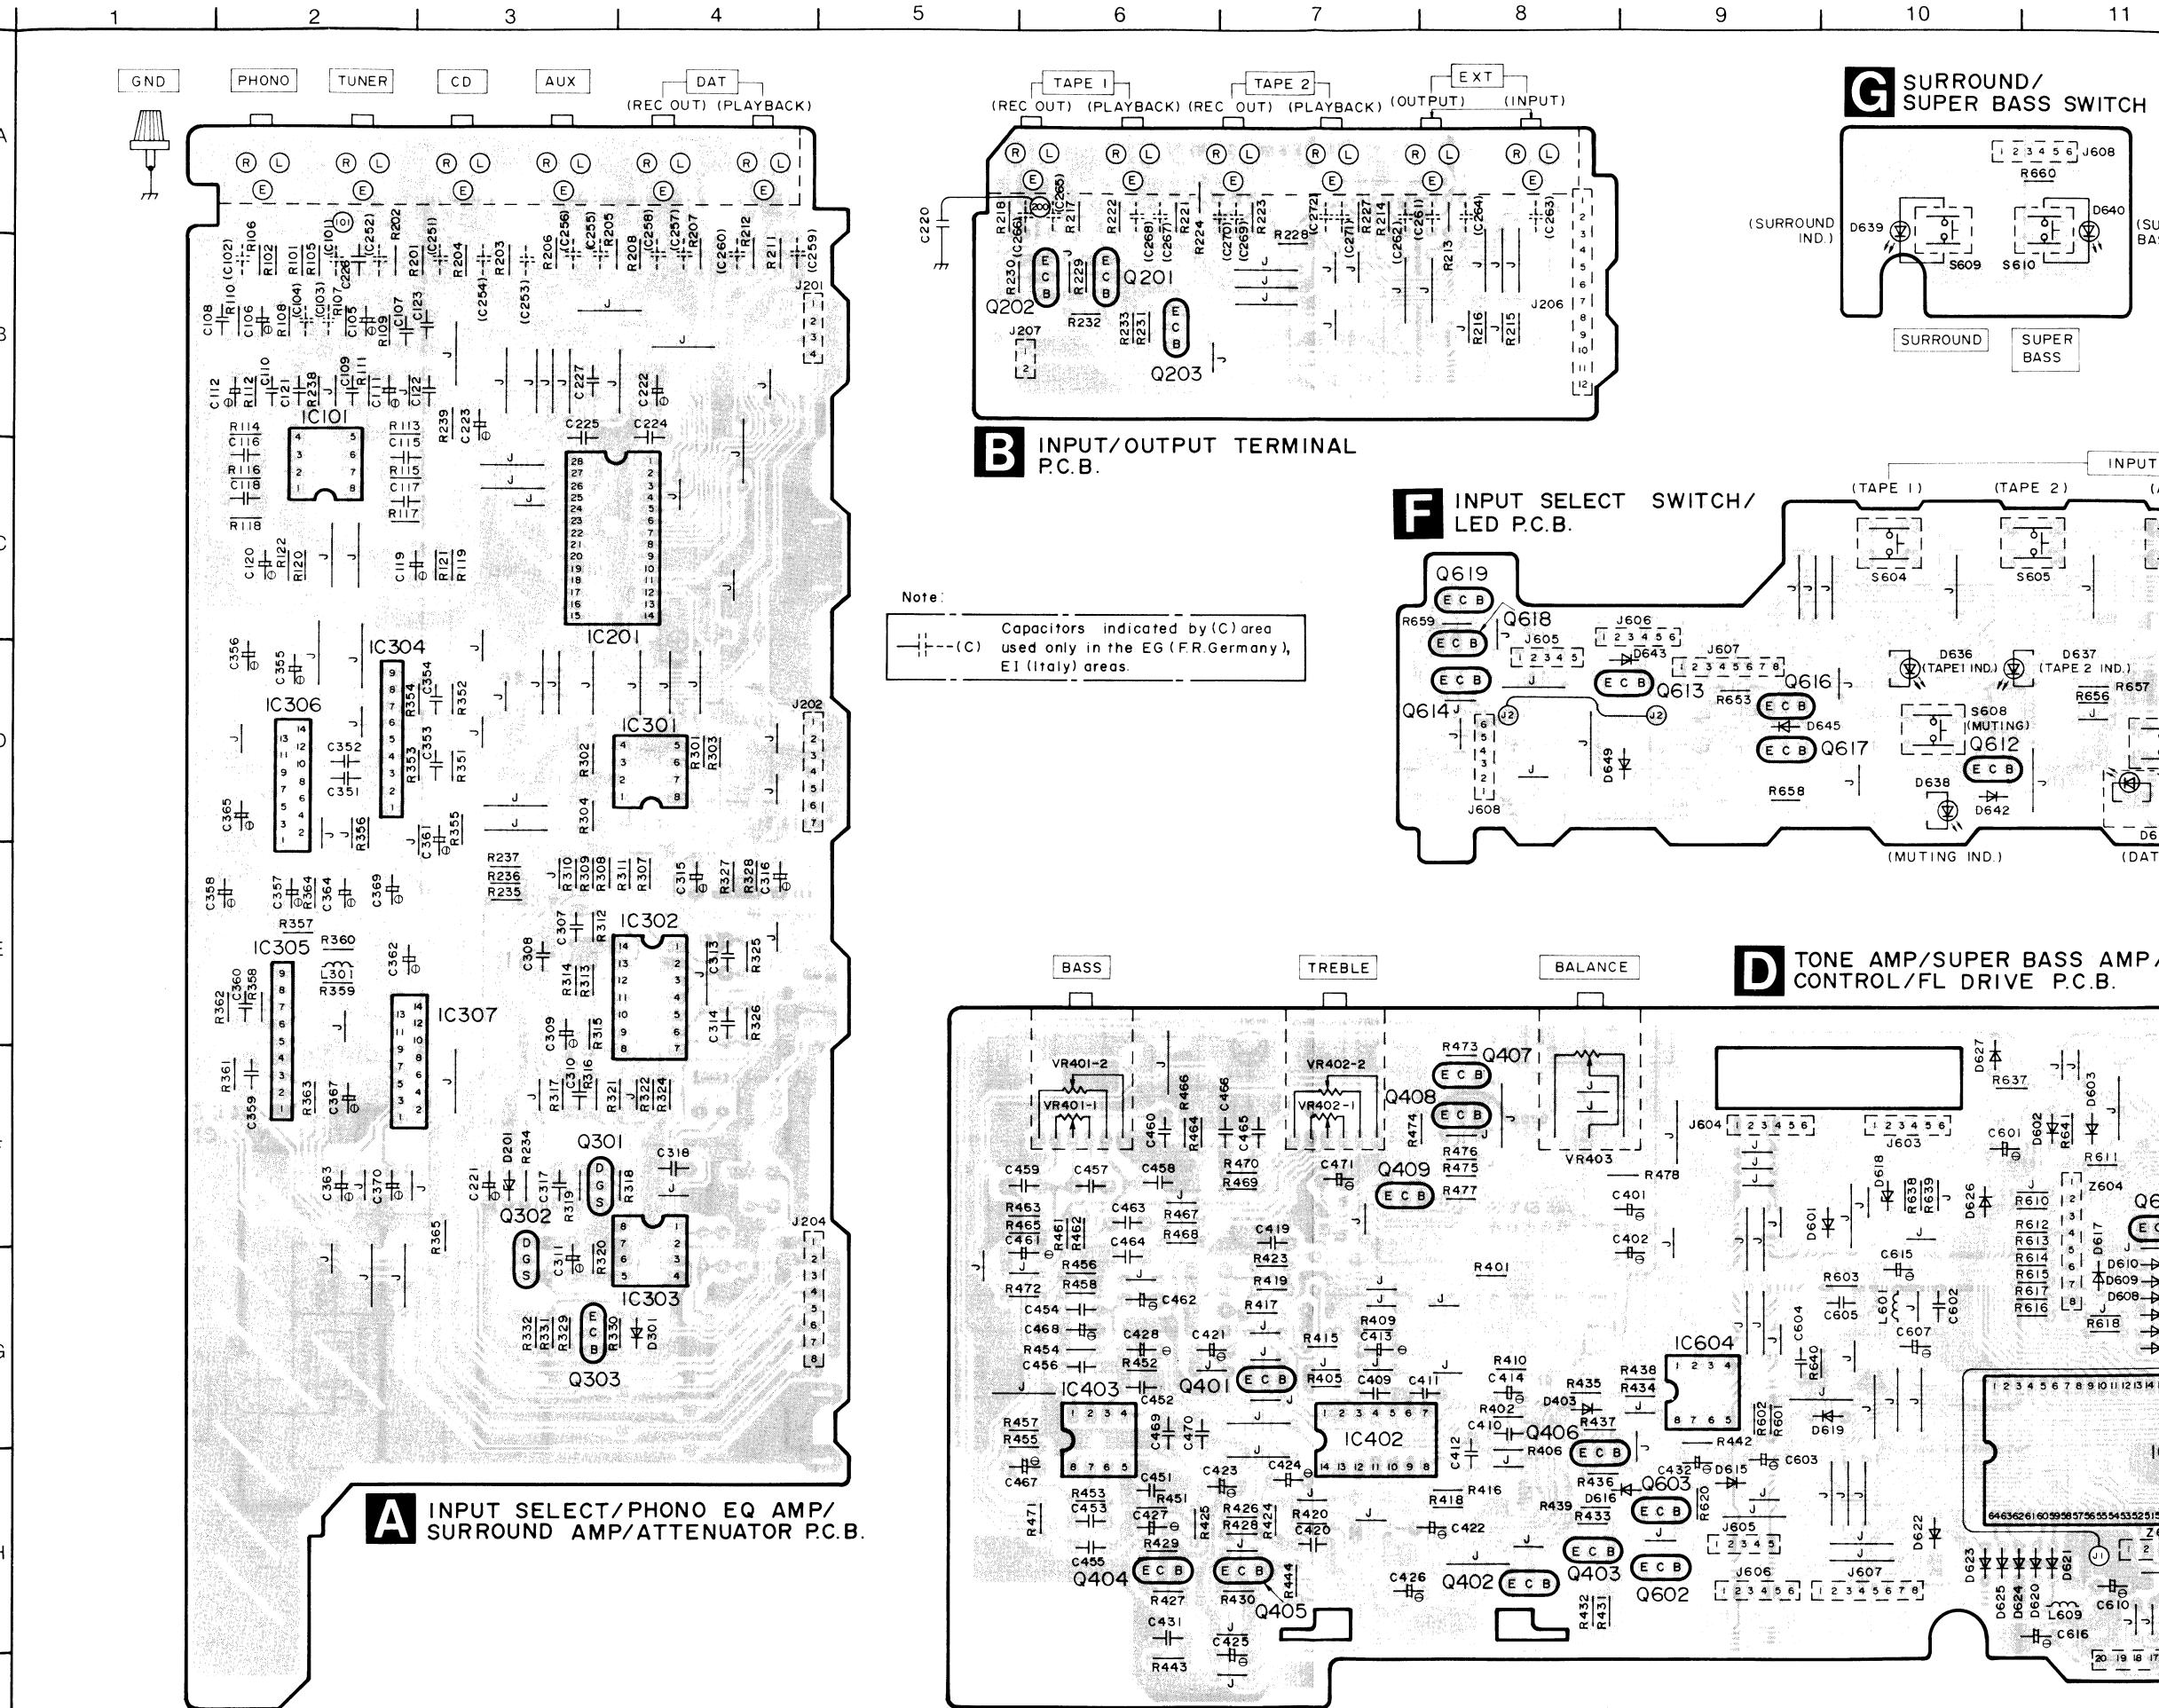

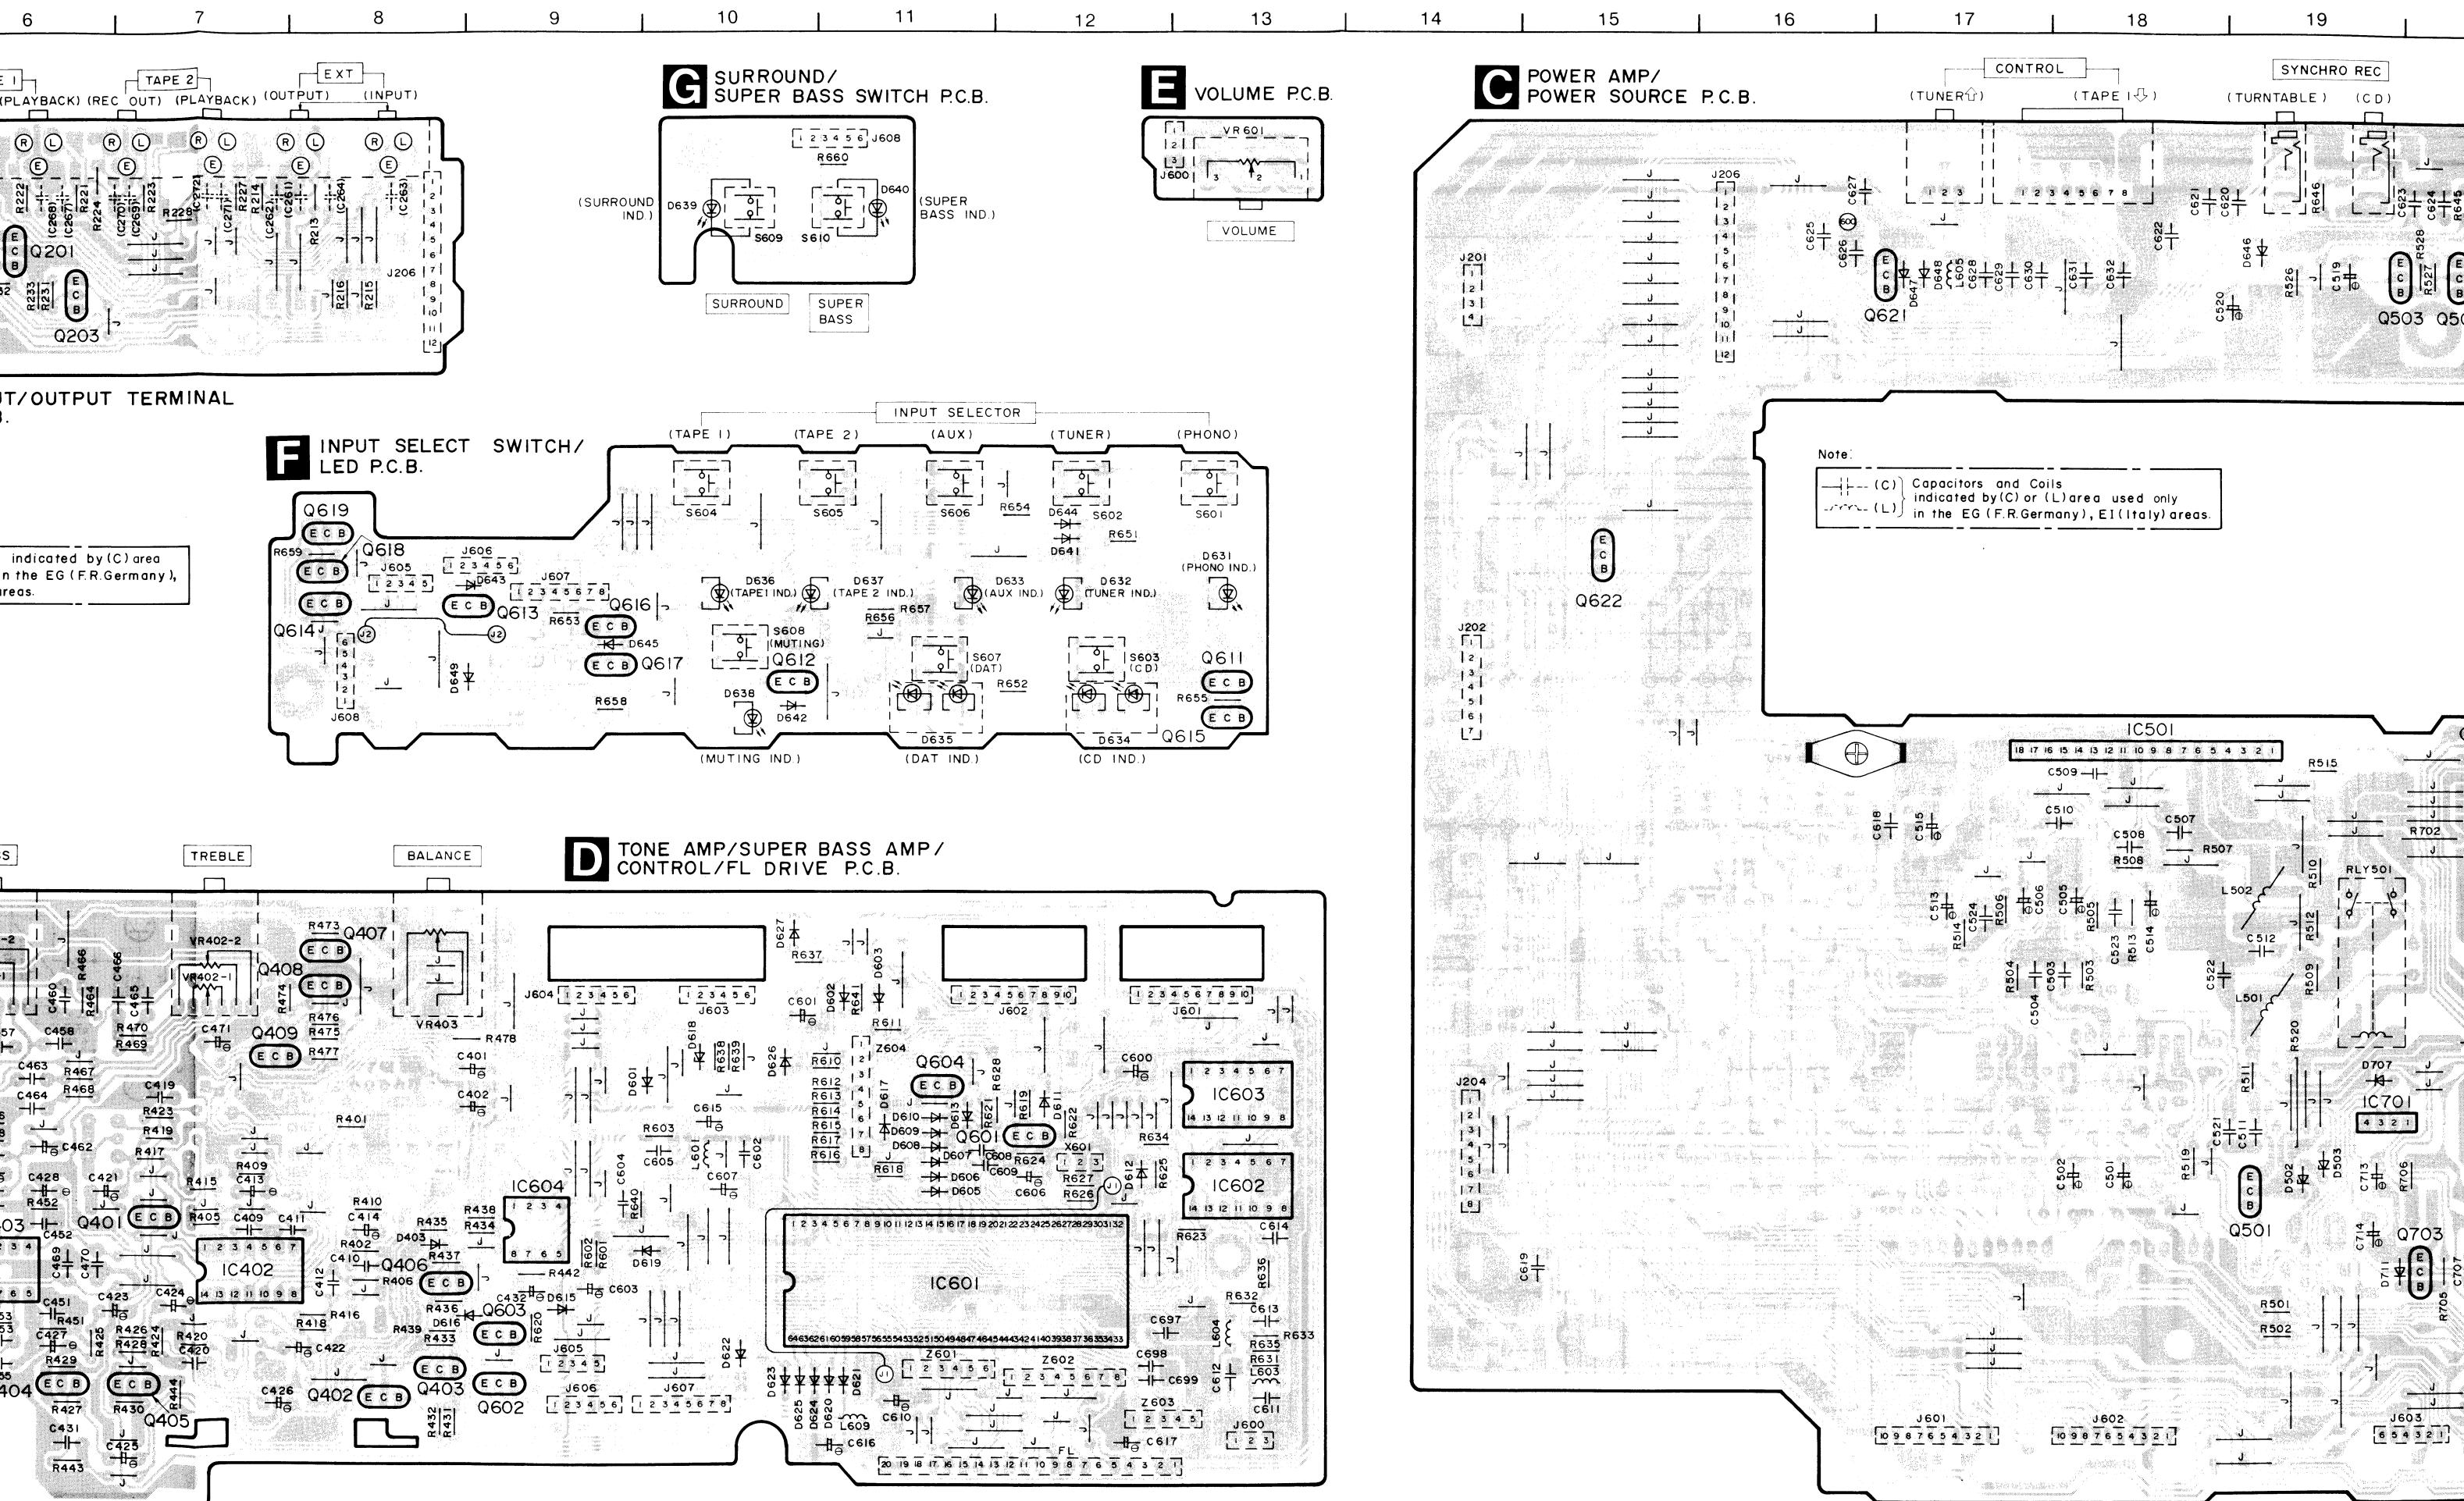

14

15

16

17

18

19

20

21

22

23

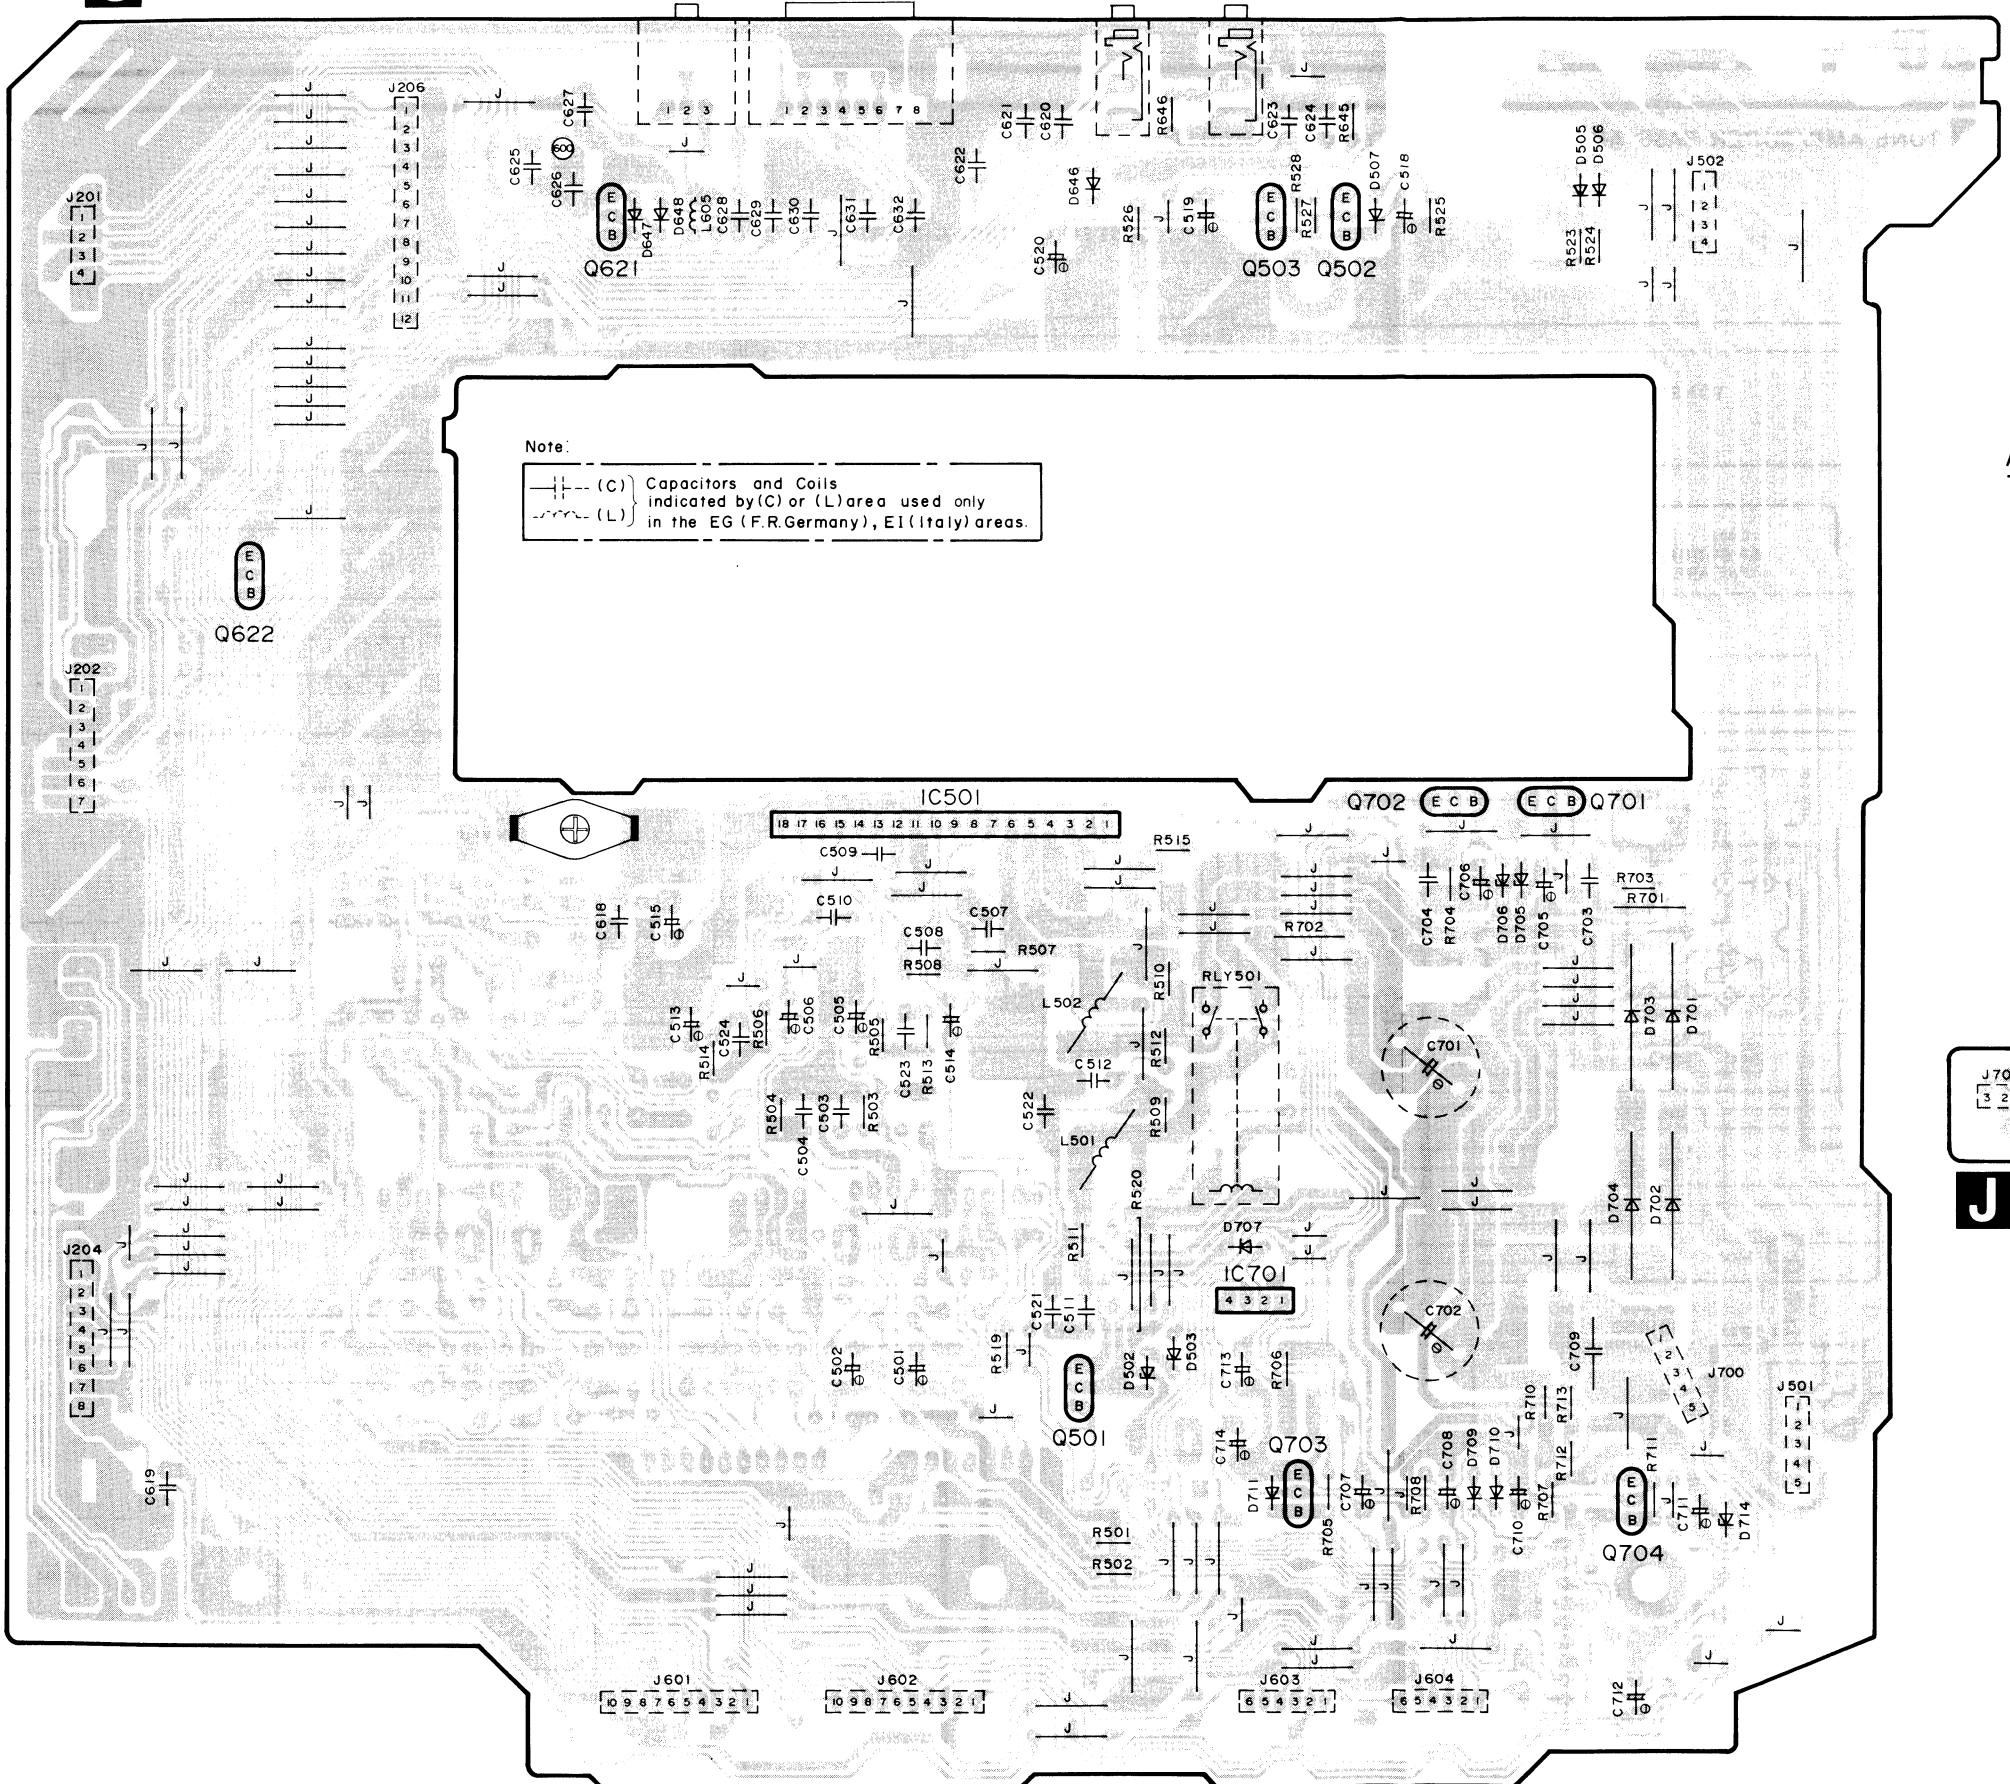
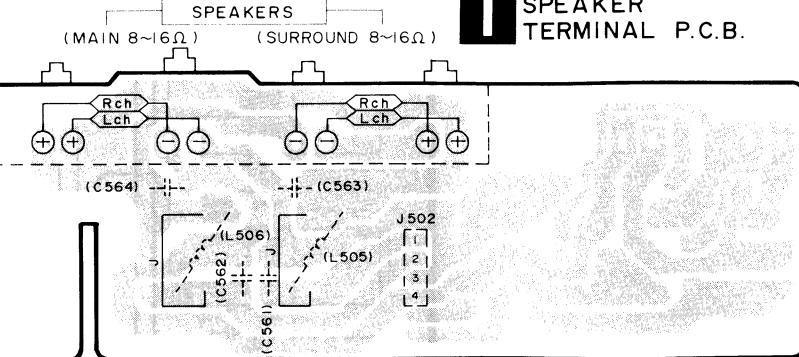
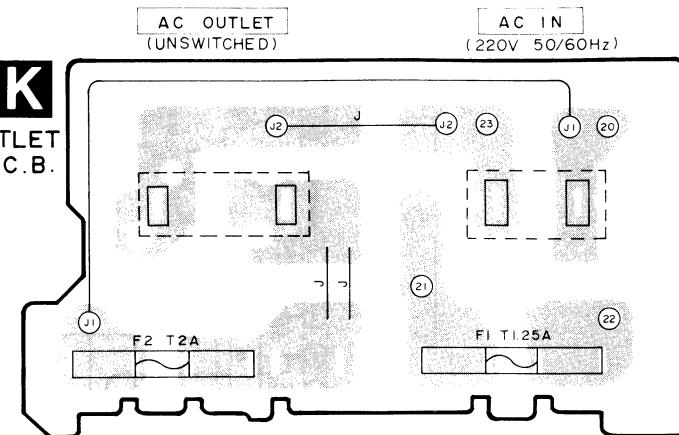
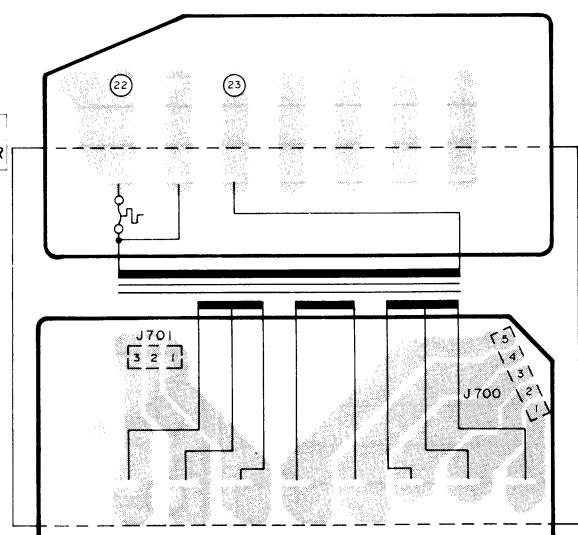
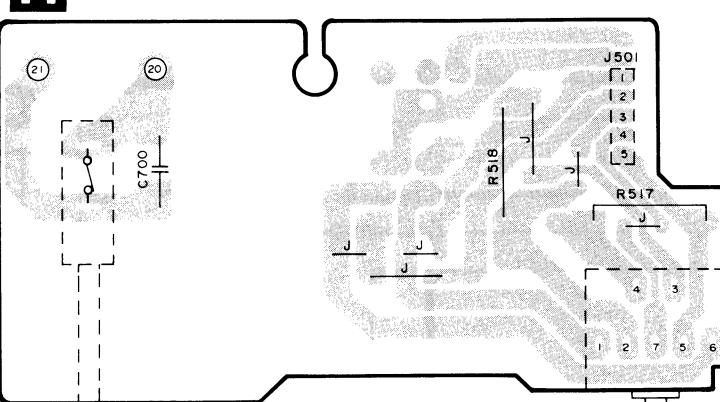
24

25



26

27


P.C.B.

C POWER AMP/
POWER SOURCE P.C.B.**I** SPEAKER
TERMINAL P.C.B.**K** AC IN/AC OUTLET
TERMINAL P.C.B.**J** TERMINAL
(TAPE I) P.C.B.**H** HEADPHONES JACK/POWER SWITCH P.C.B.

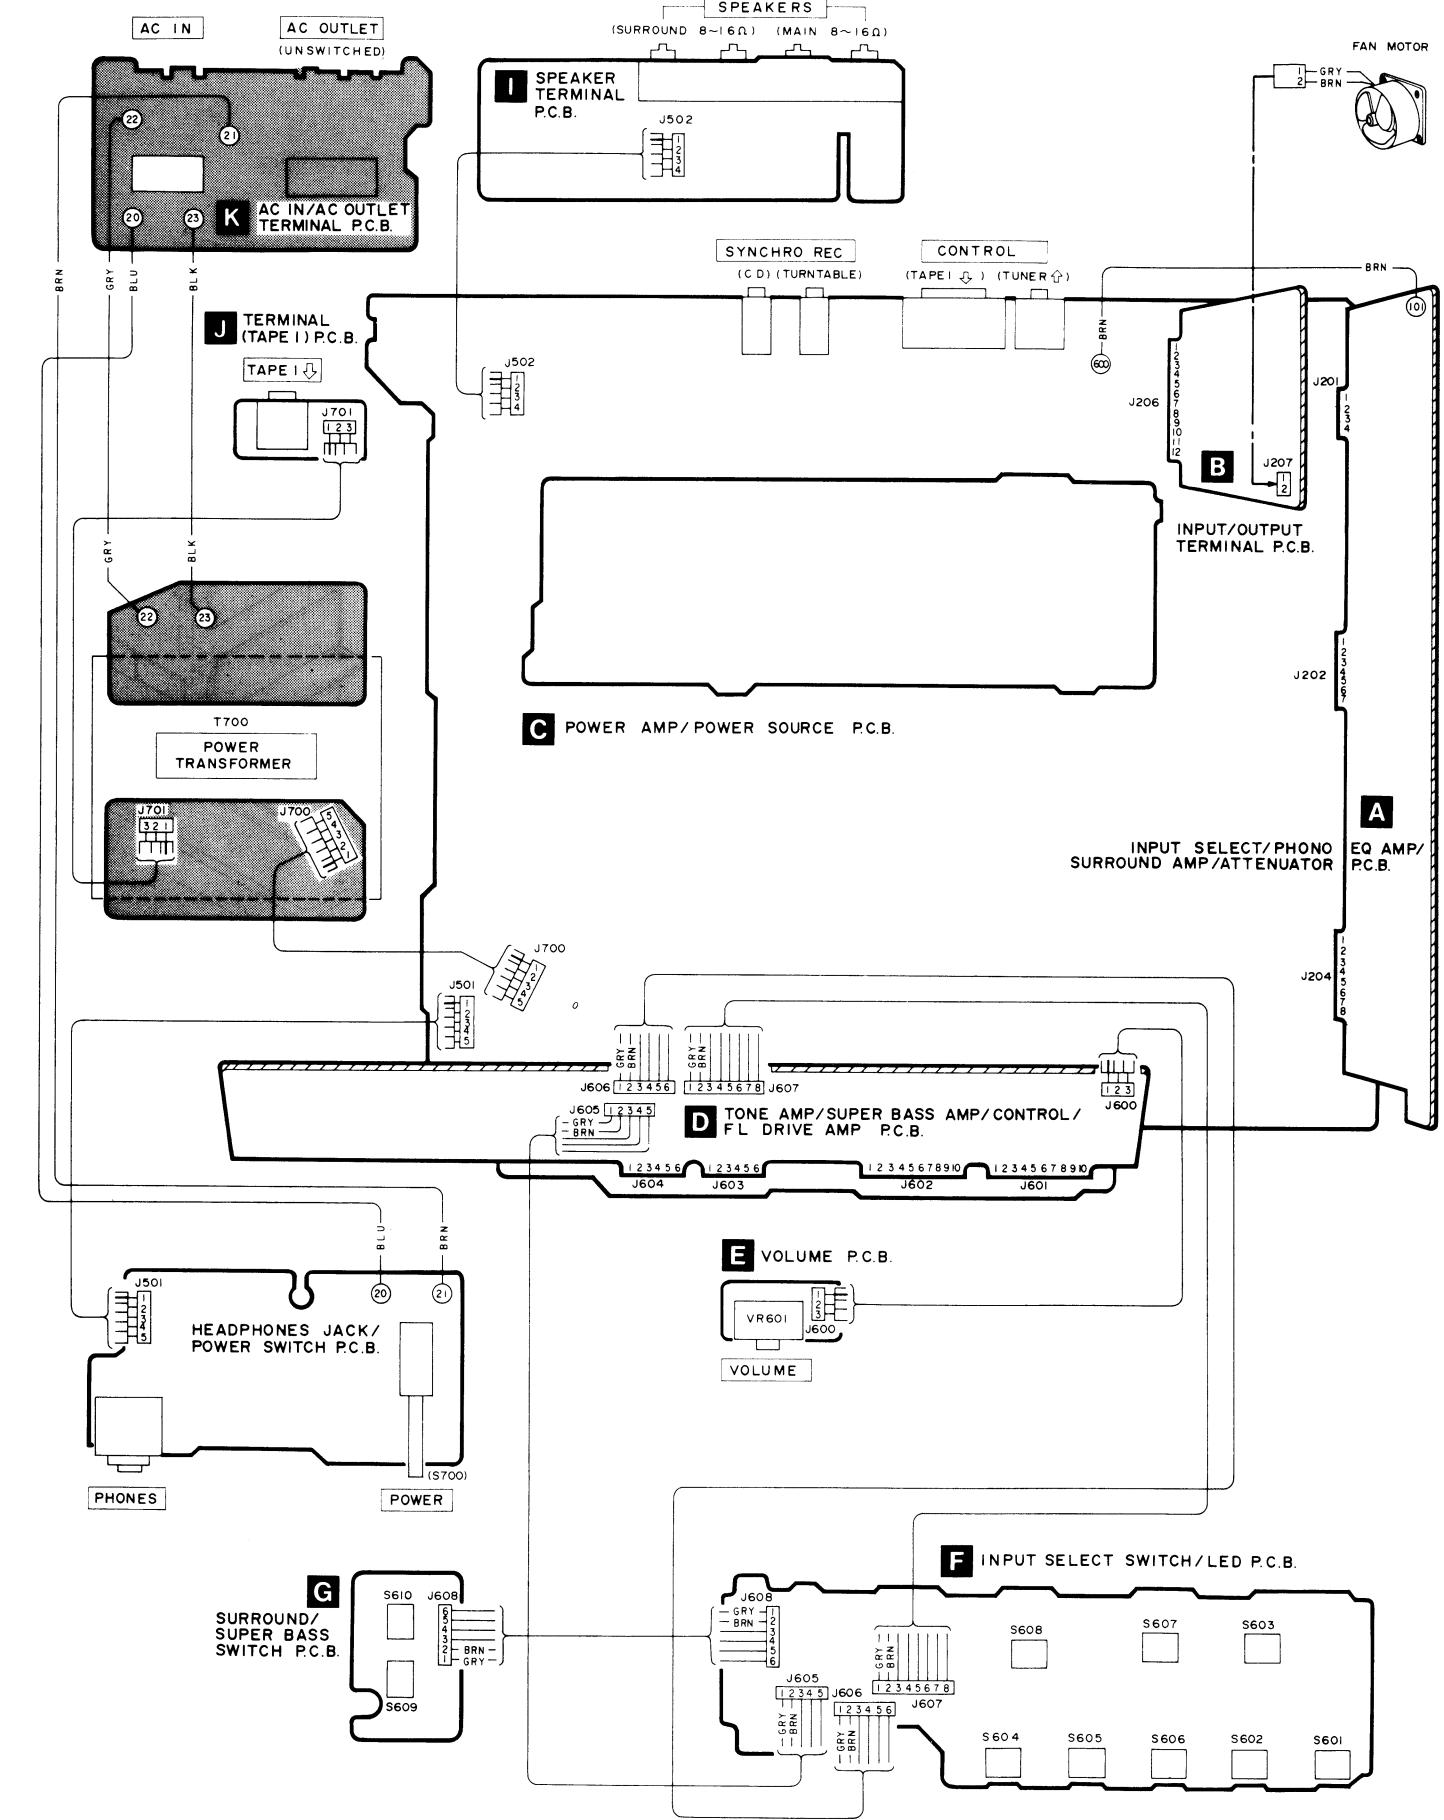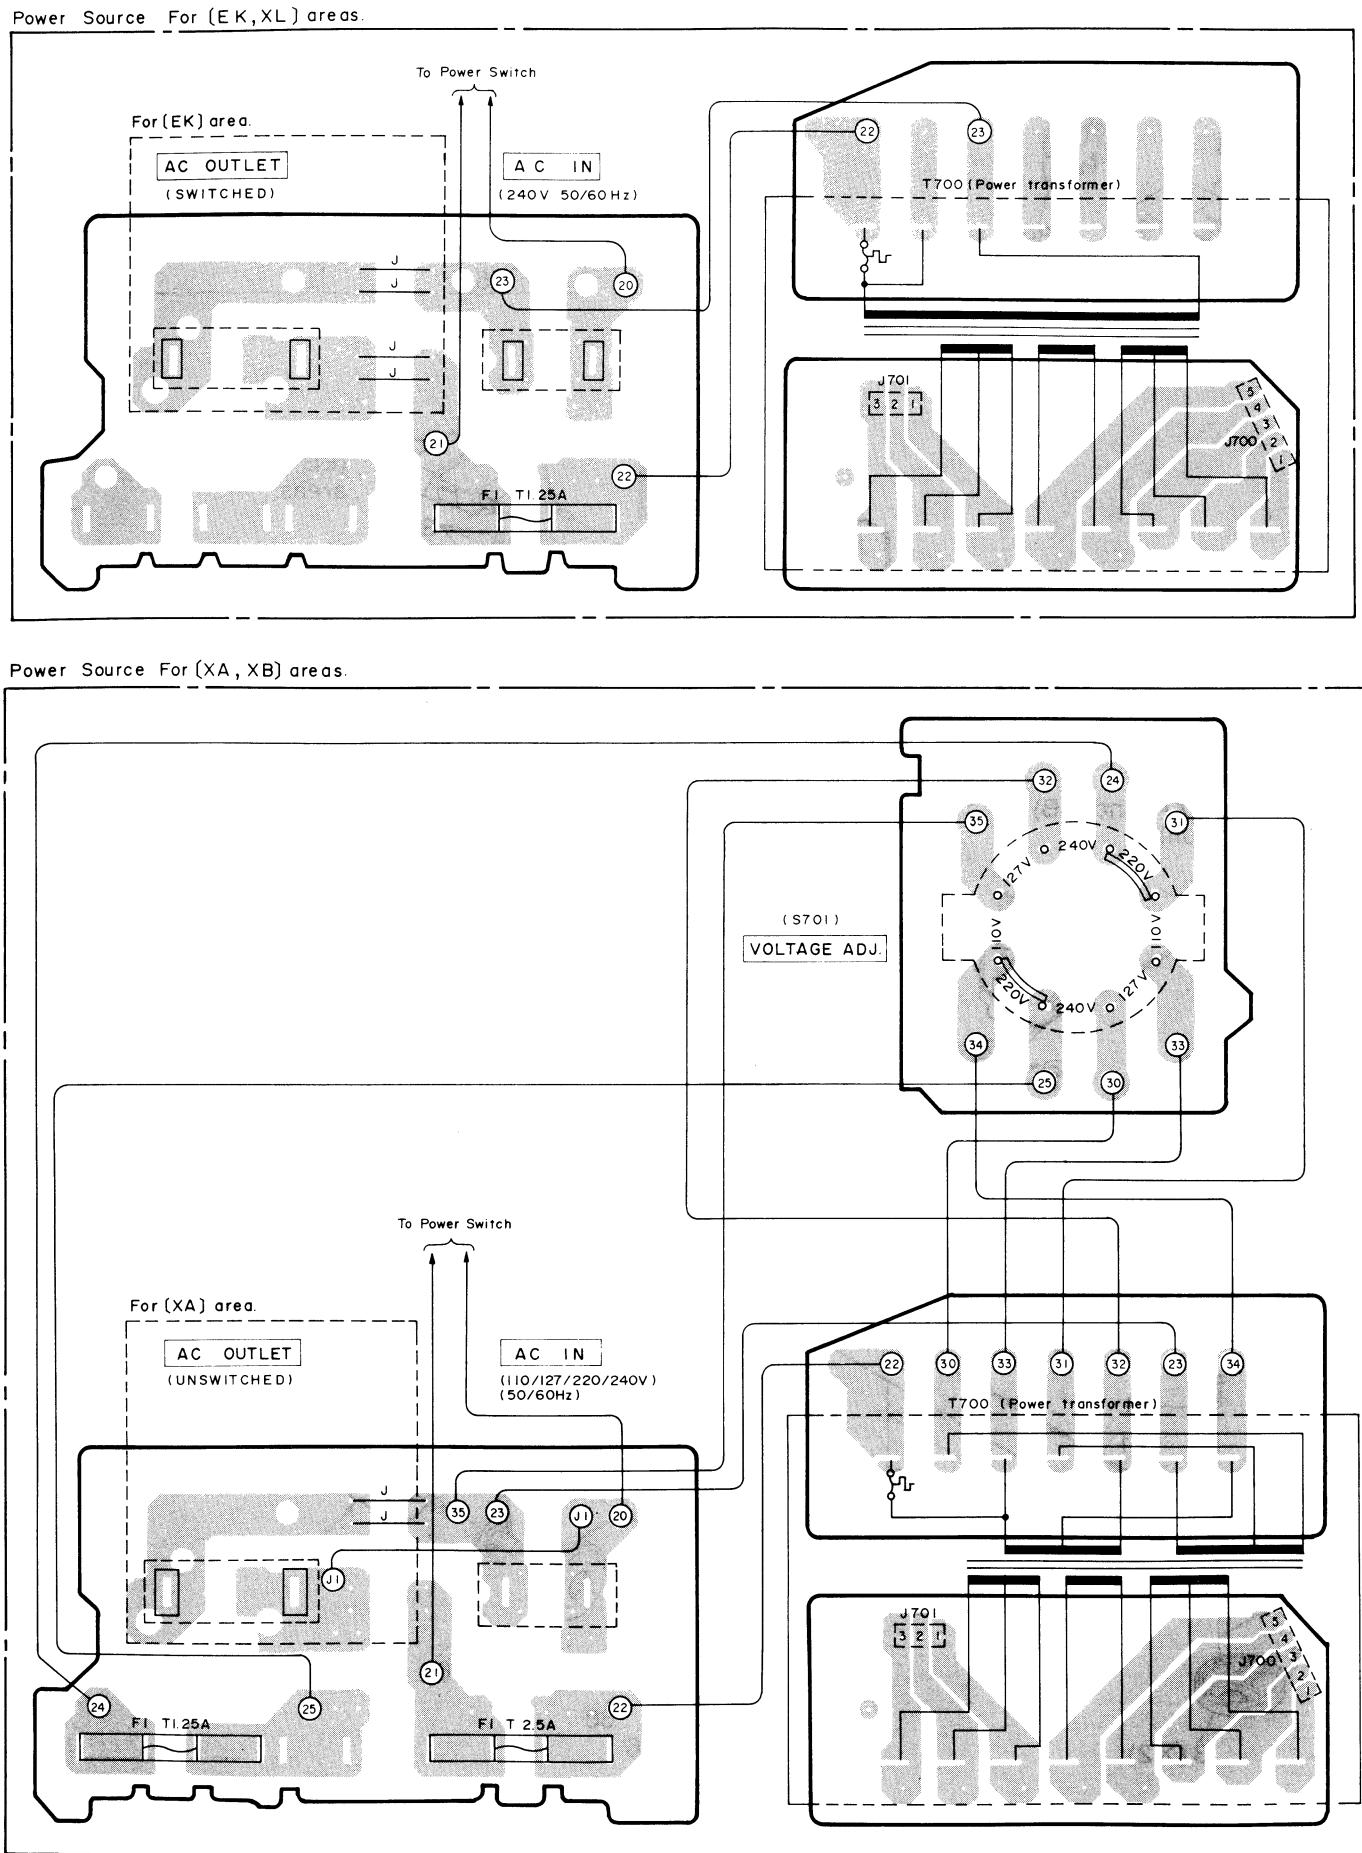■ WIRING CONNECTION DIAGRAM



■ BLOCK DIAGRAM

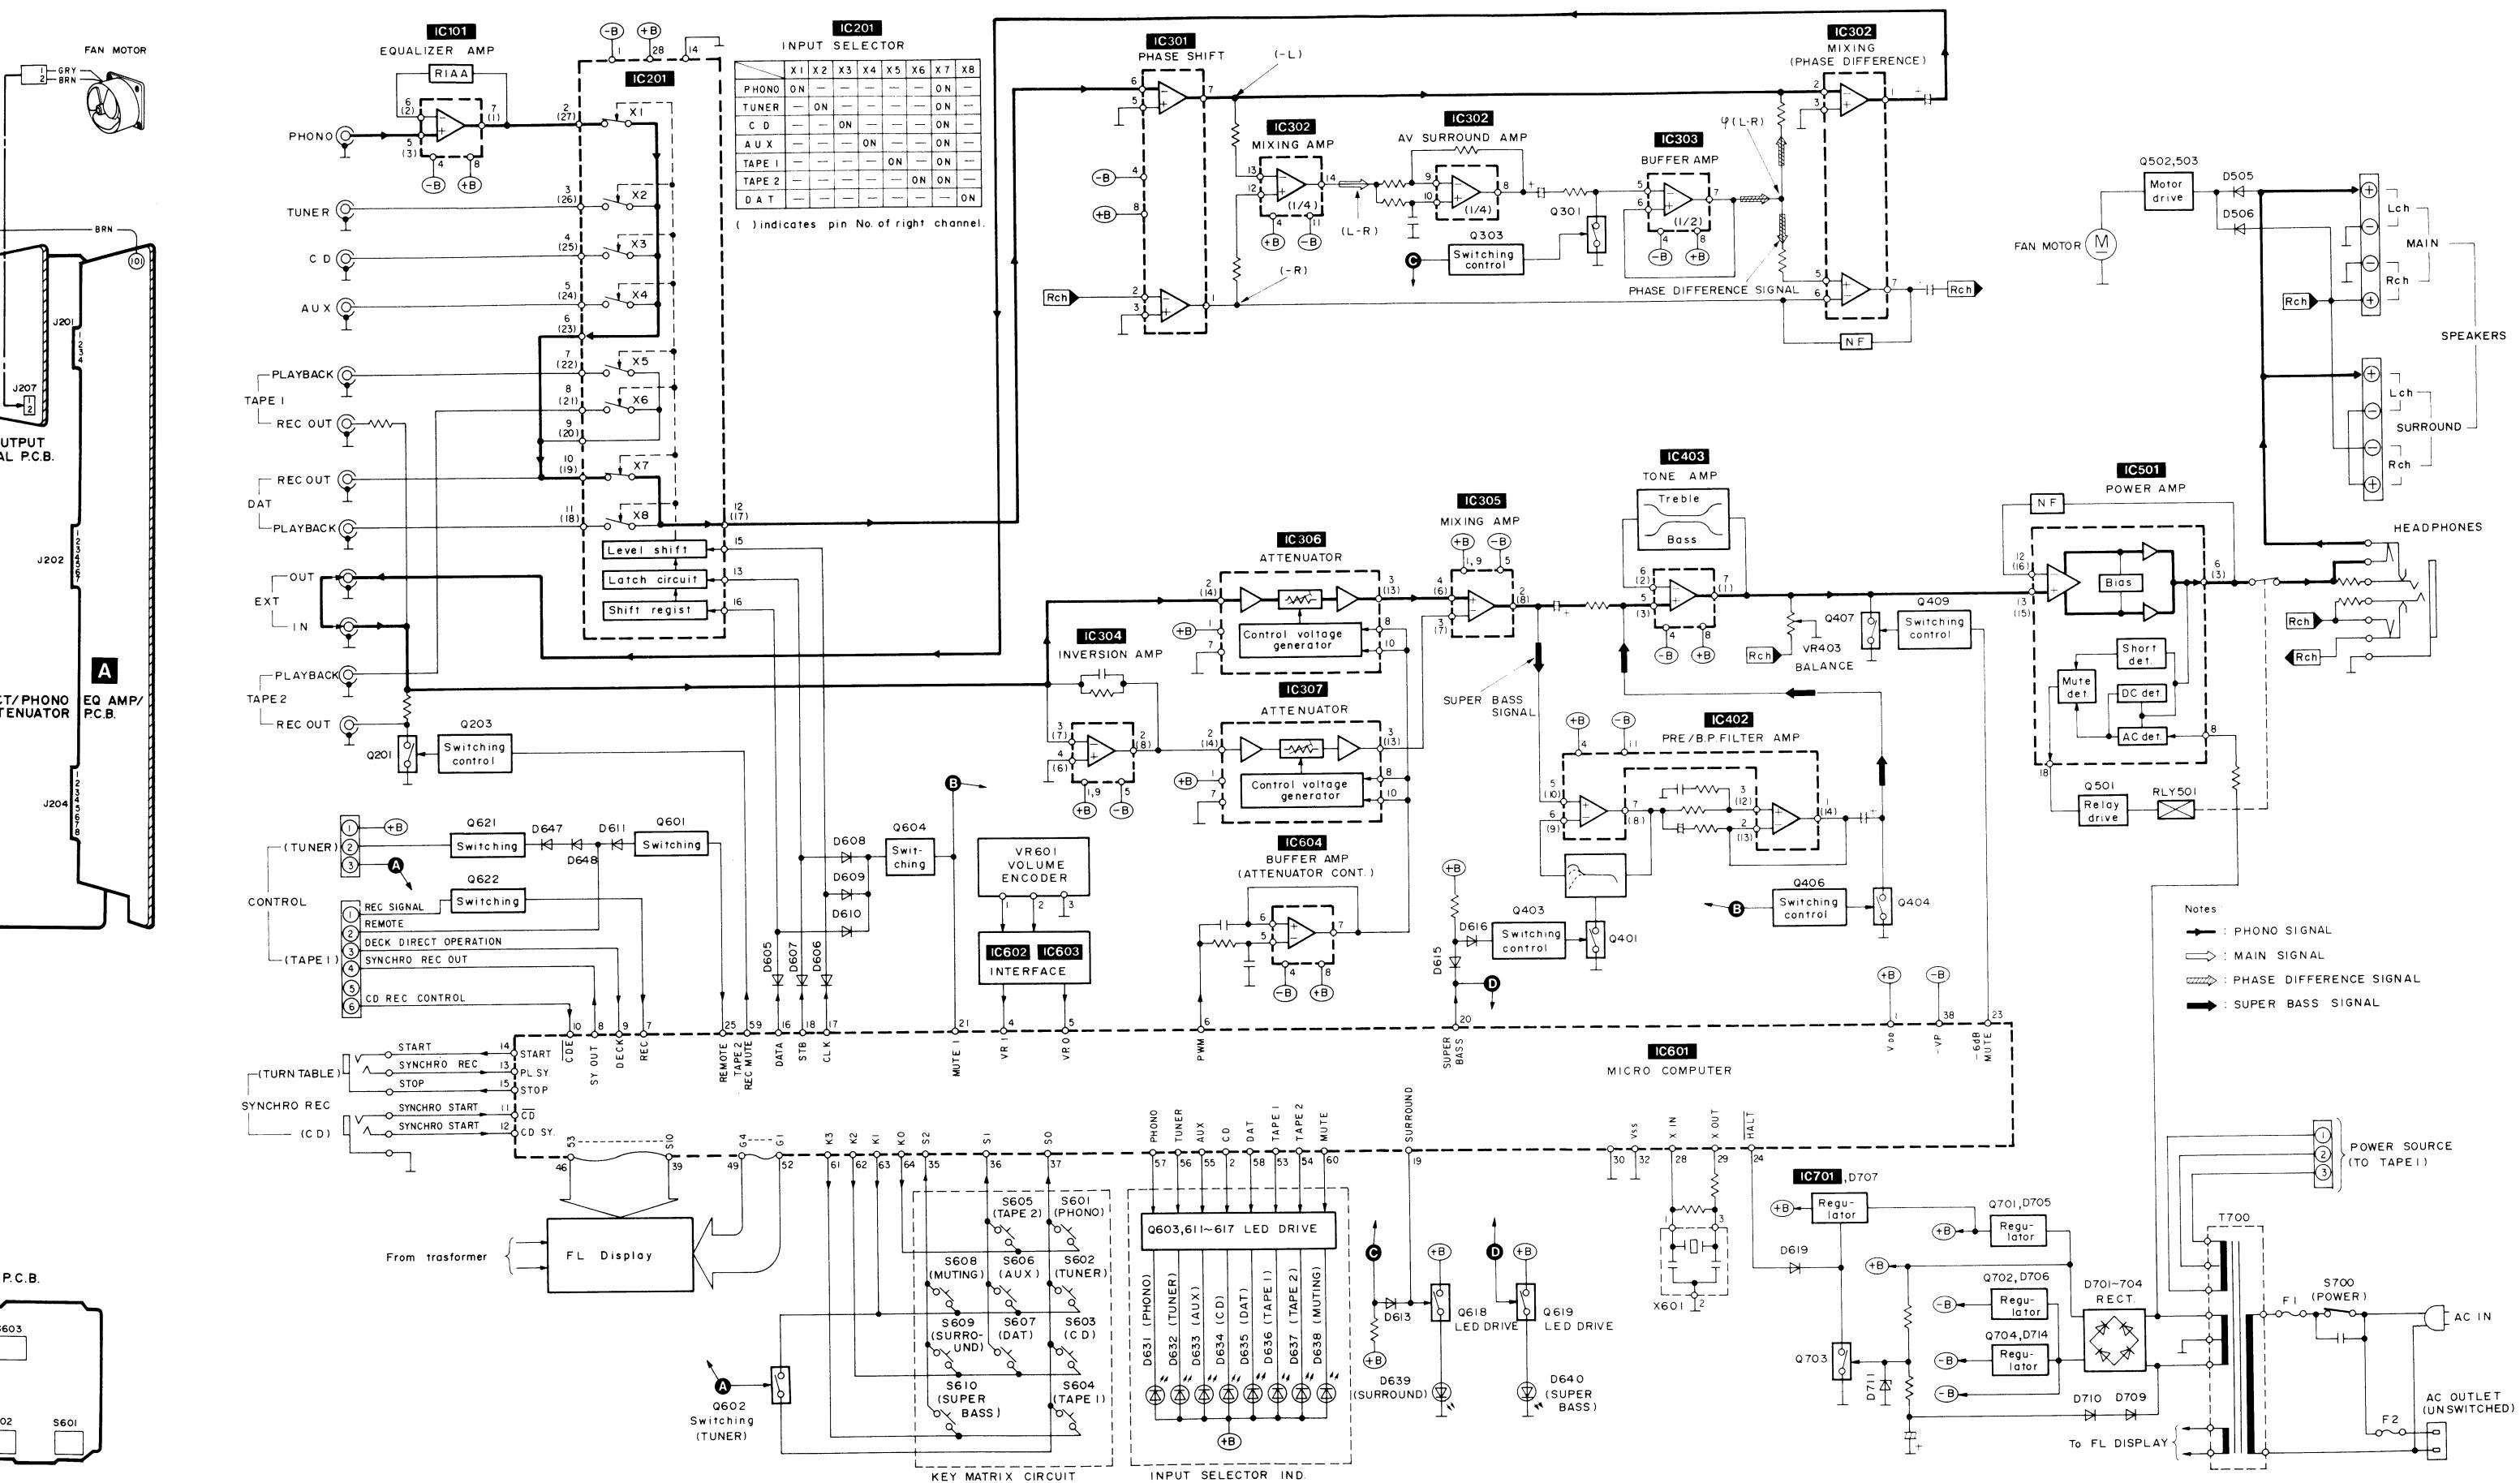


■ REPLACEMENT PARTS LIST


• CABINET PARTS LIST

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	
CABINET AND CHASSIS						
1	SJS9231A	AC INLET COVER (EK, E, EH, EF) (EB, EG, E1) (XA, XB)	36	XTB3+8J	SCREW	
			37	XTB3+8JFZ	SCREW	
			38	XTW3+BT	SCREW	
			39	XTWS3+BT	SCREW	
			40	XYN3+6FZ	SCREW	
2	SGP7170-1A	REAR PANEL (E, EH, EF, EB) (E1)	{ XA, XB }	42	SKC2070K163	CABINET BODY
2	SGP7170-11A	REAR PANEL (EG)		44	SNE2129-1	SCREW
2	SGP7170-2A	REAR PANEL (EK)		47	SJF4818-1	TERMINAL BOARD
2	SGP7170-3A	REAR PANEL (XL)		49	SJJ141	M3 JACK
2	SGP7170-4A	REAR PANEL (XA)		50	SJJ71E	JACK
2	SGP7170-5A	PANEL (XB)		51	SJS306	SOCKET
3	SKL307	FOOT		52	SJS804	SOCKET
4	SKUUX950-KE	BOTTOM BOARD (E)		53	SMX897	COVER
4	SKUUX950-KH	BOTTOM BOARD (EH, EF, EB) (EG, E1)		54	SJS9231-1B	AC INLET
4	SKUUX950-KK	BOTTOM BOARD (EK)		55	SJS9234B	AC INLET
4	SKUUX950-KL	BOTTOM BOARD (XL)		55	SJS9232B	AC OUTLET
4	SKUUX950-KX	BOTTOM BOARD (XA, XB)		55	SJS9332B	AC OUTLET
5	SBC666-1	BUTTON, POWER		56	SJT388	FUSE HOLDER
6	SBC983B	BUTTON, SELECTOR		57	SGXUX950-KE2	FRONT GRILLE
7	SBC1023	BUTTON, MUTING		58	SMN2056-1	BRACKET
8	SBC1024A	BUTTON, DIGITAL		59	SMN2056	BRACKET
9	SBC1025	BUTTON, BASS		60	SMN2043	ANGLE
11	SBN1224	KNOB, VOLUME		61	SJF3062-13N	TERMINAL BOARD
12	SBN1235	KNOB, TONE		62	SMC6453	SHIELD PLATE
13	SDL97	SMOKE PLATE		63	SMC6441	SHIELD PLATE
14	SDL98	SMOKE PLATE		64	SME95	COVER
15	SDL99	SMOKE PLATE		65	SME97-1	COVER
19	SGXUX950-KE1	FRONT GRILLE		66	SHE143	FAN
20	SGX9036	ORNAMENT		67	MMN6C2RKMS	DC MOTOR
21	SHE187-2	HOLDER		68	SUS271	SPRING
23	SJP9205-2Y	SHORTING PIN		69	SGX7977	ORNAMENT
24	SMC1274	BRACKET		70	SJS50680WL	CONNECTOR (6P)
25	SMN2040	ANGLE		70	SJS51080WL	CONNECTOR (10P)
26	SNE2118	SCREW		72	SJT30543-V	CONNECTOR(5P)
27	SNE2123	SCREW		75	SJT30439MB	CONNECTOR (4P)
28	SNE4021-1	NUT		75	SJT30739MB	CONNECTOR (7P)
29	SUS755	SPRING		75	SJT30839MB	TERMINAL PLATE
30	SGWUX950-KE	FRONT PANEL		75	SJT31239MB	CONNECTOR (12P)
31	XTB3+8FFR1	SCREW		76	SJT30647WL	CONNECTOR (6P)
32	XTBS3+8JFZ1	SCREW (E, EH, EF, EB) (EG, E1)		76	SJT31047WL	CONNECTOR (10P)
33	XTB3+20J	SCREW		80	SJS9234A	AC INLET COVER
34	XTB3+6FFZ	SCREW		81	SJS9225	AC OUTLET
35	XTB3+8G	SCREW		82	SJS9330A	AC OUTLET COVER
				82	SJS9332A	AC OUTLET COVER
				83	SHD3X36J	BRACING STRUT

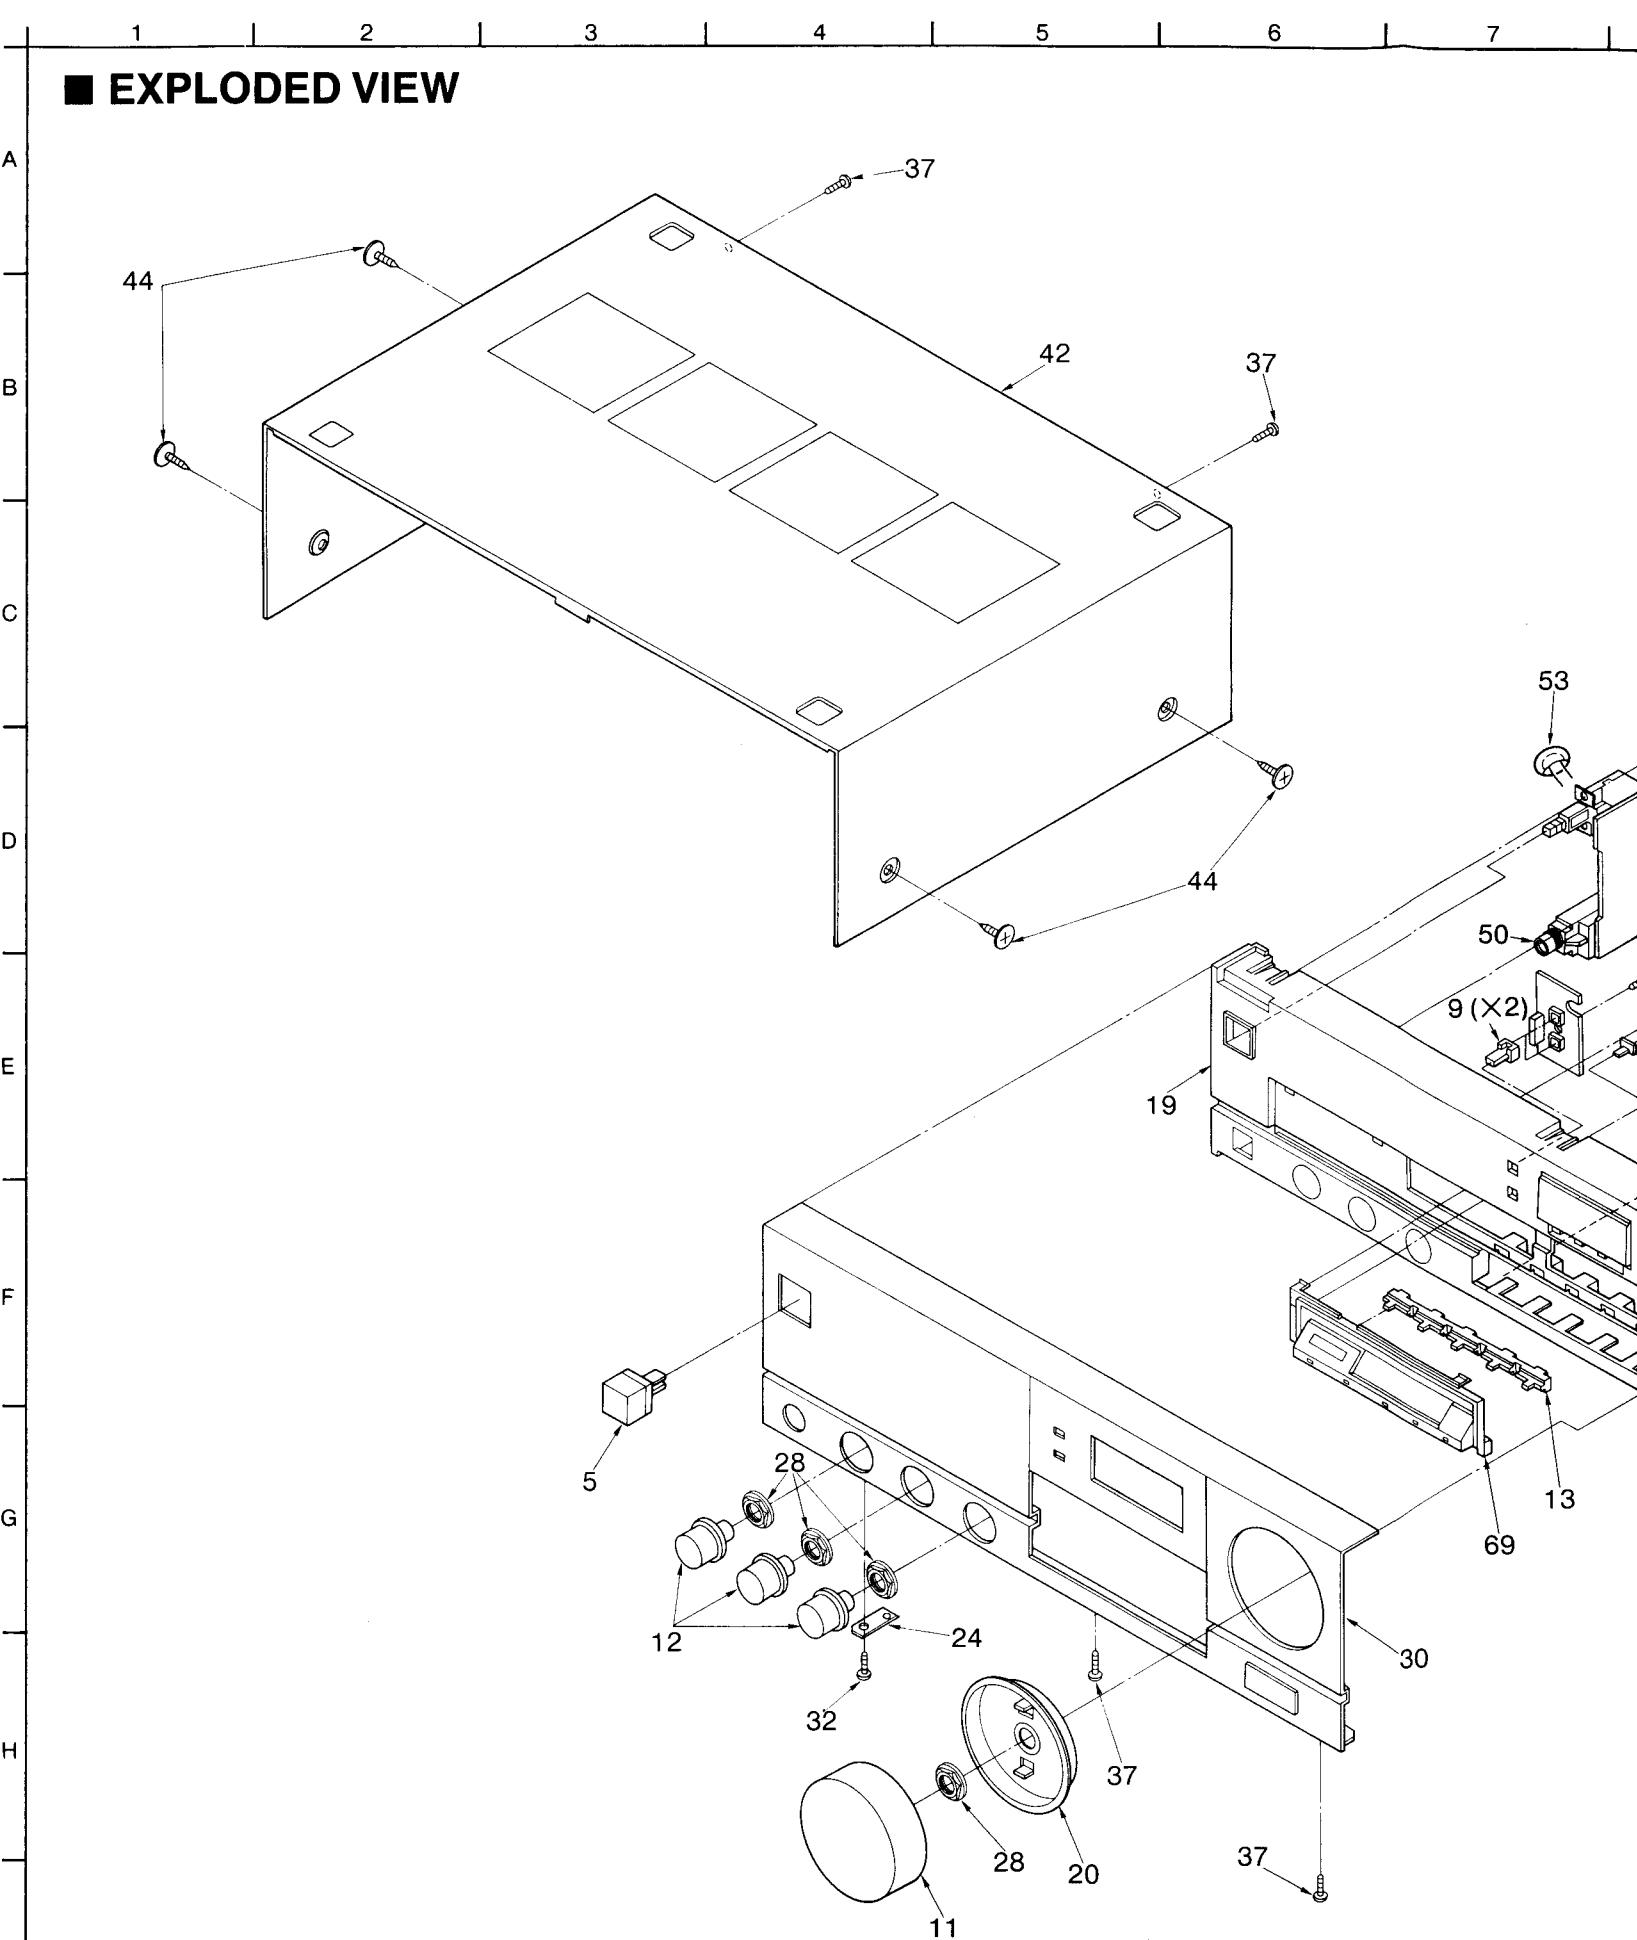■ EXPLODED VIEW



7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 |

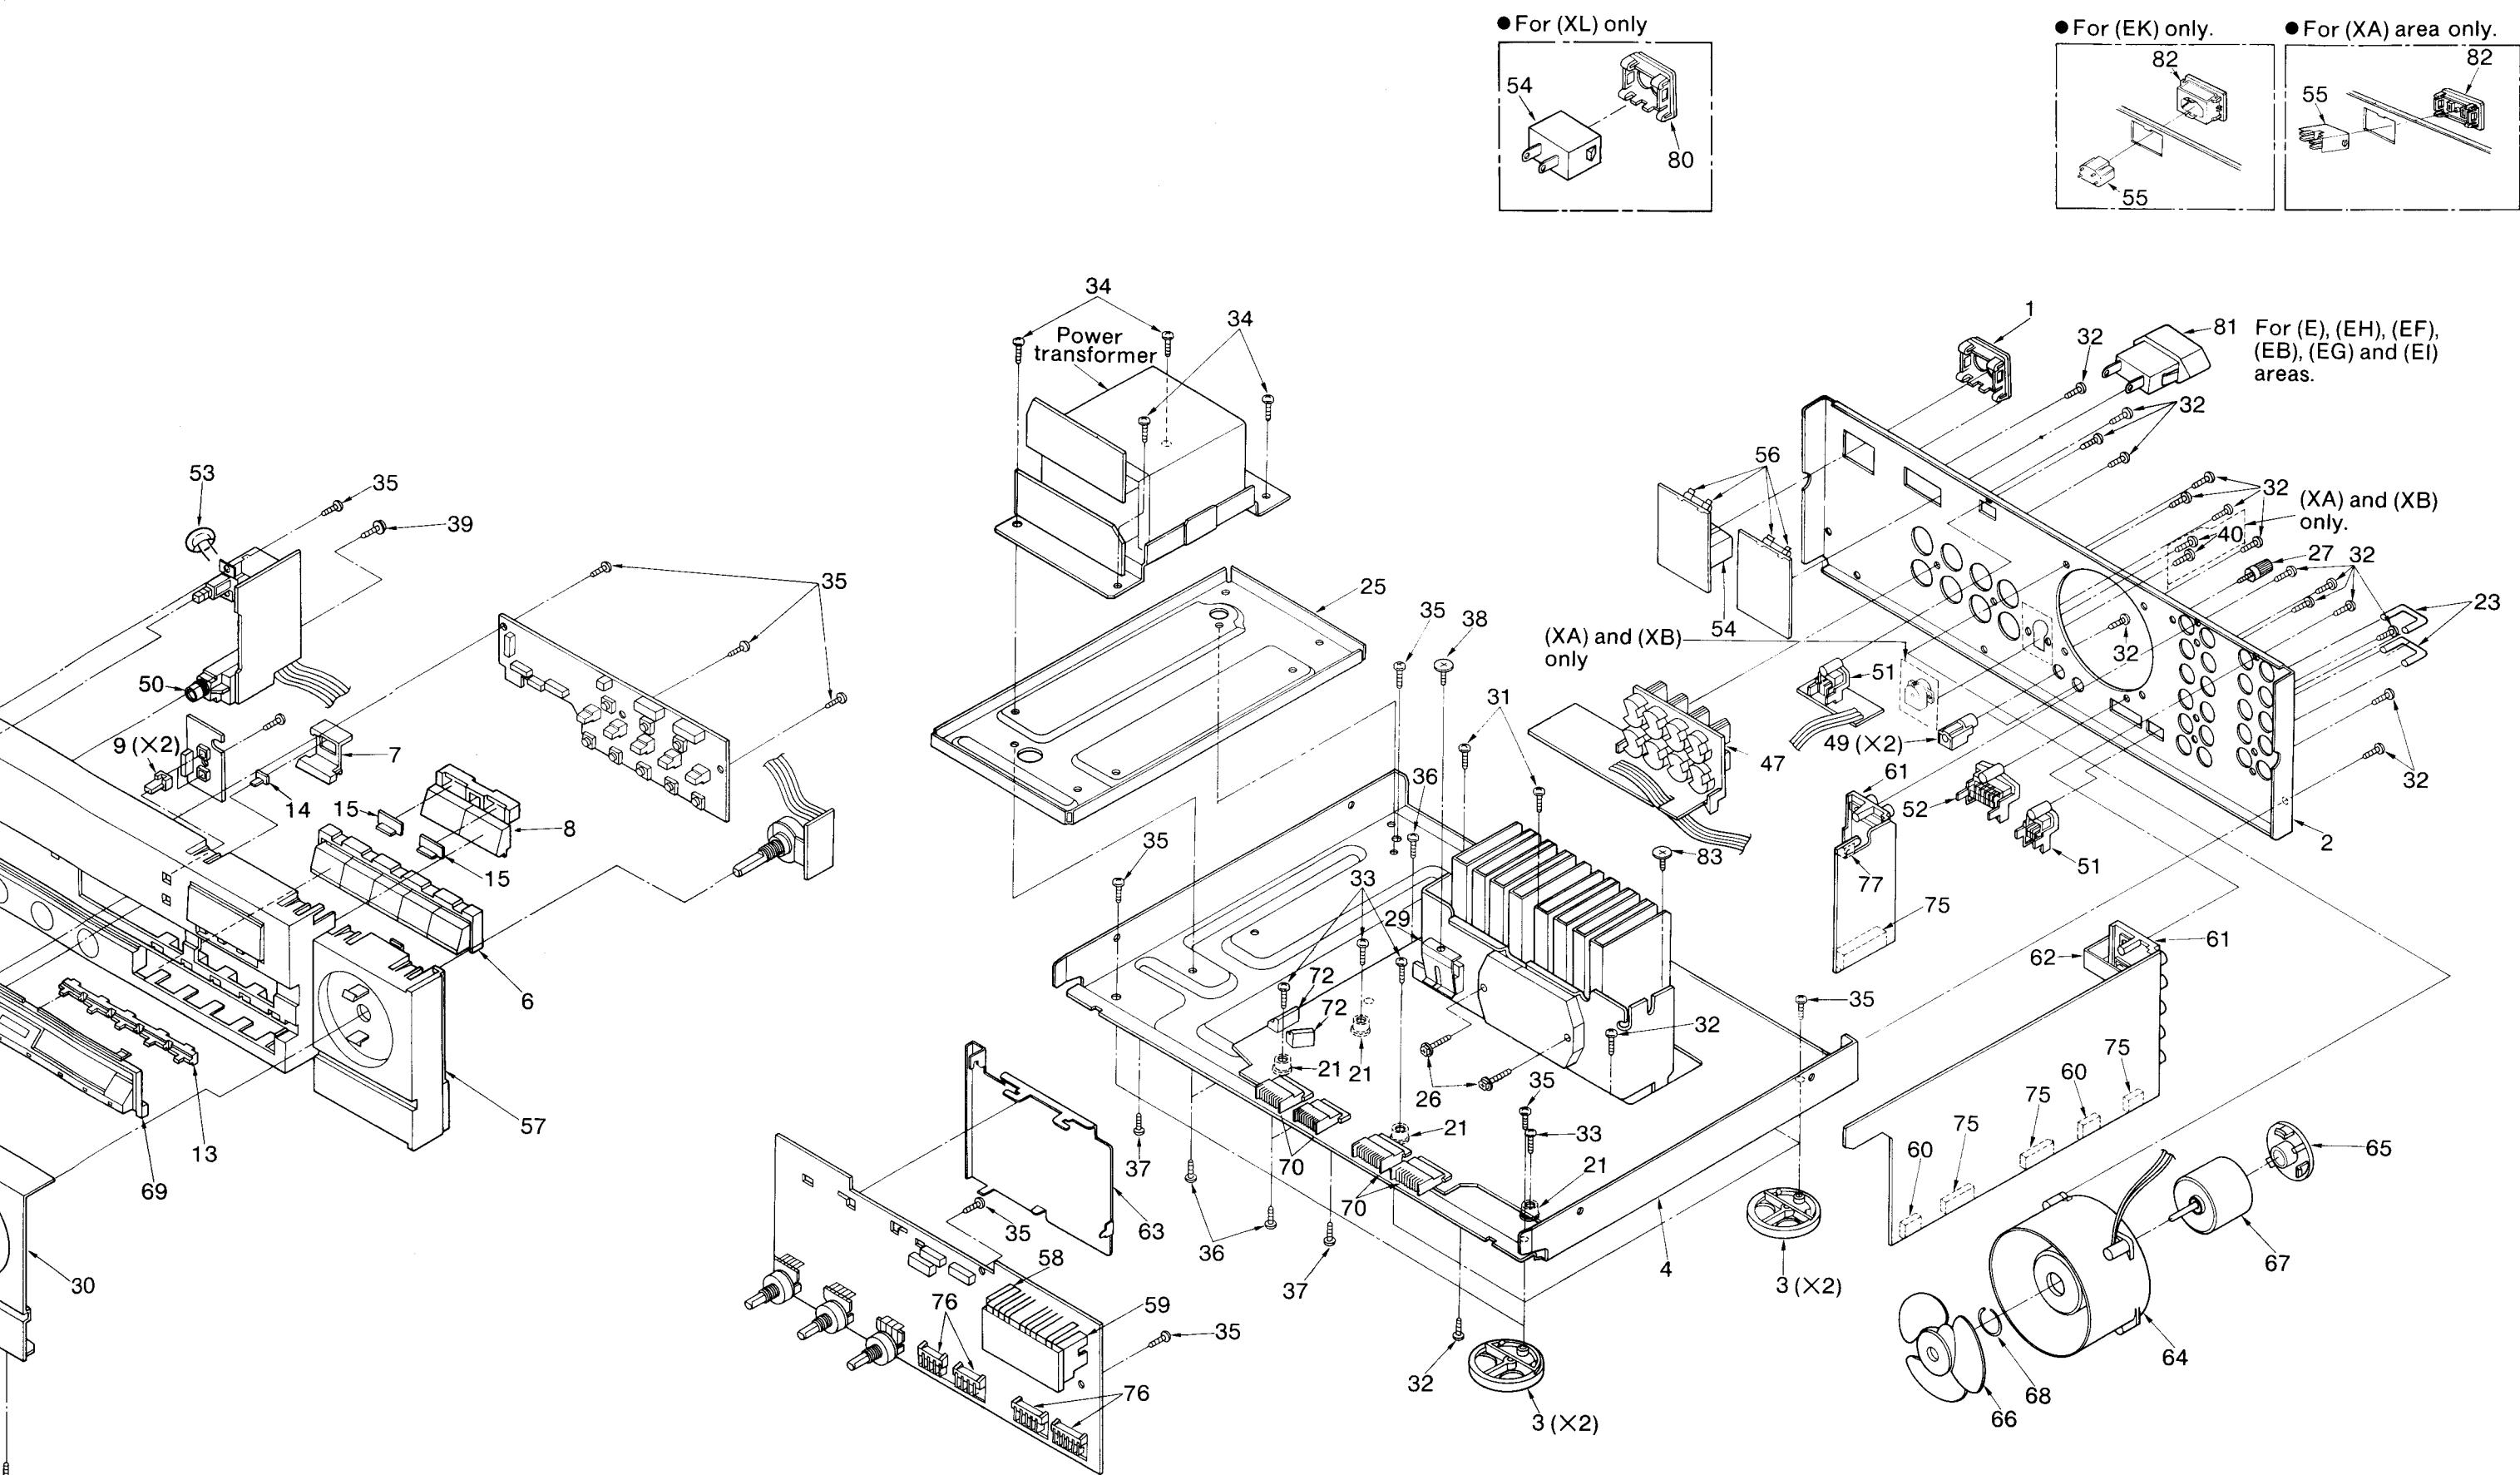

■ FUNCTIONS OF IC TERMINALS

•IC601 (M50754-411SP)

Pin No.	I/O	Terminal Name	Function
1	I	V _{DD}	To be connected to a power supply.
2	O	LCD	This is the output terminal for the LED selector indicator of the CD player. At a "HI" level the LED lights up.
3	—	CS2	For ground connection.
4	I	VR1	These are the terminals for the rotary encoder of the volume of VR601.
5	I	VR0	
6	O	PWM	This terminal outputs the signal for the control of the volume and balance.
7	I	REC	This is the terminal for the detection of recording on the deck.
8	O	SY OUT	This is the terminal for synchro recording on the deck.
9	I	DECK	This is the terminal for direct operations on the deck.
10	I	CDE	Outputs the signal for the control of CD editing.
11	I	CD	These are the terminals for the start of synchronization on the CD unit.
12	I	CD. SY.	
13	I	PL. SY.	These are the terminals for sync recording on the player.
14	O	PL. START	
15	O	PL. STOP	The serial data inputted into IC201 is latched by the STB pulse and the switch is set to ON according to data.
16	O	DATA	CLK: This terminal outputs the clock signal for reading serial data. DATA: This terminal outputs the serial data.
17	O	CLK	
18	O	STB	
19	O	SURR	Outputs the signal for the control of SURROUND. At a "LOW" level SURROUND is ON.
20	O	S. LOUD	Outputs the signal for the control of SUPER DYNAMIC SOUND. At a "LOW" level SUPER DYNAMIC SOUND is ON.
21	O	MUT 1	Outputs the signal for the control of muting.
22	—	SYN OUT 2	Unused.
23	O	MUTE	Outputs the -6 dB signal for the control of attenuated muting.
24	I	HALT	This is the terminal for the detection of power supply.
25	I	REMOTE	Inputs data from the remote controller.
26	—	CN VSS	For ground connection.
27	I	RESET	This terminal inputs the reset signal.
28	I	X IN	These are the I/O terminals for the oscillating clock signal.
29	O	X OUT	
30	—	X _c IN	Unused.
31	—	X _c OUT	

Pin No.	I/O	Terminal Name	Function
32	—	V _{ss}	For ground connection.
33	—	NC	Unused.
35 37	O	S ₀ S ₂	These are the key matrix terminals for input selection.
61 64	I	K ₀ K ₃	
38	I	V _p	The signal which pulls down the voltage is inputted into this terminal.
39 46	O	S ₃ S ₁₀	These terminals output the signals for the control of the multi-digital display.
49	O	G ₀ G ₃	
52	—	—	Outputs the signal for the control of the TAPE LED. At a "HI" level the LED lights up.
53	O	L TAPE	
54	O	L VTR	Outputs the signal for the control of the VTR LED. At a "HI" level the LED lights up.
55	O	L VD	Outputs the signal for the control of the VD LED. At a "HI" level the LED lights up.
56	O	L TUNER	Outputs the signal for the control of the TUNER LED. At a "HI" level the LED lights up.
57	O	L PHONO	Outputs the signal for the control of the PHONO LED. At a "HI" level the LED lights up.
58	O	L DAT	Outputs the signal for the control of the DAT LED. At a "HI" level the LED lights up.
59	O	VTR REC MUTE	Outputs the signal for muting the VTR recording.
60	O	L MUTE	Outputs the signal for the control of the MUTING LED. At a "HI" level the LED lights up.

■ REPLACEMENT PARTS LIST

Notes : * Important safety notice : Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 * Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)
 Parts without these indications can be used for all areas.

• ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
INTEGRATED CIRCUITS					
IC101	AN6558F	I.C. PHONO EQ AMP	D607	MA165	DIODE
IC201	TC9164N	I.C. INPUT SELECTOR	D608	MA700A	DIODE
IC301	M5238P	I.C. PHASE SHIFT	D609	MA700A	DIODE
IC302	AN6554F	I.C. MIXING AMP	D610	MA700A	DIODE
IC303	AN6558F	I.C. BUFFER AMP	D611	MA165	DIODE
IC304	AN6557F	I.C. BUFFER AMP	D612	MA165	DIODE
IC305	AN6557F	I.C. MIXING AMP	D613	MA165	DIODE
IC306	M51131L	I.C. ATTENUATOR	D615	MA165	DIODE
IC307	M51131L	I.C. ATTENUATOR	D616	MA165	DIODE
IC402	AN6554F	I.C. PRE AMP	D617	MA165	DIODE
IC403	AN6558F	I.C. TONE AMP	D618	MA4100M	DIODE
IC501	SV13203	INTEGRATED CIRCUIT, POWER AMP	D619	MA165	DIODE
IC601	M50754-411SP	I.C. MICRO COMPUTER	D620	MA165	DIODE
IC602	MN4030B	I.C. LOGIC	D621	MA165	DIODE
IC603	MN4013B	I.C. LOGIC	D622	MA165	DIODE
IC604	AN6552F	I.C. BUFFER AMP	D623	MA165	DIODE
IC701	AN78M05R	I.C. REGULATOR	D624	MA165	DIODE
TRANSISTORS					
Q201	2SD1450RS	TRANSISTOR	D626	MA165	DIODE
Q202	2SD1450RS	TRANSISTOR	D627	MA165	DIODE
Q203	2SA1309AQS	TRANSISTOR	D631	LN846RP-C	L.E.D
Q301	2SK301	TRANSISTOR	D632	LN846RP-C	L.E.D
Q302	2SK301	TRANSISTOR	D633	LN846RP-C	L.E.D
Q303	2SA1309AQS	TRANSISTOR	D634	LN0202RP2	DIODE, GAASP
Q401	2SD1330R	TRANSISTOR	D635	LN0202RP2	DIODE, GAASP
Q402	2SD1330R	TRANSISTOR	D636	LN846RP-C	L.E.D
Q403	2SA1309AQS	TRANSISTOR	D637	LN846RP-C	L.E.D
Q404	2SD1330R	TRANSISTOR	D638	LN873RP-LS	DIODE, SI
Q405	2SD1330R	TRANSISTOR	D641	MA165	DIODE
Q406	2SA1309AQS	TRANSISTOR	D642	MA165	DIODE
Q407	2SD1330R	TRANSISTOR	D643	MA165	DIODE
Q408	2SD1330R	TRANSISTOR	D644	MA165	DIODE
Q409	2SA1309AQS	TRANSISTOR	D645	MA165	DIODE
Q501	2SA992E	TRANSISTOR	D646	MA165	DIODE
Q502	2SC3311A-Q	TRANSISTOR	D647	MA165	DIODE
Q503	2SA1309AQS	TRANSISTOR	D648	MA165	DIODE
Q601	UN4111	TRANSISTOR	D649	MA165	DIODE
Q602	UN4111	TRANSISTOR	D701	Δ SVDS3V40	RECTIFIER
Q603	UN4111	TRANSISTOR	D702	Δ SVDS3V40	RECTIFIER
Q604	UN4111	TRANSISTOR	D703	Δ SVDS3V40	RECTIFIER
Q611	UN4211	TRANSISTOR	D704	Δ SVDS3V40	RECTIFIER
Q612	UN4211	TRANSISTOR	D705	MA4140-M	DIODE, SI
Q613	UN4211	TRANSISTOR	D706	MA4140-M	DIODE, SI
Q614	UN4211	TRANSISTOR	D707	MA29WA	DIODE
Q615	UN4211	TRANSISTOR	D709	MA167	DIODE
Q616	UN4211	TRANSISTOR	D710	MA167	DIODE
Q617	UN4211	TRANSISTOR	D711	MA165	DIODE
Q618	UN4211	TRANSISTOR	D714	MA4300M	DIODE
VARIABLE RESISTORS					
Q619	UN4111	TRANSISTOR	VR401	EWC2XAF20C15	V.R. BASS
Q621	2SC3311A-Q	TRANSISTOR	VR402	EWC2XAF20C15	V.R. TREBLE
Q622	UN4211	TRANSISTOR	VR403	EWHFDAF20G15	V.R. BALANCE
Q701	2SD1265-P	TRANSISTOR	VR601	EVQWX2F2045B	V.R., VOLUME ENCODER
COILS AND TRANSFORMERS					
D201	MA4051-M	DIODE	L301	ELEXT100KA	COIL
D301	MA165	DIODE	L501	SLQY07G-40	CHOKE COIL
D403	MA165	DIODE	L502	SLQY07G-40	CHOKE COIL
D502	MA4120	DIODE	L505	SLQY07G-40	CHOKE COIL
D503	MA4120	DIODE	L506	SLQY07G-40	CHOKE COIL
D505	MA167	DIODE	L601	ELEXH101KA	COIL
D506	MA167	DIODE	L603	ELEXH330KA	COIL
D507	MA165	DIODE	L604	ELEXH330KA	COIL
D601	MA165	DIODE	L605	ELEPK1R2MA	COIL
D602	MA165	DIODE	L609	ELEXH330KA	COIL
D603	MA165	DIODE	T1	SLT5N481-W	POWER TRANSFORMER
D605	MA165	DIODE	(E, EH, EF, EB)		
D606	MA165	DIODE	T1	SLT5N482-W	POWER TRANSFORMER
(E, EH, EF, EB)			(E, EH, EF, EB)		
(E, EH, EF, EB)			(E, EH, EF, EB)		

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description		
T1	SLT5N483-W	POWER TRANSFORMER (XA, XB)	SWITCHES				
Z601	EXFP5331MW	COMBINATION PART	S601	EVQQB005R	SW		
Z602	EXFP7331MW	COMPONENT COMBINATION	S602	EVQQB005R	SW		
Z603	EXBF5E103J	COMBINATION PART	S603	EVQQB005R	SW		
Z604	EXBF8E103J	10KΩ X 8	S604	EVQQB005R	SW		
DISPLAYS							
F1	SADFV217	DISPLAY TUBE	S605	EVQQB005R	SW		
FUSES							
F1	Δ XBA2C12TB0	FUSE T1.25A	S606	EVQQB005R	SW		
(XA, XB)	XBA2C25TB0	FUSE, 2.5A 250V	S607	EVQQB005R	SW		
F2	Δ XBA2C20TB0	FUSE 250V, T2A	S608	EVQQB005R	SW		
(E, EH, EF, EB)			S609	EVQQ LY07K	SW		
(EG, EI)			S610	EVQQ LY07K	SW		
RELAYS							
RL501	Δ SSY134	RELAY	S700	Δ SSH1071	SW. POWER		
(A)			S701	Δ ESE37263	SW. VOLTAGE SEL.		
OTHERS							
X601	EF0FC4004A4	CERAMIC FILTER					

• PACKING PARTS LIST

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description		
PACKING MATERIAL							
A1	SQF13289	INSTRUCTION BOOK (E, EH, EB)	(EF)				
A1	SQF13290	INSTRUCTION BOOK (EK)	P4	SPS5182	PAD		
A1	SQF13291	INSTRUCTION BOOK (EF, EA)	P5	SPS5183	PAD		
A1	SQF13292	INSTRUCTION BOOK (EG)	P6	SPS5184	PAD		
A1	SQF13293	INSTRUCTION BOOK (EI)	P7	XZB10X30A02	PROTECTION COVER		
ACCESSORIES							
A1	Δ SFDAC05E03	POWER CORD (E, EH, EF, EB)	A1	Δ SJA168	POWER CORD		
(EG, EI)			(XA)				
A1	SQF13295	INSTRUCTION BOOK (XL, XB)	A1	Δ SJA173	POWER CORD		
P1	SPP753	PROTECTION COVER PACKING CASE	(XL)				
P2	SPG6352	PACKING CASE (EK, E, EH, EB)	A1	Δ SJA183	POWER CORD		
(EG, EI, XL)			(XB)				
(XA, XB)			A1	Δ SJA188	POWER CORD		
P3	SPG6353	PACKING CASE (XA, XB)	A2	Δ RJP120ZBS-H	AC PLUG ADAPTOR		

■ RESISTORS AND CAPACITORS

Notes : * Important safety notice :

Components identified by mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.

* Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)

Parts without these indications can be used for all areas.

Numbering System of Resistor
Example:

ERD	25	F	J	102
Type	Wattage	Shape	Tolerance	Value (1KΩ)
ERX	2	AN	J	471
Type	Wattage	Shape	Tolerance	Value (2W)

Resistor Type	Wattage	Tolerance
ERD : Carbon	10 : 1/8W	J : ±5%
ERG : Metal Oxide	14 : 1/4W	F : ±1%
ERQ : Fuse Type Metal	1A : 1W	G : ±2%
ERX : Metal Film	S2 : 1/4W	J : ±5%
ERD L : Carbon (chip)	2F : 1/4W	K : ±10%
ERO K : Metal Film (chip)	2A : 2W	M : ±20%
ERC : Solid	6G : 1/10W	
ERF : Incombustible		
ERB : Box-Shaped		
ERM : Wire-Wound		
RRJ : Chip Resistor		
ERJ : Chip Resistor		

Numbering System of Capacitor
Example:

ECKD	1H	102	Z	F
Type	Voltage	Value	Tolerance	Peculiarity
ECEA	50	M	330	

Capacitor Type	Voltage	Tolerance
ECE : Electrolytic	0.1 : 6.3V	K : ±10%
ECCD : Ceramic	1C : 16V	M : ±20%
ECKD : Ceramic Capacitor	1H : 50V	Z : ±80%
ECQM : Polyester	50 : 50V	—20
ECOP : Polypropylene	2H : 500V	J : ±5%
ECG : Ceramic	1 : 100V	G : ±2%
ECEA N : Non Polar Electrolytic	KC : 400V AC	F : ±1%
OCU : Ceramic (Chip Type)	KC : 125V AC	C : ±0.25pF
ECUX : Ceramic (Chip Type)	(UL)	D : ±0.5pF
ECF : Semiconductor		
EECW : Liquid electrolyte double layer capacitor		

● Capacity are in microfarads (μF) unless specified otherwise. P = Pico-farads (pF) F = Farads (F).

● Resistance are in ohms (Ω), unless specified otherwise. 1K = 1,000Ω, 1M = 1,000kΩ

Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.
RESISTORS(VALUE,WATTAGE)								
R101	ERDS2TJ471	470 1/4	R227	ERDS2TJ332	3.3K 1/4	R351	ERDS2TJ103	10K 1/4
R102	ERDS2TJ471	470 1/4	R228	ERDS2TJ332	3.3K 1/4	R352	ERDS2TJ103	10K 1/4
R105	ERDS2TJ224	220K 1/4	R229	ERDS2TJ392	3.9K 1/4	R353	ERDS2TJ103	10K 1/4
R106	ERDS2TJ224	220K 1/4	R231	ERDS2TJ102	1K 1/4	R354	ERDS2TJ103	10K 1/4
R107	ERDS2TJ331	330 1/4	R232	ERDS2TJ102	1K 1/4	R355	ERDS2TJ122	1.2K 1/4
R108	ERDS2TJ331	330 1/4	R233	ERDS2TJ223	22K 1/4	R356	ERDS2TJ122	1.2K 1/4
R109	ERDS2TJ563	56K 1/4	R234	ERDS2TJ122	1.2K 1/4	R357	ERDS2TJ392	3.9K 1/4
R110	ERDS2TJ563	56K 1/4	R235	ERDS2TJ223	22K 1/4	R358	ERDS2TJ392	3.9K 1/4
R111	ERDS2TJ271	270 1/4	R236	ERDS2TJ223	22K 1/4	R359	ERDS2TJ103	10K 1/4
R112	ERDS2TJ271	270 1/4	R237	ERDS2TJ223	22K 1/4	R360	ERDS2TJ103	10K 1/4
R113	ERDS2TJ680	68 1/4	R238	ERDS2TJ152	1.5K 1/4	R361	ERDS2TJ273	27K 1/4
R114	ERDS2TJ680	68 1/4	R239	ERDS2TJ152	1.5K 1/4	R362	ERDS2TJ273	27K 1/4
R115	ERDS2TJ184	180K 1/4	R301	ERDS2TJ223	22K 1/4	R363	ERDS2TJ103	10K 1/4
R116	ERDS2TJ184	180K 1/4	R302	ERDS2TJ223	22K 1/4	R364	ERDS2TJ103	10K 1/4
R117	ERDS2TJ123	12K 1/4	R303	ERDS2TJ223	22K 1/4	R365	ERDS2TJ122	1.2K 1/4
R118	ERDS2TJ123	12K 1/4	R304	ERDS2TJ223	22K 1/4	R401	ERDS2TJ223	22K 1/4
R119	ERDS2TJ104	100K 1/4	R307	ERDS2TJ332	3.3K 1/4	R402	ERDS2TJ223	22K 1/4
R120	ERDS2TJ104	100K 1/4	R308	ERDS2TJ332	3.3K 1/4	R405	ERDS2TJ563	56K 1/4
R121	ERDS2TJ102	1K 1/4	R309	ERDS2TJ223	22K 1/4	R406	ERDS2TJ563	56K 1/4
R122	ERDS2TJ102	1K 1/4	R310	ERDS2TJ333	33K 1/4	R409	ERDS2TJ333	33K 1/4
R201	ERDS2TJ102	1K 1/4	R311	ERDS2TJ223	22K 1/4	R410	ERDS2TJ333	33K 1/4
R202	ERDS2TJ102	1K 1/4	R312	ERDS2TJ333	33K 1/4	R415	ERDS2TJ821	820 1/4
R203	ERDS2TJ822	8.2K 1/4	R313	ERDS2TJ223	22K 1/4	R416	ERDS2TJ821	820 1/4
R204	ERDS2TJ822	8.2K 1/4	R314	ERDS2TJ223	22K 1/4	R417	ERDS2TJ391	330 1/4
R205	ERDS2TJ102	1K 1/4	R315	ERDS2TJ223	22K 1/4	R418	ERDS2TJ391	330 1/4
R206	ERDS2TJ102	1K 1/4	R316	ERDS2TJ822	8.2K 1/4	R419	ERDS2TJ273	27K 1/4
R207	ERDS2TJ102	1K 1/4	R317	ERDS2TJ562	5.6K 1/4	R420	ERDS2TJ273	27K 1/4
R208	ERDS2TJ102	1K 1/4	R318	ERDS2TJ562	5.6K 1/4	R423	ERDS2TJ153	15K 1/4
R211	ERDS2TJ822	8.2K 1/4	R319	ERDS2TJ562	5.6K 1/4	R424	ERDS2TJ153	15K 1/4
R212	ERDS2TJ822	8.2K 1/4	R320	ERDS2TJ224	220K 1/4	R425	ERDS2TJ152	1.5K 1/4
R213	ERDS2TJ471	470 1/4	R321	ERDS2TJ332	3.3K 1/4	R426	ERDS2TJ152	1.5K 1/4
R214	ERDS2TJ471	470 1/4	R322	ERDS2TJ332	3.3K 1/4	R427	ERDS2TJ152	1.5K 1/4
R215	ERDS2TJ182	1.8K 1/4	R324	ERDS2TJ332	3.3K 1/4	R428	ERDS2TJ152	1.5K 1/4
R216	ERDS2TJ182	1.8K 1/4	R325	ERDS2TJ392	3.9K 1/4	R429	ERDS2TJ182	1.8K 1/4
R217	ERDS2TJ472	4.7K 1/4	R326	ERDS2TJ392	3.9K 1/4	R430	ERDS2TJ182	1.8K 1/4
R218	ERDS2TJ472	4.7K 1/4	R327	ERDS2TJ104	100K 1/4	R431	ERDS2TJ102	1K 1/4
R221	ERDS2TJ102	1K 1/4	R328	ERDS2TJ104	100K 1/4	R432	ERDS2TJ102	1K 1/4
R222	ERDS2TJ102	1K 1/4	R329	ERDS2TJ103	10K 1/4	R433	ERDS2TJ223	22K 1/4
R223	ERDS2TJ821	820 1/4	R330	ERDS2TJ473	47K 1/4	R434	ERDS2TJ105	1M 1/4
R224	ERDS2TJ821	820 1/4	R331	ERDS2TJ393	33K 1/4	R435	ERDS2TJ334	330K 1/4
			R332	ERDS2TJ104	100K 1/4	R437	ERDS2TJ473	47K 1/4

Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.
R438	ERDS2TJ105	1M 1/4	R624	ERDS2TJ223	22K 1/4	C251	RCBC1H101KBY	100P 50
R439	ERDS2TJ103	10K 1/4	R625	ERDS2TJ104	100K 1/4	(EG. E1)	RCBC1H101KBY	100P 50
R442	ERDS							

Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.
C401	ECEA1EK3R3B	3.3 25	C505	ECEA1CPS220	22 16	C609	ECBT1H102KB	0.001 50
C402	ECEA1EK3R3B	3.3 25	C506	ECEA1CPS220	22 16	C610	ECEA1CKS100	10 16
C409	RCBC1H101KBY	100P 50	C507	RCBS1H6R8KLY	6.8P 50	C611	RCBC1H101KBY	100P 50
C410	RCBC1H101KBY	100P 50	C508	RCBS1H6R8KLY	6.8P 50	C612	RCBC1H101KBY	100P 50
C411	RCBS1H100JLY	10P 50	C509	RCBC1H151KBY	150P 50	C613	RCBS1H221KBY	220P 50
C412	RCBS1H100JLY	10P 50	C509	RCBS1H271KBY	270P 50	C614	RCBS1H221KBY	220P 50
C413	ECEA1HK2R2B	2.2 50	(EG. E1)		C615	ECEA1VKA330	33 35	
C414	ECEA1HK2R2B	2.2 50	C510	RCBC1H151KBY	150P 50	C616	ECEA1HK2R2B	2.2 50
C419	ECFTD473KXL	0.047 25	C511	ECFTD473KXL	0.047 25	C617	ECEA1HK2R2B	2.2 50
C420	ECFTD473KXL	0.047 25	C512	ECFTD473KXL	0.047 25	C618	ECKD1H223PF	0.022 50
C421	ECEA1HK2R2B	2.2 50	C513	ECEA0JK331	330 6.3	C619	ECFTD103KXL	0.01 25
C422	ECEA1HK2R2B	2.2 50	C514	ECEA1HKR22	0.22 50	C620	ECKD1H103PF	0.01 50
C423	ECEA1HPS3R3	3.3 50	C515	ECEA0JK330	33 6.3	C621	ECKD1H103PF	0.01 50
C424	ECEA1HPS3R3	3.3 50	C516	ECKD1H103PF	0.01 50	C622	ECKD1H103PF	0.01 50
C425	ECEA1HPS3R3	3.3 50	(EG. E1)		C623	ECKD1H103PF	0.01 50	
C426	ECEA1HPS3R3	3.3 50	C517	ECEA50N2R2	2.2 50	C624	ECKD1H103PF	0.01 50
C427	ECEA1HPS3R3	3.3 50	(EG. E1)		C625	ECKD1H103PF	0.01 50	
C428	ECEA1HPS3R3	3.3 50	C518	ECEA1CKS100	10 16	C626	ECKD1H103PF	0.01 50
C431	ECEA1HKR47	0.47 50	C519	ECEA1CK470	47 16	C627	ECKD1H103PF	0.01 50
C432	ECEA1HK010	1 50	C520	ECEA1CK101	100 16	C628	ECKD1H103PF	0.01 50
C451	RCBC1H101KBY	100P 50	C521	ECFTD473KXL	0.047 25	C629	ECKD1H102KB	0.001 50
C452	RCBC1H101KBY	100P 50	C522	ECFTD473KXL	0.047 25	C630	ECKD1H103PF	0.01 50
C453	RCBC1H680JLY	68P 50	C523	ECKD1H102KB	0.001 50	C631	ECKD1H103PF	0.01 50
C454	RCBC1H680JLY	68P 50	C524	ECKD1H102KB	0.001 50	C632	ECKD1H103PF	0.01 50
C455	ECBT1H821KB	820P 50	C561	ECKD1H102KB	0.001 50	C697	ECQV1H474JZ3	0.47 50
C456	ECBT1H821KB	820P 50	(EG. E1)		C698	RCBS1H221KBY	220P 50	
C457	ECFTD123KXL	0.012 25	C562	ECKD1H102KB	0.001 50	C699	RCBS1H221KBY	220P 50
C458	ECFTD123KXL	0.012 25	(EG. E1)		C700	▲ ECKDKC103PF2	0.01 125	
C459	ECFTD683KXL	0.068 25	C563	ECKD1H223PF	0.022 50	C701	ECETS56V472U	4700 56
C460	ECFTD683KXL	0.068 25	(EG. E1)		C702	ECETS56V472U	4700 56	
C461	ECEA1HPS010	1 50	C564	ECKD1H223PF	0.022 50	C703	▲ ECFTD103KXL	0.01 25
C462	ECEA1HPS010	1 50	(EG. E1)		C704	▲ ECFTD103KXL	0.01 25	
C463	ECFTD472KXL	0.0047 25	C597	RCBS1H221KBY	220P 50	C705	ECEA1CU470	47 16
C464	ECFTD472KXL	0.0047 25	(EG. E1)		C706	ECEA1CU470	47 16	
C465	ECFTD223KXL	0.022 25	C598	RCBS1H221KBY	220P 50	C707	ECEA1CK220	22 16
C466	ECFTD223KXL	0.022 25	(EG. E1)		C708	ECEA1CK220	22 16	
C467	ECEA1HPS3R3	3.3 50	C600	ECEA1CK100E	10 16	C709	ECQE2104KS	0.1 250
C468	ECEA1HPS3R3	3.3 50	C601	ECEA1CK101	100 16	C710	ECEA1HK4R7	4.7 50
C469	ECFTD103KXL	0.01 25	C602	ECKD1H223PF	0.022 50	C711	ECEA1VK100B	10 35
C470	ECFTD103KXL	0.01 25	C603	ECEA1HK010	1 50	C712	ECEA1VU330	33 35
C471	ECEA1CK470	47 16	C604	ECFTD333KXL	0.033 25	C713	ECEA1CKS100	10 16
C501	ECEA1HPS3R3	3.3 50	C605	ECFTD683KXL	0.068 25	C714	ECEA1HK010	1 50
C502	ECEA1HPS3R3	3.3 50	C606	ECEA1EK4R7	4.7 25	C715	ECFTD473KXL	0.047 25
C503	ECBT1H821KB	820P 50	C607	ECEA1HK010	1 50	(EG. E1)		
C504	ECBT1H821KB	820P 50	C608	ECBT1H102KB	0.001 50	C716	ECKD1H103PF	0.01 50
(EG. E1)								