

Service Manual


Stereo Integrated Amplifier

Amplifier

SU-Z960

Color

(K)Black Type

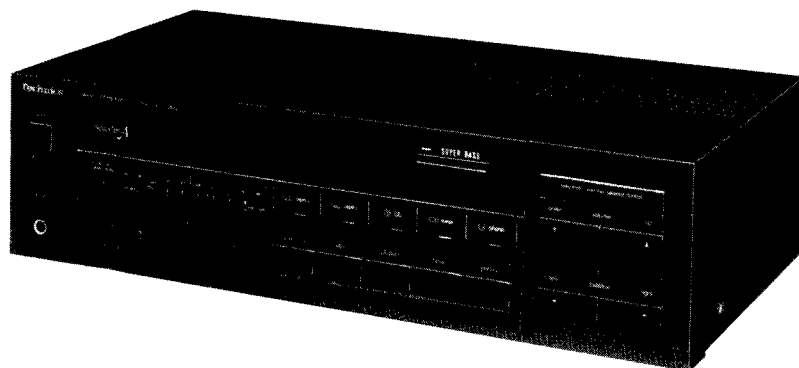

Area

Color	Area
(K)	(EX)Continental Europe.
(K)	(EW)Switzerland.
(K)	(EH)Holland.
(K)	(XL)Australia.
(K)	(XA)Asia, Latin America, Middle Near East, Africa and Oceania.
(K)	(EK)United Kingdom.
(K)	(EB)Belgium.
(K)	(EF)France.
(K)	(EG)F.R.Germany.
(K)	(Ei)Italy.

SPECIFICATIONS

(DIN 45 500)

■ AMPLIFIER SECTION

40 Hz ~ 20 kHz continuous power output both channels driven	2 x 85 W (8Ω)
DIN power output	2 x 100 W (8Ω)
Total harmonic distortion	
rated power at 40 Hz ~ 20 kHz	0.09% (8Ω)
rated power at 1 kHz	0.05% (8Ω)
half power at 1 kHz	0.03% (8Ω)
Intermodulation distortion	
rated power at 60 Hz:7 kHz = 4:1, SMPTE, 8Ω	0.09%
Power bandwidth	
both channels driven, -3dB	10 Hz ~ 20 kHz (8Ω, THD 0.09%)
Residual hum and noise	1 mV
Damping factor	50 (8Ω)
Input sensitivity and impedance	
PHONO	2.5mV/47 kΩ
TUNER, CD/AUX, TAPE 1, TAPE 2/EQ	150mV/33 kΩ
PHONO maximum input voltage (1 kHz, RMS)	140 mV
S/N	
rated power (8Ω)	
PHONO	71 dB (IHF, A:78 dB)
TUNER, CD/AUX, TAPE 1, TAPE 2/EQ	70 dB (IHF, A:90 dB)
Frequency response	
PHONO	RIAA standard curve ± 0.8dB(30 Hz ~ 15 kHz)
TUNER, CD/AUX, TAPE 1, TAPE 2/EQ	10 Hz ~ 60 kHz (-3 dB)
Tone controls	
BASS	50 Hz, + 10 dB ~ -10 dB
TREBLE	20 kHz, + 10 dB ~ -10 dB

Super bass	80 Hz, + 6 dB
Muting	-20dB
Output voltage	
TAPE 1, 2 REC OUT	150 mV
Channel balance, CD/AUX 250 Hz ~ 6,300 Hz	± 1 dB
Channel separation, AUX 1 kHz	50dB
Headphones output level and impedance	670 mV/330 Ω
Load impedance	
MAIN or REMOTE	8 Ω ~ 16 Ω
MAIN and REMOTE	8 Ω ~ 16 Ω

■ GENERAL

Power consumption	470 W
Power supply	
For United Kingdom and Australia	AC 50 Hz/60 Hz, 240 V
For continental Europe	AC 50 Hz/60 Hz, 220 V
For others	AC 50 Hz/60 Hz, 110 V/127 V/220 V/240 V
Dimensions (W x H x D)	430 x 119 x 240 mm (16-15/16" x 4-11/16" x 9-7/16")
Weight	7.0 kg (15.4 lb.)

Notes:

- Specifications are subject to change without notice. Weight and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer (H.P. 3045 system).

Technics

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

CONTENTS

	Page		Page
BEFORE REPAIR.....	2	RESISTORS AND CAPACITORS.....	11,12
PROTECTION CIRCUITRY.....	2	TERMINAL GUIDE OF	
ACCESSORIES.....	2	TRANSISTORS,DIODES AND IC'S.....	12
LOCATION OF CONTROLS.....	3	BLOCK DIAGRAM.....	13,14
DISASSEMBLY INSTRUCTIONS.....	4,5	CIRCUIT BOARDS AND WIRING	
TERMINAL FUNCTION OF LSI.....	6	CONNECTION DIAGRAM.....	15 ~ 18
EXPLODED VIEW.....	7,8	SCHEMATIC DIAGRAM.....	19 ~ 22
REPLACEMENT PARTS LIST.....	9,10		

BEFORE REPAIR

- (1) Turn off the power supply. Using a 10 Ω , 5W resistor connect both ends of power supply capacitors(C703,C704,10000 μ F) in order to discharge the voltage.
- (2) Before turning the power supply on , after completion of repair , slowly apply the primary voltage by using a power supply voltage controller to make sure that the consumed current at 50Hz/60Hz in NO SIGNAL mode should be shown below with respect to supply voltage 110V/127V/220V/240V.

Power supply voltage	AC110V	AC127V	AC220V	AC240V
Consumed current 50/60Hz	300 ~ 500mA	270 ~ 470mA	100 ~ 300mA	80 ~ 280mA

PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following conditions is noticed:

- * No sound is heard when the power is switched ON.
- * Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted" , or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlined below:


1. Switch OFF the power.
2. Determine the cause of the problem and correct it.
3. Switch ON the power once again.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first switched OFF and then ON again.

ACCESSORIES

- AC power supply cord..... 1
SJA168-1 [XA]
SJA173 [XL]
SJA188 [EK]
SJA187 [others]

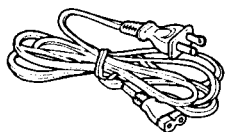

- Flat cable for remote-control operation 1
SWKUV96KM




- Connection cable for remote-control operation 1
SJP2257T




LOCATION OF CONTROLS

Front panel

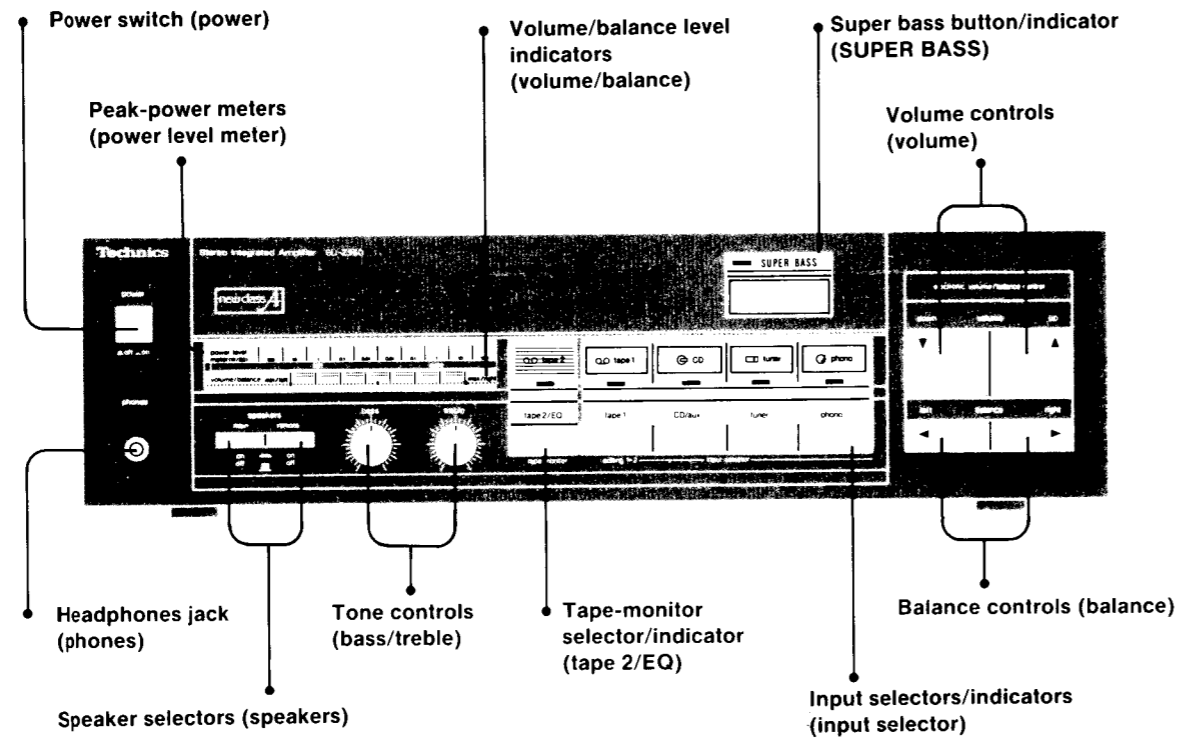

Rear panel

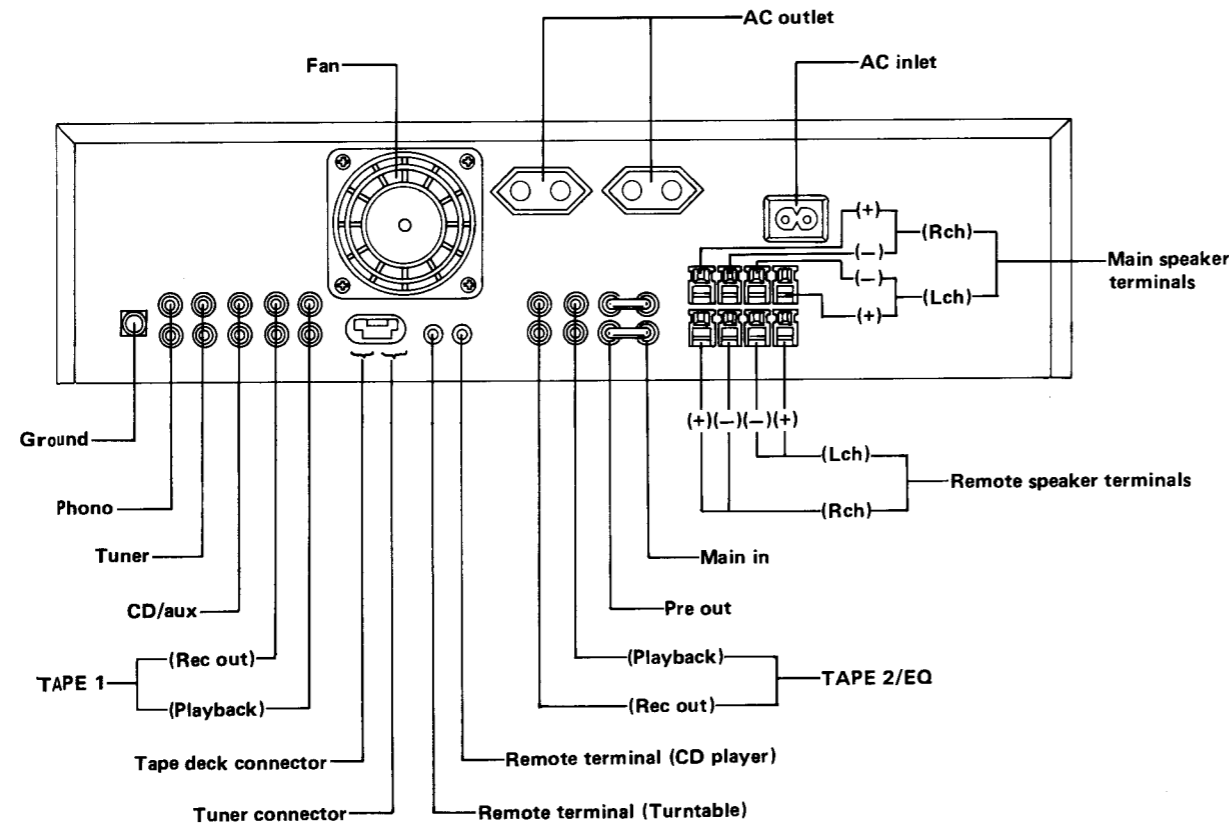

* Phono input capacitance is about 100pF.

DISASSEMBLY INSTRUCTIONS

Ref. No. 1

How to remove the front panel.

Procedure 1

1. Remove the top cabinet.
2. Pull out the 2 knobs (1, 2).
3. Remove the 3 screws (3 ~ 5).

Removing the knob

Wind cellophane tape around the knob and put it the direction of the arrow as shown in Fig. 1.

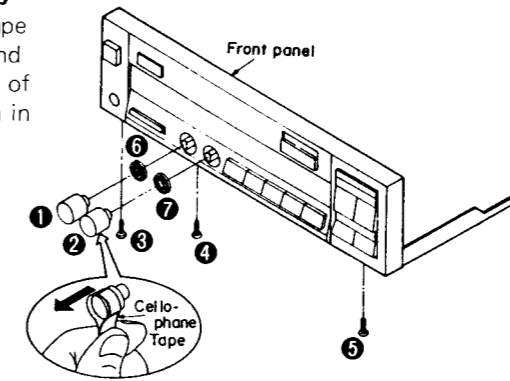


Fig. 1

"ATTENTION SERVICER"
SOME CHASSIS COMPONENTS MAY HAVE SHARP EDGES. BE CAREFUL WHEN DISASSEMBLING AND SERVICING.

4. Remove the 2 nuts (6, 7).
5. Remove the connector.

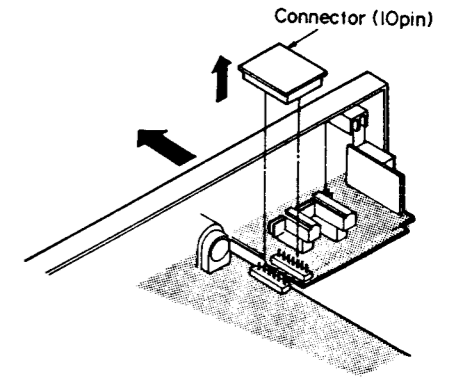


Fig. 2

Ref. No. 2

How to remove the P.C.B.

Procedure 1 → 2

1. Remove the 7 screws (1 ~ 7).
2. Remove the LED P.C.B.

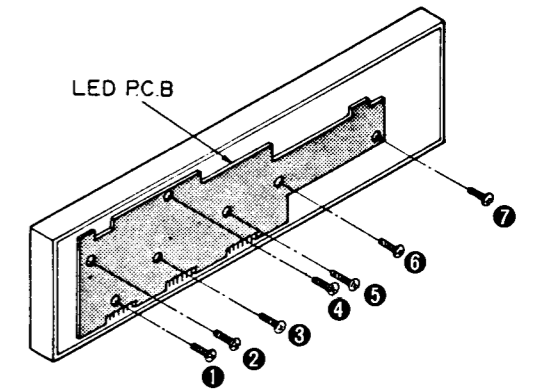


Fig. 3

3. Remove the power switch knob.
4. Remove the 1 screw (8).
5. Remove the power switch P.C.B.

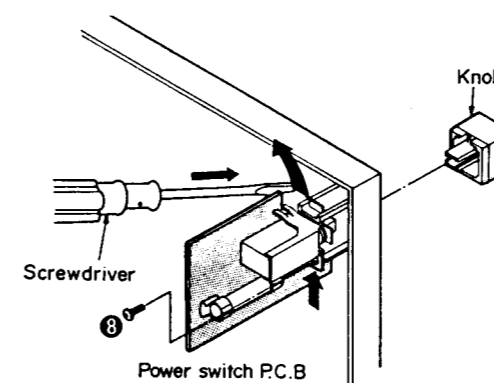


Fig. 4

Remove the knob by pushing it from behind the panel as shown in Fig. 4.

6. Remove the 1 tab.
7. Remove the headphones P.C.B.

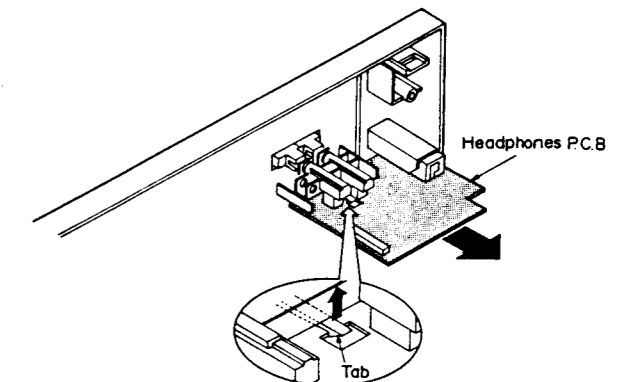


Fig. 5

Ref. No. 3	How to remove the main P.C.B.
----------------------	--------------------------------------

Procedure 3	<ol style="list-style-type: none"> 1. Remove the 10 screws (❶ ~ ❿). 2. Remove the main P.C.B.
-----------------------	---

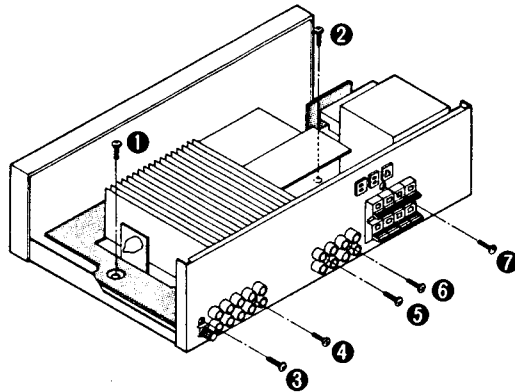


Fig. 6

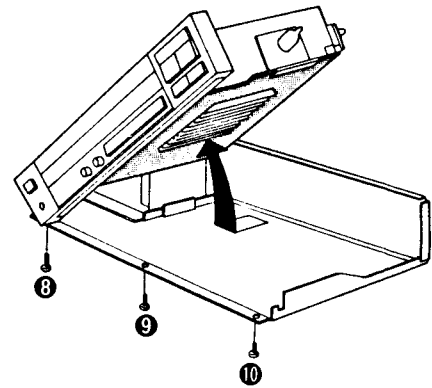


Fig. 7

Ref. No. 4	How to remove the power amplifier IC.
----------------------	--

Procedure 3 → 4	<ol style="list-style-type: none"> 1. Unsolder the power IC. 2. Remove the 2 screws (❶ , ❷). 3. Remove the sub heat-sink. 4. Remove the 2 screws (❸ , ❹).
---------------------------	---

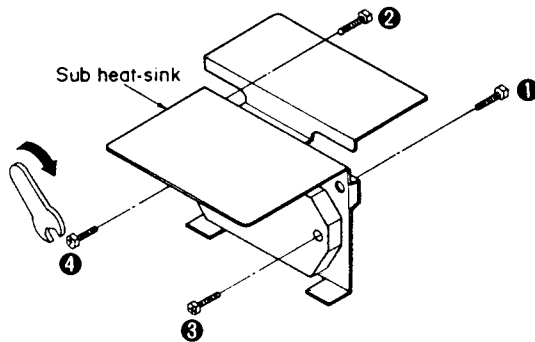


Fig. 8

1. Unsolder the power IC.
2. Remove the 2 screws (❶ , ❷).
3. Remove the sub heat-sink.
4. Remove the 2 screws (❸ , ❹).

● When mounting the power IC, apply silicon thermal compound (SZZOL15 or equivalent) to the rear of the power IC.

Ref. No. 5	How to remove the bottom board.
----------------------	--

Procedure 5	Remove the 11 screws (❶ ~ ❿).
-----------------------	---------------------------------

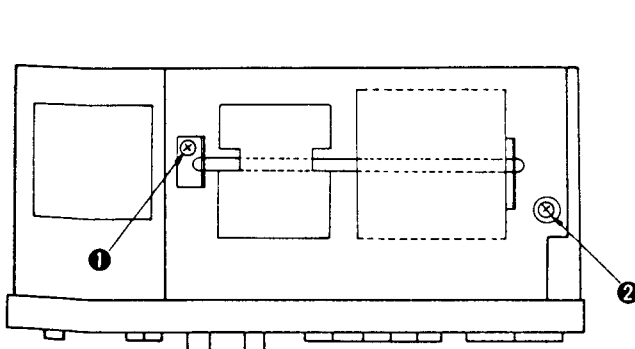


Fig. 9

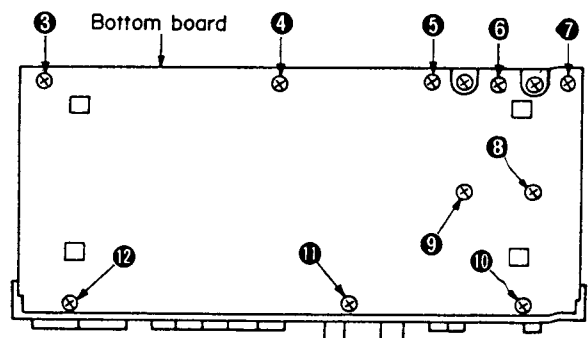


Fig. 10

■ TERMINAL FUNCTION OF LSI

● M50720-408SP (Micro-computer)

Pin No.	Mark	I/O	Function
1	S1	O	Key scan output
2	S2	O	Key scan output
3	REM	I	Remote control data input
4	OSC1	O	Clock oscillation output
5	OSC2	I	Clock oscillation input
6	ST	I	Program start input (hot start at "H")
7	RES	I	Reset signal input (reset at "L")
8	VDD	I	Power supply (connected to +5V)
9	NC	---	Not connected
10	REM	I	Remote control data input
11	NC	---	Not connected
12	DATA	O	Selector and volume control
13	CLK	O	Selector and volume control
14	STB	O	Selector and volume control
15	TAPE2	O	Tape 2 LED display
16	1	O	Volume level LED 1 display
17	2	O	Volume level LED 2 display
18	3	O	Volume level LED 3 display
19	4	O	Volume level LED 4 display
20	---	I	GND terminal
21	---	I	GND terminal
22	5	O	Volume level LED 5 display


Pin No.	Mark	I/O	Function
23	6	O	Volume level LED 6 display
24	7	O	Volume level LED 7 display
25	S.BASS	O	Super bass LED display and super bass control
26	PH	O	Phono LED display
27	TU	O	Tuner LED display
28	CD	O	CD/aux LED display
29	TAPE1	O	Tape 1 LED display
30	CS2	O	Aux 2 LED display
31	MUTE	I	Muting control
32	PWR	I	Power detection (power down mode at "L")
33	STOP	O	Turntable stop control
34	ST	O	Turntable start control
35	REC	I	Deck on-recording signal input
36	PLAY	I	Deck control signal input
37	DECK	O	Deck control signal output
38	K0	I	Key scan input
39	K1	I	Key scan input
40	K2	I	Key scan input
41	K3	I	Key scan input
42	S0	O	Key scan output

● TC9177P (Volume Control)


Pin No.	Mark	I/O	Function
1	VSS	I	Power supply (connected to -B)
2	---	I	Loudness terminal (not used)
3	---	O	Loudness terminal (not used)
4	OUT1	O	10 dB attenuator output
5	IN1	I	10 dB attenuator input
6	GND	I	GND terminal
7	IN2	I	2 dB attenuator input
8	OUT2	O	2 dB attenuator output
9	GND	I	GND terminal
10	CK	I	Clock input
11	DATA	I	Attenuation/channel select data input

Pin No.	Mark	I/O	Function
12	ST	I	Strobe input (attenuation/channel select data input)
13	OTT2	O	2 dB attenuator output
14	IN2	I	2 dB attenuator input
15	GND	I	GND terminal
16	IN1	I	10 dB attenuator input
17	OUT1	O	10 dB attenuator output
18	---	O	Loudness terminal (not used)
19	---	I	Loudness terminal (not used)
20	VDD	I	Power supply (connected to +B)

EXPLODED VIEW

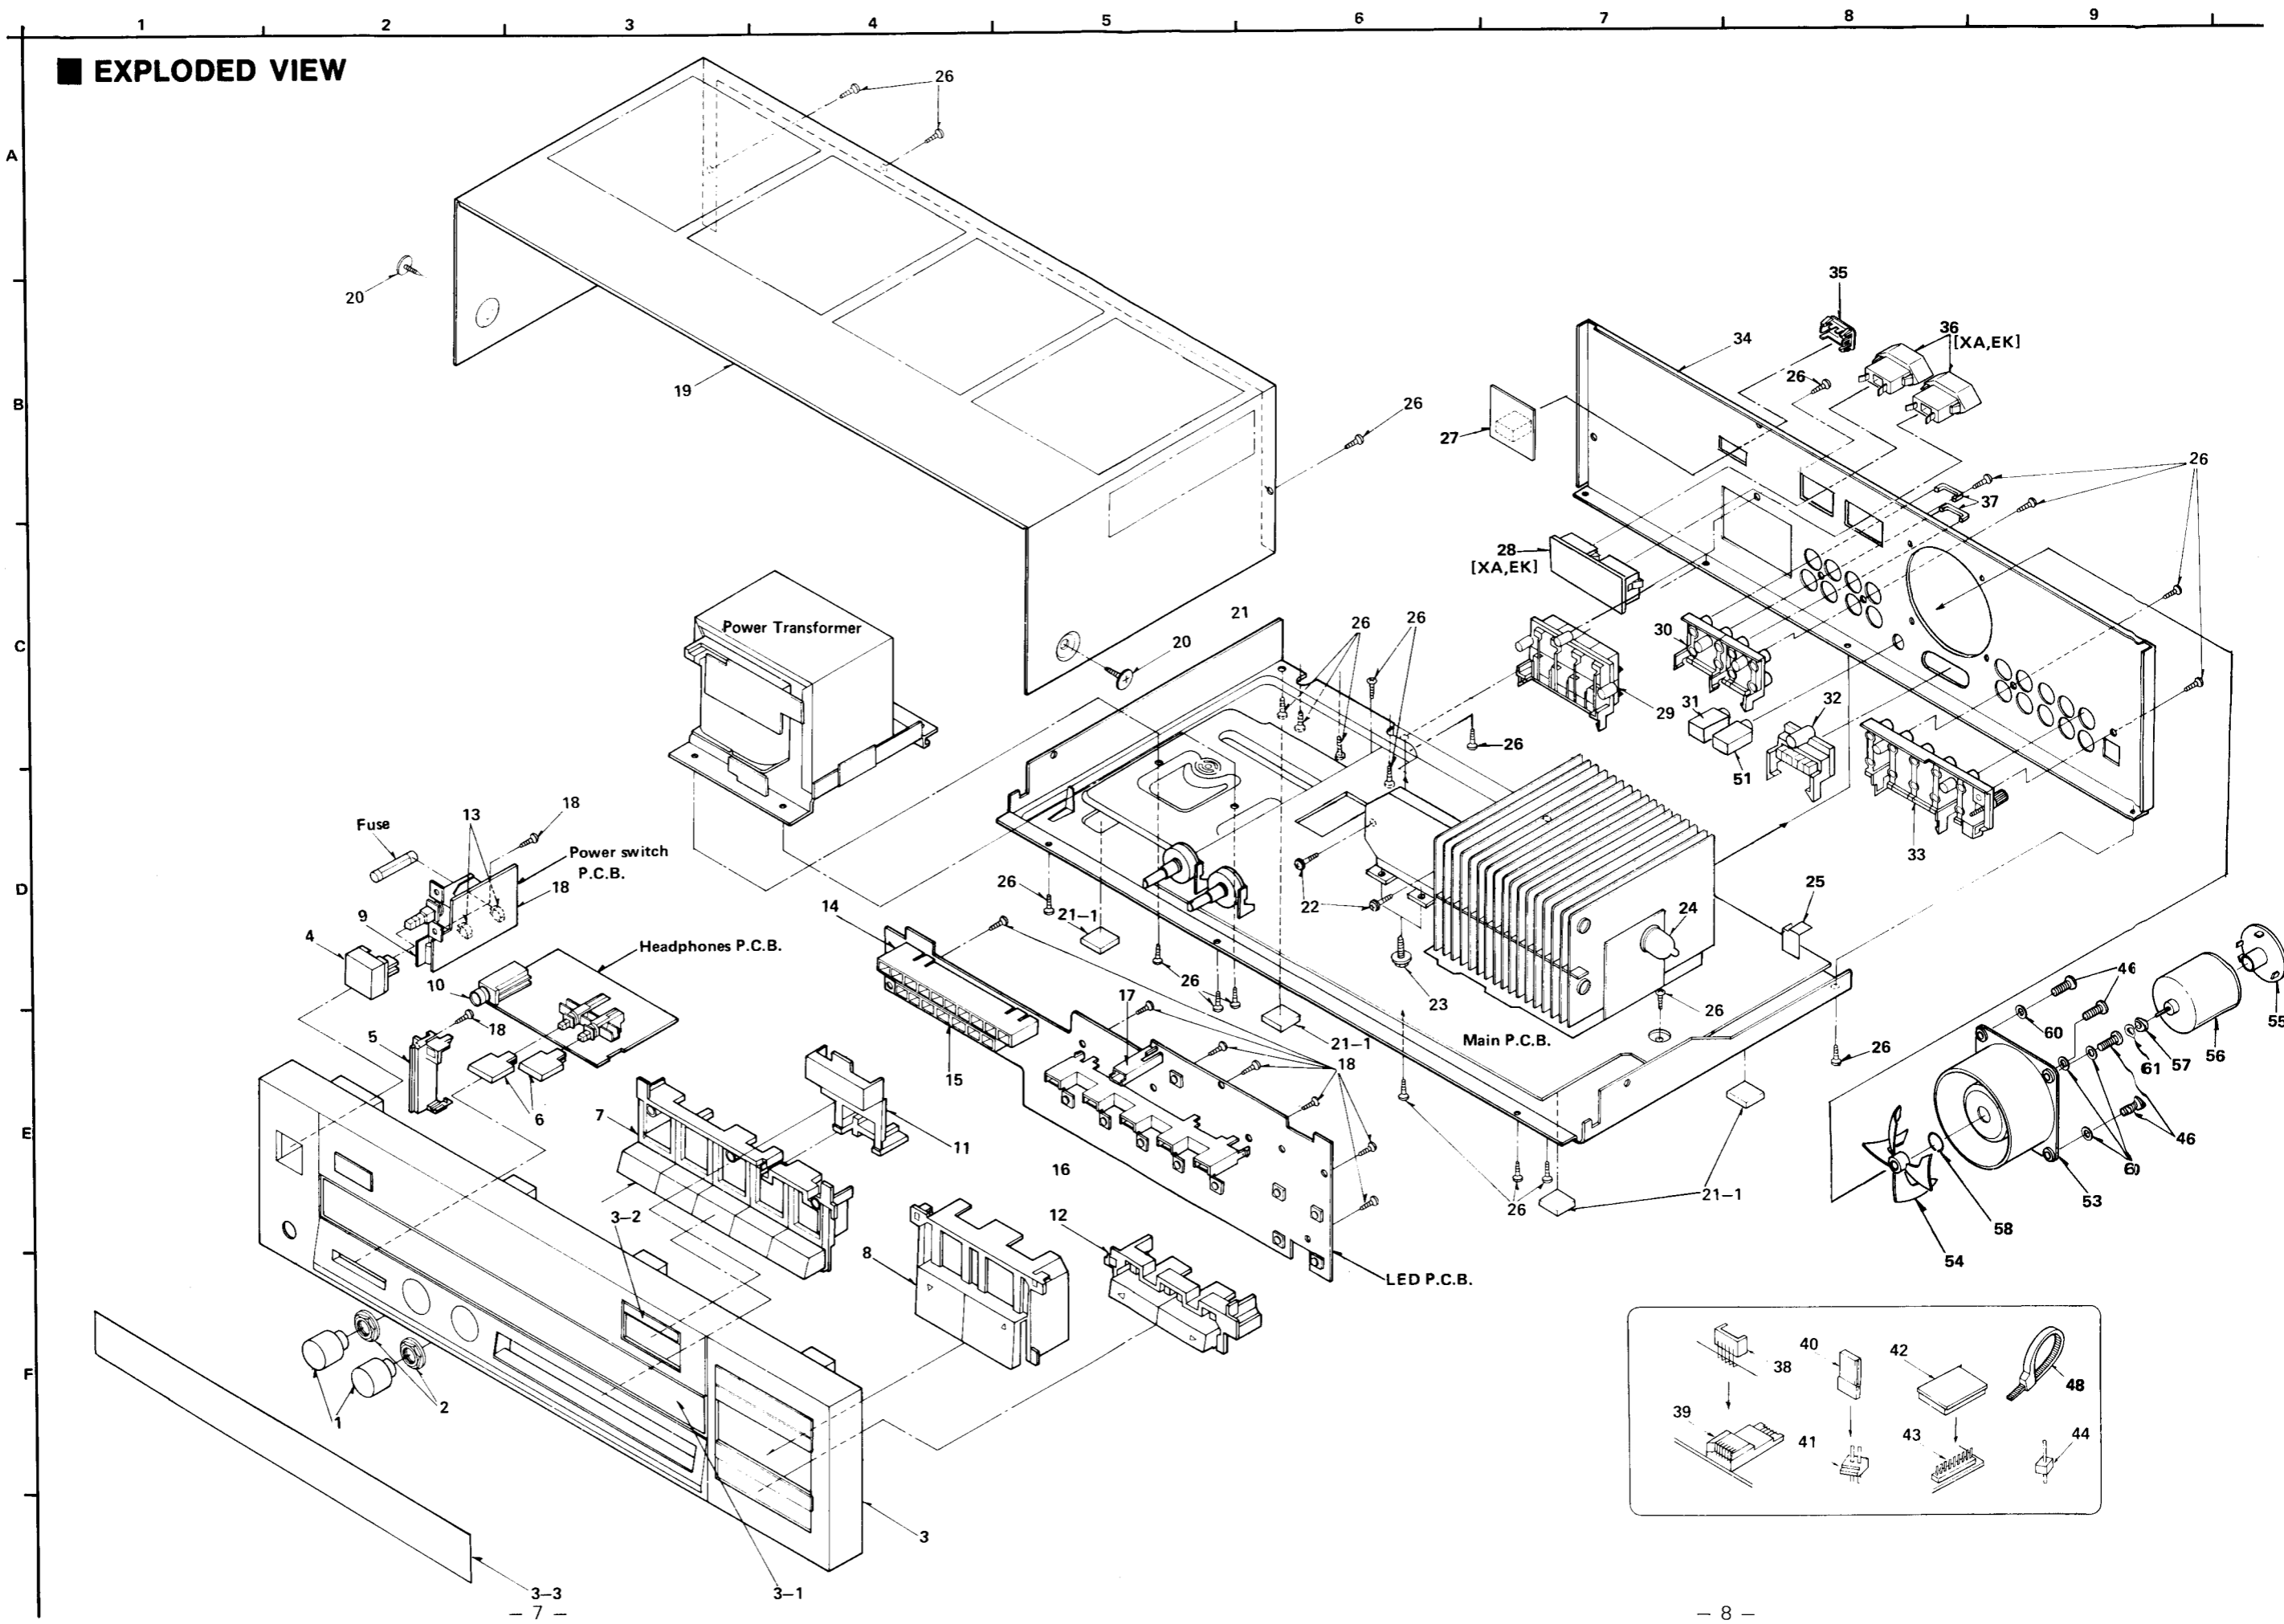


BLOCK DIAGRAM


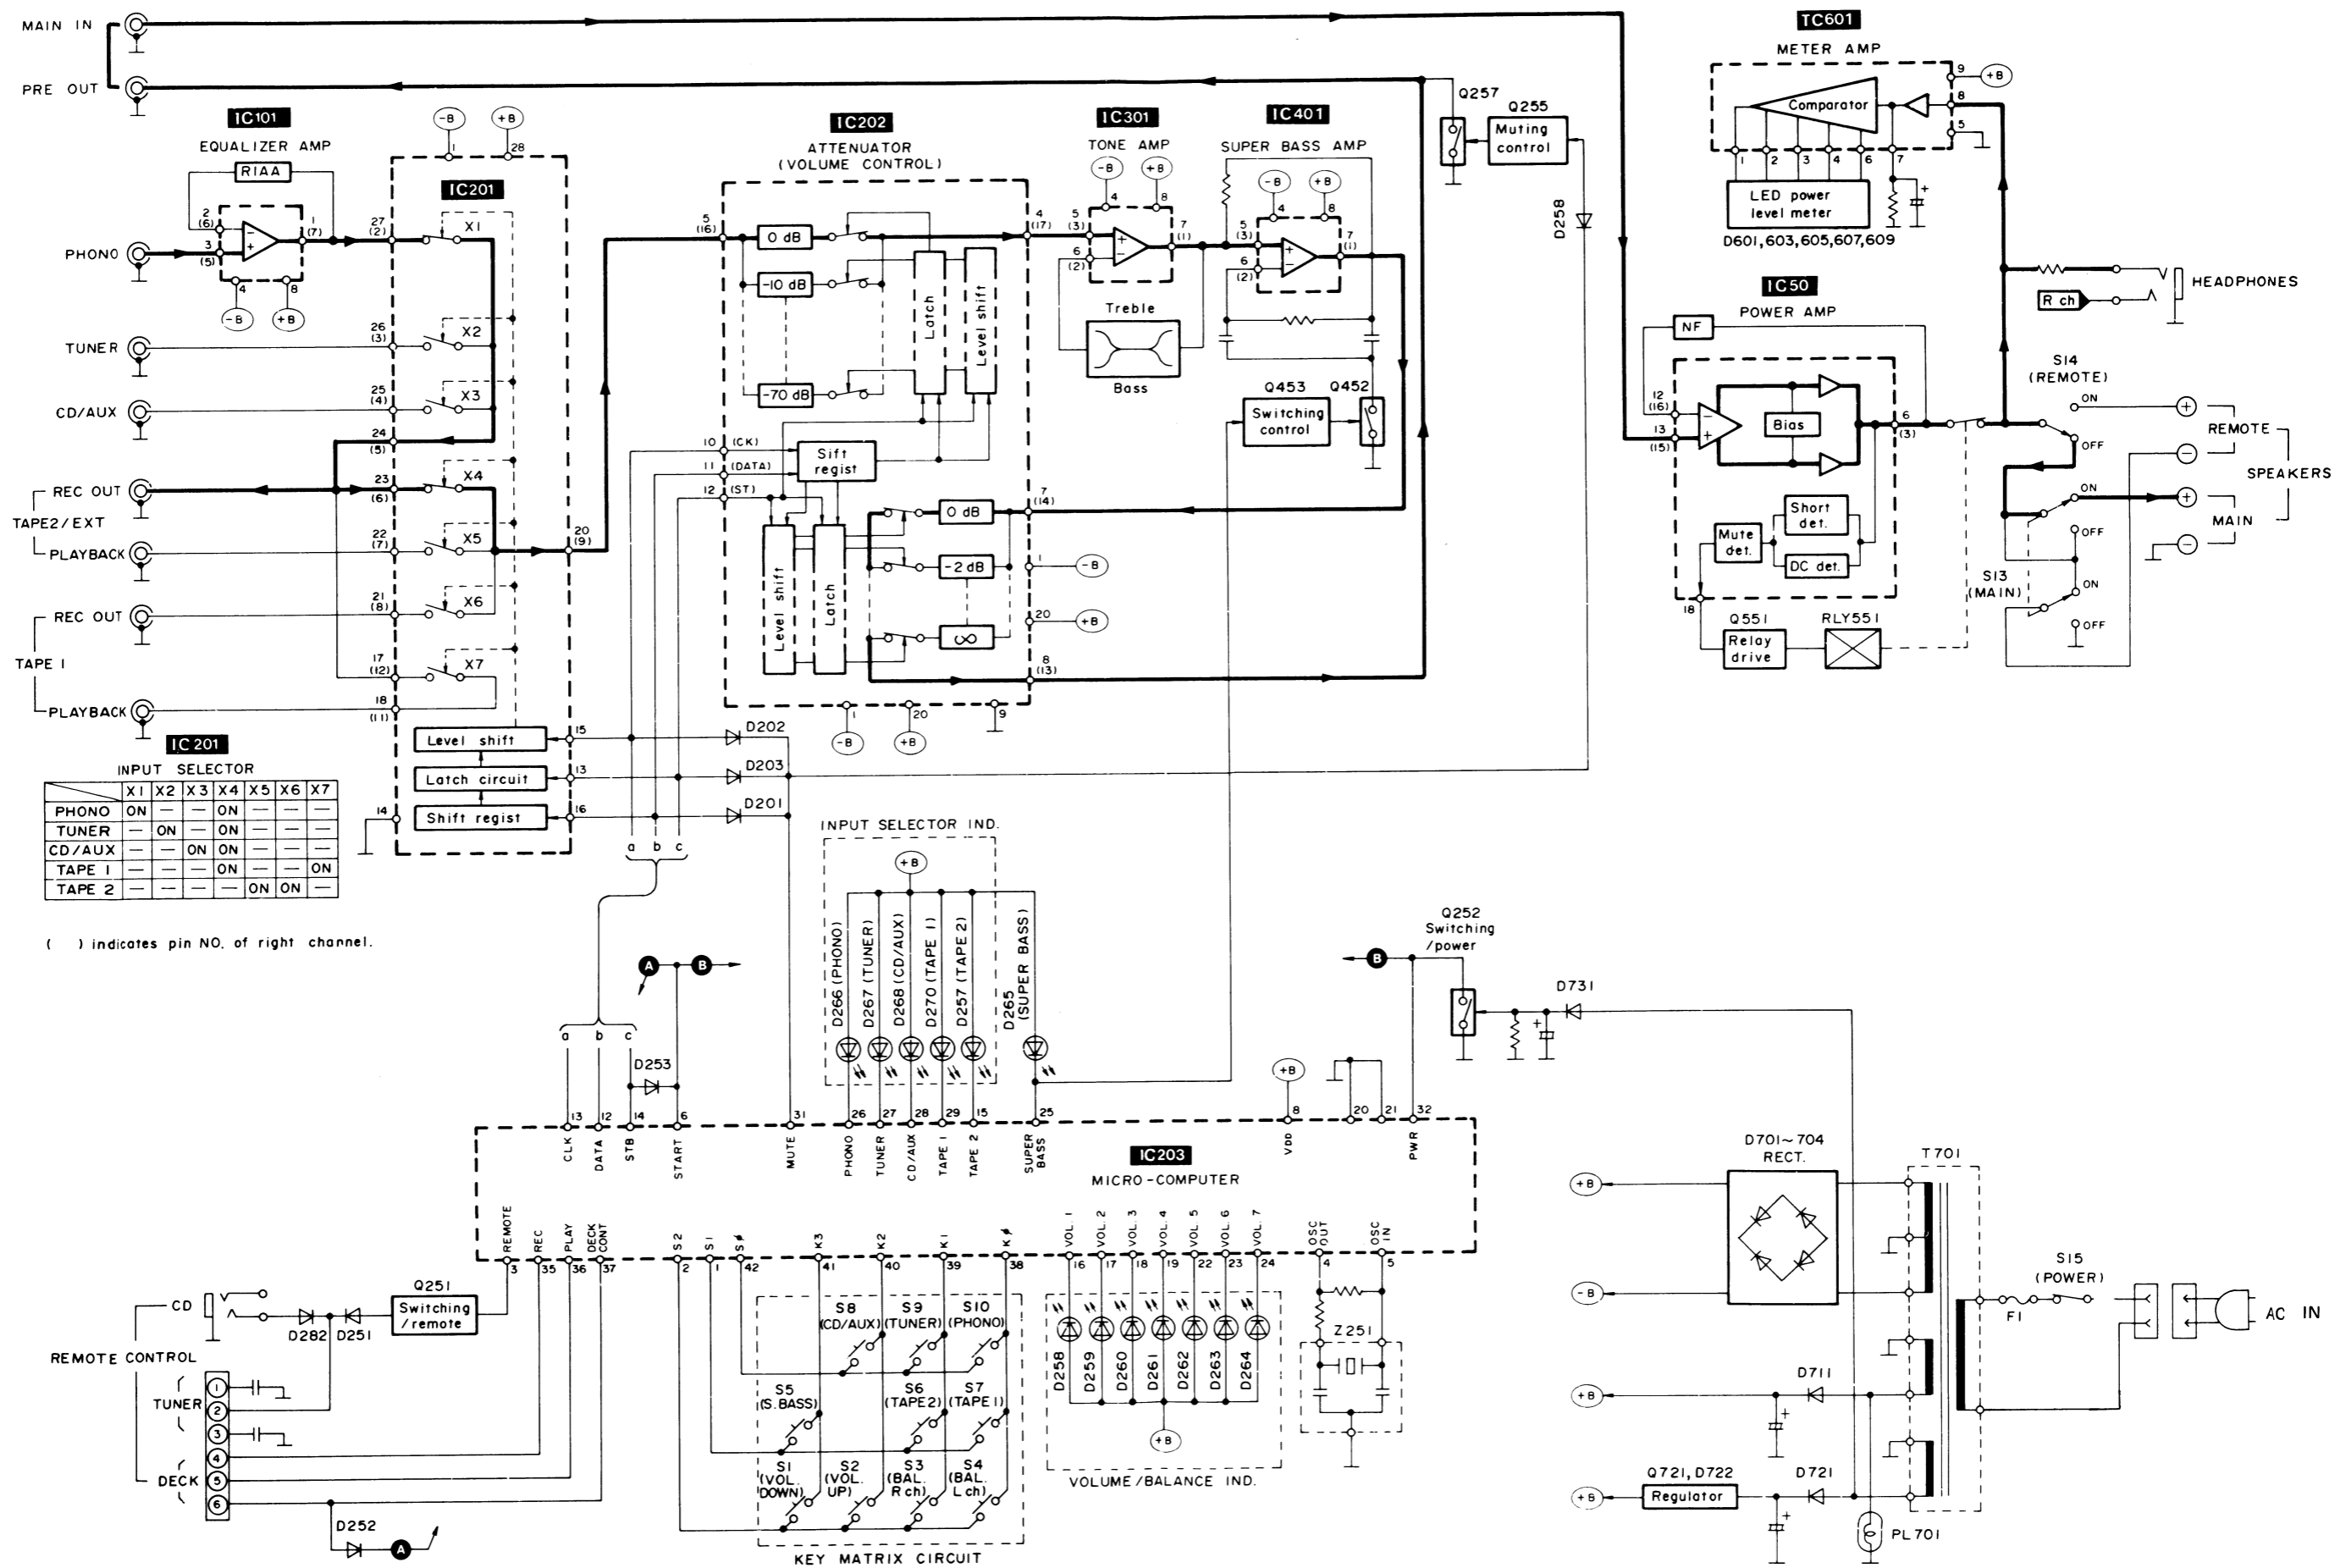






CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

A
B
C
D
E
F

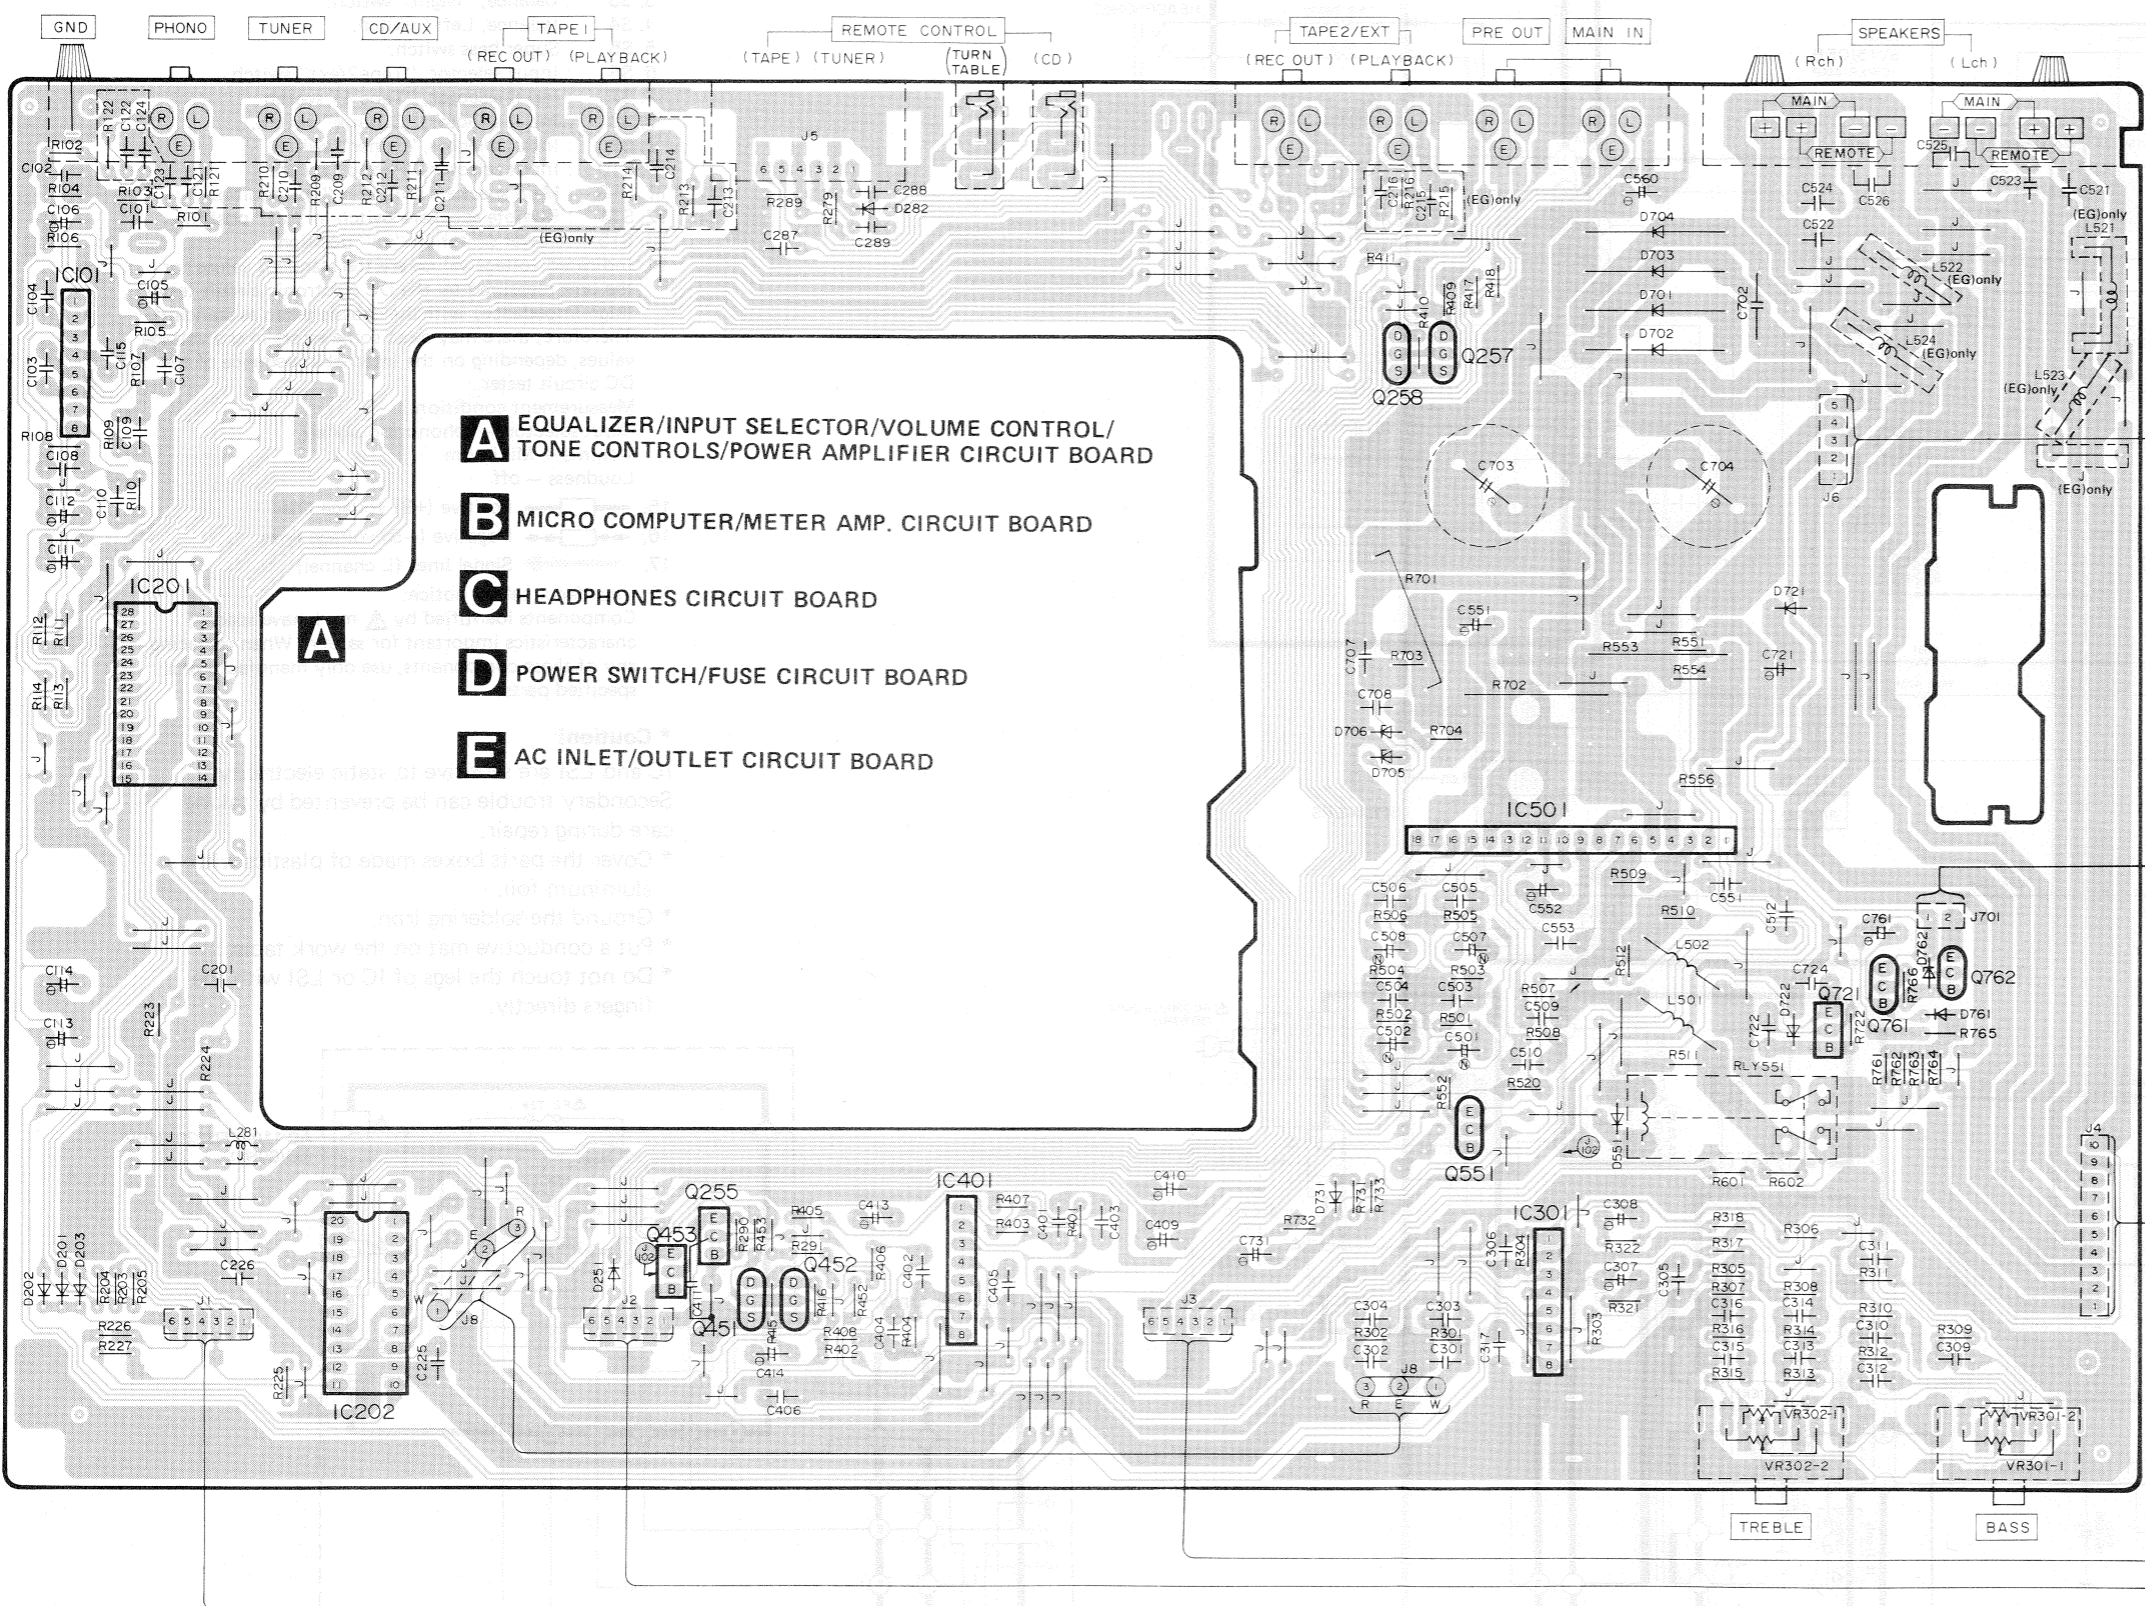


- A** EQUALIZER/INPUT SELECTOR/VOLUME CONTROL/TONE CONTROLS/POWER AMPLIFIER CIRCUIT BOARD
- B** MICRO COMPUTER/METER AMP. CIRCUIT BOARD
- C** HEADPHONES CIRCUIT BOARD
- D** POWER SWITCH/FUSE CIRCUIT BOARD
- E** AC INLET/OUTLET CIRCUIT BOARD

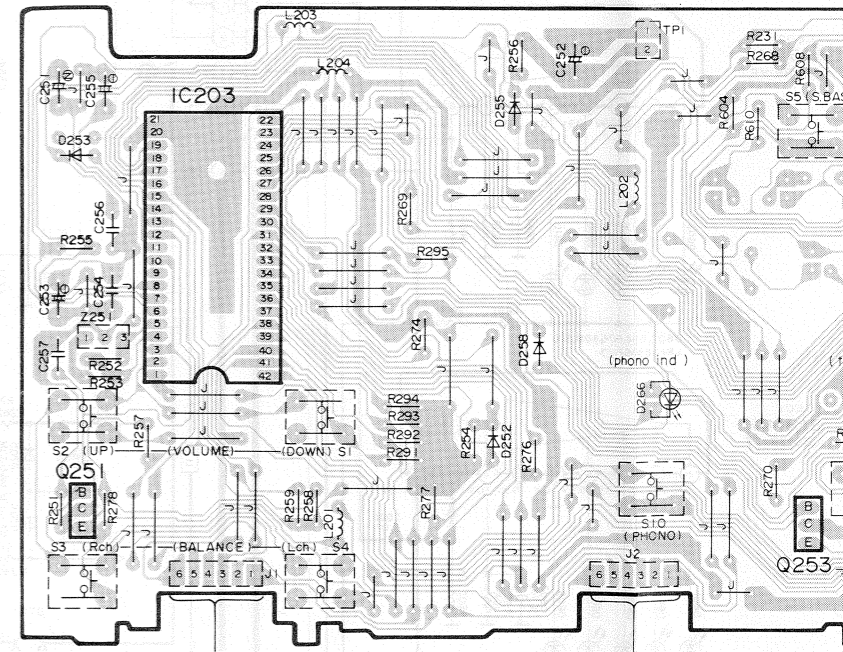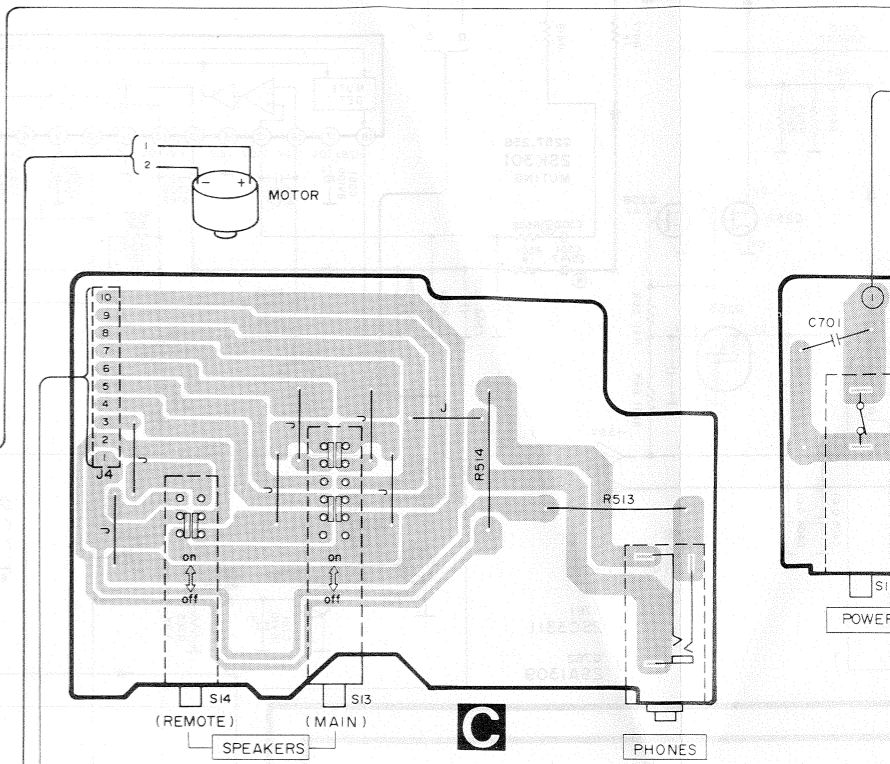


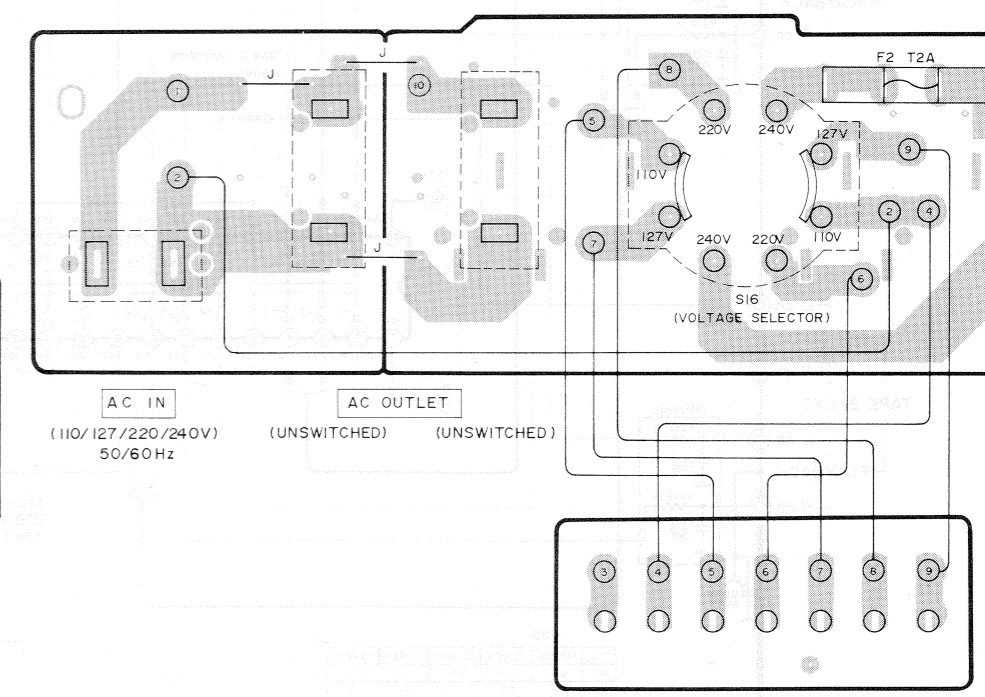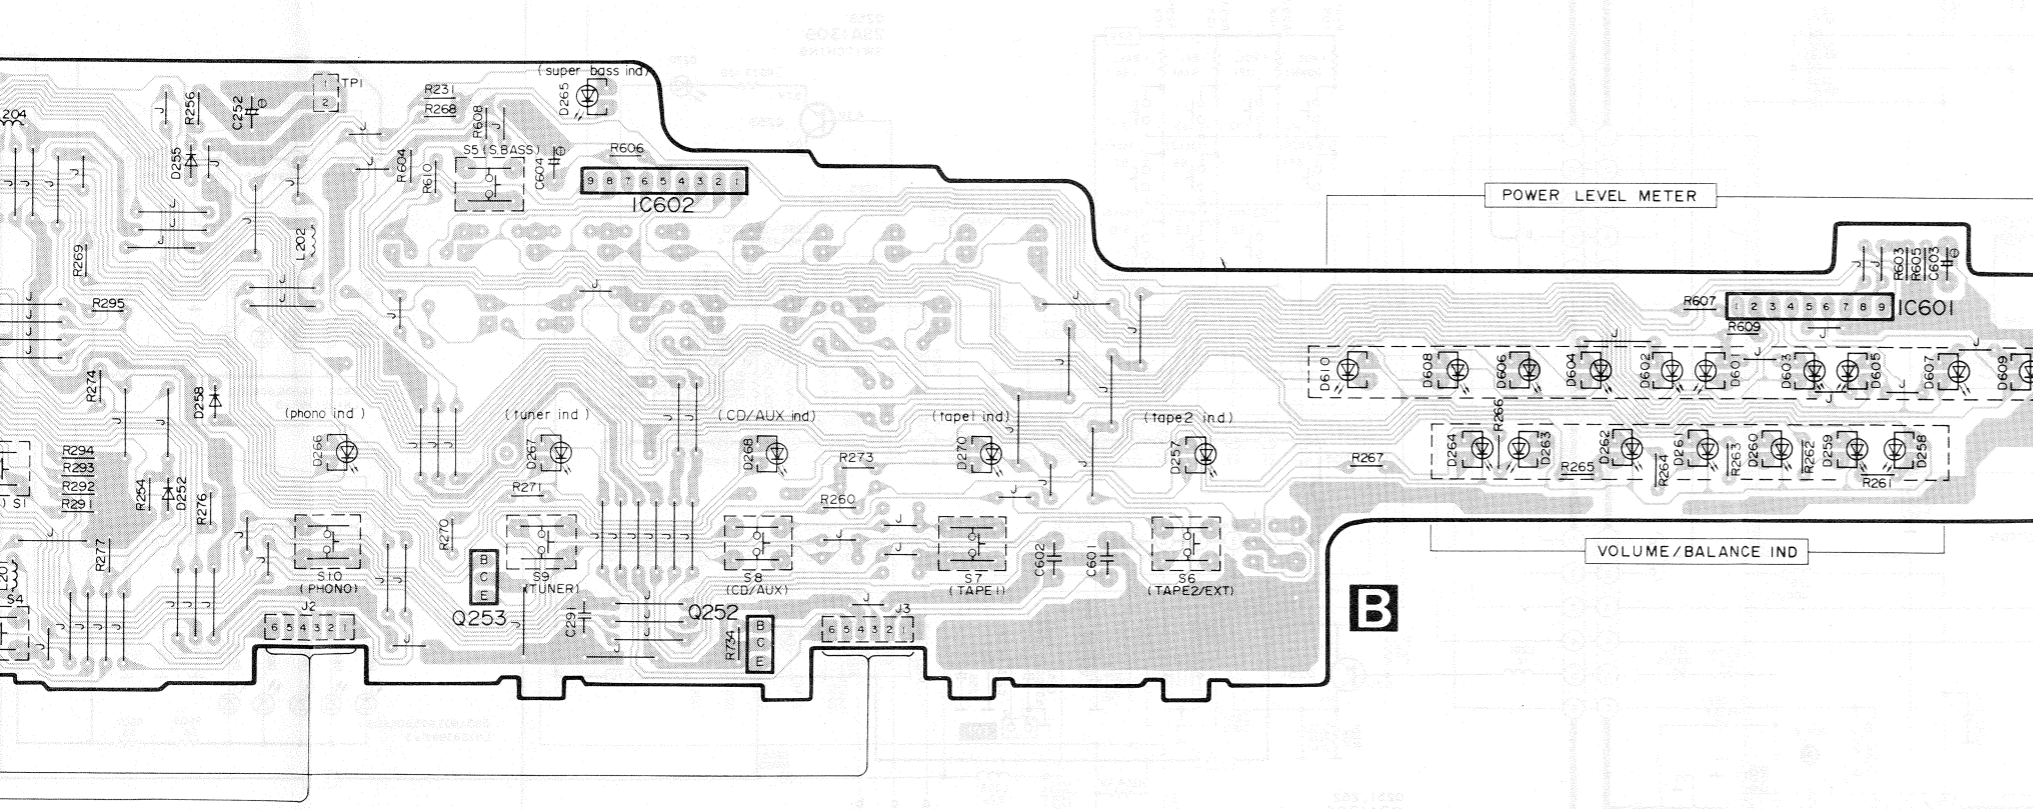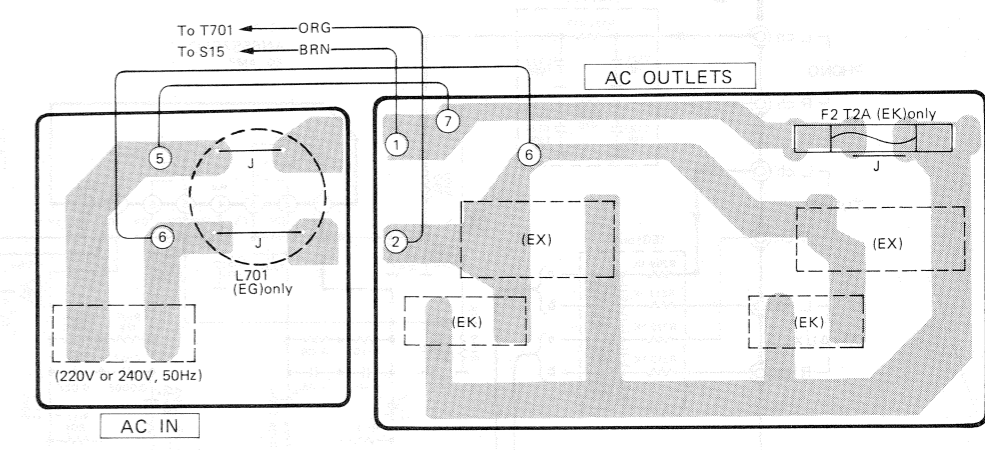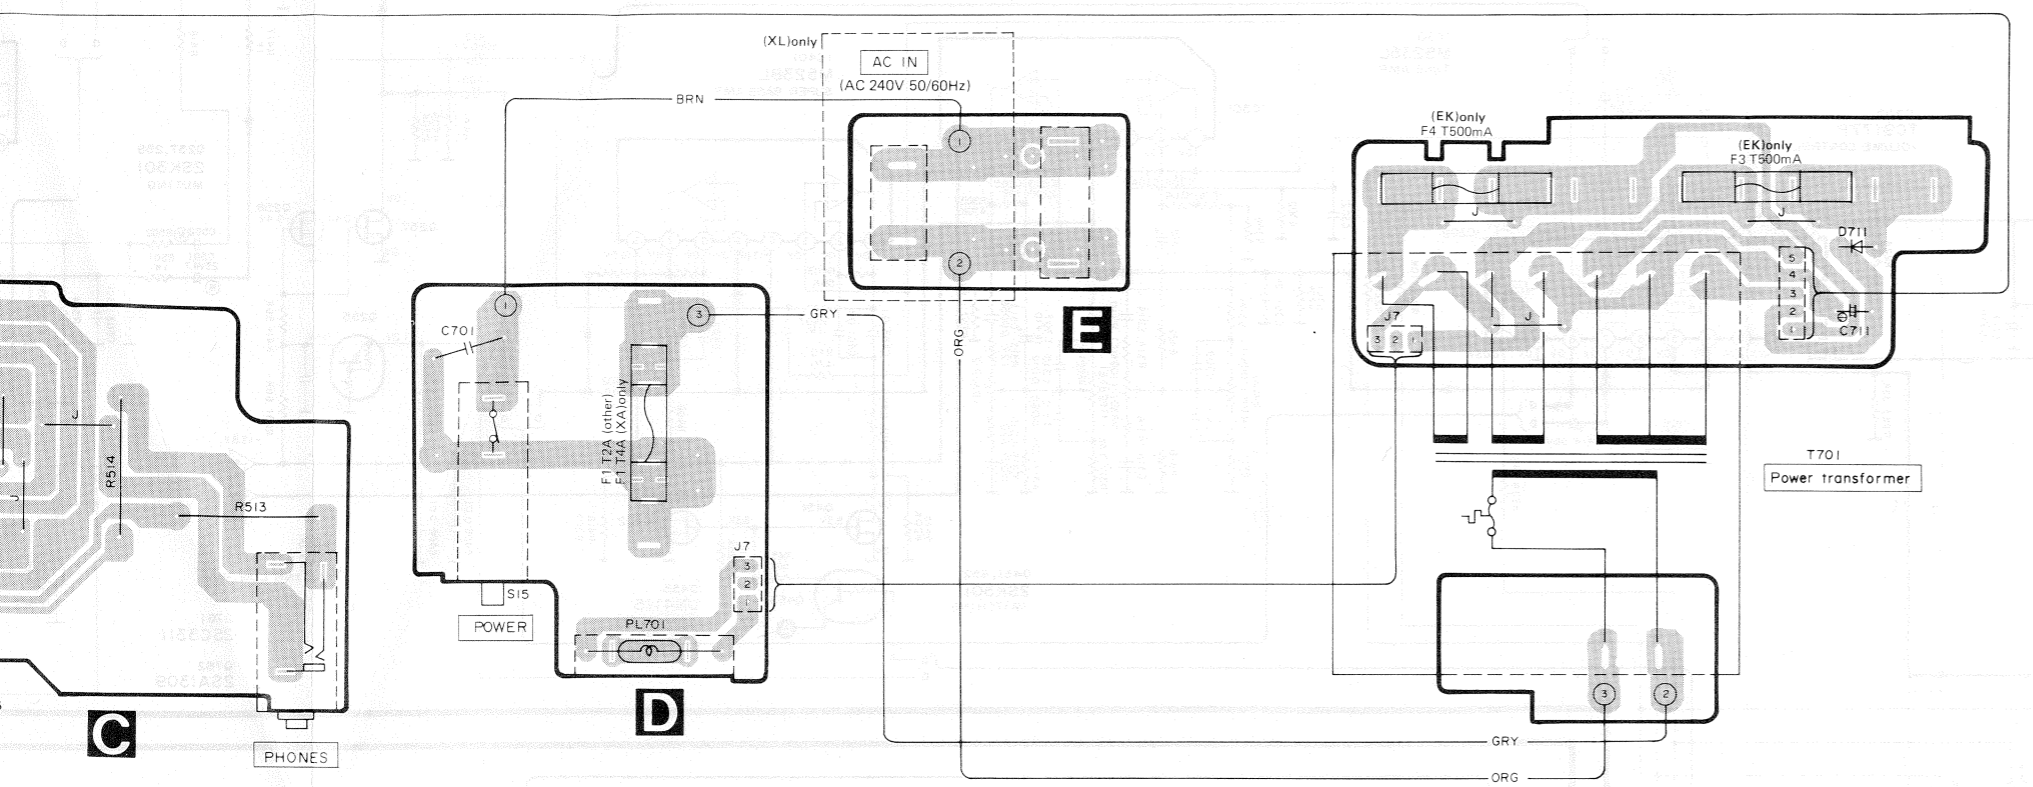

SCHEMATIC DIAGRAM

A
B
C
D
E
F
O

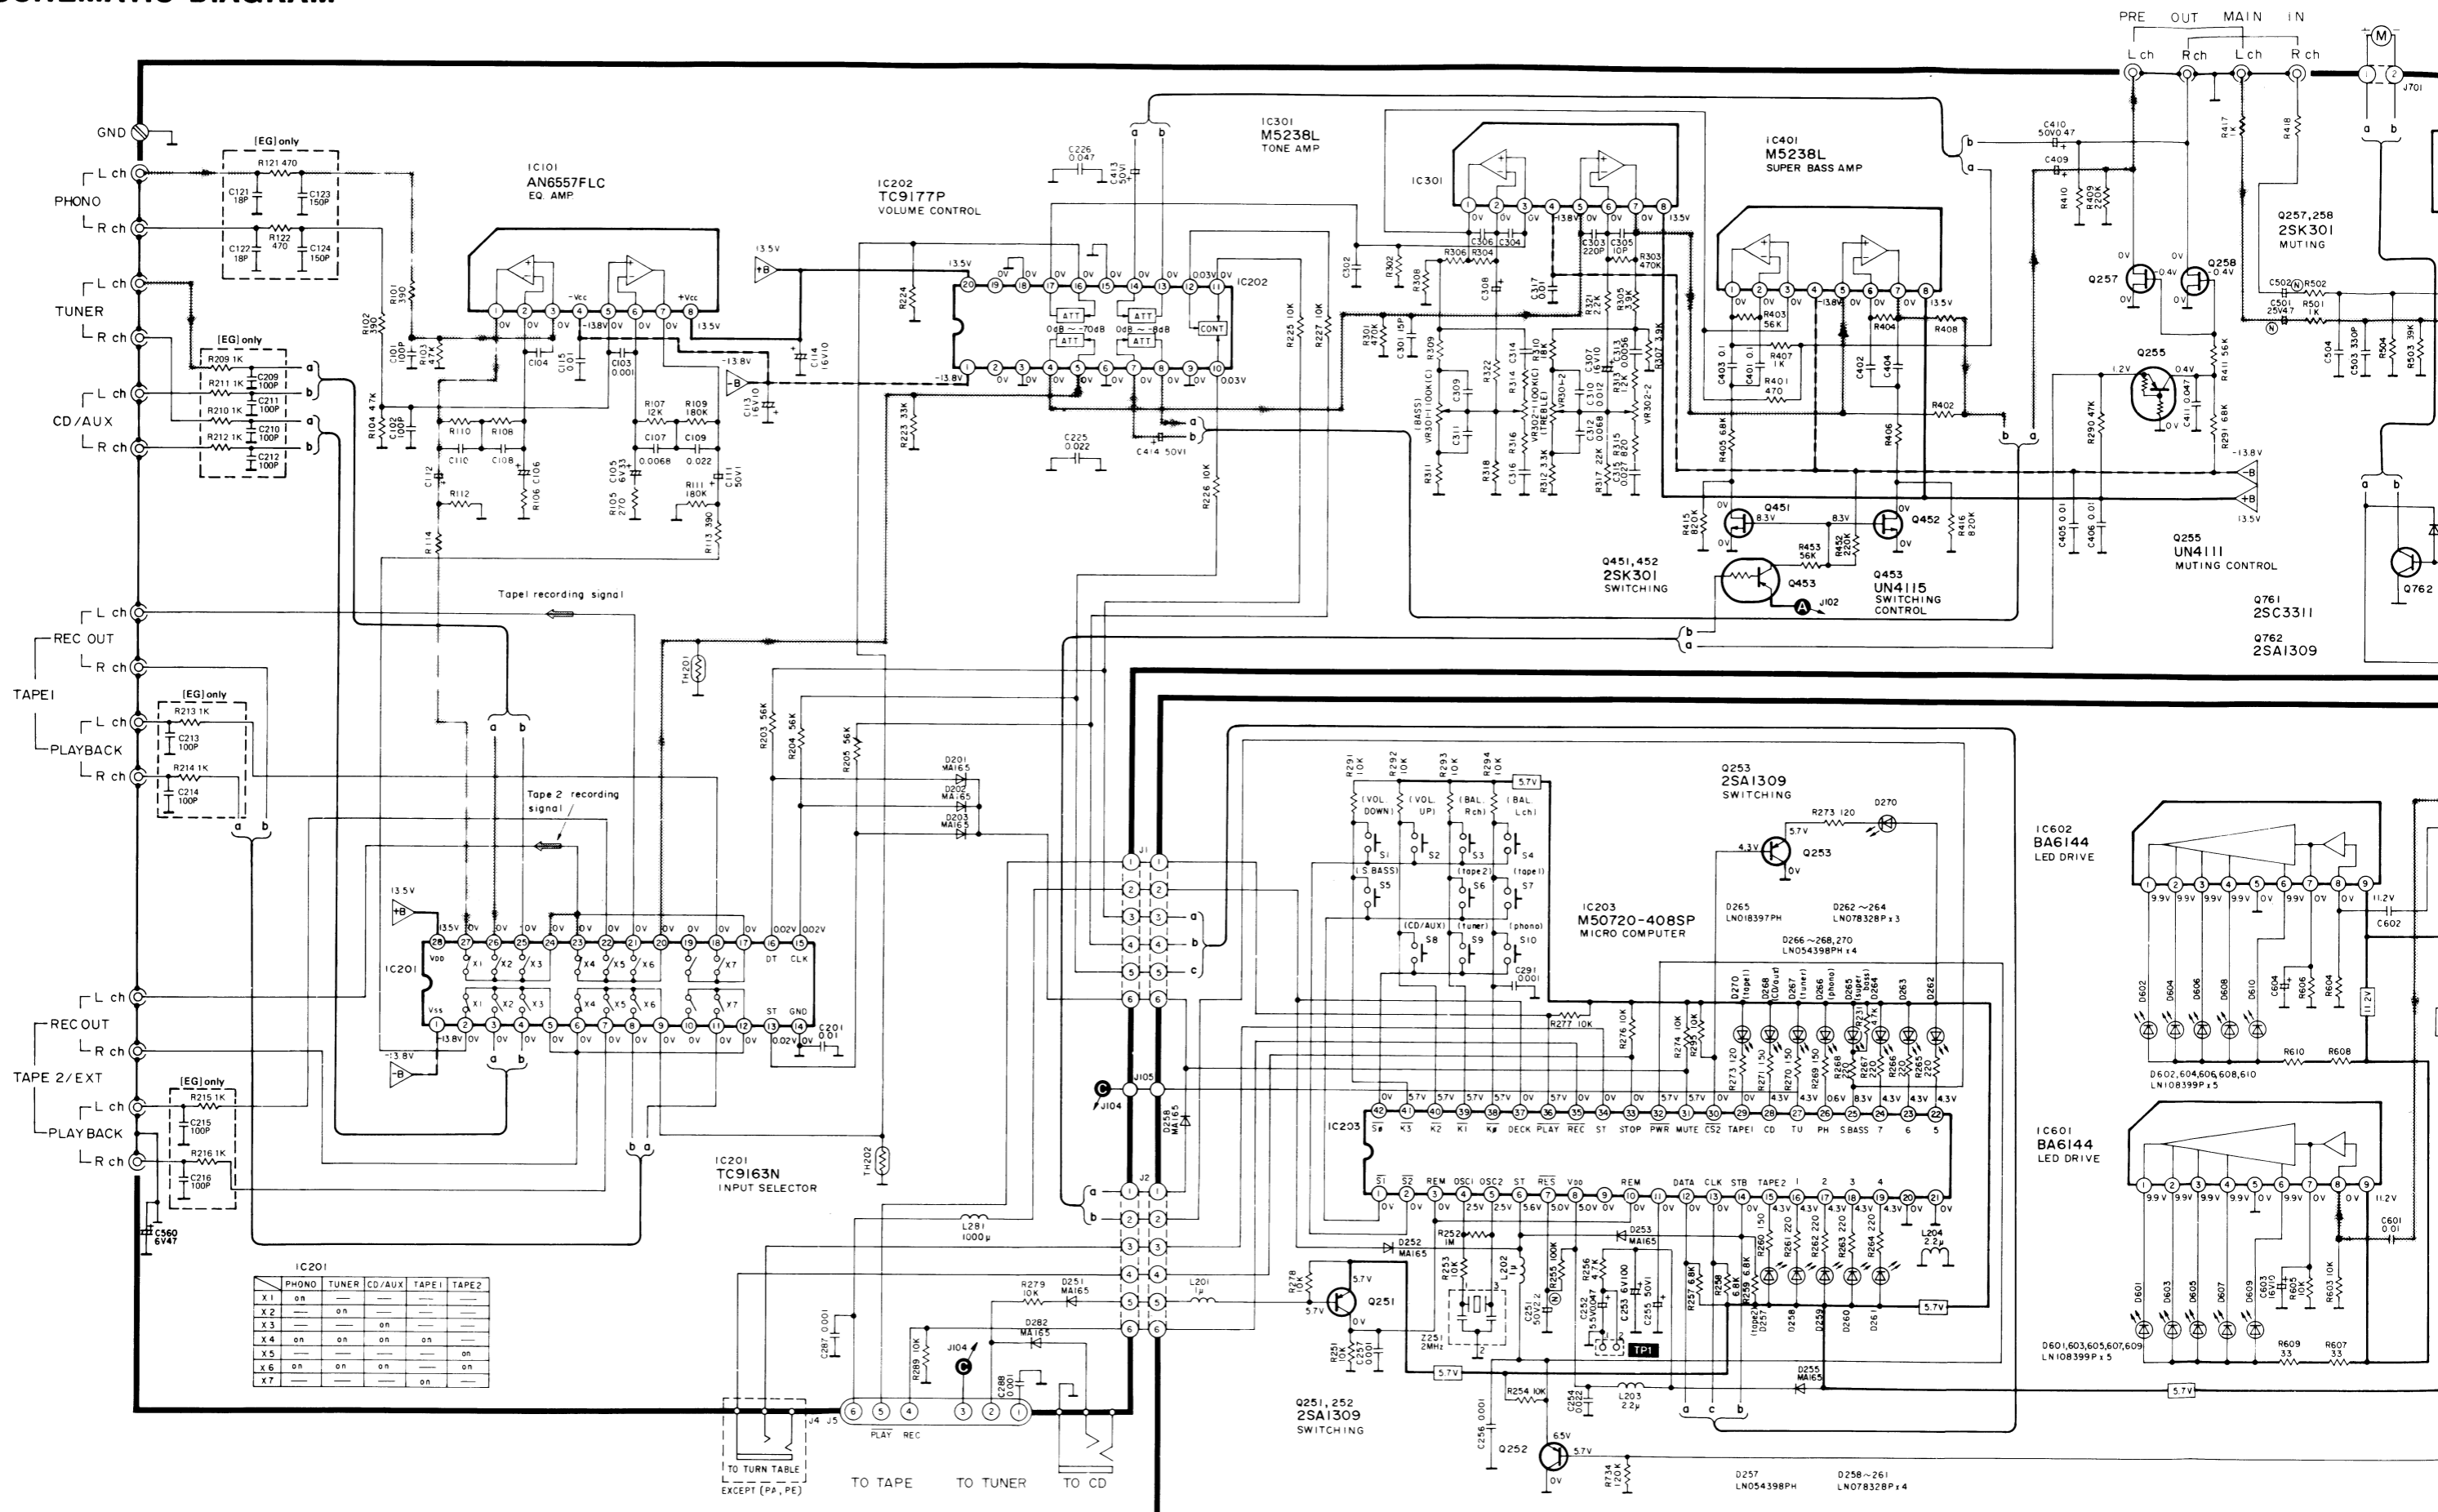

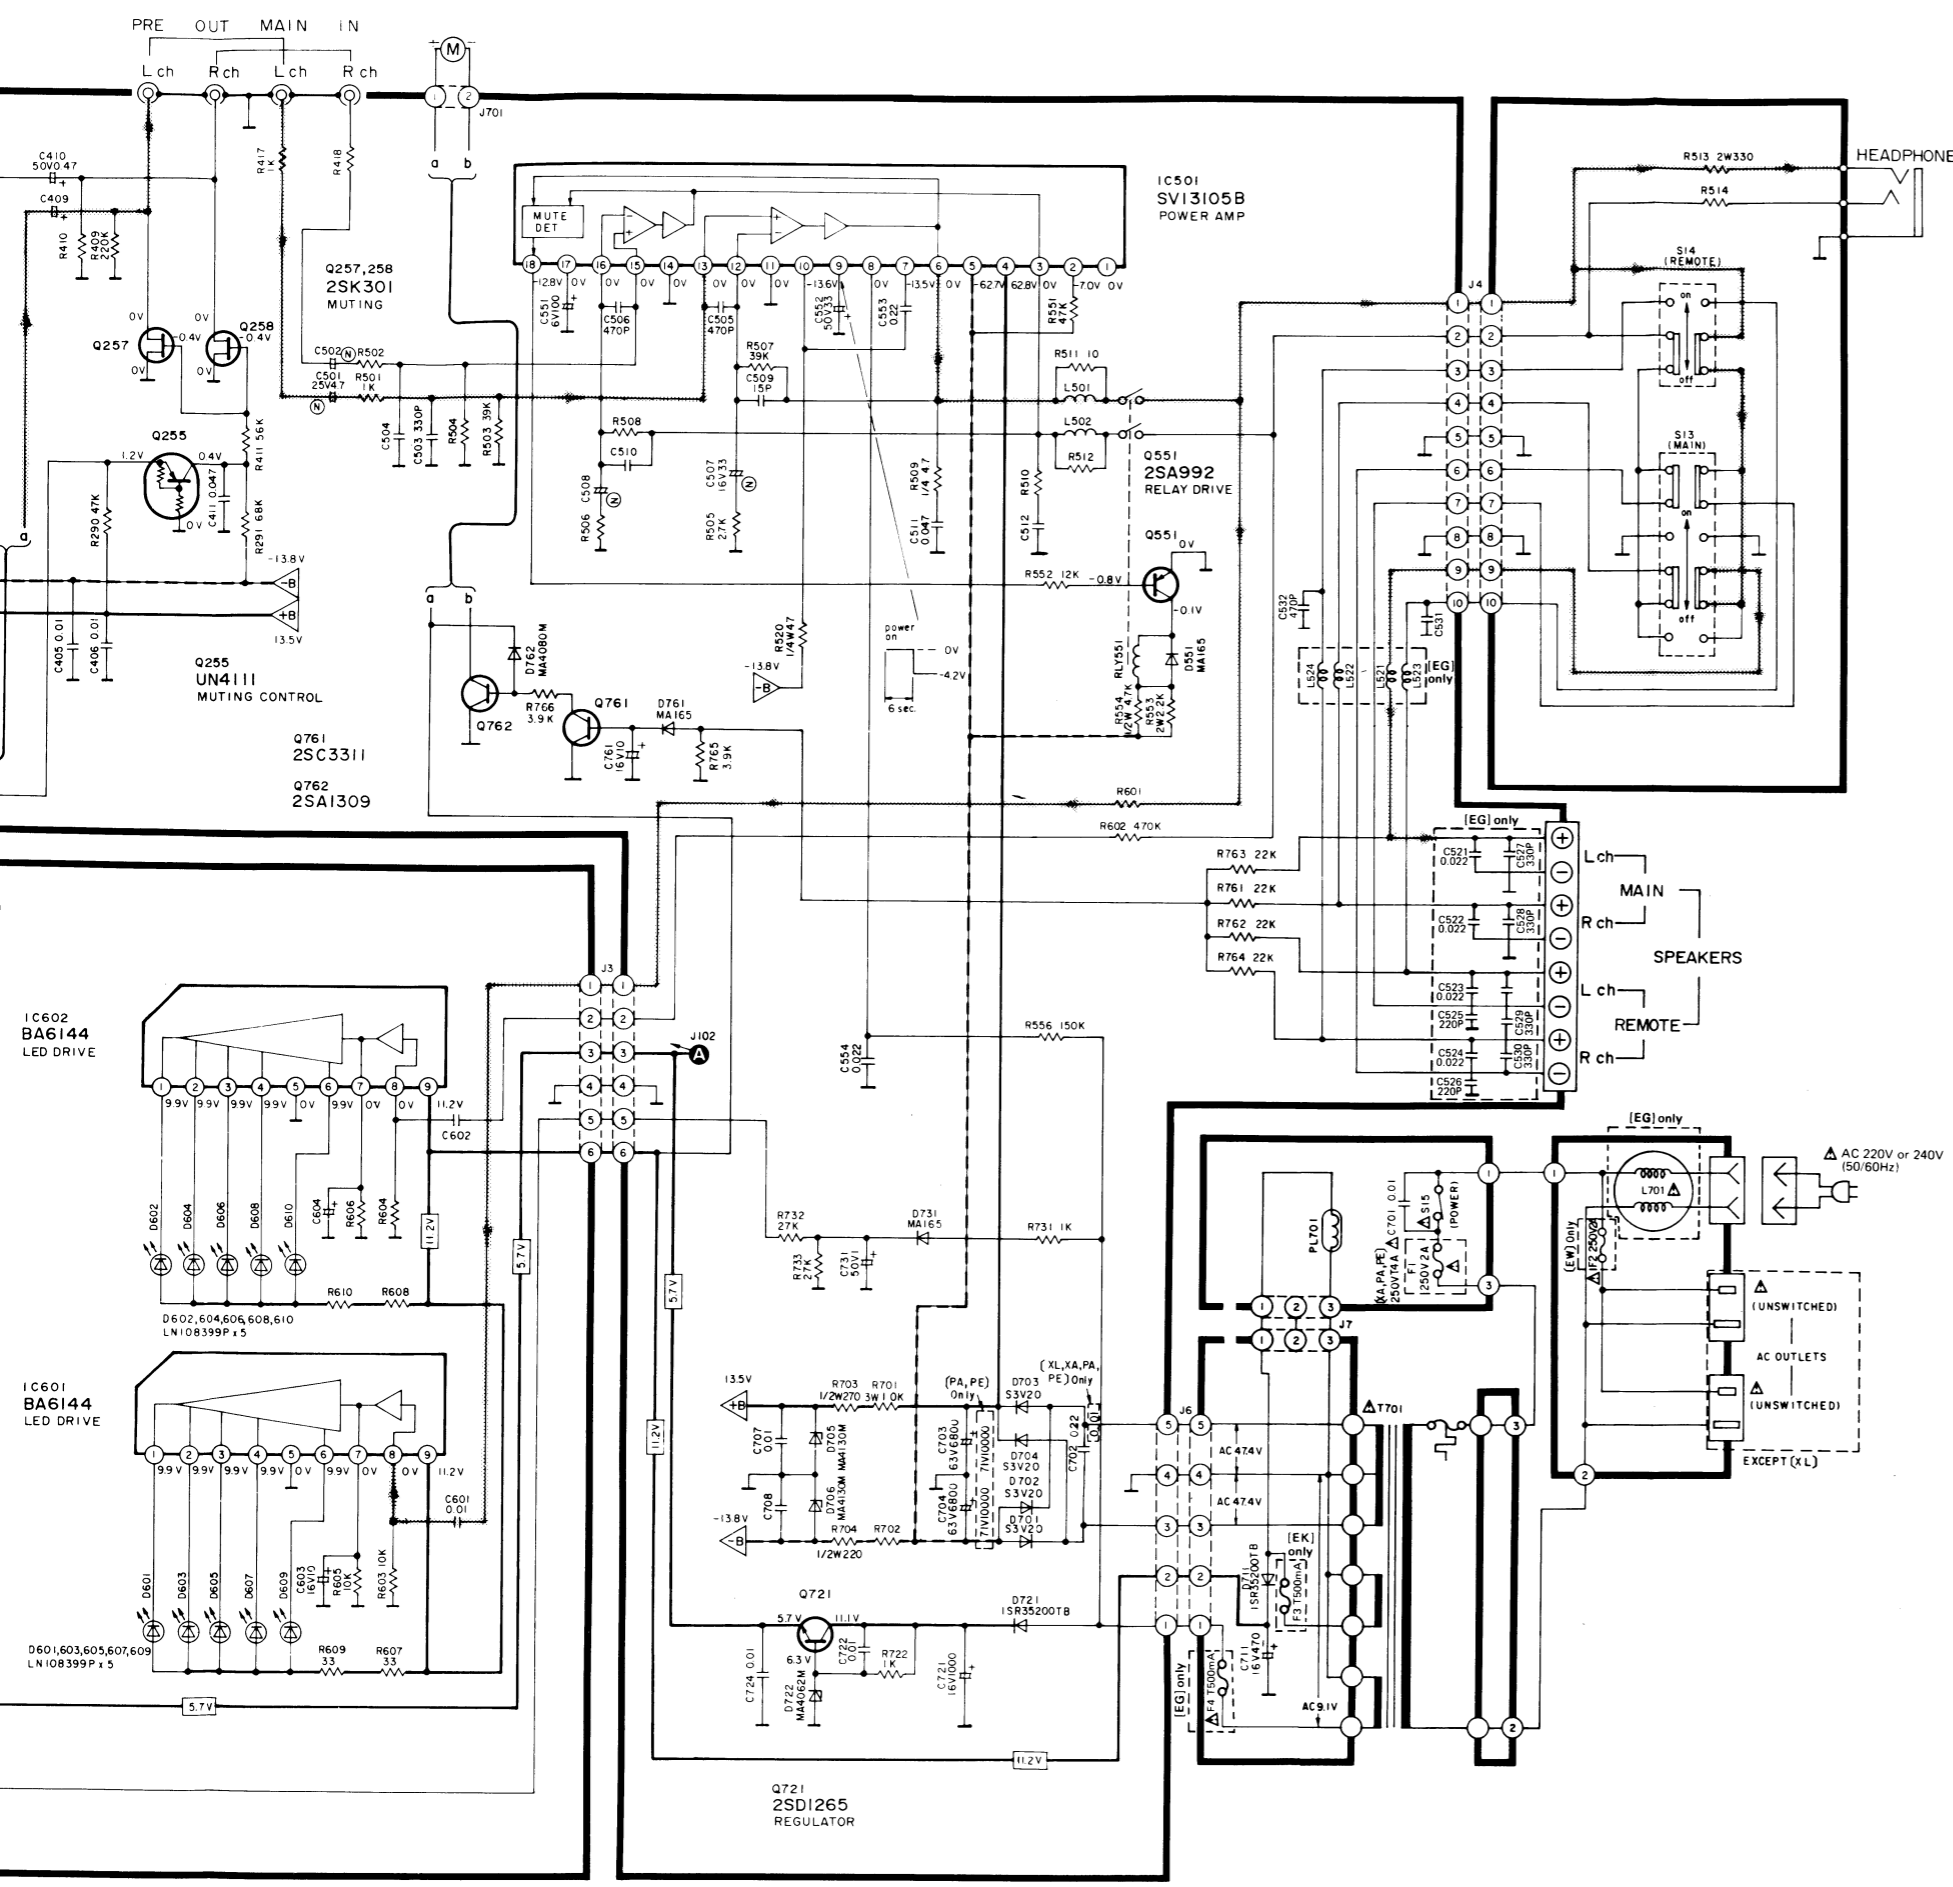

(This schematic diagram may be modified at any time with the development of new technology.)

Notes:

1. S1 : Volume, "Down" switch.
2. S2 : Volume, "Up" switch.
3. S3 : Balance, "Right" switch.
4. S4 : Balance, Left" switch.
5. S5 : Super bass switch.
6. S6 : Input selector, "Tape2/ext" switch.
7. S7 : Input selector, "Tape 1" switch.
8. S8 : Input selector, "CD/aux" switch.
9. S9 : Input selector, "Tuner" switch.
10. S10 : Input selector, "Phono" switch.
11. S13 : Main speakers switch in "on" position.
12. S14 : Remote speakers switch in "off" position.
13. S15 : Power switch in "on" position.
14. Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
Measurement condition:
Input selector - phono (no signal)
Volume - Minimum
Loudness - off

- 15: Positive (+B) voltage lines
- 16: Negative (-B) voltage lines
- 17: Signal lines (L channel)

18. Impedance safety notice:
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

* Caution!

- IC and LSI are sensitive to static electricity. Secondary trouble can be prevented by taking care during repair.
- * Cover the parts boxes made of plastics with aluminum foil.
- * Ground the soldering iron.
- * Put a conductive mat on the work table.
- * Do not touch the legs of IC or LSI with the fingers directly.

