

Service Manual


Stereo Integrated Amplifier

Amplifier

SU-Z990

Color

(K) ... Black Type

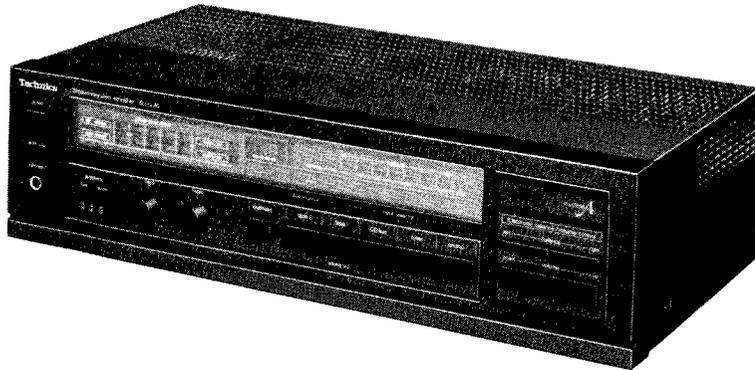

Color	Area
(K)	[E] Continental Europe
(K)	[EH] Holland
(K)	[EB] Belgium
(K)	[EF] France
(K)	[EK] United Kingdom
(K)	[EG] F.R. Germany
(K)	[Ei] Italy
(K)	[XL] Australia
(K)	[XA] Asia, Latin America, Middle Near East, Africa & Oceania

SU-Z990

SPECIFICATIONS

(DIN 45 500)

■ AMPLIFIER SECTION

40 Hz~20 kHz continuous power output both channels driven	2 × 85W (8Ω)
1 kHz continuous power output both channels driven	2 × 100W (8Ω)
Total harmonic distortion	
rated power at 40 Hz~20 kHz	0.09% (8Ω)
rated power at 1 kHz	0.05% (8Ω)
half power at 1 kHz	0.03% (8Ω)
Intermodulation distortion	
rated power at 60 Hz: 7 kHz=4:1, SMPTE, 8Ω	0.09%
Power bandwidth	
both channels driven, -3 dB	10 Hz~20 kHz (8Ω, 0.09%)
Damping factor	40 (8Ω)
Input sensitivity and impedance	
PHONO	2.5 mV/47kΩ
TUNER, CD/AUX	150 mV/47kΩ
TAPE 1, 2/EXT	150 mV/47kΩ
PHONO maximum input voltage (1 kHz, RMS)	140 mV
S/N	
rated power (8Ω)	
PHONO	70 dB (IHF, A: 70 dB)
TUNER, CD/AUX, TAPE 1, 2/EXT	70 dB (IHF, A: 90 dB)
Frequency response	
PHONO	RIAA standard curve ±0.8 dB (30 Hz~15 kHz)
TUNER, CD/AUX, TAPE 1, 2/EXT	10 Hz~60 kHz (-3 dB)
Tone controls	
BASS	50 Hz, +10 dB~-10 dB
TREBLE	20 kHz, +10 dB~-10 dB
Loudness control (volume at -30 dB)	50 Hz, +9 dB

Muting (using the remote-control transmitter)	--20 dB
Output voltage	
REC OUT	150 mV
Channel balance, CD/AUX 250 Hz~6,300 Hz	±1 dB
Channel separation, CD/AUX 1 kHz	50 dB
Headphones output level and impedance	670 mV/330Ω
Load impedance	
MAIN or REMOTE	8Ω~16Ω
MAIN and REMOTE	8Ω~16Ω

■ GENERAL

Power consumption	470W
Power supply	
For Australia and United Kingdom	AC 50 Hz/60 Hz, 240V
For continental Europe	AC 50 Hz/60 Hz, 220V
For others	AC 50 Hz/60 Hz, 110V/127V/220V/240V
Batteries	DC 3V (2 "AA" size batteries, R6 or equivalent)
Dimensions (W×H×D)	430 × 119 × 240 mm (16-15/16" × 4-11/16" × 9-7/16")
Weight	7.1 kg (15.6 lb.)

Note:

Total harmonic distortion is measured by the digital spectrum analyzer (H.P. 3045 system).

Specifications are subject to change without notice for further improvement.

Technics

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan





NOTES :

1. The power of the tuner and tape deck in this system are supplied through the amplifier. When servicing these components, prepare an each model or an external power supply (servicing power JIG Part No. : SZZA1058C).
(For how to use the JIG, refer to the Service Manual of tuner.)
2. Prepare a transmitter and an amplifier when checking each model of system for its performance using the remote control.


CONTENTS

	Page		Page
ACCESSORIES	2	SCHMATIC DIAGRAM OF REMOTE CONTROL	
LOCATION OF CONTROLS	2, 3	TRANSMITTER	14
CONNECTIONS	4	KEY NUMBER DESCRIPTION AND DATA CODE OF	
PROTECTION CIRCUITRY	4	REMOTE CONTROL TRANSMITTER	14
BEFORE REPAIR AND ADJUSTMENT	4	SCHMATIC DIAGRAM	15 ~ 20
DISASSEMBLY INSTRUCTIONS	5	BLOCK DIAGRAM	21, 22
FUNCTION OF IC TERMINALS	6 ~ 8	REPLACEMENT PARTS LIST	23 ~ 26
(IC202, IC251, IC252, IC201)		EXPLODED VIEW	24 ~ 26
CIRCUIT BOARDS & WIRING CONNECTION DIAGRAM	9 ~ 13		

ACCESSORIES
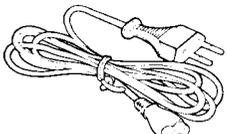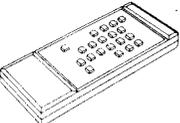
<ul style="list-style-type: none"> • AC power supply cord 1 	<ul style="list-style-type: none"> • Connection cable for remote-control 1 	<ul style="list-style-type: none"> • Plug (SJP5219-1) 	<ul style="list-style-type: none"> • Plug adaptor (SJP9215) 
<ul style="list-style-type: none"> • Flat cable for remote-control 1 	<ul style="list-style-type: none"> • Batteries 2 	<ul style="list-style-type: none"> • Remote-control transmitter .. 1  <p>Transmitter ass'y is not supply for replacement part.</p>	

LOCATION OF CONTROLS

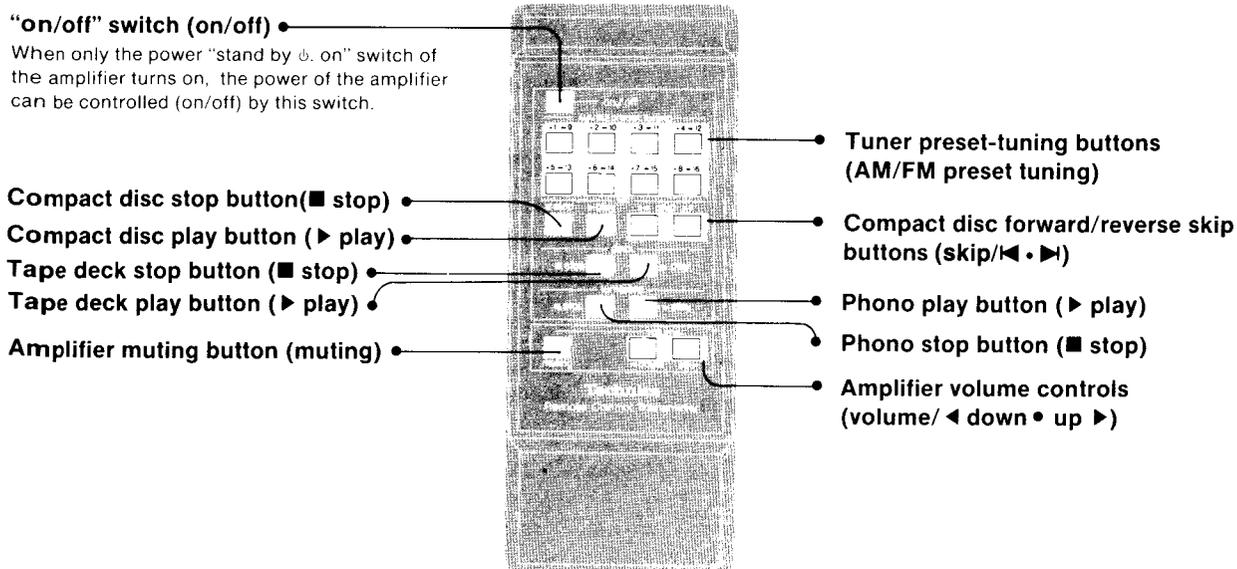

Power "stand by" switch/indicator

This switch turns on and off the secondary circuit power only. The unit is in the "stand-by" condition when this switch is set to the "stand by" position. Regardless of the switch setting, the primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

When the power is turned on, the program source which was heard when the power was last turned off can be heard.

Peak-power meters

Note:

If speaker systems with an impedance of 8 ohms are connected, the actual value can be read directly. If, however, the impedance is 16 ohms, the actual output value is 1/2 of the indicated value.


$$\text{Actual output} = \frac{\text{indicated value} \times 8 \Omega}{\text{speaker impedance} (\Omega)}$$

Volume/balance level indicator


This indicator usually shows the volume level; when the balance control is pressed, however, the position of balance level is displayed for five seconds, after which the display returns again to indication of the volume level. When the amplifier muting button on the remote-control transmitter is pressed, the indicator corresponding to the maximum displayed volume level point will flash.

Remote-control signal receptor (remote sensor)

Balance controls

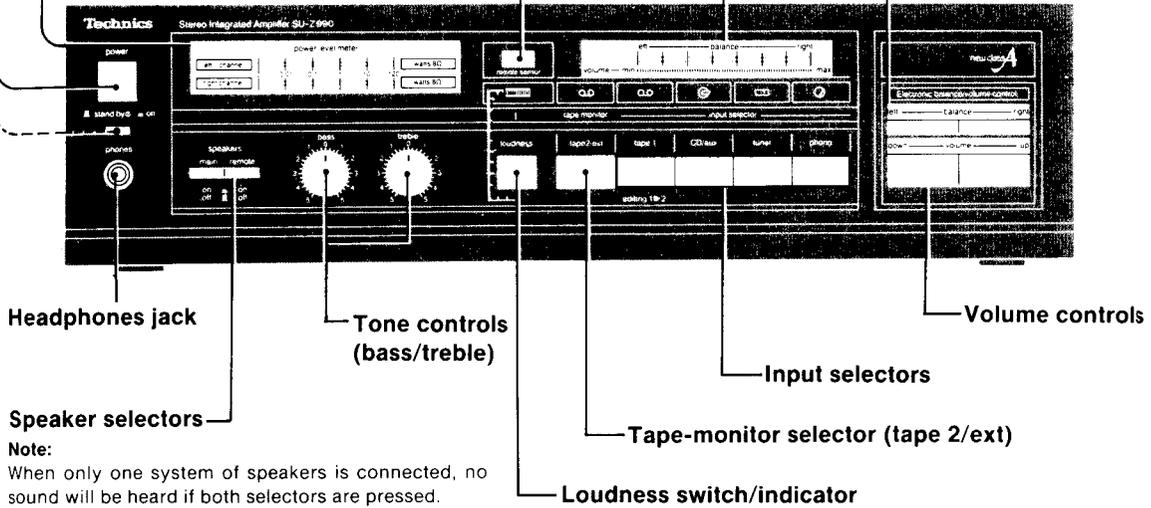


Note:
When only one system of speakers is connected, no sound will be heard if both selectors are pressed.

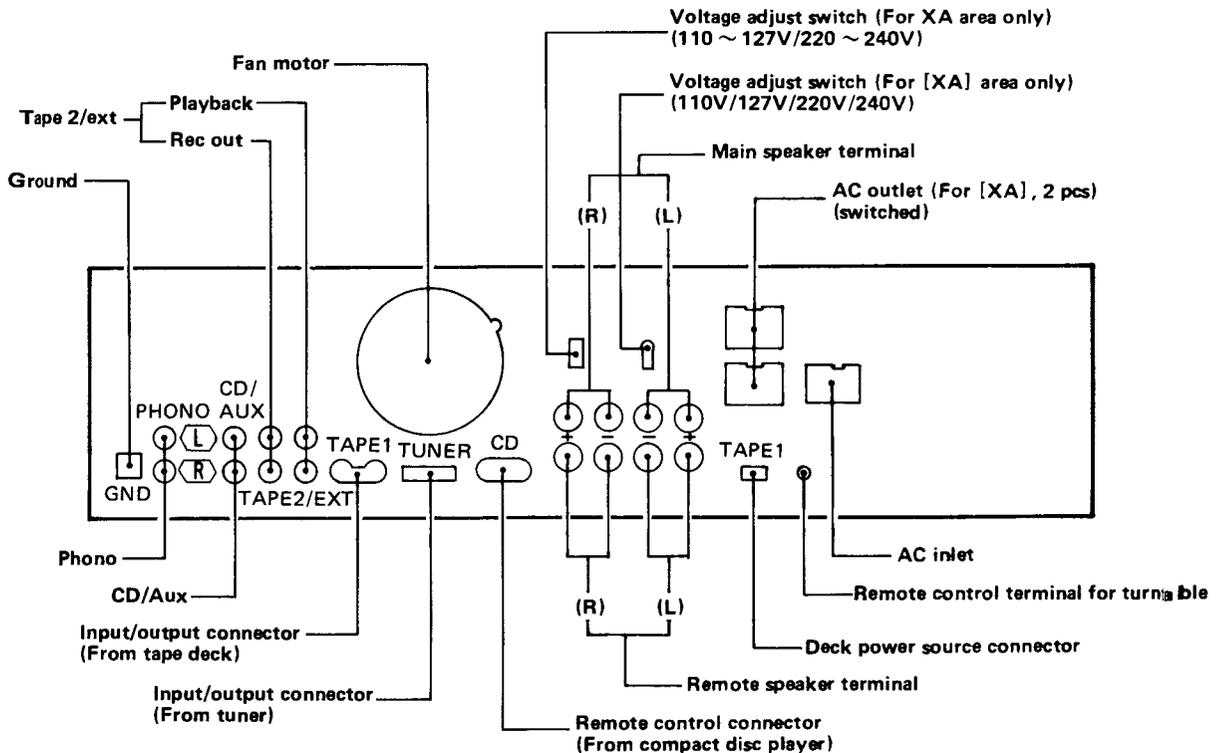

CONNECTIONS






Connect the turntable, tuner, amplifier, cassette deck, and CD player as shown.

If the connection is wrong, normal operation will not be attained.

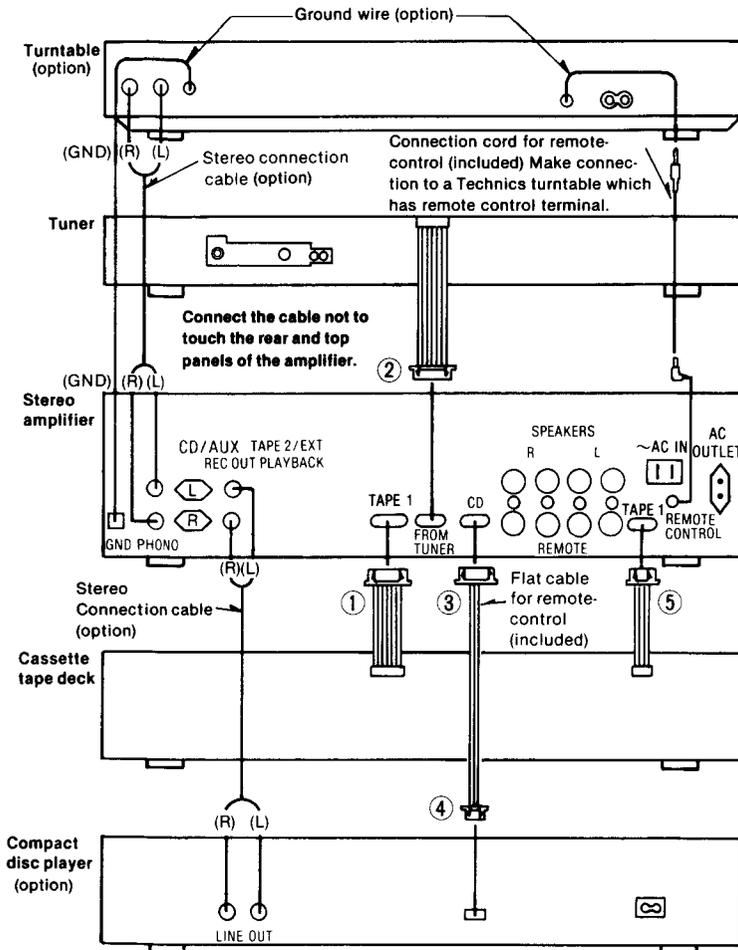

※ Flat cables for remote-control should be connected correctly. If connections are wrong, the units do not function correctly.

Tuner (ST-Z990/Z990L) and Cassette deck (RS-D225W) is not equipped with power supply. So, the amplifier shown or power supply JIG is necessary for the repair and check of Tuner or Cassette deck.

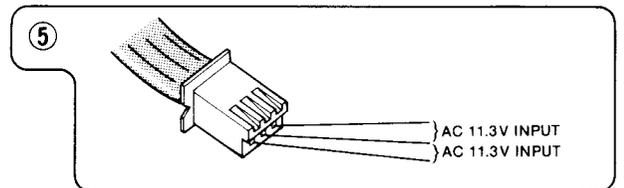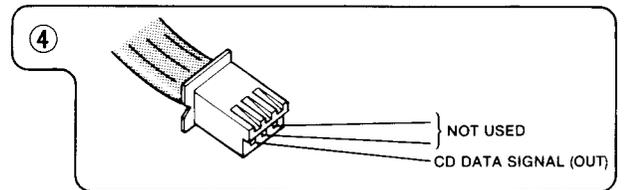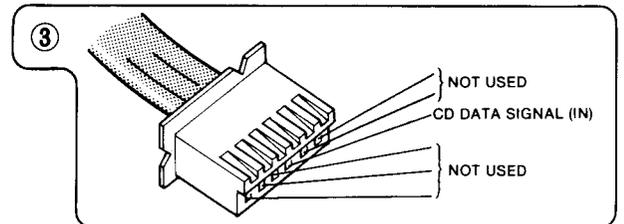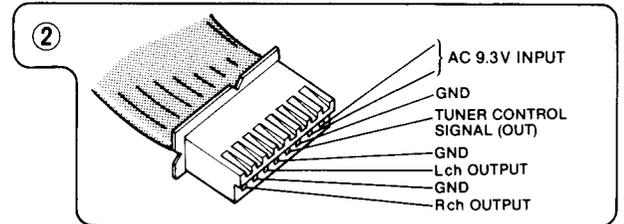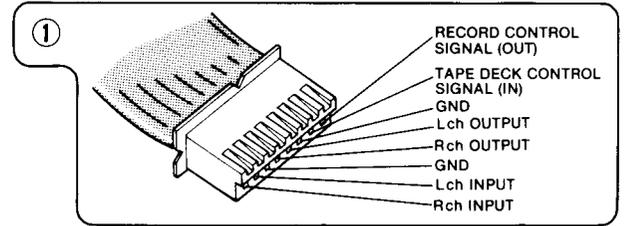

PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following conditions is noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlines below:

1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

Note

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

BEFORE REPAIR AND ADJUSTMENT

- (1) Turn off the power supply. Using a 10Ω, 5W resistor, shortcircuit both ends of power supply capacitors (C601, C602) in order to discharge the voltage.
- (2) Before turning the power supply on, after completion of repair, slowly apply the primary voltage by using a power supply voltage controller to make sure that the consumed current at 50Hz in NO SIGNAL mode should be shown below with respect to supply voltage 110V/127V/220V/240V.

Power supply voltage	AC110V	AC127V	AC220V	AC240V
Consumed current 50Hz	250 ~ 500mA	200 ~ 450mA	150 ~ 400mA	100 ~ 350mA

DISASSEMBLY INSTRUCTIONS

Ref. No. 1 **How to remove the front panel**

Procedure 1

1. Remove the cabinet.
2. Remove the 3 screws (① ~ ③).
3. Remove the 2 nuts (④, ⑤).
4. Remove the 6 nylon rivet (⑥ ~ ⑪).
5. Remove the 3 tabs.
6. Remove the front panel.

Ref. No. 2 **How to remove the sub P.C.B.**

Procedure 1 → 2

1. Remove the 1 screw (①).
2. Remove the power LED P.C.B.
3. Remove the 1 screw (②) and 2 tabs.
4. Remove the LED P.C.B.
5. Remove the 3 tabs.
6. Remove the lamp P.C.B., power switch P.C.B. and headphones P.C.B.

Ref. No. 3 **How to remove the main P.C.B.**

Procedure 3

1. Remove the 8 screws (① ~ ⑧).

2. Remove the 3 screws (⑨ ~ ⑪).

Ref. No. 4 **How to remove the Power IC**

Procedur

1. Remove the 2 screws (①, ②) by spanner or plier.
2. Unsolder the power IC.

Ref. No. 5 **How to remove the remote control**

Procedure 5

1. Remove the Battery cover lid.
2. Remove the 2 screws (①, ②).
3. Insert a blade screwdriver between the upper and lower covers inside the battery compartment and them slowly loosen the bottom cover.



FUNCTION OF IC TERMINALS

• IC202 (TC9177P) Attenuator

Pin No.	Mark	Description	Pin No.	Mark	Description
1	V _{SS}	Power supply (negative).	10	CK	Clock input. Used to take in data at DATA pin.
2, 3 18, 19	CH1-Loudness 1,2 CH2-Loudness 1,2	Loudness terminal.	11	DATA	Attenuation/channel select data input. 20-bits input activated by CK signal.
4 17	CH1-OUT 1 CH2-OUT 1	10dB attenuator output. Signal via IN is attenuated, by 8 steps, 10dB each, from 0 ~ 70dB.	12	ST	Strobe input. Attenuation/channel select data from DATA and CK pins are lapped when this pin is at "H" level. Previous data remain the same while this pin does not reach "H" level.
5 16	CH1-IN 1 CH2-IN 1	10dB attenuator input.	20	V _{DD}	Power supply (positive).
6 15	A-GND	AC grounding terminal.			
7 14	CH1-IN 2 CH2-IN 2	2dB attenuator input.			
8 13	CH1-OUT 2 CH2-OUT 2	2dB attenuator output. Signal via IN is attenuated by 5 steps, 2dB each, from 0 ~ 8dB.			
9	GND	Grounding terminal.			

• IC251 (LC652)

Pin No.	Mark
①	LED
③	LED
④	LED
⑤	LED
②⑧	LED
②⑨	LED
③⑩	LED
⑥	BAC
⑦	REM
⑧	AM
⑨	POWE
⑩	POWE
⑪	DE
⑫	ST/
⑬	DAT
⑭	CL
⑮	OS
⑯	OS
⑰	R
⑳	K
㉑	K
㉒	K
㉓	DA
㉔	D
㉕	D
㉖	D
㉗	LO

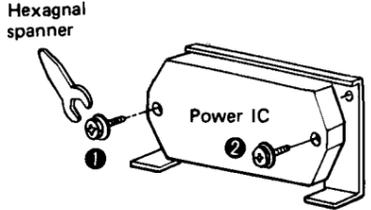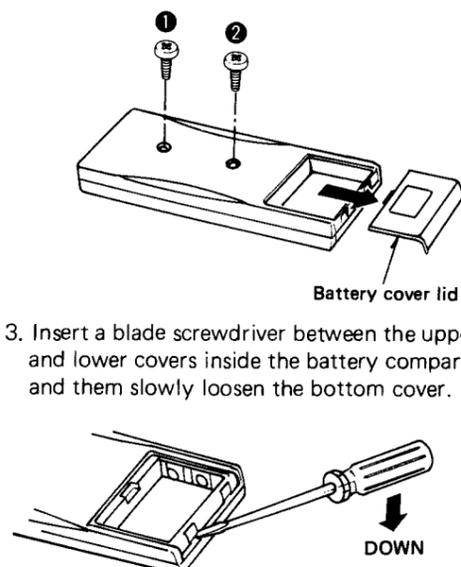
Ref. No. 4	How to remove the Power IC	Ref. No. 5	How to remove the remote control
Procedur	1. Remove the 2 screws (①, ②) by spanner or plier. 2. Unsolder the power IC.	Procedure 5	1. Remove the Battery cover lid. 2. Remove the 2 screws (①, ②)
	 <p>Hexagonal spanner</p> <p>Power IC</p> <ul style="list-style-type: none"> When mounting the power IC, apply silicon compound (SZZ0L15) to the rear of the power IC. 	 <p>Battery cover lid</p> <p>3. Insert a blade screwdriver between the upper and lower covers inside the battery compartment and them slowly loosen the bottom cover.</p> <p>DOWN</p>	

FUNCTION OF IC TERMINALS

• IC202 (TC9177P) Attenuator

Pin No.	Mark	Description	Pin No.	Mark	Description
1	VSS	Power supply (negative).	10	CK	Clock input. Used to take in data at DATA pin.
2, 3 18, 19	CH1-Loudness 1, 2 CH2-Loudness 1, 2	Loudness terminal.	11	DATA	Attenuation/channel select data input. 20-bits input activated by CK signal.
4 17	CH1-OUT 1 CH2-OUT 1	10dB attenuator output. Signal via IN is attenuated by 8 steps, 10dB each, from 0 ~ 70dB.	12	ST	Strobe input. Attenuation/channel select data from DATA and CK pins are lapped when this pin is at "H" level. Previous data remain the same while this pin does not reach "H" level.
5 16	CH1-IN 1 CH2-IN 1	10dB attenuator input.	20	VDD	Power supply (positive).
6 15	A-GND	AC grounding terminal.			
7 14	CH1-IN 2 CH2-IN 2	2dB attenuator input.			
8 13	CH1-OUT 2 CH2-OUT 2	2dB attenuator output. Signal via IN is attenuated by 5 steps, 2dB each, from 0 ~ 8dB.			
9	GND	Grounding terminal.			


• IC251 (LC6523C-3068) Microcomputer

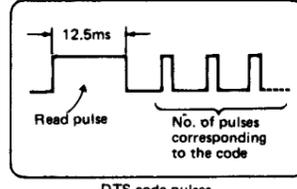Pin No.	Mark	Description																																																																								
①	LED 4	"L" level output is given to each pin according to the volume attenuation in order to light up the volume level LED. <table border="1" style="float: right; margin-top: 10px;"> <thead> <tr> <th>-dB</th> <th>LED Pin No.</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> </tr> </thead> <tbody> <tr> <td>0 ~ -4dB</td> <td>②③</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-6 ~ -10</td> <td>④</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-12 ~ -18</td> <td>⑤</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-20 ~ -26</td> <td>⑥</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-28 ~ -36</td> <td>⑦</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-38 ~ -52</td> <td>⑧</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-54 ~ ∞</td> <td>⑨</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> </tbody> </table> <p>○ mark = Light up = "L" level output</p>	-dB	LED Pin No.	1	2	3	4	5	6	7	0 ~ -4dB	②③	○	○	○	○	○	○	○	-6 ~ -10	④	○	○	○	○	○	○	○	-12 ~ -18	⑤	○	○	○	○	○	○	○	-20 ~ -26	⑥	○	○	○	○	○	○	○	-28 ~ -36	⑦	○	○	○	○	○	○	○	-38 ~ -52	⑧	○	○	○	○	○	○	○	-54 ~ ∞	⑨	○	○	○	○	○	○	○
-dB	LED Pin No.		1	2	3	4	5	6	7																																																																	
0 ~ -4dB	②③		○	○	○	○	○	○	○																																																																	
-6 ~ -10	④		○	○	○	○	○	○	○																																																																	
-12 ~ -18	⑤		○	○	○	○	○	○	○																																																																	
-20 ~ -26	⑥		○	○	○	○	○	○	○																																																																	
-28 ~ -36	⑦		○	○	○	○	○	○	○																																																																	
-38 ~ -52	⑧		○	○	○	○	○	○	○																																																																	
-54 ~ ∞	⑨		○	○	○	○	○	○	○																																																																	
②	LED 5																																																																									
③	LED 6																																																																									
④	LED 7																																																																									
⑤	LED 1																																																																									
⑥	LED 2																																																																									
⑦	LED 3																																																																									
⑧	BACK-UP	<ul style="list-style-type: none"> When this pin is at "L" level, the microcomputer is operated by the back-up circuit. (No. ⑩ pin alone receives an input, all the others not.) When this pin is at "H" level, No. ⑨ pin (POWER ON) gives an "L" level output if No. ⑫ pin (POWER SW) is at "H" level. No. ⑨ pin (POWER ON) is at "H" level, however, if the remote control's power on/off RAM data are off. 																																																																								
⑨	REMOTE	<ul style="list-style-type: none"> Data codes reach here from the remote control receiver. (For data codes, refer to the remote control transmitter description.) The compact disc player's data codes are outputted from the light receiver direct to the player. 																																																																								
⑩	AMP	<ul style="list-style-type: none"> When this pin receives an "H" level input, the amplifier turns on to start the operation. When this pin receives an "L" level input, the amplifier turns off to stop receiving the matrix key. Power on/off code alone is used to enable the remote control. Just when this pin's input comes from "H" to "L" level, the LED1 ~ LED7 and LOUD pins become "H". 																																																																								
⑪	POWER ON POWER SW	<ul style="list-style-type: none"> A rising level ("H" level) is detected at No. ⑩ pin to give an "L" level output to No. ⑨ pin (POWER ON). When No. ⑩ pin is at "L" level, No. ⑨ pin is given an "H" level output (POWER OFF). 																																																																								
⑫	DECK	<ul style="list-style-type: none"> When "Deck Play" code is fed from the remote control to No. ⑦ pin, the input selector is switched into TAPE 1 by a SELECTOR code output (No. ⑳ ~ No. ㉔ pins), causing an "H" level (when deck connection) output at No. ⑫ pin. When "Deck Stop" code is inputted, an "L" level output is given at No. ⑫ pin. 																																																																								
⑬	ST/DTS	<ul style="list-style-type: none"> When "Tuner" code is fed from the remote control to No. ⑦ pin, The DTS code is outputted at pin No. ⑫ SELECTOR code is then outputted to make the input selector into TUNER mode. If the remote control's CH button has been kept depressed for longer than 1.5 seconds, 15 output pulses (AM code) are fed to the tuner and the number of pulses for a specified channel is given. If the button has been released within 1.5 seconds 13 output pulses (FM code) are fed to the tuner and the number of pulses for a specified channel is given. <div style="float: right; margin-top: 10px;">  <p>DTS code pulses</p> <table border="1" style="float: right; margin-top: 10px;"> <thead> <tr> <th>Function</th> <th>No. of output pulses</th> </tr> </thead> <tbody> <tr><td>CH 1 (CH 9)</td><td>0</td></tr> <tr><td>CH 2 (CH 10)</td><td>1</td></tr> <tr><td>CH 3 (CH 11)</td><td>2</td></tr> <tr><td>CH 4 (CH 12)</td><td>3</td></tr> <tr><td>CH 5 (CH 13)</td><td>4</td></tr> <tr><td>CH 6 (CH 14)</td><td>5</td></tr> <tr><td>CH 7 (CH 15)</td><td>6</td></tr> <tr><td>CH 8 (CH 16)</td><td>7</td></tr> <tr><td>FM</td><td>13</td></tr> <tr><td>AM</td><td>15</td></tr> </tbody> </table> </div>	Function	No. of output pulses	CH 1 (CH 9)	0	CH 2 (CH 10)	1	CH 3 (CH 11)	2	CH 4 (CH 12)	3	CH 5 (CH 13)	4	CH 6 (CH 14)	5	CH 7 (CH 15)	6	CH 8 (CH 16)	7	FM	13	AM	15																																																		
Function	No. of output pulses																																																																									
CH 1 (CH 9)	0																																																																									
CH 2 (CH 10)	1																																																																									
CH 3 (CH 11)	2																																																																									
CH 4 (CH 12)	3																																																																									
CH 5 (CH 13)	4																																																																									
CH 6 (CH 14)	5																																																																									
CH 7 (CH 15)	6																																																																									
CH 8 (CH 16)	7																																																																									
FM	13																																																																									
AM	15																																																																									
⑭	DATA/S1	Together with No. ⑫ pin, Volume UP/DOWN, Balance L/R and Loudness signals are fed to the attenuator IC.																																																																								
⑮	CLK																																																																									
⑯	OSC 2																																																																									
⑰	OSC 1	Crystal hook-up terminals for internal clock oscillator.																																																																								
⑱	RES	Reset pulse input terminal. When a reset is made by the back-up circuit using electrolytic capacitors alone, 3 or 4 control RAM data are checked by the program. COLD START is activated when abnormal, HOT START when normal.																																																																								
⑳	K2	Input terminals for matrix keys.																																																																								
㉑	K1																																																																									
㉒	K0																																																																									
㉓	D _A /S _O	Input selector 4-bits BCD codes are outputted with Remote Control codes. * With Turntable "START" code, the output is given in the order of No. 1 → No. 2 → No. 6 → No. 1.																																																																								
㉔	D _B																																																																									
㉕	D _C																																																																									
㉖	D _D																																																																									
㉗	LOUD		Loudness on/off signal output terminal. * By pressing the LOUDNESS key, an "L" level output is given at this pin to turn on the loudness switch. Push the key again, and an "H" level output will come to turn off the loudness switch.																																																																							

Notes:

(A) Key matrix, scanning signal input/output pins and their functions ("H" level scan)

OUT \ IN	K0 No.22	K1 No.21	K2 No.20
S0 No.23	Volume UP	Balance L	Loudness
S1 No.13	Volume DOWN	Balance R	

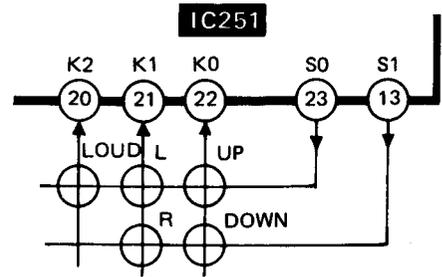

(B) Volume UP/DOWN

1. Push the key once, and the volume will turn up (or down) by 2dB each steps.
2. Keep the key depressed for more than 250msec, and the volume will turn up (or down) all the way automatically.
3. An "L" level output is given at LED1 ~ LED7 pins according to the volume attenuation.


(C) Balance LEFT/RIGHT

1. Push the key once, and the balance will shift to the left (or right) channel by 2dB. At the same time, the "Volume/Balance" indicator (LED1 ~ LED7) is switched to the Balance position. (The Balance indication goes on for about 4 ~ 6 seconds after the Balance key is released.)
2. Keep the key depressed for more than 500msec, the automatic shift mode will be invited.


• IC252 (DN74LS145) BCD Decoder

The microcomputer (IC251) codes are fed via its No. 23 ~ No. 26 pins to the IC252's No. 12 ~ No. 15 pins. An "L" level output is given according to the selector positions; now the input selector IC (IC201) receives the output as a switching signal. (For the input codes to IC252, refer to the list of codes under No. 23 ~ No. 26 pins of IC251.)

- * Q256 is a transistor to keep Tape Deck 1 from switching from recording mode to playback mode, which might be otherwise caused by possible error data transfer from the remote control. (An "H" level input comes from the tape deck to the amplifier while in recording mode.)
- * No.9 pin is not used in this model.

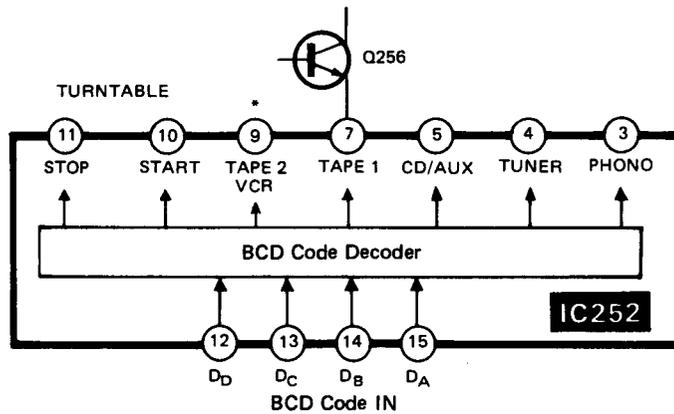



• IC201 (LC7818) Input Selector

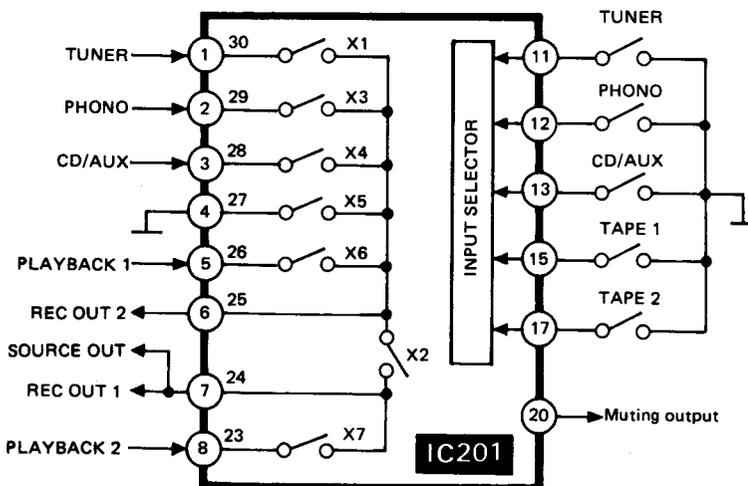

MODE \ SW	X1	X2	X3	X4	X5	X6	X7
PHONO		on	on				
TUNER	on	on					
CD/AUX		on		on			
TAPE 1		on				on	
TAPE 2		on					on


CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

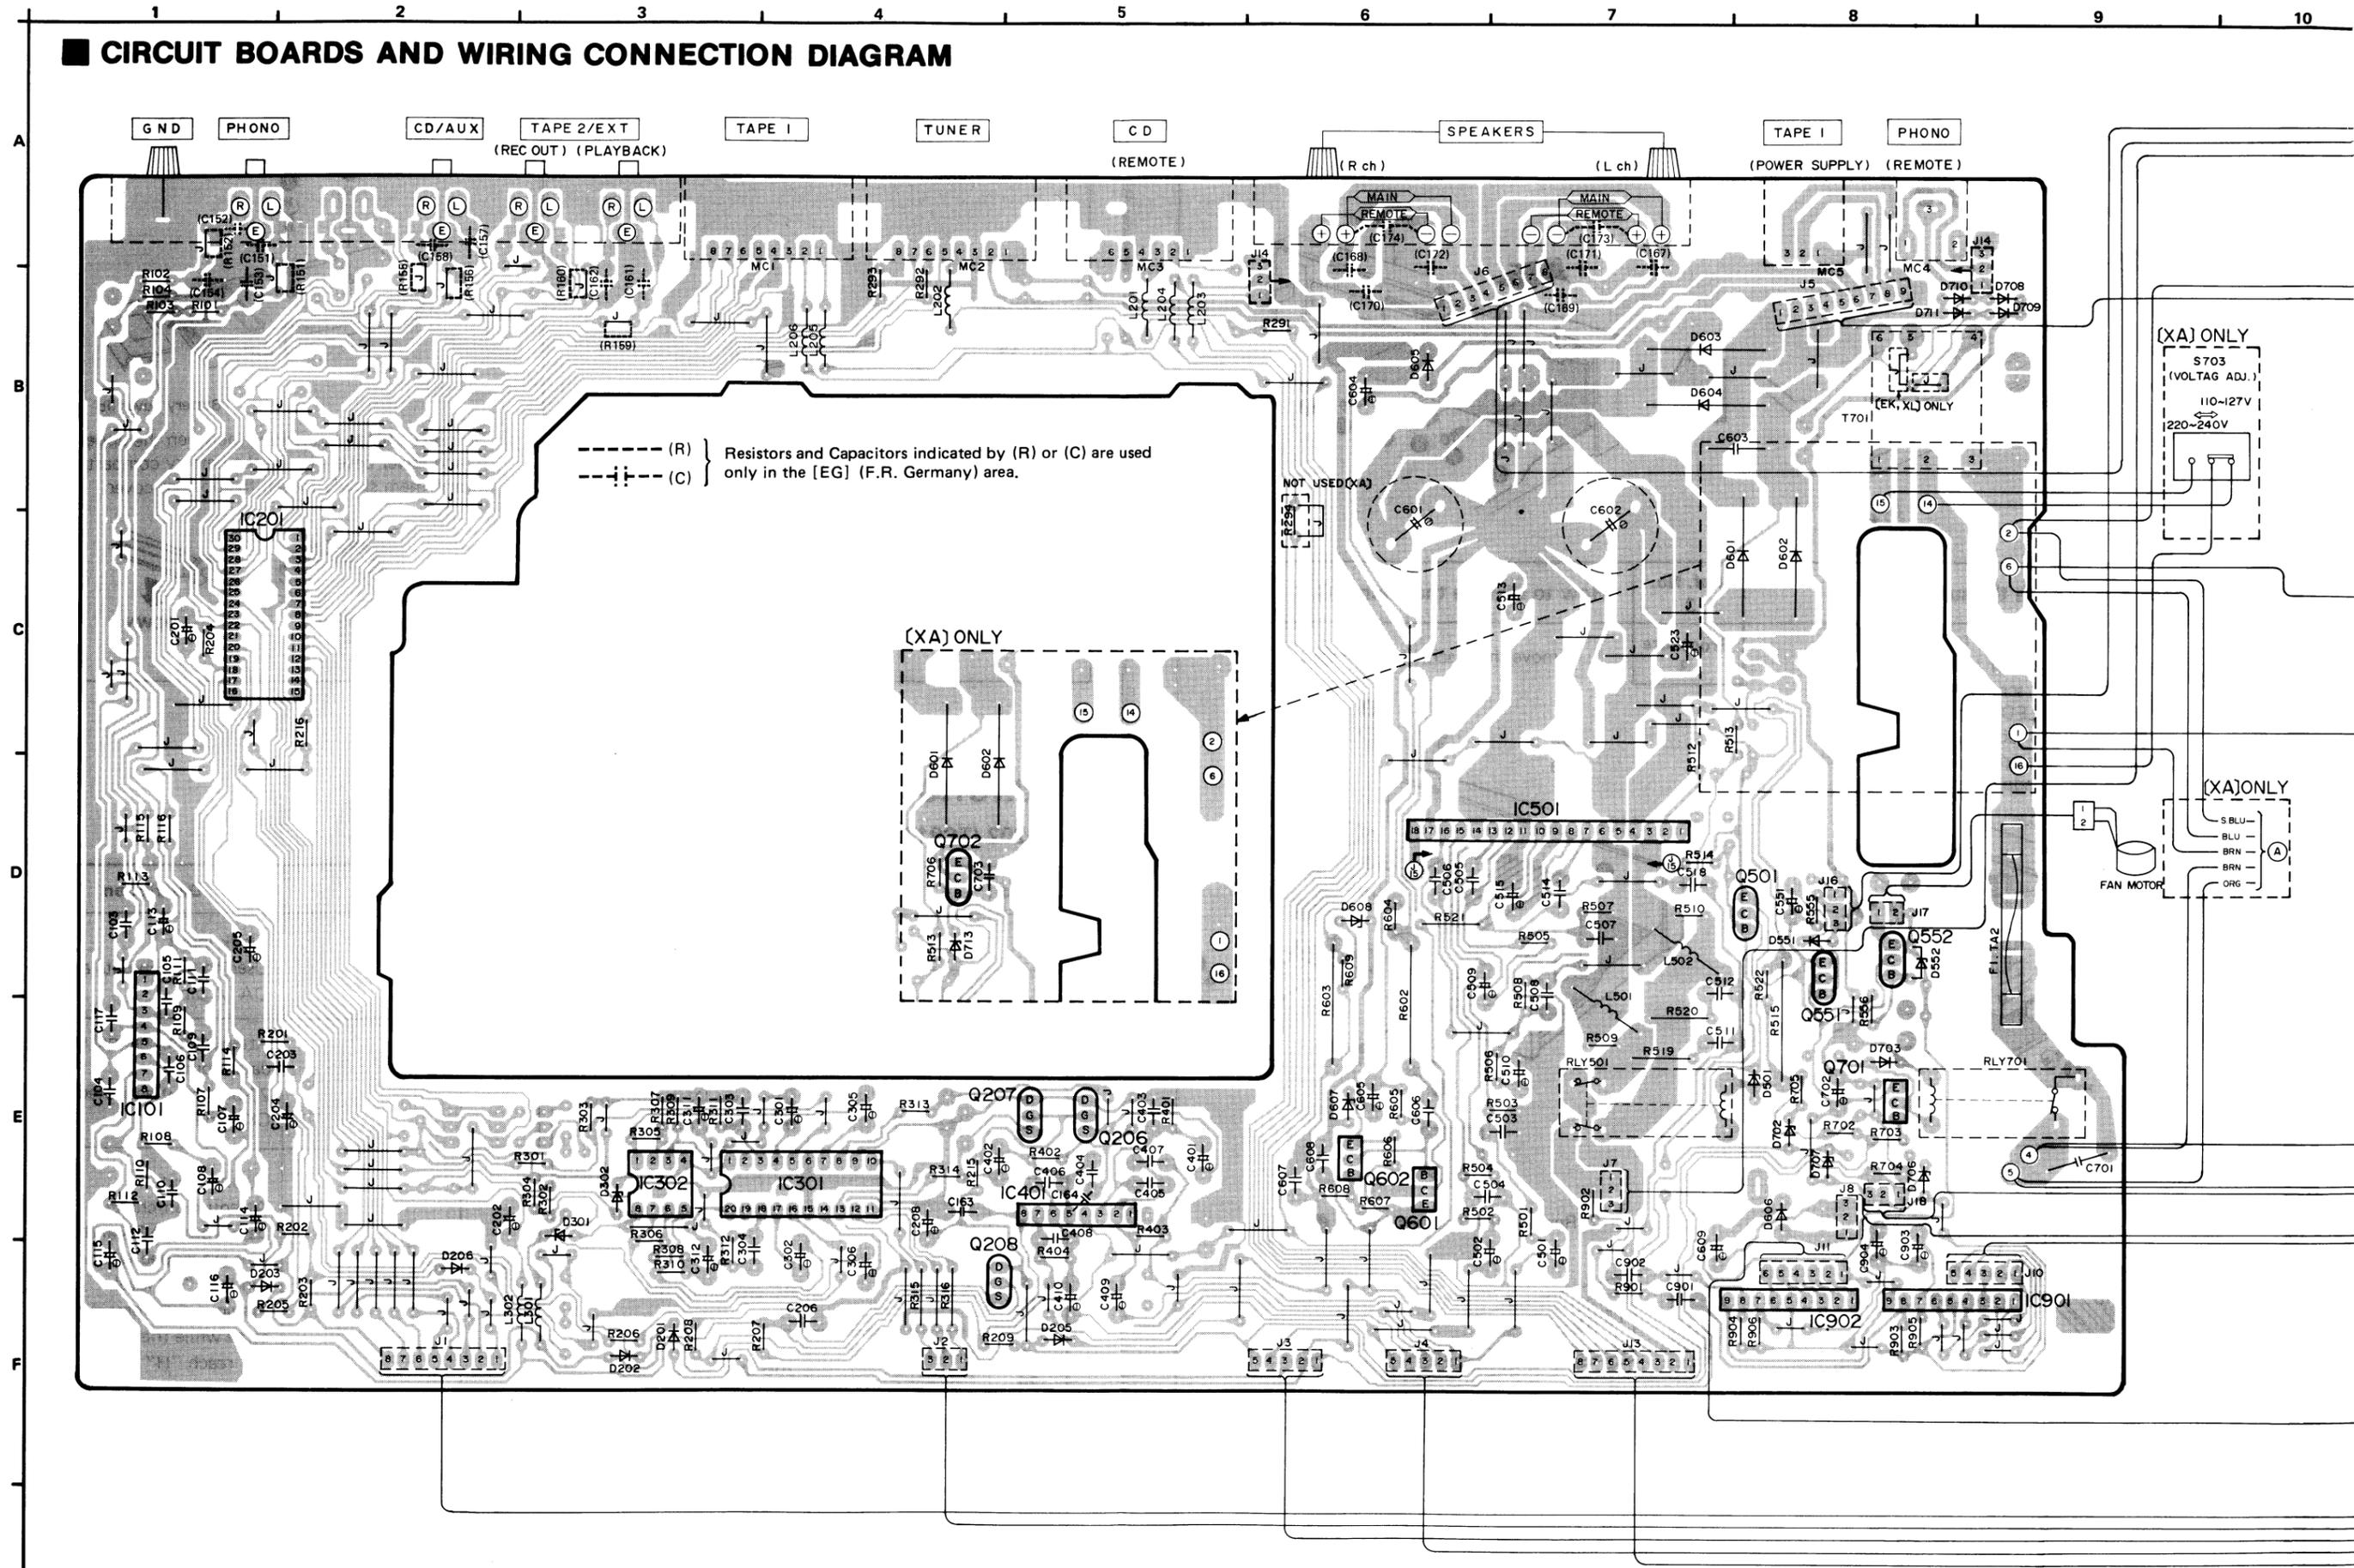

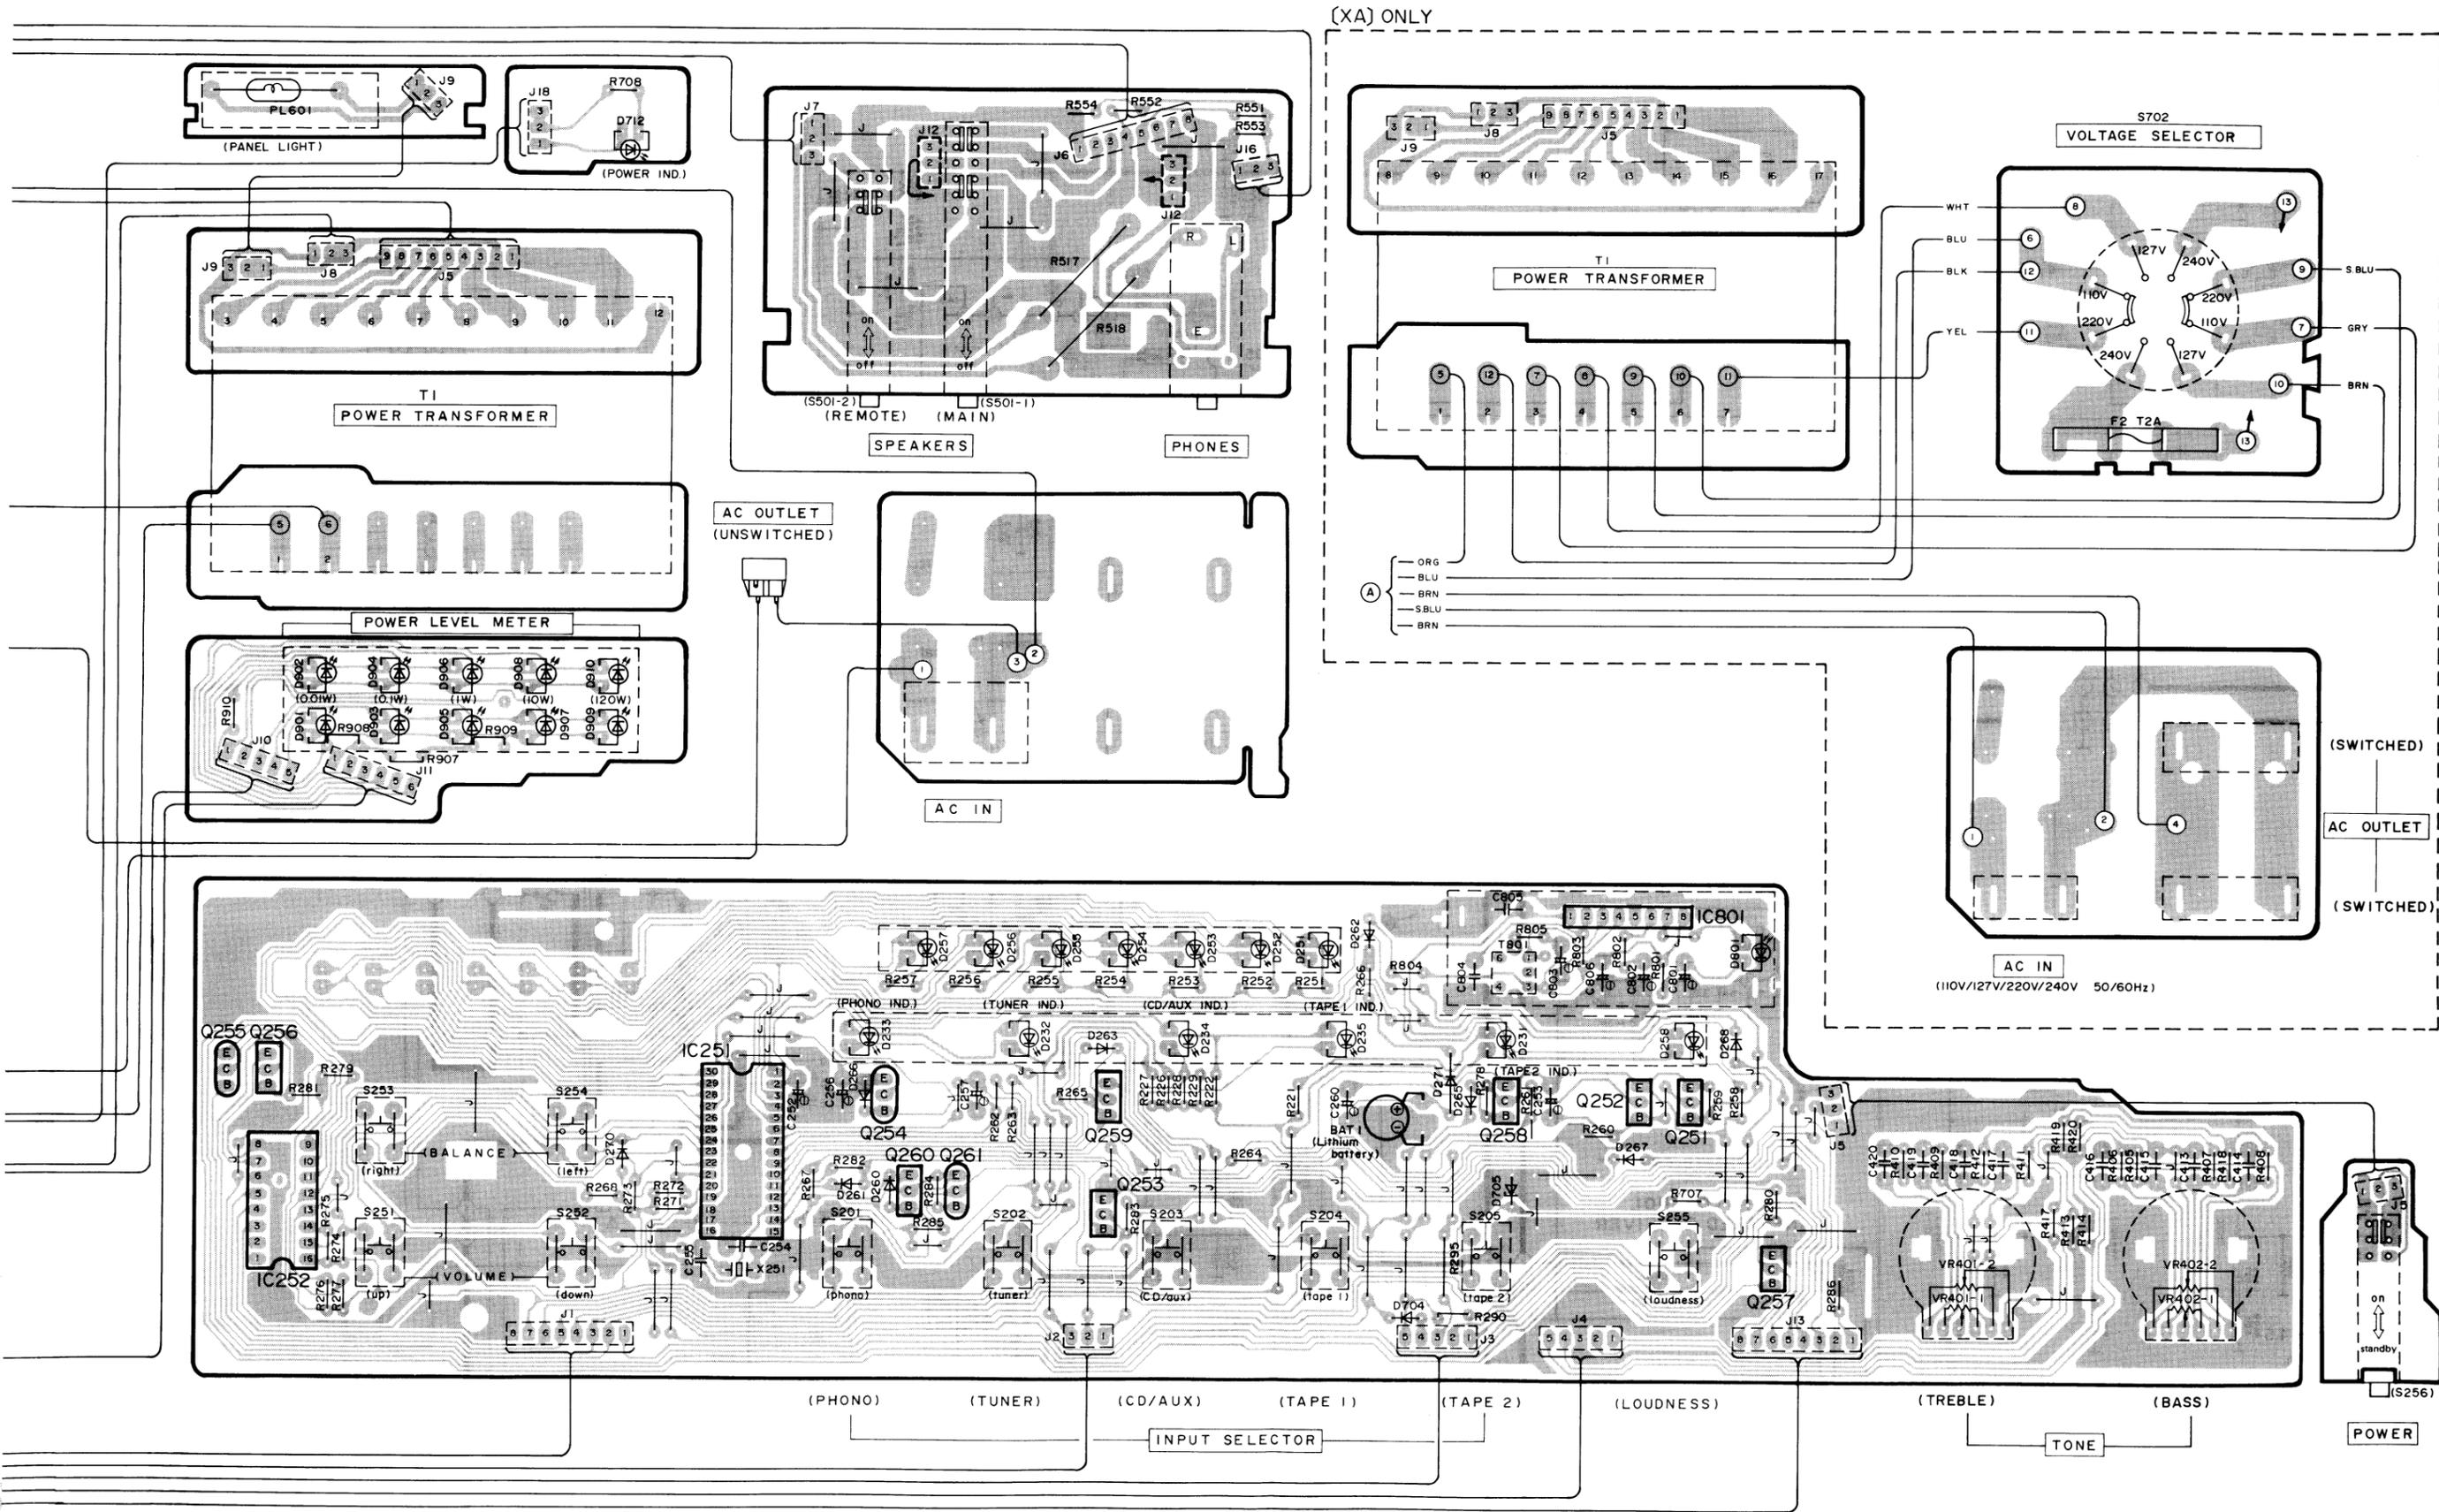

(XA) ONLY


● Remote Control Unit (Transmitter)

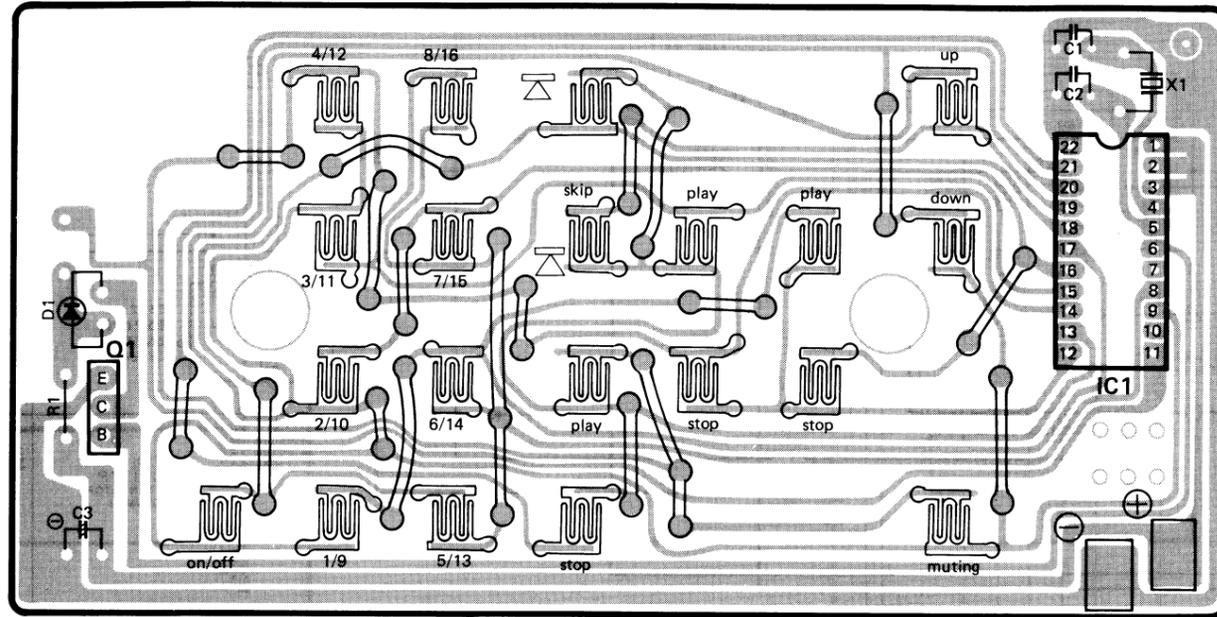


● Terminal guide of transistors, diodes and IC's

<p>LC7818 30pin LC6523C 30pin MN6013D 22pin TC9177P 20pin DN74LS145 16pin M5218P 8pin</p>	<p>M5220L 8pin M5218L 8pin LA7224 8pin</p>	<p>SVIBA6144 9pin</p>	<p>MA4051, MA4056 MA4082, MA4140</p>
<p>SVI3105</p>	<p>DTC144 DTC124</p>	<p>DTA114</p>	<p>MA165, MA167 SVDS3V20 1SR35200</p>
<p>2SD1265</p>	<p>2SK301</p>	<p>2SA992</p>	<p>2SA1309 2SC3311 UN1231</p>
<p>LN061330P, LN108327P LN074328P, PN323B SE303AY</p>	<p>Anode Cathode Ca — — A</p>		


■ SCHEMATIC DIAGRAM OF REMOTE CONTROL TRANSMITTER

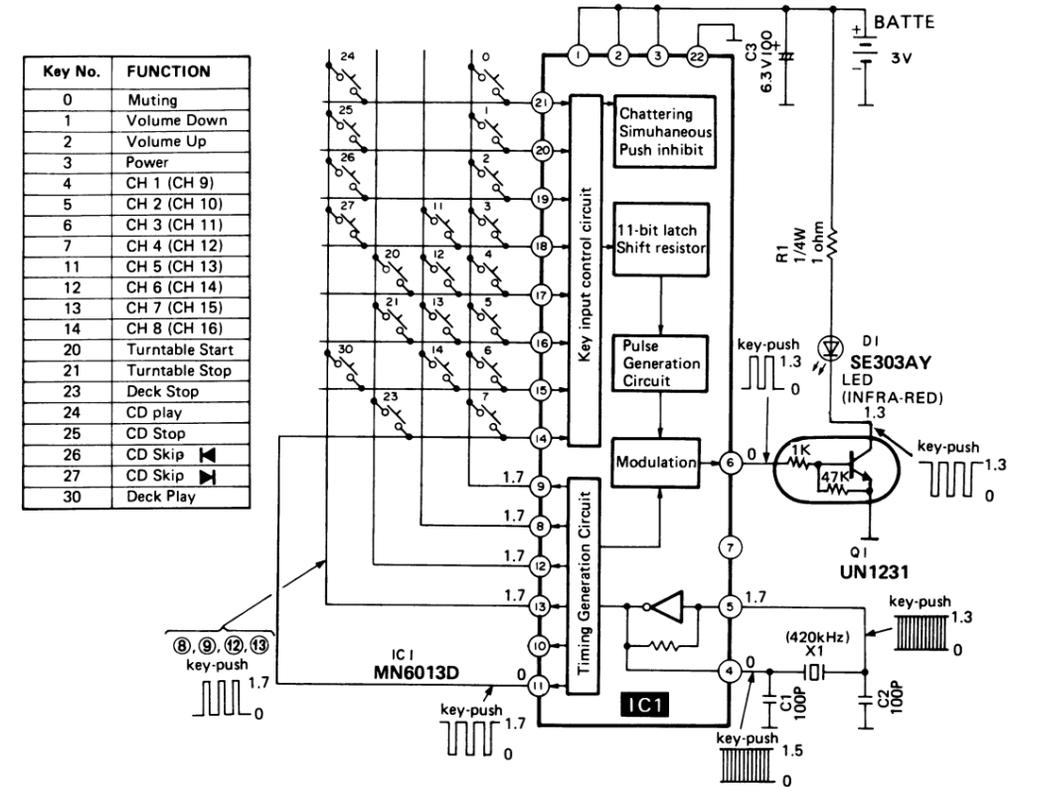


■ KEY NUMBER DESCRIPTION AND DATA CODE OF REMOTE CONTROL TRANSMITTER (Example. key No. 1)

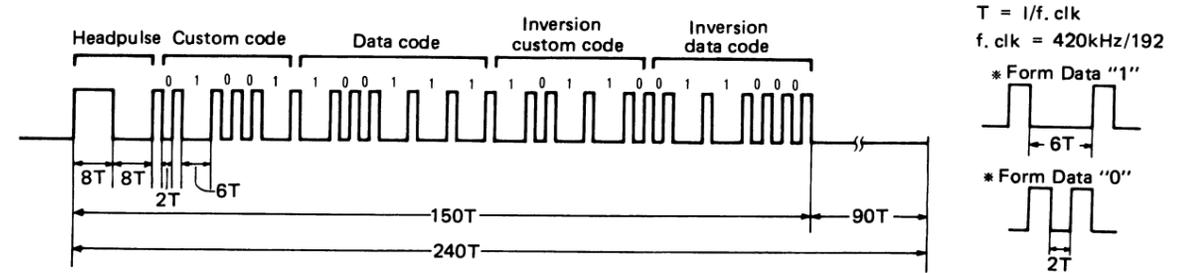

Key No.	Command	Custom code	Data code	Key No.	Command	Custom code	Data code
0	Audio muting	01001	100111	13	Tuning 7	01001	010110
1	Volume down	01001	100101	14	Tuning 8	01001	010111
2	Volume up	01001	100100	20	Turntable start	01001	001100
3	ON/OFF (Power)	01001	100000	21	Turntable stop	01001	001101
4	Tuning 1	01001	010000	23	Deck stop	01001	000000
5	Tuning 2	01001	010001	24	CD play	01100	001010
6	Tuning 3	01001	010010	25	CD stop	01100	000000
7	Tuning 4	01001	010011	26	CD skip ◀	01100	000010
11	Tuning 5	01001	010100	27	CD skip ▶	01100	000011
12	Tuning 6	01001	010101	30	Deck play ▶	01001	001010

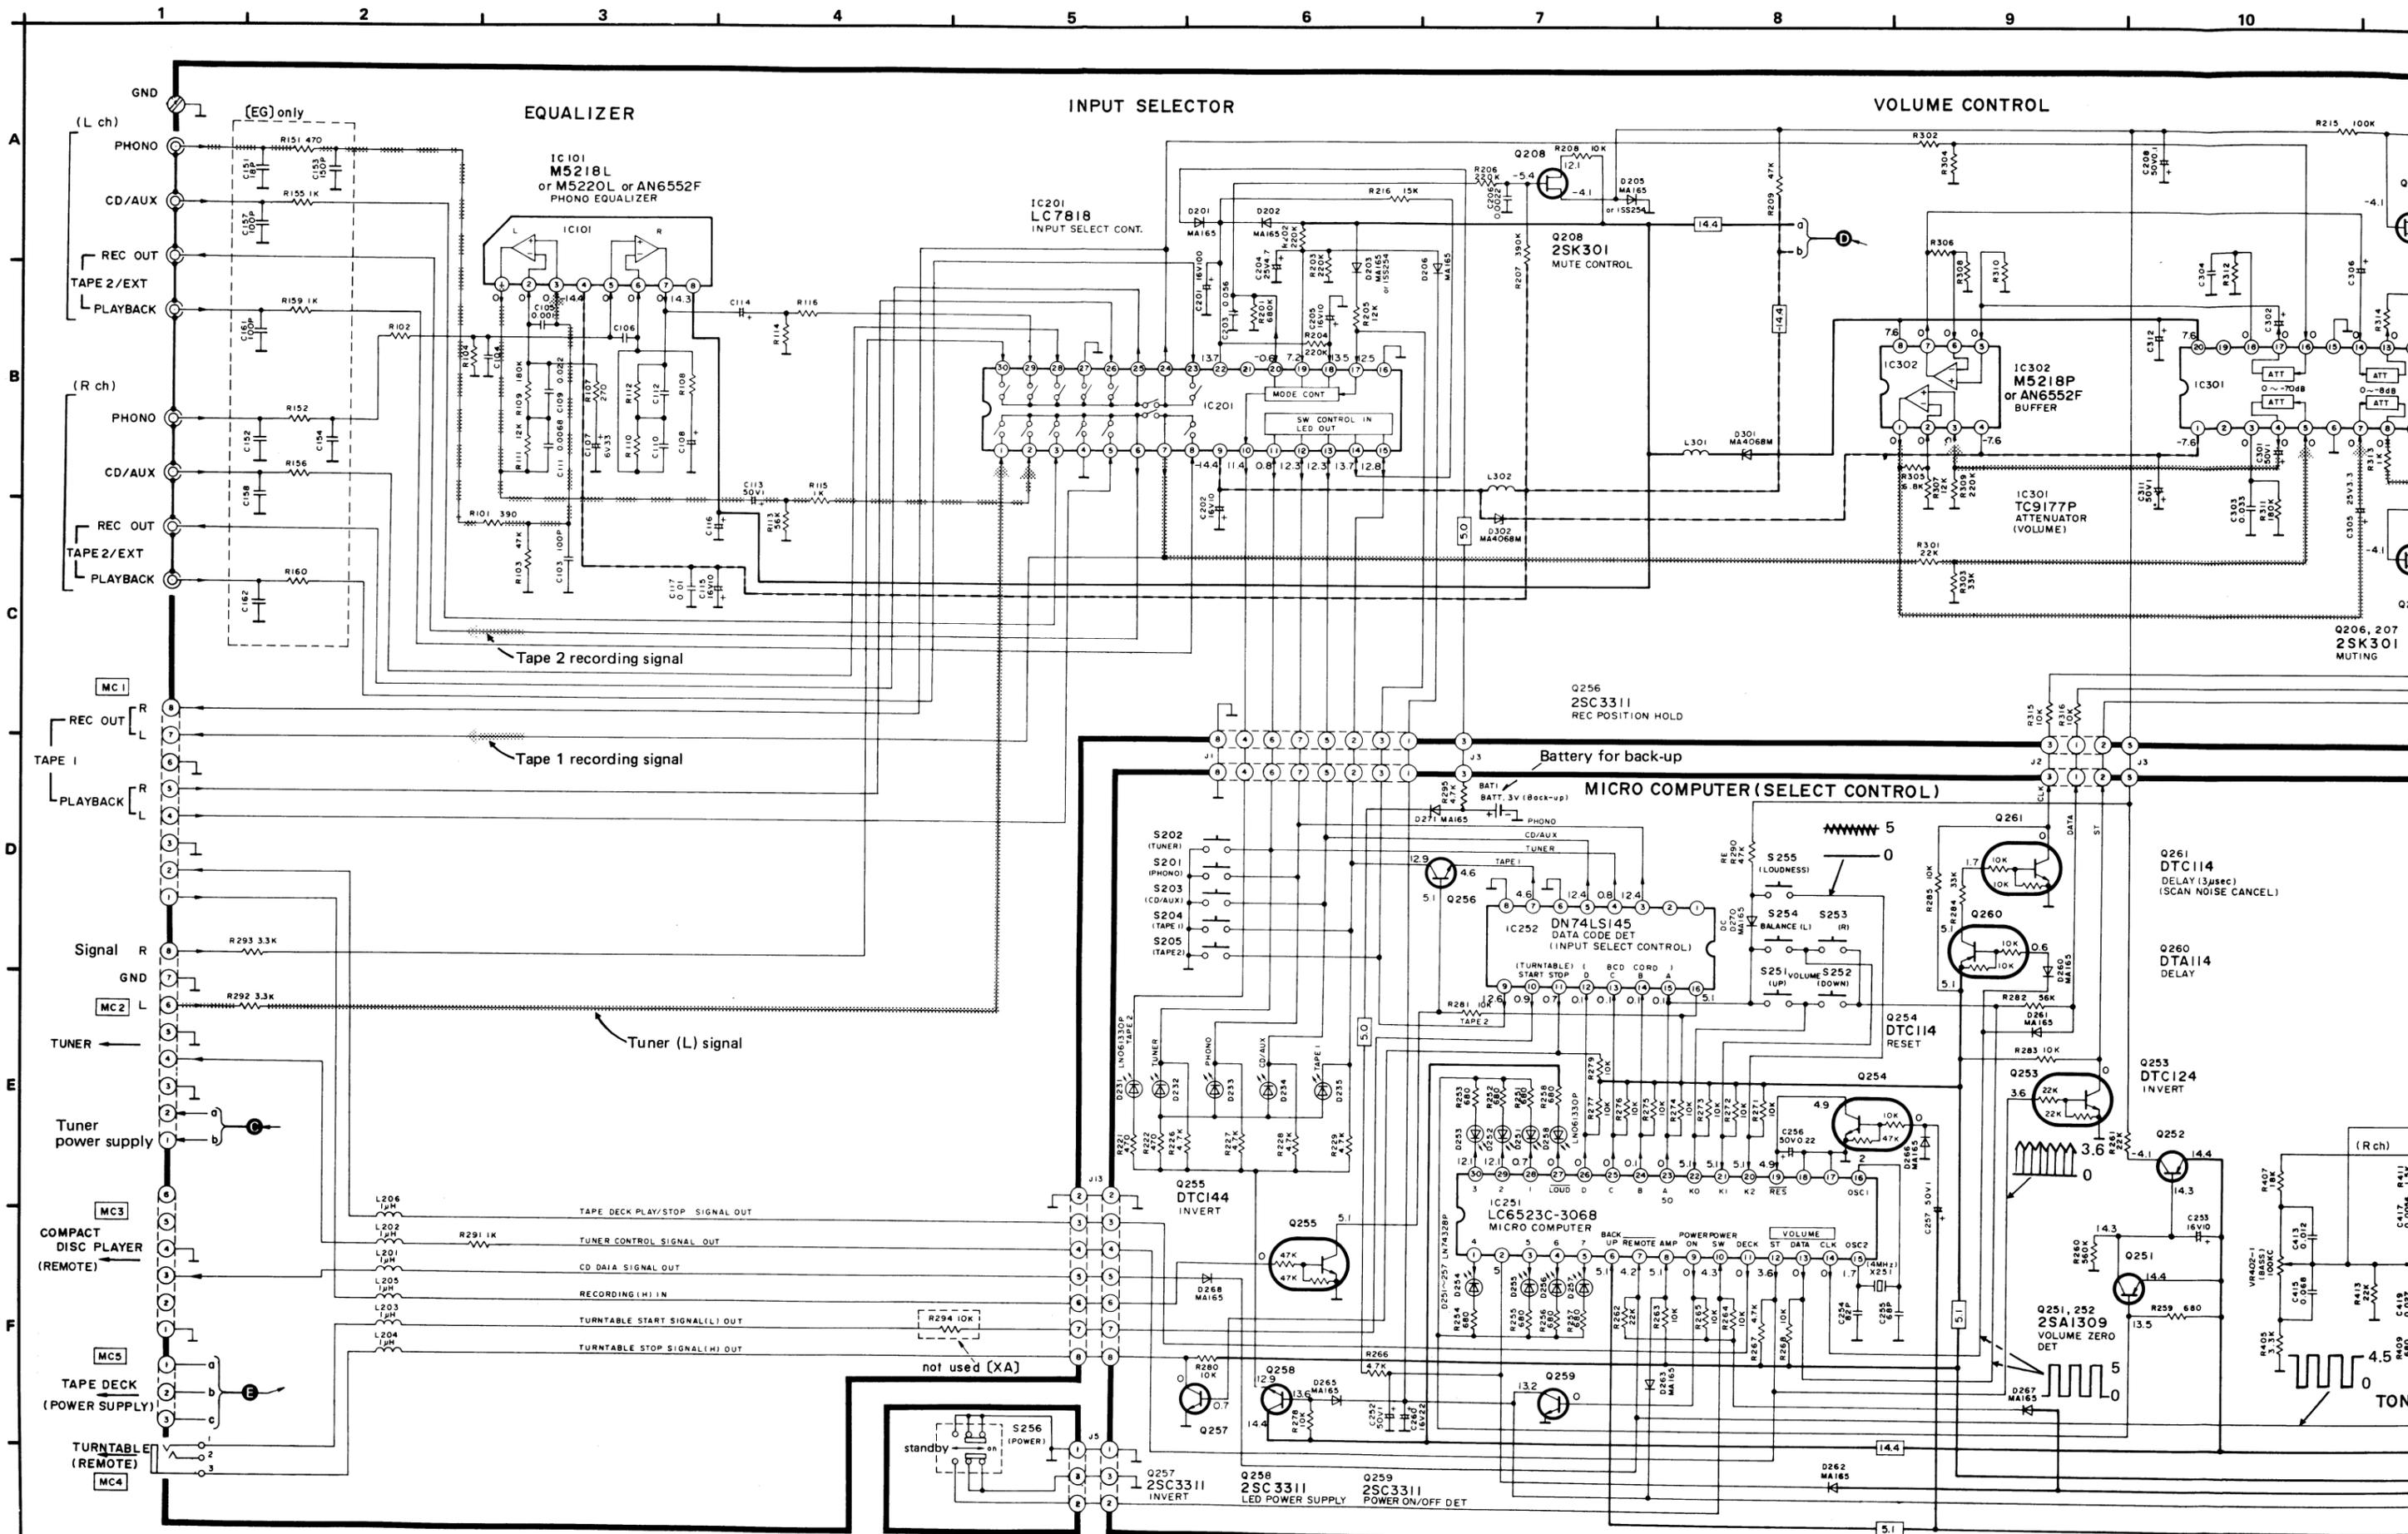


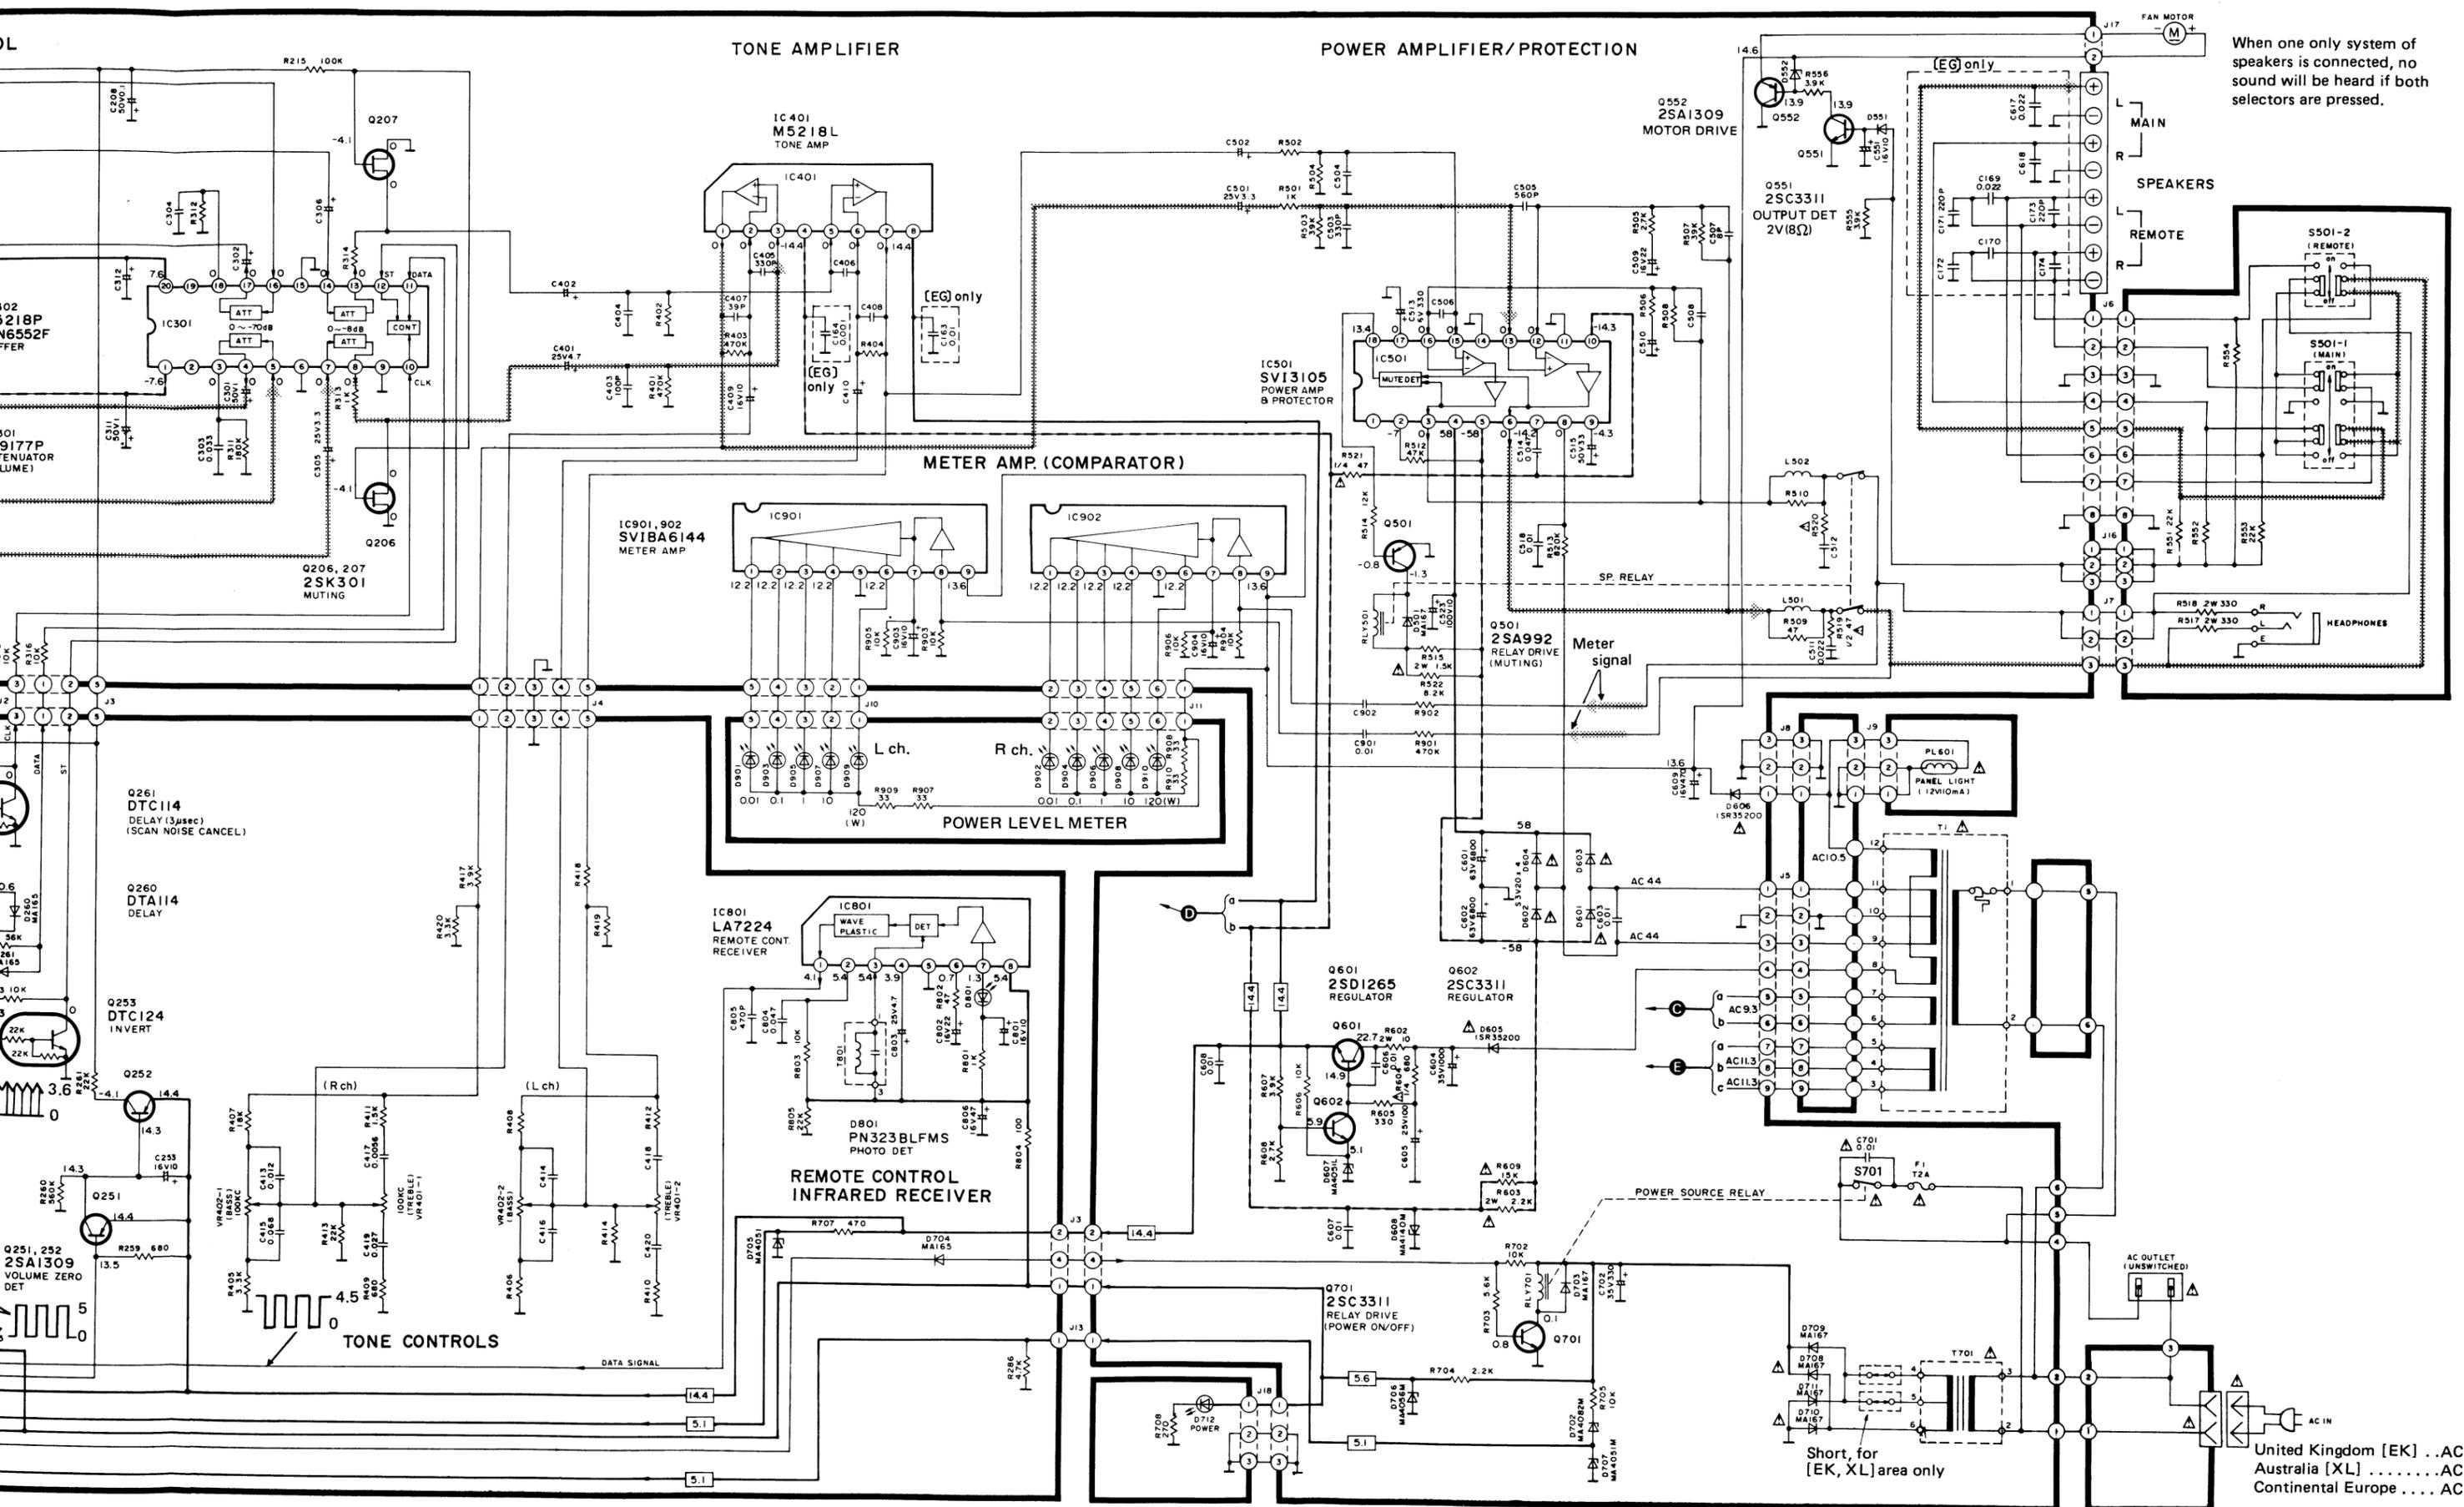

When one only system of speakers is connected, no sound will be heard if both selectors are pressed.

United Kingdom [EK] ... AC 2
 Australia [XL] ... AC 2
 Continental Europe ... AC 2

● Power source circuit for other areas [XA]

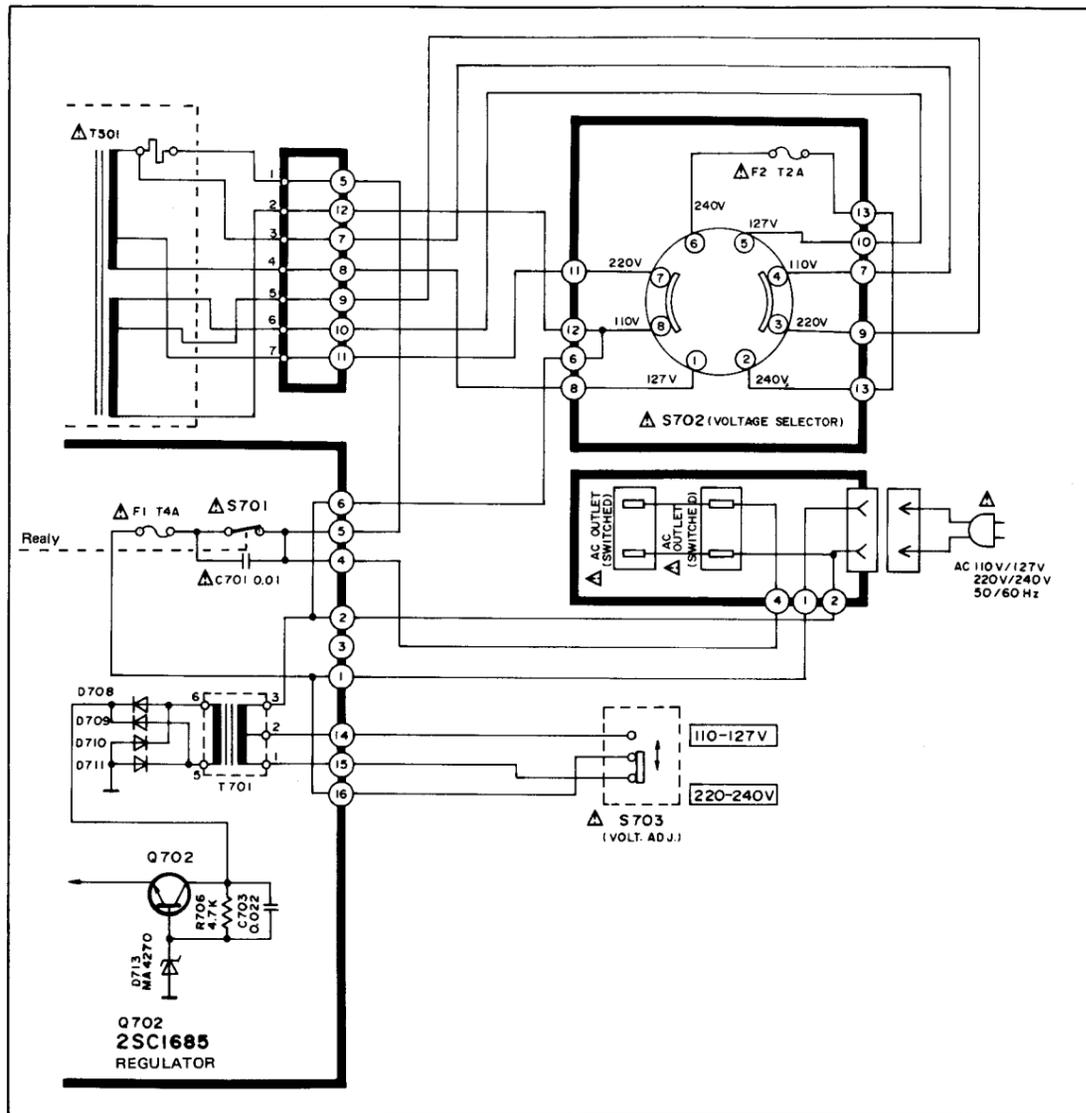

● Before use

WARNING: To avoid any serious damages, strongly be sure the voltage setting of the both voltage adjust switches according to the area.


Be sure to disconnect the mains cord before adjusting both voltage adjust switches.

Use a minus (-) screwdriver to set the voltage adjust switches.

1. This amplifier is already set to the "220 V ~ 240 V" position before shipment.

If the power supply in your areas is 110 V ~ 127 V,

Set to the "110 V ~ 127 V" position.



2. Set to the voltage setting for the area in which the unit will be used.

(If the power supply in your area is 117 V or 120 V, set to the "127 V" position.)

Note:

There are no voltage adjust switches for some countries; the correct voltage is already set.

— Measure against abnormality of memory function —

- Pull out the AC cord and check that the voltage at VDD terminal (pin No. 2) of IC251 (microcomputer) is +2V or over.
 - If the voltage is less than +2V, check that the battery voltage is +2V or over.
 - If the battery voltage is lower than +2V, replace the battery with new one.
- Make sure that the battery voltage is +2V or over before setting the battery.
 - Do not short-circuit between the plus and minus sides. Also, set the battery in correct position.

— CAUTION —

This lithium battery is critical component (Type No. BR2325-1VC, Mfr by Matsushita). Please observe proper polarity and exact location when replacement and soldering in the replacement lithium battery.

■ SCHEMATIC DIAGRAM

(This schematic diagram may be modified at any time with the development of new technology.)



Notes :

- S201 : Input selector, "phono" switch
 - S202 : Input selector, "Tuner" switch
 - S203 : Input selector, "CD/Aux" switch
 - S204 : Input selector, "Tape 1" switch
 - S205 : Input selector, "Tape 2/Ext" switch
 - S251 : Volume, "Up" switch
 - S252 : Volume, "Down" switch
 - S253 : Balance, "Left" switch
 - S254 : Balance, "Right" switch
 - S255 : Loudness switch
 - S256 : Power switch in "on" position. (■ standby, ▲ on)
 - S501 : Main speakers switch in "on" position.
 - S502 : Remote speakers switch in "on" position.
 - S701 : Main power supply switch (with relay) in "on" position.
 - S702 (For [XA] area only) : Voltage adjust switch in "220V" position. (127V ↔ 110V ↔ 220V ↔ 240V)
 - S703 (For [XA] area only) : Voltage adjust switch in "220-240V" position. (110 - 127V ↔ 220 - 240V)
17. Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
- Measurement condition :
 Input Selector → Tuner (no signal)
 Volume Ind. → Level "1" light-up
 Loudness → off
- Signal lines (L channel) [Symbol]
 - Positive (+B) voltage lines [Symbol]
 - Negative (-B) voltage lines [Symbol]
20. Important safety notice:
 Components identified by ▲ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.


* Caution !

- IC and LSI are sensitive to static electricity. Secondary trouble can be prevented by taking care during repair.
- * Cover the parts boxes made of plastics with aluminum foil.
- * Ground the soldering iron.
- * Put a conductive mat on the work table.
- * Do not touch the legs of IC or LSI with the fingers directly.


● DECK/TUNER/CD player Connection Terminal of Rear panel

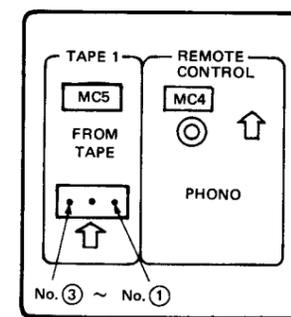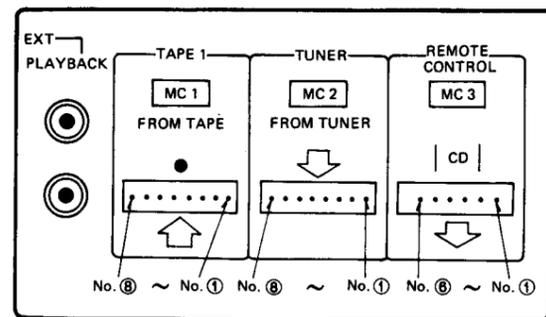

■ BLOCK DIAGRAM

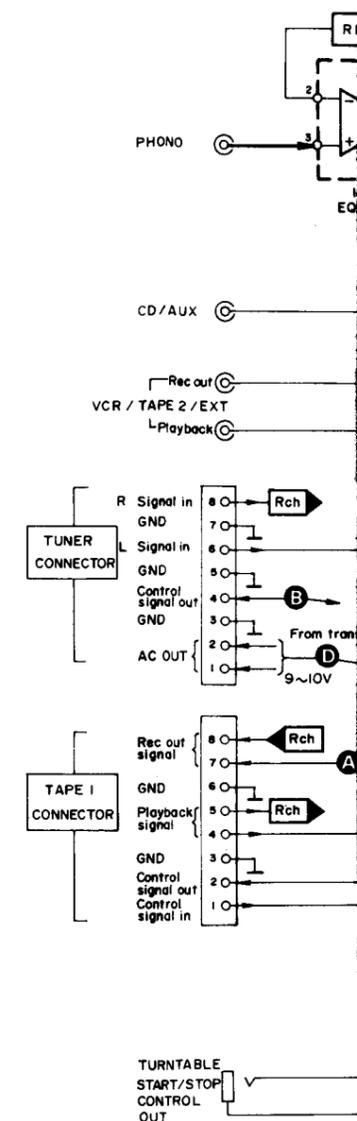

BLOCK DIAGRAM

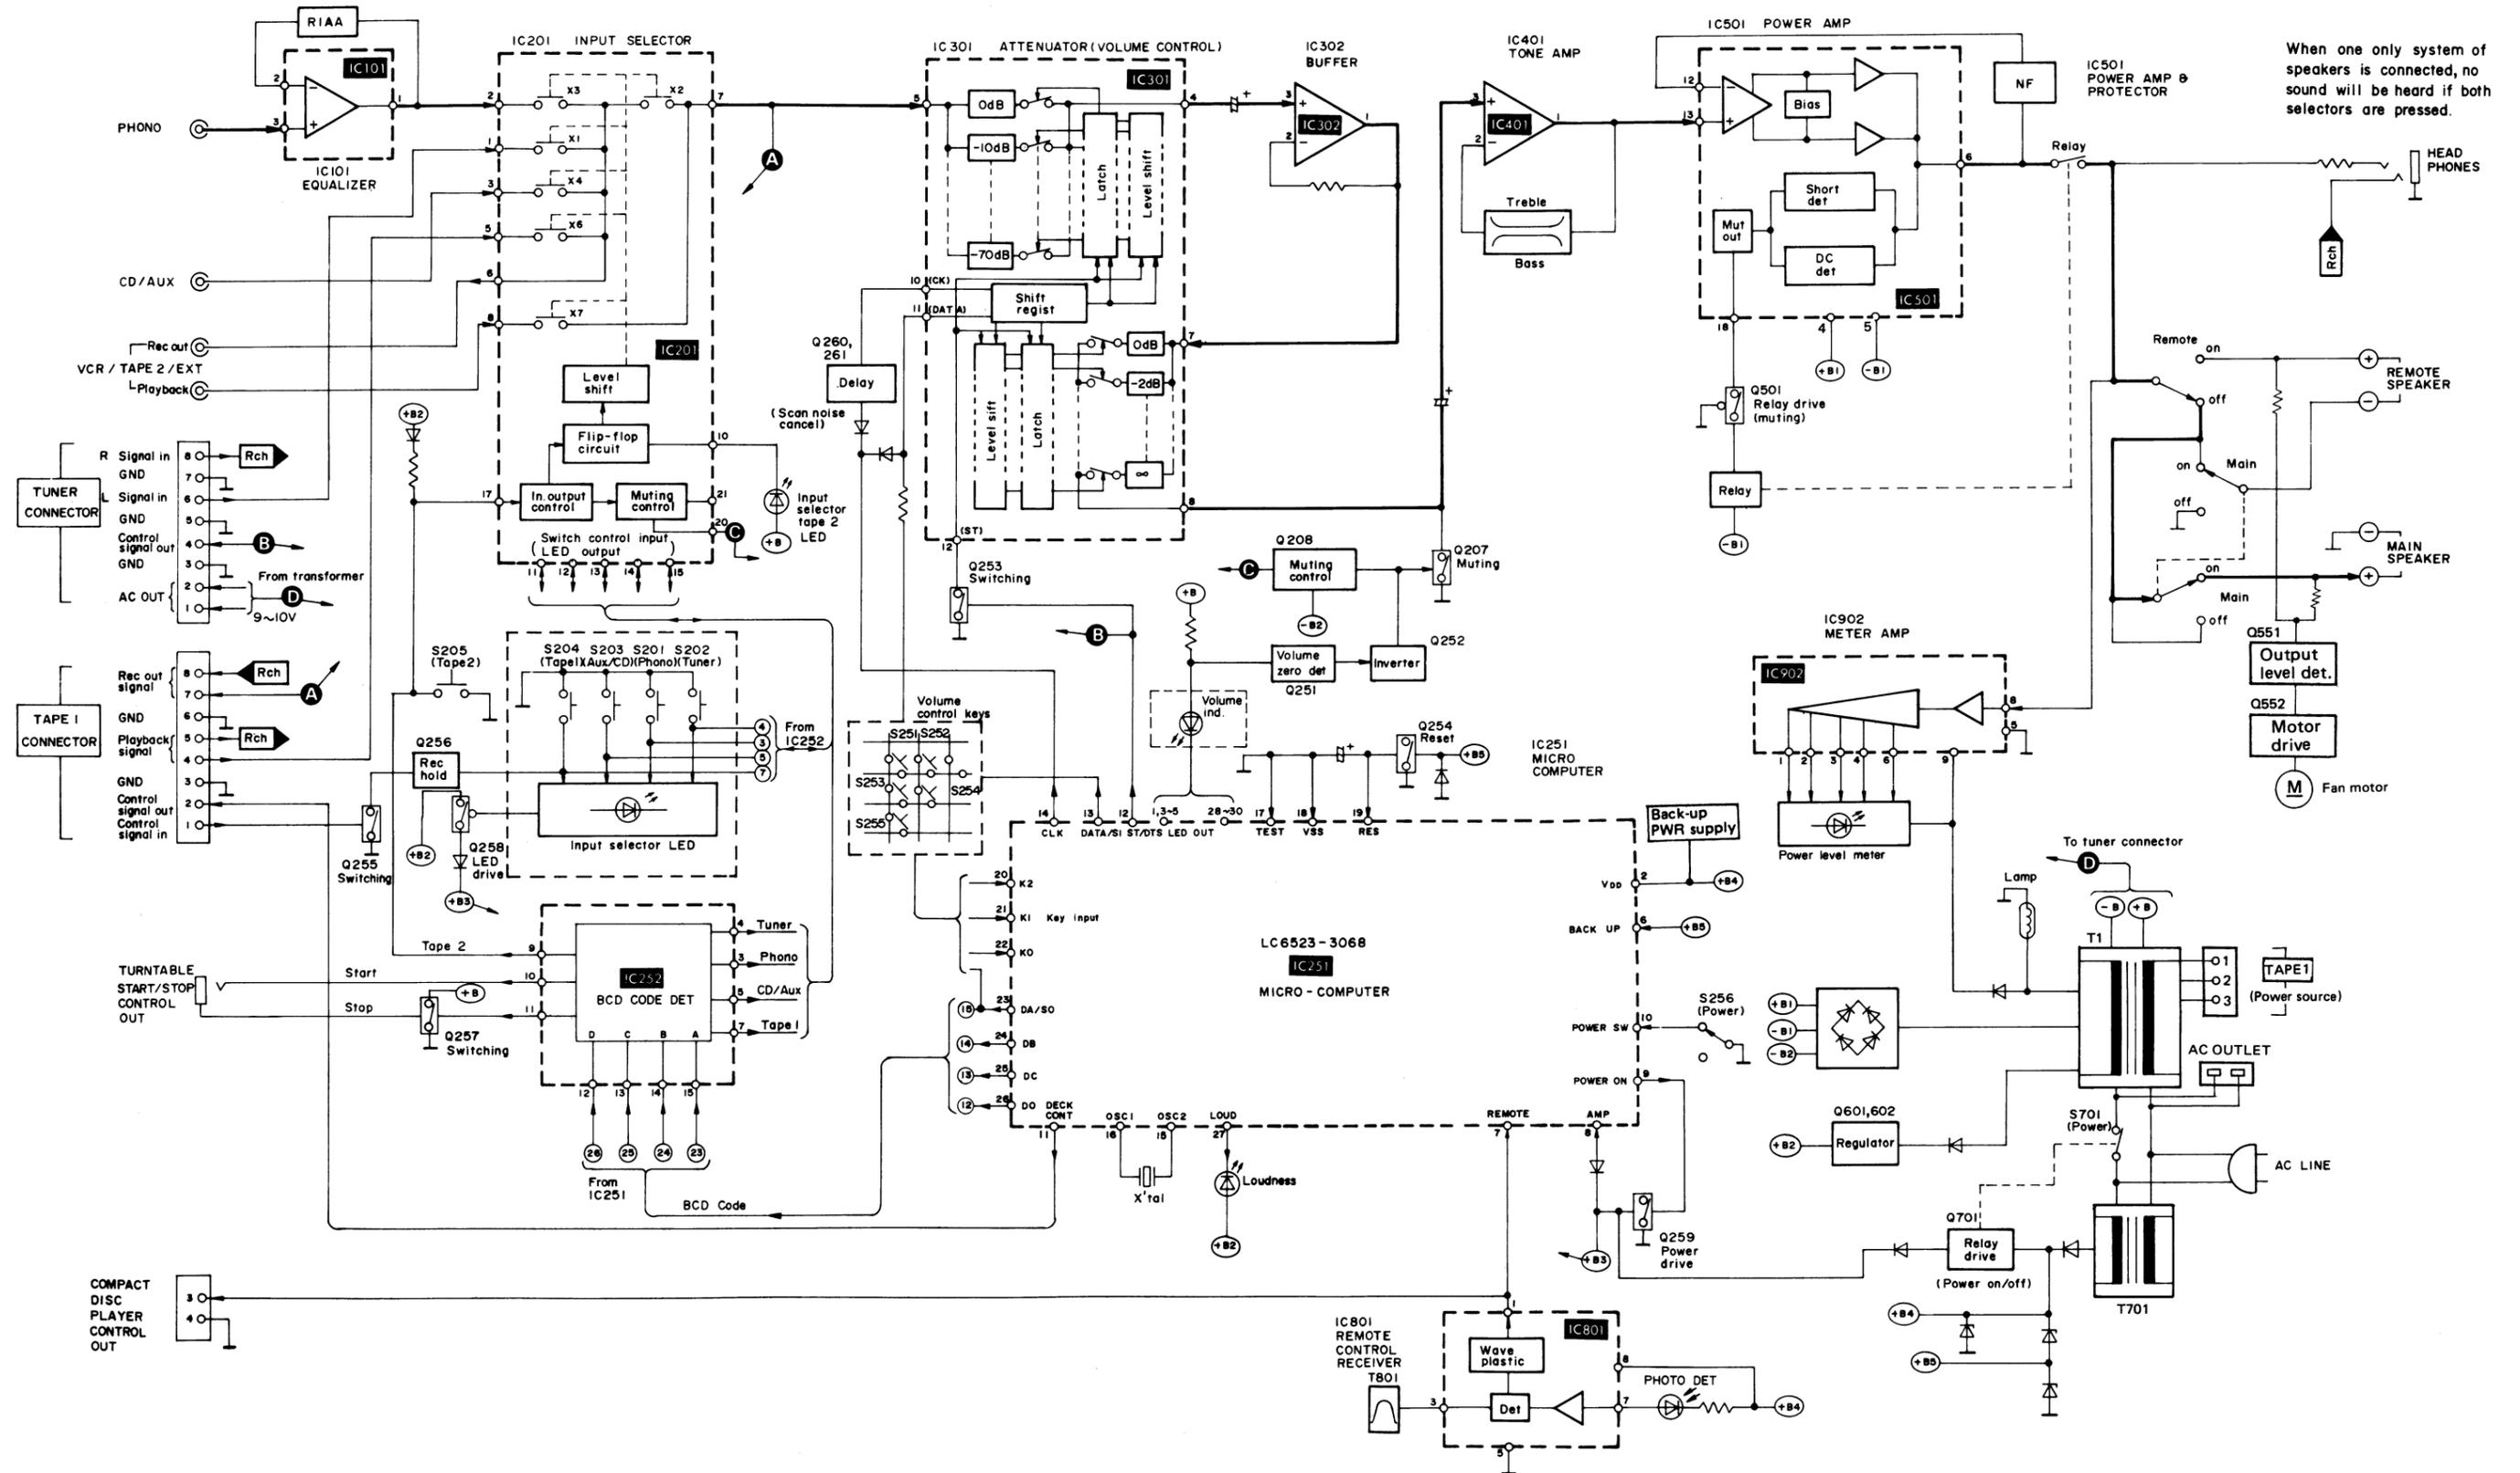

REPLACEMENT PARTS LIST

- Notes:**
- Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
 - Important safety notice: Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 - Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.
 - The parenthesized numbers in the column of description stand for the quantity per set.
 - The unit of resistance is OHM (Ω).
K = 1000 Ω , M = 1000K Ω
 - The unit of capacitance is MICROFARAD (μ F).
P = 10^{-6} μ F

Numbering System of Resistor

Example

ERD	25	F	J	101
Type	Wattage	Shape	Tolerance	Value

Resistor Type	Wattage	Tolerance
ERD : Carbon	12 : 1/2W	J : \pm 5%
ERG : Metal Oxide	2A : 2W	K : \pm 10%
ERC : Solid	S2 : 1/4W	
	25 : 1/4W	
	S1 : 1/2W	


Numbering System of Capacitor

Example

ECKD	1H	102	Z	F
Type	Voltage	Value	Tolerance	Peculiarity

Capacitor Type	Voltage	Tolerance
ECE : Electrolytic	0J : 6.3V	K : \pm 10%
ECC : Ceramic	1V : 35V	Z : +80%, -20%
ECK : Ceramic	1C : 16V	M : \pm 20%
ECF : Semi-conductor	1E : 25V	P : +100%, -0%
ECQ : Polyester	D : 25V	
	2H : 500V	

EXPLODED VIEW

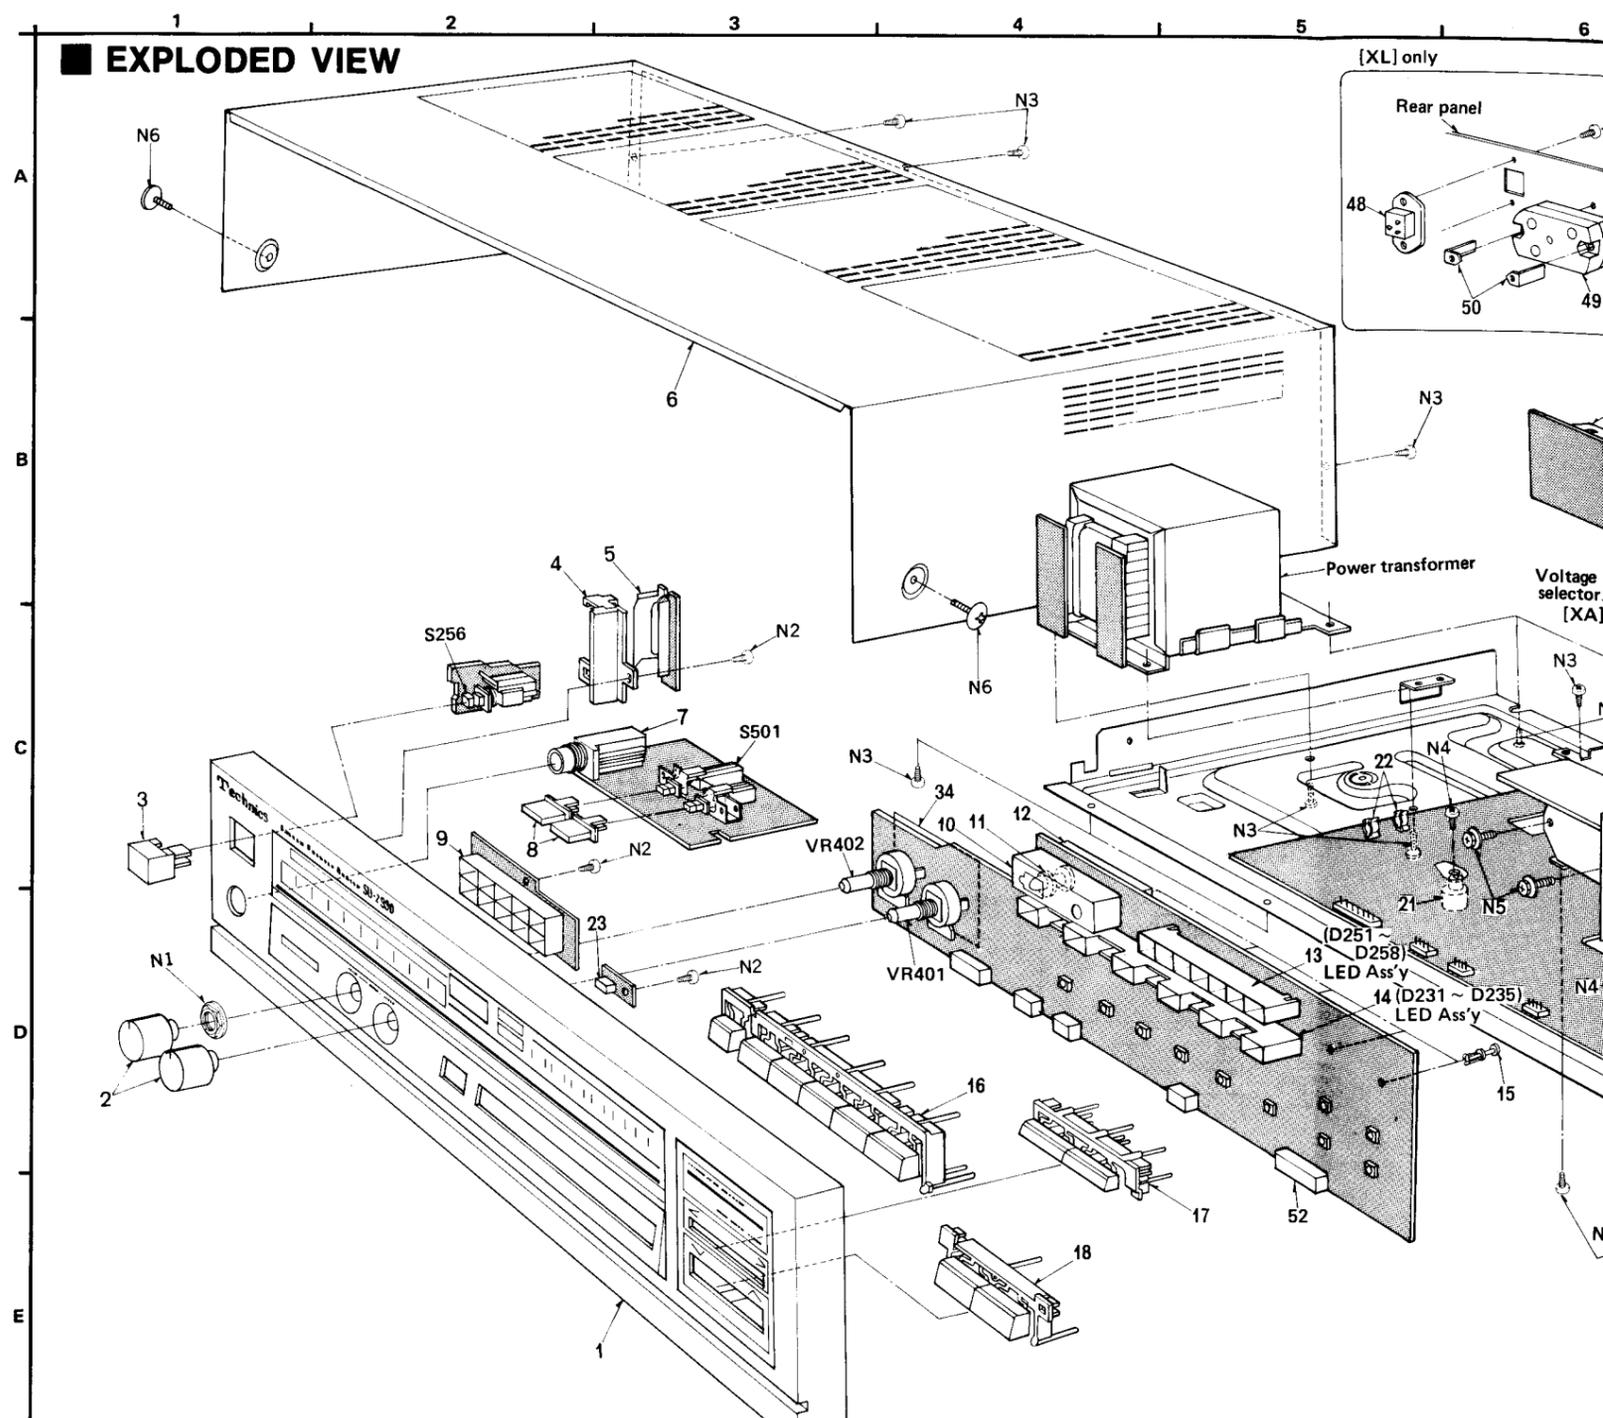


RESISTORS

Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value
R1	ERDS2TJ1R0	1	R260	ERDS2TJ564	560K	R313, 314	ERDS2TJ102	1K	R605	ERDS2TJ331	330
R101, 102	ERDS2TJ391	390	R261	ERDS2TJ223	22K	R315, 316	ERD25TJ103	10K	R606	ERDS2TJ103	10K
R103, 104	ERDS2TJ473	47K	R262, 263	ERDS2TJ103	10K	R401, 402	ERDS2TJ474	470K	R607	ERDS2TJ392	3.9K
R107, 108	ERDS2TJ271	270	R264, 265	ERDS2TJ103	10K	R403, 404	ERDS2TJ474	470K	R608	ERDS2TJ272	2.7K
R109, 110	ERDS2TJ184	180K	R266, 267	ERDS2TJ472	4.7K	R405, 406	ERDS2TJ332	3.3K	R609	ERDS2TJ153	15K
R111, 112	ERDS2TJ123	12K				R407, 408	ERDS2TJ183	18K	R702	ERDS2TJ103	10K
R113, 114	ERDS2TJ563	56K	R268	ERDS2TJ103	10K	R409, 410	ERDS2TJ681	680	R704	ERDS1FJ102	1K
R115, 116	ERDS2TJ102	1K	R271, 272	ERDS2TJ103	10K	R411, 412	ERDS2TJ152	1.5K	R705	ERDS2TJ103	10K
R151, 152[EG]	ERDS2TJ471	470	R273, 274	ERDS2TJ103	10K	R413, 414	ERDS2TJ223	22K	R706 [XA]	ERDS2TJ472	4.7K
R155, 156[EG]	ERDS2TJ102	1K	R275, 276	ERDS2TJ103	10K	R417, 418	ERDS2TJ392	3.9K	R707	ERDS2TJ471	470
R157, 158[EG]	ERDS2TJ102	1K	R277, 278	ERDS2TJ103	10K				R708	ERDS2TJ271	270
R159, 160[EG]	ERDS2TJ102	1K	R279, 280	ERDS2TJ103	10K	R419, 420	ERDS2TJ332	3.3K			
R201	ERDS2TJ684	680K	R281	ERDS2TJ103	10K	R501, 502	ERDS2TJ102	1K	R801	ERDS2TJ102	1K
R202, 203	ERDS2TJ224	220K	R282	ERDS2TJ563	56K	R503, 504	ERDS2TJ393	39K	R802	ERDS2TJ470	47
R204	ERDS2TJ224	220K	R283	ERDS2TJ103	10K	R505, 506	ERDS2TJ822	8.2K			
			R284	ERDS2TJ333	33K	R507, 508	ERDS2TJ124	120K	R803	ERDS2TJ103	10K
R205	ERDS2TJ123	12K				R509, 510	ERDS2TJ470	47	R804	ERDS2TJ101	100
R206	ERDS2TJ224	220K	R285	ERDS2TJ103	10K	R512	ERDS2TJ473	47K	R805	ERDS2TJ223	22K
R207	ERDS2TJ394	390K	R286	ERDS2TJ472	4.7K	R513	ERDS2TJ824	820K	R901, 902	ERDS2TJ474	470K
R208	ERDS2TJ103	10K	R290	ERDS2TJ473	47K	R514	ERD25TJ123	12K	R903, 904	ERDS2TJ103	10K
R209	ERDS2TJ474	470K	R291	ERDS2TJ102	1K	R515	ERG2ANJ152	1.5K	R905, 906	ERDS2TJ103	10K
R215	ERDS2TJ684	680K	R292, 293	ERD25TJ332	3.3K				R907, 908	ERDS2TJ330	33
R216	ERDS2TJ153	15K	R294	ERD25TJ103	10K	R517, 518	ERG2ANJ331	330	R909, 910	ERDS2TJ330	33
R221, 222	ERDS2TJ471	470	Except [XA]			R519, 520	ERDS1FJ4R7	4.7			
R226, 227	ERDS2TJ472	4.7K	R295	ERD25TJ472	4.7K	R521	ERD25FJ470	47			
R228, 229	ERDS2TJ472	4.7K				R522	ERDS2TJ822	8.2K			
			R301, 302	ERDS2TJ223	22K	R551, 552	ERDS2TJ223	22K			
R251, 252	ERDS2TJ681	680	R303, 304	ERDS2TJ333	33K	R553, 554	ERDS2TJ223	22K			
R253, 254	ERDS2TJ681	680	R305, 306	ERDS2TJ682	6.8K	R555, 556	ERDS2TJ392	3.9K			
R255, 256	ERDS2TJ681	680	R307, 308	ERDS2TJ123	12K						
R257, 258	ERDS2TJ681	680	R309, 310	ERDS2TJ224	220K	R602	ERG2ANJ100	10			
R259	ERDS2TJ681	680	R311, 312	ERDS2TJ184	180K	R603	ERG2ANJ222	2.2K			
						R604	ERD25FJ681	680			


CAPACITORS

Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value
C1	ECKD1H471KB	470P	C201	ECEA1CU101	100	C403, 404	ECKD1H391K	390P	C551	ECEA1CU100	10
C2	ECKD1H121KB	120P	C202	ECEA1CK100	10	C405, 406	ECKD1H331KB	330P	C601, 602	ECES1JU682U	6800
C3	ECEA0JK101	100							C604	ECEA1VU102	1000
C101, 102[EG]	ECCD1H390K	39P	C203	ECFTD563KXL	0.056	C407, 408	ECCD1H390K	39P	C605	ECEA1EU101	100
C103, 104	ECCD1H101K	100P	C204	ECEA1EK4R7	4.7	C409, 410	ECEA1CK100	10	C606, 607	ECKD1H103ZF	0.01
C105, 106	ECKD1H102KB	0.001	C205	ECEA1CK100	10	C413, 414	ECFTD123KXL	0.012	C608	ECKD1H103ZF	0.01
C107, 108	ECEA0JU330	33	C206	ECKD1H222KB	0.0022	C415, 416	ECFTD683KXL	0.068	C609	ECEA1CU471	470
C109, 110	ECFTD223KXL	0.022	C208	ECEA1HU0R1	0.1	C417, 418	ECFTD562KXL	0.0056	C609, 610	ECQV1H471JZ	470P
C111, 112	ECFTD682KXL	0.0068	C252	ECEA1HK010	1	C419, 420	ECFTD273KXL	0.027	C701	Δ ECKDKC103PF2	0.01
C113, 114	ECEA1HK010	1	C253	ECEA1CK100	10	C501, 502	ECEA1HN3R3	3.3	C702	ECEA1VU331	330
C115, 116	ECEA1CK100	10	C254	ECCD1H820K	82P	C503, 504	ECKD1H681KB	680P	C801	ECEA1CK100	10
C117	ECKD1H103ZF	0.01	C255	ECCD1H680K	68P	C505, 506	ECKD1H561KB	560P	C802	ECEA1CK220	22
C151, 152[EG]	ECCD1H180K	18P				C507, 508	ECCD1H040C	4P	C803	ECEA1EK4R7	4.7
C153, 154[EG]	ECCD1H151K	150P	C256	ECEA1HKR22	0.22				C804	ECFTD473KXL	0.047
C155, 156[EG]	ECCD1H101K	100P	C257	ECEA1HK010	1	C509, 510	ECEA1CU220	22			
C157, 158[EG]	ECCD1H101K	100P	C260	ECEA1CK220	22	C511, 512	ECFTD223KXL	0.022	C805	ECKD1H471KB	470P
C159, 160[EG]	ECCD1H101K	100P	C301, 302	ECEA1HK010	1	C513	ECEA0JU331	330	C806	ECEA1CU470	47
C161, 162[EG]	ECCD1H101K	100P	C303, 304	ECFTD333KXL	0.033	C514	ECQV1H224JZ	0.22	C901, 902	ECKD1H103ZF	0.01
C163, 164[EG]	ECKD1H103ZF	0.01	C305, 306	ECEA1EK3R3	3.3	C515	ECEA1H0330	33	C903, 904	ECEA1CK100	10
C165, 166[EG]	ECKD1H103ZF	0.01	C311, 312	ECEA1HK010	1	C518	ECKD1H103ZF	0.01	C703	ECKD1H223ZF	0.022
C167, 168[EG]	ECKD1H223ZF	0.022	C401, 402	ECEA1EK4R7	4.7	C523	ECEA2AU100	10			
C169, 170[EG]	ECKD1H223ZF	0.022									
C171, 172[EG]	ECKD1H221ZF	220P									
C173, 174[EG]	ECKD1H221ZF	220P									

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
INTEGRATED CIRCUITS											
IC1	MN6013D	Remote Control	Q253	DTC124ESTP	Transistor	D231	LN463YCPP	L.E.D.	COILS		
IC101[EG]	M5220L	Equalizer	Q254	DTC114YSTP	Transistor	D232 ~ 235	LN363GCPP	L.E.D.	L1	ELEA101JA	
IC101[Other]	M5218L	Equalizer	Q255	DTC144ESTP	Transistor	D251 ~ 257	LN463YCPP	L.E.D.	L201 ~ 206	SLQ210G1-D	
IC201	LC7818	Input Selector	Q256 ~ 259, 551, 602, 701	2SC3311-Q	Transistor	D258	LN863RCPP	L.E.D.	L301, 302	ELEPH181KA	
IC251	LC6523C-3068	Micro Computer				D271	MA150LF	Diode	L501, 502	SLQY07G-40	
IC252	DN74LS145	BCD Decord				D301, 302	MA4068M	Diode	L601	SLQZ650MH49	
IC301	TC9177P	Attenuator				D501, 703, 708 ~ 711	MA167	Diode	TRANSFORMERS		
IC302	M5218P	Buffer	Q260	DTA114ESTP	Transistor	D601 ~ 604	Δ SVDS3V20	Diode	T1[EK, XL]	Δ SLT5P253	
IC401	M5218L	Tone	Q261	DTC114ESTP	Transistor	D605, 606	1SR35200	Diode	T1[XA]	Δ SLT5P254-W	
IC501	SV13105	Power Amp.	Q501	2SA1309Q	Transistor	D607	MA4051L	Diode	T1[Other]	Δ SLT5P252	
IC801	LA7224	Receiver	Q552	2SD1265-O	Transistor				T701[XA]	Δ SLT5i25	
			Q702[XA]	2SC1685-QNC	Transistor				T701[Other]	Δ SLT5i24	
DIODES											
D1	LN66	L.E.D., Remote Control									
D201 ~ 203, 205, 206, 260 ~ 263, 265 ~ 268, 270, 551, 704, 714	MA165	Transistor									
TRANSISTORS											
Q1	UN1231	Transistor									
Q206 ~ 208	2SK301-QRS	Transistor									
Q251, 252	2SA1309Q	Transistor									

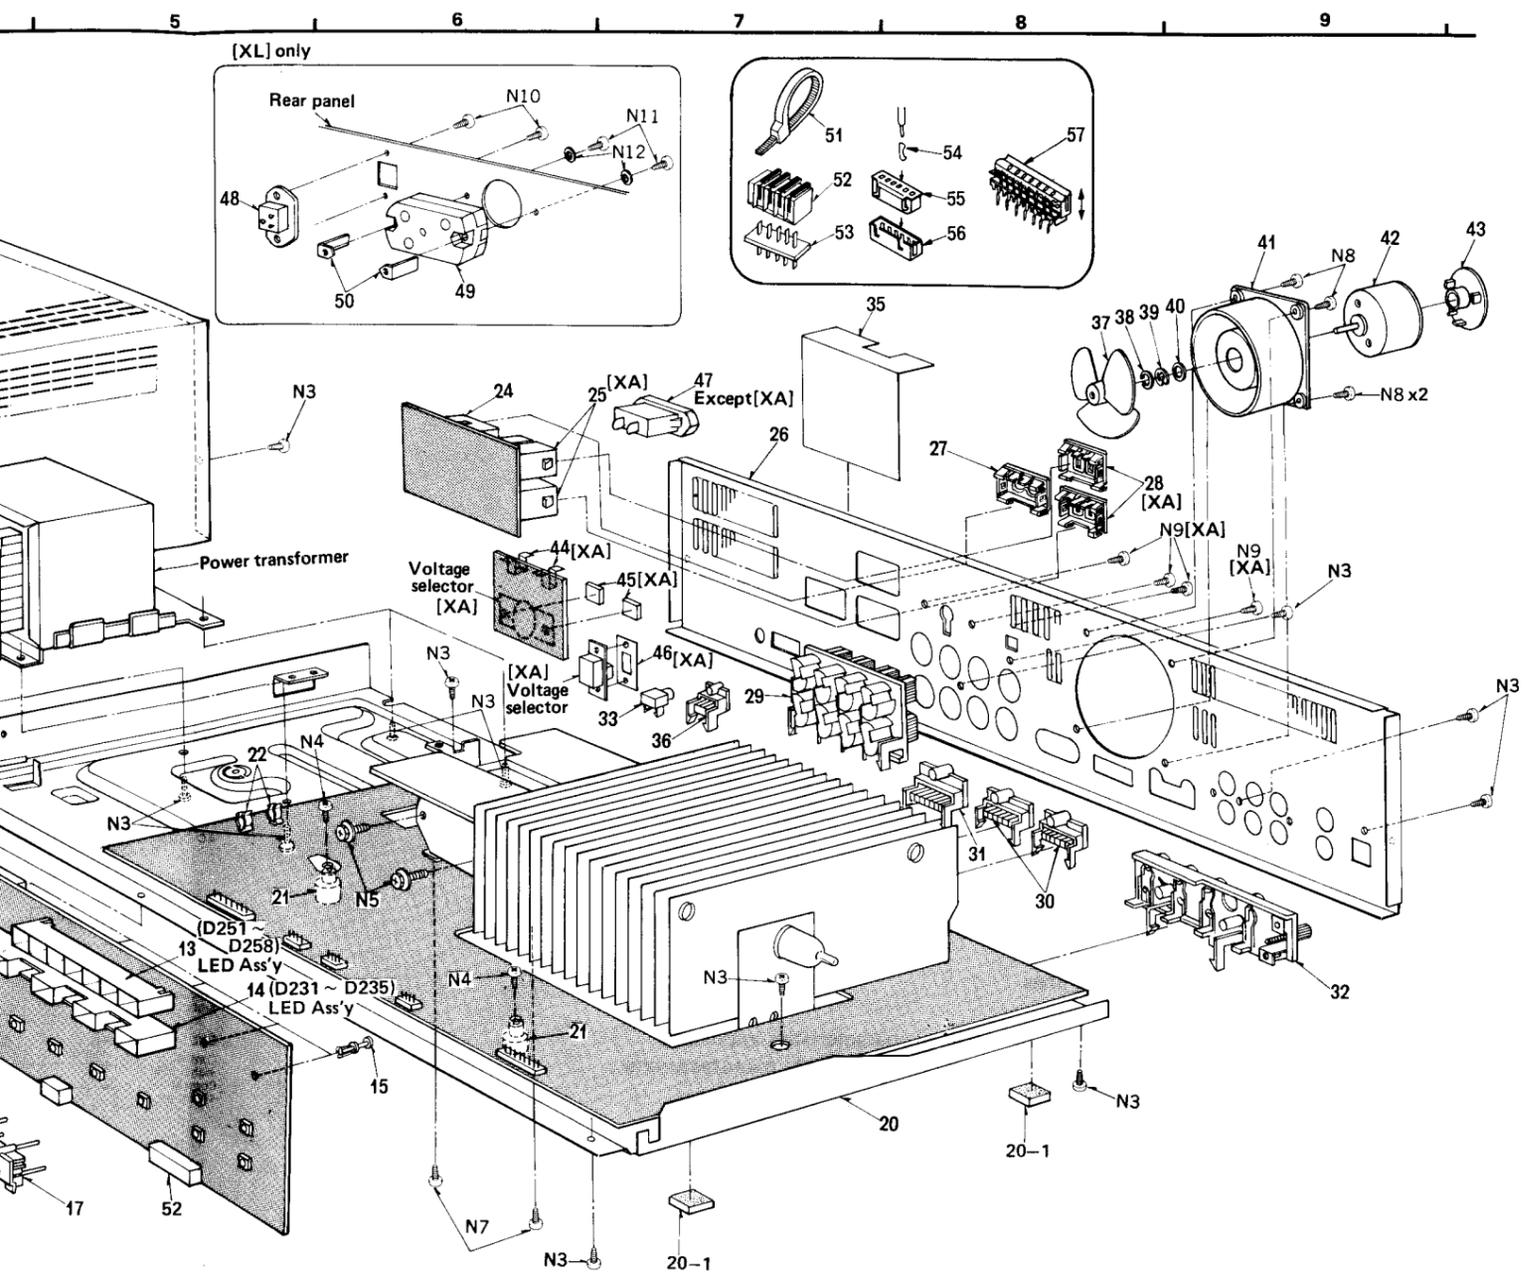

• Remote Control Unit (Transmitter)

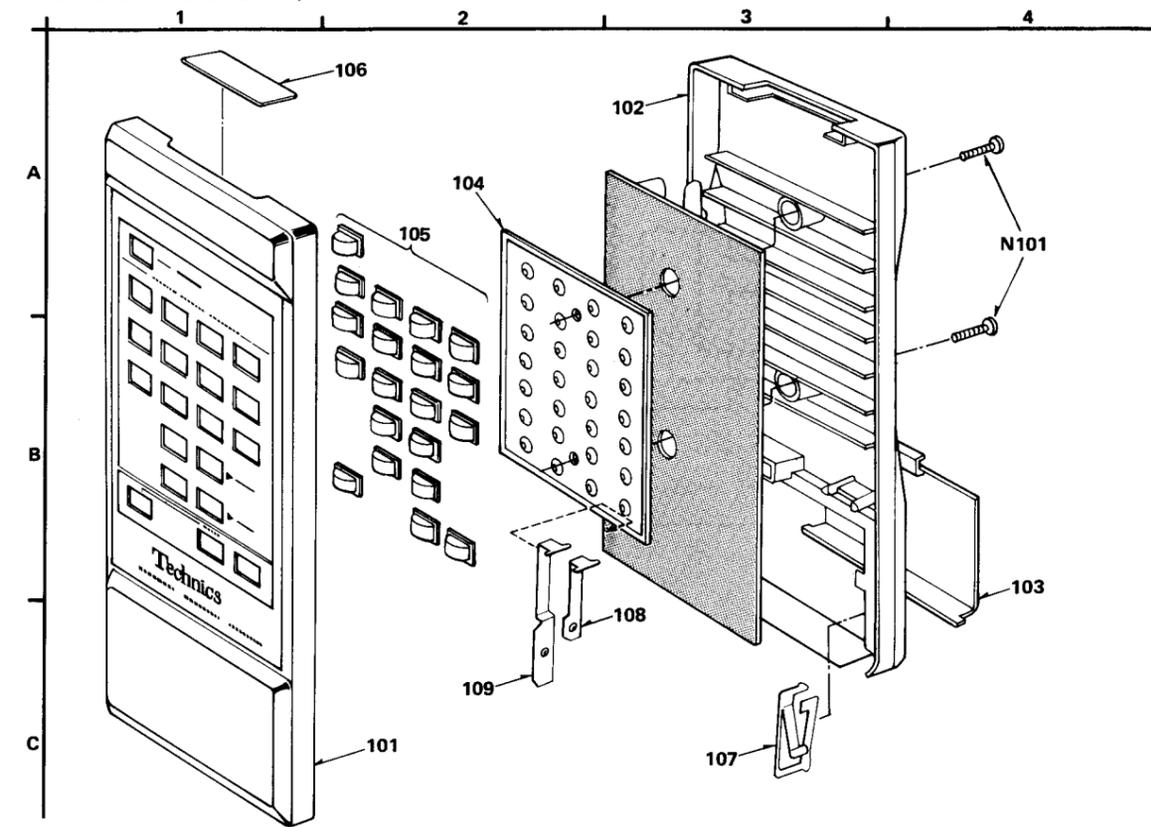

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
COILS			CRYSTALS			SWITCHES		
L1	ELEA101JA	Coil	X1	CSB420PB1	420kHz	S201~205,	SSG13	Key
L201~206	SLQZ10G1-D	Coil	X251	SVFCSA400MG	4MHz	251~255		
L301,302	ELEPH181KA	Coil	VARIABLE RESISTORS			S256	△ SSH1159	Power Speaker
L501,502	SLQY07G-40	Coil	VR401,402	EWC2XA020C15	Bass/Treble	S501,502	△ SSH2113	Volume Selector
L601	SLQZ650MH49	Coil	LAMP			S702 [XA]	△ ESE37263	Voltage Selector (Rotary Type)
TRANSFORMERS			FUSES			S703 [XA]	△ ESD391085	Voltage Selector (Side Type)
T1[EK, XL]	△ SLT5P253	Power Transformer	RELAYS			26[EK]	SGP6800-5A	Rear Panel
T1[XA]	△ SLT5P254-W	Power Transformer	BATTERY			26[Other]	SGPUZ990-KF	Rear Panel
T1[Other]	△ SLT5P252	Power Transformer	BAT1	BR2325-1VC	Lithium Battery	27	SJS9231A	AC Inlet Cover
T701[XA]	△ SLT5i25	Transformer Stand by				28[XA]	SJS9232A	AC Outlet Cover
T701[Other]	△ SLT5i24	Transformer Stand by				29	SJF4818-1	Speaker Terminal
T801	SLD9B3-Z	Coil				30	SJS804	Socket

Ref. No.	Part No.	Description
CABINET and CHASSIS PARTS		
1	SGYUZ990-KE	Front Panel Ass'y (1)
2	SBN1032-4	Knob, Tone (2)
3	SBC666-3	Button, Power (1)
4	SMP412	Lamp Holder (1)
5	SMZ320	Reflection Plate, Lamp (1)
6 [EK]	SKCUZ990-KK	Cabinet Ass'y (1)
6 [Other]	SKC1950K992	Cabinet (1)
7	SJJ134B	Headphone Jack (1)
8	SBC315-7	Button, Speaker (2)
9	LN108326P	L.E.D. Ass'y (1)
10	SMC1223	Shield Case (1)
11	SHR9797	Holder (1)
12	SMC6406	Shield Plate (1)
13	LN074328P	L.E.D. Ass'y (1)
14	LN061330P	L.E.D. Ass'y (1)
15	SHR415	Nylon Pin (6)
16	SBC822	Button, Selector (1)
17	SBC823	Button, Balance (1)
18	SBC821	Button, Volume (1)
20	SKUUZ990-KC	Bottom Cover Ass'y (1)
[20-1]	[SKL293	Foot (4)
21	SHE187-1	Holder, P.C.B. (2)
22	SJT390	Fuse Holder (2)
23	LN012280P	LED Ass'y (1)
24 Except [XL]	SJS9231B	AC Inlet (1)
25 [XA]	SJS9232B	AC Outlet (2)
26[E]	SGP6800-1A	Rear Panel (1)
26[EG]	SGP6800-1B	Rear Panel (1)
26[XA]	SGP6800-2A	Rear Panel (1)
26[XL]	SGP6800-3A	Rear Panel (1)
26[EK]	SGP6800-5A	Rear Panel (1)
26[Other]	SGPUZ990-KF	Rear Panel (1)
27	SJS9231A	AC Inlet Cover (1)
28[XA]	SJS9232A	AC Outlet Cover (2)
29	SJF4818-1	Speaker Terminal (1)
30	SJS804	Socket (2)
31	SJS604	Socket (1)
32	SJF3062-5N	Input Terminal (1)
33	SJJ130-1	Jack (1)
34	SMC1240	Shield Cover (1)
35	SMX920	Insulation Cover (1)
36	SJS306	Socket (1)
37	SHE174	Fan (1)

Ref. No.	Part No.	Description
38	SUS271	Ring Spring (1)
39	XUC2	E Ring (1)
40	SDX323	Spacer (1)
41	SMEUS09-KN	Motor Case (1)
42	MMNGC2RKMS	Motor (1)
43	SME97-1	Motor Case Cover (1)
44[XA]	SJT388	Fuse Holder (2)
45[XA]	SHE209	Spacer, Voltage Selector (2)
46[XA]	SHE208	Bake Plate, Voltage Selector (1)
47[EK]	△ SJS9227	AC Outlet (1)
47 Except [EK, XL, XA]	△ SJS9225	AC Outlet (1)
48[XL]	△ SJS301	AC Inlet (1)
49[XL]	△ SJS9319	AC Outlet (1)
50[XL]	SUW2968	Bracket, AC Outlet (2)
51	SHR301	Clamper (1)
52	SJS5341	Connector, 3Pin (J2) (1)
52	SJS5533	Connector, 5Pin (J3,4) (2)
52	SJS5817	Connector, 8Pin (J1,13) (2)
53	SJT3311	Post, 3Pin (J2) (1)
53	SJT3505	Post, 5Pin (J3,4) (2)
53	SJT3805	Post, 8Pin (J1,13) (2)
54	SJT783	Connector Pin (2)
55	SJS5215	Connector (1)
56	SJT3213	Post (1)
57	SJT30543-V	Socket (1)
57	SJT30643-V	Socket (1)
SCREWS		
N1	SNE4021	Nut (1)
N2	XTB3+8G	Tapping, ⊕ 3x8 (2)
N3	XTB3+8JFZ1	Tapping, ⊕ 3x8 (19)
N4	XTB3+20B	Tapping, ⊕ 3x20 (2)
N5	SNE2118	Power IC (2)
N6	SNE2095-5	Cabinet (2)
N7	XTW3+8T	Tapping, ⊕ 3x8 (2)
N8	XTB3+10JFZ	Tapping, ⊕ 3x10 (4)
N9[XA]	XYN3+C10FZ	Voltage Selector (4)
N10[XL]	XTB3+10JFZ	AC Inlet (2)
N11[XL]	XYN3+F16FZ	AC Outlet (2)
N12[XL]	XWA3BFZ	Washer (2)

Ref. No.	Part No.	Description
ACCESSORIES		
A1[EK]	△ SFDAC05G02	AC Cord (1)
A1[XL]	△ SJA131	AC Cord (1)
A1[XA]	△ SJA168-1	AC Cord (1)
A1[Other]	△ SFDAC05E03	AC Cord (1)
A2	SJP2257	Cord, Player Remote Control (1)
A3[EK]	SJP5219-1	Plug (1)
A4[XA]	SJP9215	Plug Adaptor (1)
A5	SWKUZ990KM	Connection Cord (1)
A6	UM-3NEP-2P	Battery (2)
A7[EK]	SQF12794	Instruction Book (1)
A7[EG]	SQF12795	Instruction Book (1)
A7[XA]	SQF12796	Instruction Book (1)
A7[Ei]	SQF12797	Instruction Book (1)
A7[Other]	SQF12793	Instruction Book (1)
PACKING PARTS		
P1[EK]	SPG5723	Carton Box (1)
P1[EF]	SPG5724	Carton Box (1)
P1[Other]	SPG5722	Carton Box (1)
P2	SPS4751	Pad, Left (1)
P3	SPS4752	Pad, Right (1)
P4	SPS4716	Pad, Remote Control (1)
P5	SPP723	Polyethylene Sheet (1)

• REMOTE CONTROL UNIT		
Ref. No.	Part No.	Description
CABINET and CHASSIS PARTS		
101	UR64VCS116	Top Case Ass'y (1)
102	UR64VCS117	Bottom Case Ass'y (1)
103	UR64EC121	Battery Cover (1)
104	UR64CT122	Rubber Contact (1)
105	UR64BT123A	Button (20)
106	UR64SB125	Tinted Plate (1)
107	UR52TD101	Battery Terminal, ⊕, ⊖ (1)
108	UR64TD127	Battery Terminal, ⊕ (1)
109	UR64TD128	Battery Terminal, ⊖ (1)
SCREW		
N101	XTS26+12GFZ	Tapping, ⊕ 2.6 x 12 (2)