


# STEREO INTEGRATED AMPLIFIER

# A-400

## SERVICE MANUAL

### FRONT PANEL

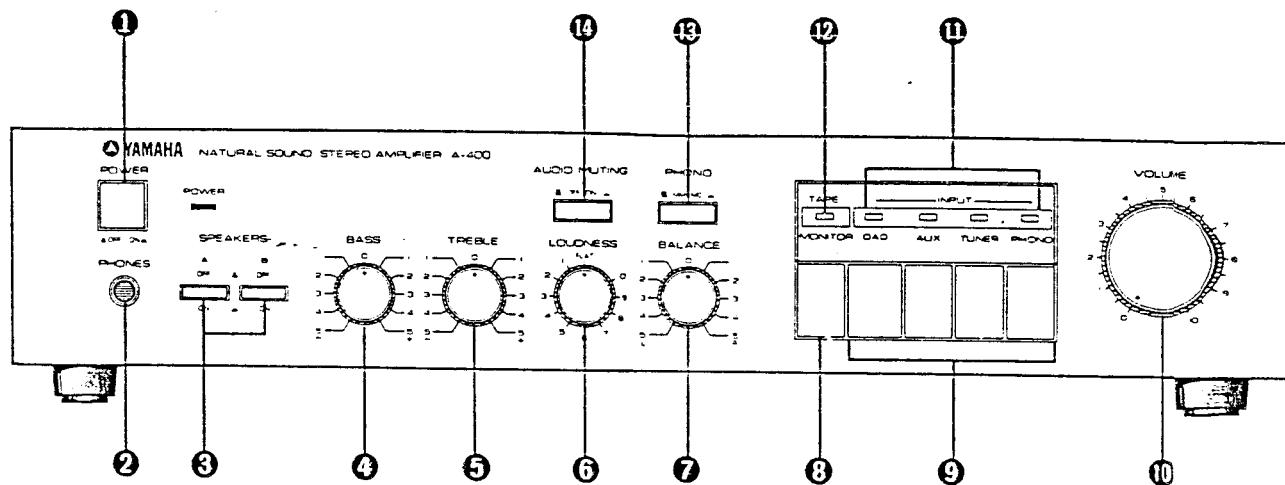

- ① POWER SWITCH
- ② HEADPHONES JACK
- ③ SPEAKER SWITCHES
- ④ BASS CONTROL
- ⑤ TREBLE CONTROL
- ⑥ LOUDNESS CONTROL

- ⑦ BALANCE CONTROL
- ⑧ TAPE MONITOR BUTTON
- ⑨ INPUT SELECTOR BUTTONS
- ⑩ VOLUME CONTROL
- ⑪ INPUT INDICATORS
- ⑫ TAPE MONITOR INDICATOR
- ⑬ PHONO SELECTOR
- ⑭ AUDIO MUTING SWITCH

### CONTENTS

TO SERVICE PERSONNEL .....	1
SPECIFICATIONS .....	1
REAR PANELS .....	2
INTERNAL VIEW .....	3
DISASSEMBLY PROCEDURES .....	3
ADJUSTMENTS .....	5
BLOCK DIAGRAM .....	5
PRINTED CIRCUIT BOARD .....	6
WIRING DIAGRAM .....	7
SCHEMATIC DIAGRAM .....	8

SINCE 1887



**YAMAHA**

NIPPON GAKKI CO., LTD. HAMAMATSU, JAPAN

Printed in Japan 11.1 2.6k

004491


## ■ TO SERVICE PERSONNEL

(Prepared in accordance with UL Standard 1270)

Before service of this appliance by you, please carefully read this service manual.

Please make Leakage-current or Resistance measurements by suitable meter to determine that exposed parts are acceptably insulated from the supply circuit before returning the appliance to the customer.

### LEAKAGE CURRENT MEASUREMENT CIRCUITS

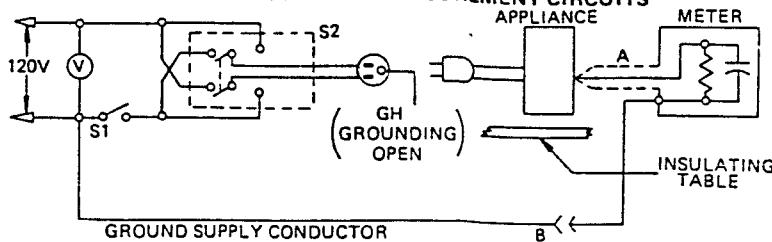

Appliance intended for connection to a 120 volt power supply.

- A PROBE WITH SHIELDED LEAD.
- B SEPARATED AND USED AS CLIP WHEN MEASURING CURRENTS FROM ONE PART OF APPLIANCE TO ANOTHER.

Confirm that the leakage current is not more than 0.5mA

## ■ SPECIFICATIONS

<b>Continuous Power Per Channel</b>		
20Hz ~ 20kHz		
(0.015% THD, 8Ω)	40W	
1kHz (0.006% THD, 8Ω)	45W	
<b>DIN Standard Output Power</b>		
<b>Per Channel</b>		
1kHz (1% THD, 8Ω)	50W (G)(B)(A)	
<b>Power Bandwidth</b>		
0.05% THD, 20W (8Ω)	10Hz ~ 40kHz	
<b>Damping Factor</b>		
(at 1kHz, 8Ω)	better than 37	
<b>Maximum Input Signal Level</b>		
Phono MC	10mV	
MM	180mV	
<b>Output Level/Impedance</b>		
RecOut	150mV/470Ω	
<b>Headphone Jack Rated Output/Impedance</b>		
	0.6V/100Ω	
<b>Frequency Response</b>		
AUX, Tape, Tuner	20Hz ~ 20kHz, -0.2dB	
<b>RIAA Equalization Deviation</b>		
Phono MC	± 0.5dB	
MM	± 0.3dB	
<b>Total Harmonic Distortion</b>		
Phono MC to Rec Out (3V)	0.01%	
MM to Rec Out (8V)	0.007%	
AUX, Tape, Tuner to Sp Out (20W/8Ω)	0.015%	
<b>Intermodulation Distortion</b>		
AUX, Tape, Tuner Rated Output/8Ω	0.02%	
<b>Signal-to-Noise Ratio (IHF-A-Network)</b>		
Phono MC (500μV, Input shorted)	76dB/71dB (G)	
MM (5mV, Input shorted)	92dB/90dB (G)	
AUX, Tape, Tuner (Input shorted)	97dB	
<b>Signal-to-Noise Ratio (New IHF)</b>		
Phono MC	74dB	
MM	78dB	
AUX, Tape, Tuner	80dB	

<b>Residual Noise (IHF-A-Network)</b>	less than 200μV
<b>Channel Separation</b>	
Phono MM, AUX, Tape	40Hz 68dB 1kHz 60dB 10kHz 60dB
<b>Tone Control Characteristics</b>	
Bass boost/cut	± 10dB (at 50Hz)
Bass turnover frequency	350Hz
Treble boost/cut	± 10dB (at 20kHz)
Treble turnover frequency	3.5kHz
<b>Continuous Loudness Control (Level-related equalization)</b>	
Attenuation	20dB (at 1kHz)
<b>Audio Muting</b>	
	-20dB
<b>Gain Tracking Error (0 ~ -60dB)</b>	
	3dB
<b>Power Supplies</b>	
U.S.A. and Canadian models	AC 120V, 60Hz
General model	AC 110/120/220/240V, 60/50Hz
European model	AC220V, 50Hz
British and Australian models	AC240V, 50Hz
<b>Power Consumption</b>	
U.S.A. model	160W
Canadian model	160W
General model	160W
British, Australian and European models	220W
<b>AC Outlet</b>	
Switched x 2	100W max.
Unswitched x 1	200W max.
<b>Dimensions (WxHxD)</b>	
	435 x 92 x 293mm (17-1/8x3-5/8x11-1/2")
<b>Weight</b>	
	5.3kg (11.7 lbs)

(A) .... Australian model only.


(G) .... European model only.

(B) .... British model only.


Specifications subject to change without notice.

## REAR PANELS


### ▼ U.S. & CANADIAN MODELS

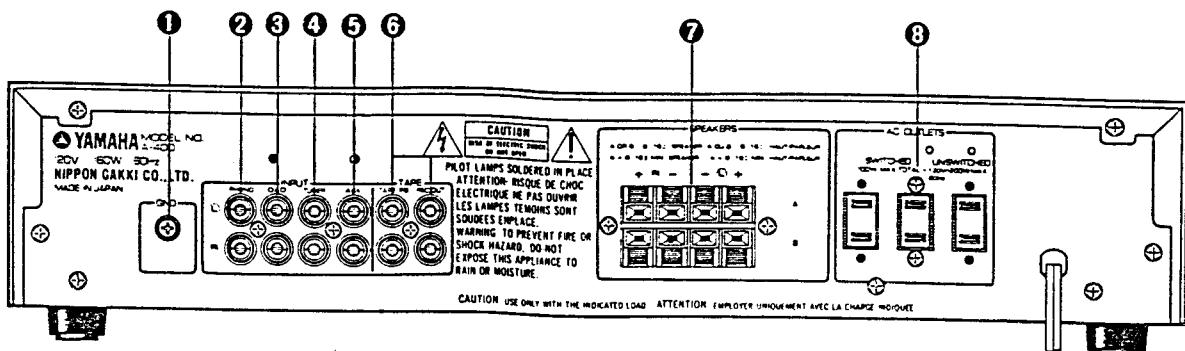


### ▼ GENERAL MODEL

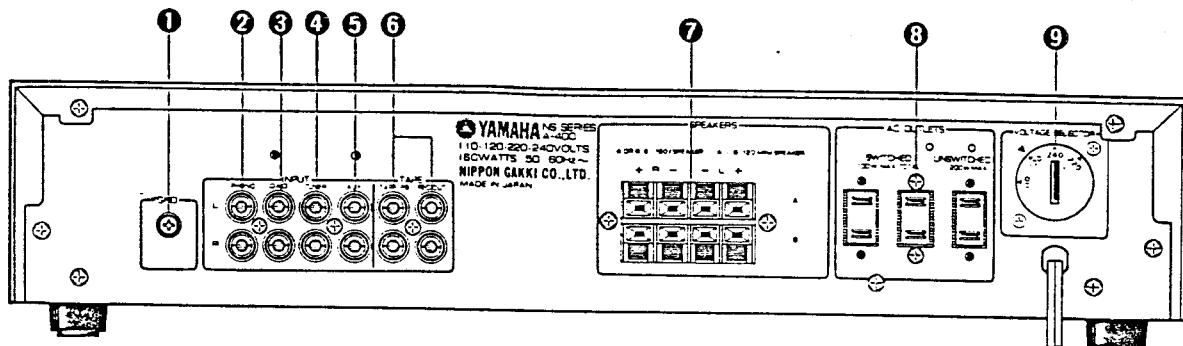

### ▼ BRITISH & AUSTRALIAN MODELS

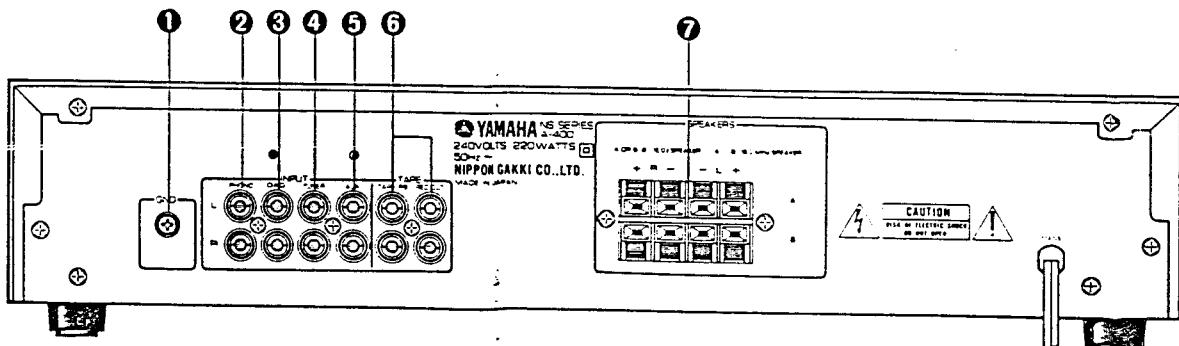


### ▼ EUROPEAN MODEL

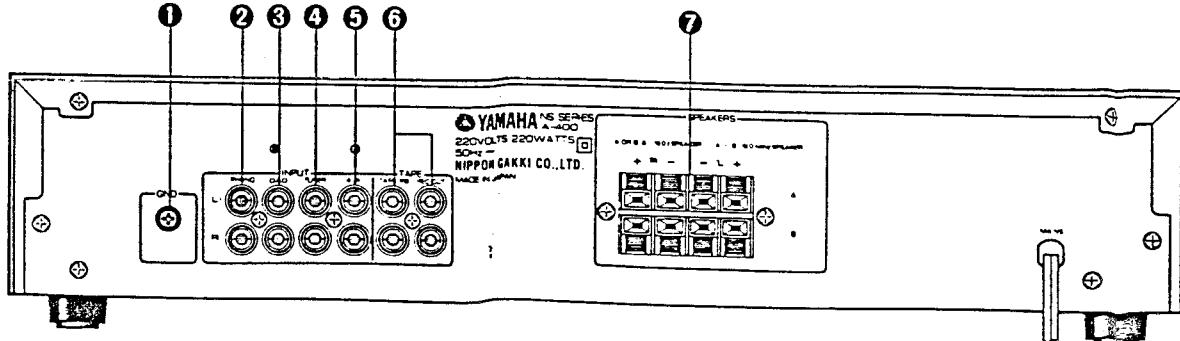

- ① GND TERMINAL
- ② PHONO INPUT JACKS
- ③ DAD INPUT JACKS
- ④ TUNER INPUT JACKS
- ⑤ AUX INPUT JACKS

- ⑥ TAPE PB/REC OUT JACKS
- ⑦ SPEAKER TERMINALS
- ⑧ AC OUTLETS
- ⑨ VOLTAGE SELECTOR

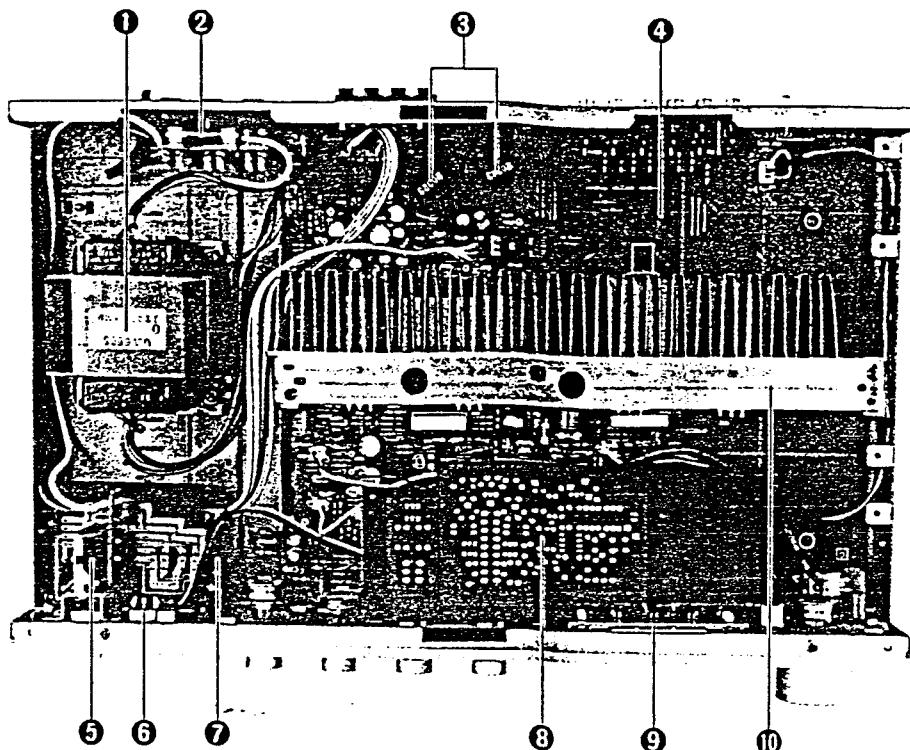**INTERNAL VIEW****① POWER TRANSFORMER**

U.S.A. &amp; Canadian models: GA66070


European model: GA66080

British &amp; Australian models: GA66090


General model: GA66060

**② FUSE****③ ELECTROLYTIC CAPACITOR**6800 $\mu$ F 50V: FZ00368**④ MAIN CIRCUIT BOARD****⑤ POWER SWITCH****⑥ POWER LED CIRCUIT BOARD****⑦ SPEAKER SWITCH CIRCUIT BOARD****⑧ EQUALIZER CIRCUIT BOARD****⑨ LED UNIT****⑩ HEAT SINK****DISASSEMBLY PROCEDURES****1. TOP COVER removal**

Remove screws ① through ⑥ in fig. 1 and then remove the top cover.

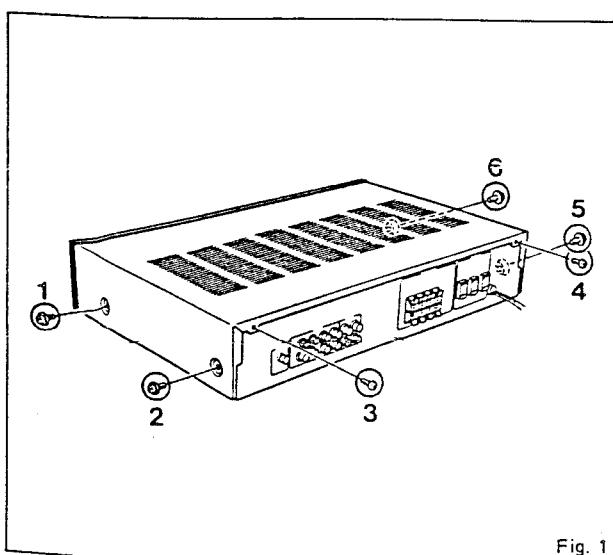
**2. BOTTOM COVER removal**

Remove screws ① through ⑤ in fig. 2 and then remove the bottom cover.

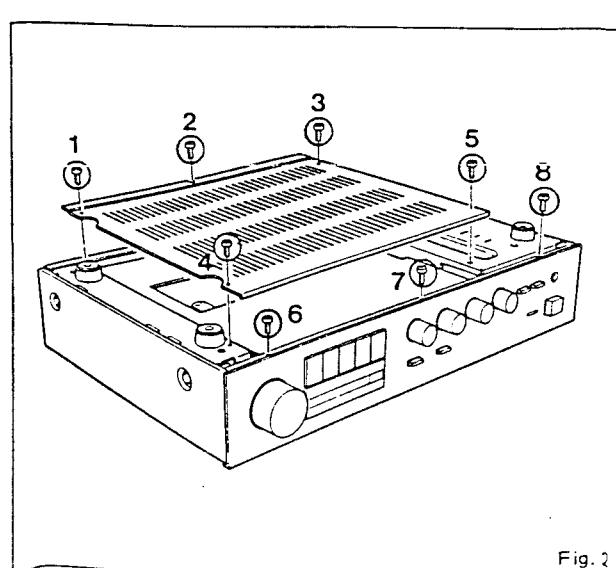

### 3. FRONT PANEL removal

- Remove the knobs.  
\* These are merely inserted, so you can remove them by pulling forward.
- Remove screws ⑥ through ⑧ in Fig. 2 and ① and ② in Fig. 3 and then remove the front panel.

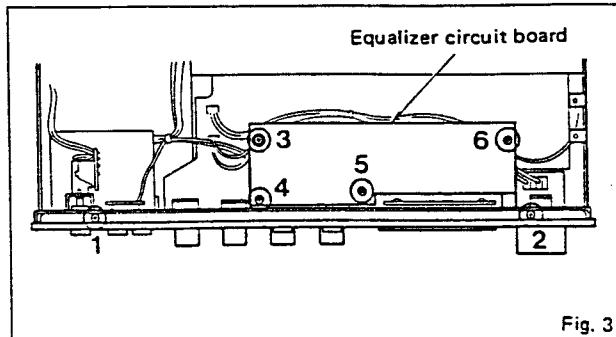


### 4. EQUALIZER CIRCUIT BOARD removal

Remove screw ③ and plastic rivets ④ through ⑥ in fig. 3 and then remove the equalizer circuit board.  
In this condition, you can exchange almost all parts of equalizer, tone control and main amplifier circuit.

### 5. BASS, TREBLE, LOUDNESS and BALANCE control replacement



- Remove the front panel.
- Remove the equalizer circuit board.
- Remove the power LED circuit board by removing the LED holder and plastic rivet as shown in fig. 4.
- Remove screw ① and headphone jack attaching plate in fig. 4, and remove the speaker switch circuit board.
- Remove hexagonal nuts ⑦ through ⑩ in fig. 4.
- Remove screws ② through ⑥ in fig. 4 and then remove the sub frame.

In this condition, you can remove and replace each controls by unsoldering.

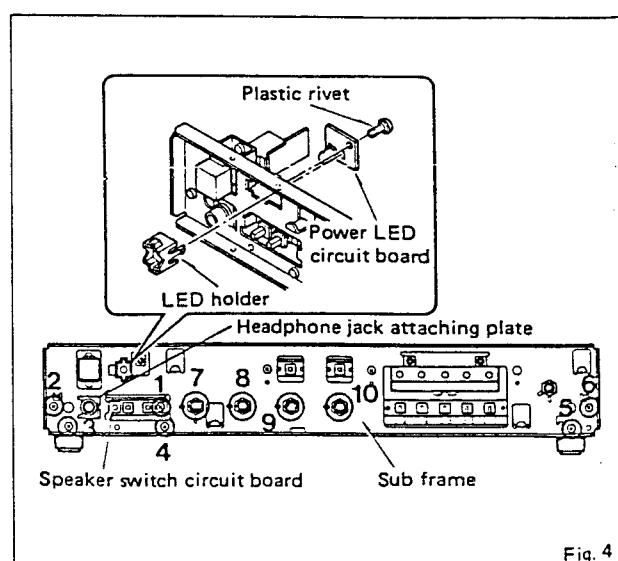


### 6. MAIN CIRCUIT BOARD removal

- Disconnect the lead wires connected to the main circuit board.
- Remove screws ① through ④ in fig. 5 by which power transistors are screwed down.
- Remove screws ⑤ through ⑧ in fig. 5 and remove the heat sink.
- Remove the sub frame as given in procedure 5 (control replacement).
- Remove screws ① through ⑤ in fig. 6.
- Remove screws ⑨ through ⑫ in fig. 5 and then remove the main circuit board.

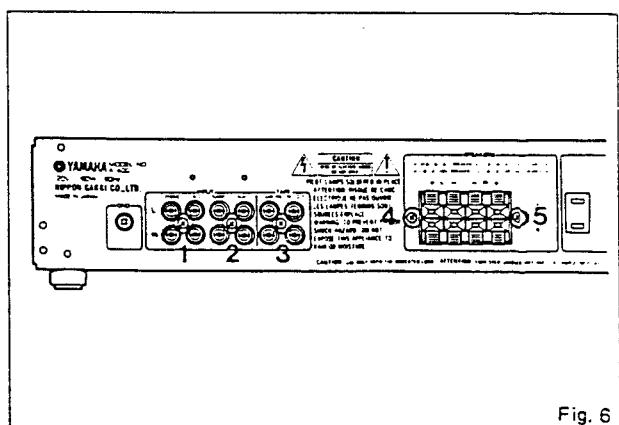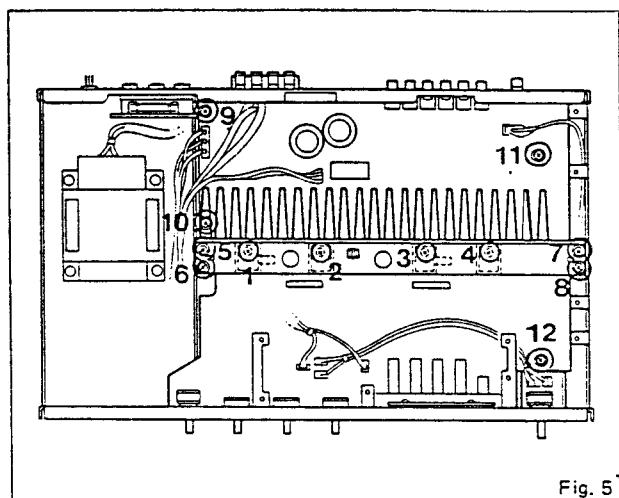

## ADJUSTMENTS

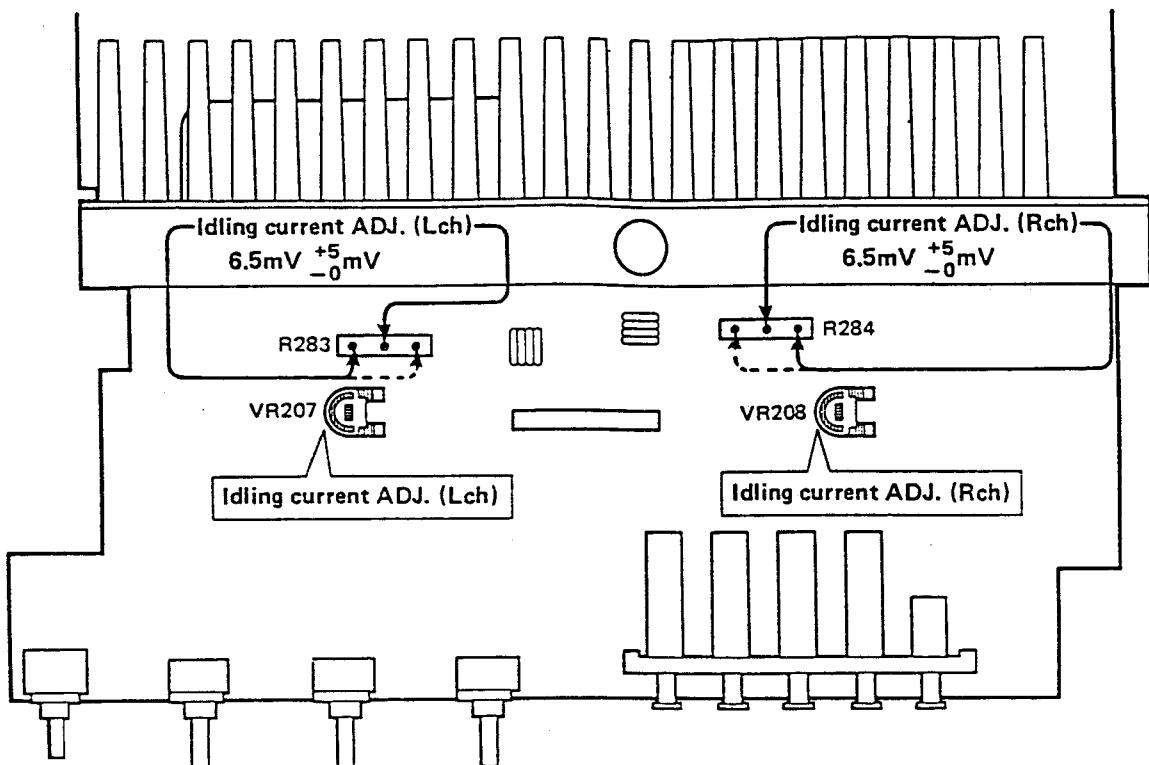


### IDLING CURRENT adjustment

When replacing the power and drive transistors, adjust idling current. After the power has been turned on, age about 5 minutes in non loaded condition. Adjust VR207(Lch) and 208(Rch) so that the voltage between the center terminals of R283(Lch) and 284(Rch) and outside terminals of R283 and 284 come to  $6.5mV \pm 5\% mV$  DC.

	Test points	Adjustment points	Rating
Lch	Center terminal of R283 and outside terminal	VR207	$6.5 \pm 5\% mV$
Rch	Center terminal of R284 and outside terminal	VR208	$6.5 \pm 5\% mV$

## BLOCK DIAGRAM (U.S.A. & Canadian models)

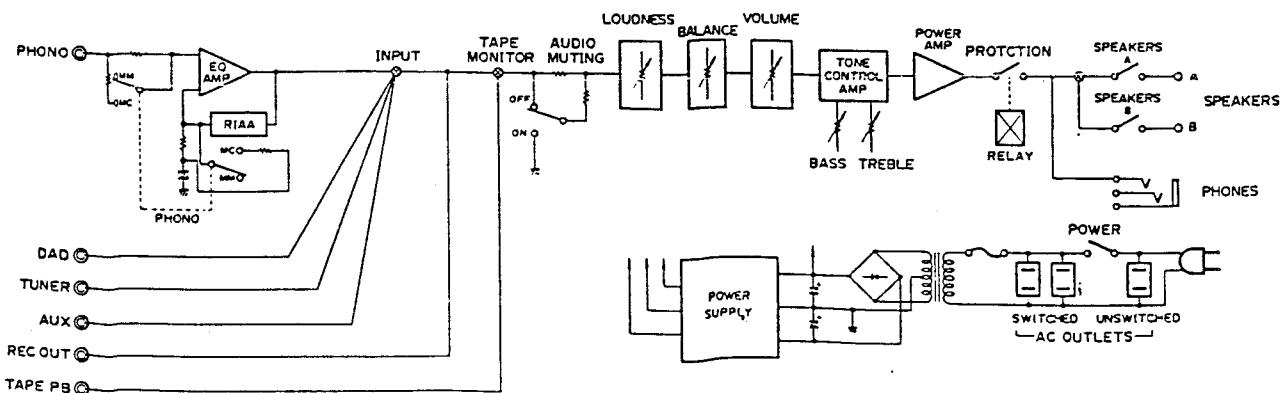

A-400

B

6

1

E

## **■ EXPLODED VIEW**



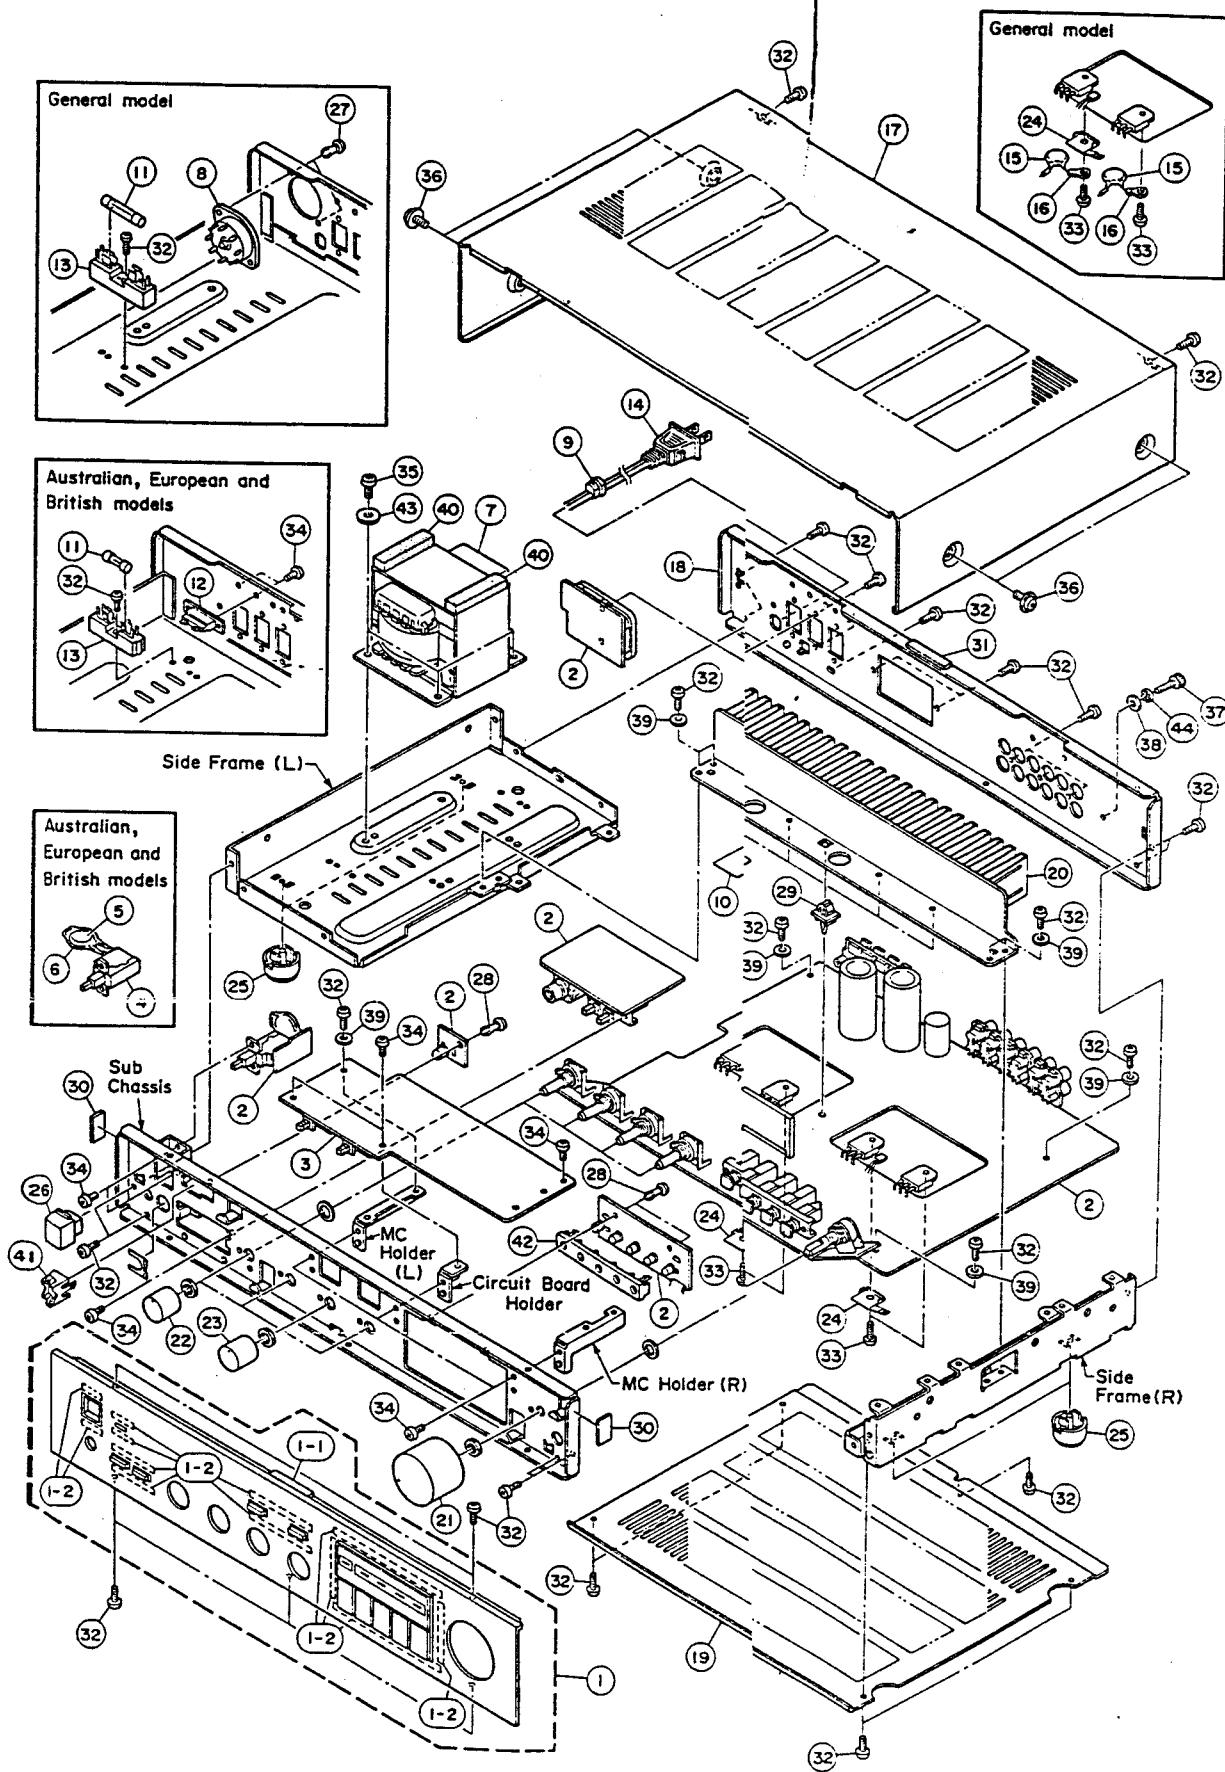


Foto von Fotokopie, daher leider nicht besser möglich


### PRINTED CIRCUIT BOARD (Pattern Side)

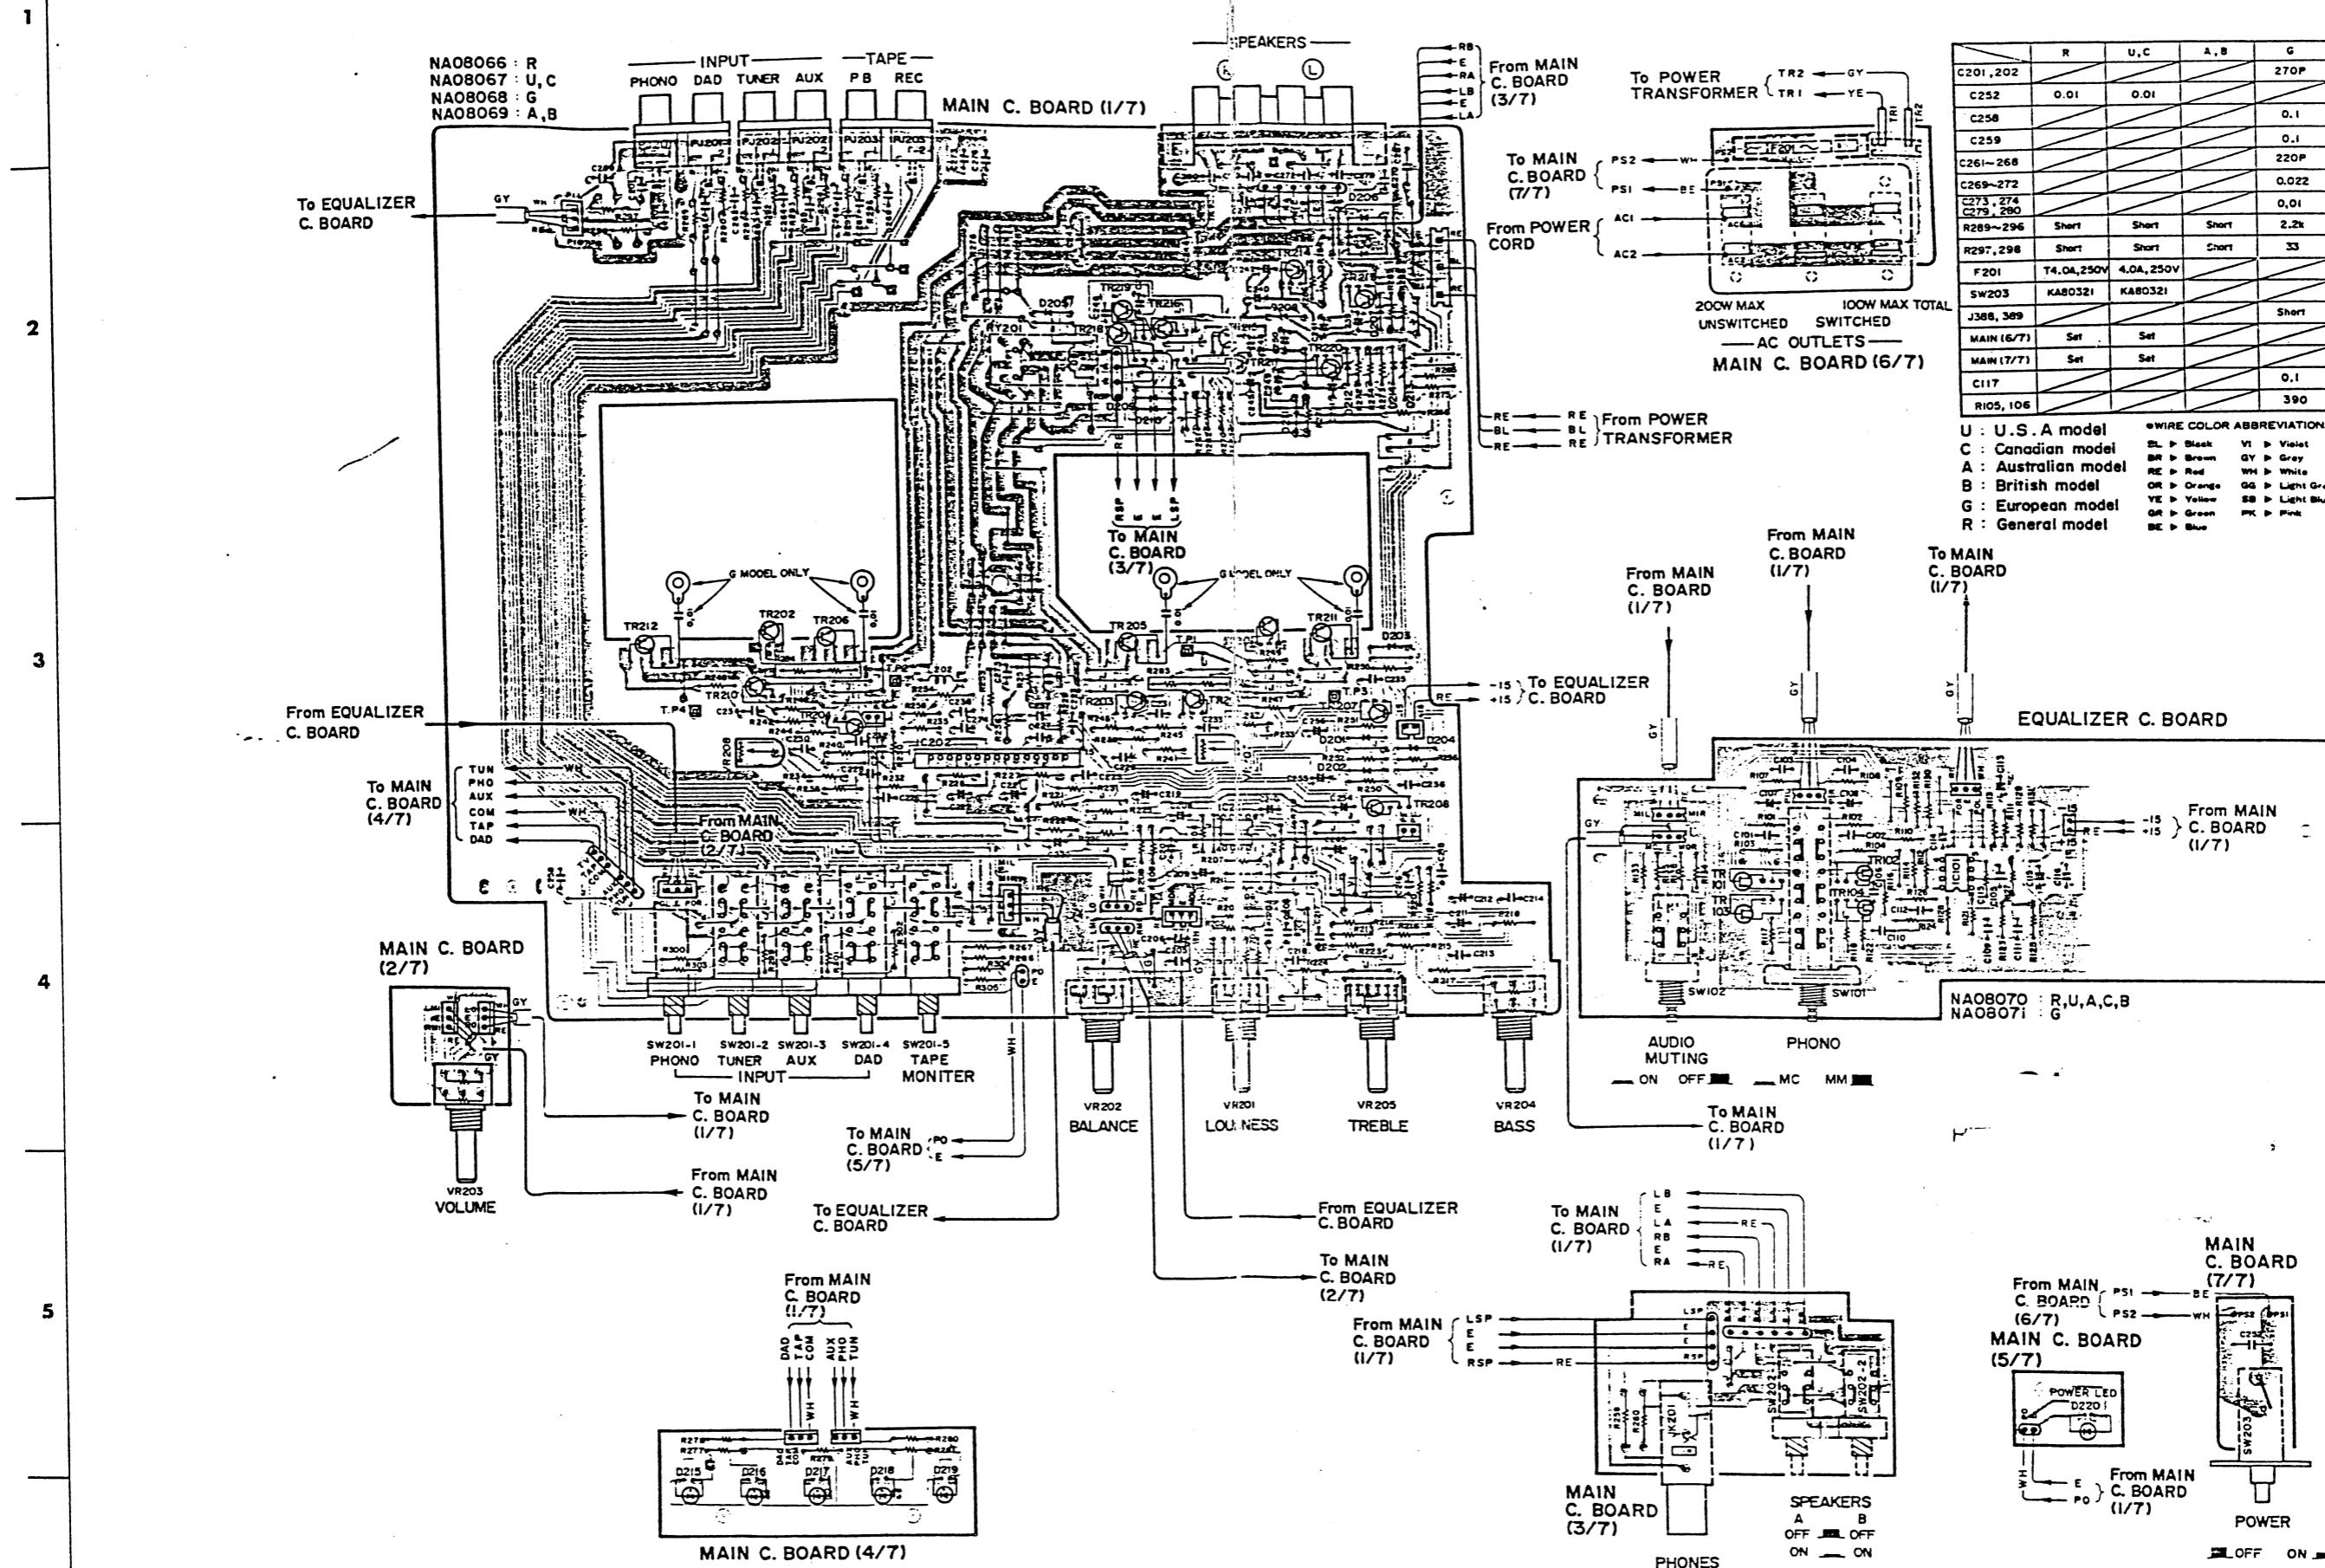

## SCHEMATIC DIAGRAM

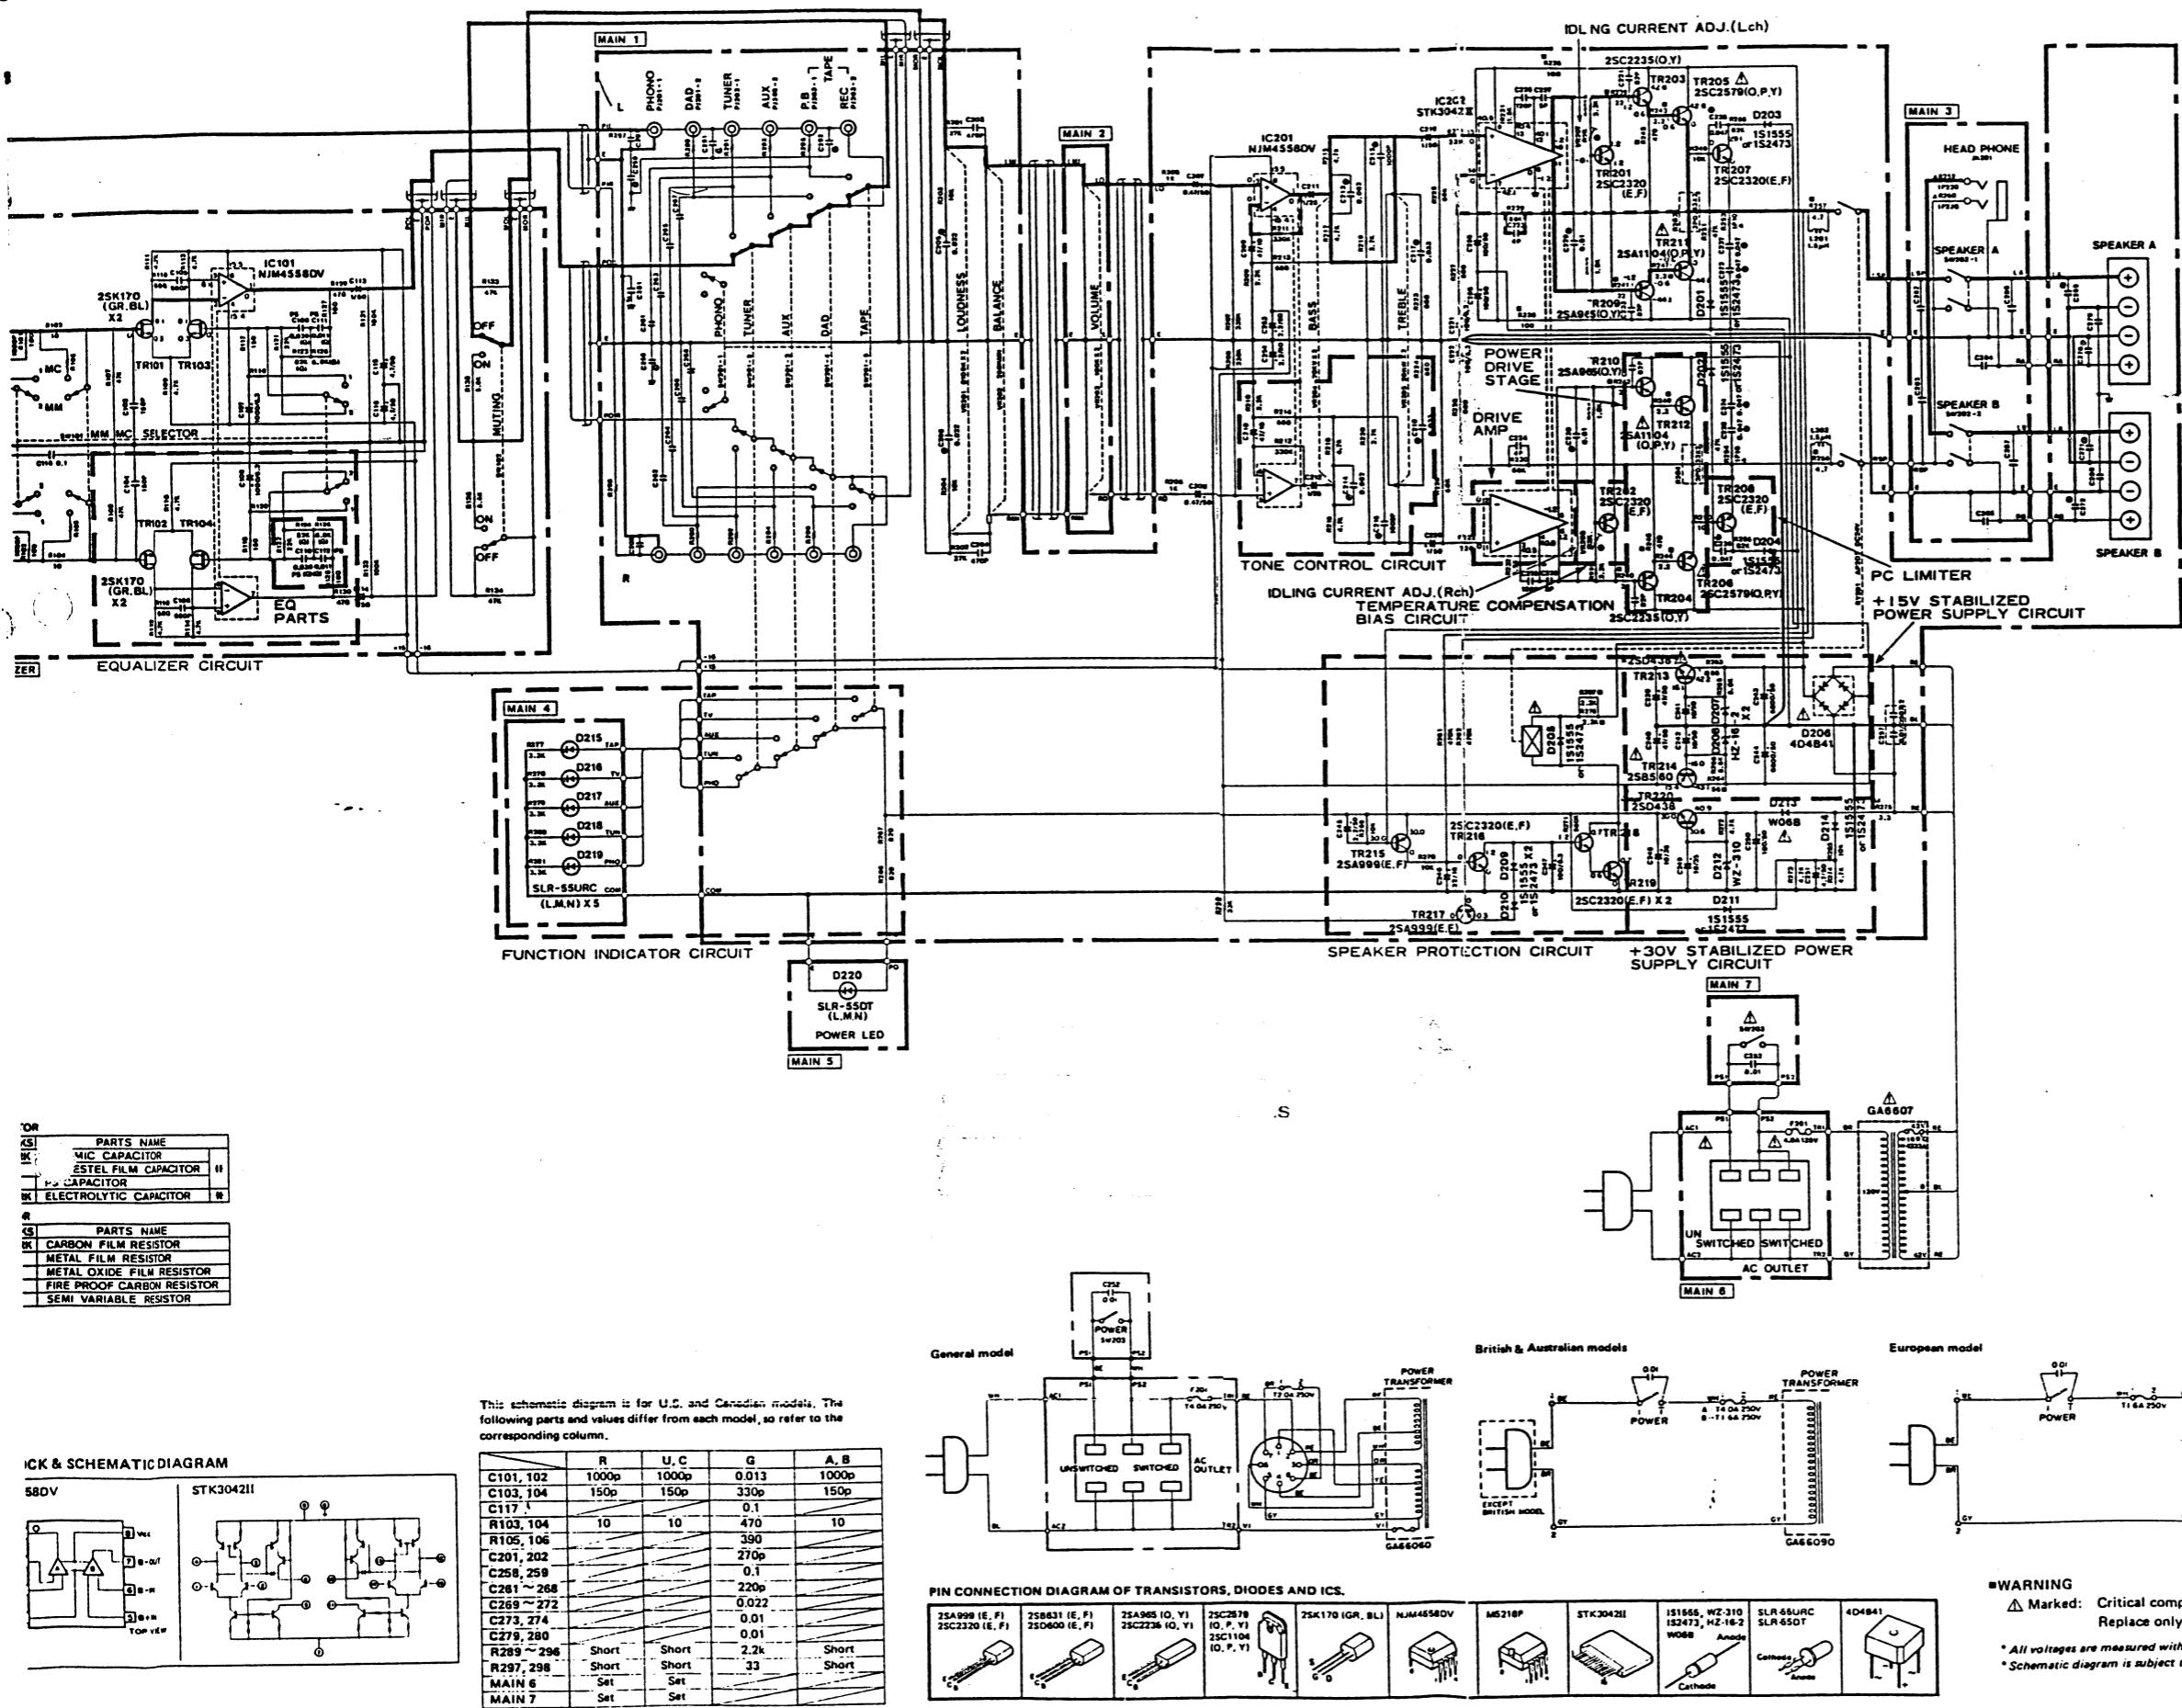

## **WIRING DIAGRAM (Parts Side)**

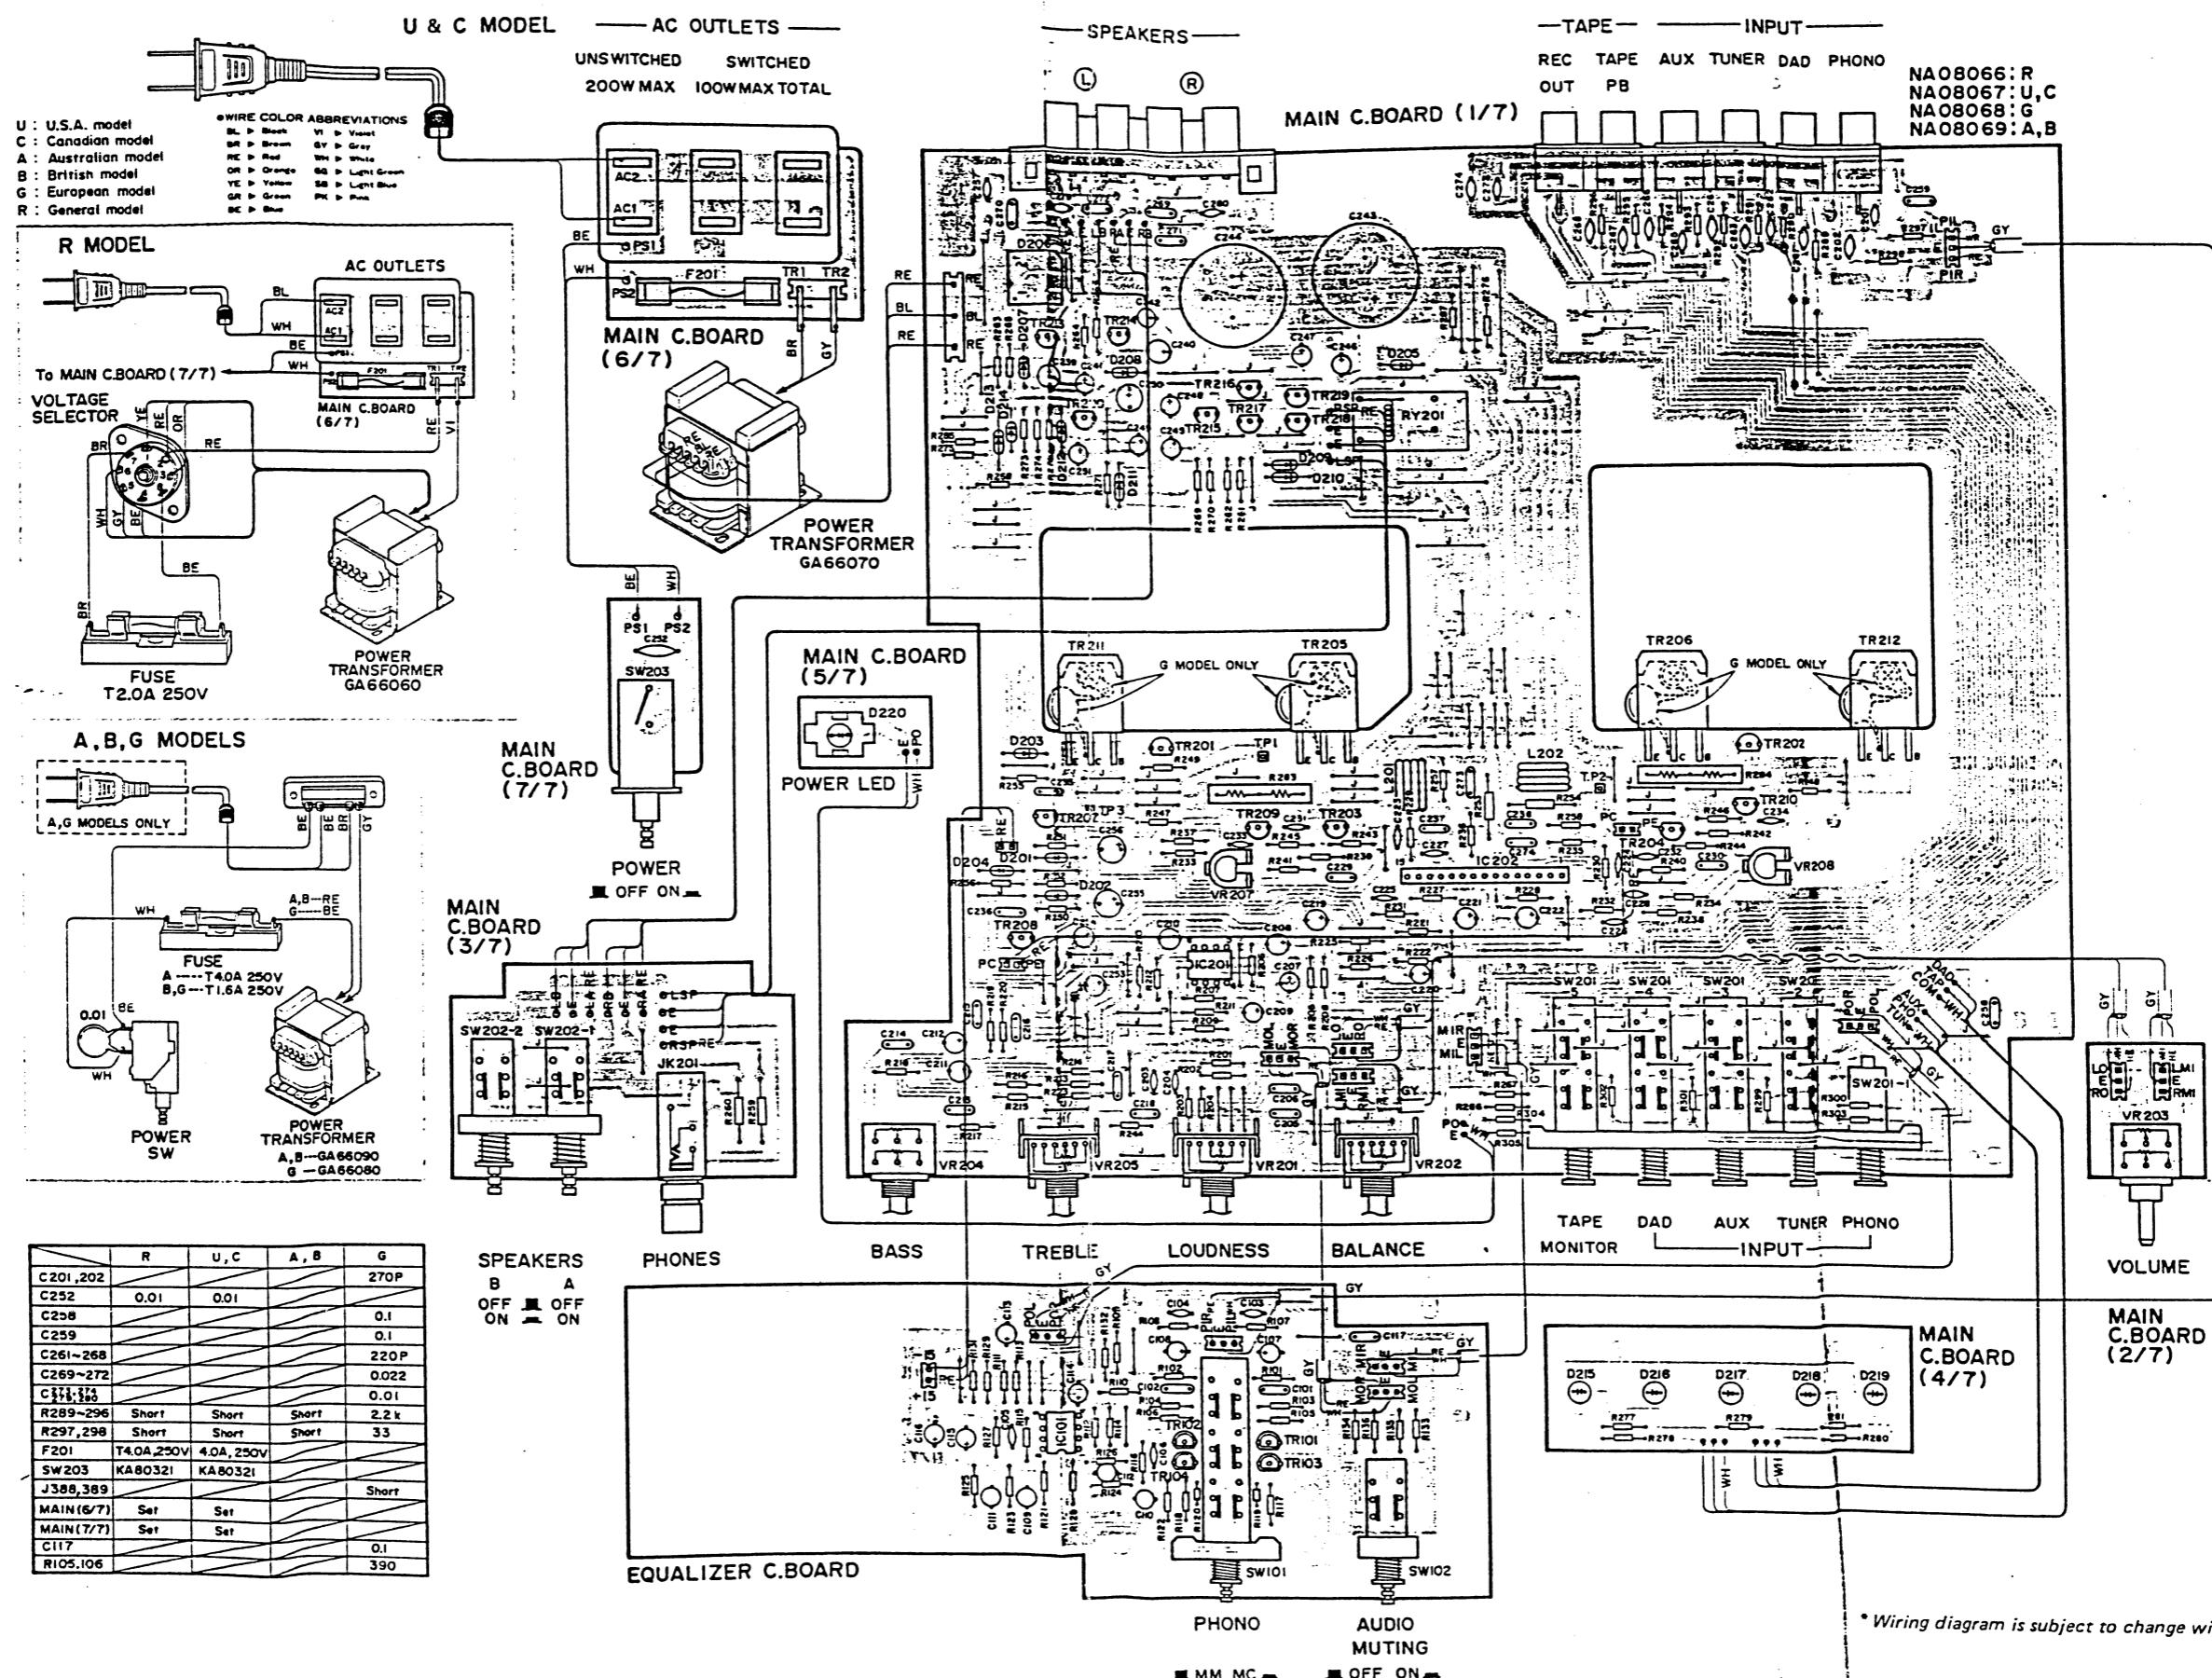

*\* Wiring diagram is subject to change without notice.*